



89008 Product Installation Instructions

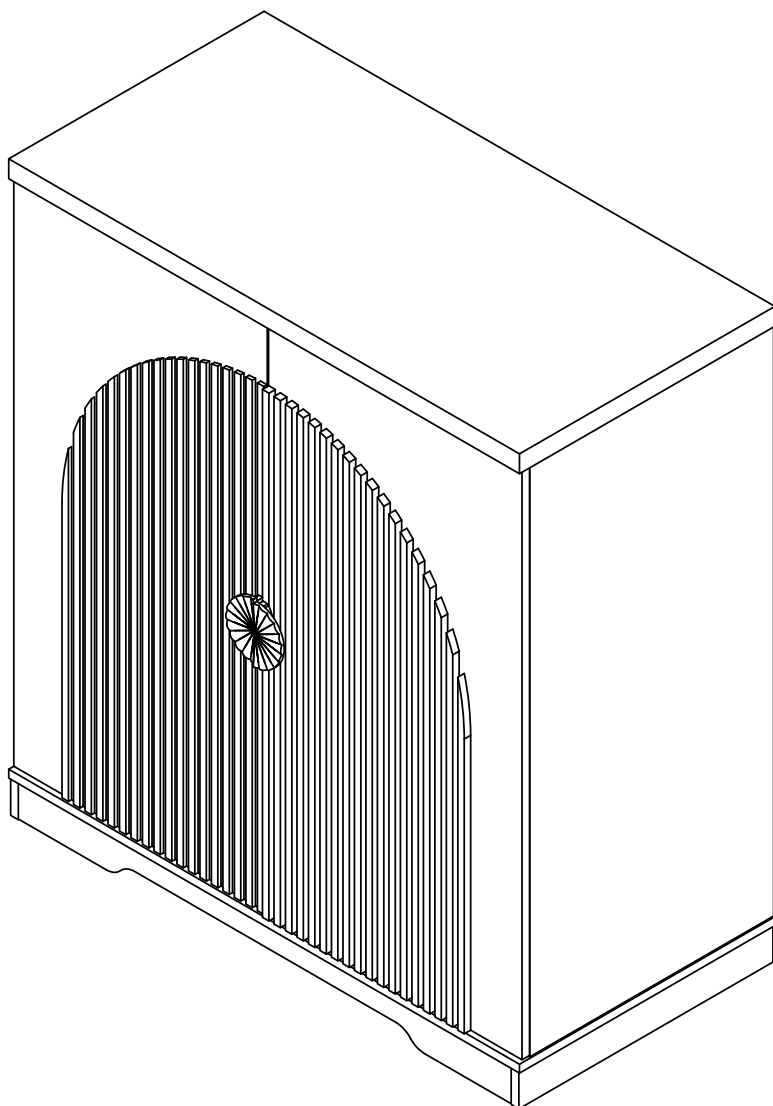

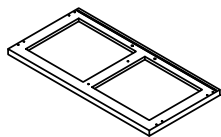


1x1




2x1




3x1

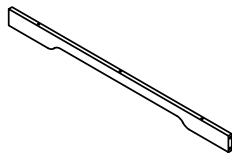


4x1

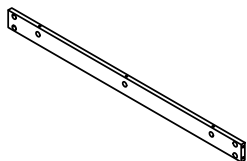


5x1

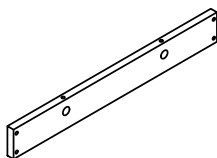


6x2

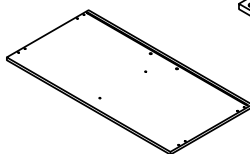


7x1

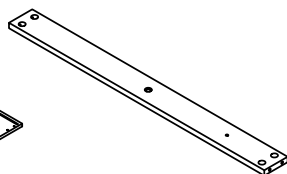


8x1




9x1




10x1

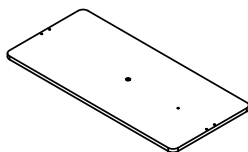


11x1




12x2

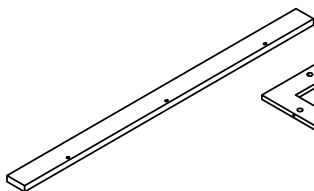

13x3

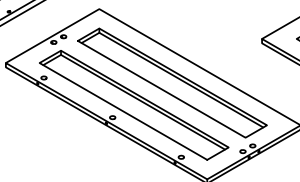

14x3

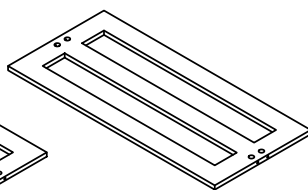

15x2




16x1




1


SY




17x1

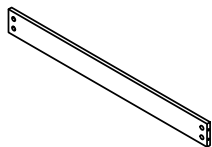


18x1

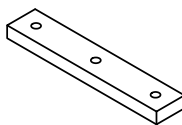

19x2




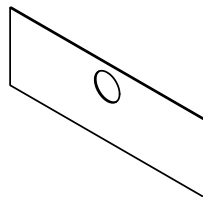



20x2

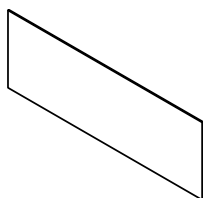


21x1


Accessories list

(A)		Two In One Screw (6x28mm)	67pcs +3pcs		
(B)		Two In One Nut (10x12mm)	67pcs +3pcs		
(C)		Wood Chipping (6x30mm)	8pcs +1pcs		
(D)		Handle & screw (4x20mm)	2pcs / 4pcs		
(E)		Screw (6x20mm)	4pcs		
(F)		Male and female screws (5x17mm)	4pcs		
(G)		Countersunk head tapping screw(3.5x14mm)	4pcs / 24pcs		
(H)		Screw & Guide (12 inch) (4x10mm)	2pcs / 12pcs		
(J)		Back panel fasteners	2pcs		
(M)		Male and female screws (8x22mm)	2pcs		
(N)	Anti Fall Hardware				
	 x2	 x4	 x2	 (3.5x14mm) x2	 x2 (4x45mm)
(O)		Iron sheet	2pcs		
(P)		Fixing Clip & Screw (3x16mm)	16pcs		
(Q)		Foot rubber pad	8pcs		
(R)		Gasket	1pcs		




 Double-head screwdriver, use as required

Product structure decomposition

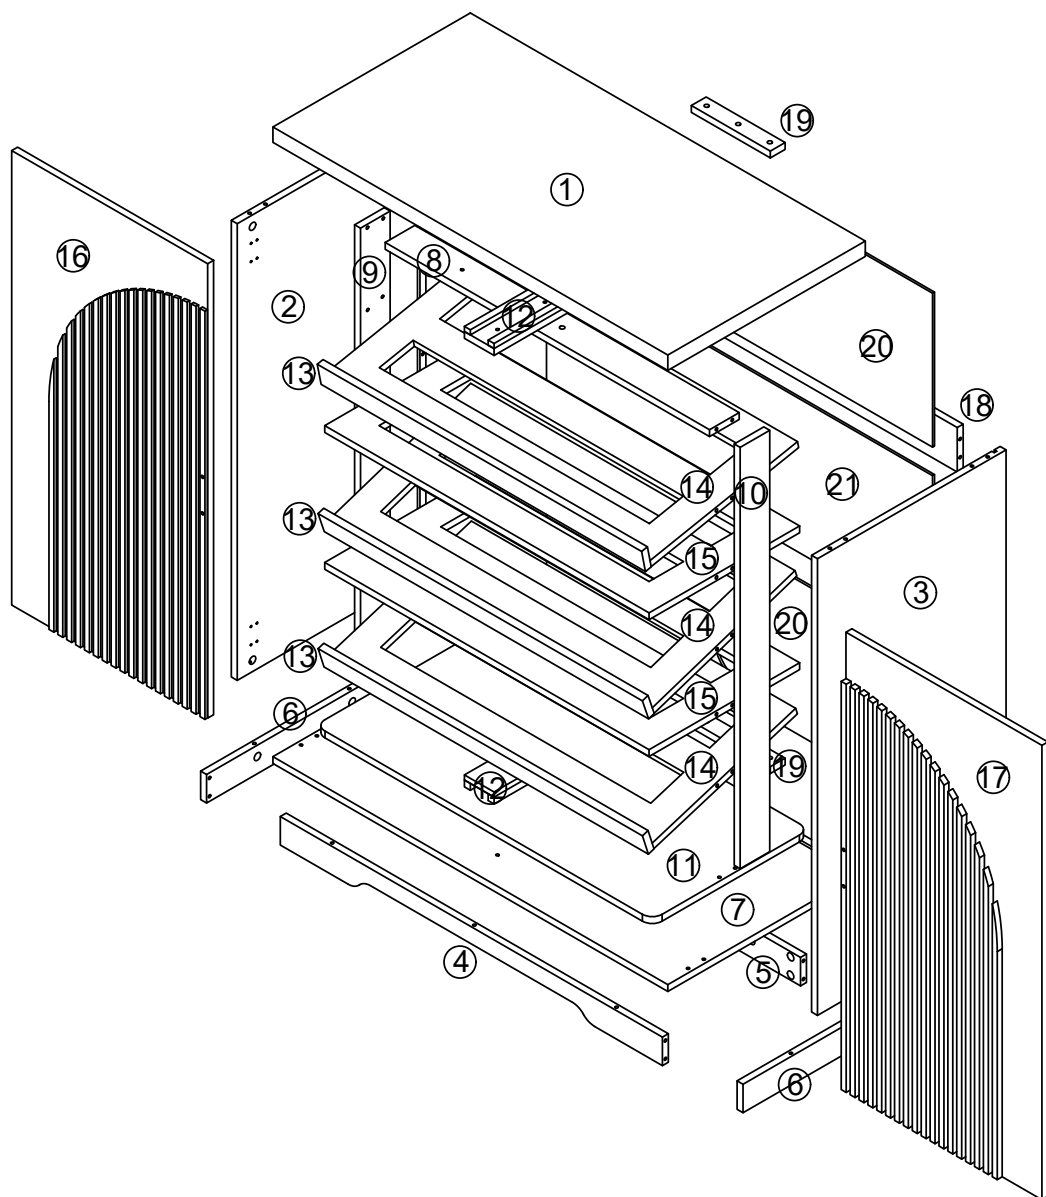


Use parts ① and ②



Step1

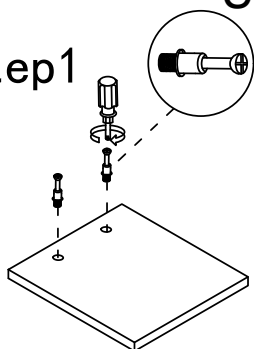


Step2

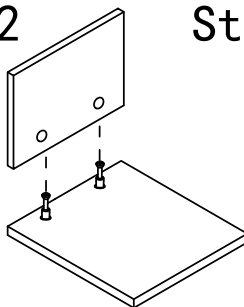

Step3


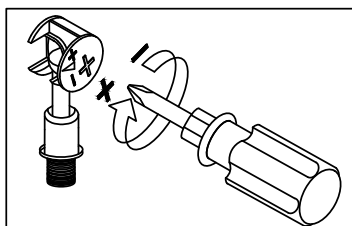
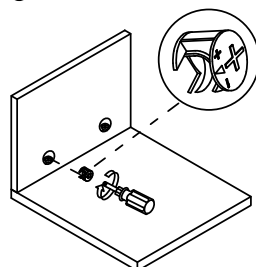


Use a screwdriver to lock in the direction of the "+" sign

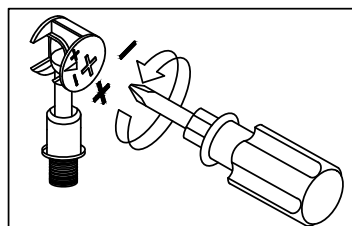

Disassemble along the direction of "-" sign



Step 1

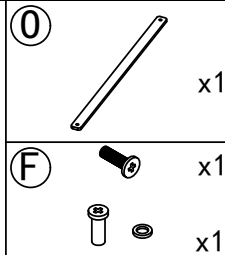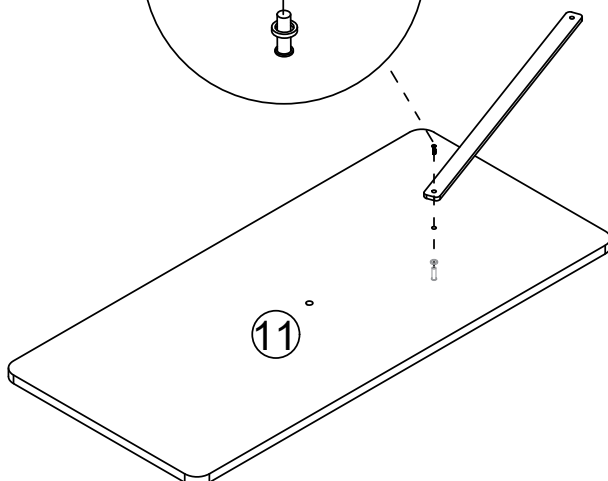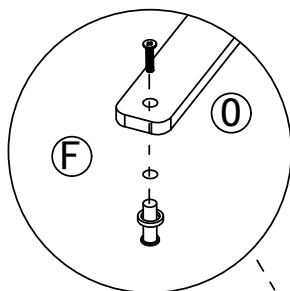

SY


5

Step 2

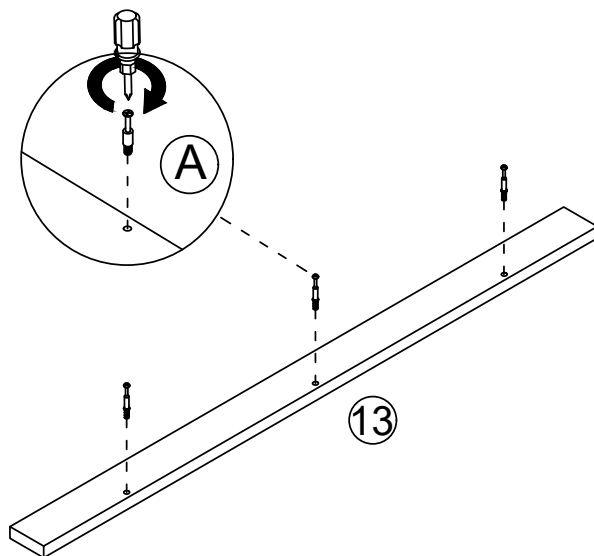

This step is repeated three times.



Step 3

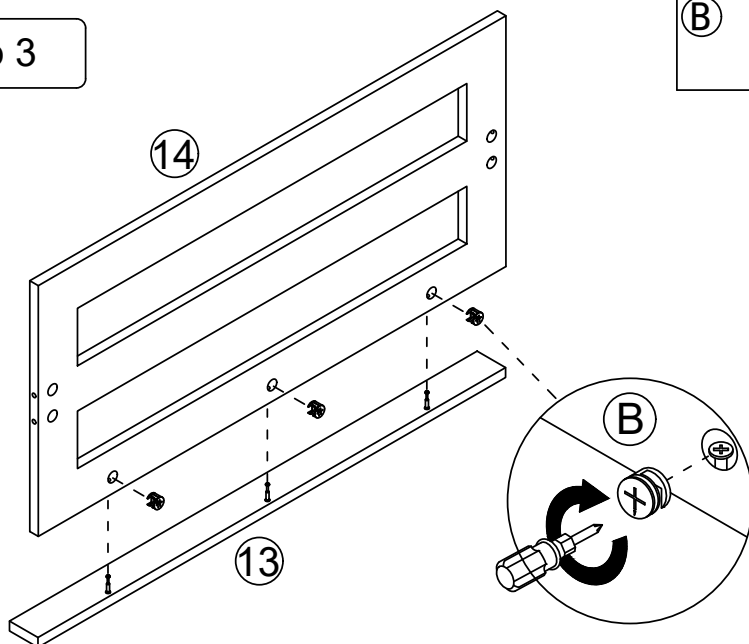


This step is repeated three times.

SY

Step 4

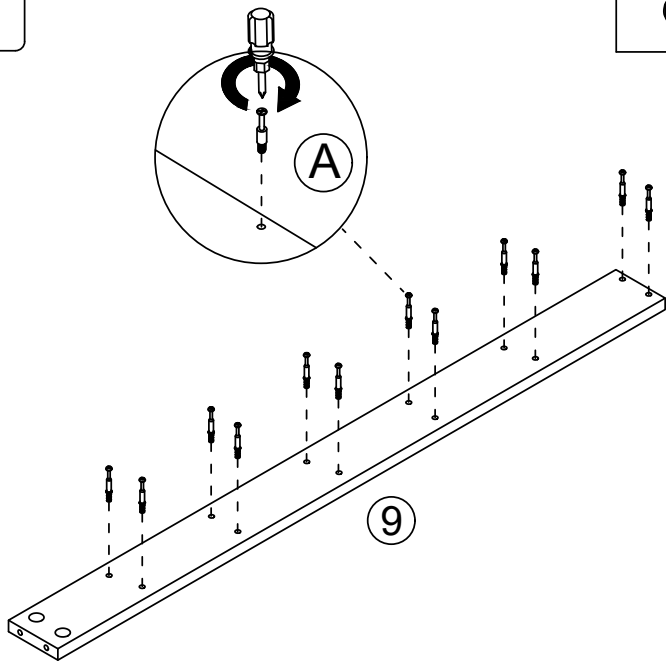


Step 5

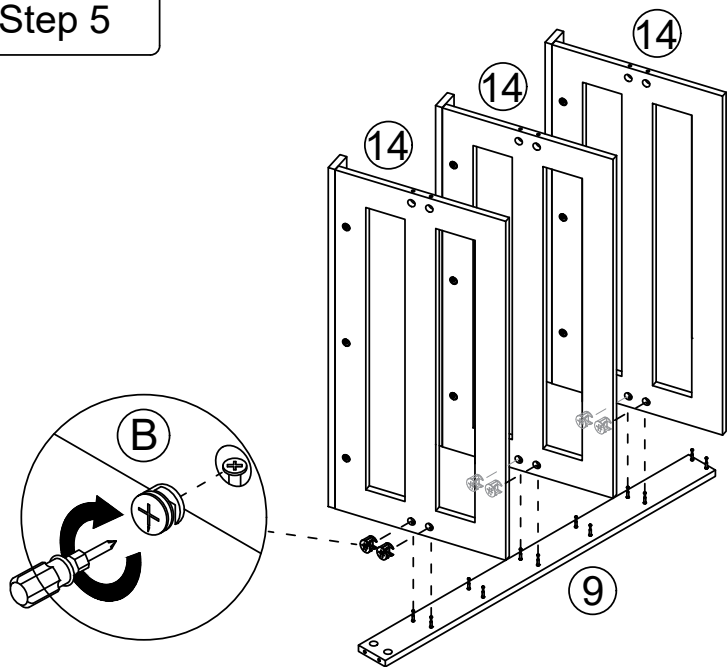

SY


Step 6

(B)  x4

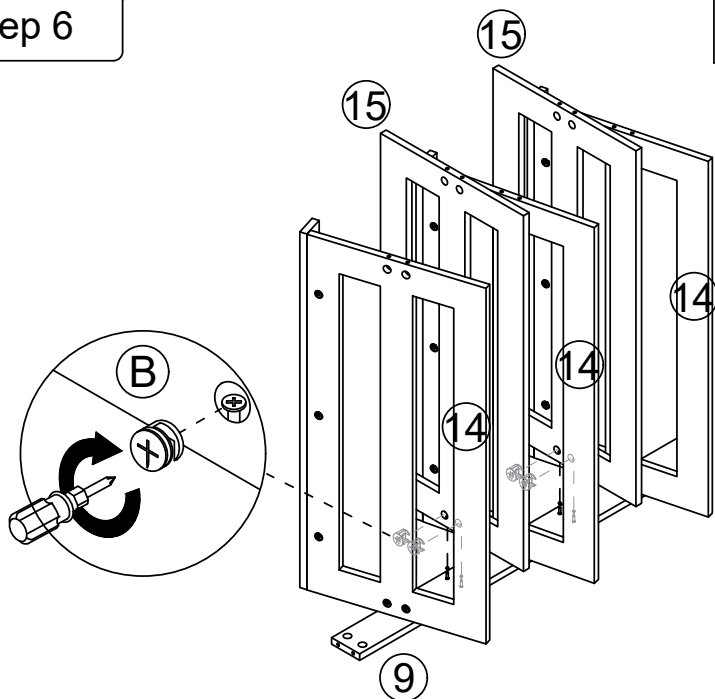

Step 7

(0)  x1
(F)  x1
 x1

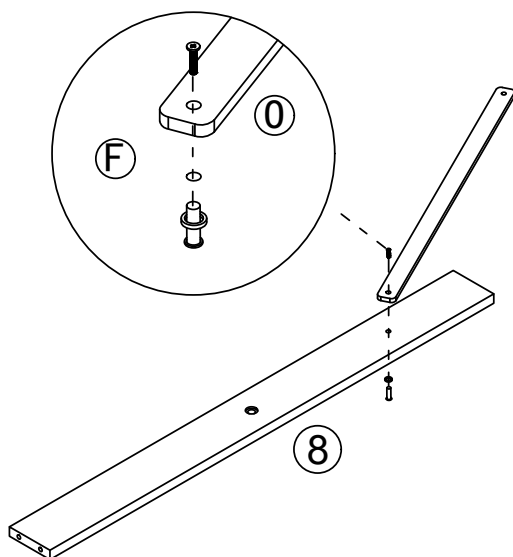


8


SY


Step 8

(B)  x2

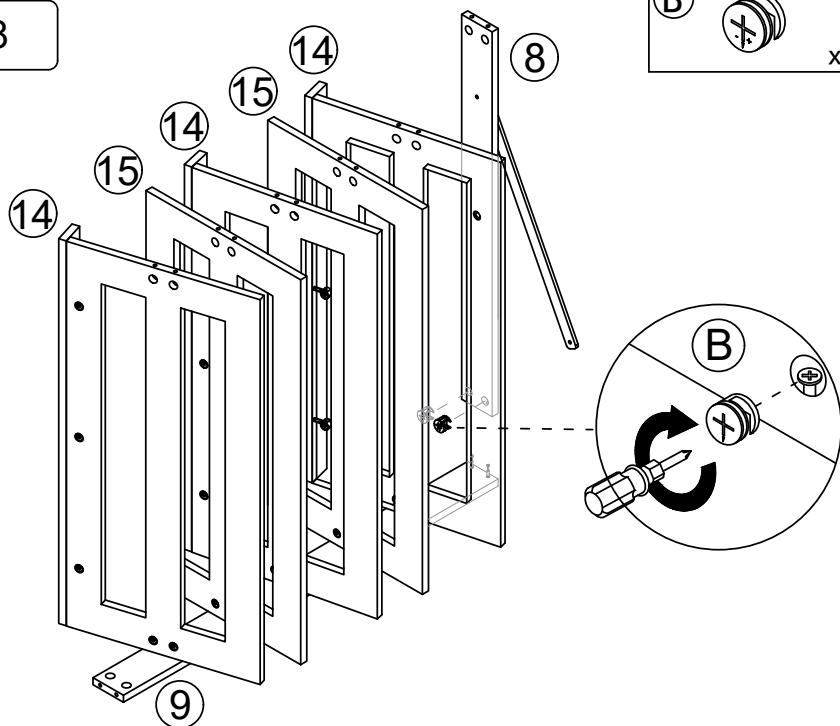

Step 9

(A)  x12

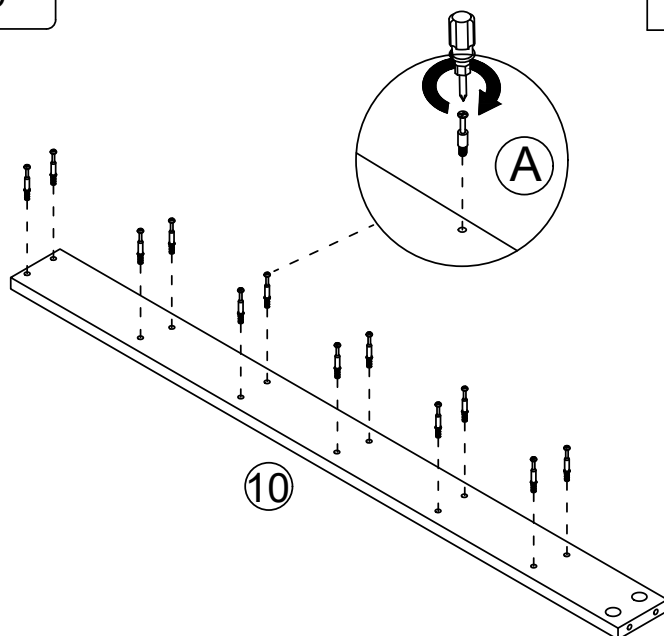

9



SY

Step 10

(B)




x12

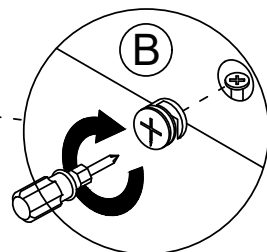
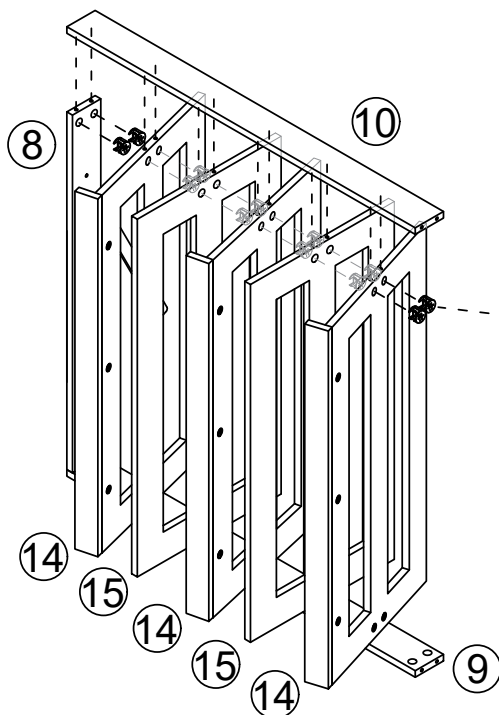


Step 11

(A)




x4

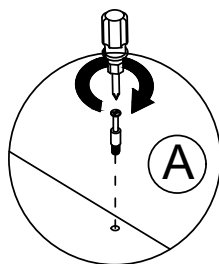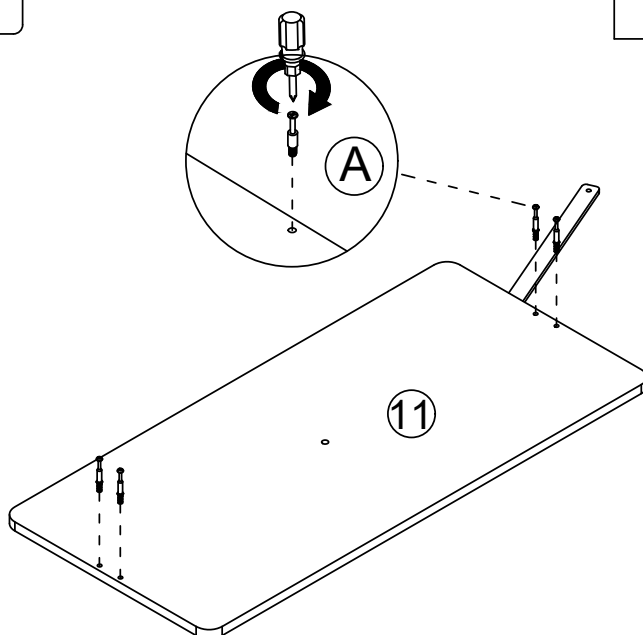

SY



10

Step 12

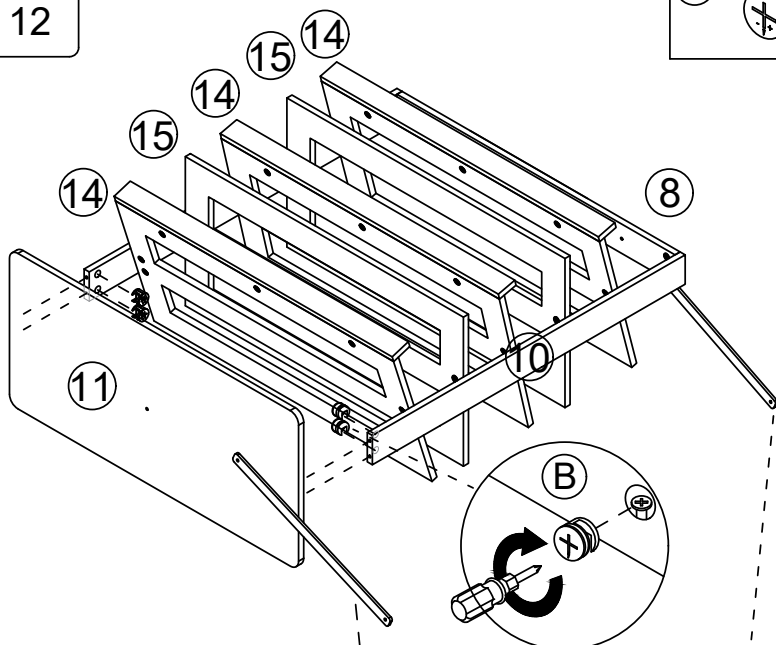

After the installation of Board 8 and Board 11, the holes of the O component should face in the same direction.

Step 13

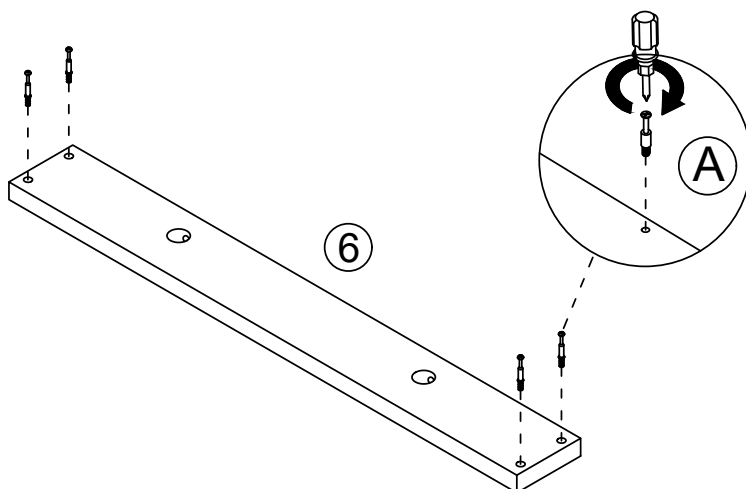


This step is repeated twice

SY


11


Step 14

(B)  x 8

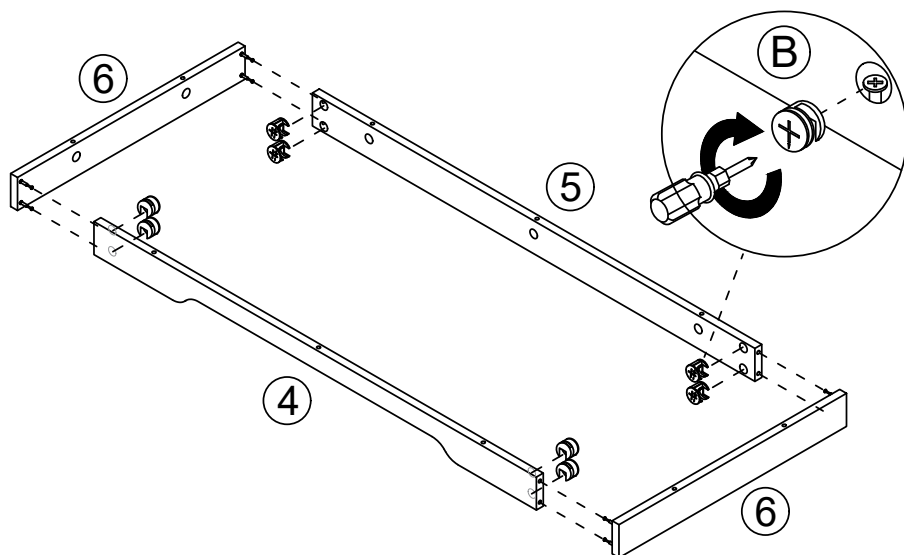


Step 15


(A)  x10

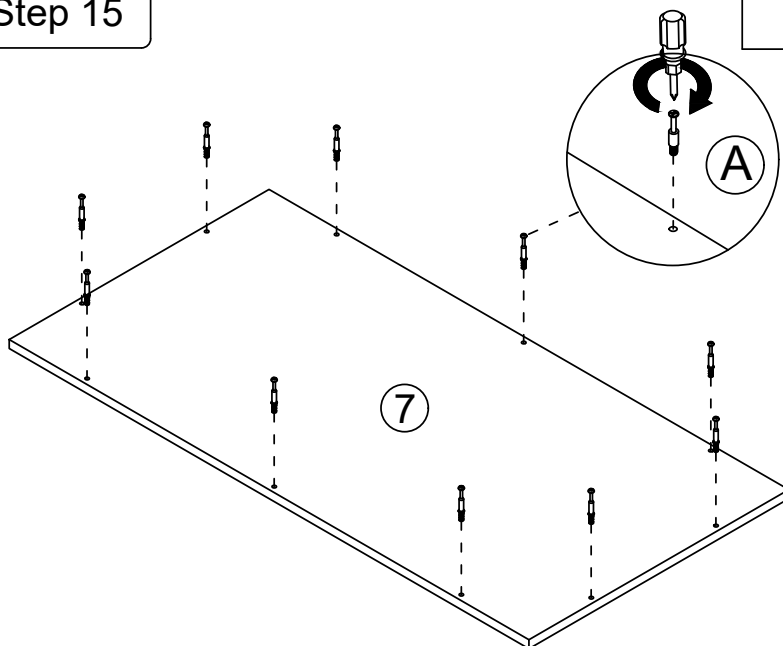

Step 16

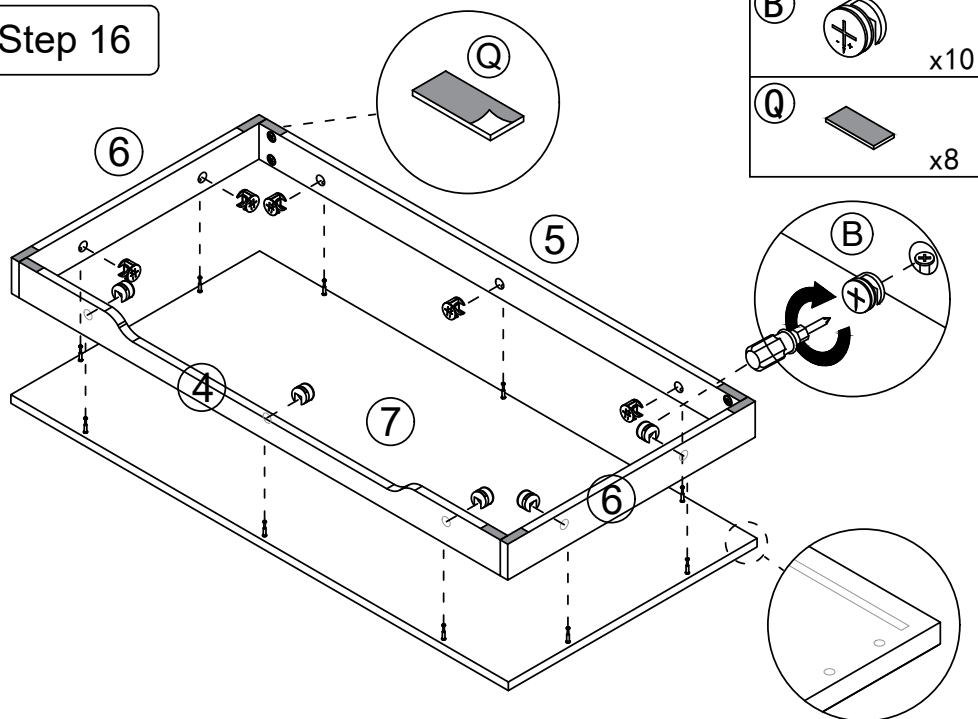

Step 17

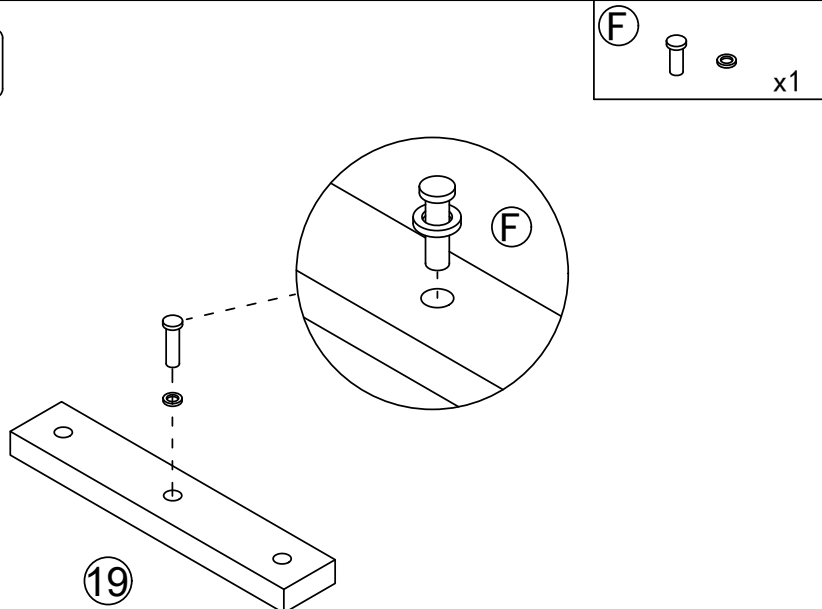

This step is repeated twice

SY


13

Step 18

(E)




x2

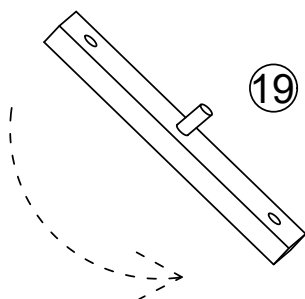

Flip board No. 19 over
before installation.

F accessory passes
through from the
countersunk hole
side

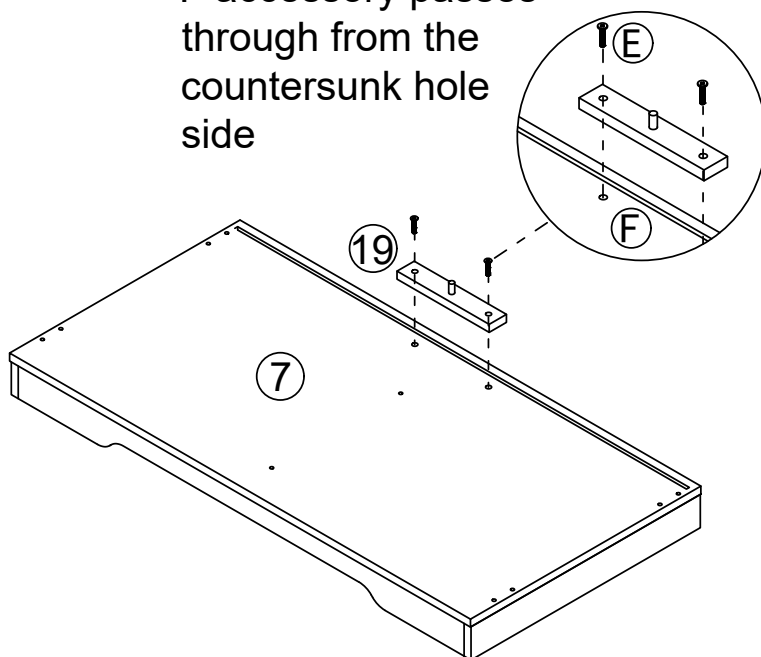


First pass the F accessory connecting rod
through in the opposite direction, then tighten
the E screw.

SY


14

Drawer rail breakdown diagram

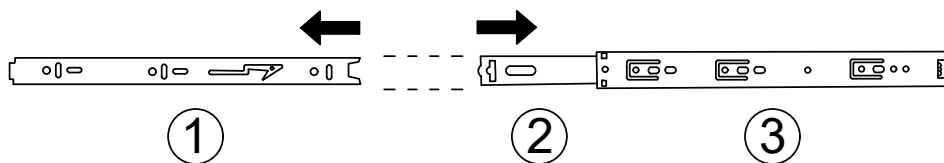


① Dismantle the schematic diagram

Step 1 : Pull the rails apart



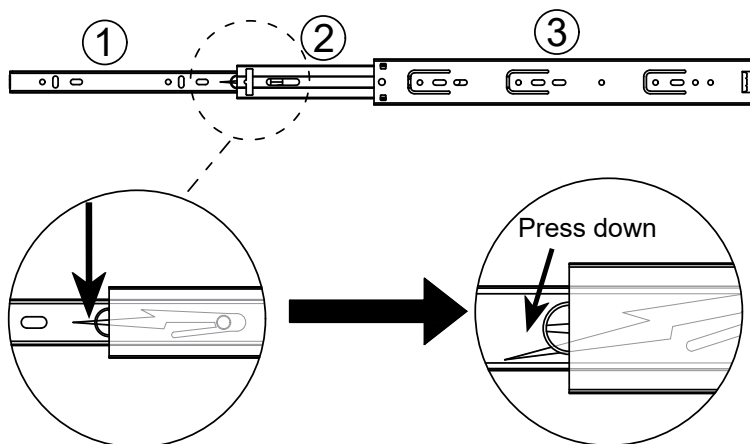


Step 2 : Press the nylon button and pull out ①.




Drawer rail decomposition completed schematic diagram

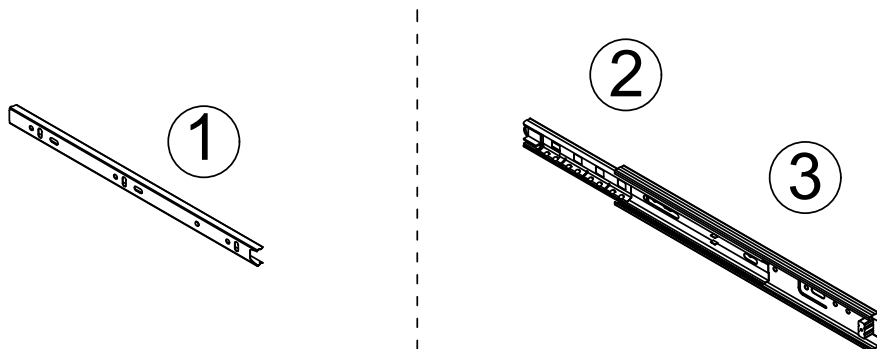

Step 19

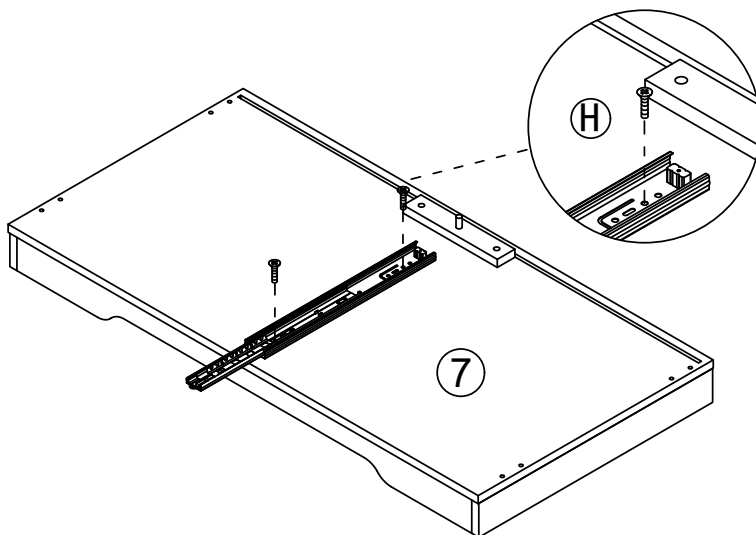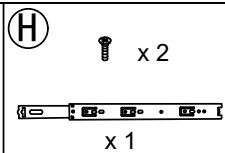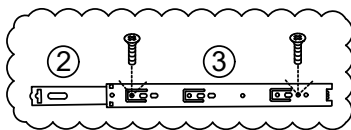

Step 20

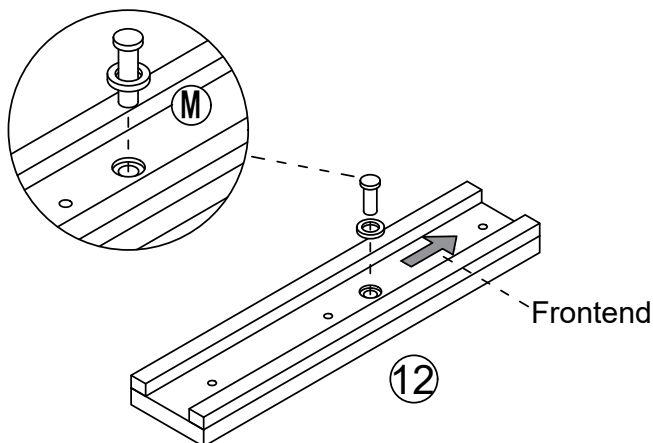
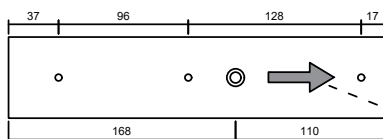


This step is repeated twice
SY




Align the screw on the elliptical hole

Step 21




Align the screw on the elliptical hole

When installing H accessories, you need to raise them during installation.

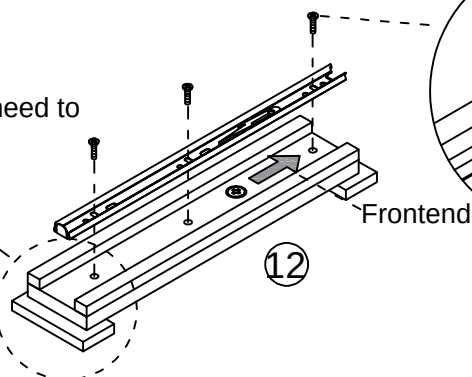


This step is repeated twice

Step 22

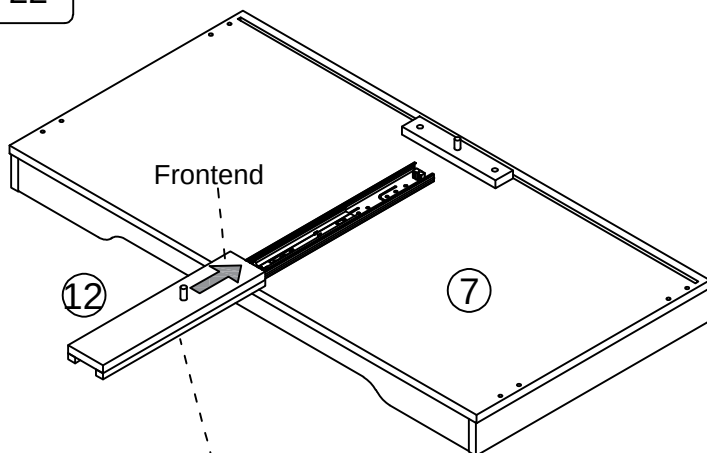


As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.

Step 23

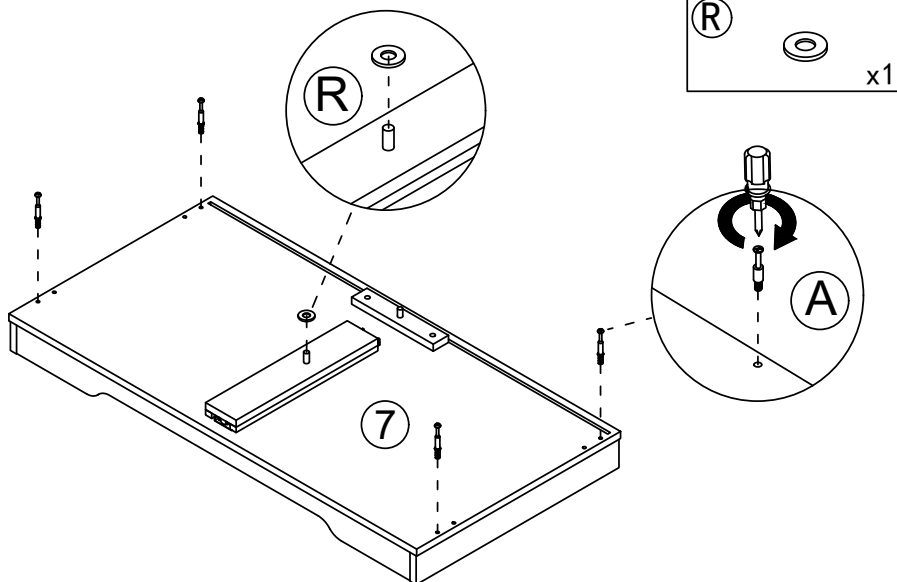


Step 24

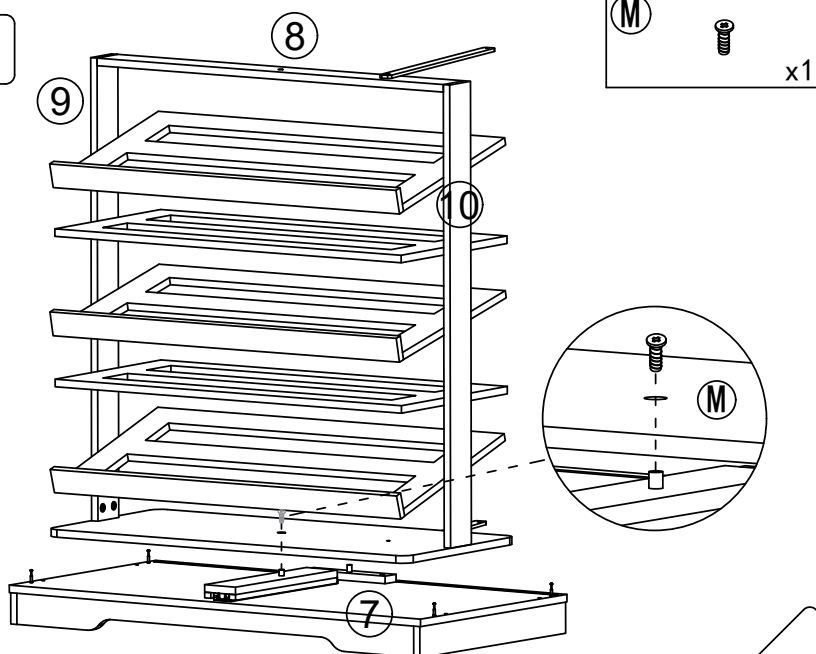

During installation, accessory F metal piece should be placed backward.

SY

Step 25

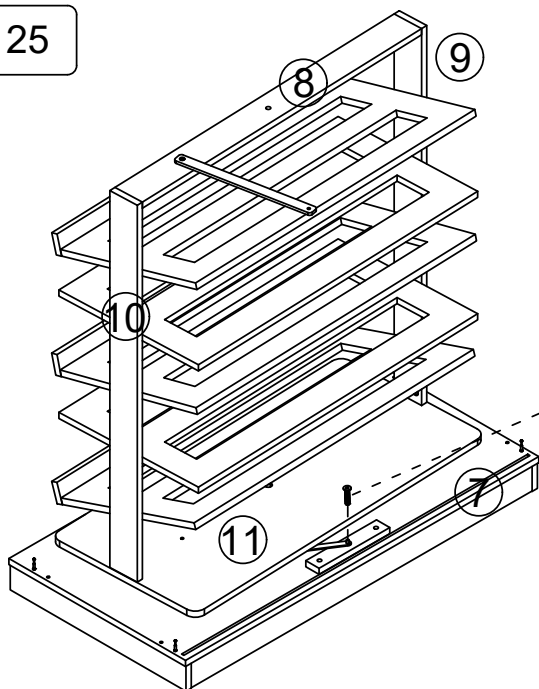


F




x1

Step 26

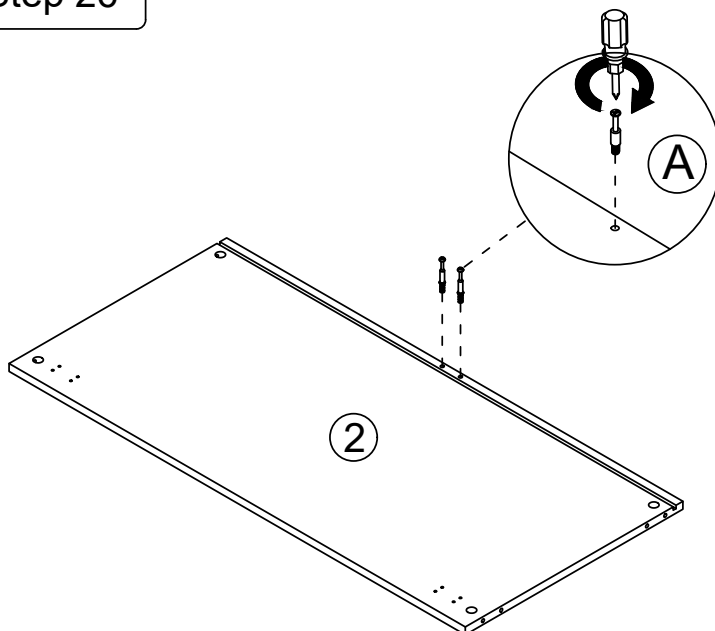

A




x2

Step 27

(B)




x2

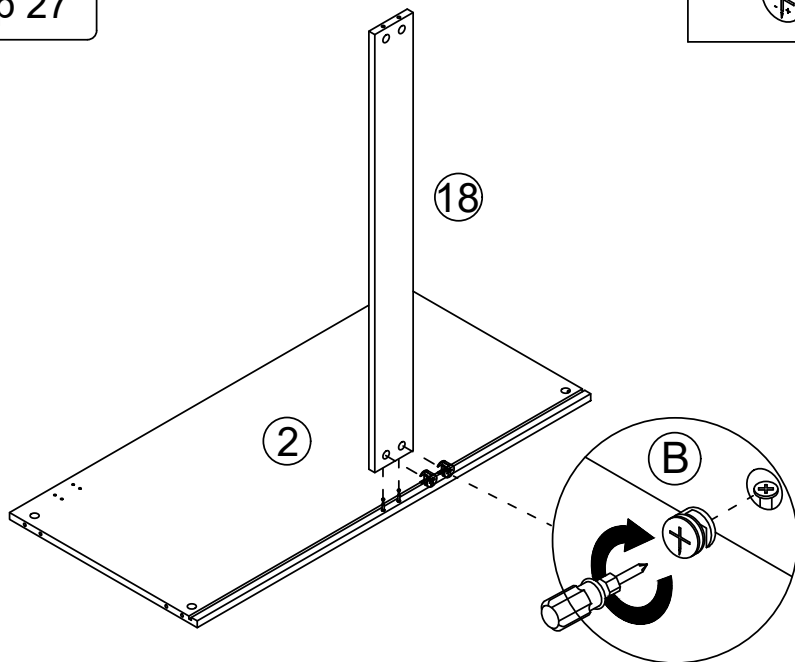


Step 28

(A)



x2

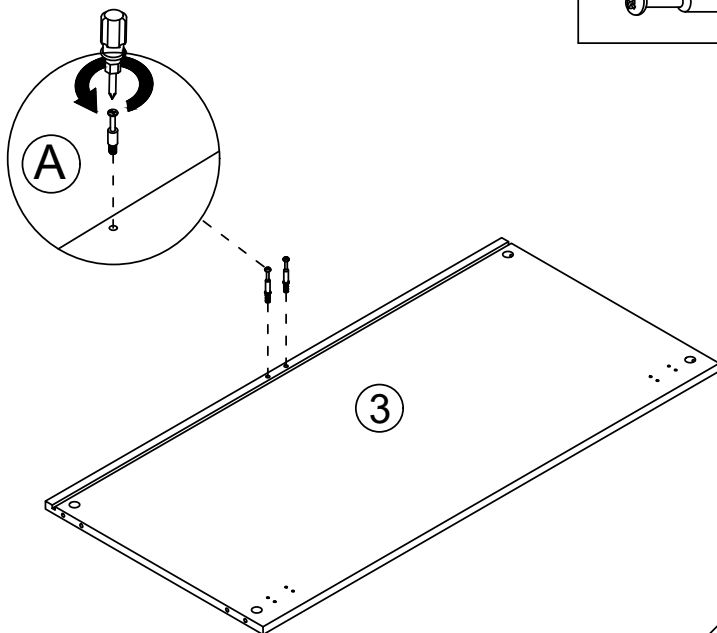


19


SY


Step 29

(B)  x2

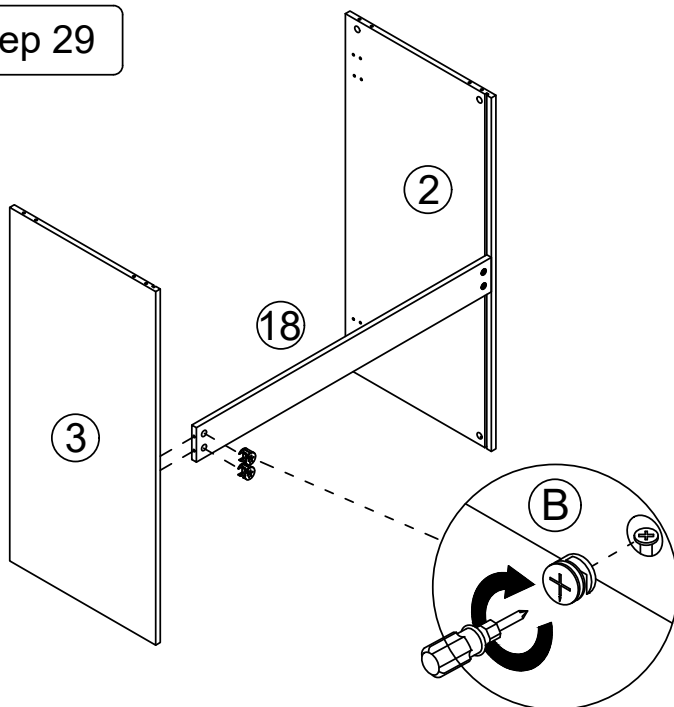

Step 30

(C)  x4


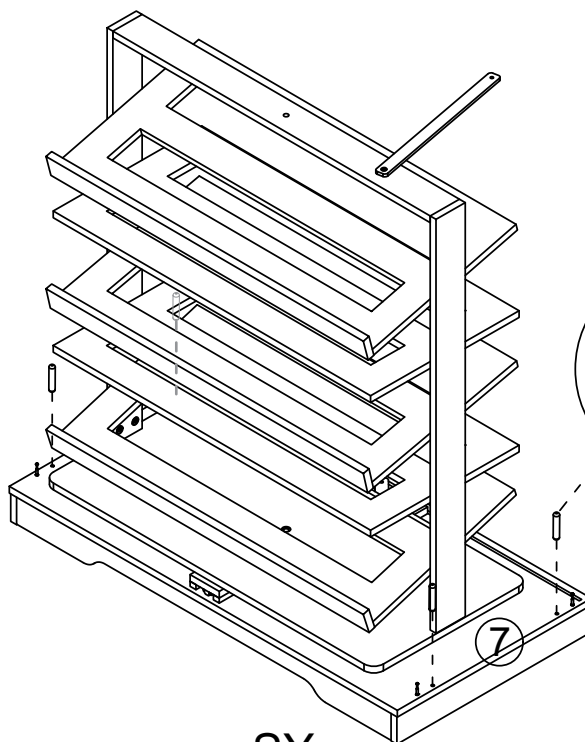


SY

20




Step 31

(B)  x4

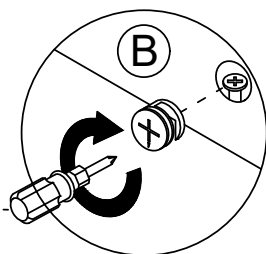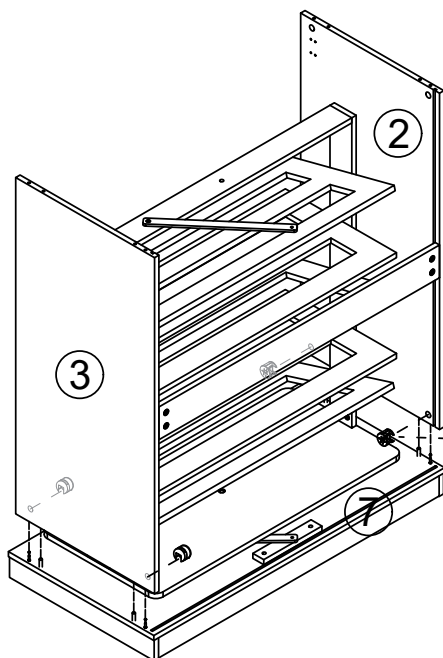


Step 32

(J)  x1

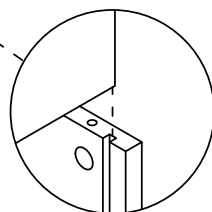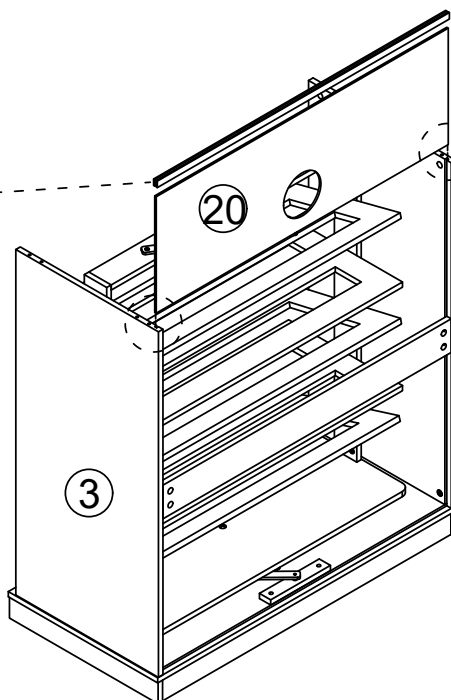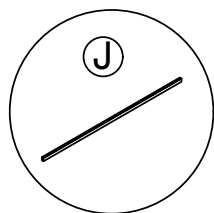


During installation,
the circular hole
near the edge
faces downward.



Step 33

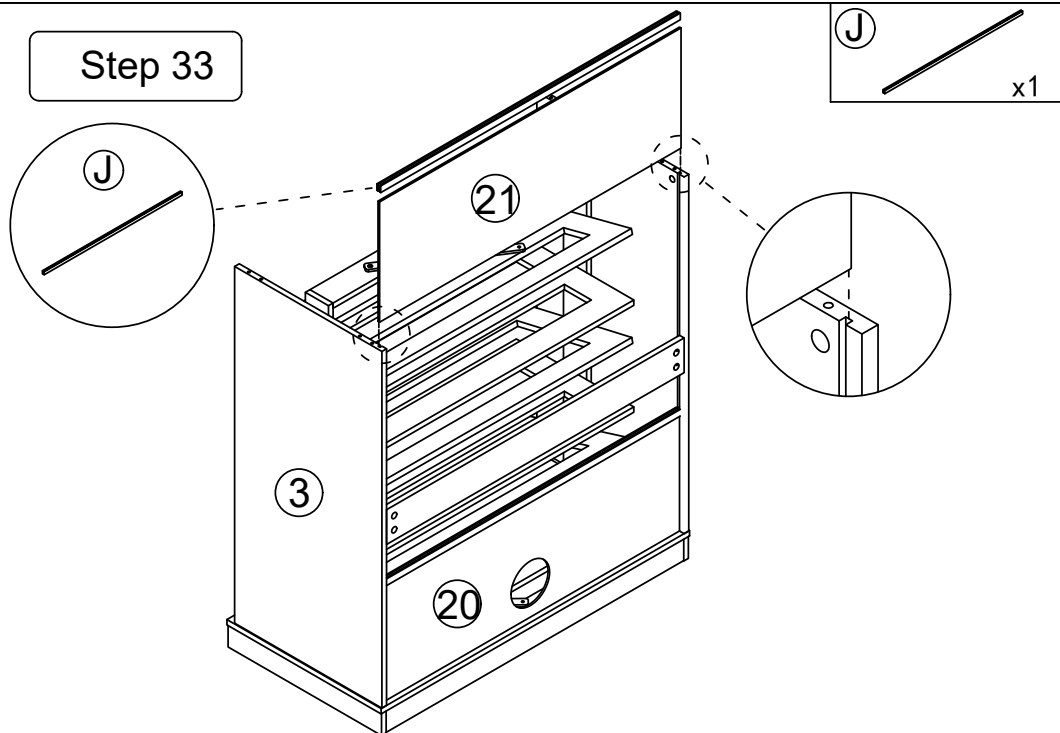

Step 34

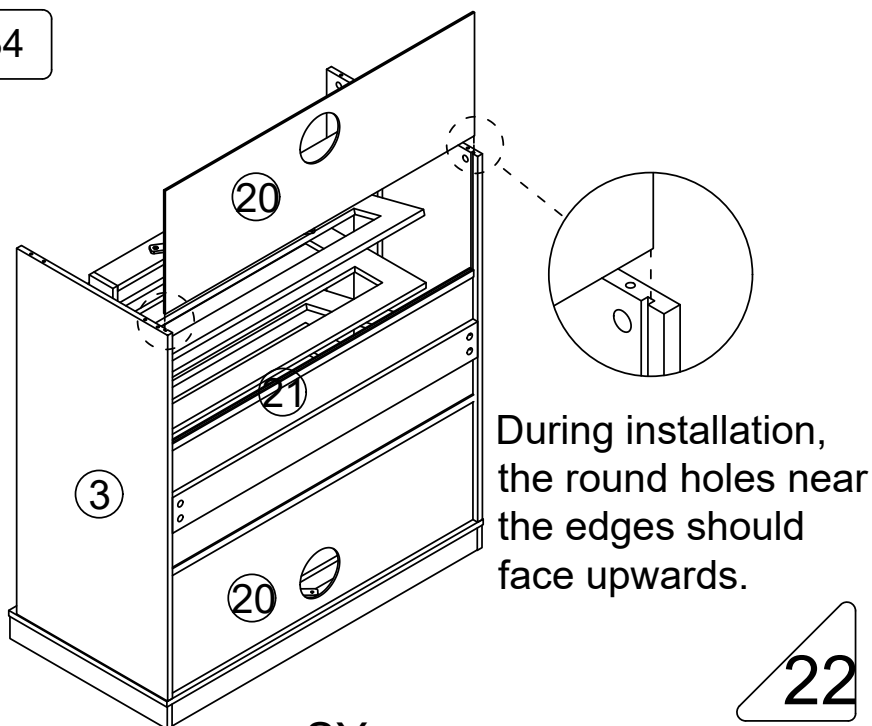


Step 35

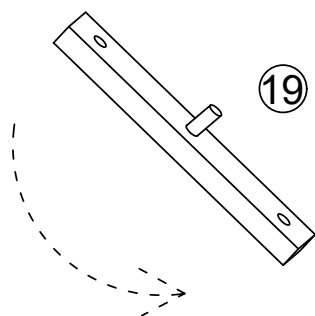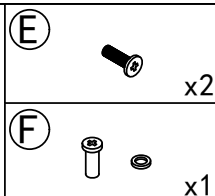




Flip board No. 19 over before installation.

F accessory passes through from the countersunk hole side

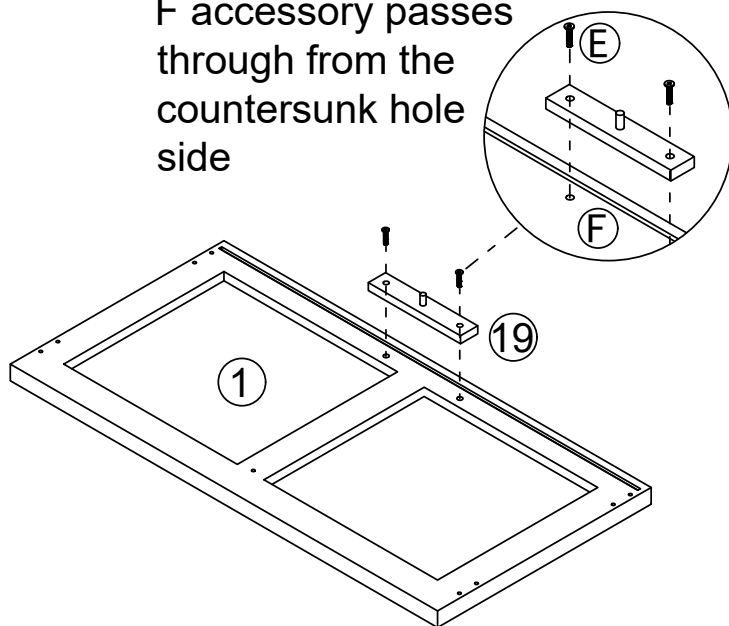


First pass the F accessory connecting rod through in the opposite direction, then tighten the E screw.

Step 36

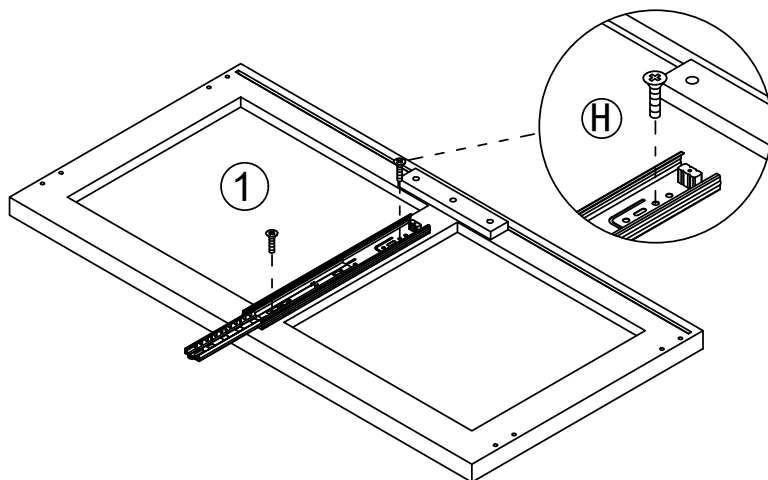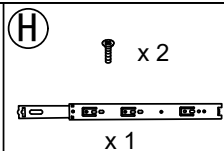
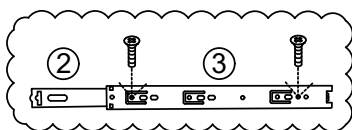


Step 37

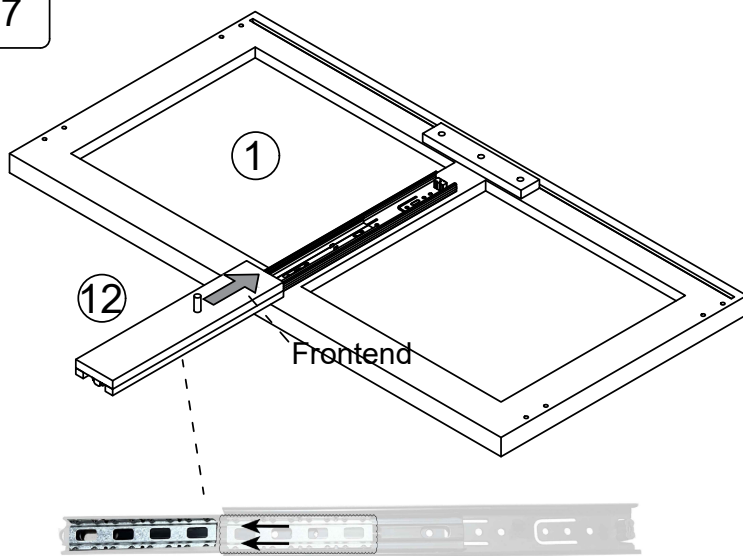


As shown, When installing the drawer, pull the guide rail out first, Slide beads are also pulled out.

Step 38

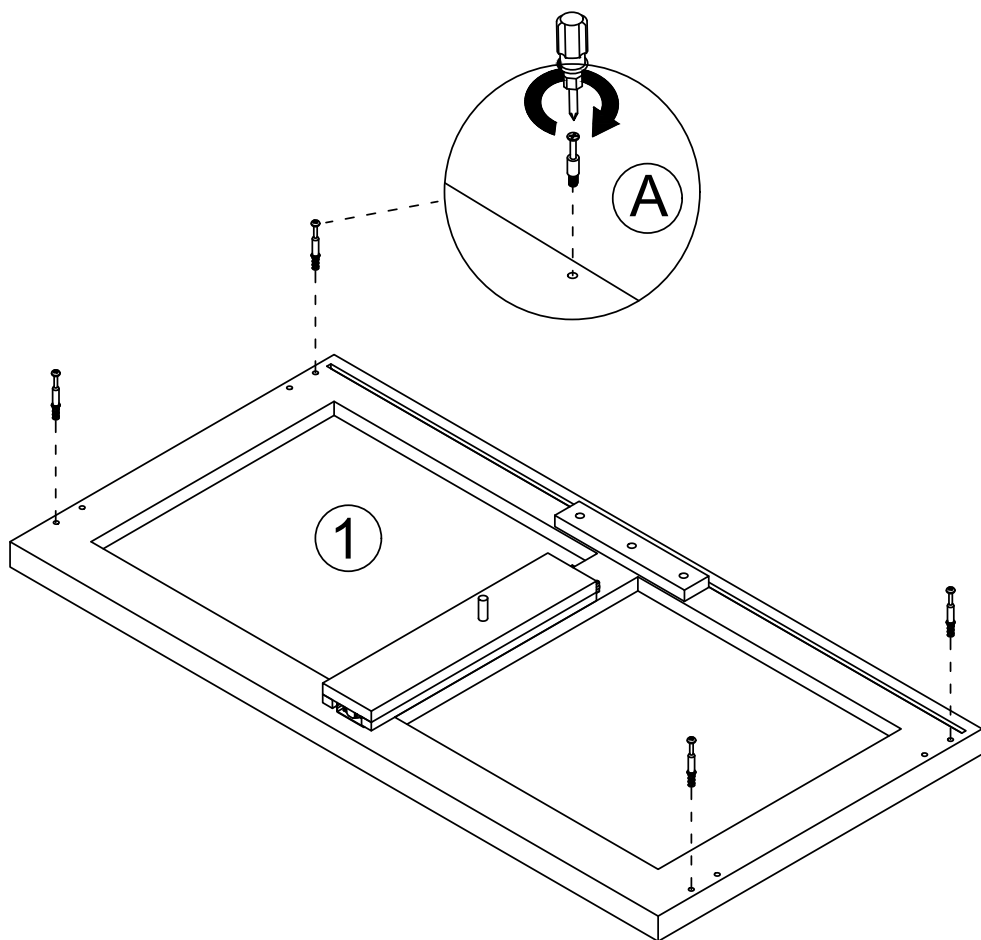


Step 39


Ⓒ




x4

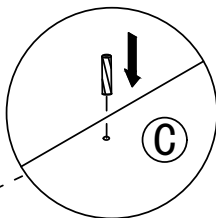



The metal sheet is on the right.

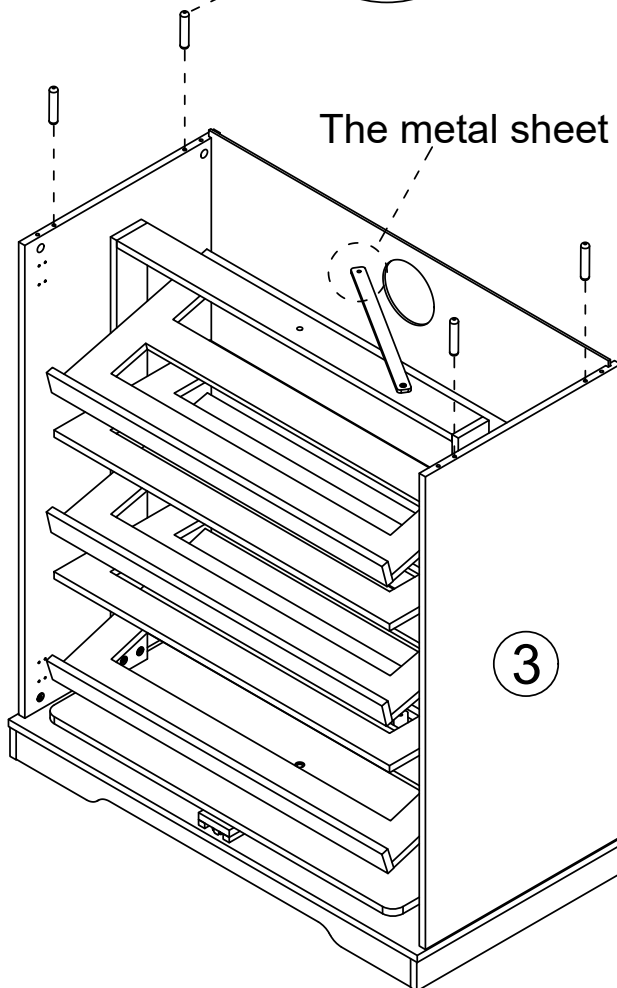

Step 40

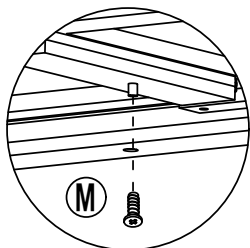

Align the hole with the center hole of the top plate and lock the screw.

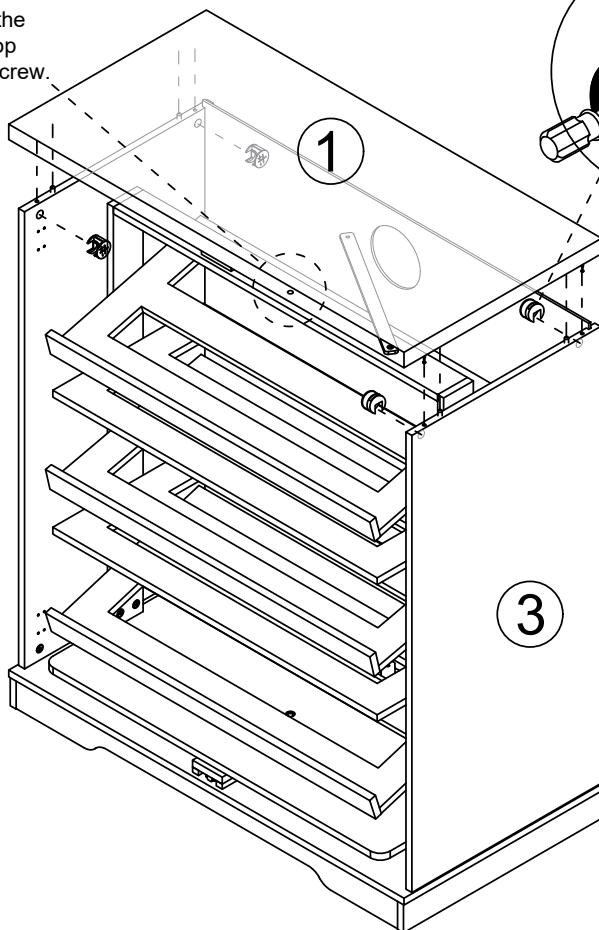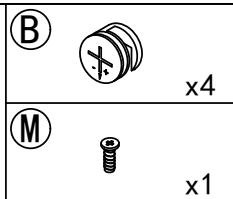


When performing this installation step, pull the metal plate to the back and align it with the M accessory hole.

Step 41

F



x1

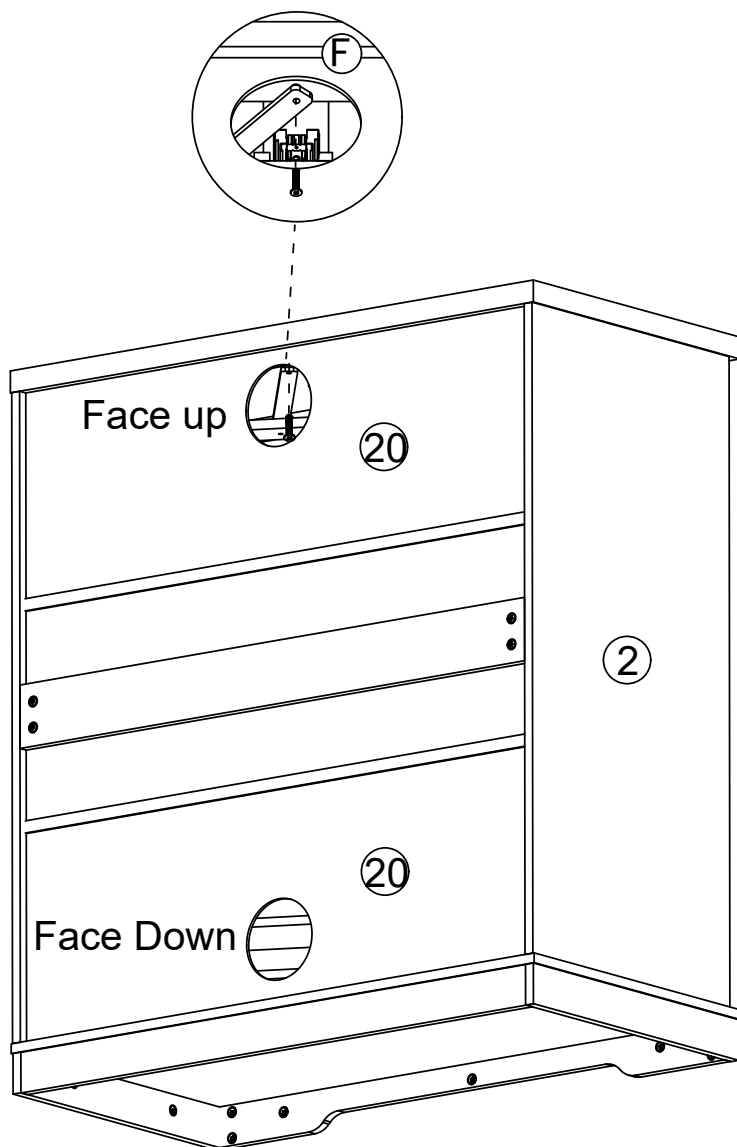


"The circular aperture on the edge must be oriented downward or upward during installation."

Step 42



(P)





x16

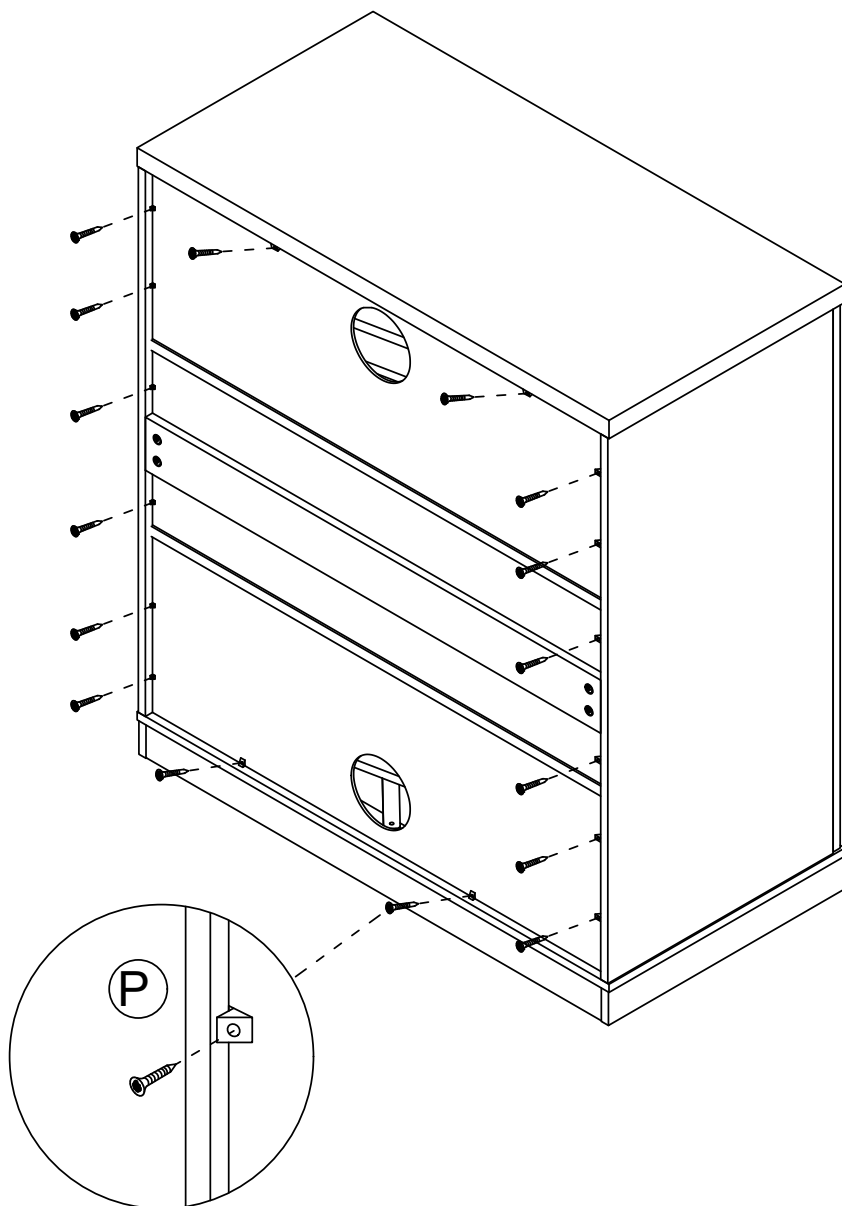



Step 43

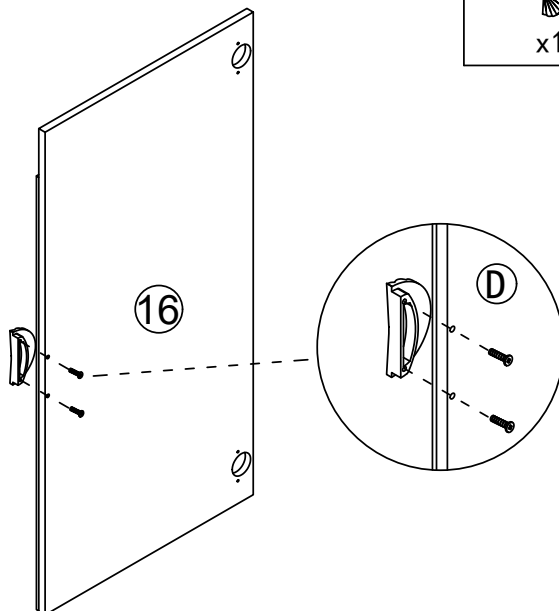



Step 44

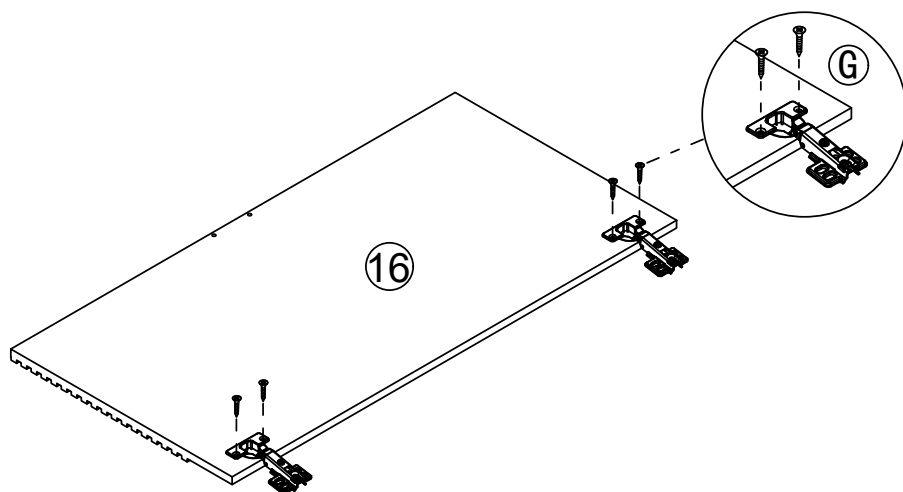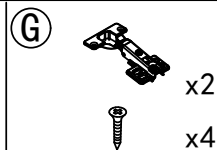


Step 45

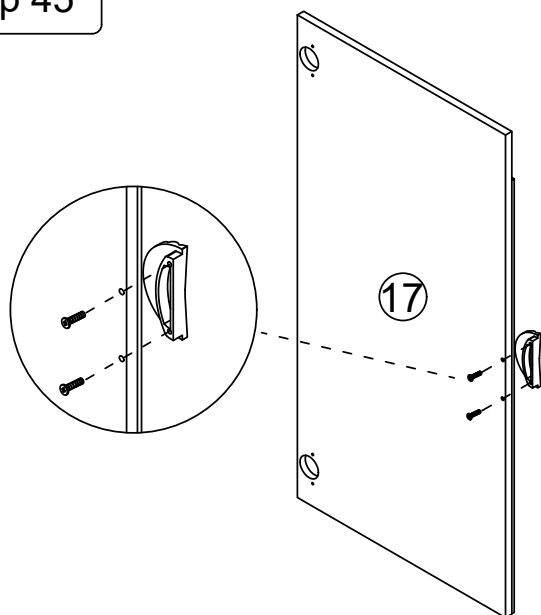

Step 46

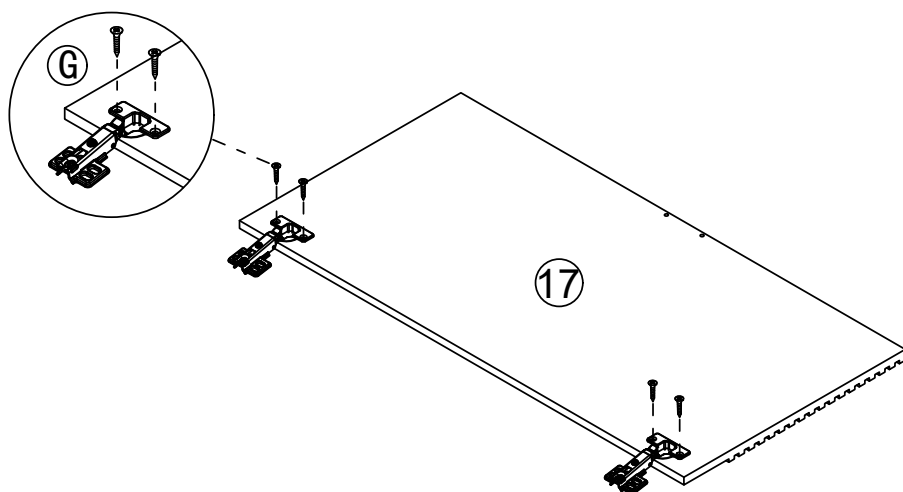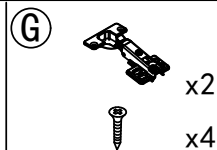


Step 47

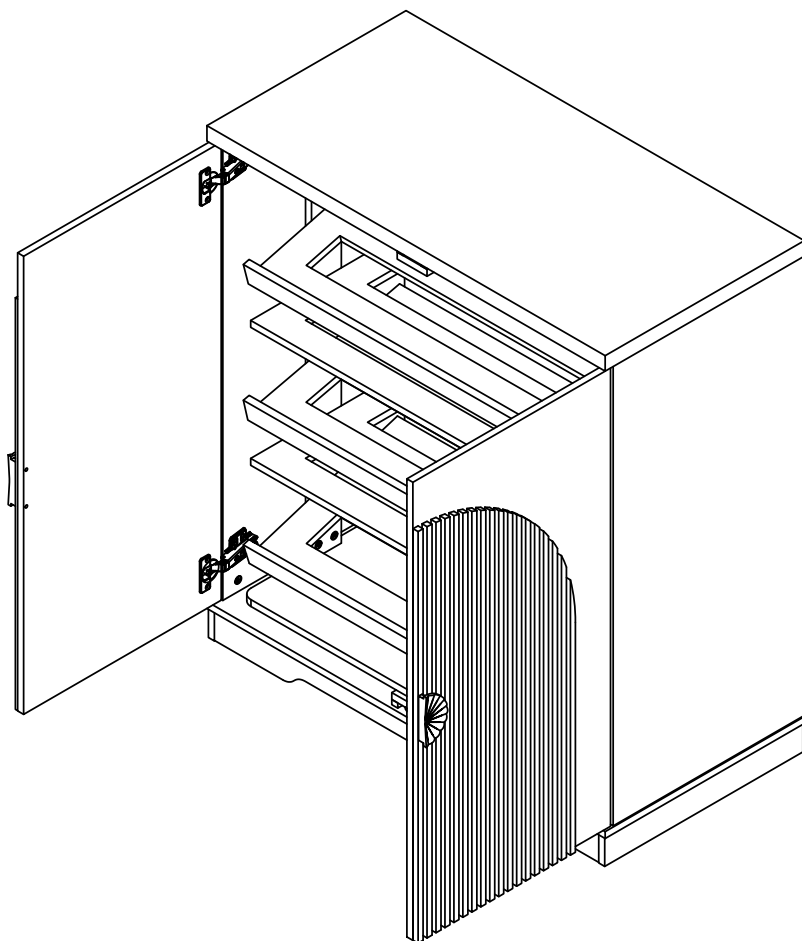

Adjust screw control the gap between the two doors

Adjust hole control the up and down height of the door

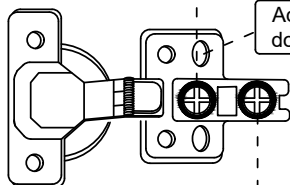

Adjust screw control the gap between the door and the board


SY

Step 48

Ⓔ



x8

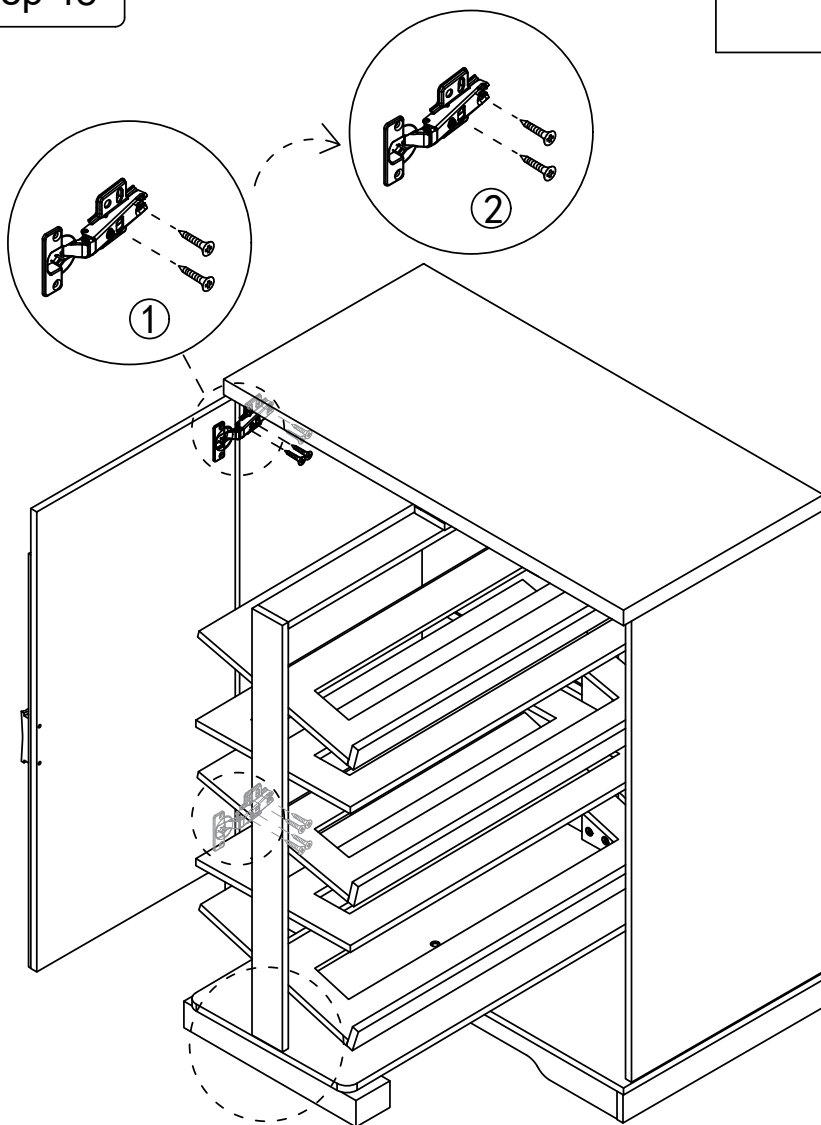

Place wooden blocks or other supports under the product to prevent it from tilting.

When installing the door, first ensure that the door is at the same height as the top board, then fix the inner elliptical hole of the hinge①, and finally lock the circular hole②

SY


33

Step 49

G



x8

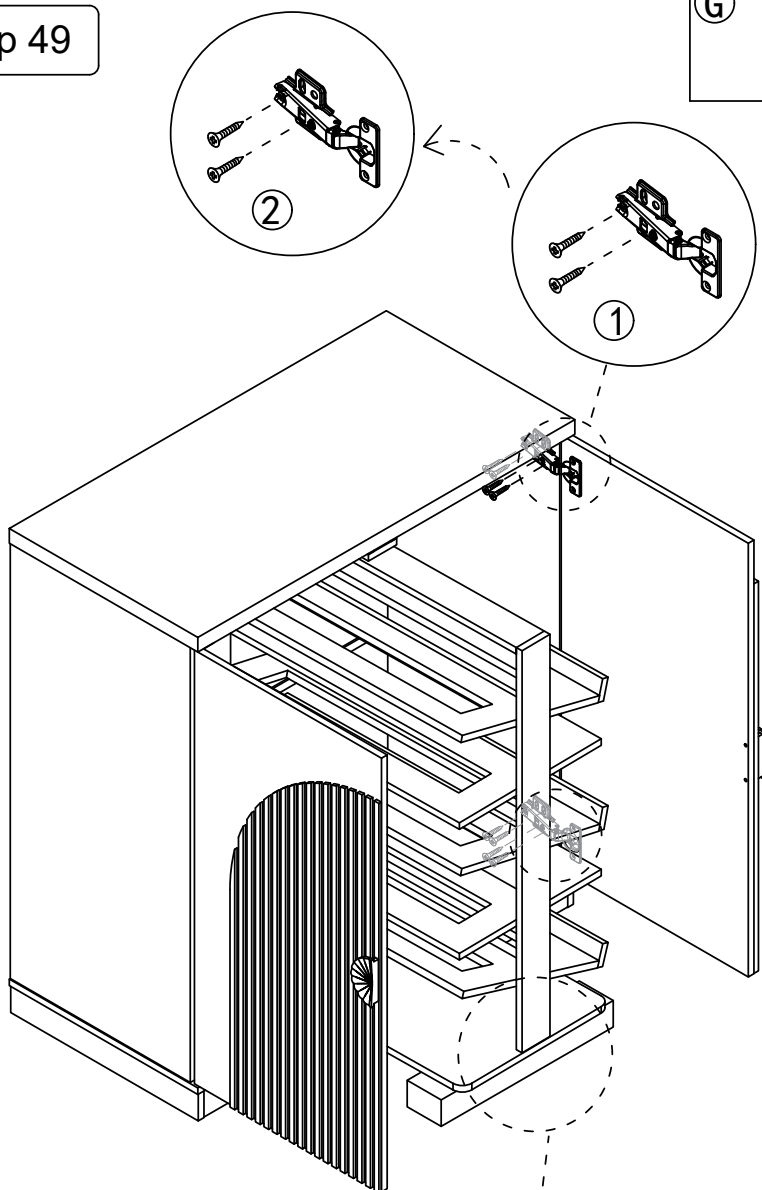

Place wooden blocks or other supports under the product to prevent it from tilting.




When installing the door, first ensure that the door is at the same height as the top board, then fix the inner elliptical hole of the hinge①, and finally lock the circular hole②

SY


34

Step 50

Wall Mount

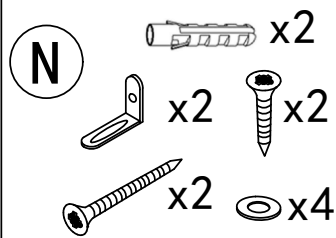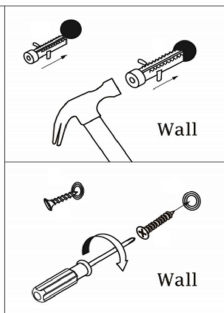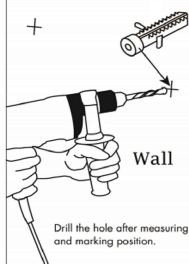


wall

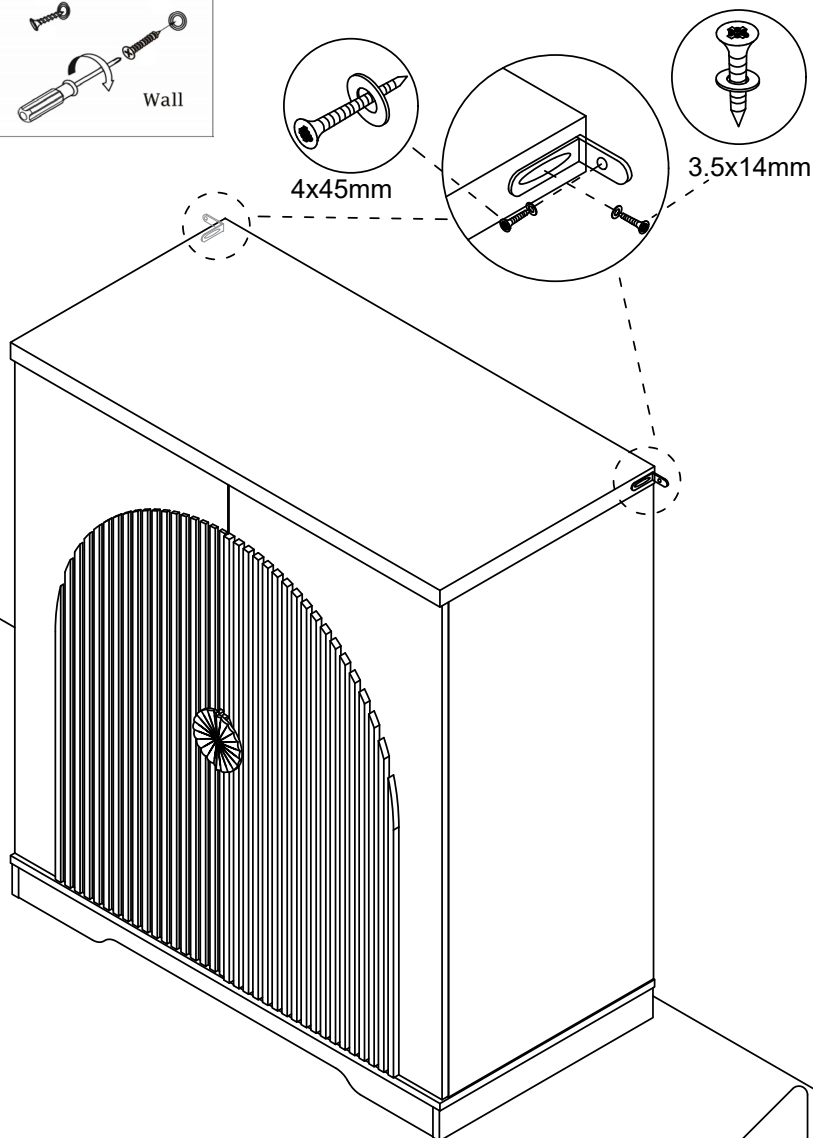


Step 51

Rotatable 180 degrees

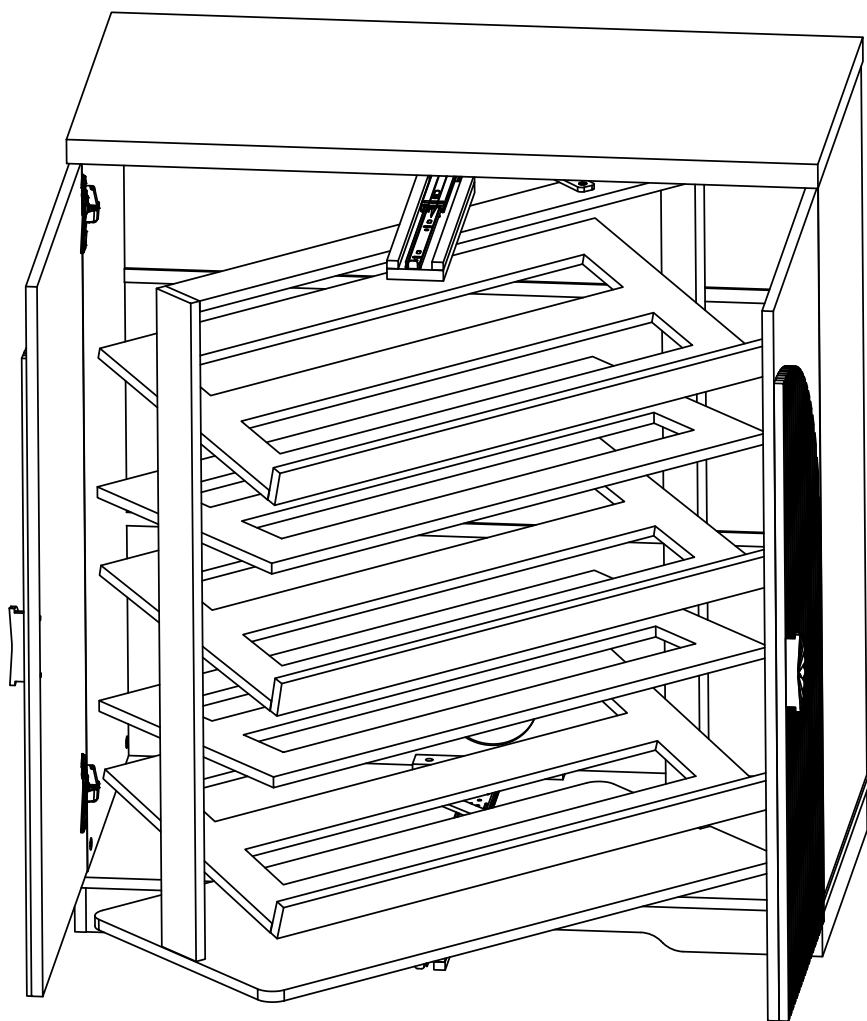

Step 52

Rotatable 180 degrees

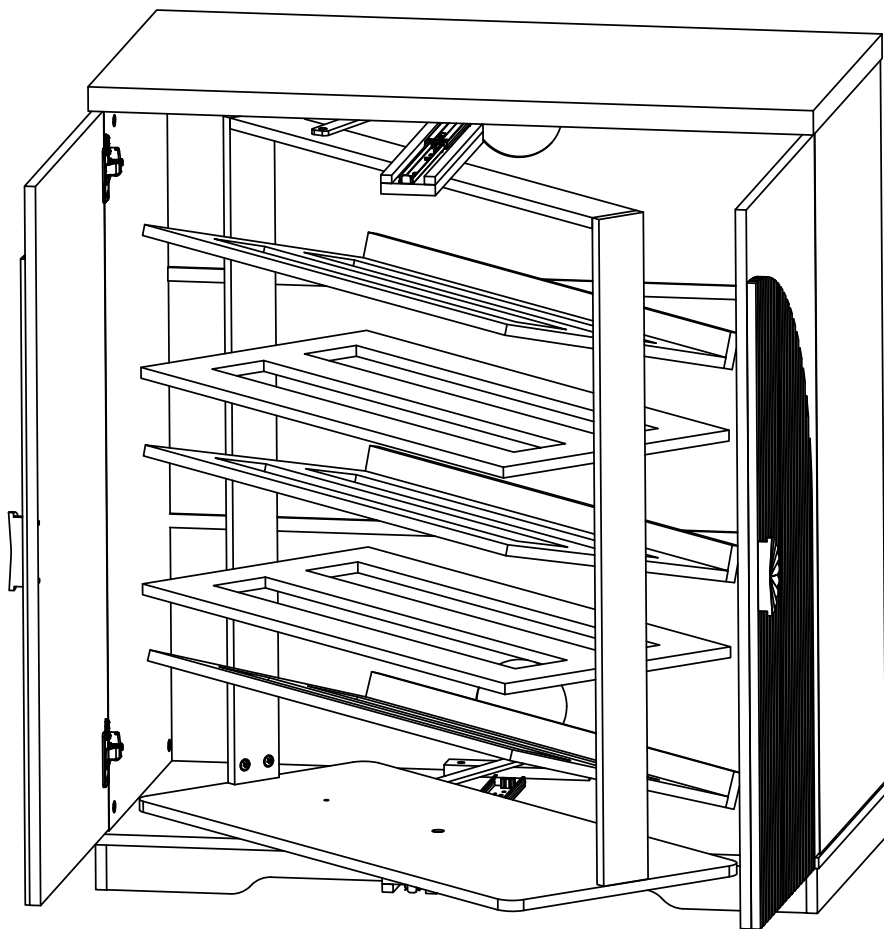

SY

37