



NFN013GB

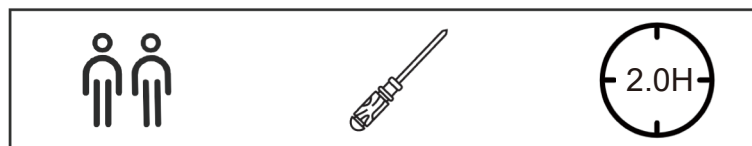



CAUTION:When tightening the screws, tighten sequentially. Do not tighten any screws fully and then towards the next one. When every part is OK, then tighten all the screws.

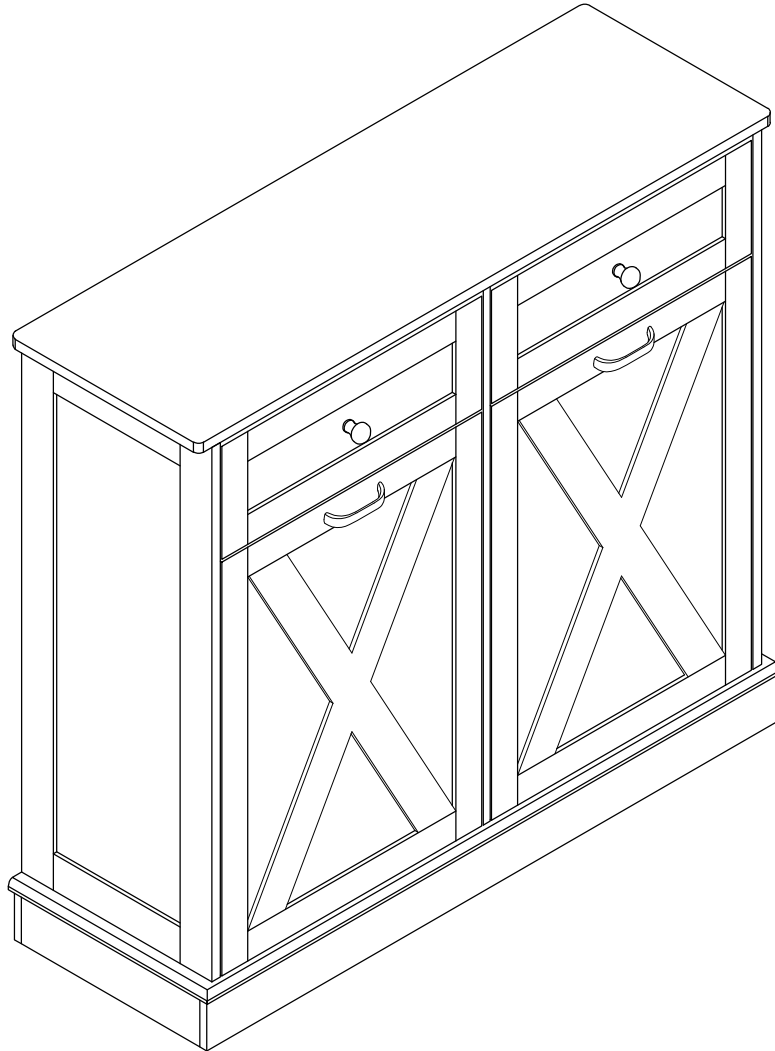


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

E-mail: service@replycenter.net


















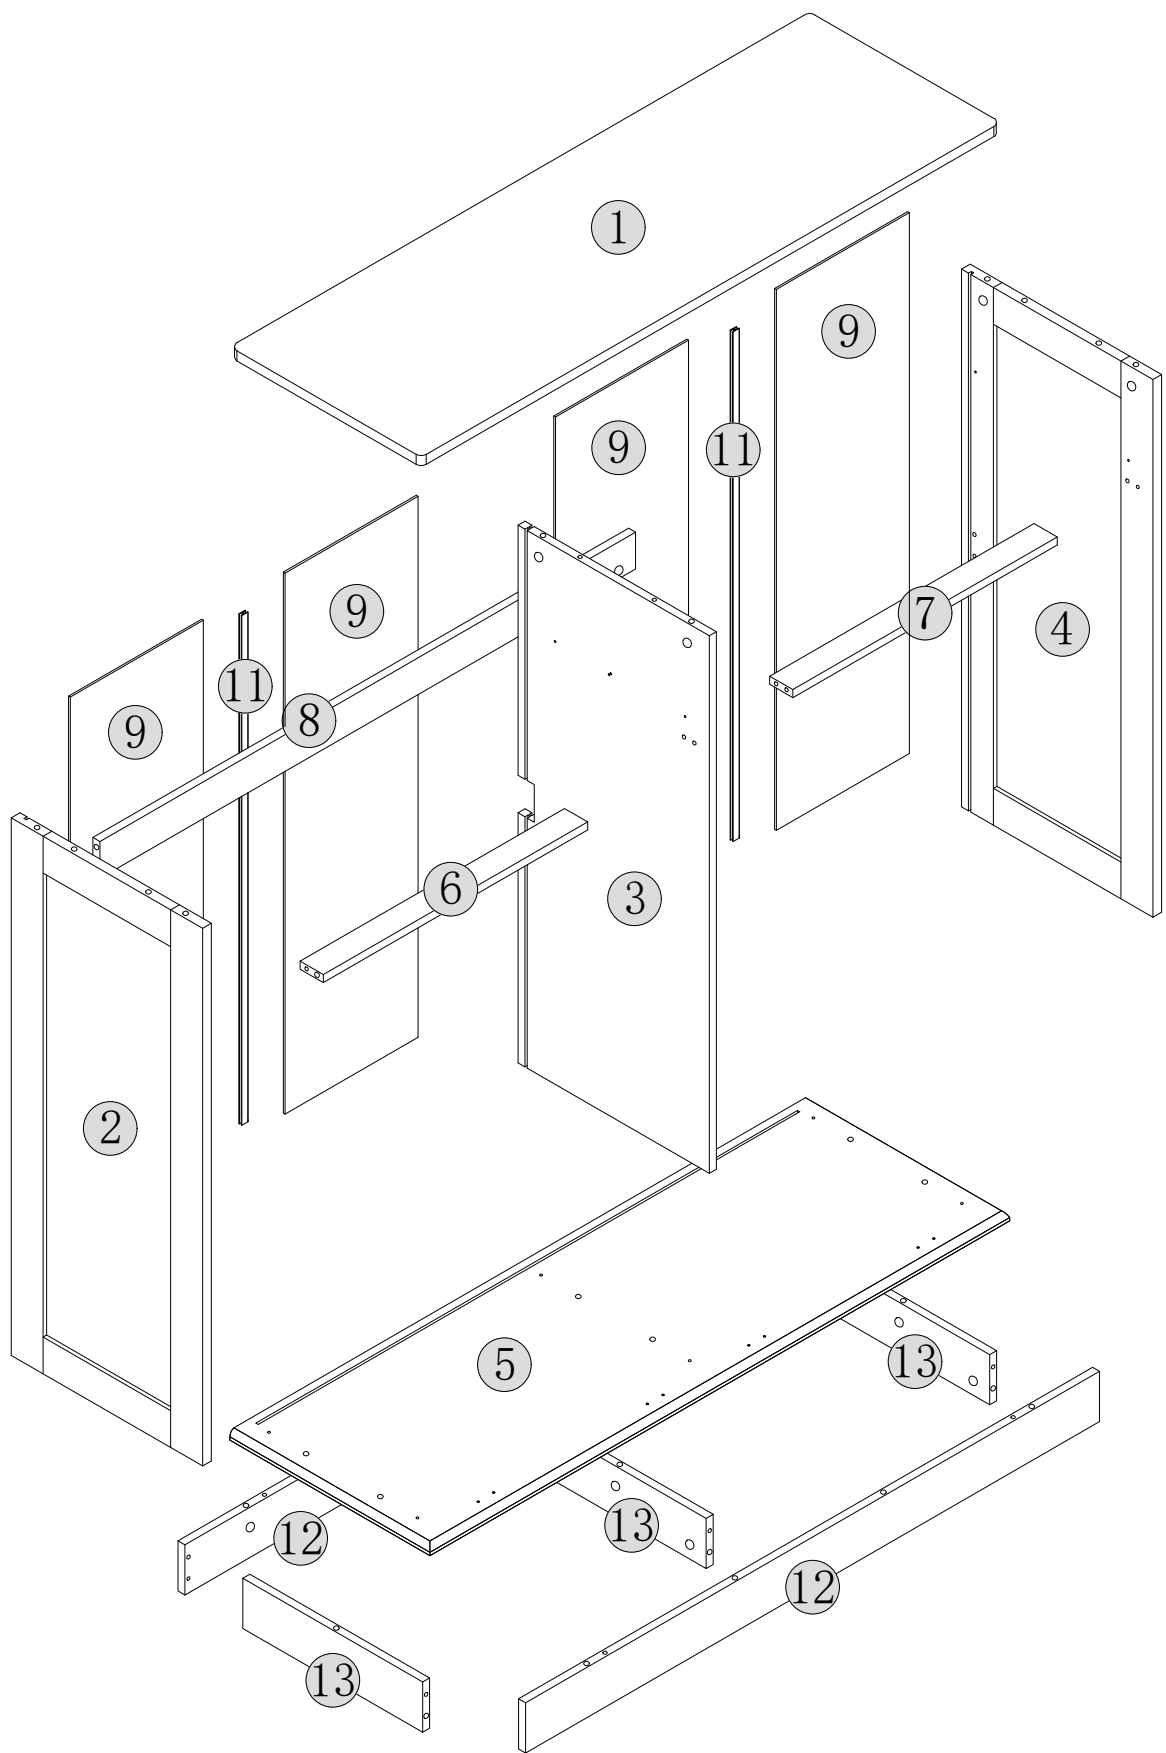



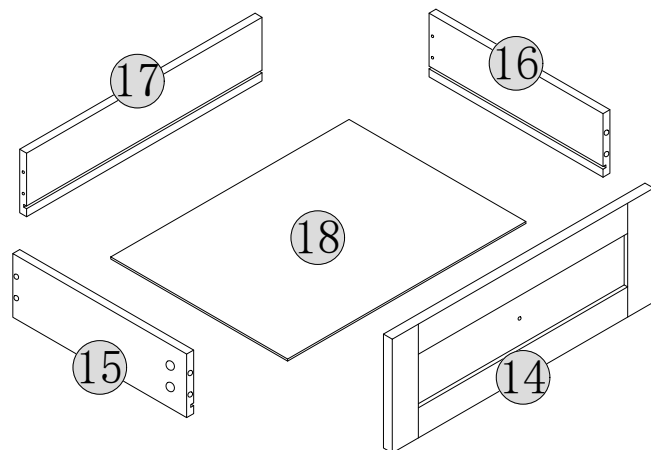



×2

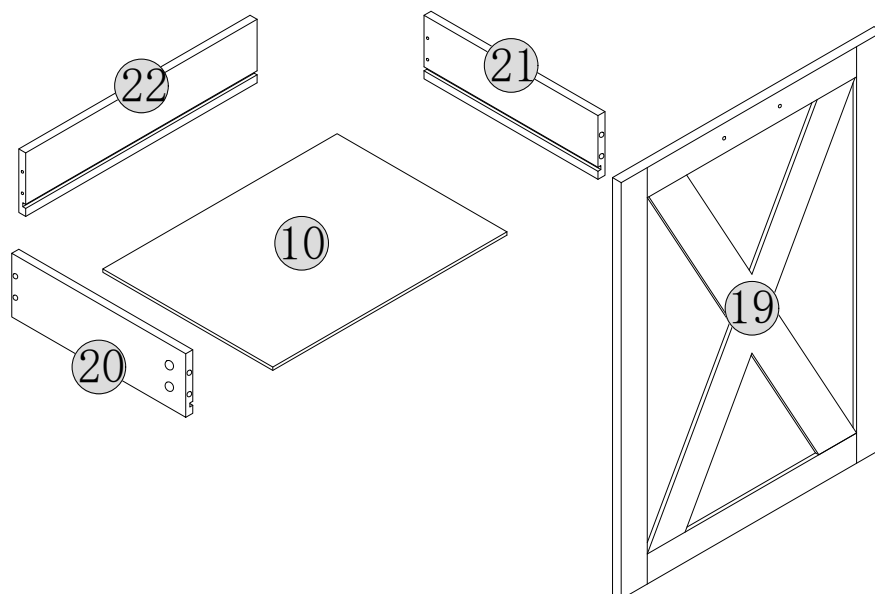

×2

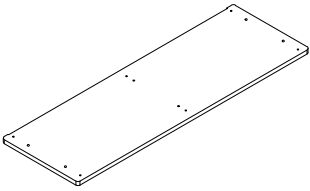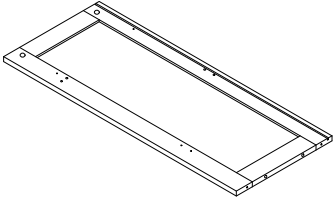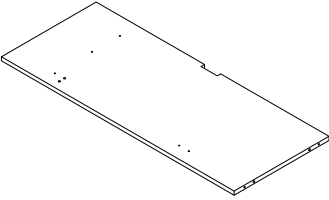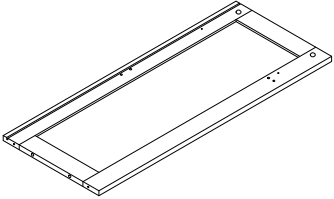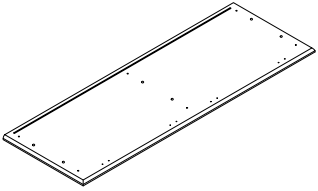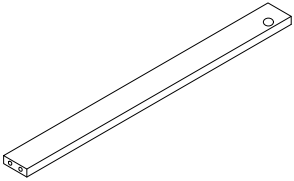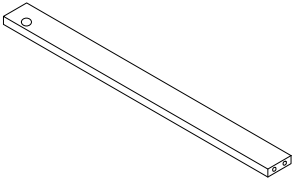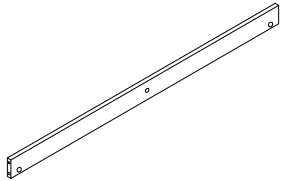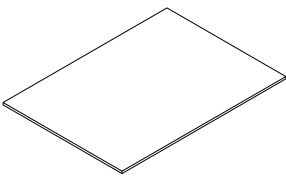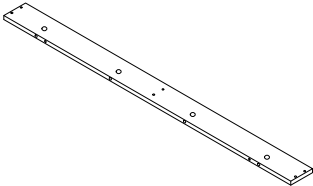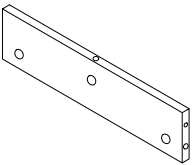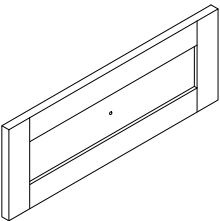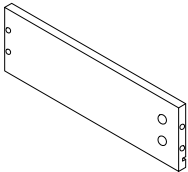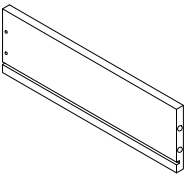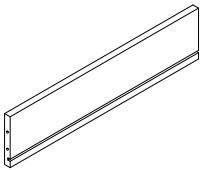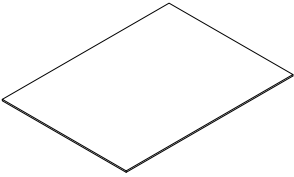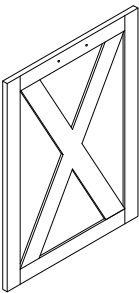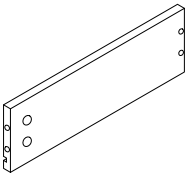①  1PC	②  1PC	③  1PC	④  1PC
⑤  1PC	⑥  1PC	⑦  1PC	⑧  1PC
⑨  4PCS	⑩  2PCS	⑪  2PCS	⑫  2PCS
⑬  3PCS	⑭  2PCS	⑮  2PCS	⑯  2PCS
⑰  2PCS	⑱  2PCS	⑲  2PCS	⑳  2PCS

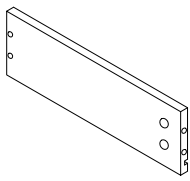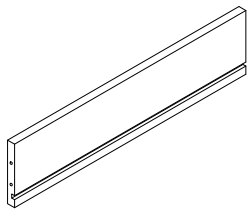
21  2PCS	22  2PCS		
--	--	--	--




A×43




B×2



C×2



D×38




E×23



F×18



G×43

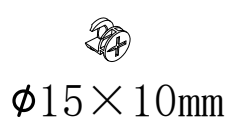


H×2



I×8 +1



J×1




K×4



L×2



M×4



N×2




O×8




P×2




Q×2



R×2




S×2




T×18



U×18

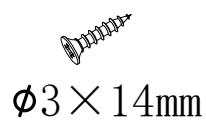

1

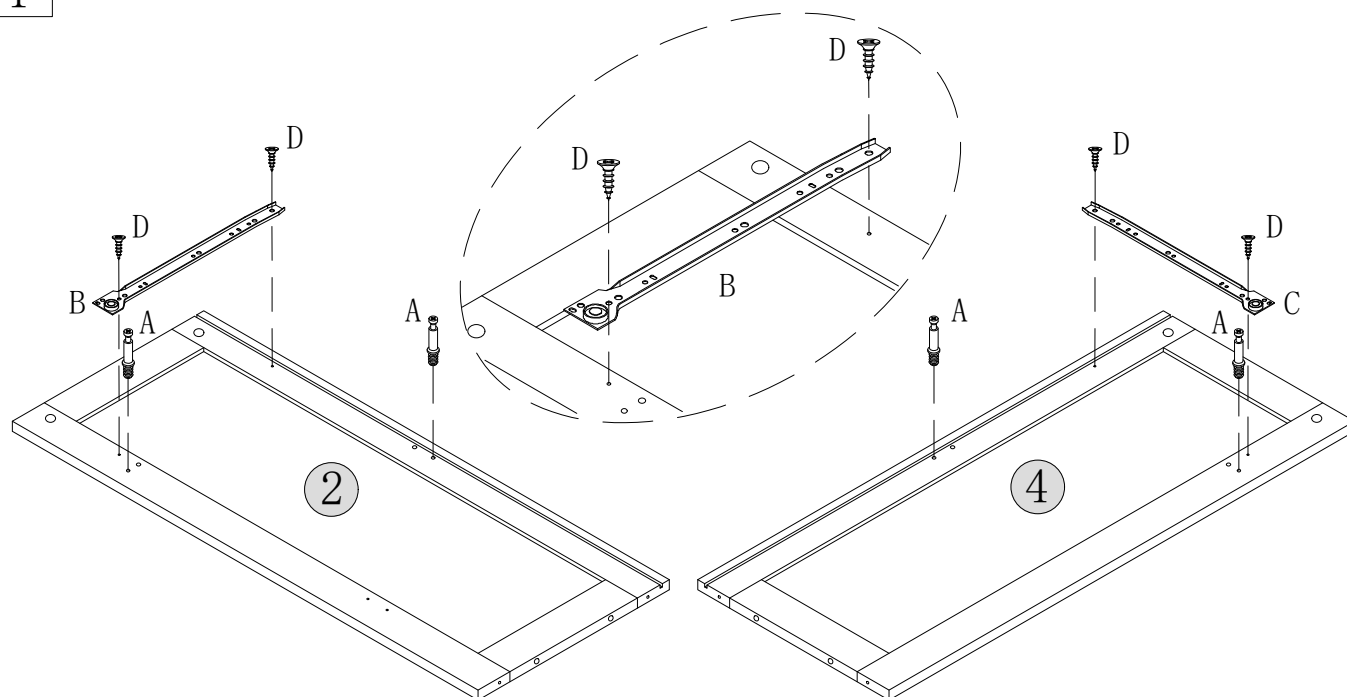


A×4




Φ6×35mm

B×1



C×1




D×4




Φ3×12mm


2

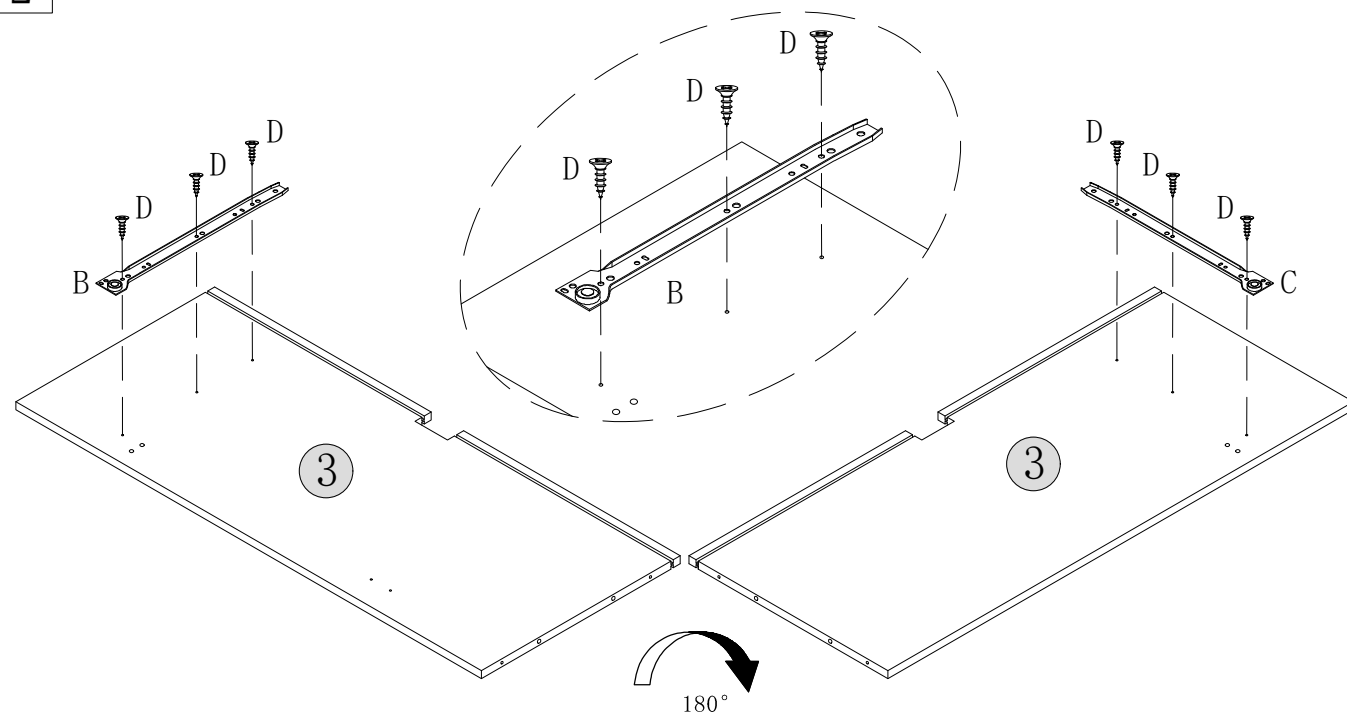

B×1



C×1



D×6




Φ3×12mm


Attention:

No. 3 is ONLY ONE, please install B/C track on the front and back side of No. 3 board respectively.


3

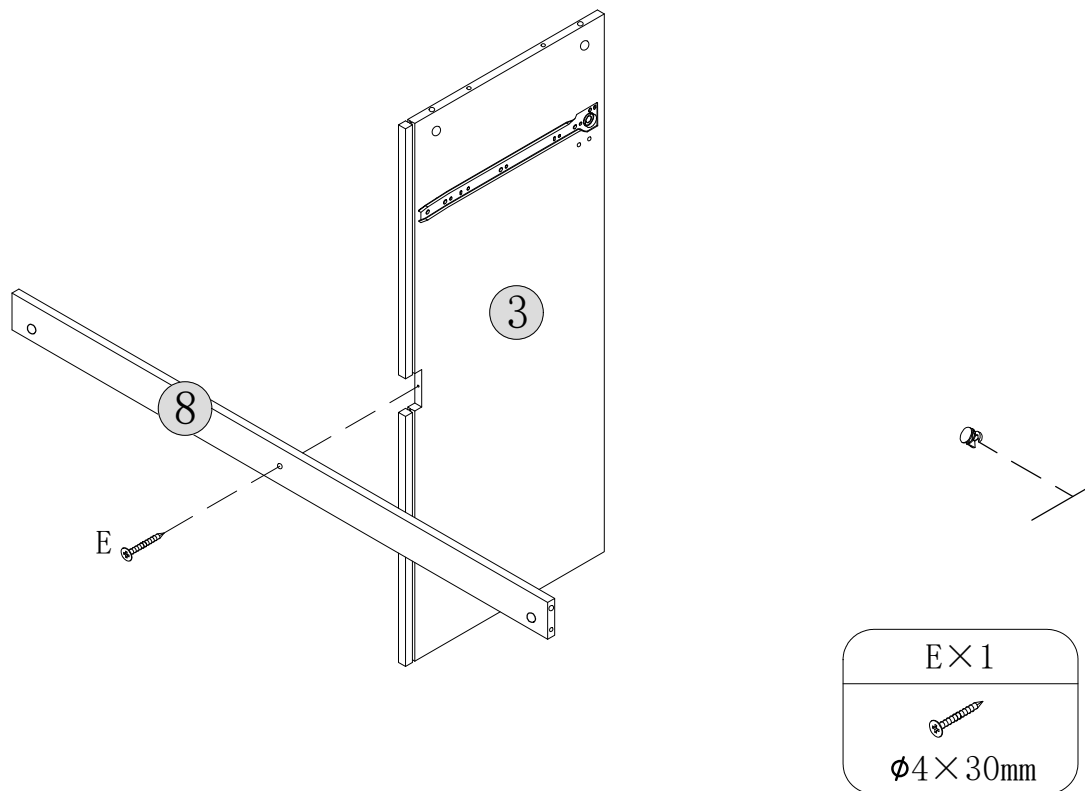

4

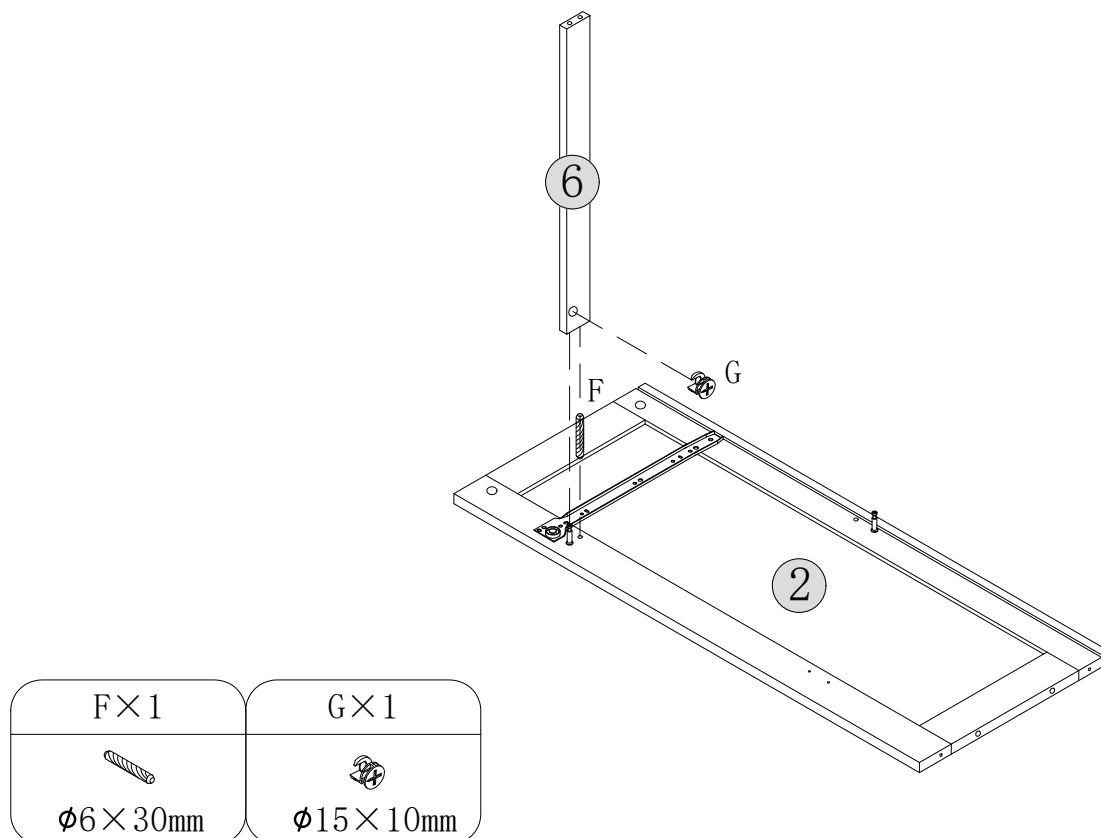

5

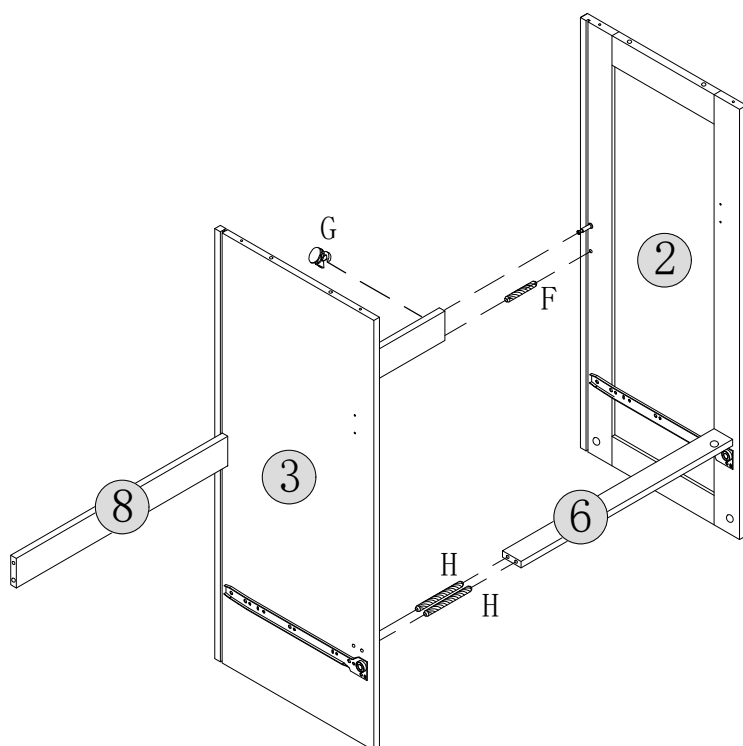

F×1


 $\phi 6 \times 30\text{mm}$


G×1


 $\phi 15 \times 10\text{mm}$

H×2


 $\phi 6 \times 50\text{mm}$

6

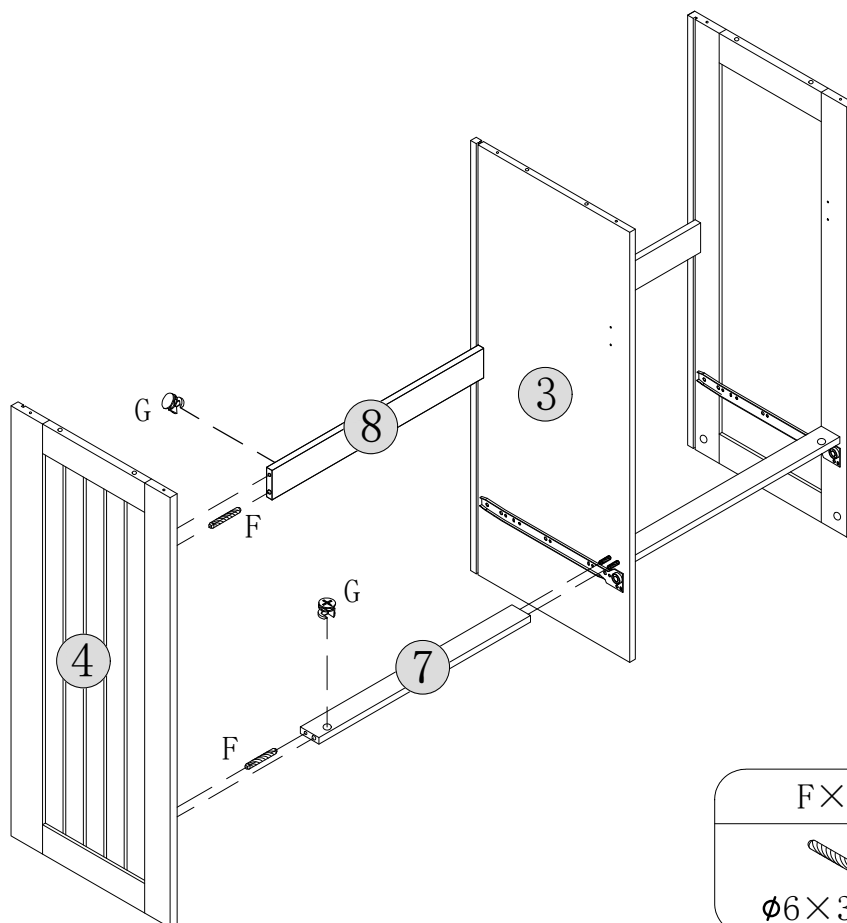


F×2


 $\phi 6 \times 30\text{mm}$

G×2


 $\phi 15 \times 10\text{mm}$

7

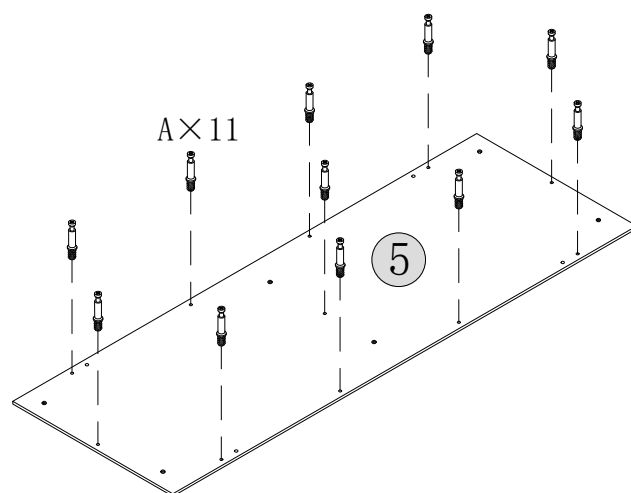

A×11


5

A×11



Ø6×35mm

8

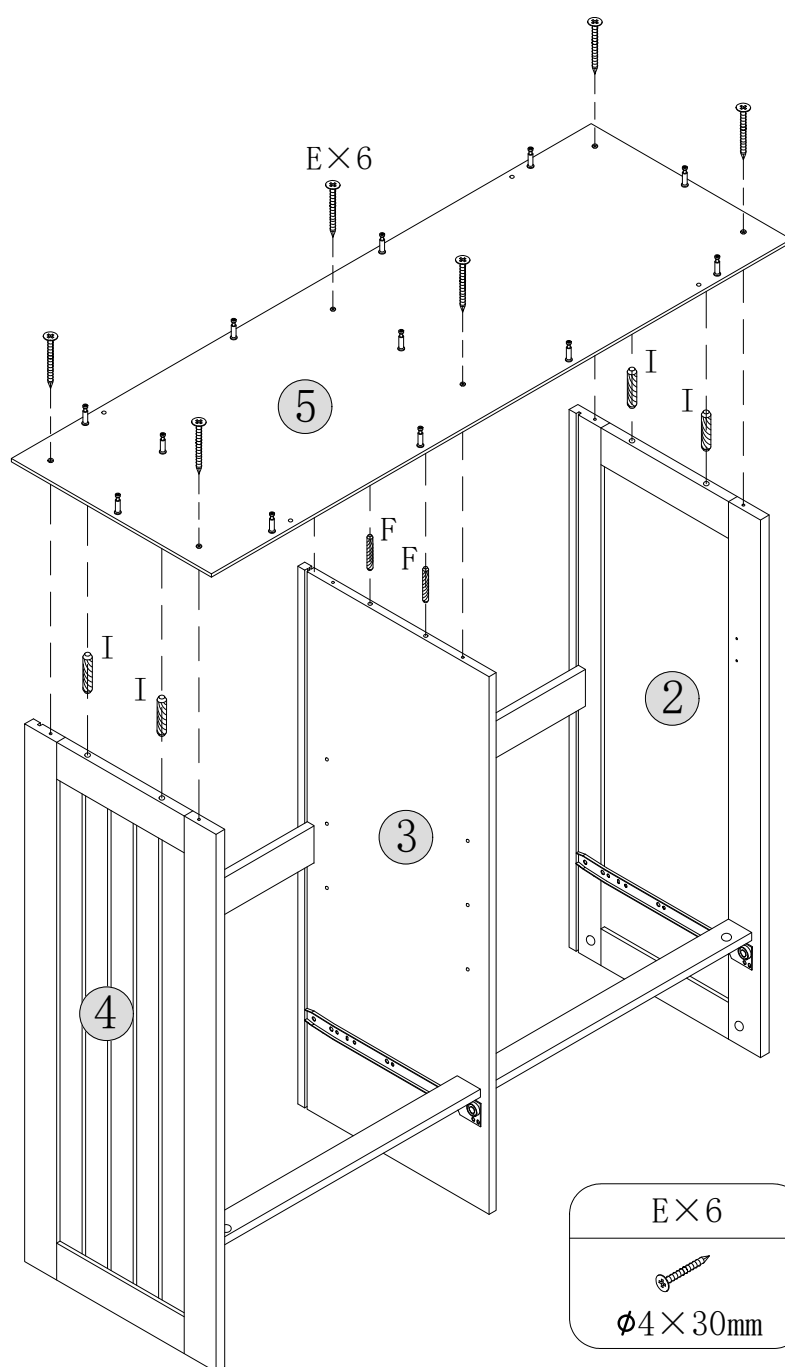

E×6

5

2

3

4

E×6



Ø4×30mm

F×2





Ø6×30mm

I×4






Ø8×30mm

9

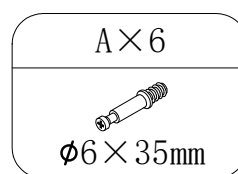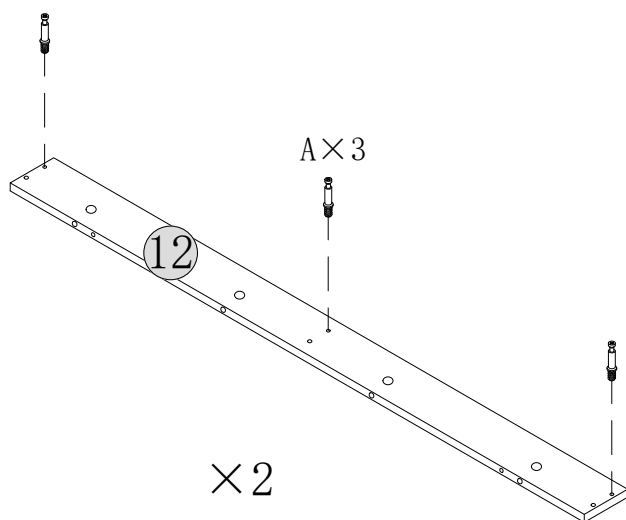

10

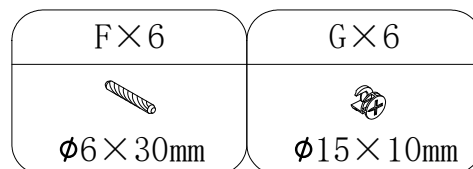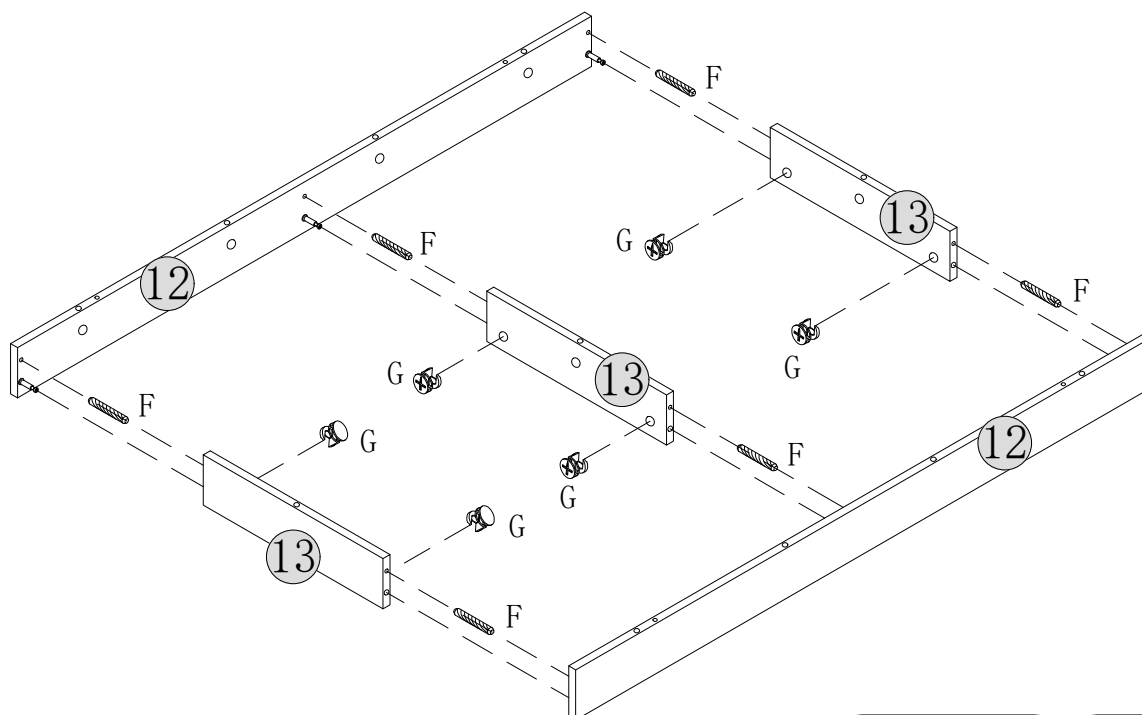

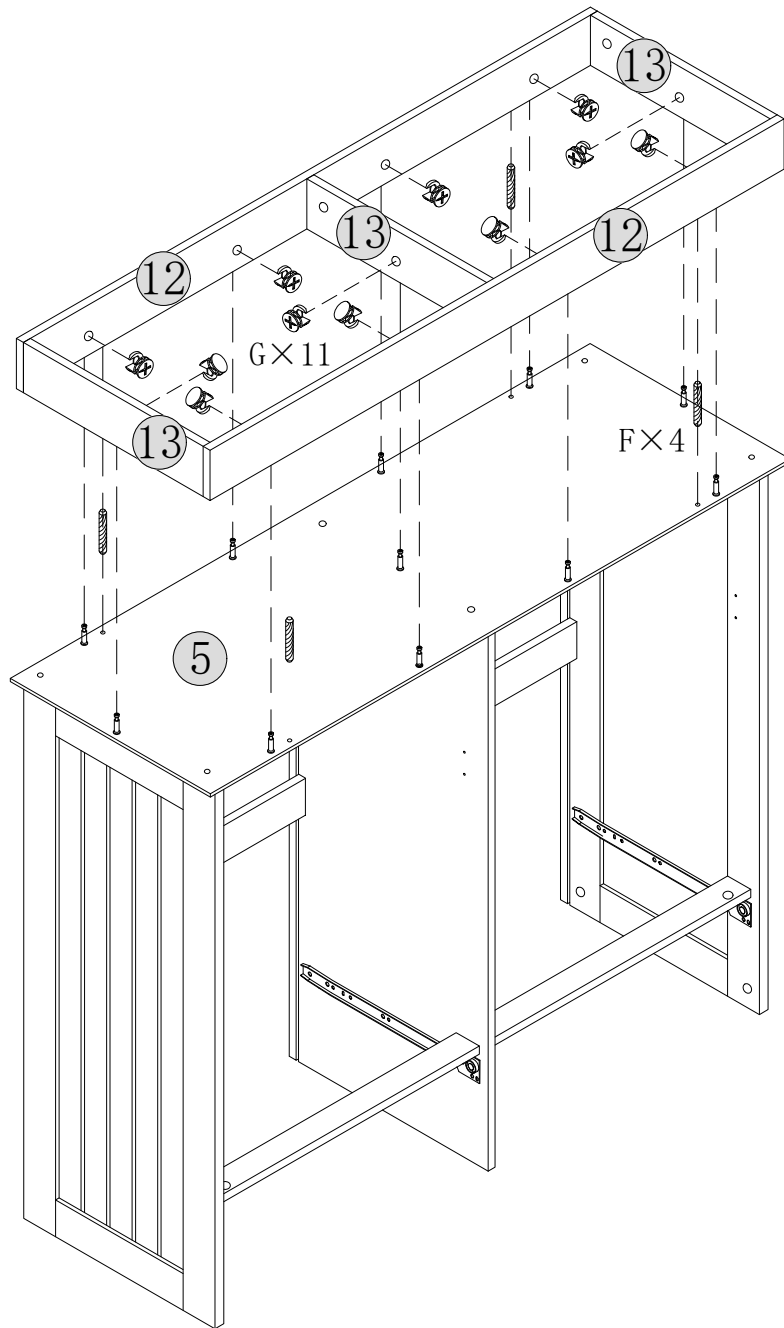



F×4


ø6×30mm


G×11



ø15×10mm

12

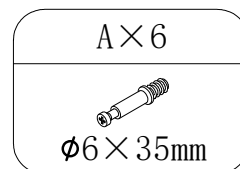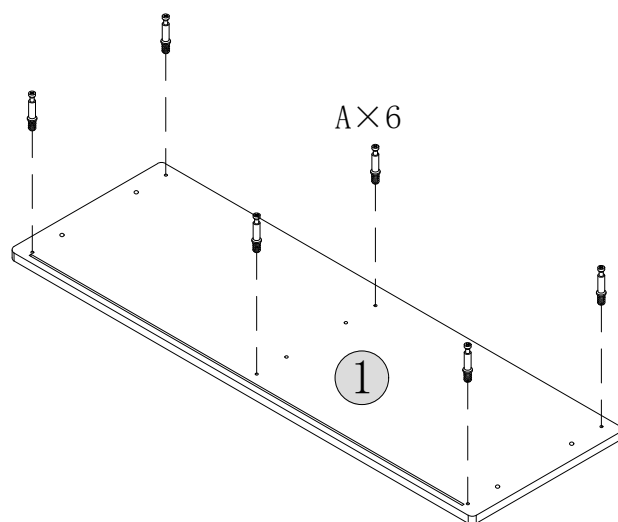

13

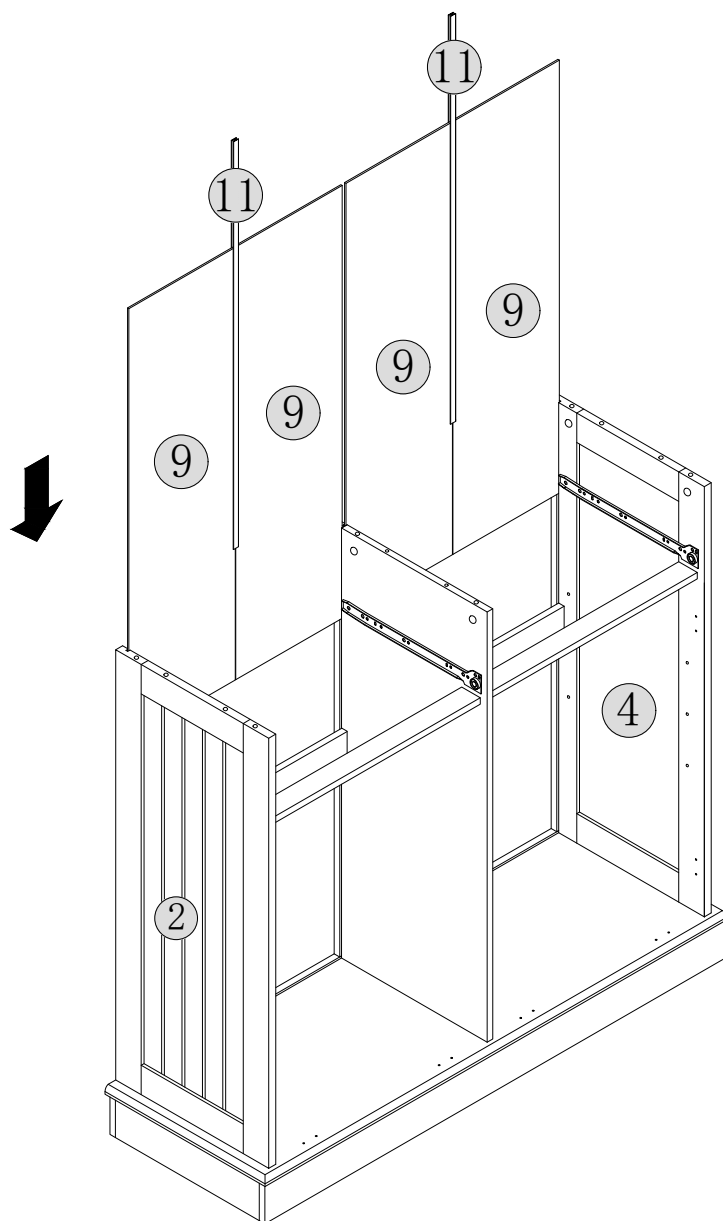

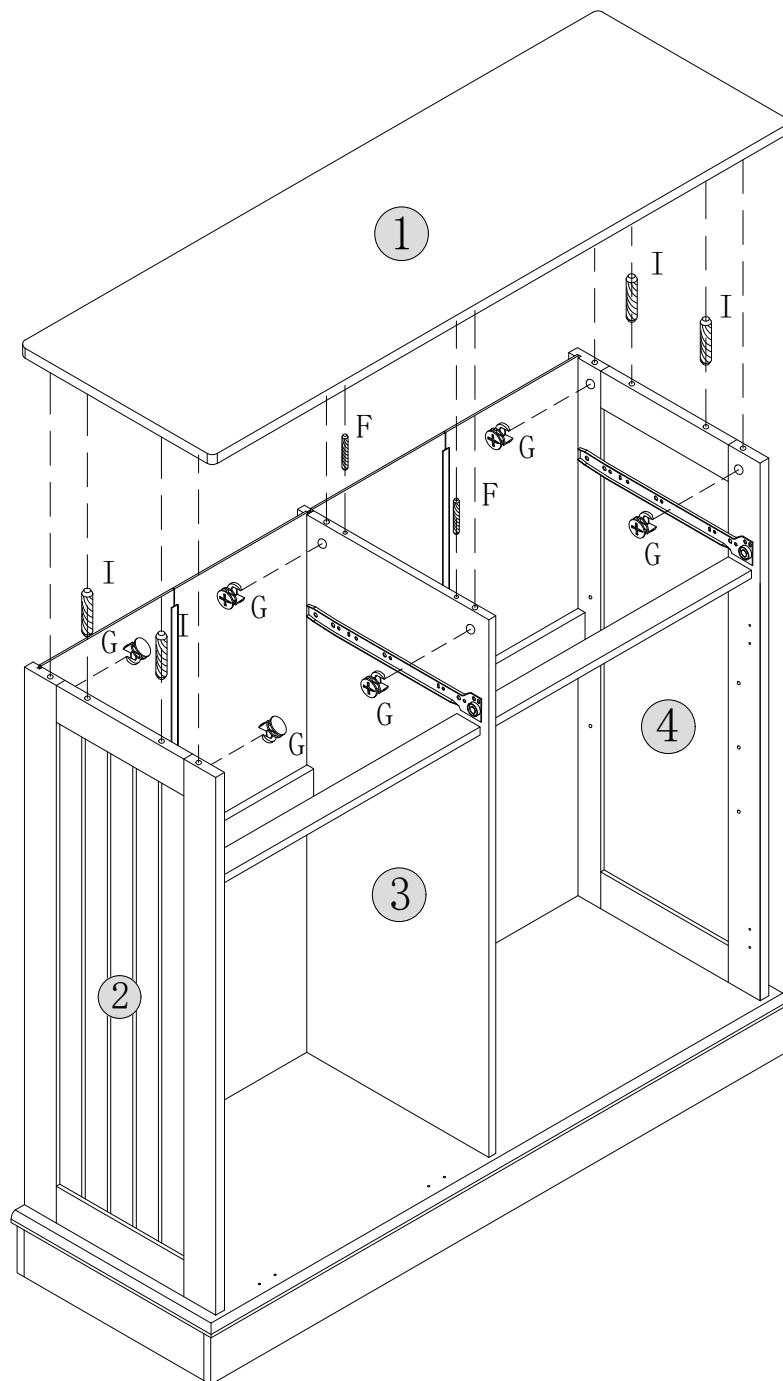

F×2



φ6×30mm

G×6




φ15×10mm

I×4




φ8×30mm


15

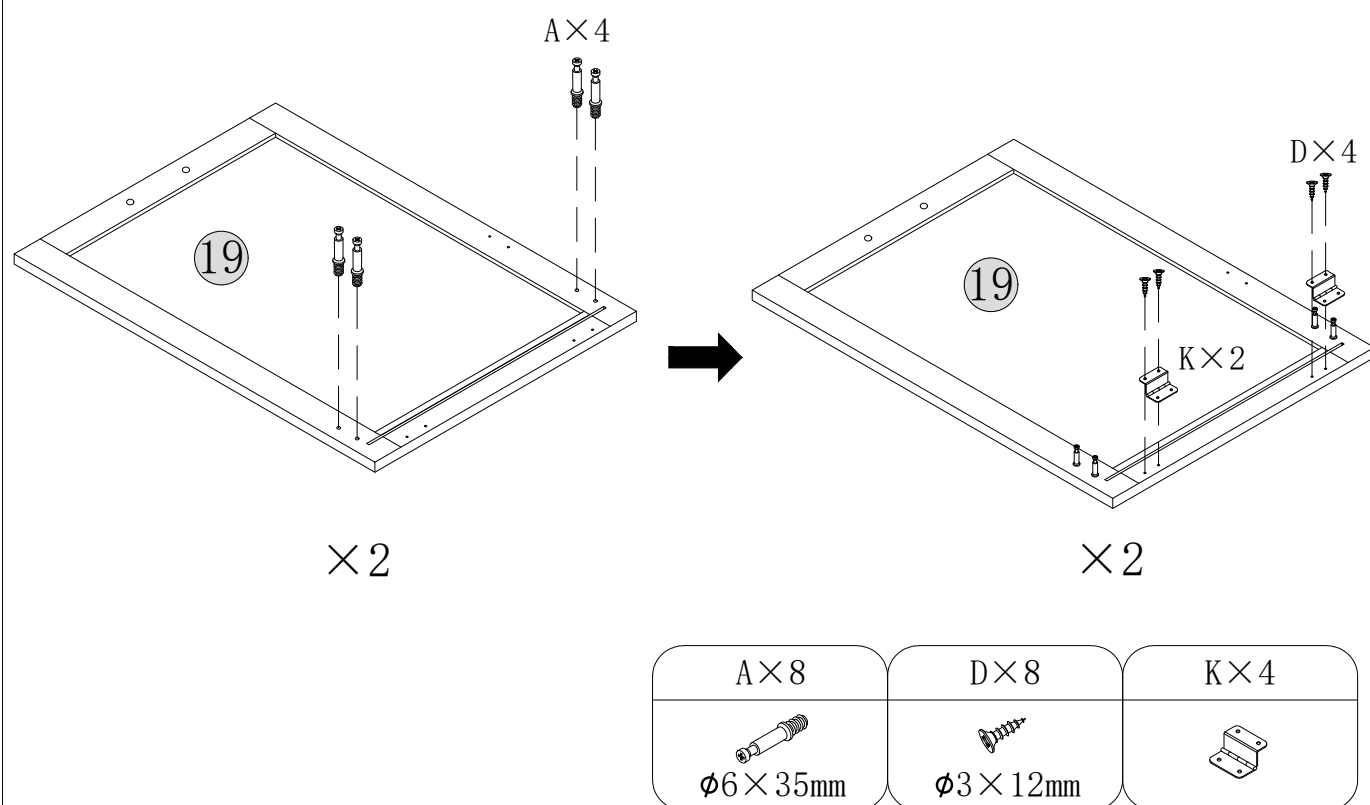

16

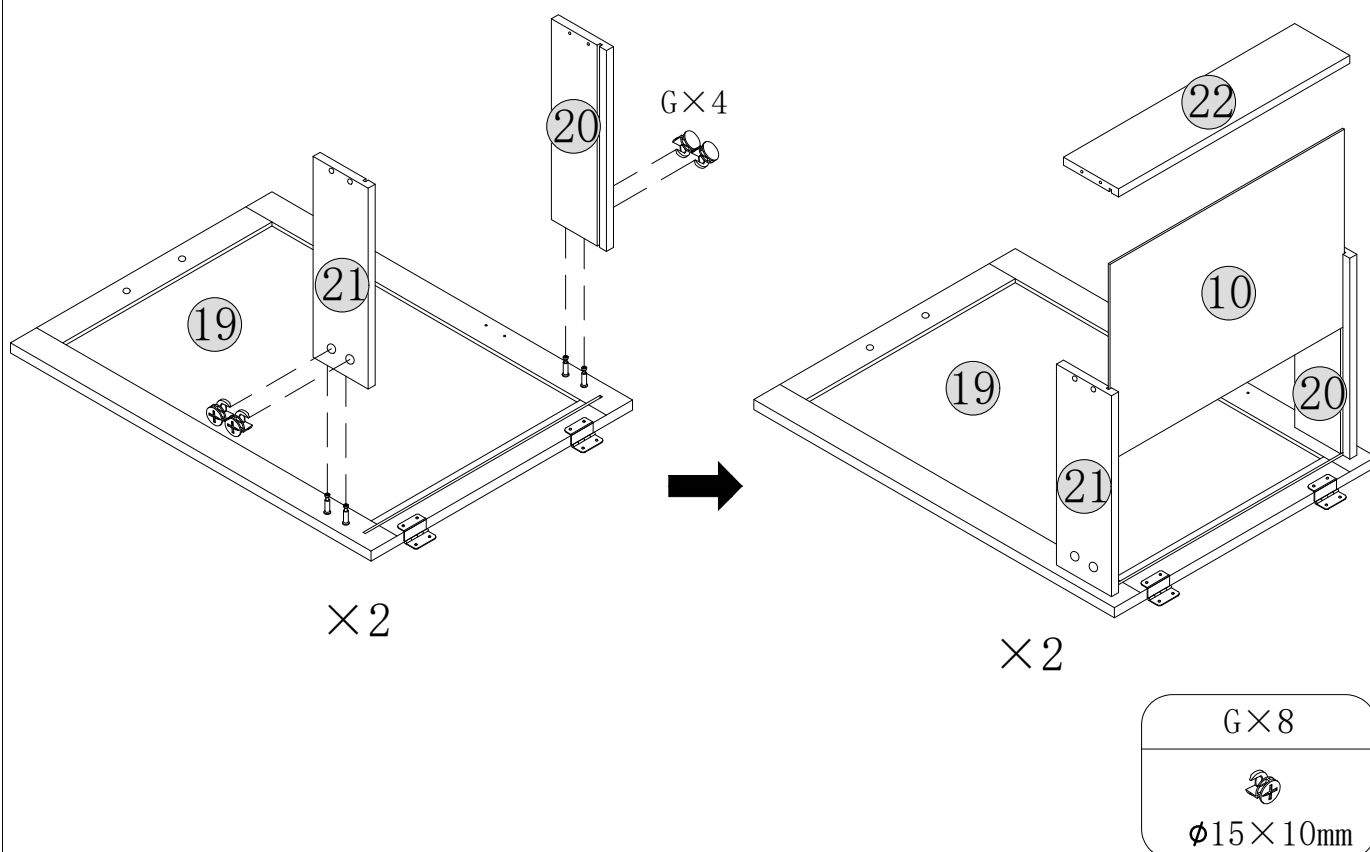


17

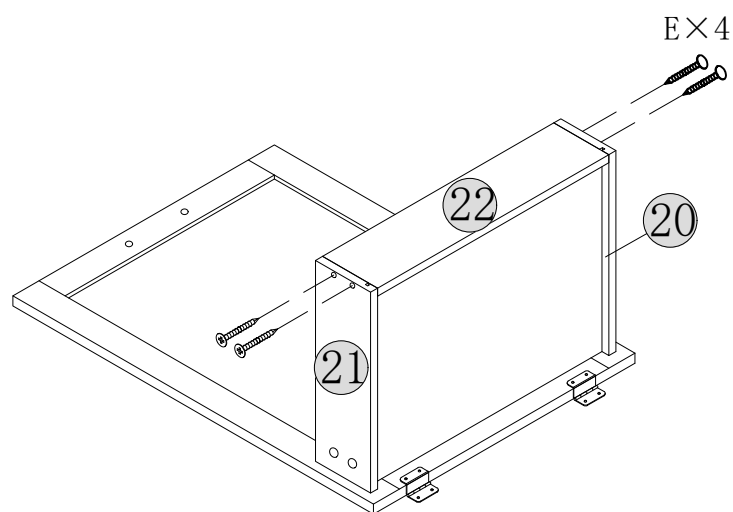

E x 8

 $\phi 4 \times 30\text{mm}$

18

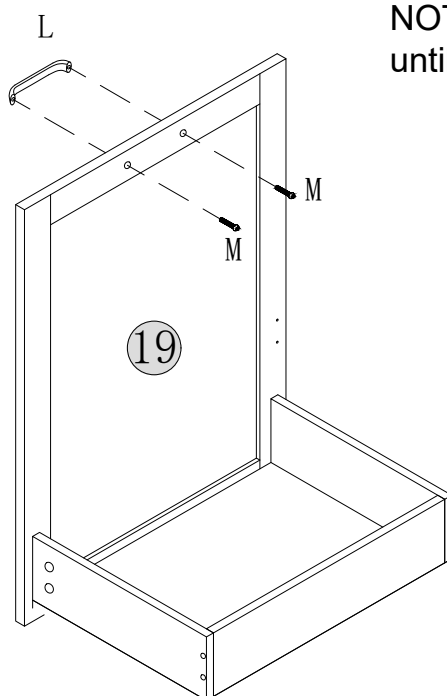

NOTE: Do not tighten the first screw until the handle is installed.


L x 2



M x 4

 $\phi 4 \times 18\text{mm}$

19

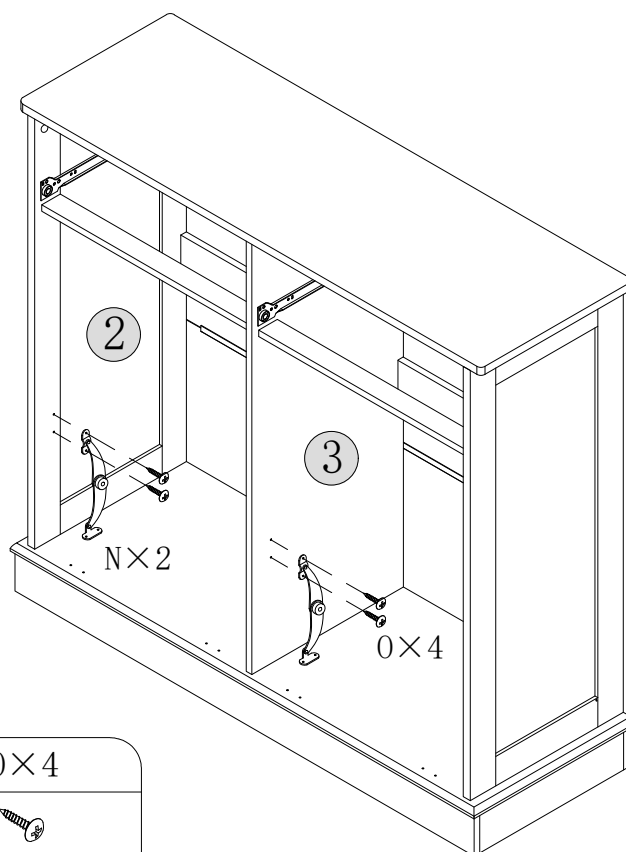

N x 2




O x 4



Ø4 x 12mm

20

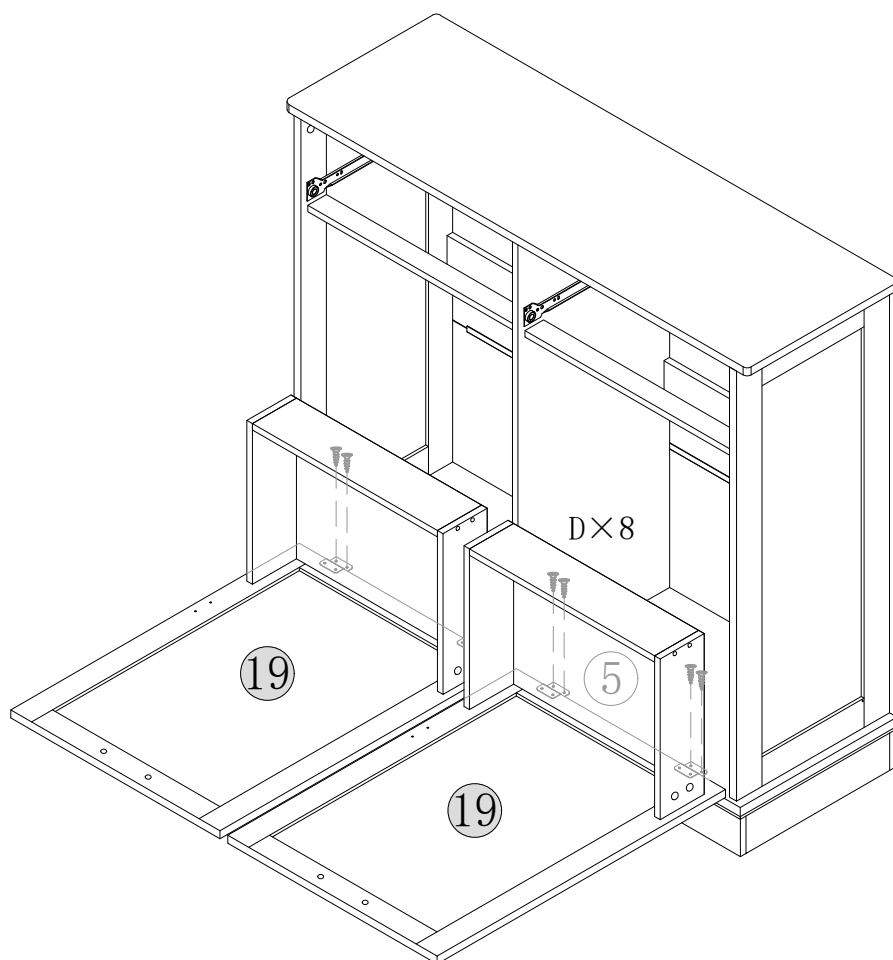



D x 8

D x 8




Ø3 x 12mm

21

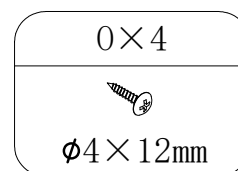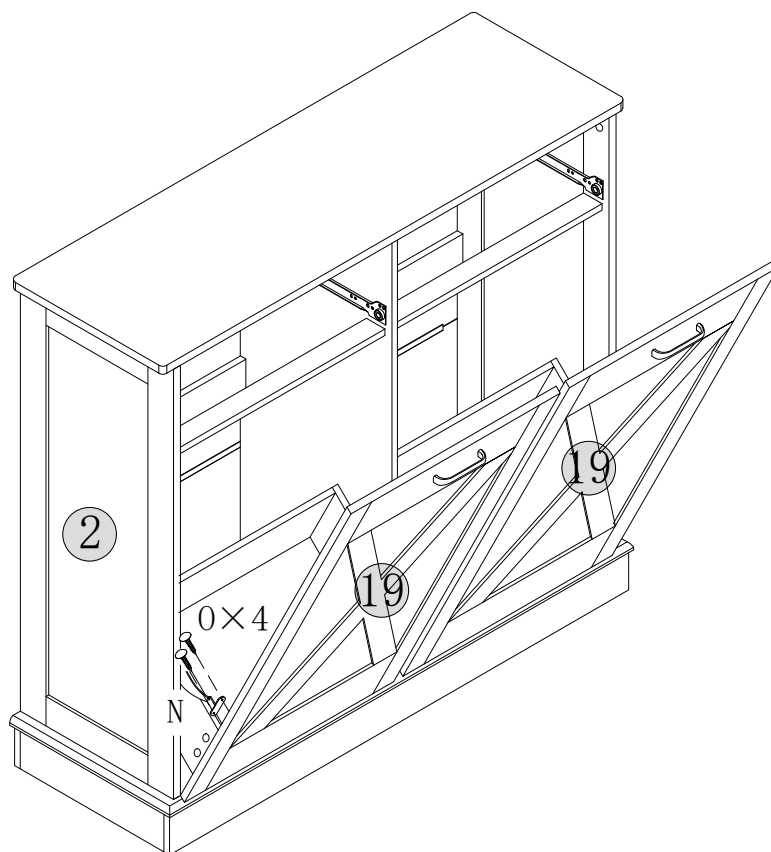


22

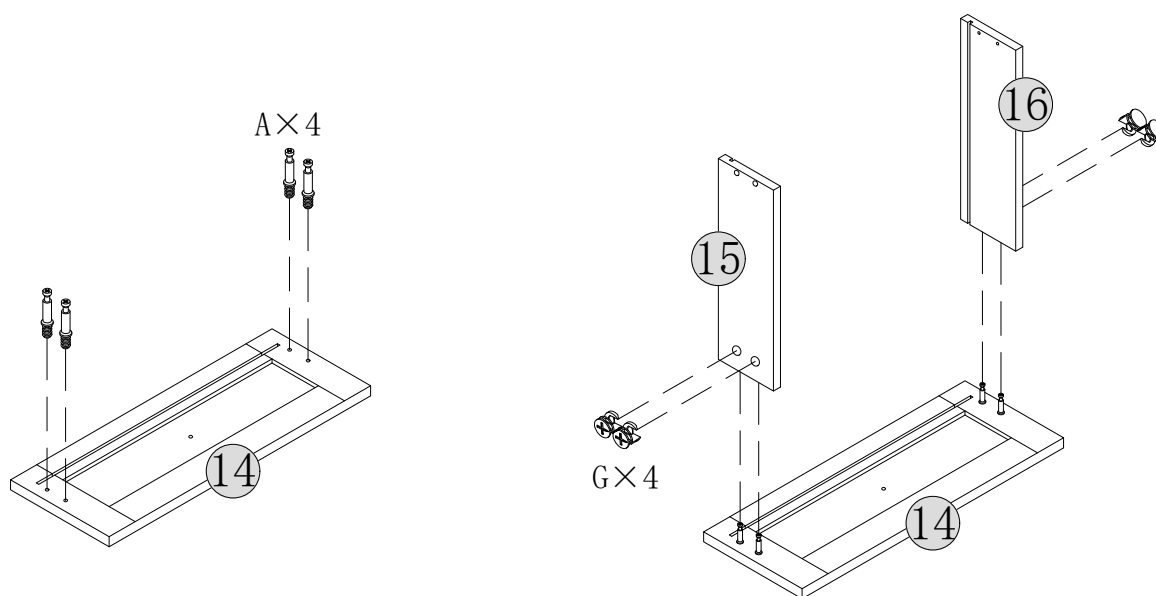


$\times 2$


$\times 2$

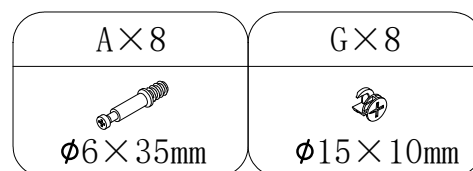

23

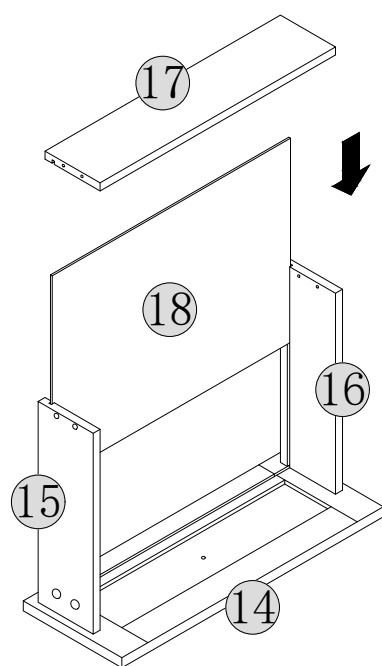


×2

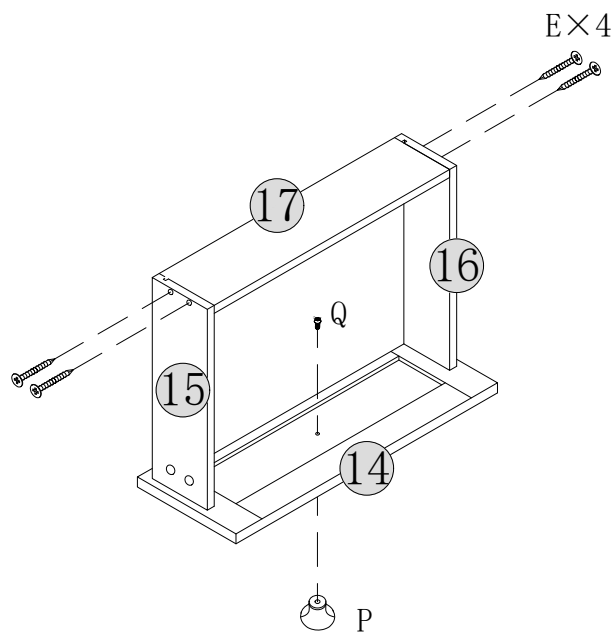


×2



E×8	P×2	Q×2
		
φ4×30mm		φ4×8mm

24


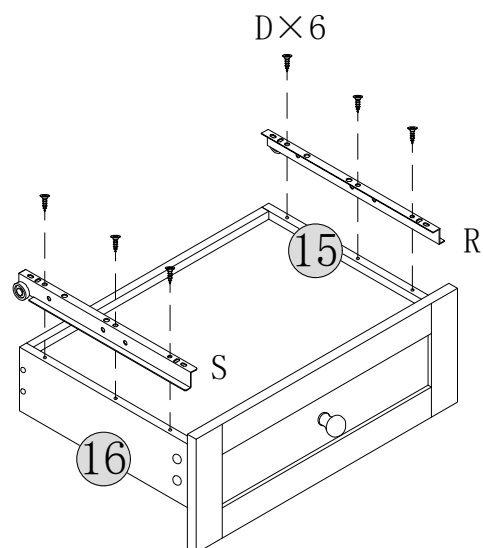


×2

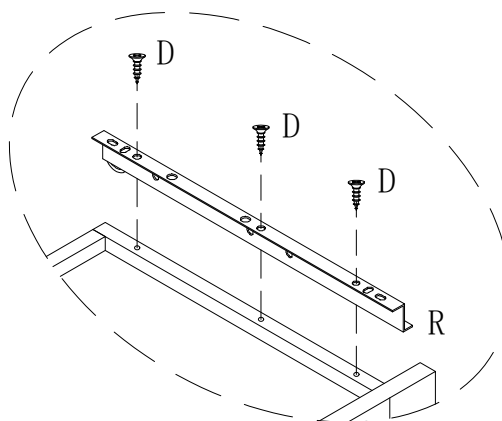


D×12	R×2	S×2
		
φ3×12mm		


25

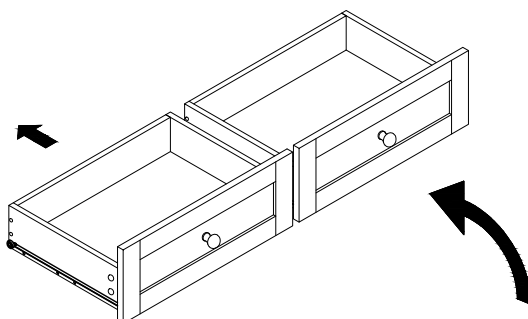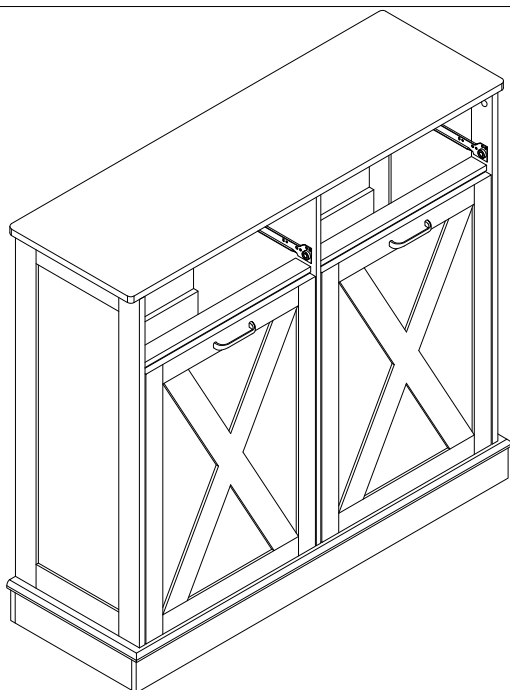

The wheels of the track have to be aligned and pushed along.

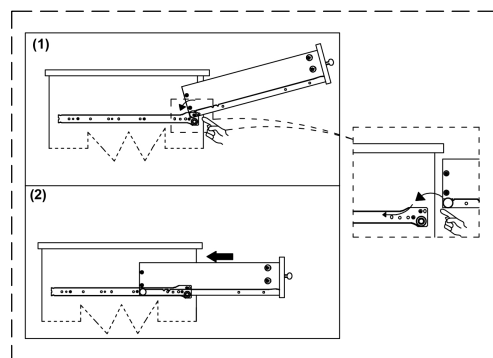

26

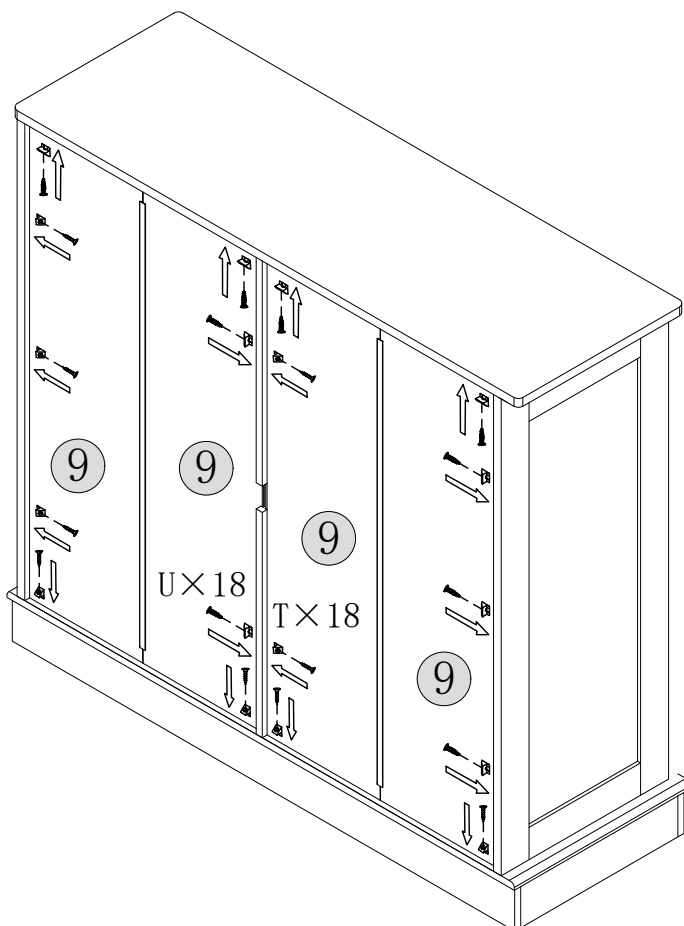





Please lock the back panel fixing buckle U, otherwise it will be wobbly

T × 18



U × 18


 $\varnothing 3 \times 14\text{mm}$

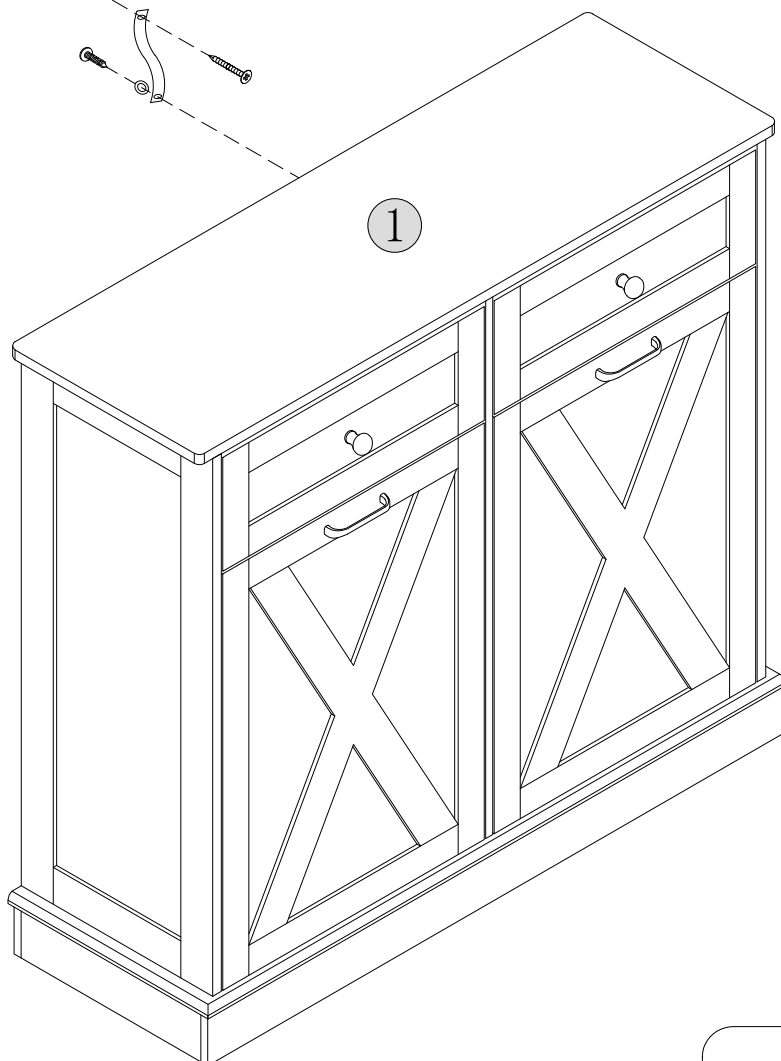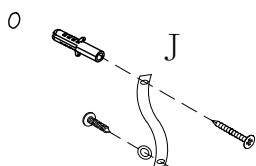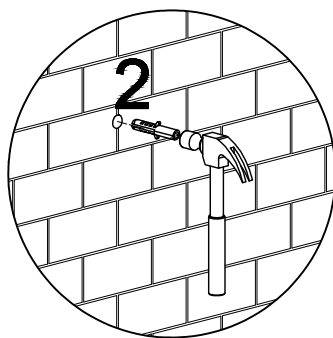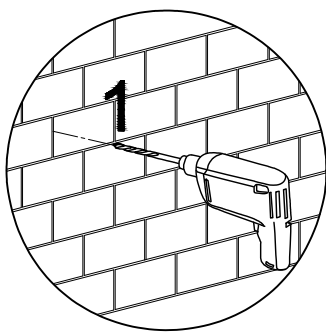

J×1

