

6 DRAWER CHEST



Dimensions	No. people	Assembly Time
Width:140.00cm Depth: 40.00cm Height: 77.70cm		2.5 Hours (approx.)

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Warning : Do not over tighten the handle screw that way break the mirror.



Care and Maintenance

- Please clean using cloth with glass cleaner, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- **Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts**
- Regularly check and ensure That all bolts and fittings are tightened properly.

⚠ WARNING




Children have died from furniture tip-over. To reduce the risk of furniture tip-over:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

Exploded View

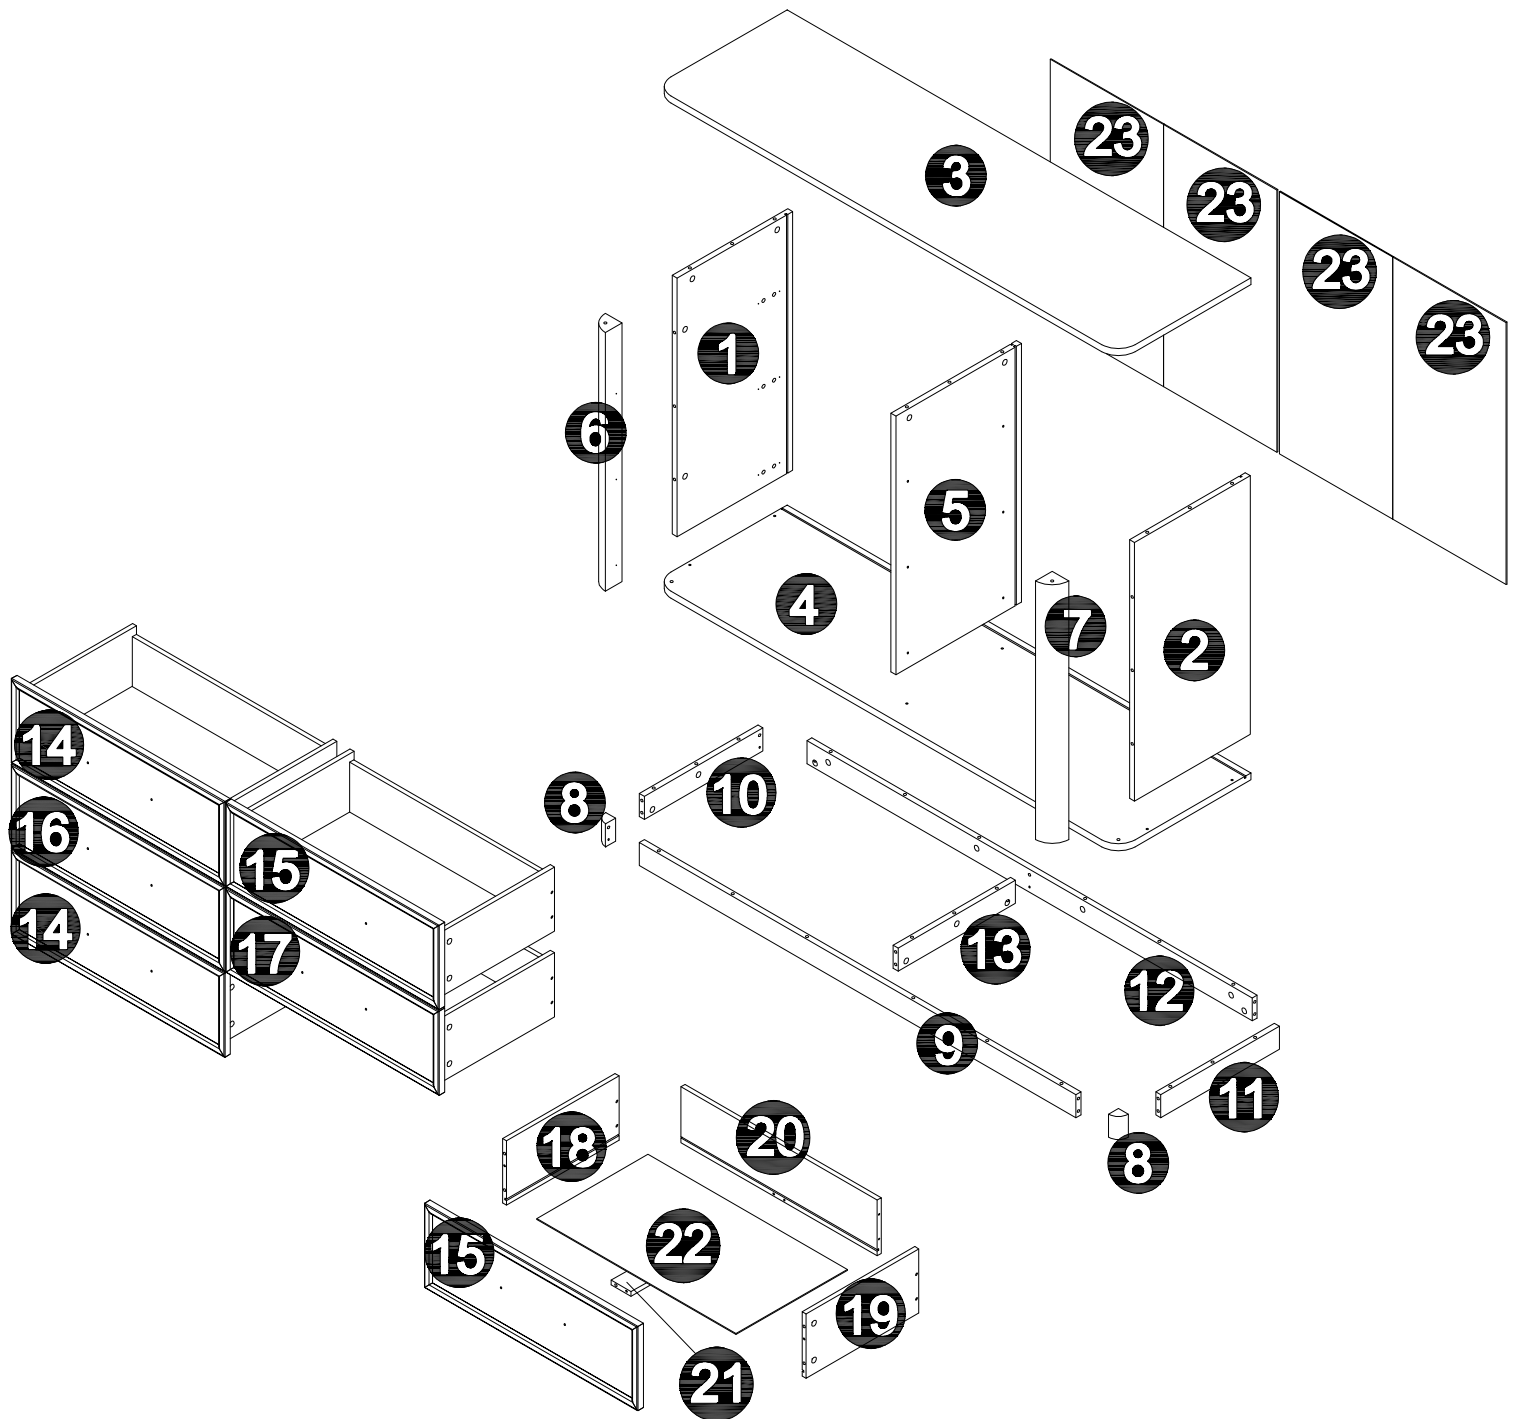

Components - Panels

Please check that you have all the components listed below before constructing your items.






Part No	Description	Qty
1	Side Panel (Left)	1
2	Side Panel (Right)	1
3	Top Panel	1
4	Bottom Panel	1
5	Divider Panel	1
6	Front Rail Panel (Left)	1
7	Front Rail Panel (Right)	1
8	Wooden Leg	2
9	Bottom Rail Panel (Front)	1
10	Bottom Rail Panel (Left)	1
11	Bottom Rail Panel (Right)	1
12	Bottom Rail Panel (Back)	1
13	Bottom Rail Support Panel	1
14	Drawer Front	2
15	Drawer Front	2
16	Drawer Front	1
17	Drawer Front	1
18	Drawer Side (Left)	6
19	Drawer Side (Right)	6
20	Drawer Back	6
21	Drawer Support	6
22	Drawer Bottom	6
23	Back Panel	4

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	CSK M3.5 X 12MM	(B)	CSK M3.5 X 15MM	(C)	CSK M4 X 20MM	(D)	EURO SCREW M6 X 9MM
							
	24 unit		24 unit		12 unit		12 unit
(E)	JCBC(W) M6 X 40MM	(F)	WOOD DOWEL Ø6 X 20MM	(G)	WOOD DOWEL Ø8 X 25MM	(H)	BOLT DOWEL 20 X 5MM
							
	30 unit		24 unit		27 unit		65 unit
(J)	CAM 15/15	(K)	CAM 15/12	(L)	HANDLE I BAR (L300) MC4 X 20MM	(M1) & (M2)	DRAWER SLIDE (350MM)
							
	29 unit		36 unit		6 sets		6 sets
(N1) & (N2)	DRAWER SLIDE (350MM)	(P)	PLASTIC LEG STUD	(Q)	PVC BLOCK	(R)	ALLEN KEY
							
	6 sets		8 unit		6 unit		1 unit
(S)	BACKPLY STOPPER	(T)	TIPPING RESTRAINT KIT				
							
	12 unit		2 Sets				

Tools Required

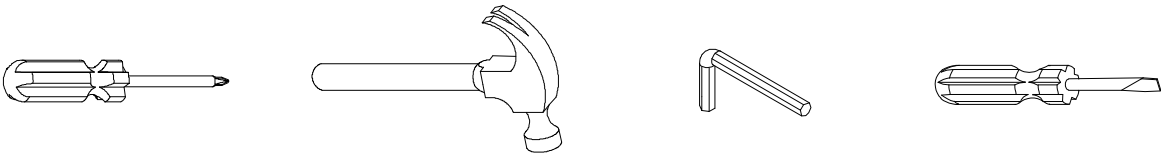


Ruler - Use this to measure your screws (mm)

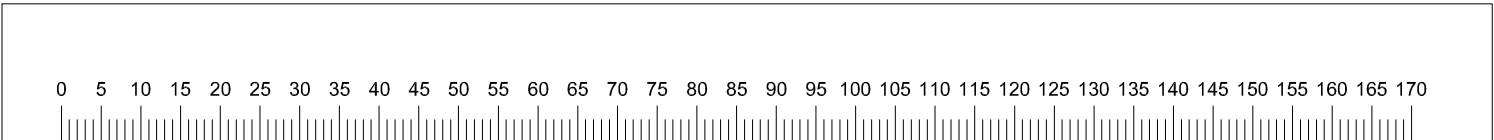

Using Camlocks

SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS



CAM-LOCK

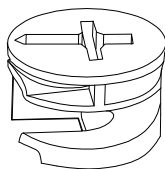

Align with long point of cross

WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

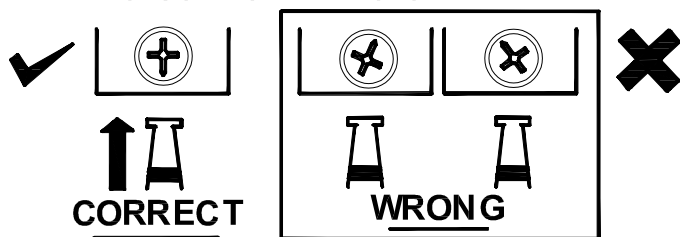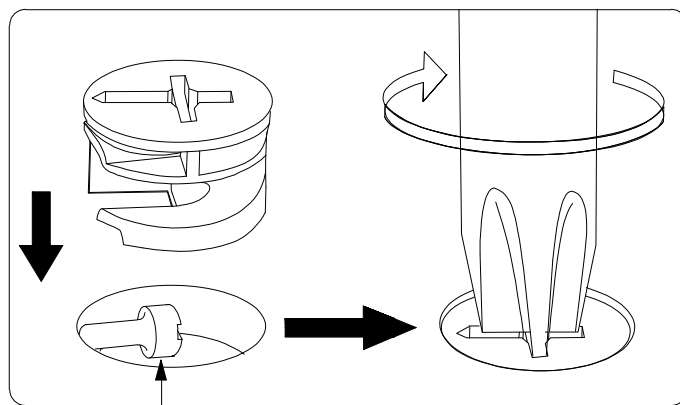



Lock head needs to be in centre

CAM-BOLT

Tighten until shoulder is flush
with panel. Do not overtighten
or undertighten (see example
below)

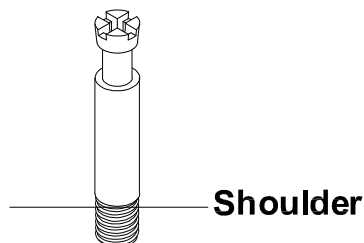










Shoulder

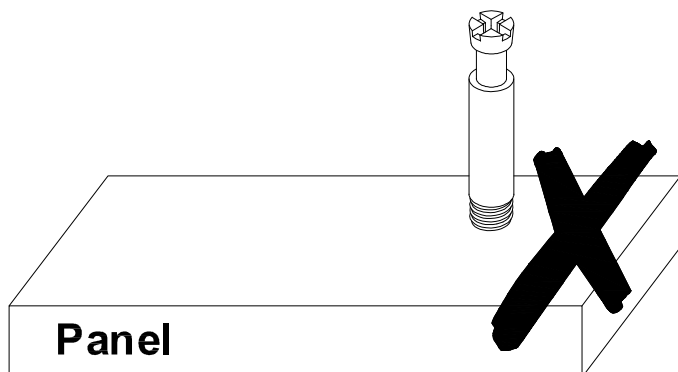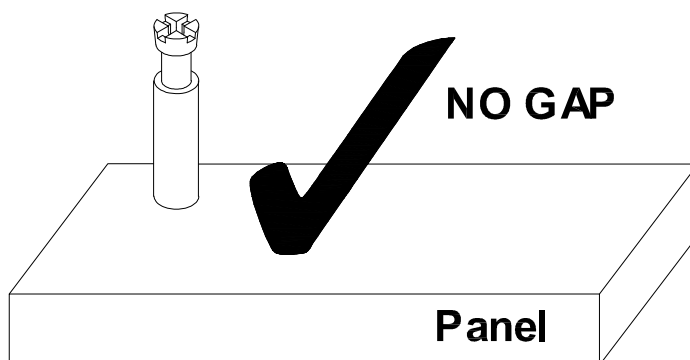



Assembly Instructions




Step 1

	
G X 9	H X 15

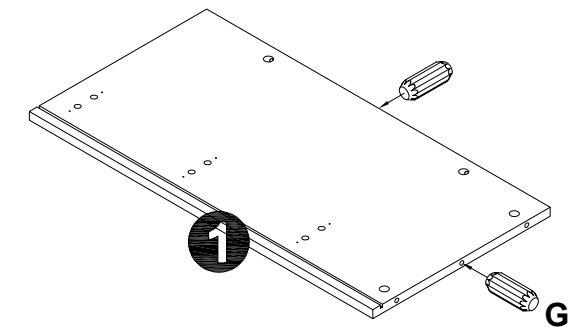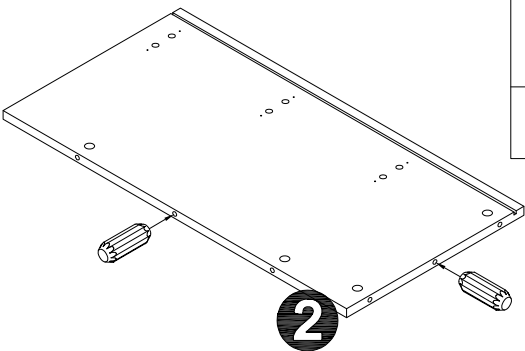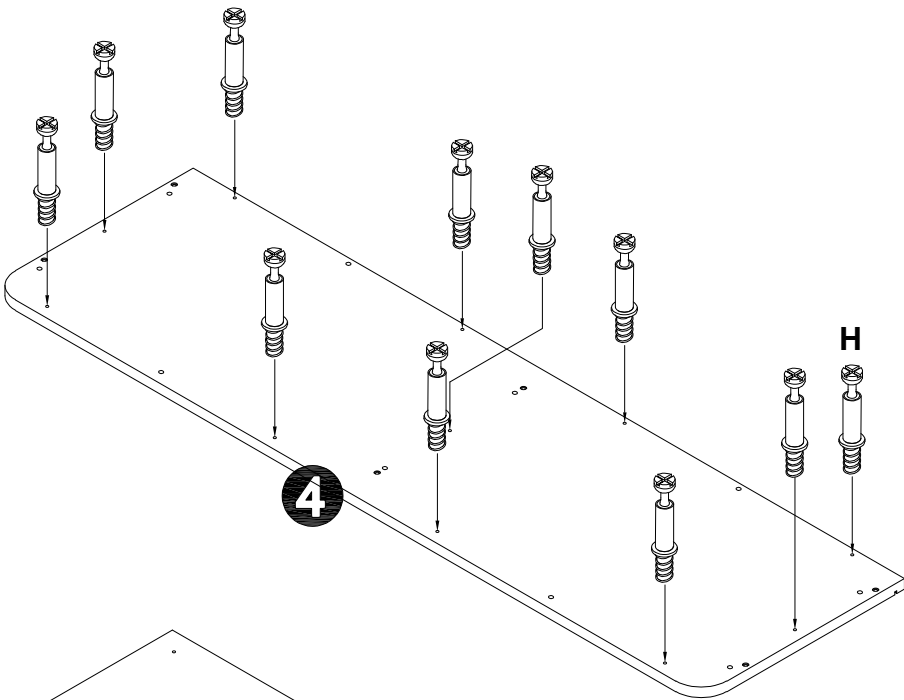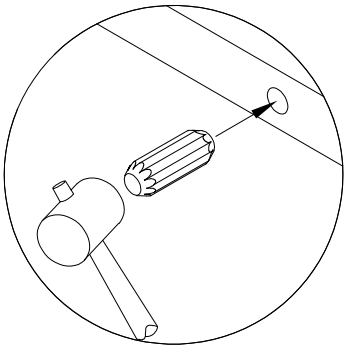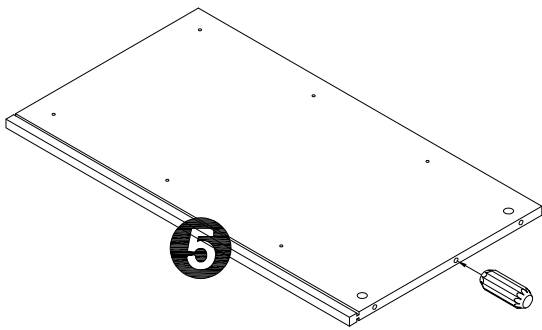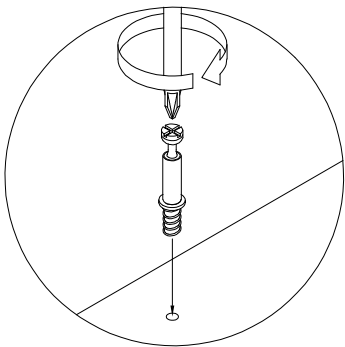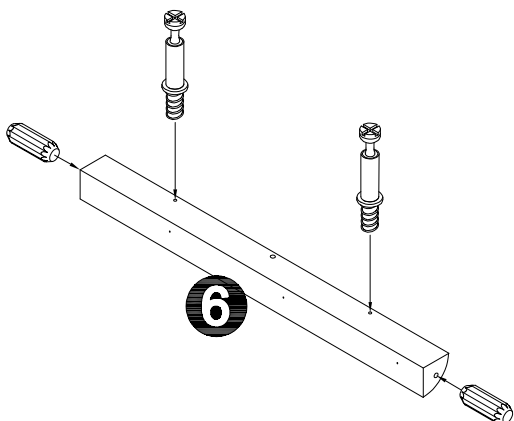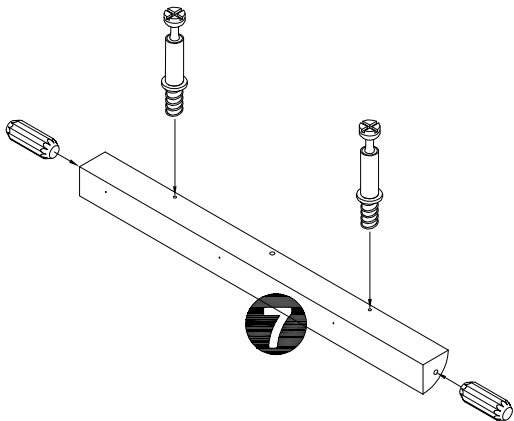


Step 2

	
G X 18	H X 8

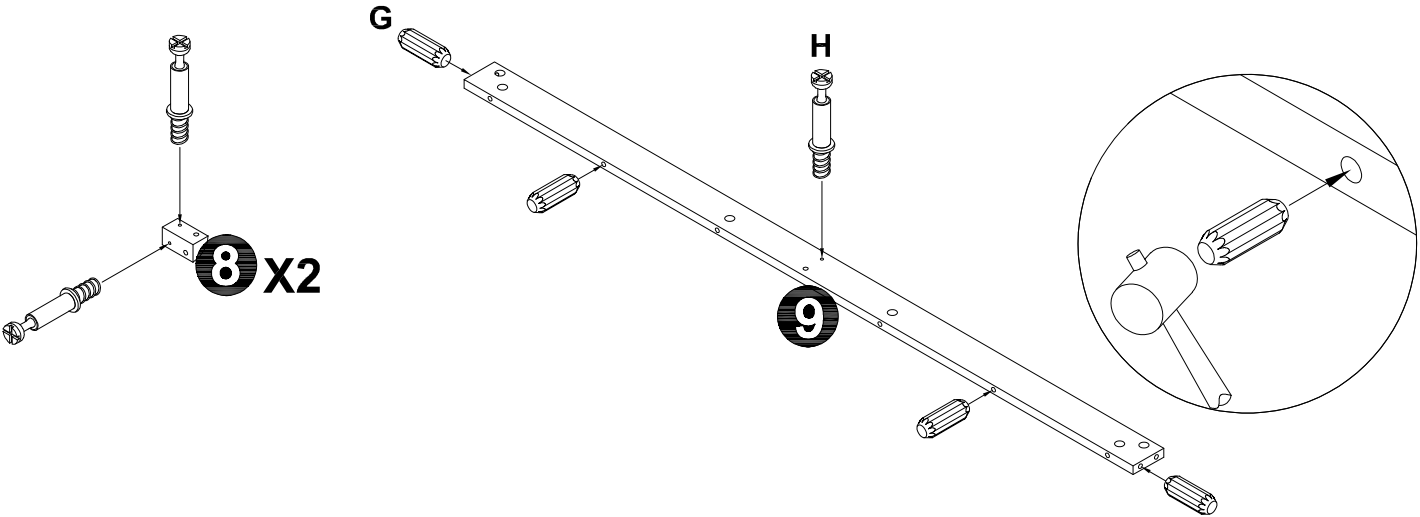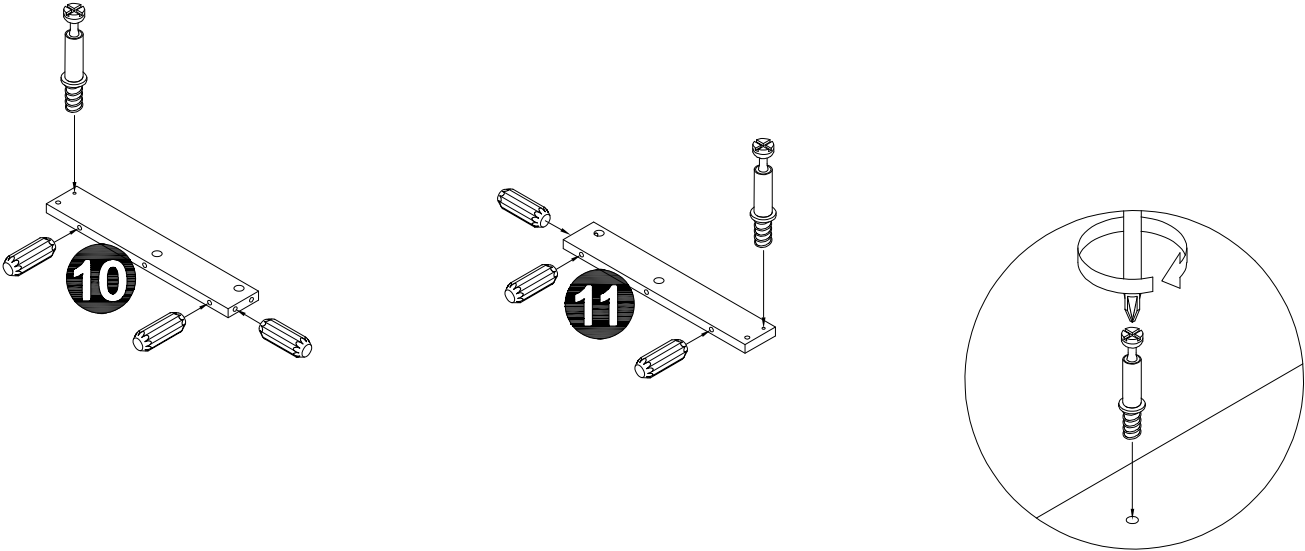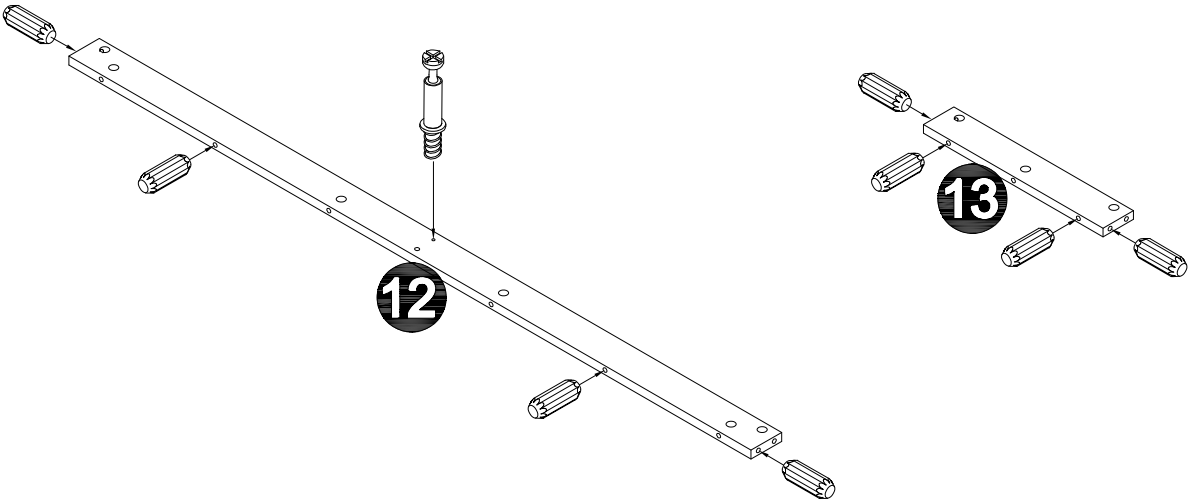


Step 3



C X 12


Q X 6

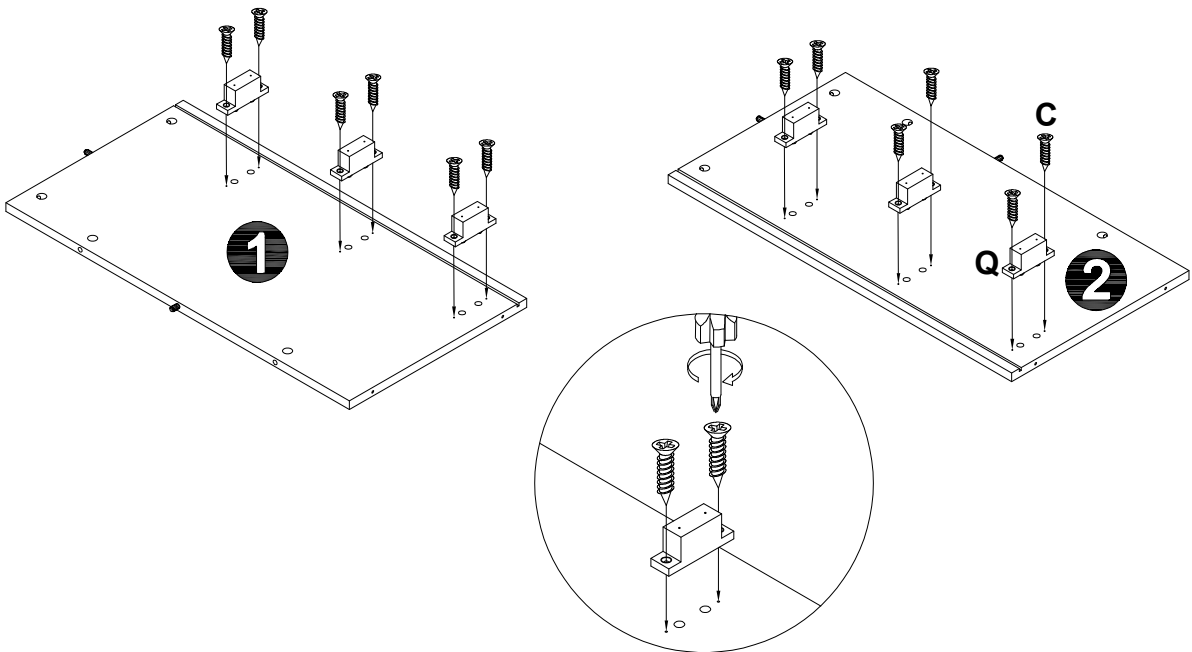

Step 4








J X 4





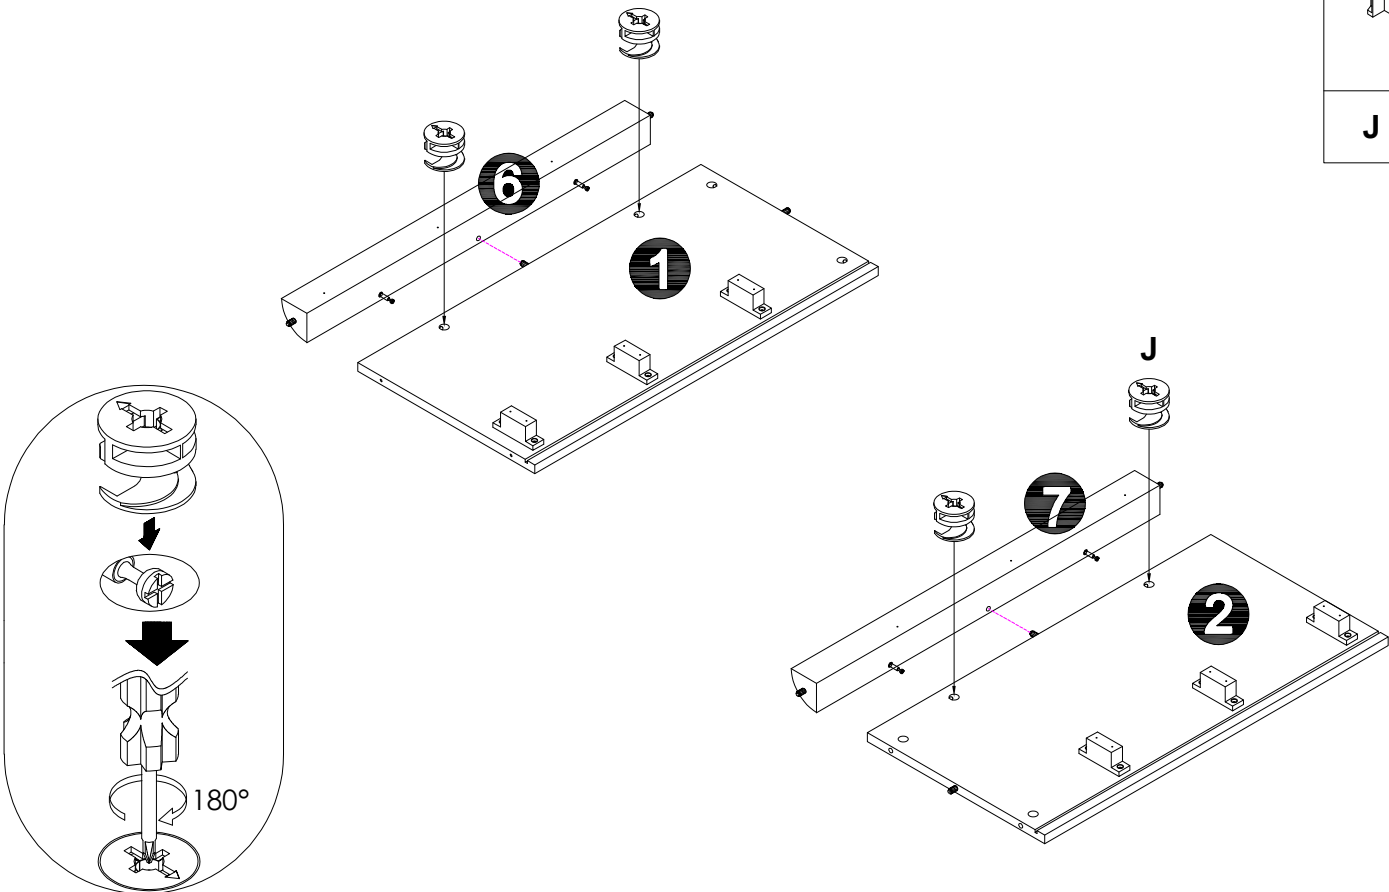


Step 5

		
B X 12	D X 12	M1 & M2 X 6SETS

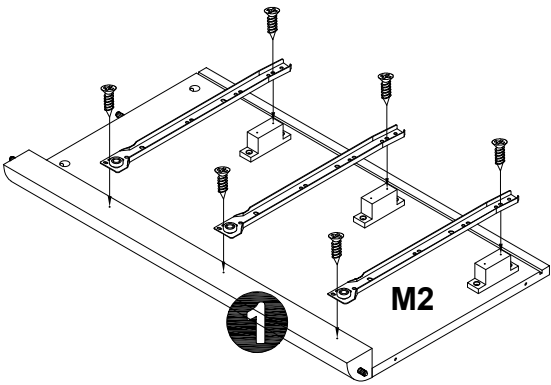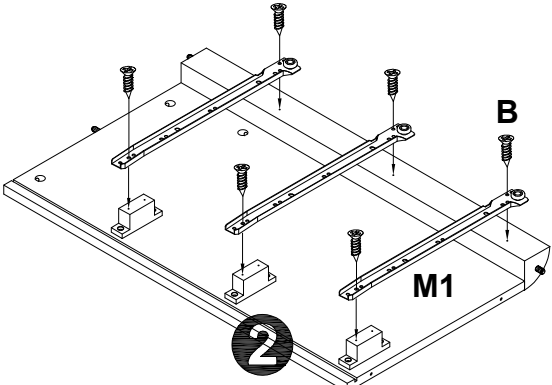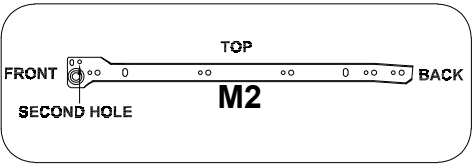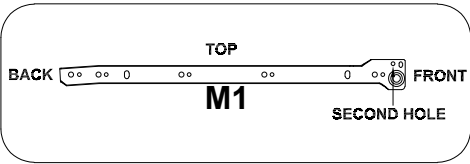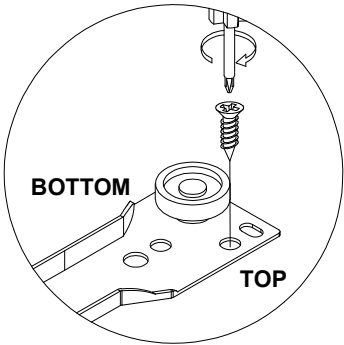


PLEASE ENSURE TO FIX THE SCREWS AS PER POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS.

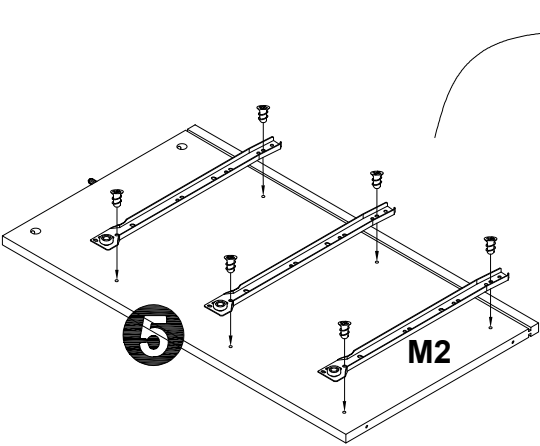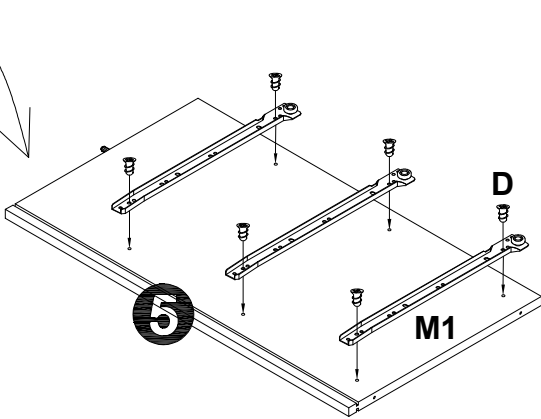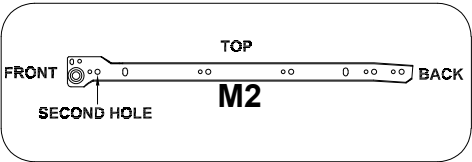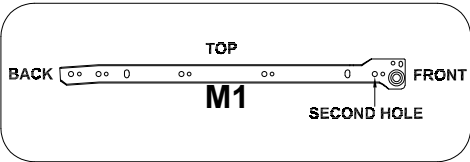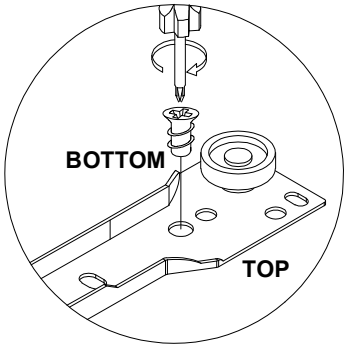

PLEASE ENSURE TO FIX THE SCREWS AS PER POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS.

Step 6



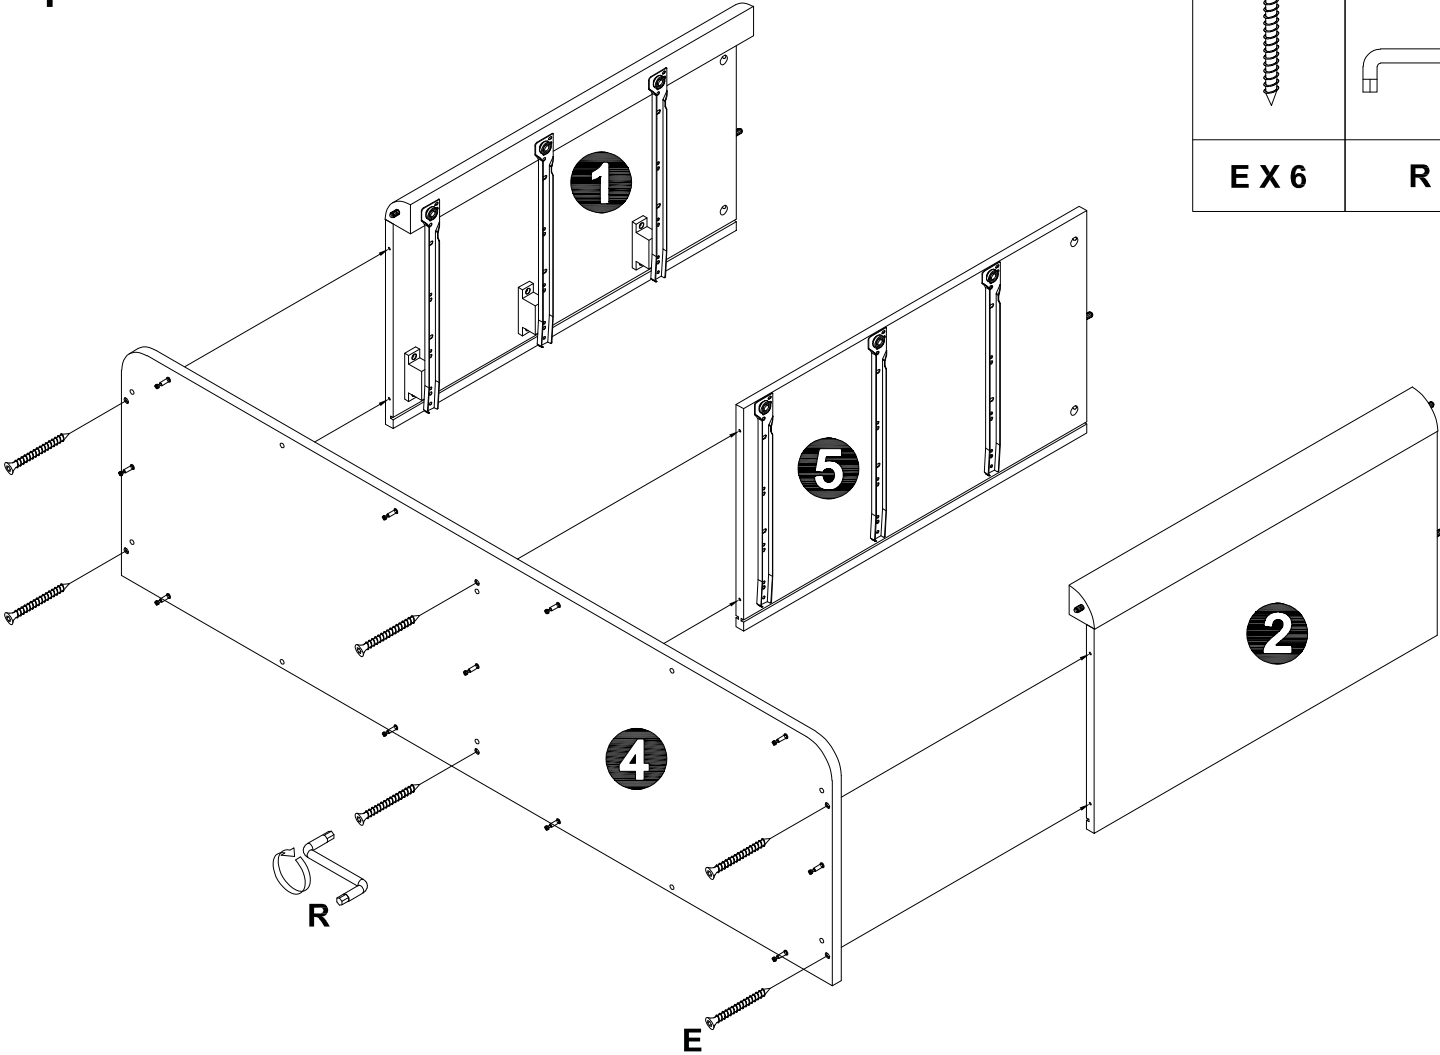


EX 6



R

Step 7

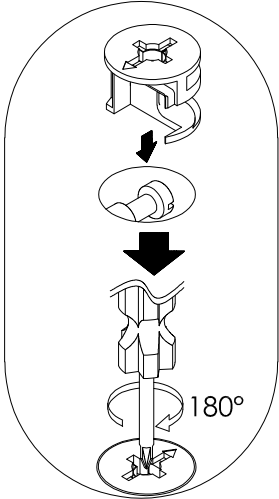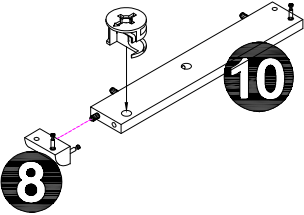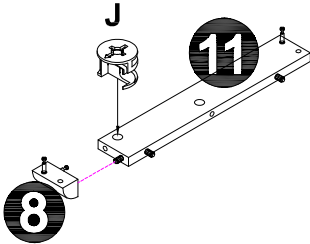


J X 2

Step 8




J X 2

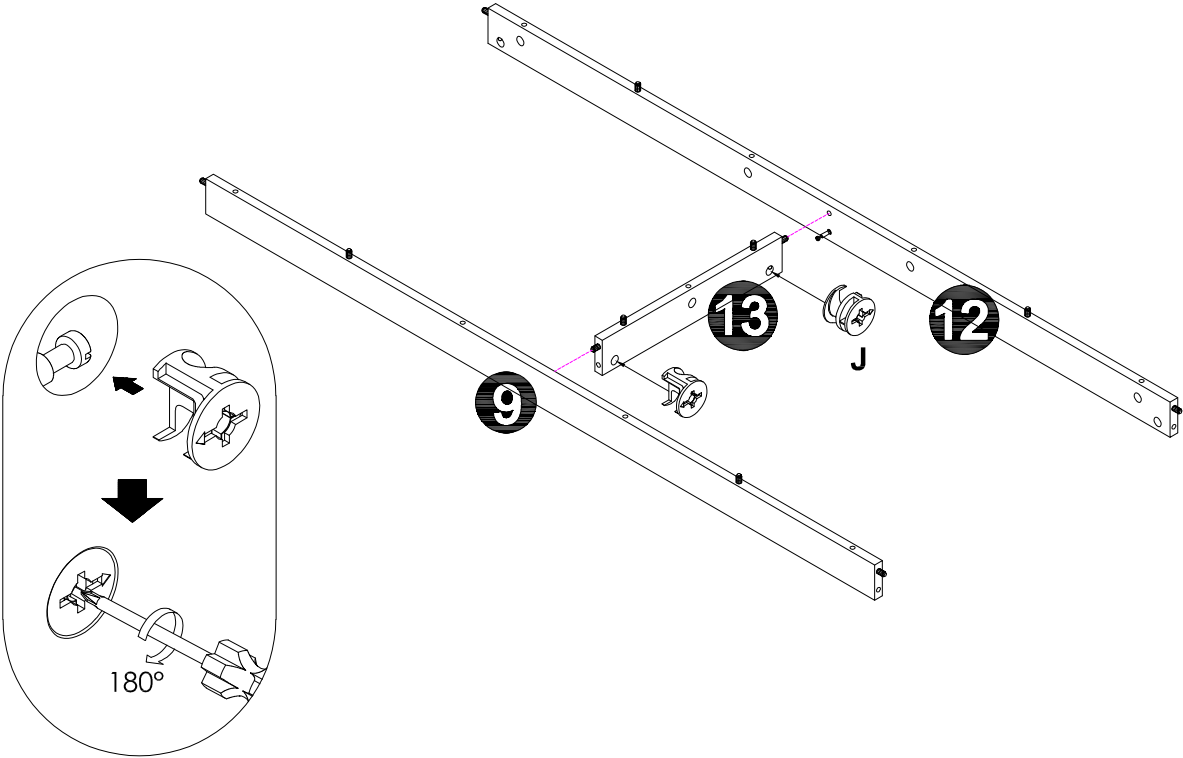

Step 9





J X 4

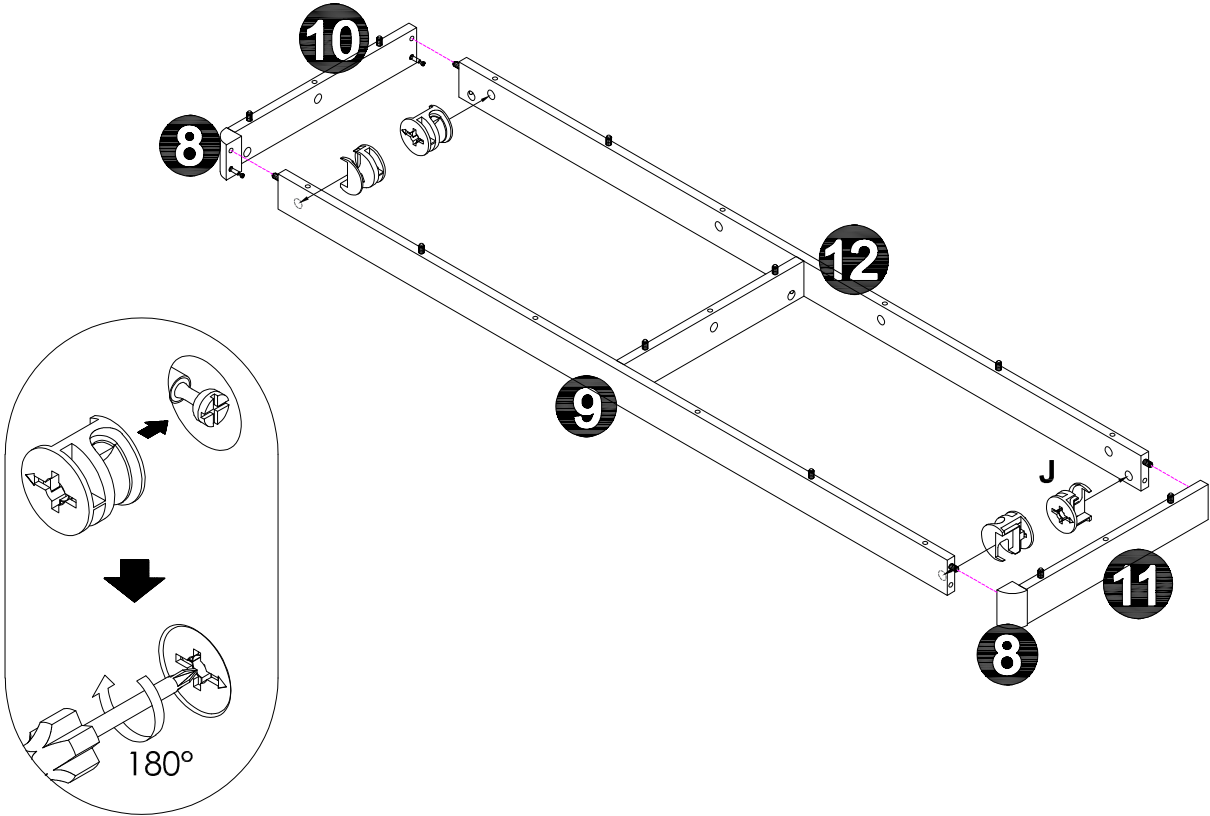


Step 10





J X 11

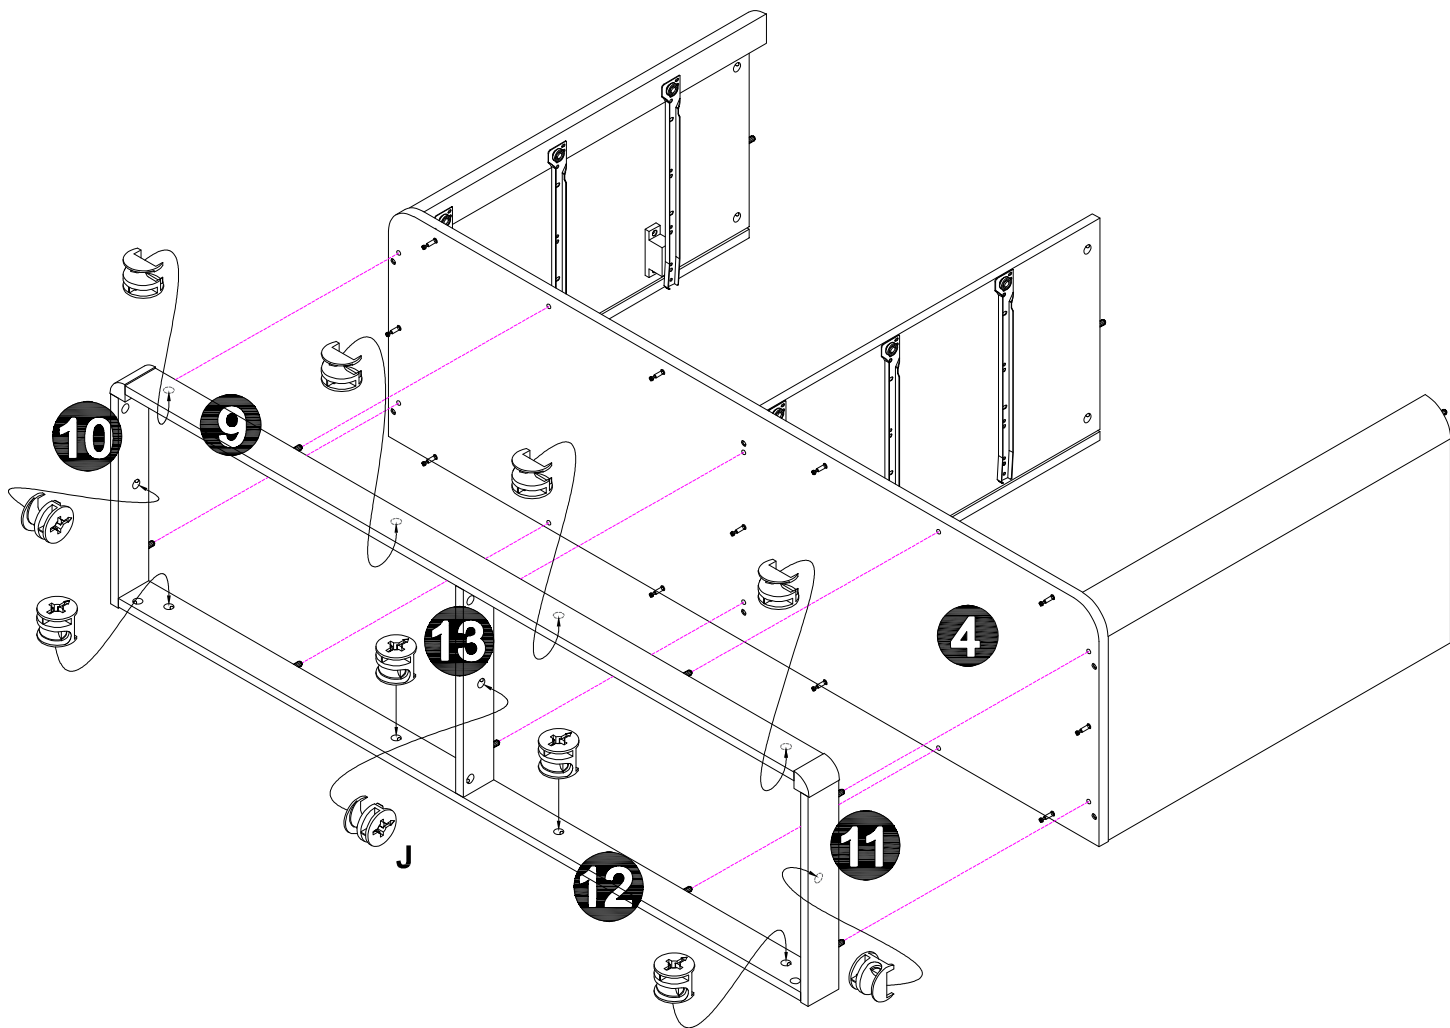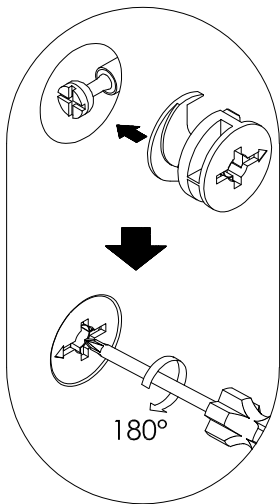


Step 11





P X 8

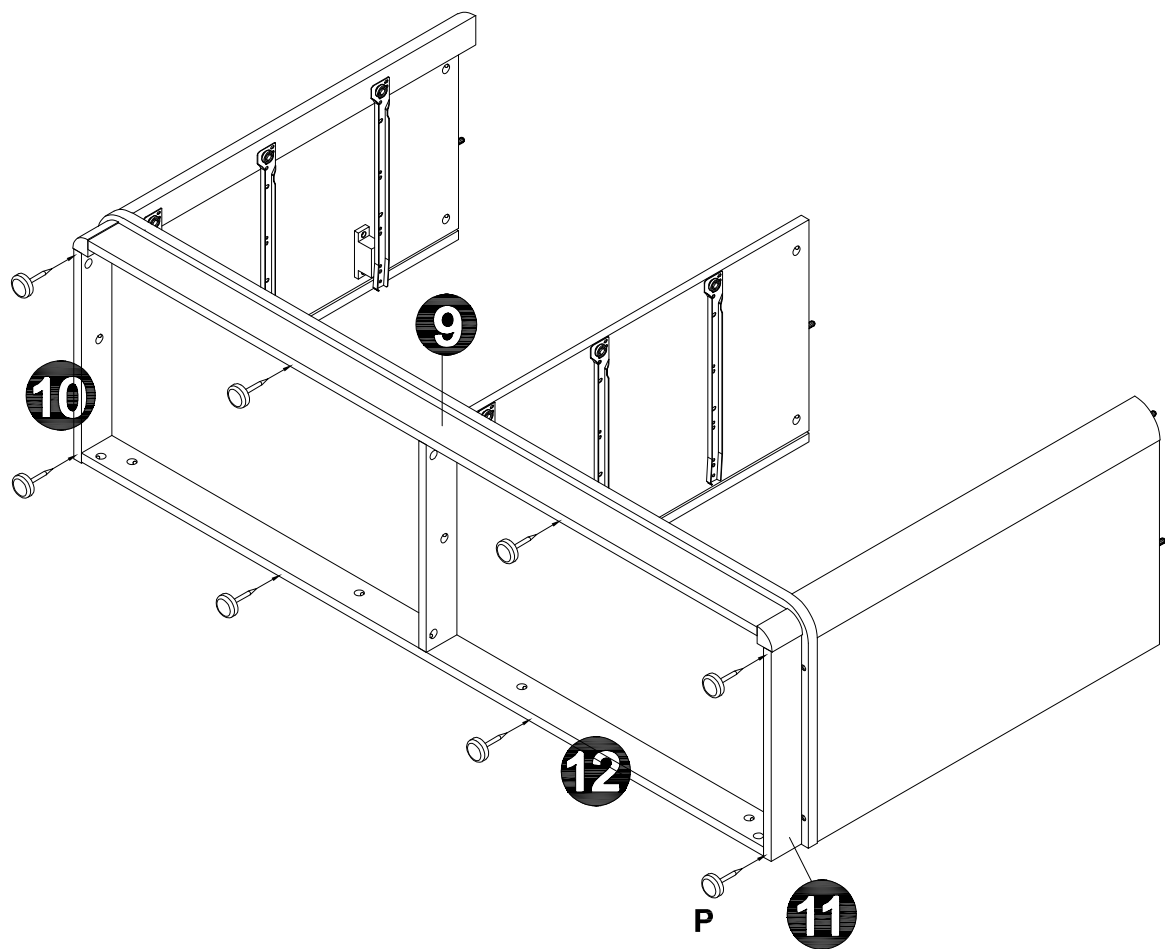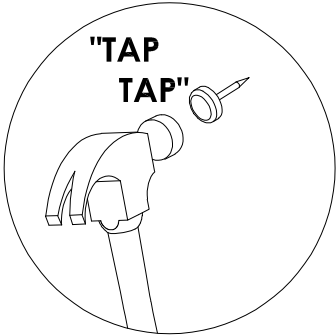

Step 12

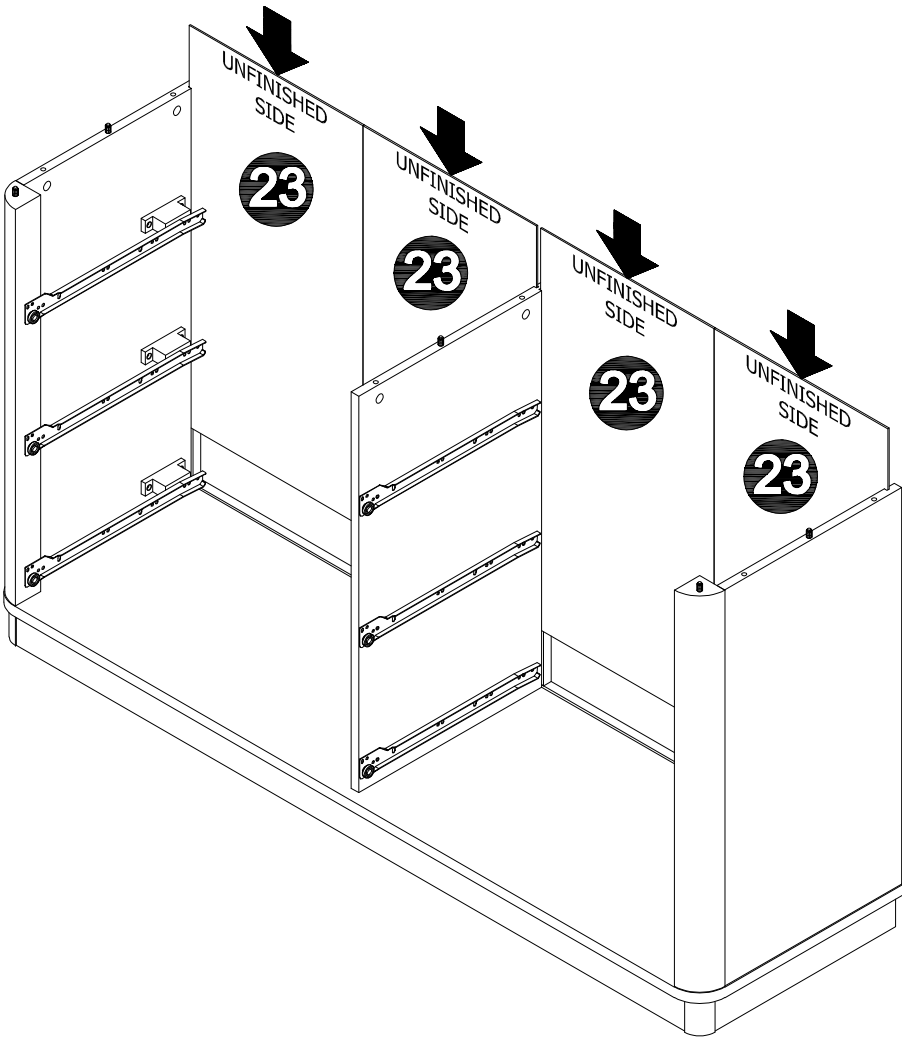



Step 13

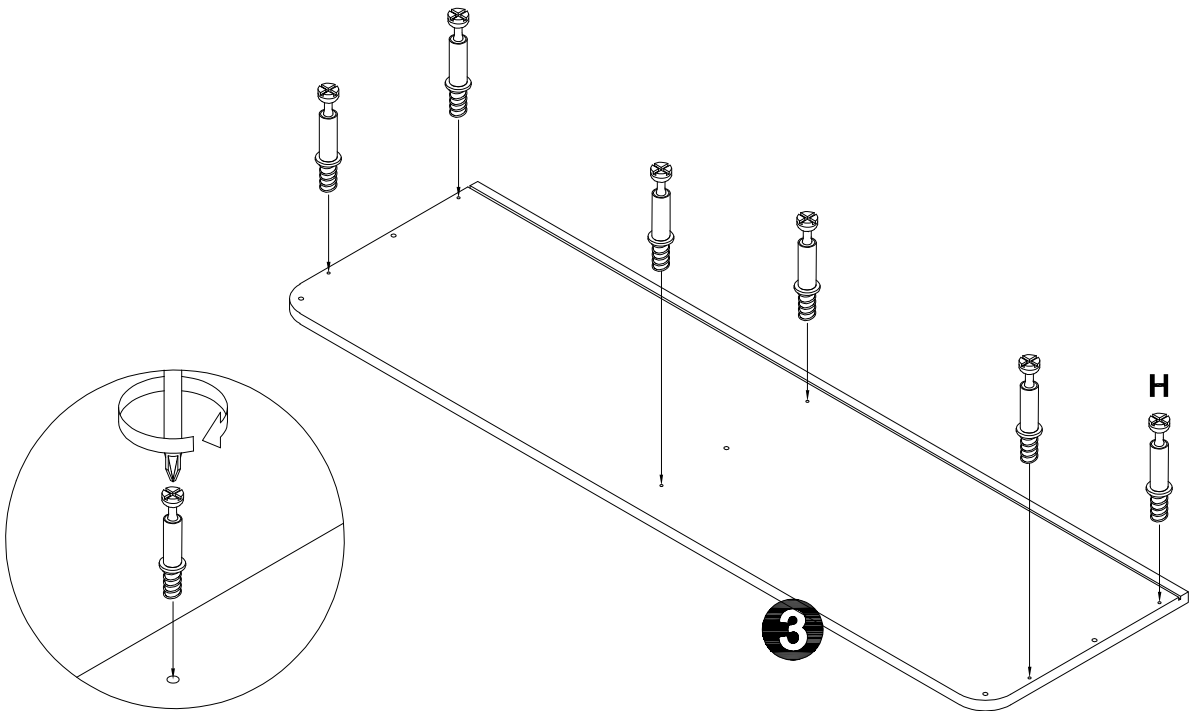


Step 14



J X 6

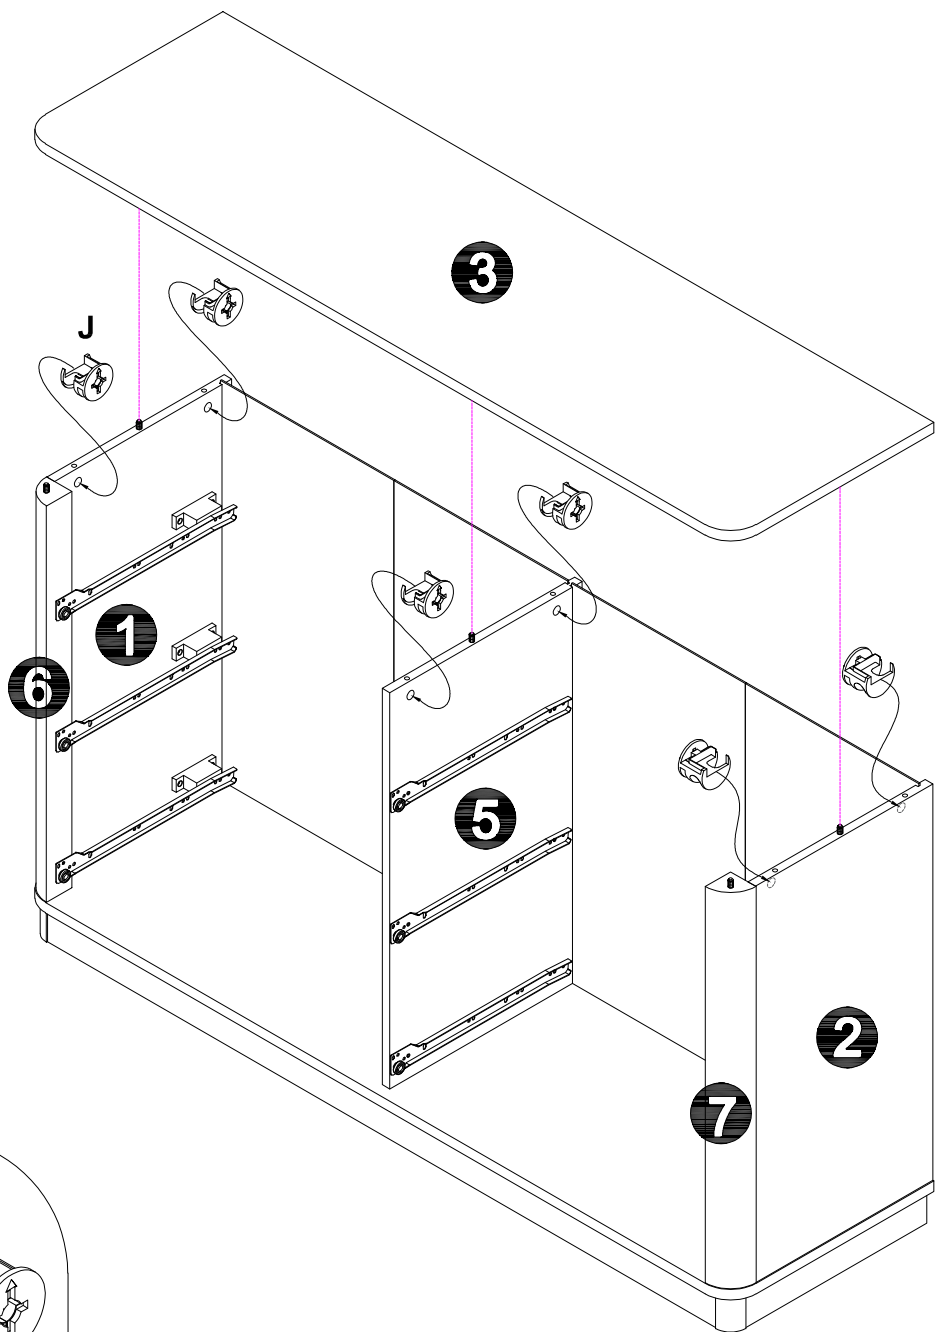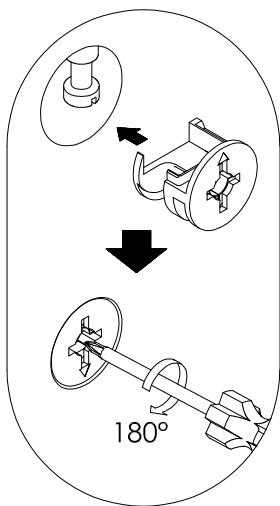



Step 15

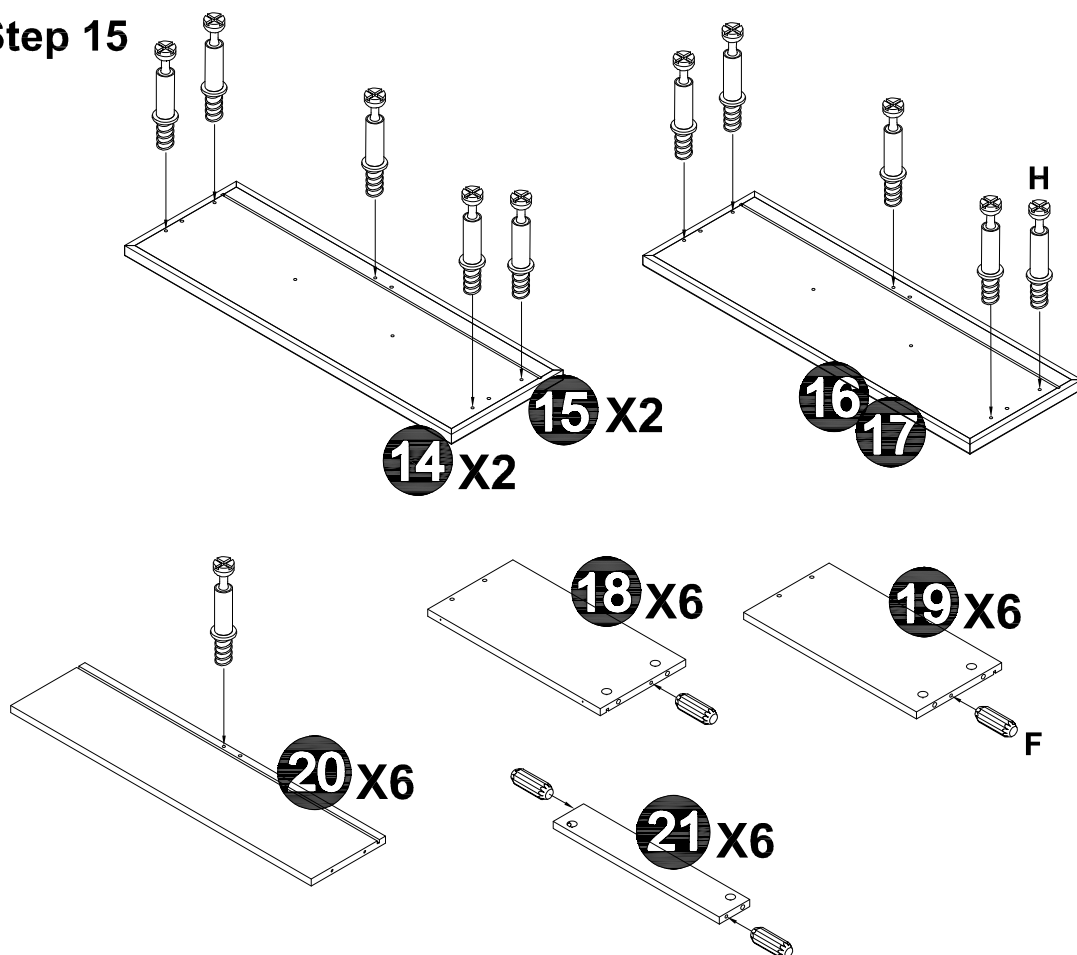


F X 24




H X 36

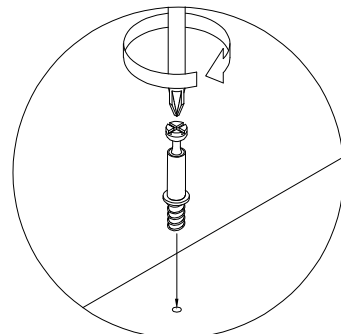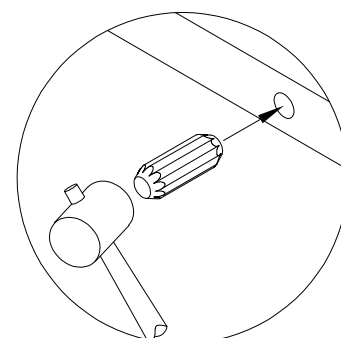



Step 16

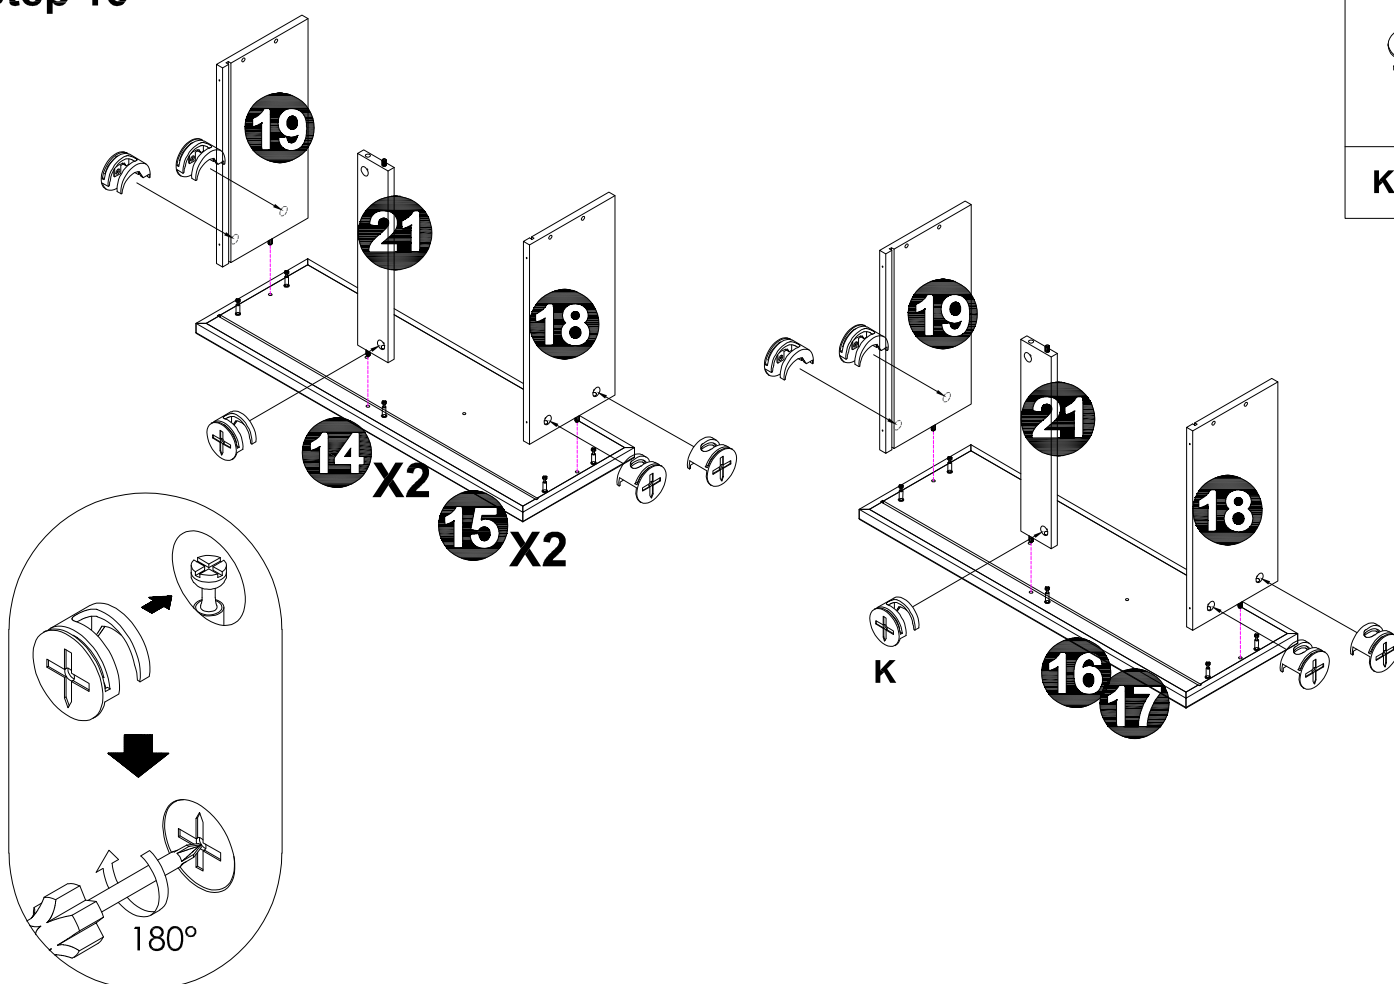


K X 30


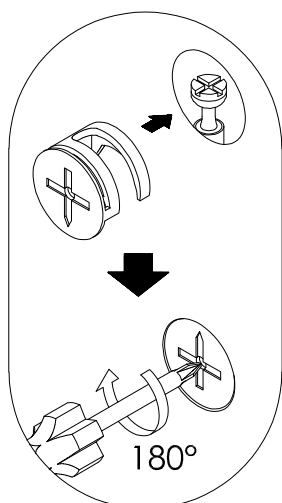



Step 17

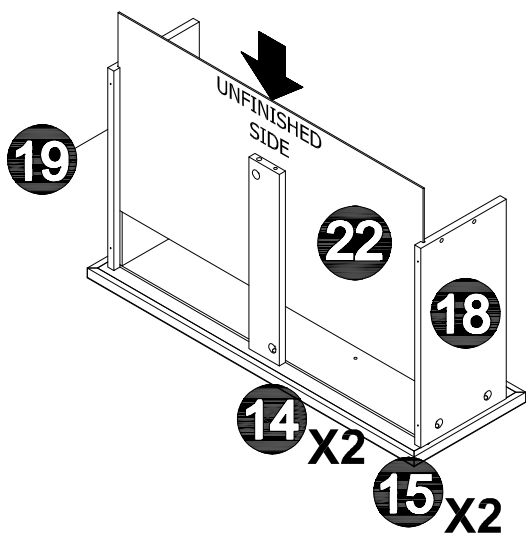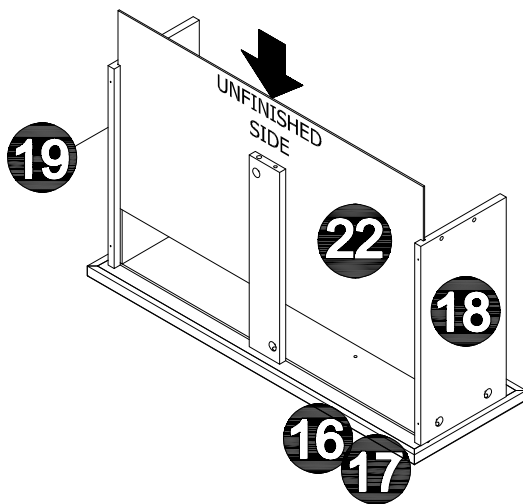


Step 18

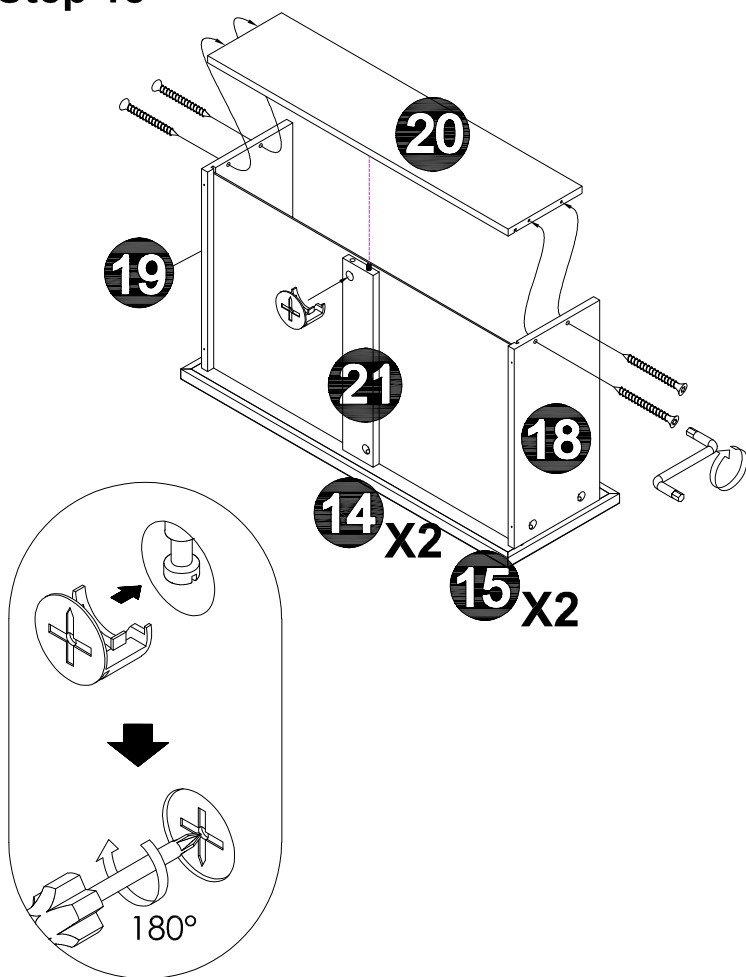



		
E X 24	K X 6	R

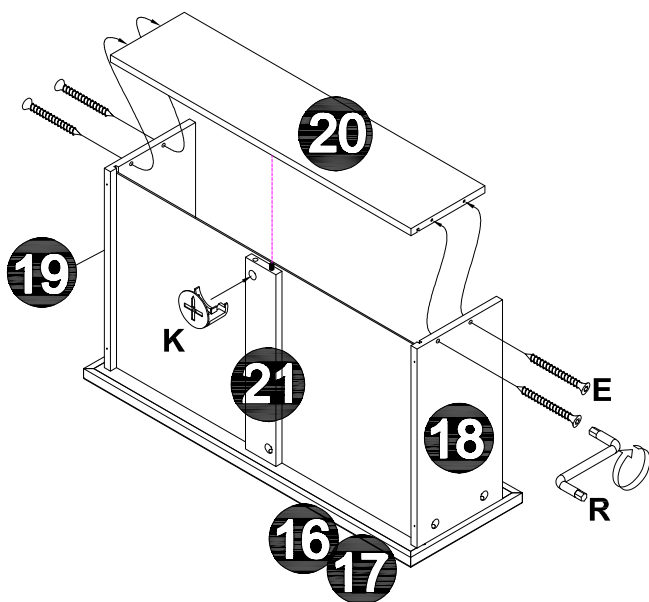


Step 19







LX
6SETS

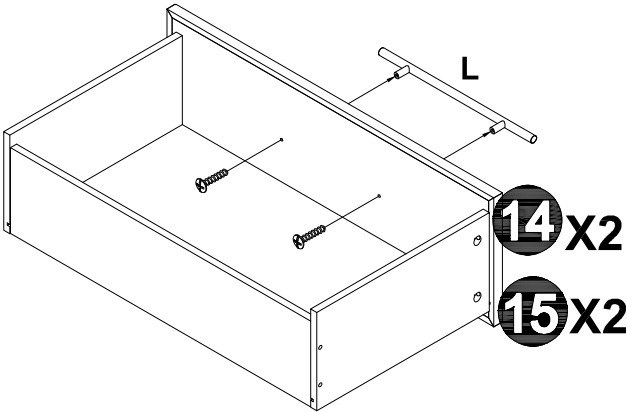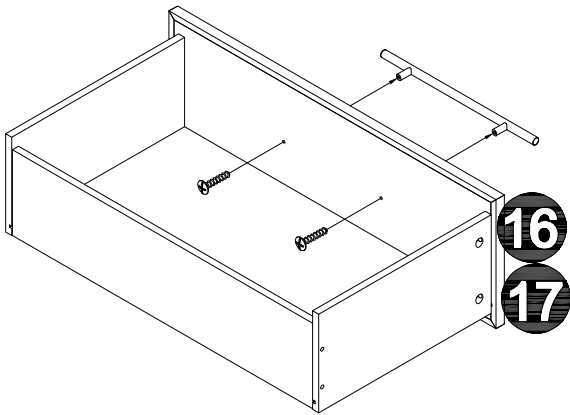


Step 20

	
A X 24	N1 & N2 X 6SETS

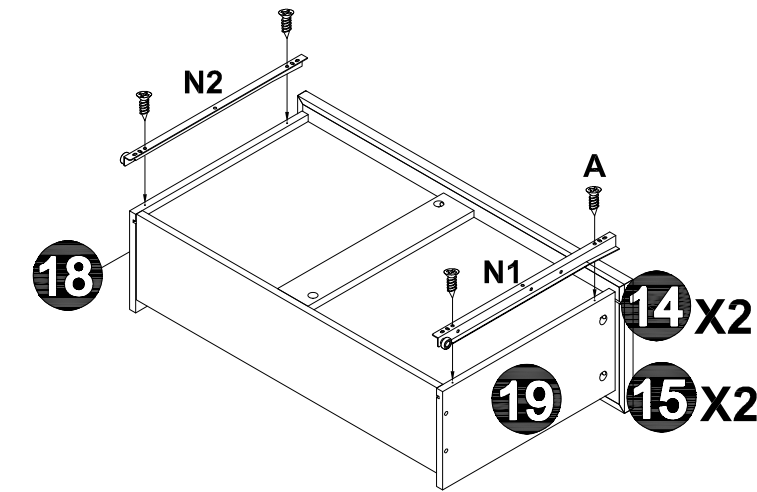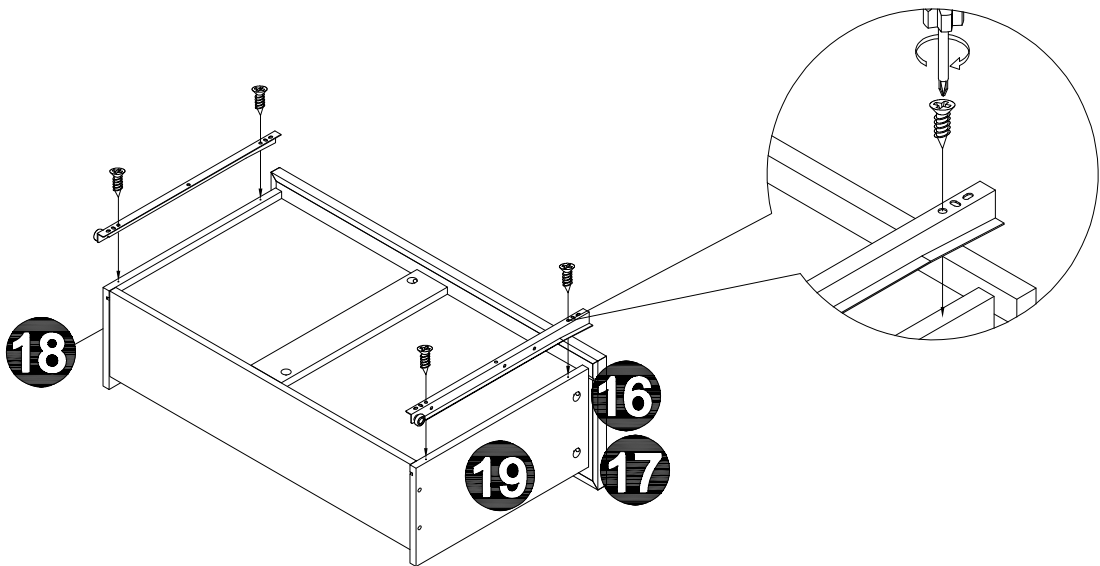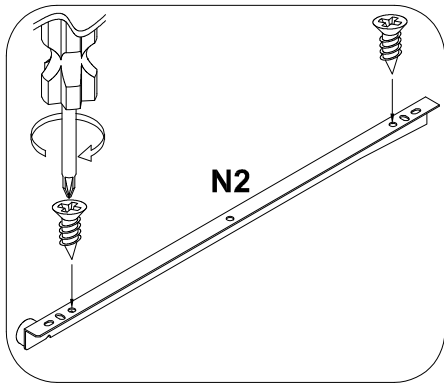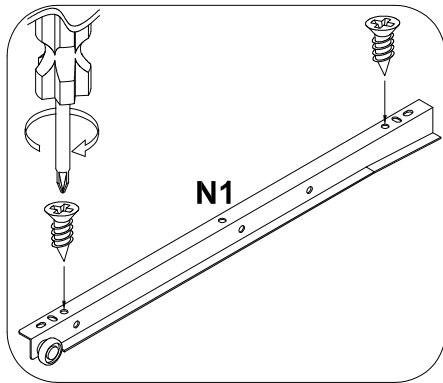

Step 21


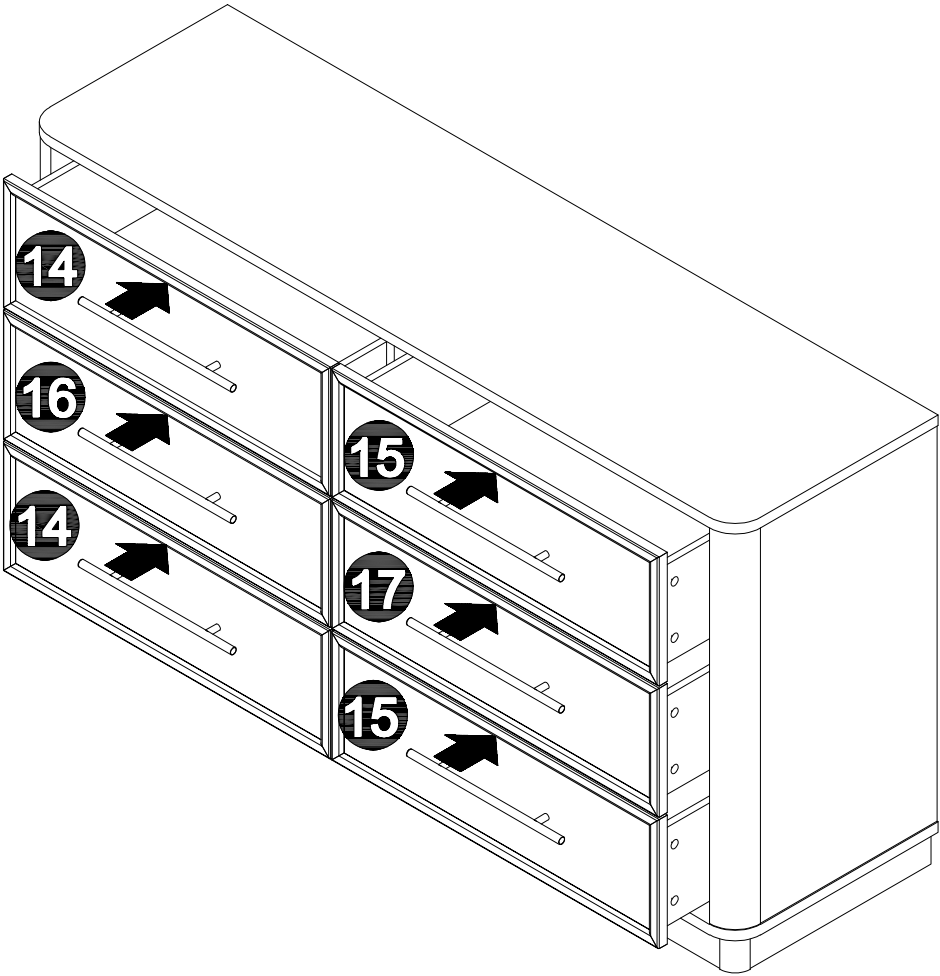


Step 22



B X 12

S X 12

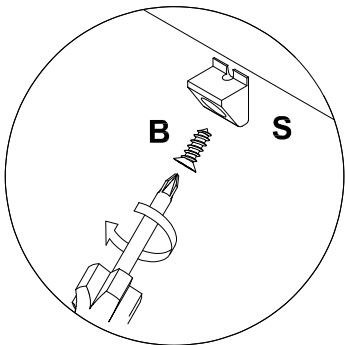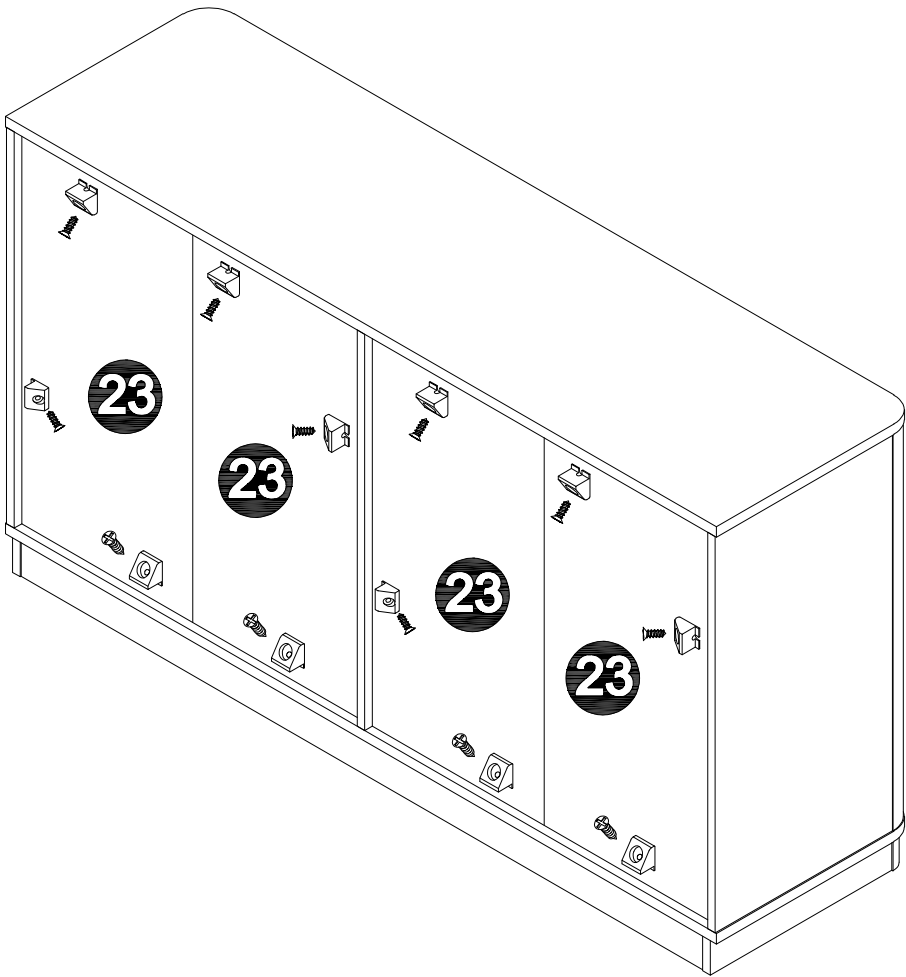

Step 23



TX
2SETS


TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE


This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


WALL


A x 2


B x 1


C x 1


D x 1

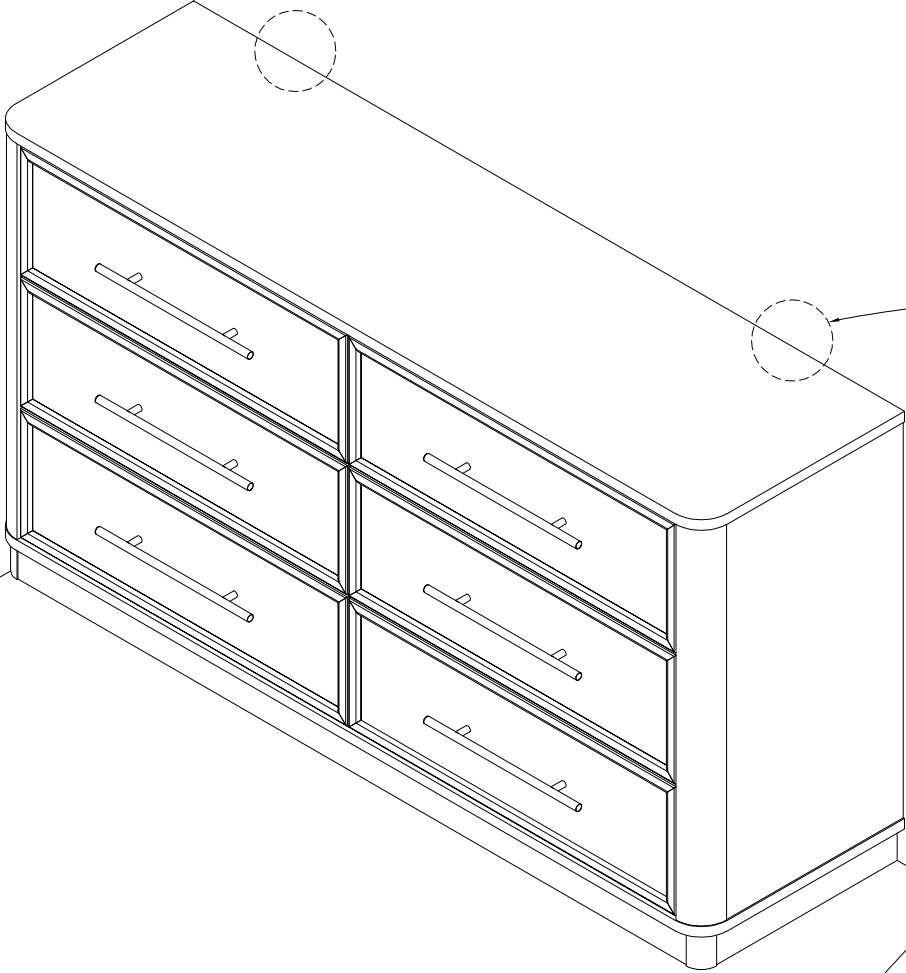

T

