



ASSEMBLY INSTRUCTION

RATTAN SOFA SET

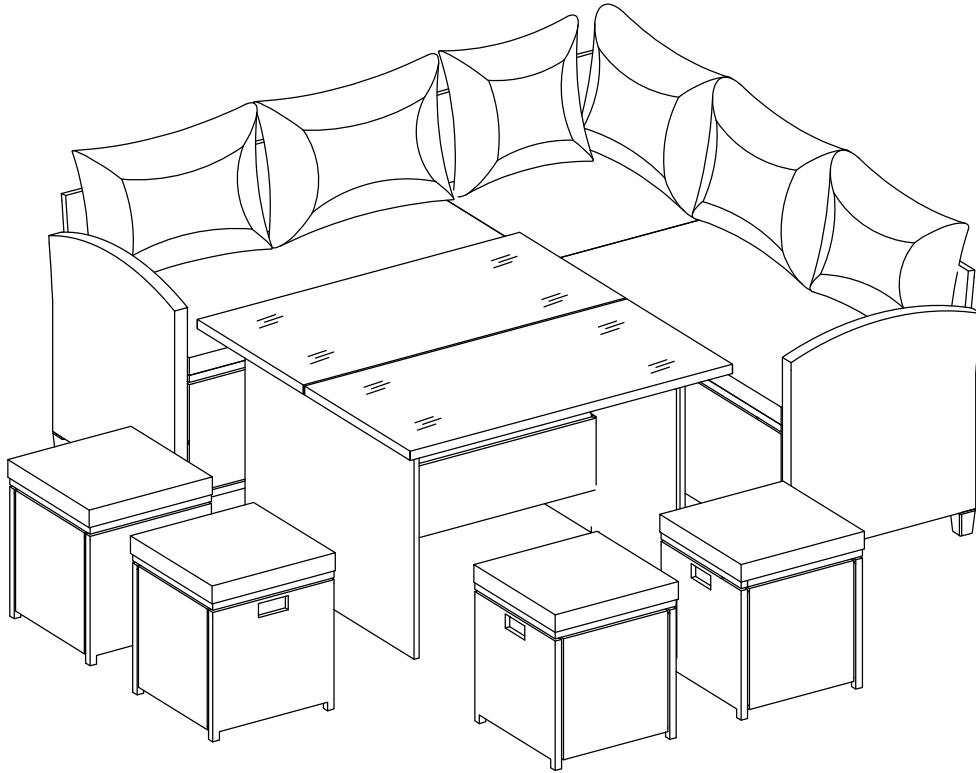


Notice:

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.**
- 2. Place the item on a flat ground to adjust and make sure it remains stable.**
- 3. Tighten up all screws with tools gradually.**
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with**
In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

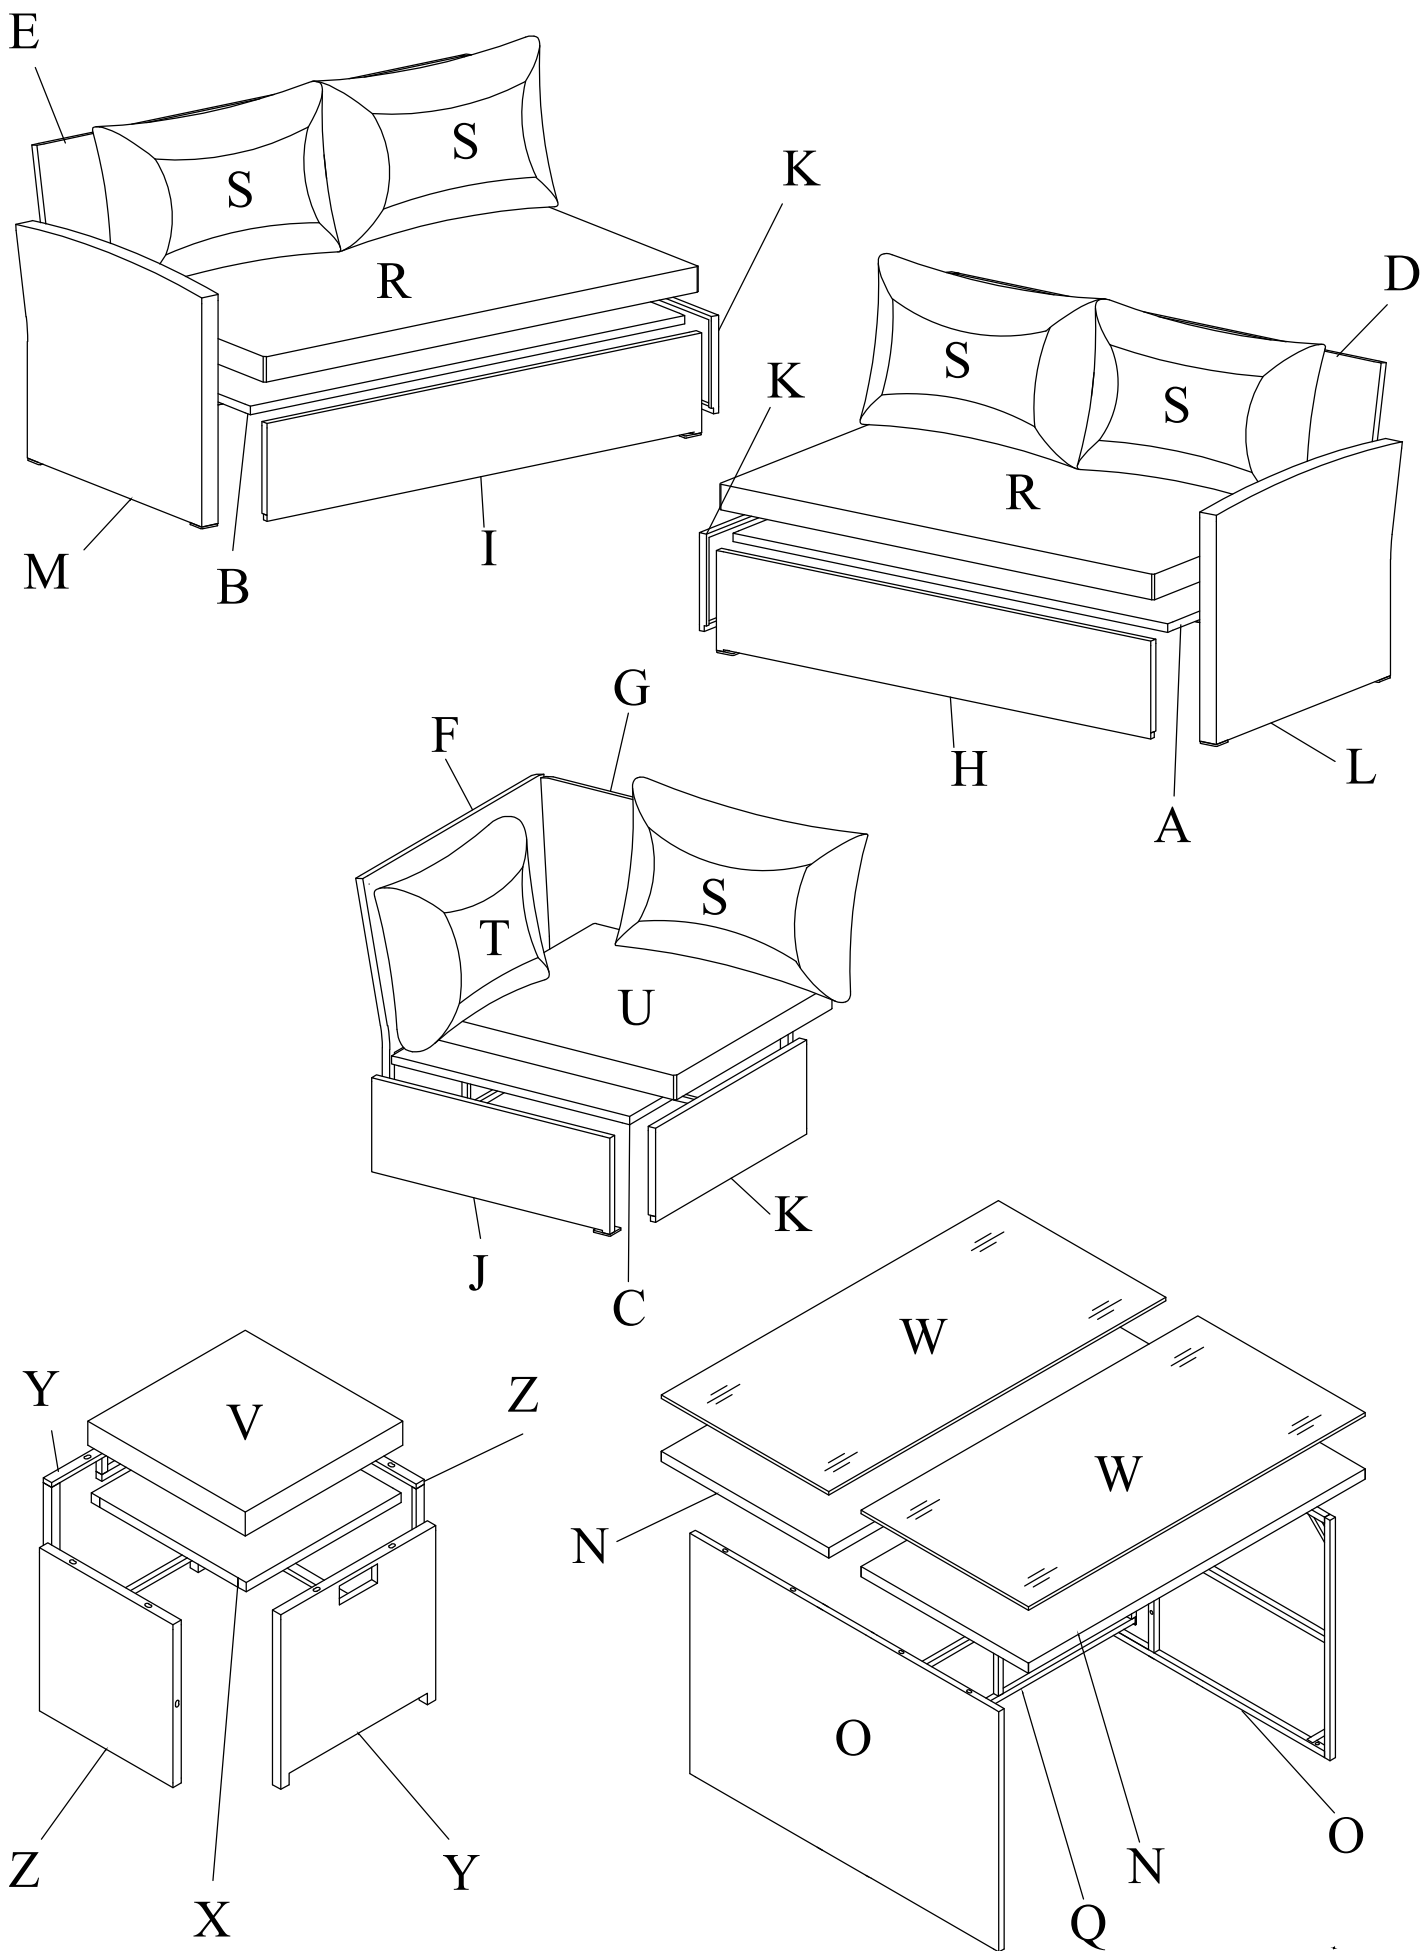


Part List & Hardware

A

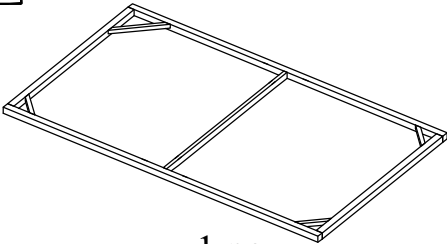


1 pc

B

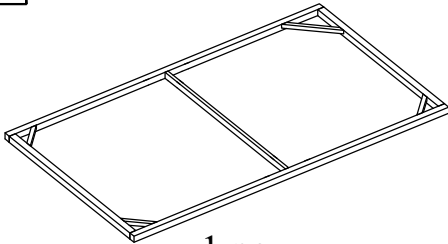


1 pc

C

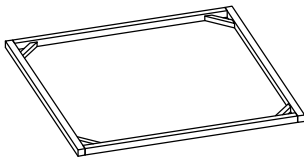


1 pc

D

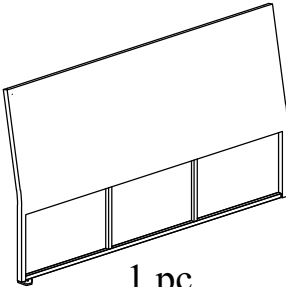


1 pc

E

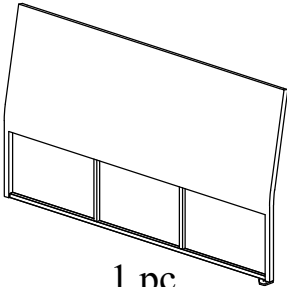


1 pc

F

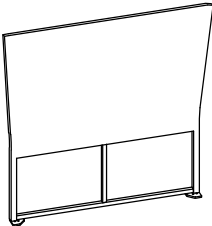


1 pc

G

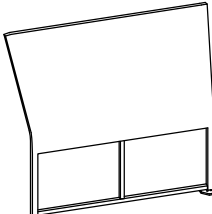


1 pc

H

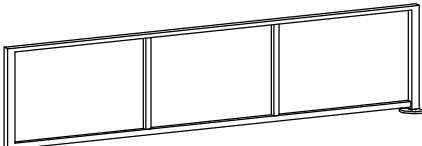


1 pc

I

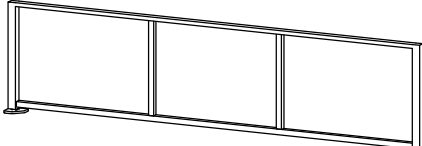


1 pc

J

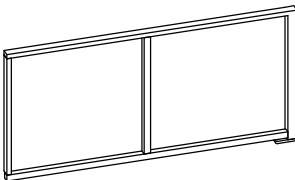


1 pc

K

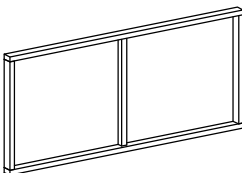


3 pcs

L

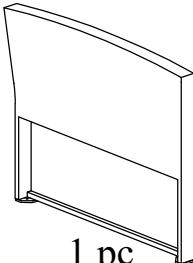


1 pc

M

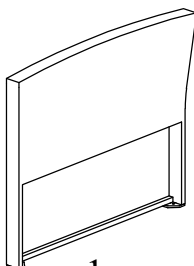


1 pc

N

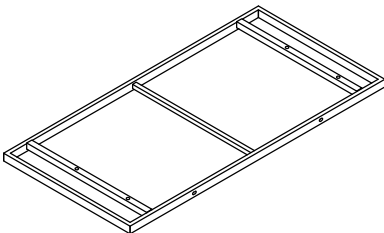


2 pcs

O

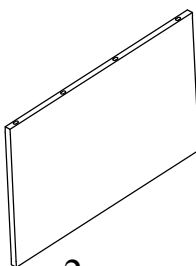


2 pcs

Q

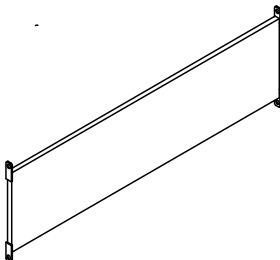


1 pc

R

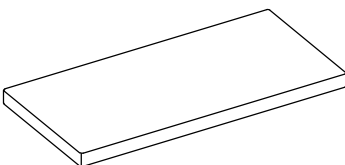




















2 pcs


S

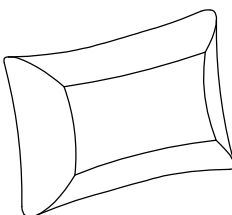


5 pcs

Part List & Hardware

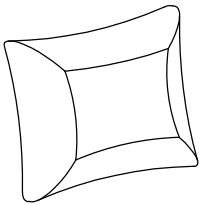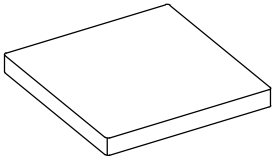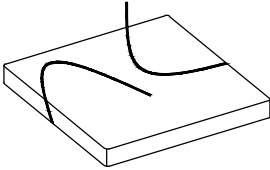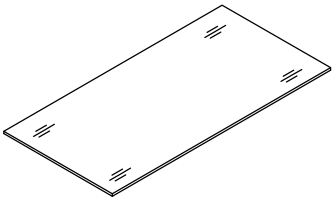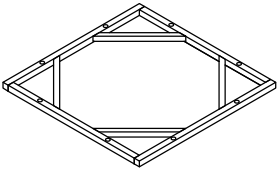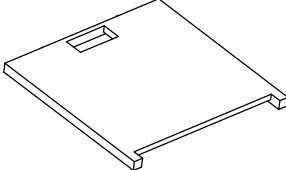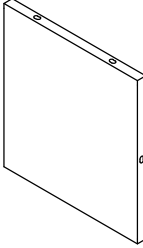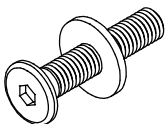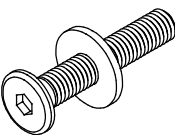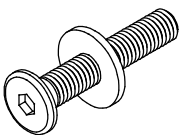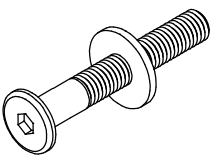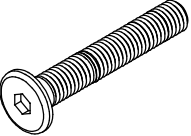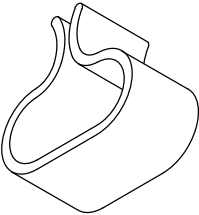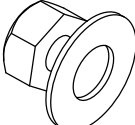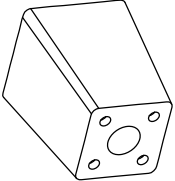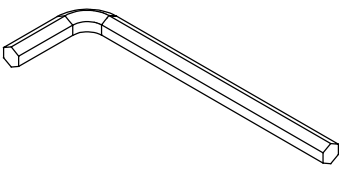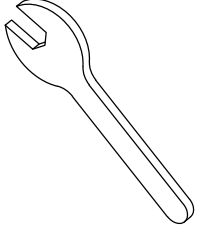
T  1 pc	U  1 pc	V  4 pcs	W  2 pcs
X  4 pcs	Y  8 pcs	Z  8 pcs	
1  Bolt M6 x 15mm (4pcs + extra 1pc)	2  Bolt M6x30 mm (73pcs+extra 3pcs)	3  Bolt M6x35mm (24pcs+extra 2pcs)	4  Bolt M6x40 mm (4pcs+extra 1pc)
5  Bolt M6x60 mm (4 pcs+extra 1pc)	6  Bolt M6x55 mm (12pcs+extra 2pcs)	7  Connector plastic (4 pcs)	8  Nut M6(2pcs + extra 1pc)
9  Plastic feet 1 (12pcs)	10  Plastic feet 2 (6pcs)	11  Allen key M4 (2pcs)	12  Spanner (1pc)

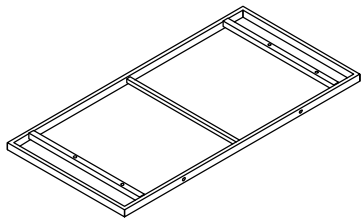


N*2

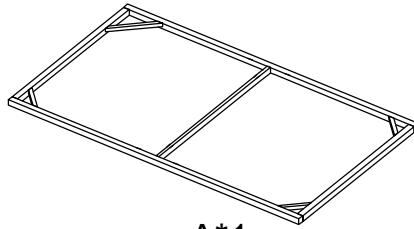


A*1

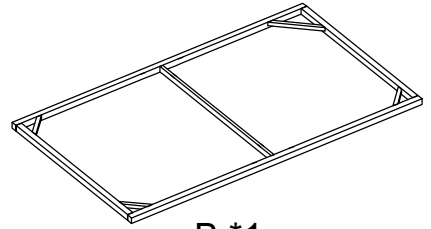


B*1

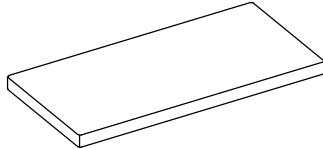

R*2

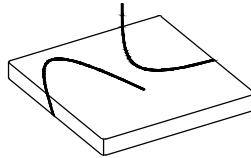


V*4

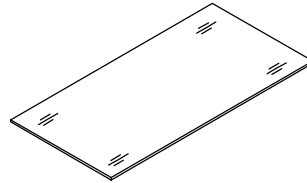


W*2




HARDWARE

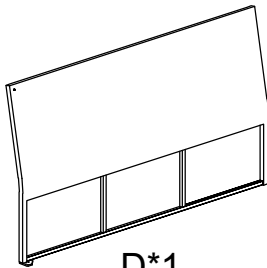


D*1

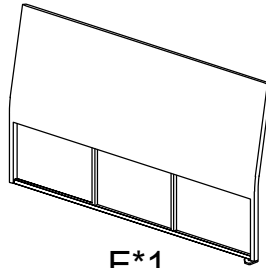


E*1

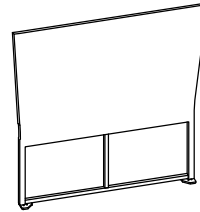


F*1

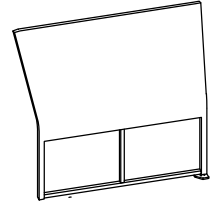


G*1




Z*8




H*1




I*1

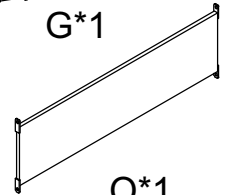


Q*1

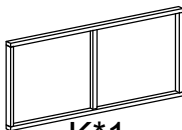


K*1

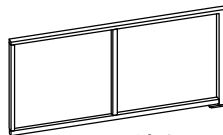


J*1

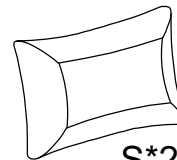


S*2

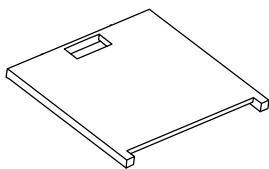


Y*8

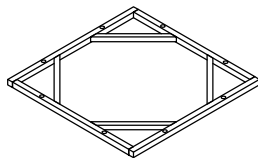


X*4

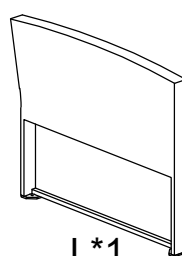


L*1

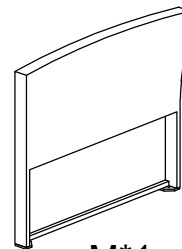


M*1

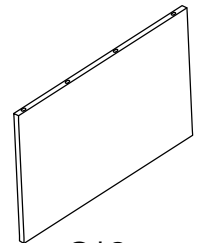


O*2

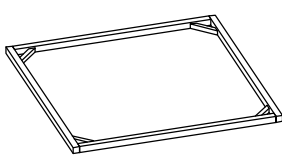


C*1

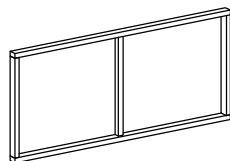


K*2

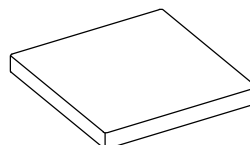

U*1

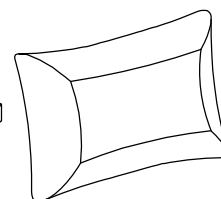


S*3

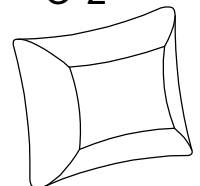


T*1

STEP 1 (Bench Left Assembly)

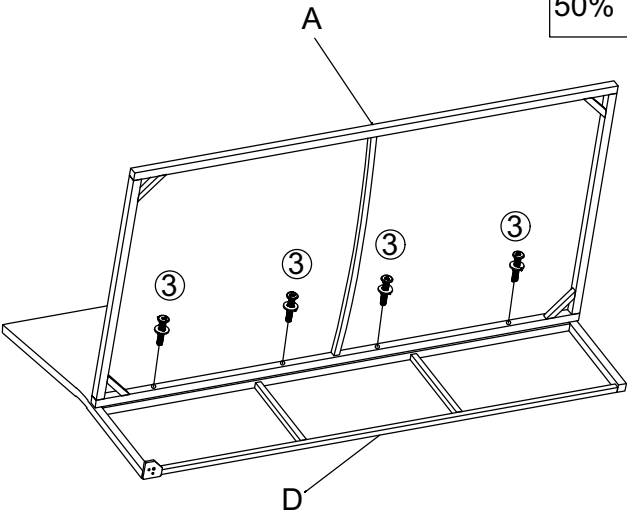


③*4

STEP 2

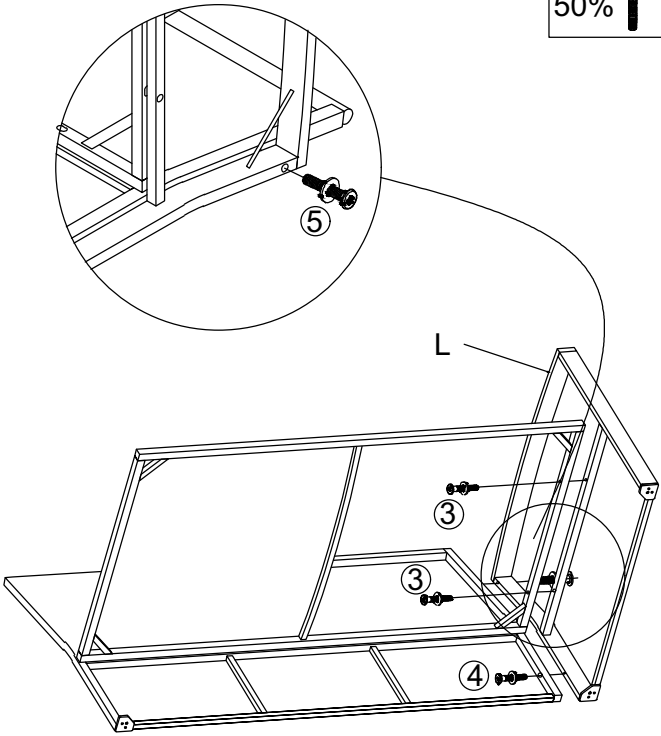


③*2 ④*1 ⑤*1

STEP 3

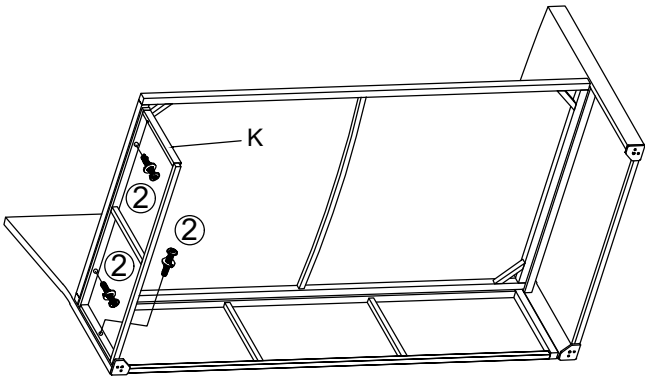


②*3

STEP 4

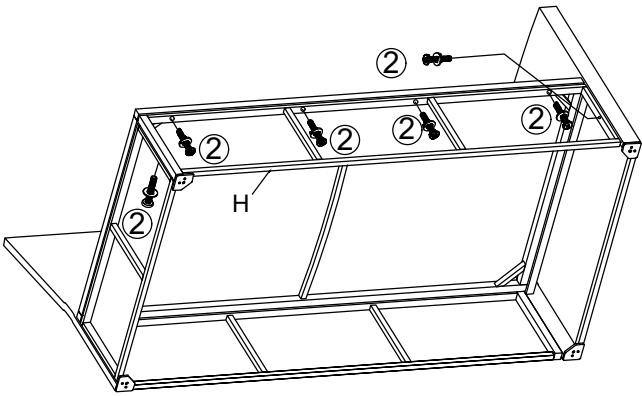



②*6

STEP 5

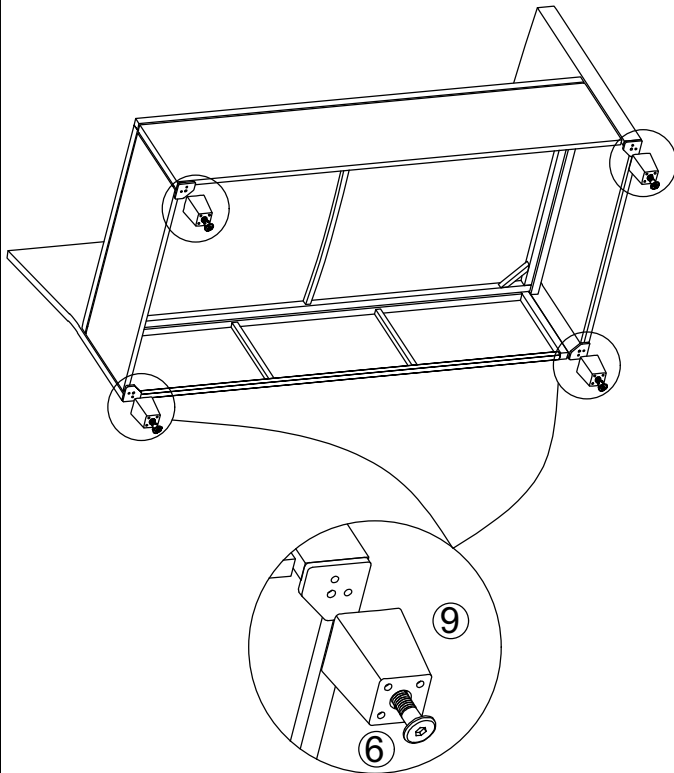



⑥*4 ⑨*4

STEP 6 (Bench Right Assembly)

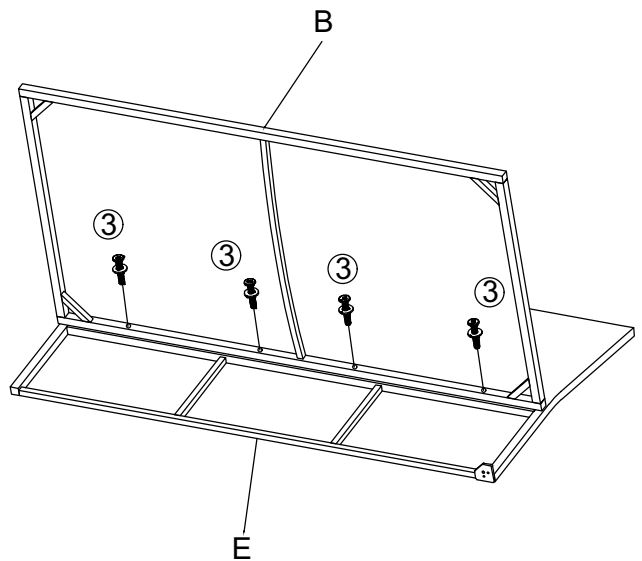



③*4

STEP 7

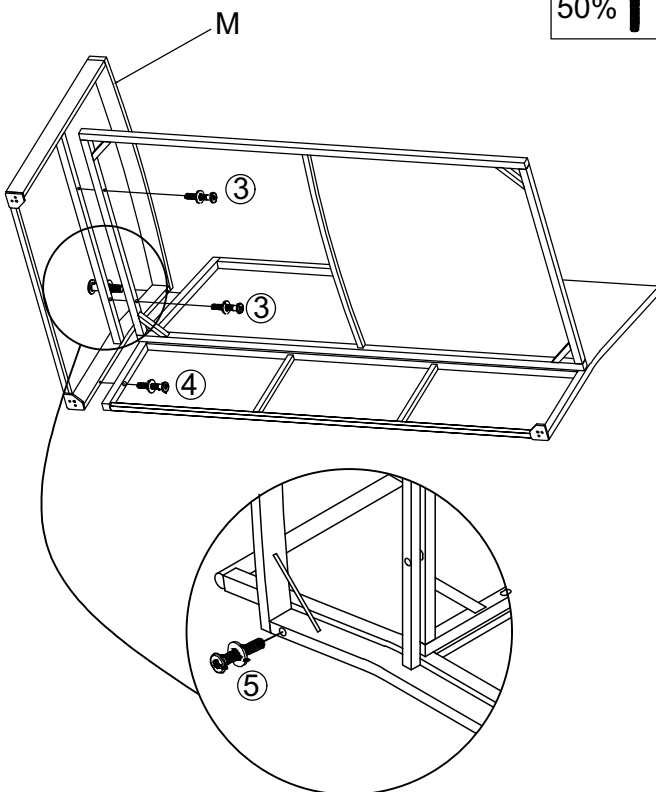

③*2 ④*1 ⑤*1

STEP 8

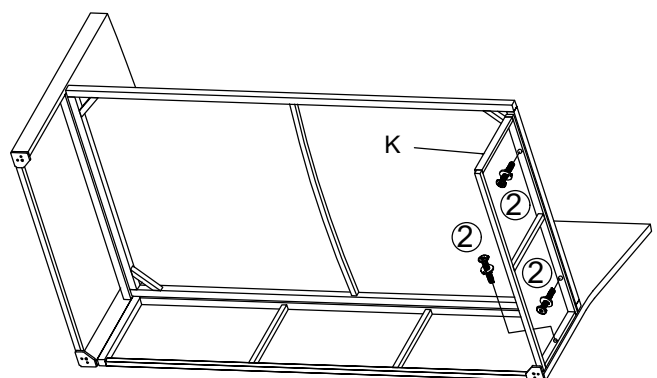


②*3

STEP 9



50%

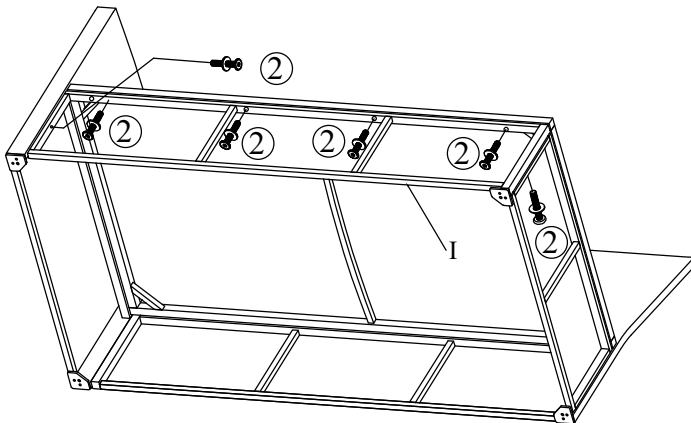


②*6

STEP 10




100%

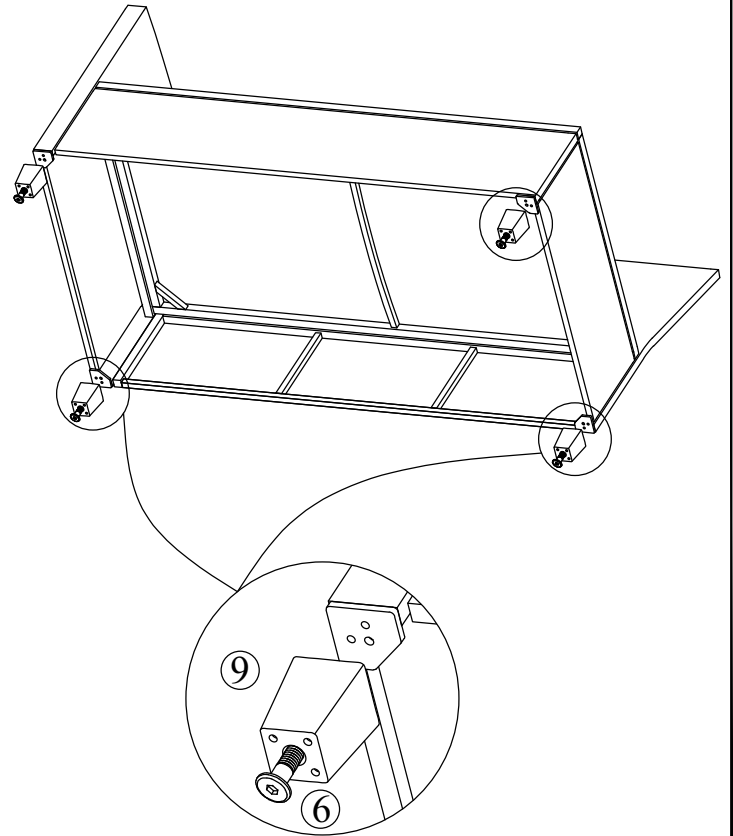


⑥*4

⑨*4

STEP 11 (Conner assembly)



50%

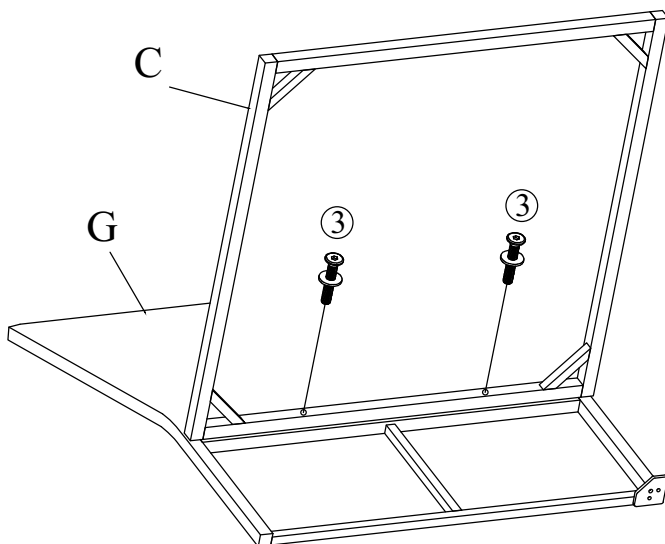


③*2

STEP 12




50%

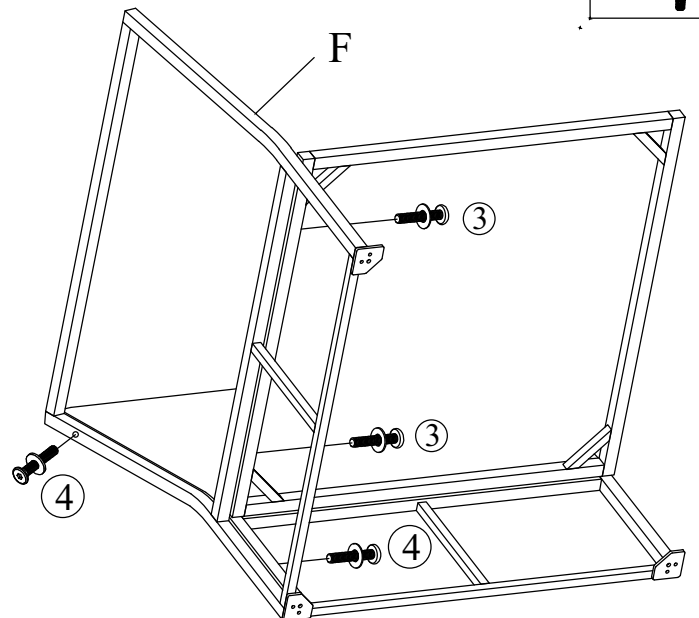

③*2


④*2

STEP 13

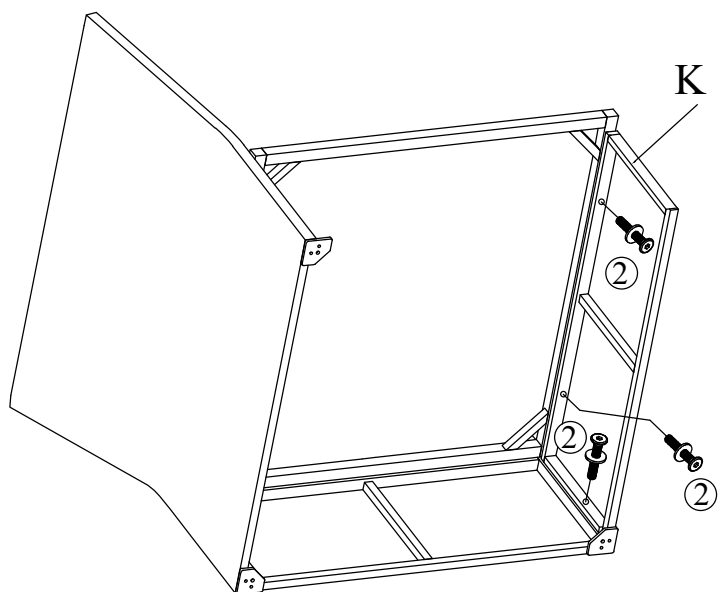


②*3

STEP 14

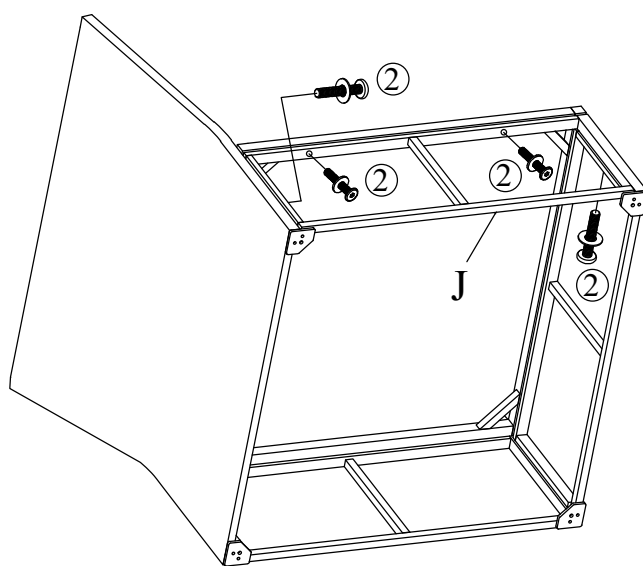

②*4



STEP 15

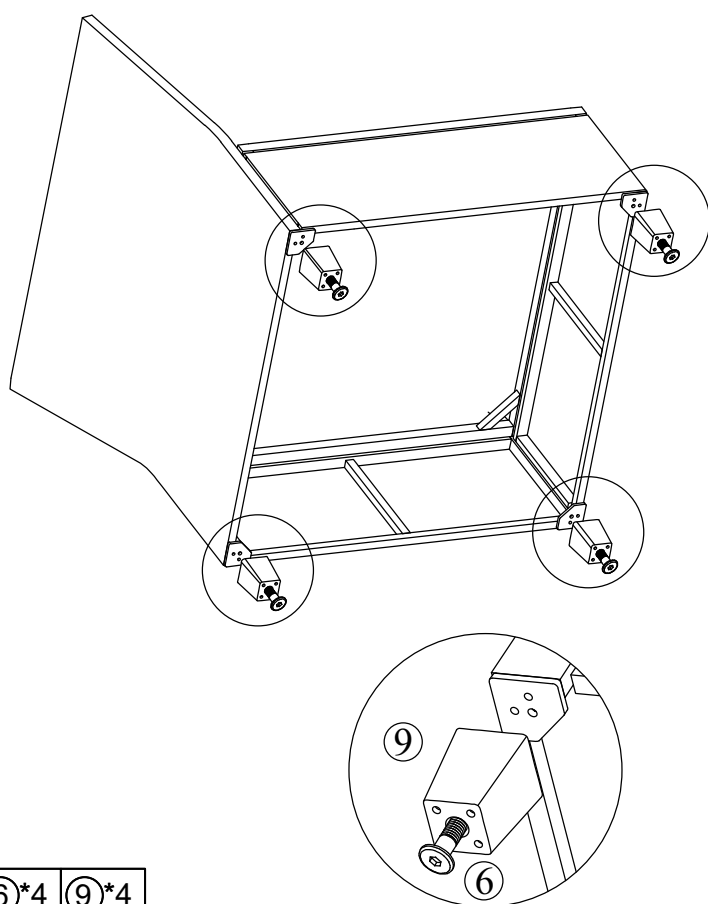

⑥*4


⑨*4

STEP 16 x 4 (Stool assembly)

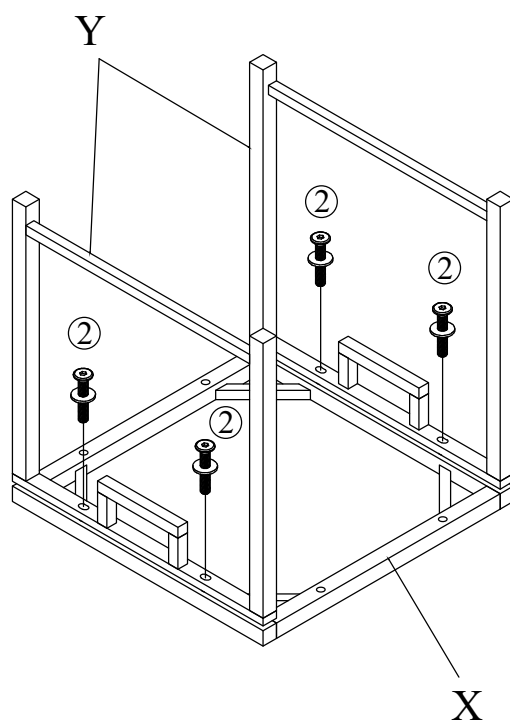


②*4

STEP 17 x 4

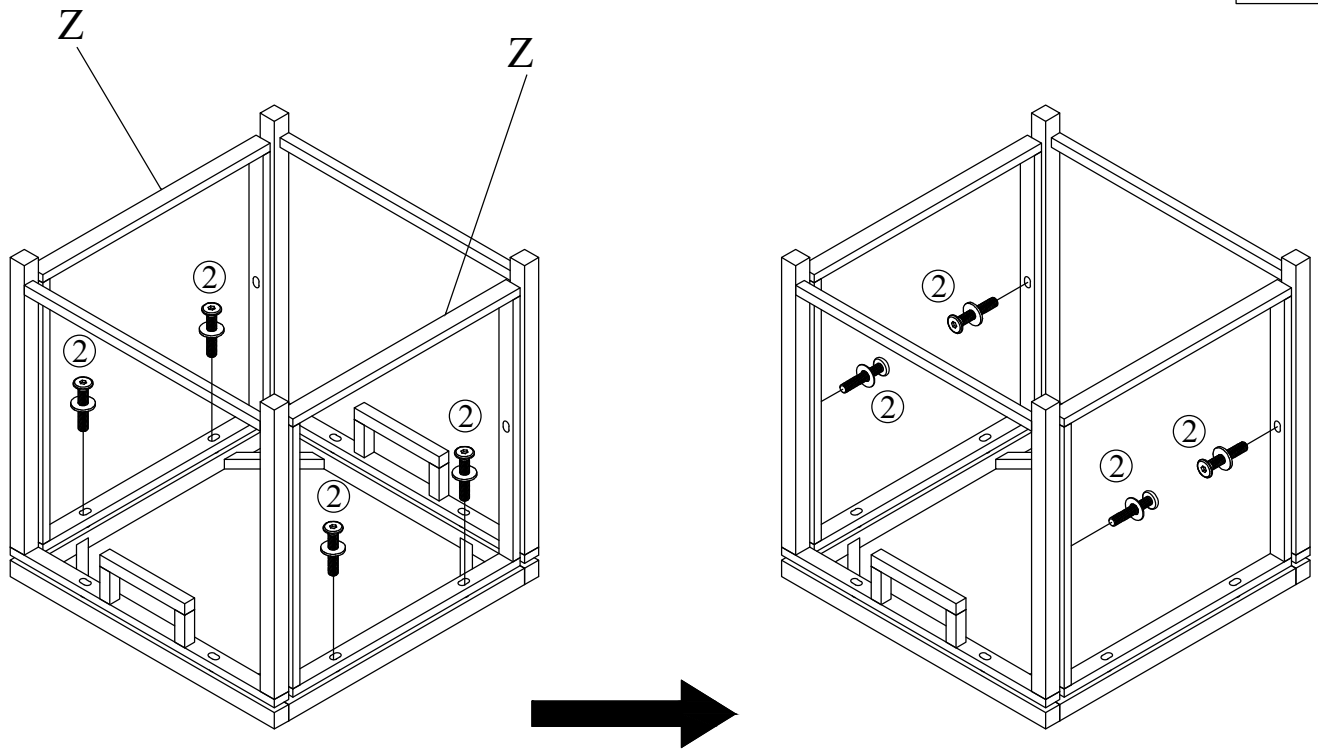


②*8

STEP 18 x4

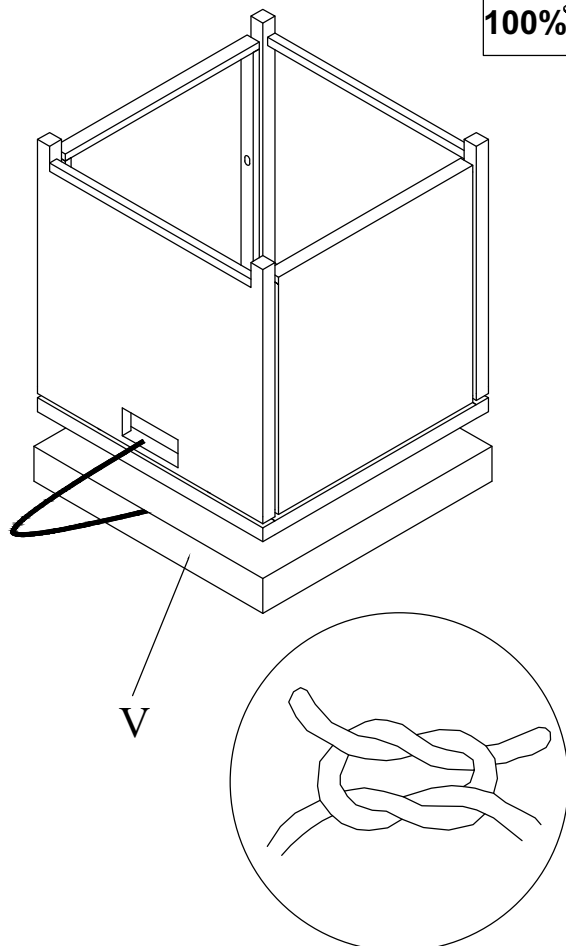


STEP 19 (Table assembly)

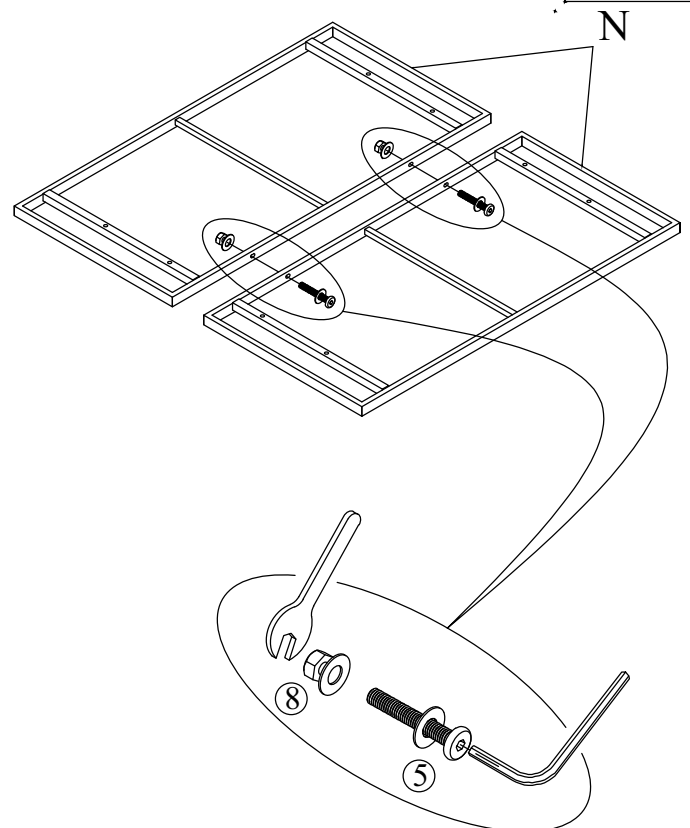



⑤*2 ⑧*2

STEP 20

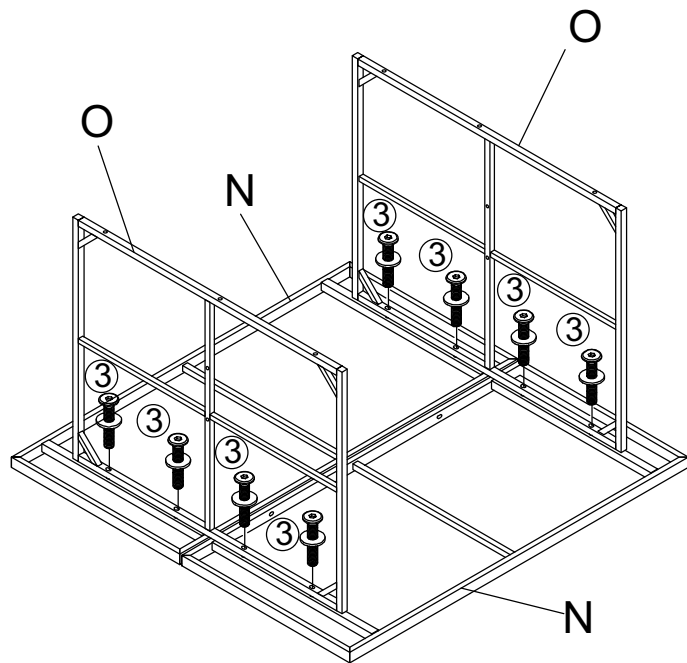


③*8

STEP 21

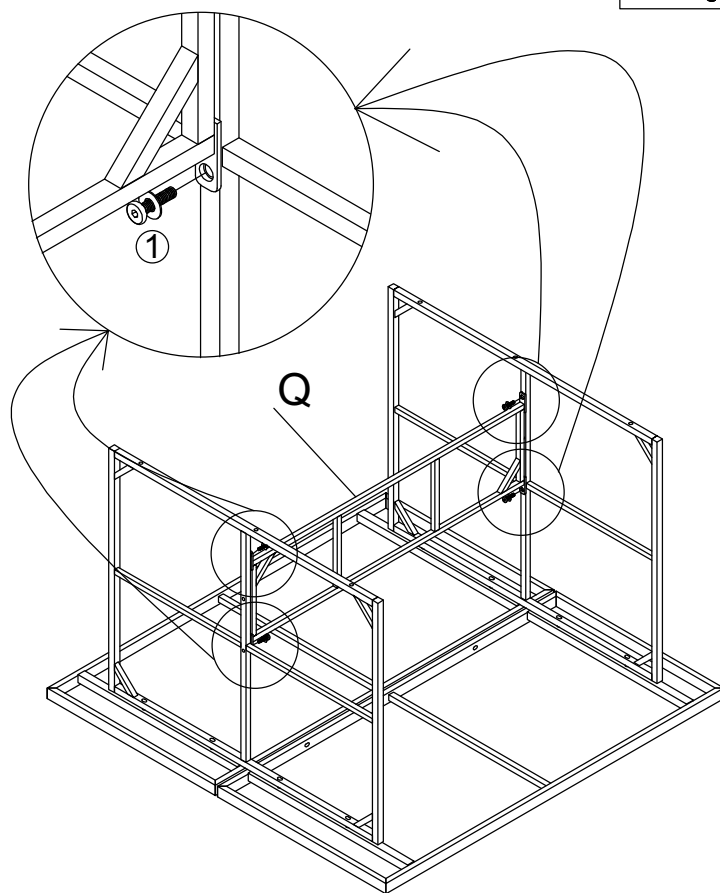



①*4

STEP 22

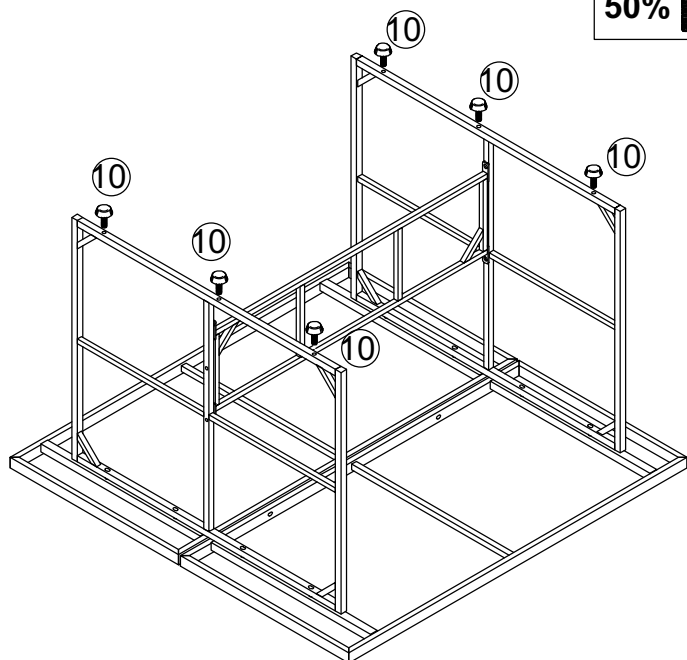


⑩*6

STEP 23

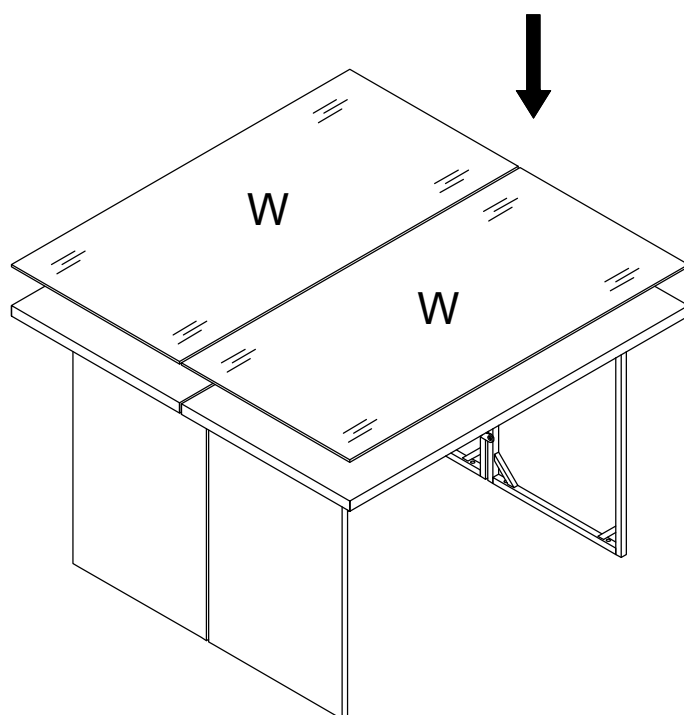

STEP 24

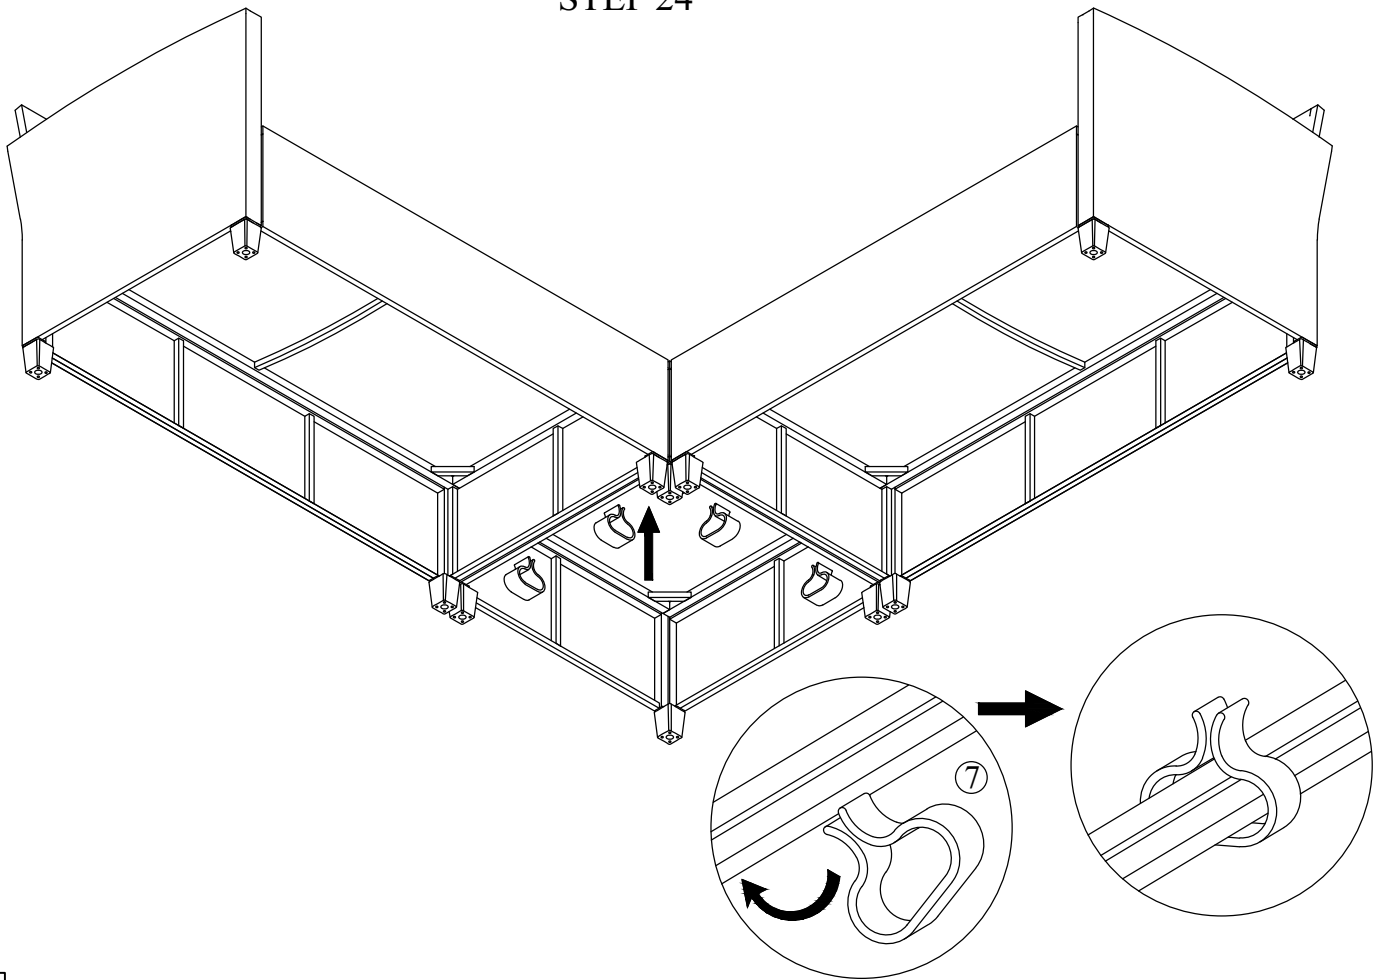

⑦*4

STEP 25

