

# ASSEMBLY INSTRUCTIONS

## Queen Bed

### ASSEMBLY REQUIREMENTS

Assembly Time  
(Approximate) 60 Minutes

2-Person  
Assembly

### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

We appreciate your business!



### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE

















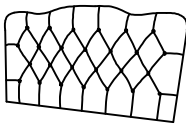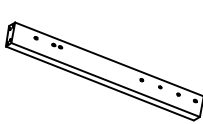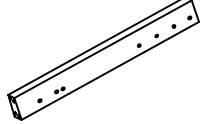


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

# ASSEMBLY INSTRUCTIONS

## Queen Bed

### Parts and Hardware List

<b>A</b> Headboard	<b>B</b> Left Leg	<b>C</b> Right Leg	<b>D</b> Footboard	<b>E</b> Sideboard
				
1pc	1pc	1pc	1pc	2pcs
<b>F</b> Iron Rail	<b>G</b> Wooden Slat	<b>H</b> Allen Bolts Ø5/16" x 20mmL	<b>I</b> Allen Bolts Ø1/4" x 75mmL	<b>J</b> Allen Bolts Ø1/4" x 45mmL
				
2pcs	3pcs	16pcs	2pcs	18pcs
<b>K</b> Allen Bolts Ø1/4" x 30mmL	<b>L</b> Metal L-Plate	<b>M</b> Flat Washers Φ19mm x Φ6mm	<b>N</b> Flat Washers Φ20mm x Φ9mm	<b>O</b> Allen Wrench (for 5/16 bolt)
				
6pcs	4pcs	26pcs	16pcs	1pc
<b>P</b> Allen Wrench (for 1/4 bolt)	<b>Q</b> Support Feet Φ38mm x 140mm	<b>R</b> Support Feet Φ25mm x 120mm	<b>S</b> Wood Feet	
				
1pc	6pcs	2pcs	2pcs	

### Bed Assembly



# 1 Fasten the Leg (B & C) and Headboard (A).

Note:

1. Assemble the bed at the space where it will placed.
  2. Before installing the Legs to the Headboard, determine the height of the box spring and thickness of the mattress.
  3. Next, refer to Table 1 below to determine the height/level to install the legs.
- a) With assistance, lay Headboard (A) bottom-side up on a flat surface & soft material to prevent scratch and damage.
  - b) Determine the correct level and fasten Left and Right Leg (B & C) to (A) with Bolt (J) fitted with Flat Washer (M). Use Allen Wrench (P) to drive (J).

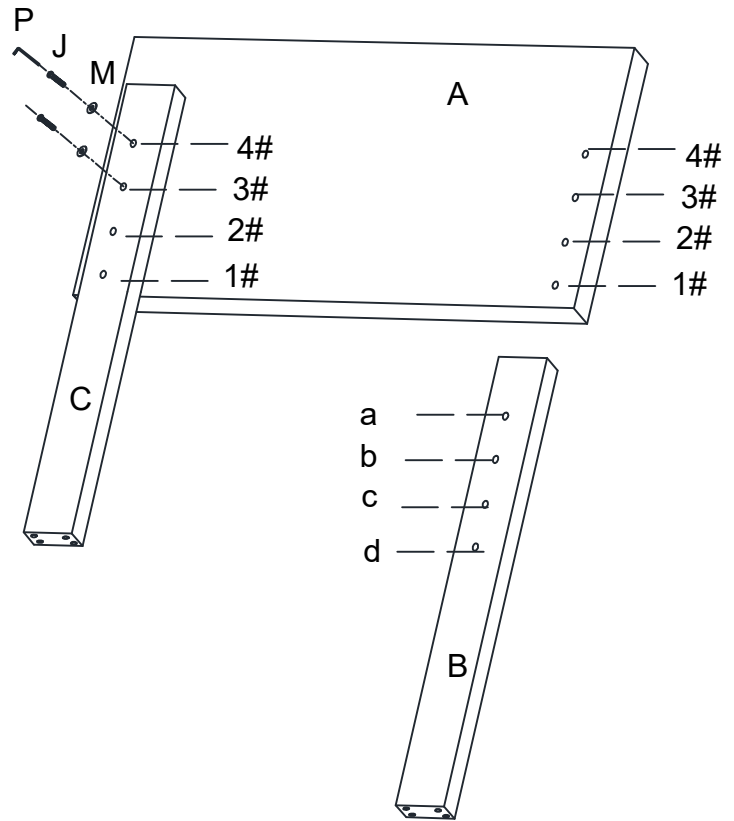



Table 1

Box Spring + Mattress	Adjustable Headboard Height
Under 10"	a match 4#
10"~14"	b match 3#
14"~18"	c match 2#
18"+	d match 1#

# 2 Fasten Wood Feet (S) to the Footboard (D).

Note:


For illustrative purpose, the Footboard and Wood Feet is shown right-side up. It is easier to assemble the Wood Feet to the Footboard with the Footboard place bottom-side up.

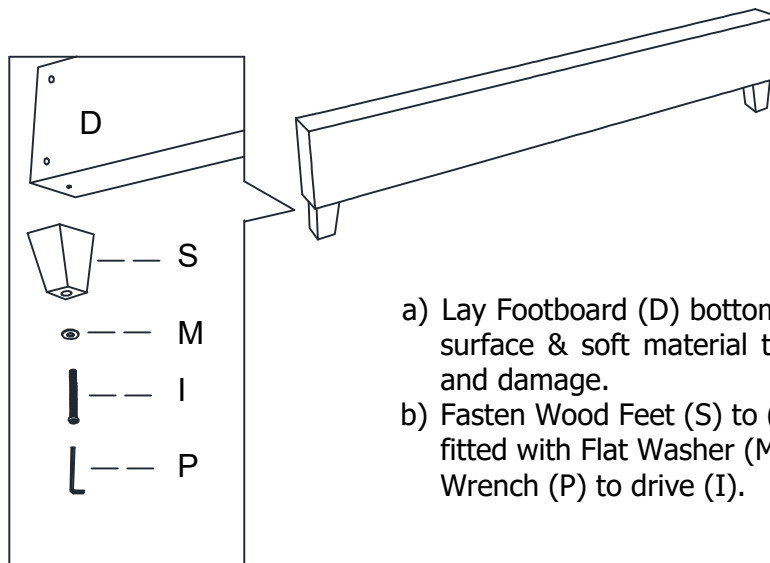

- a) Lay Footboard (D) bottom-side up on a flat surface & soft material to prevent scratch and damage.
- b) Fasten Wood Feet (S) to (D) with Bolt (I) fitted with Flat Washer (M). Use Allen Wrench (P) to drive (I).

3


Fasten the Support Feet (R) to Iron Pipe (F).

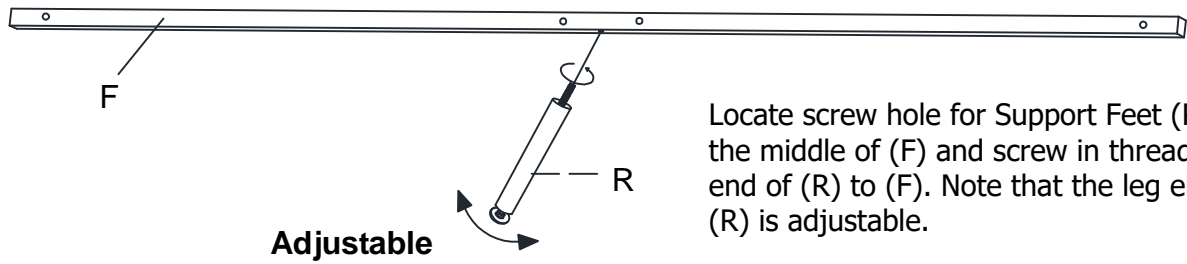

Locate screw hole for Support Feet (R) in the middle of (F) and screw in threaded end of (R) to (F). Note that the leg end of (R) is adjustable.

4


Install Iron Rail (F) to the Side Board (E).

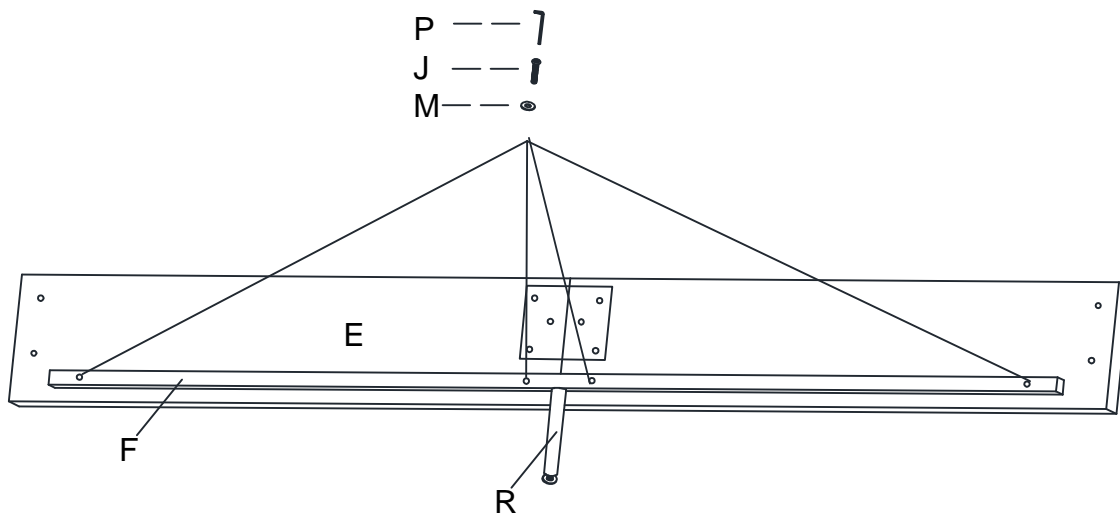

- Lay Side Board (E) bottom-side up on a flat surface & soft material to prevent scratch and damage.
- Align bolt holes on Iron Rail (F) to bolt holes on (E).
- Use Bolt (J) fitted with Flat Washer (M) to fasten (F) to (E). Use Allen Wrench (P) to drive (J). Do not tighten (J) completely until all 4 bolts are in place.

5


Install Metal L-Plate (L) to Sideboard (E).

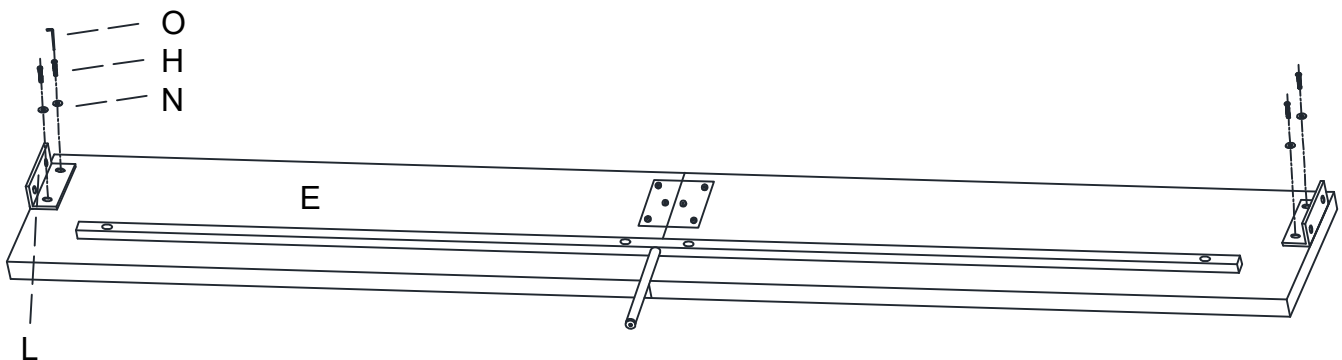

- Place metal L-Plate (L) on (E) as shown and align the bolt holes on each part
- Use Bolt (H) fitted with Flat Washer (N) to fasten (L) to (E). Use Allen Wrench (O) to drive (H). Do not tighten (H) completely until both bolts are in place.

# 6

## Install Sideboard (E) to the Headboard (A) and Footboard (D).


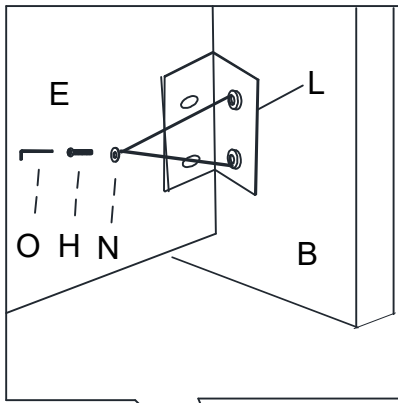


- With assistance, hold Headboard (A) vertically upright or set (A) vertically against a wall.
- Position a Side Board (E) as shown and place metal L-Plate (L) on (E) against Left Leg (B) and align the bolt holes.
- Use Bolt (H) fitted with Flat Washer (N) to fasten (L) to (B). Do not tighten (H) completely until both bolts are in place.

- Position a Footboard (D) to place metal L-Plate (L) on (E) against left inside edge of (D) and align the bolt holes.
- Use Bolt (H) fitted with Flat Washer (N) to fasten (L) to (B). Do not tighten (H) completely until both bolts are in place.
- Install right Side Board (E) to Right Leg and right side of (D) using the above procedures b) through e).

# 7

## Install Wooden Slats (G) and Support Leg (Q).

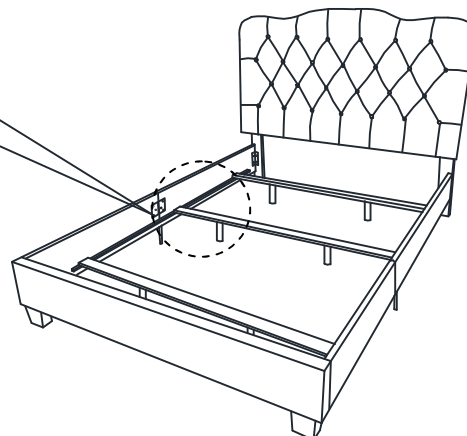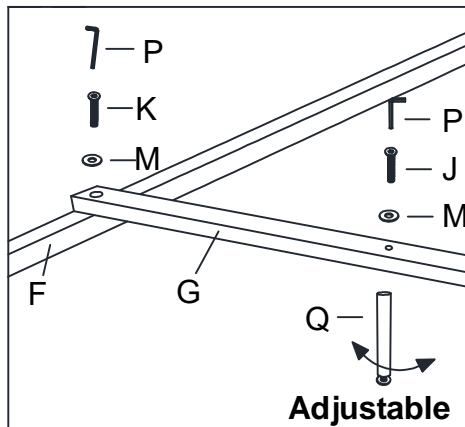

- On each Wooden Slat (G), locate screw hole for Support Feet (Q) and use Bolt (J) fitted with Flat Washer (M) to fasten (Q) to (G). Note that the leg end of (Q) is adjustable.
- Locate screw hole on Iron Rail (F) to fasten (G) and use Bolt (K) fitted with Flat Washer (M) to fasten (Q) to (G). Use Allen Key (P) to drive (K).
- Set the bed at the designated space. Adjust the individual Support Feet (Q & R) to ensure each leg rest firmly on the floor.

The assembly of the bed is complete.