



ASSEMBLY INSTRUCTIONS

FULL HOUSE BED WITH TRUNDLE

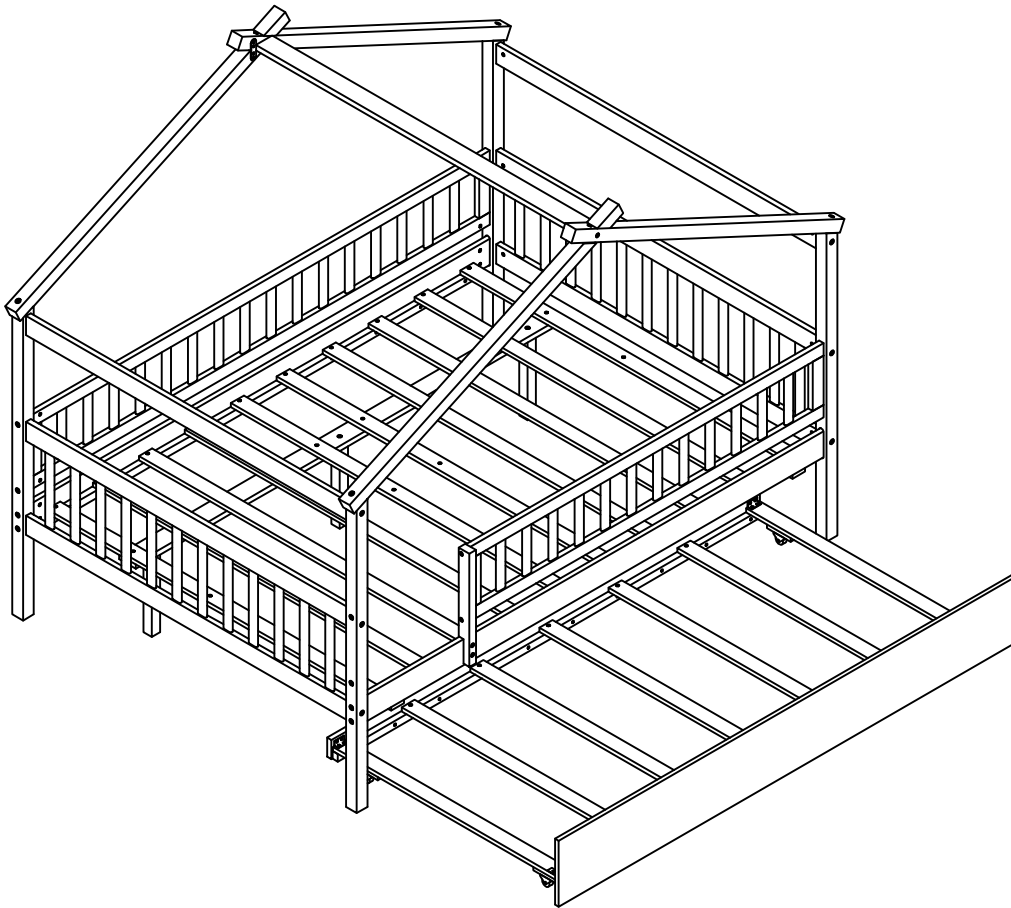











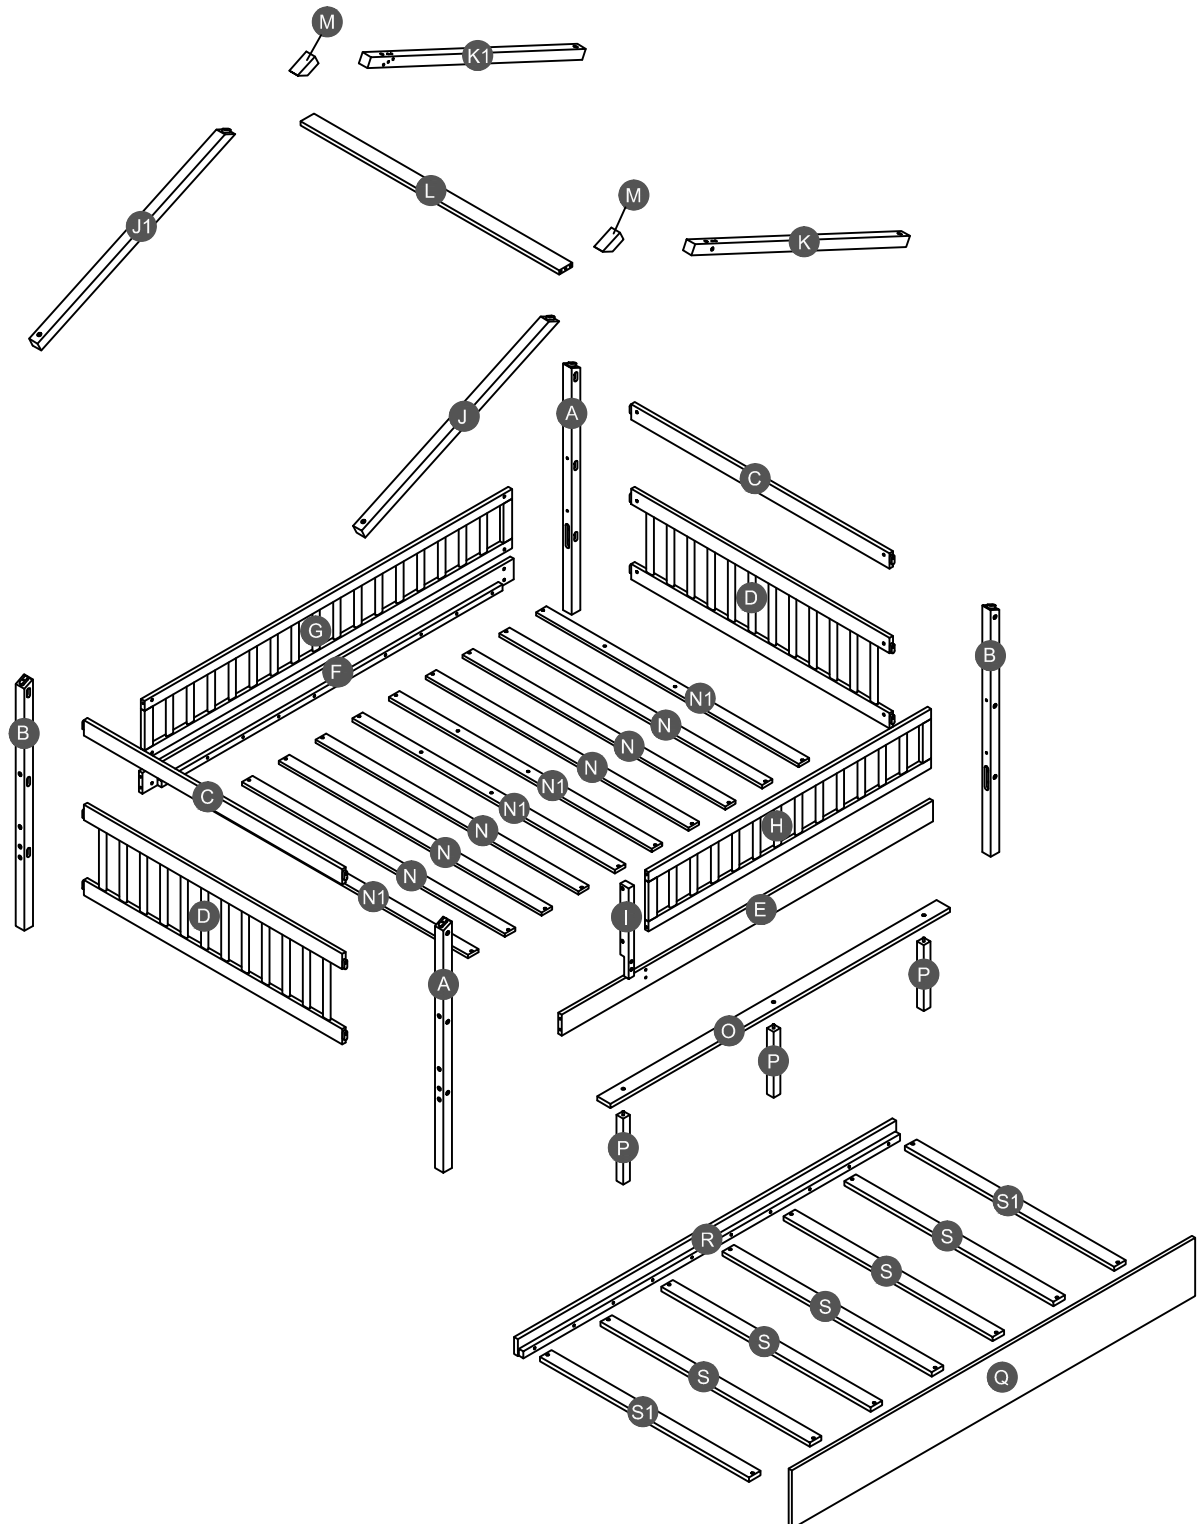








WF302179/WF302180

Detail View







Part List

Hardware List WF302179












A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail (Front) - 1pc	F  Side rail (Back) - 1pc
G  Long guard rail (Back) - 1pc	H  Short guard rail (Front) - 1pc	I  Support guard rail(Left) - 1pc
J  Upper (Left Front) - 1pc	J1  Upper (Left Back) - 1pc	K  Upper (Right Front) - 1pc
K1  Upper (Right Back) - 1pc	L  Upper horizontal bar - 1pc	M  Block - 2pcs
N  Slats - 6pcs	N1  Slats - 4pcs	O  Lower support slat - 1pc
P  Leg support - 3pcs		

Hardware List WF302180






Q  Front panel of Trundle - 1pc	R  Back panel side rail of Trundle - 1pc	S  Slats - 5pcs
S1  Slats - 2pcs		

Hardware List


Hardware List WF302179

1	 Ø8*30mm Wood dowel (6pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (16pcs)
4	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	5	 (Ø12)1/4"*65mm Hex-Head bolts (8pcs)	6	 1/4"*15 (9.5mm) Horizontal-Hole bolts(30pcs)
7	 (1/4")4.5*58mm Allen key (1pc)	8	 Ø4*30mm Wood screws (28pcs)	9	 Ø3.5*19mm Wood screws (8pcs)
10	 75*20*2 mm Metal bracket (2pcs)	11	 70*35*19 mm Trundle stopper (2pcs)		

Hardware List WF302180


8	 Ø4*30mm Wood screws (22pcs)	12	 Ø3.5*15mm Wood screws (16pcs)	13	 95*95*18*3mm Metal bracket (2pcs)
14	 40*18*18*2mm Metal bracket (2pcs)	15	 100*63*20mm Wheels (4pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

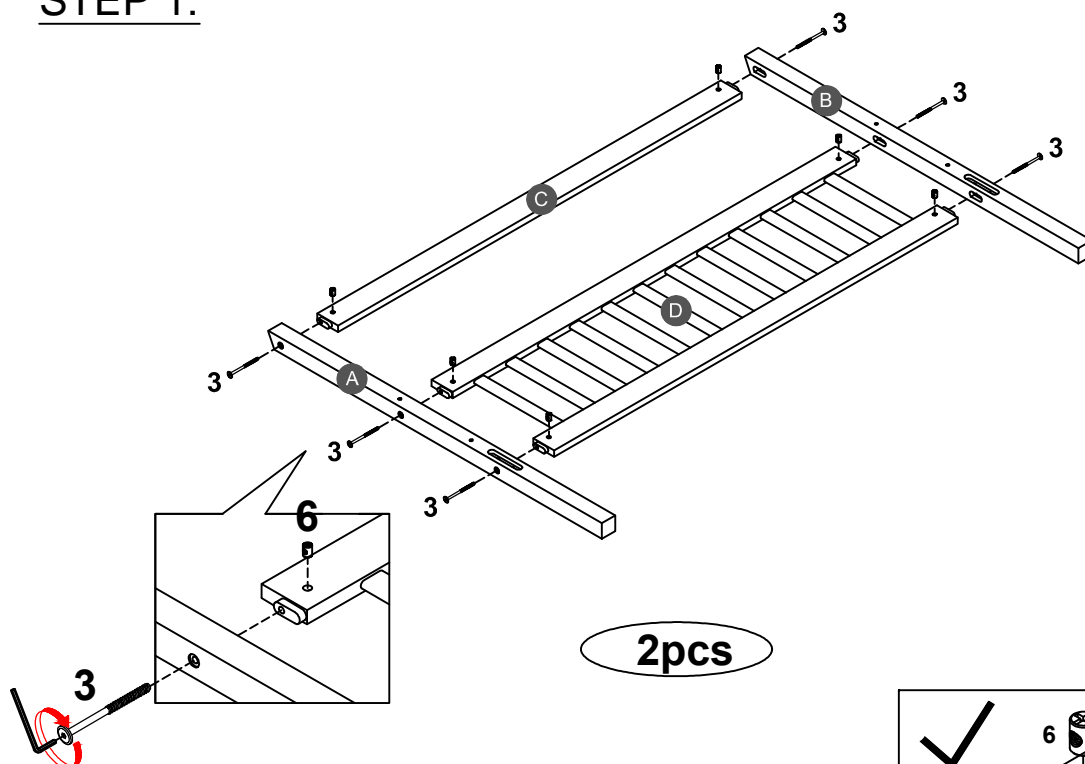

3



12PCS


6




12PCS

2pcs

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

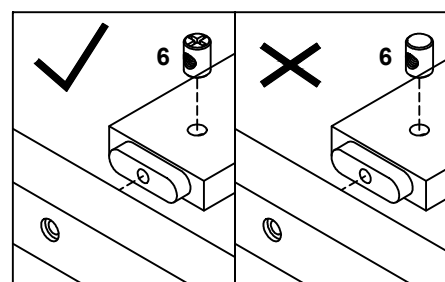

STEP 2:

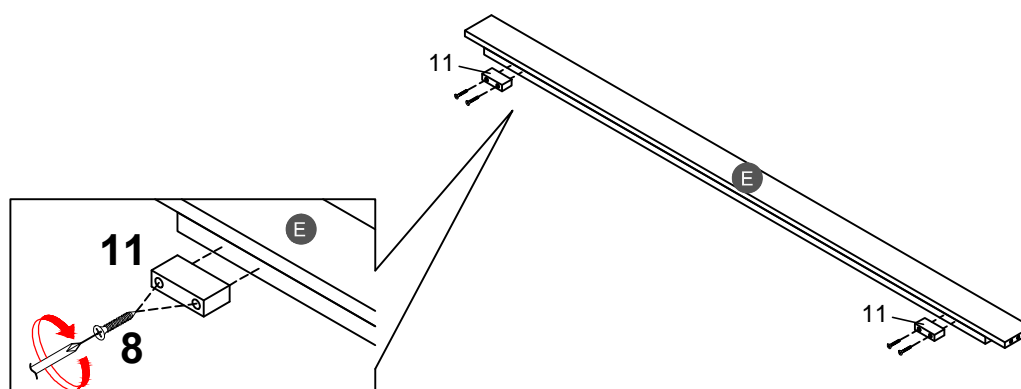

8



4PCS



11




2PCS





Trundle stopper (11) with lower side rail front (E) by using screw (8).

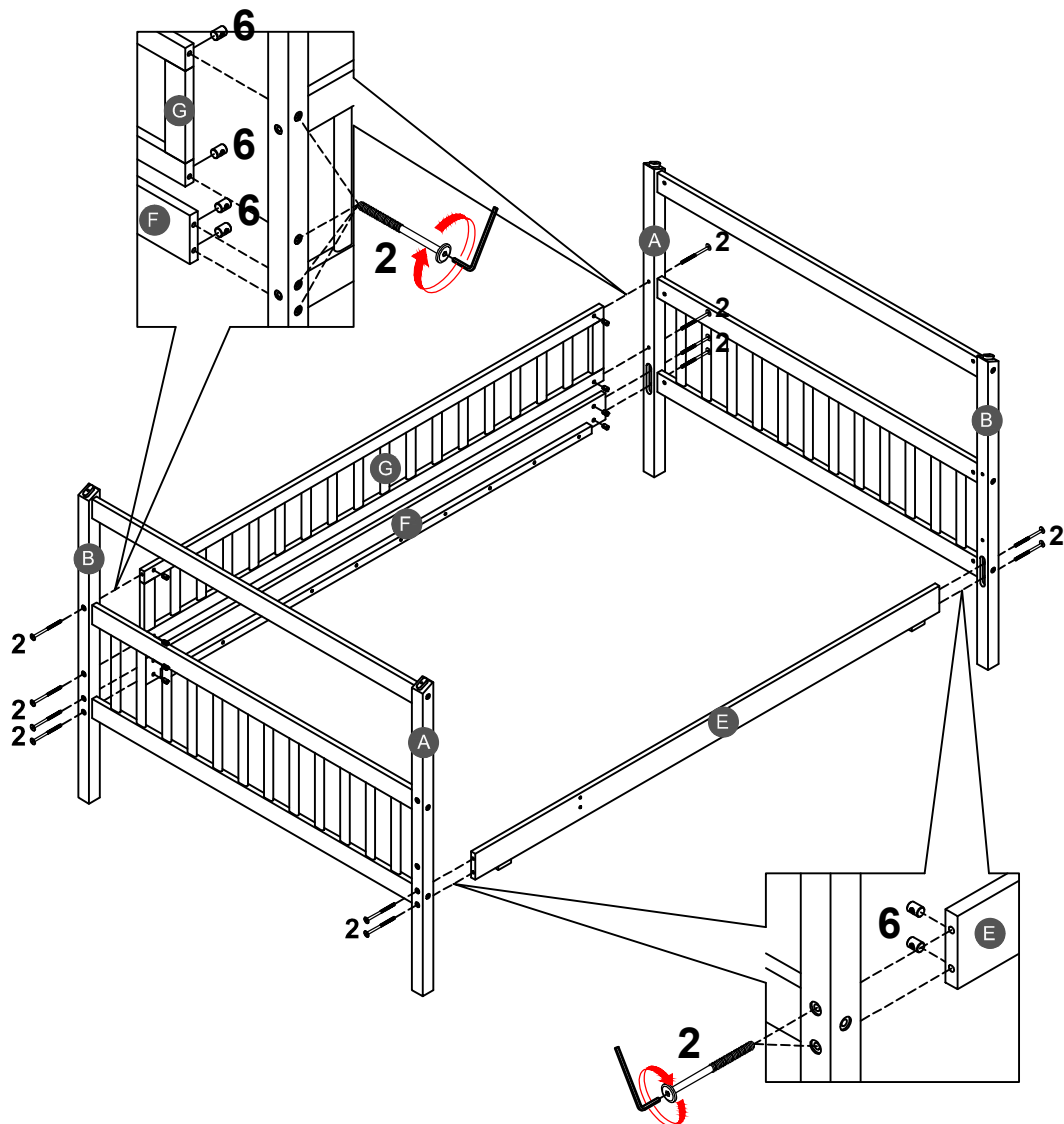
STEP 3:

2		6	
12PCS		12PCS	








STEP 4:

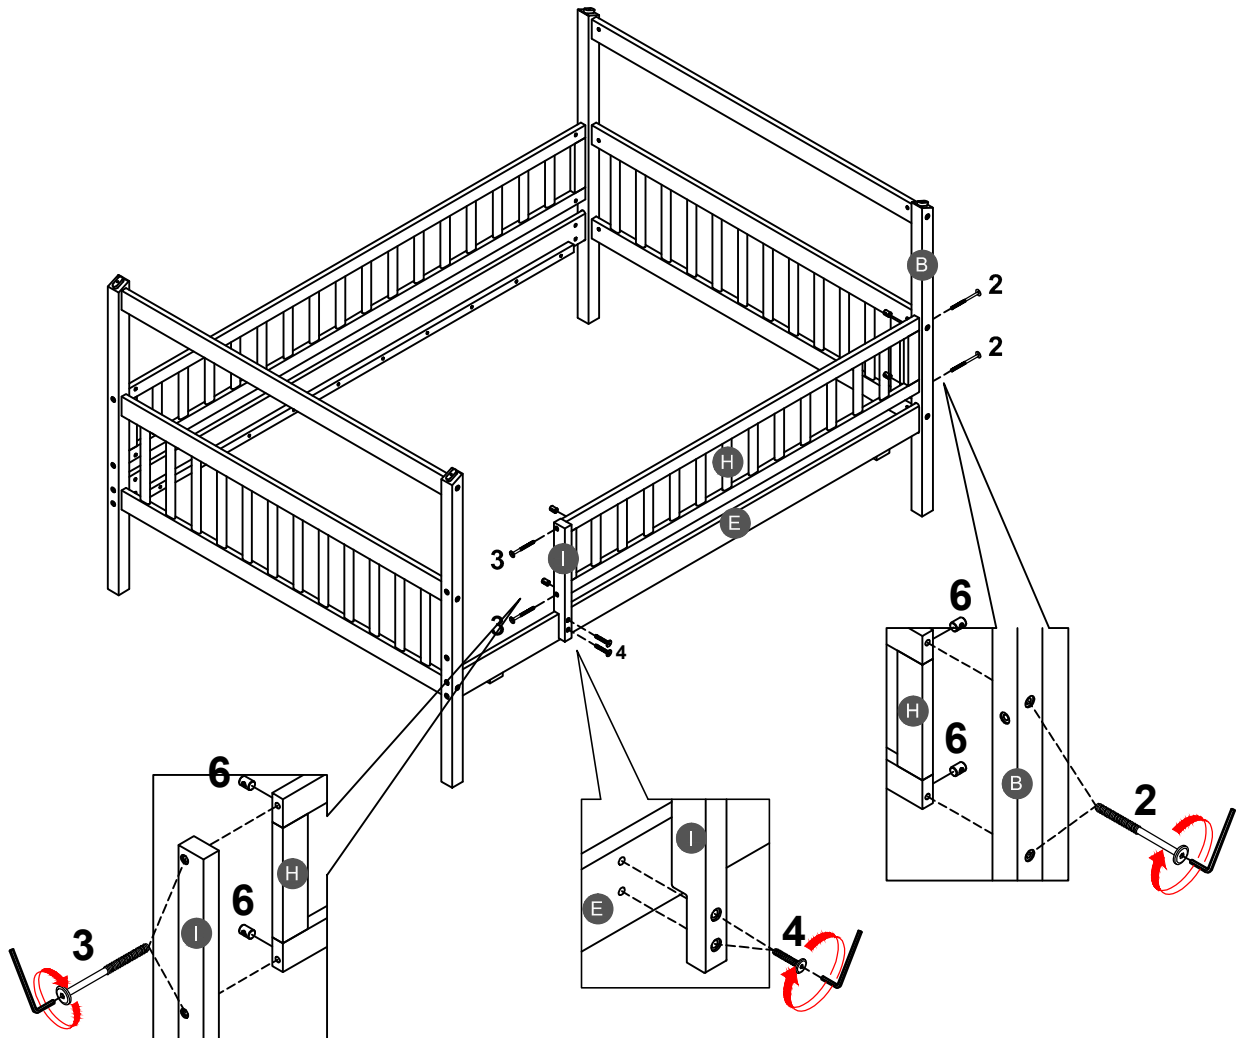2		3		4		6	
2PCS		2PCS		2PCS		4PCS	




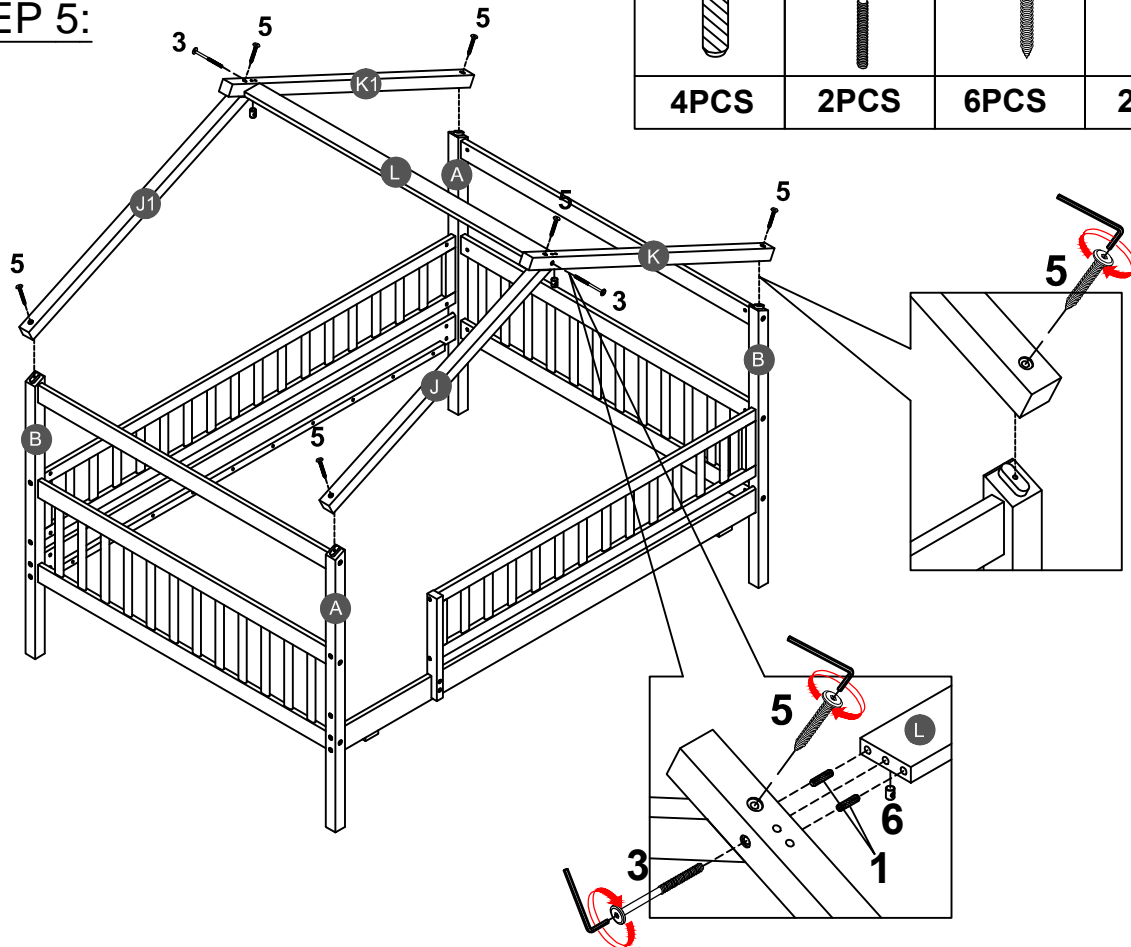

STEP 5:




1		3		5		6	
4PCS		2PCS		6PCS		2PCS	

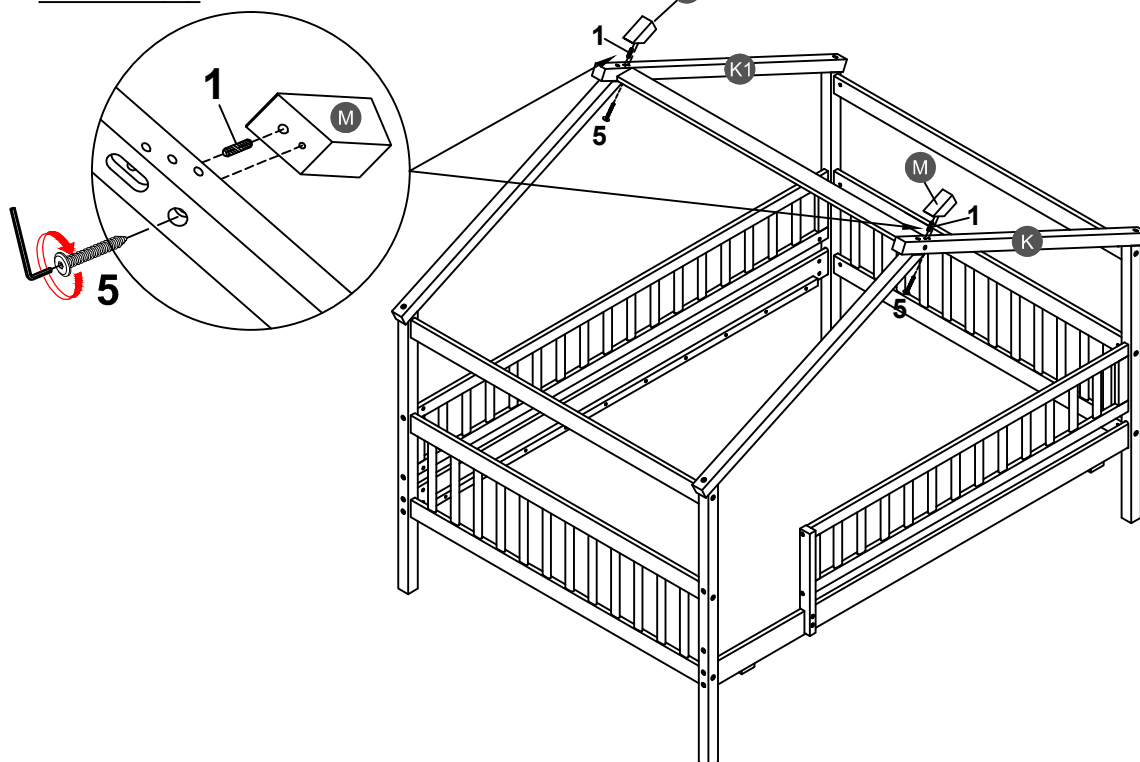

STEP 6:




1	
2PCS	
5	
2PCS	

STEP 7:

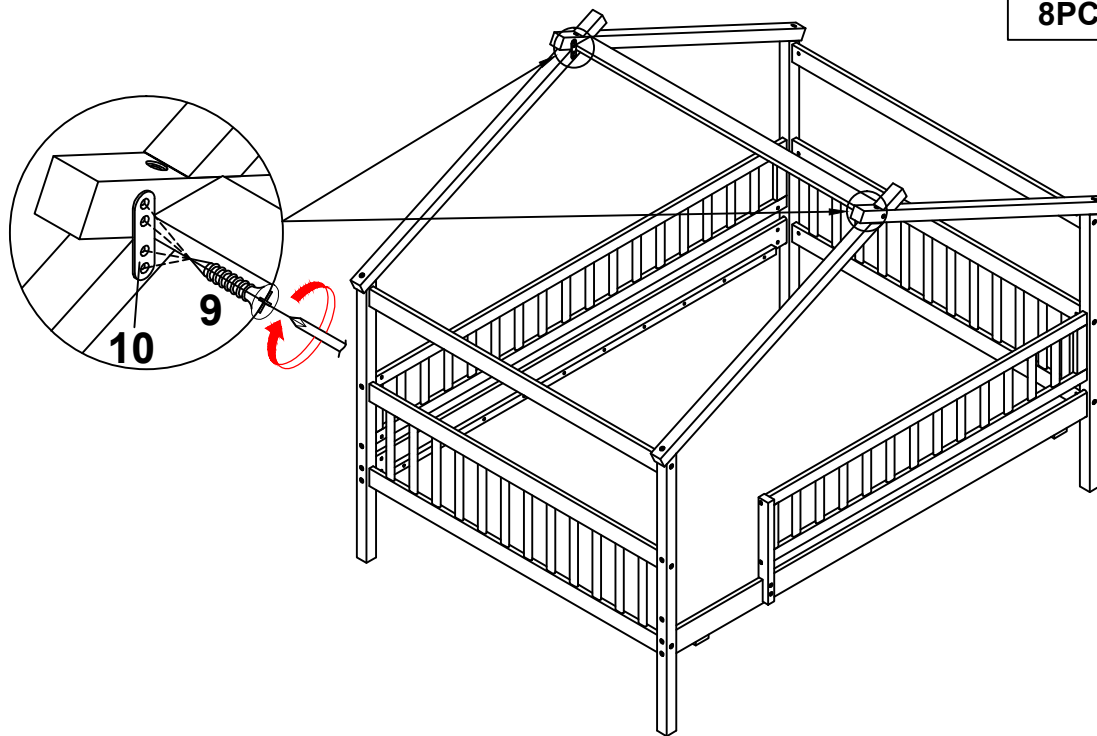

9	10
	
8PCS	2PCS

STEP 8:

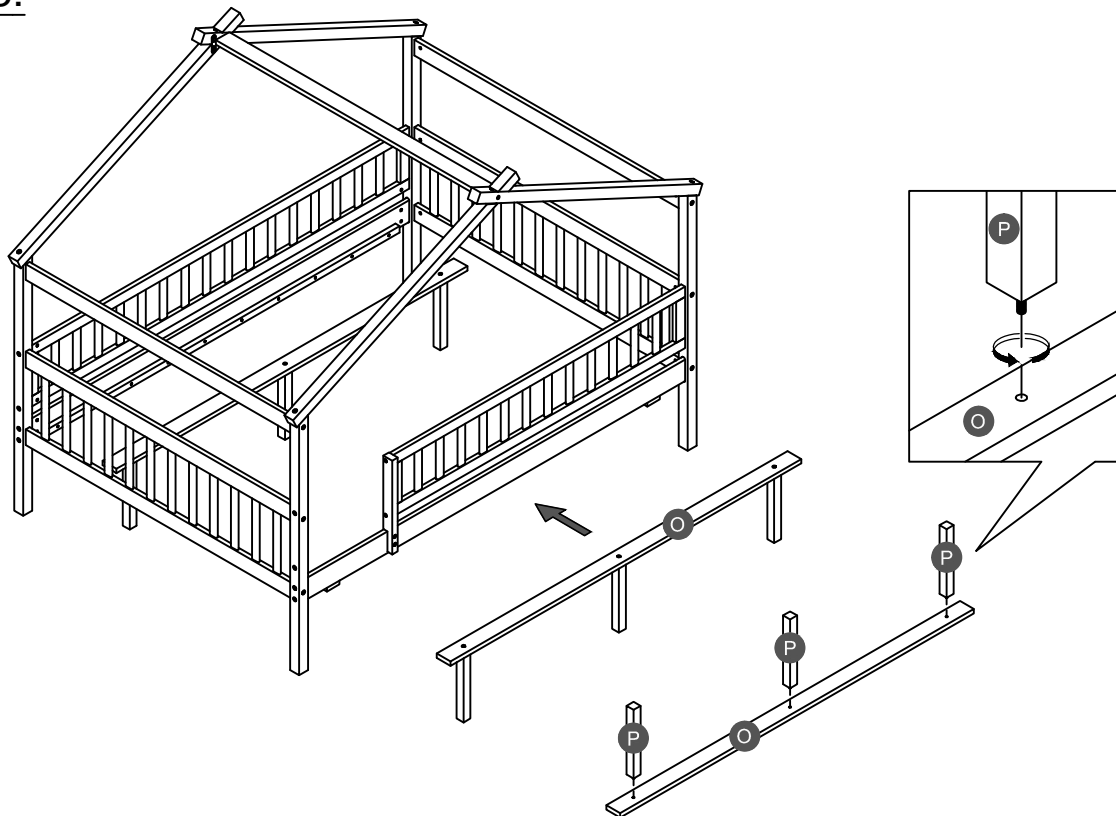


Assembling leg support (P) with lower support slat (O) later rotate, Move support slat inside Full bunkbed.

STEP 9:

8



24PCS

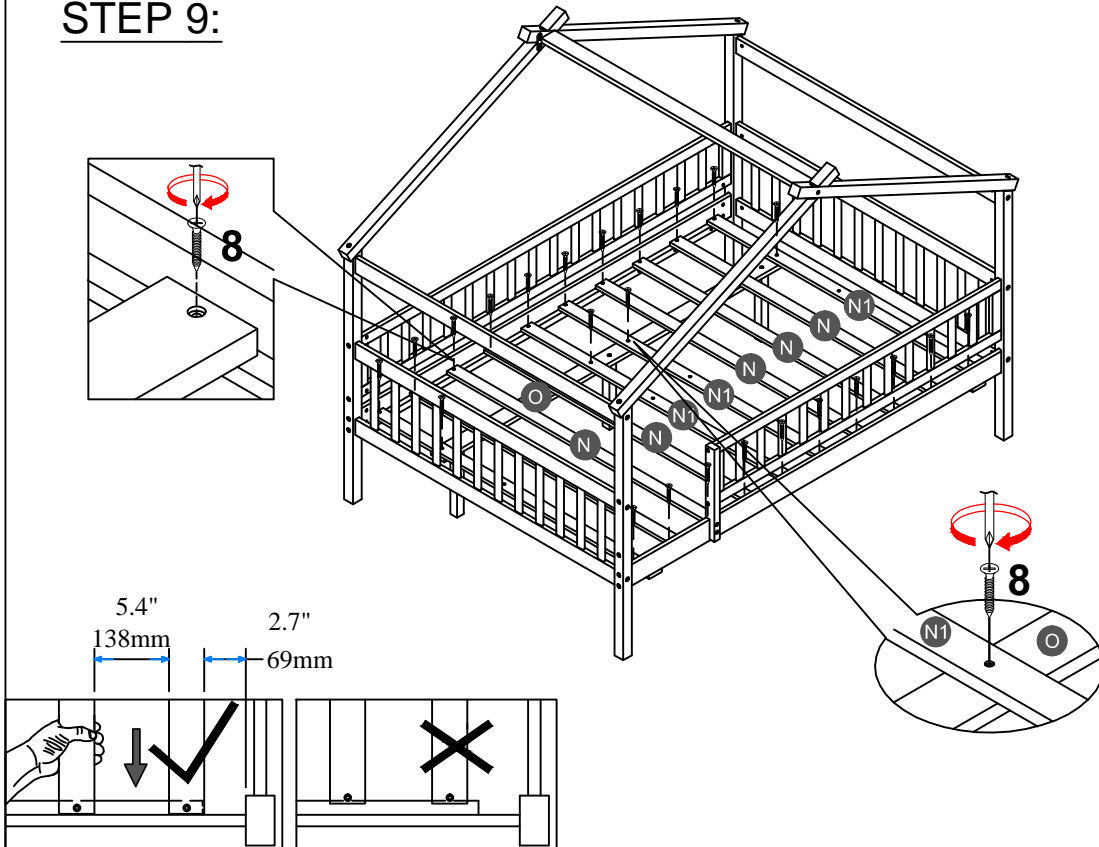

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 10:

8




8PCS


15



4PCS

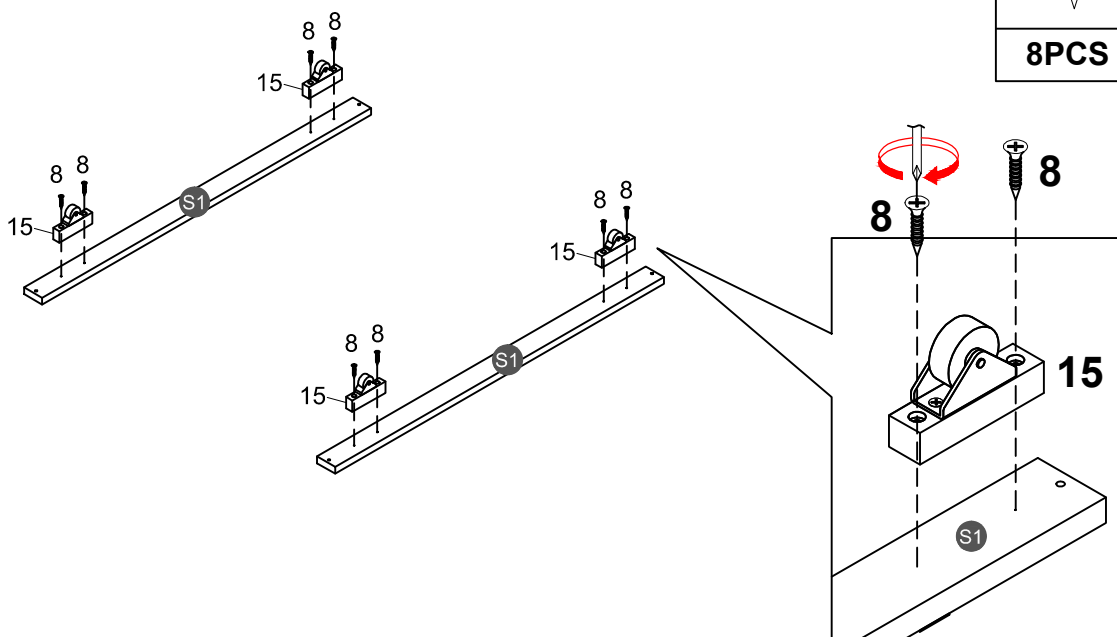


STEP 11:

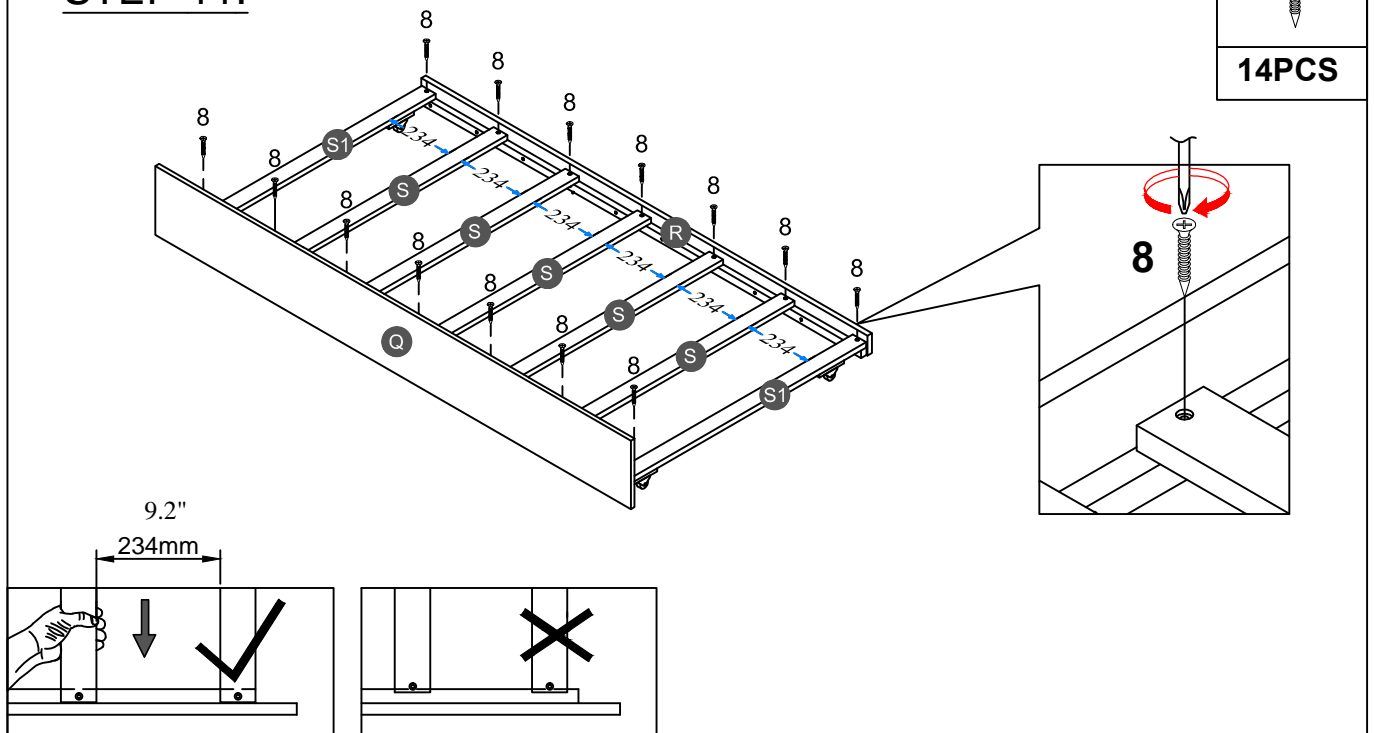



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.


Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 12:

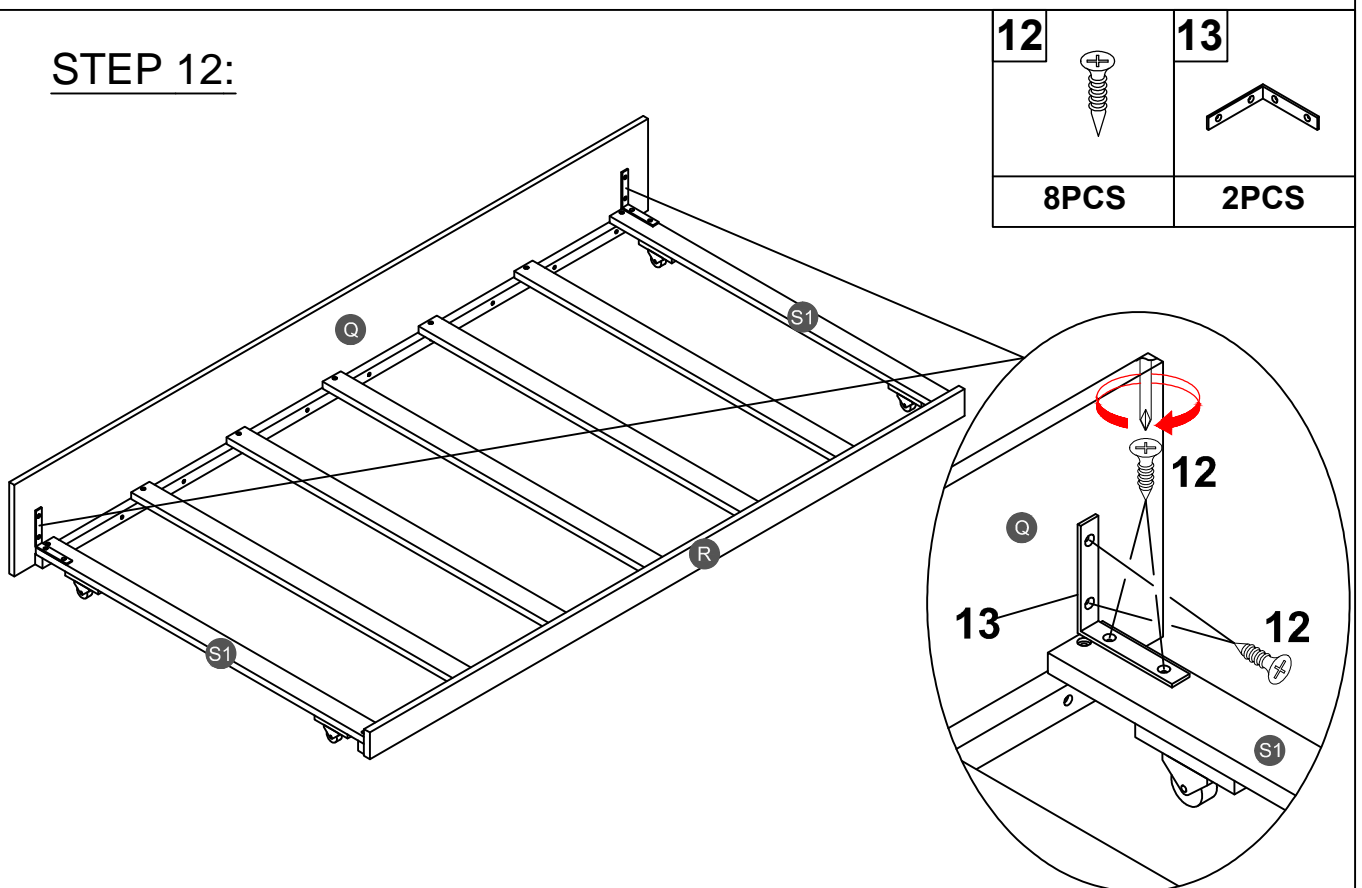


STEP 13:

12		14	
8PCS		2PCS	

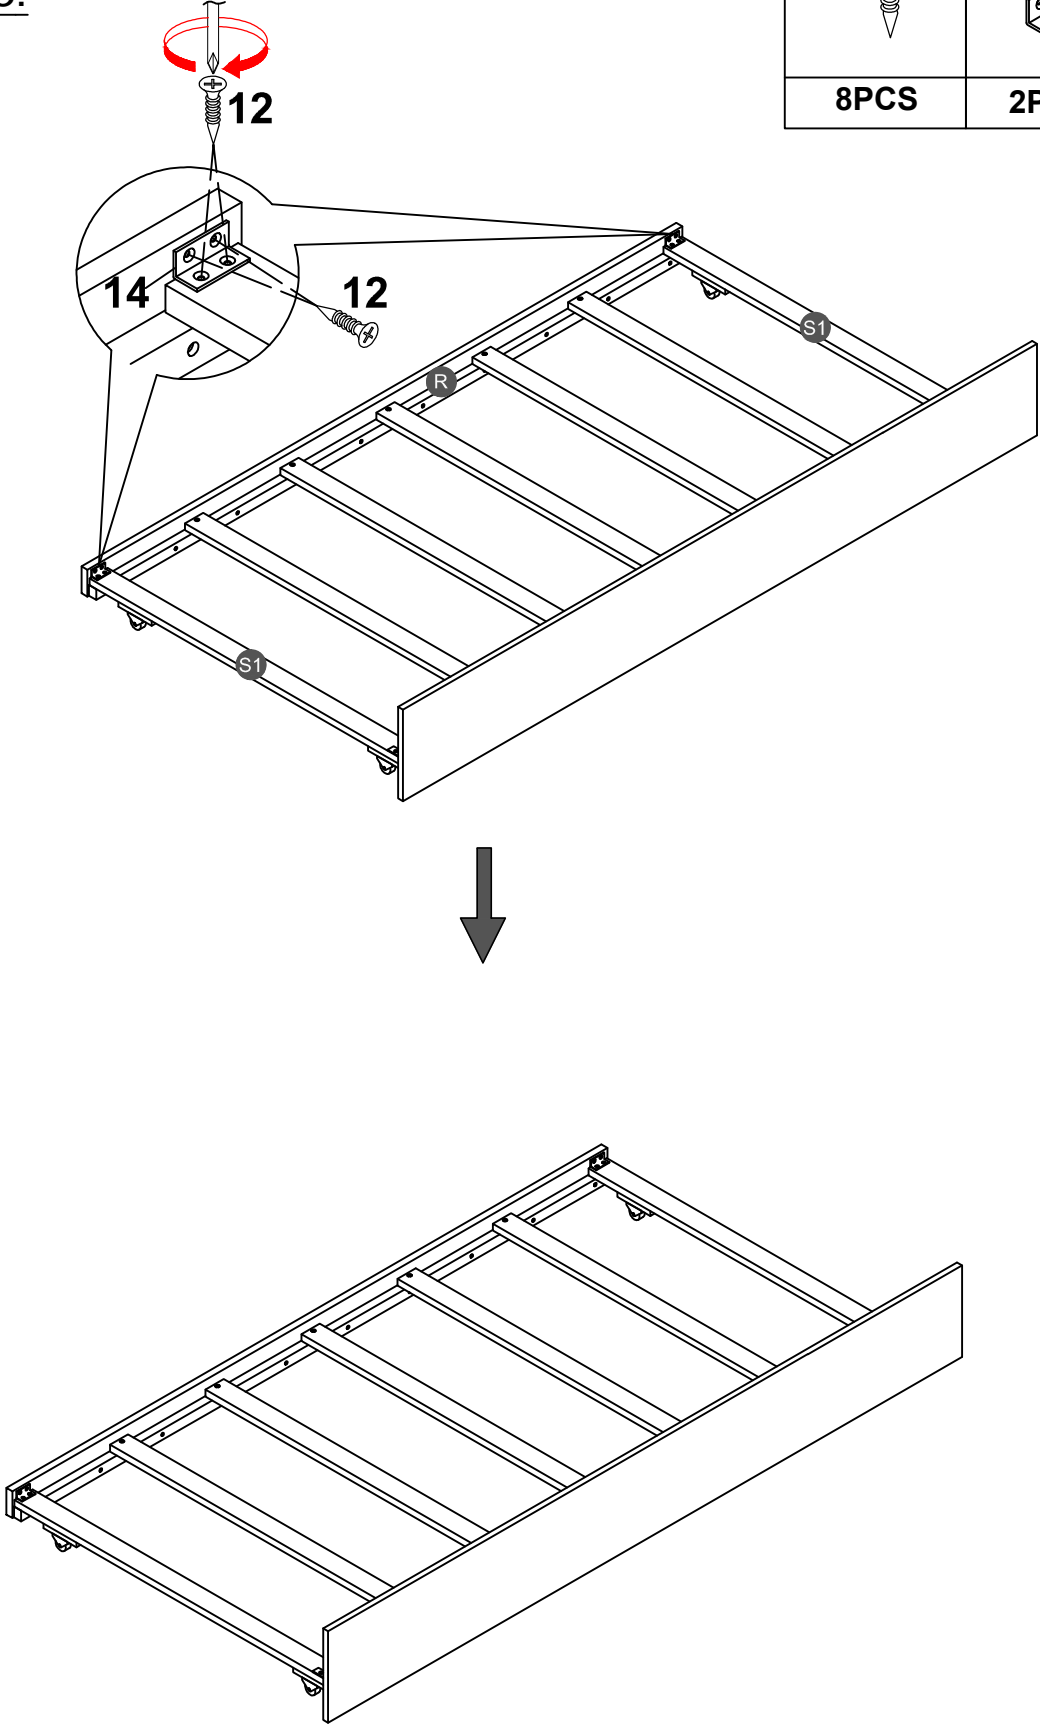

STEP 14:

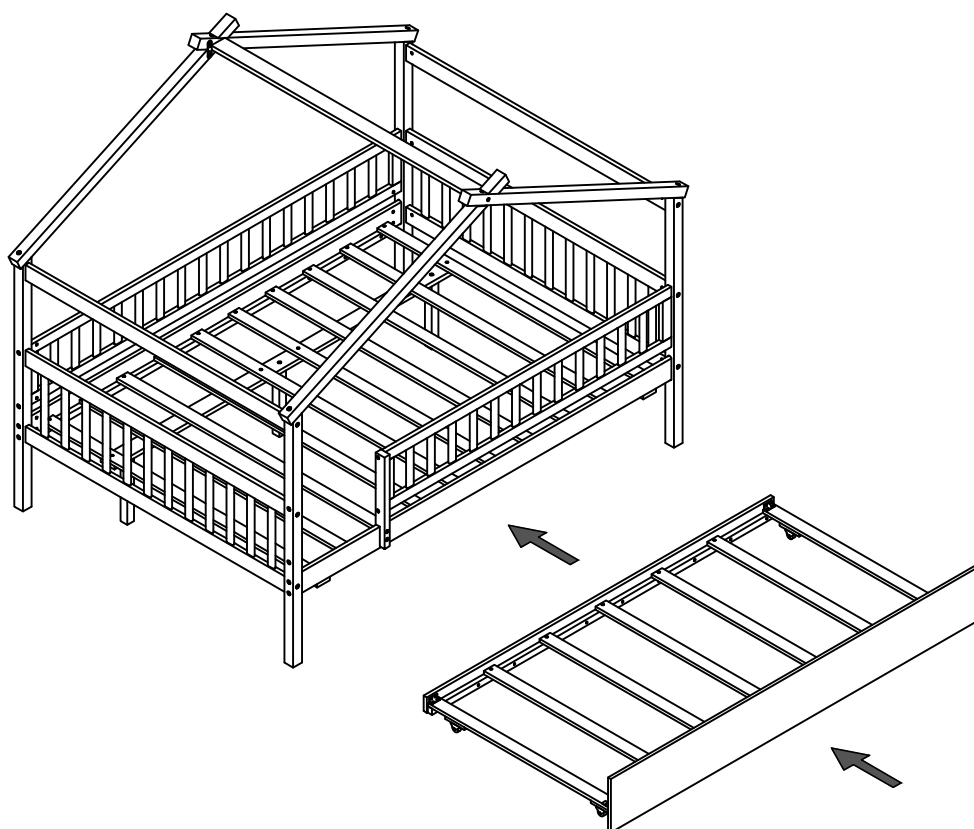

Push Trundle and Drawer under the bottom of Bunkbed.

