



# Parts List (Checking the part lists when you get the packing)

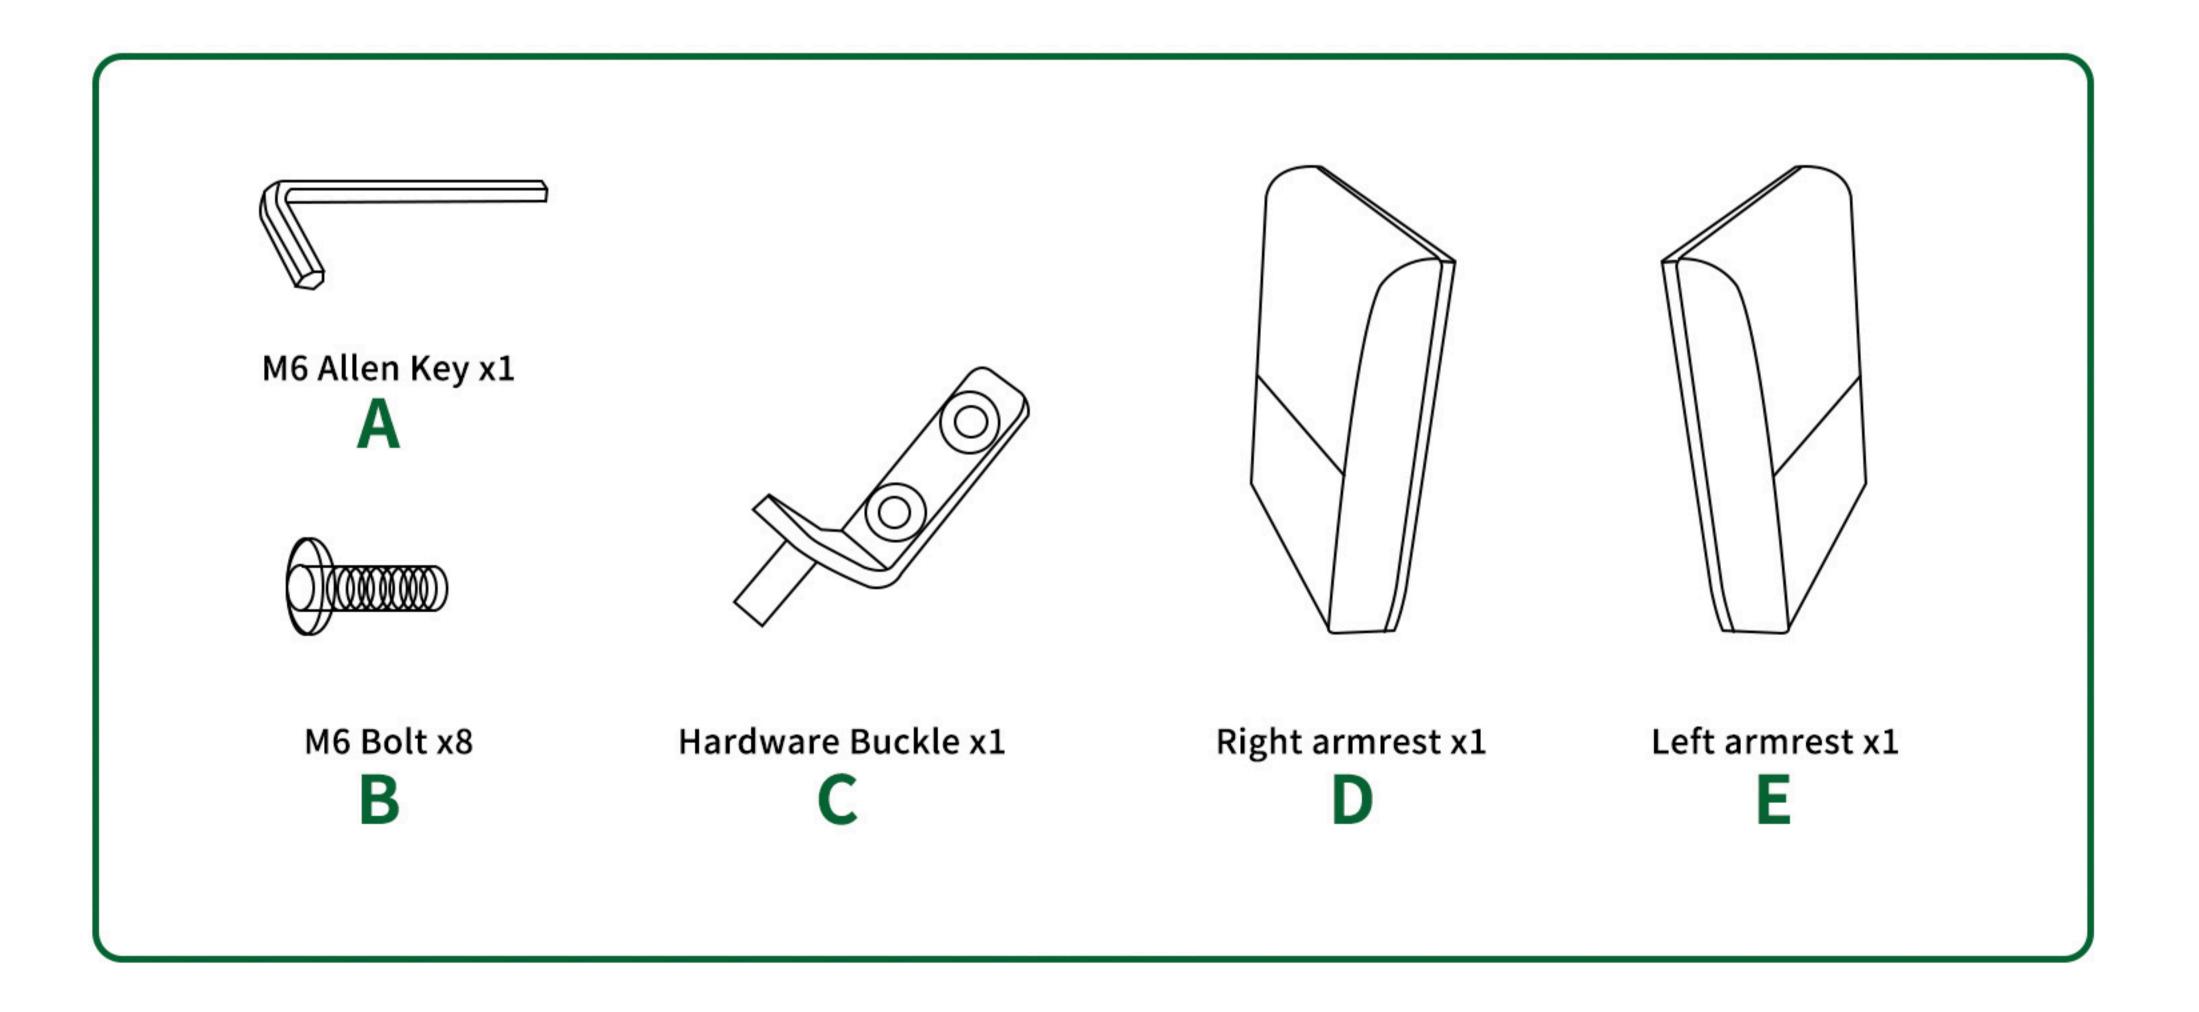




Step 1: Take out the fitting at the bottom of the armrest.

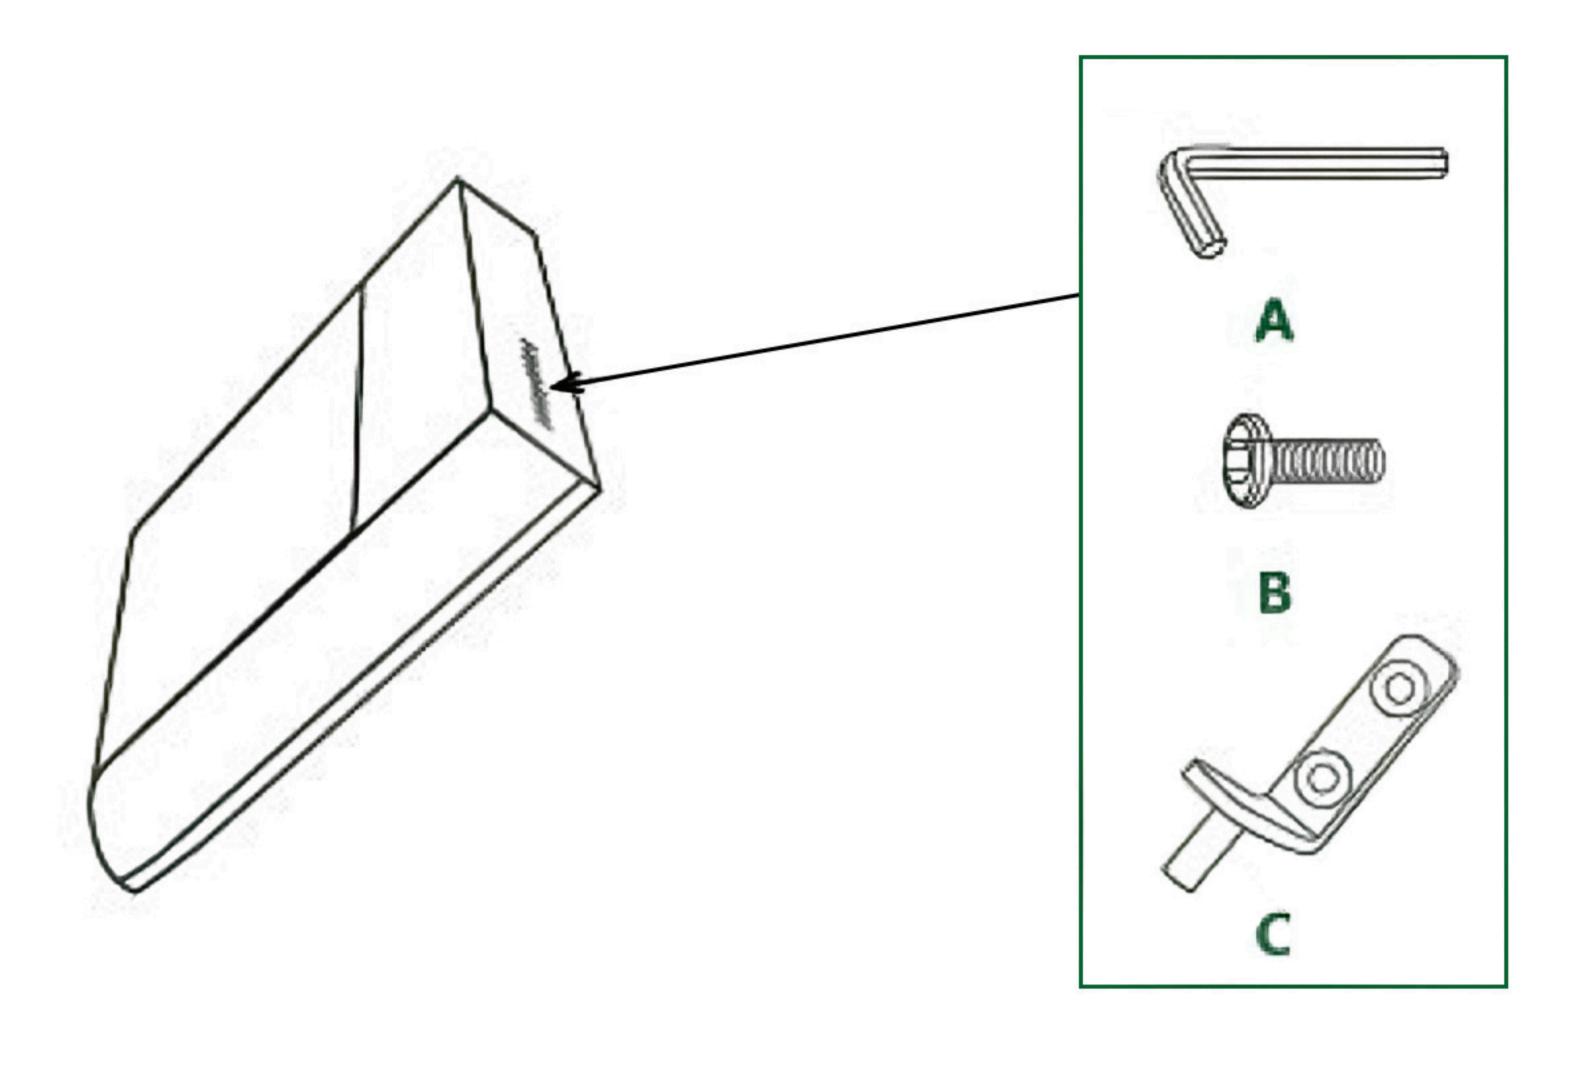


Step 2: Assemble the screw into the armrest hole.

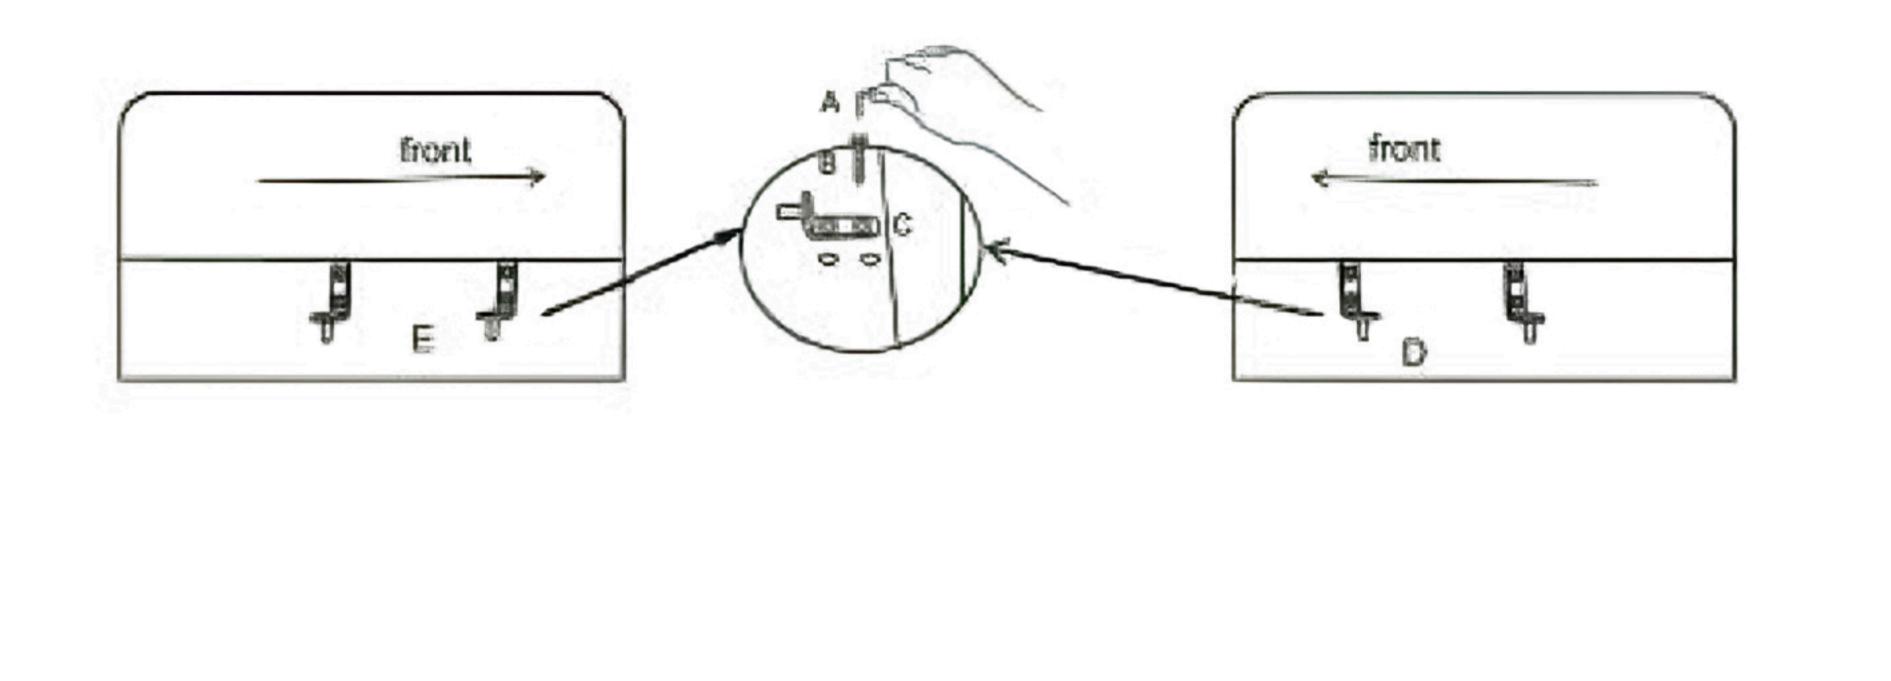




### Middle Sofa Customizable Module

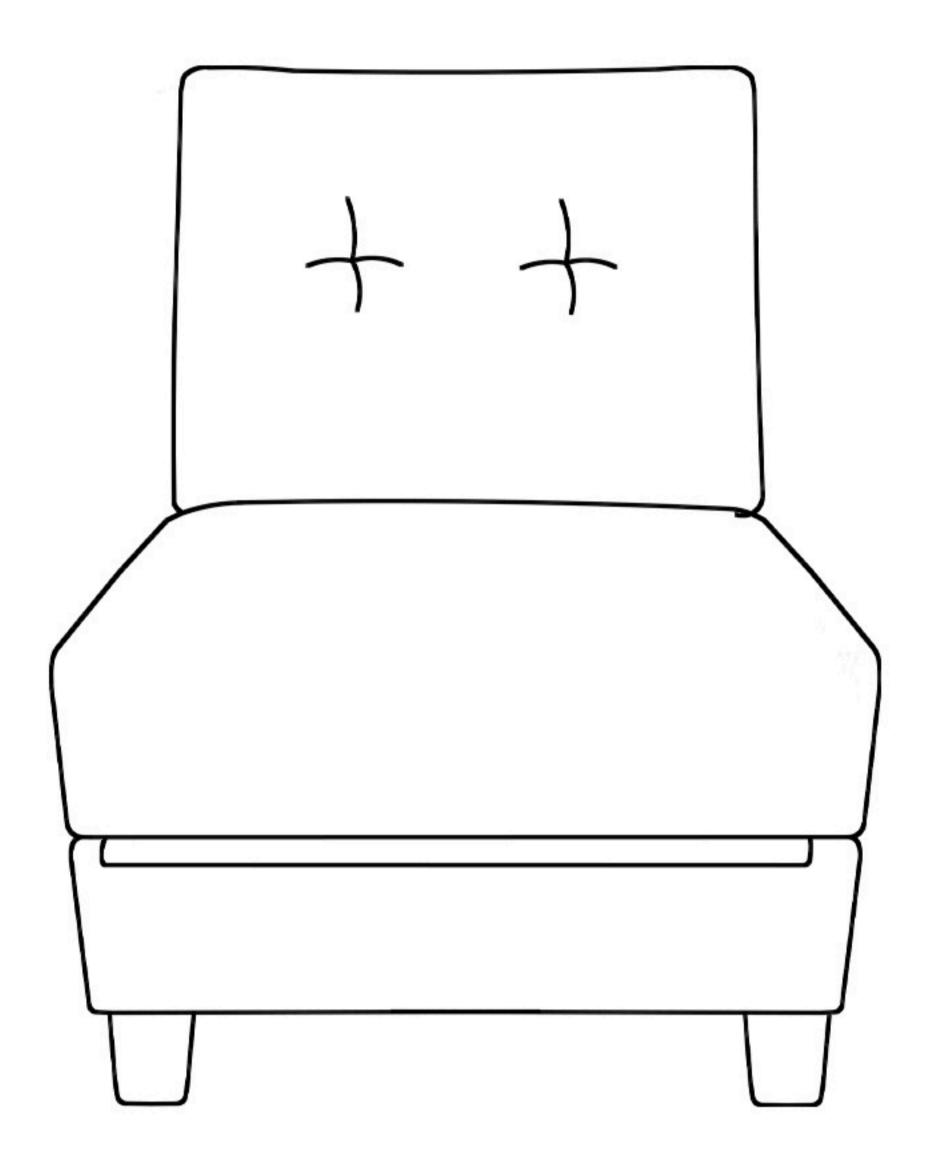


# Parts List (Checking the part lists when you get the packing--please open the)

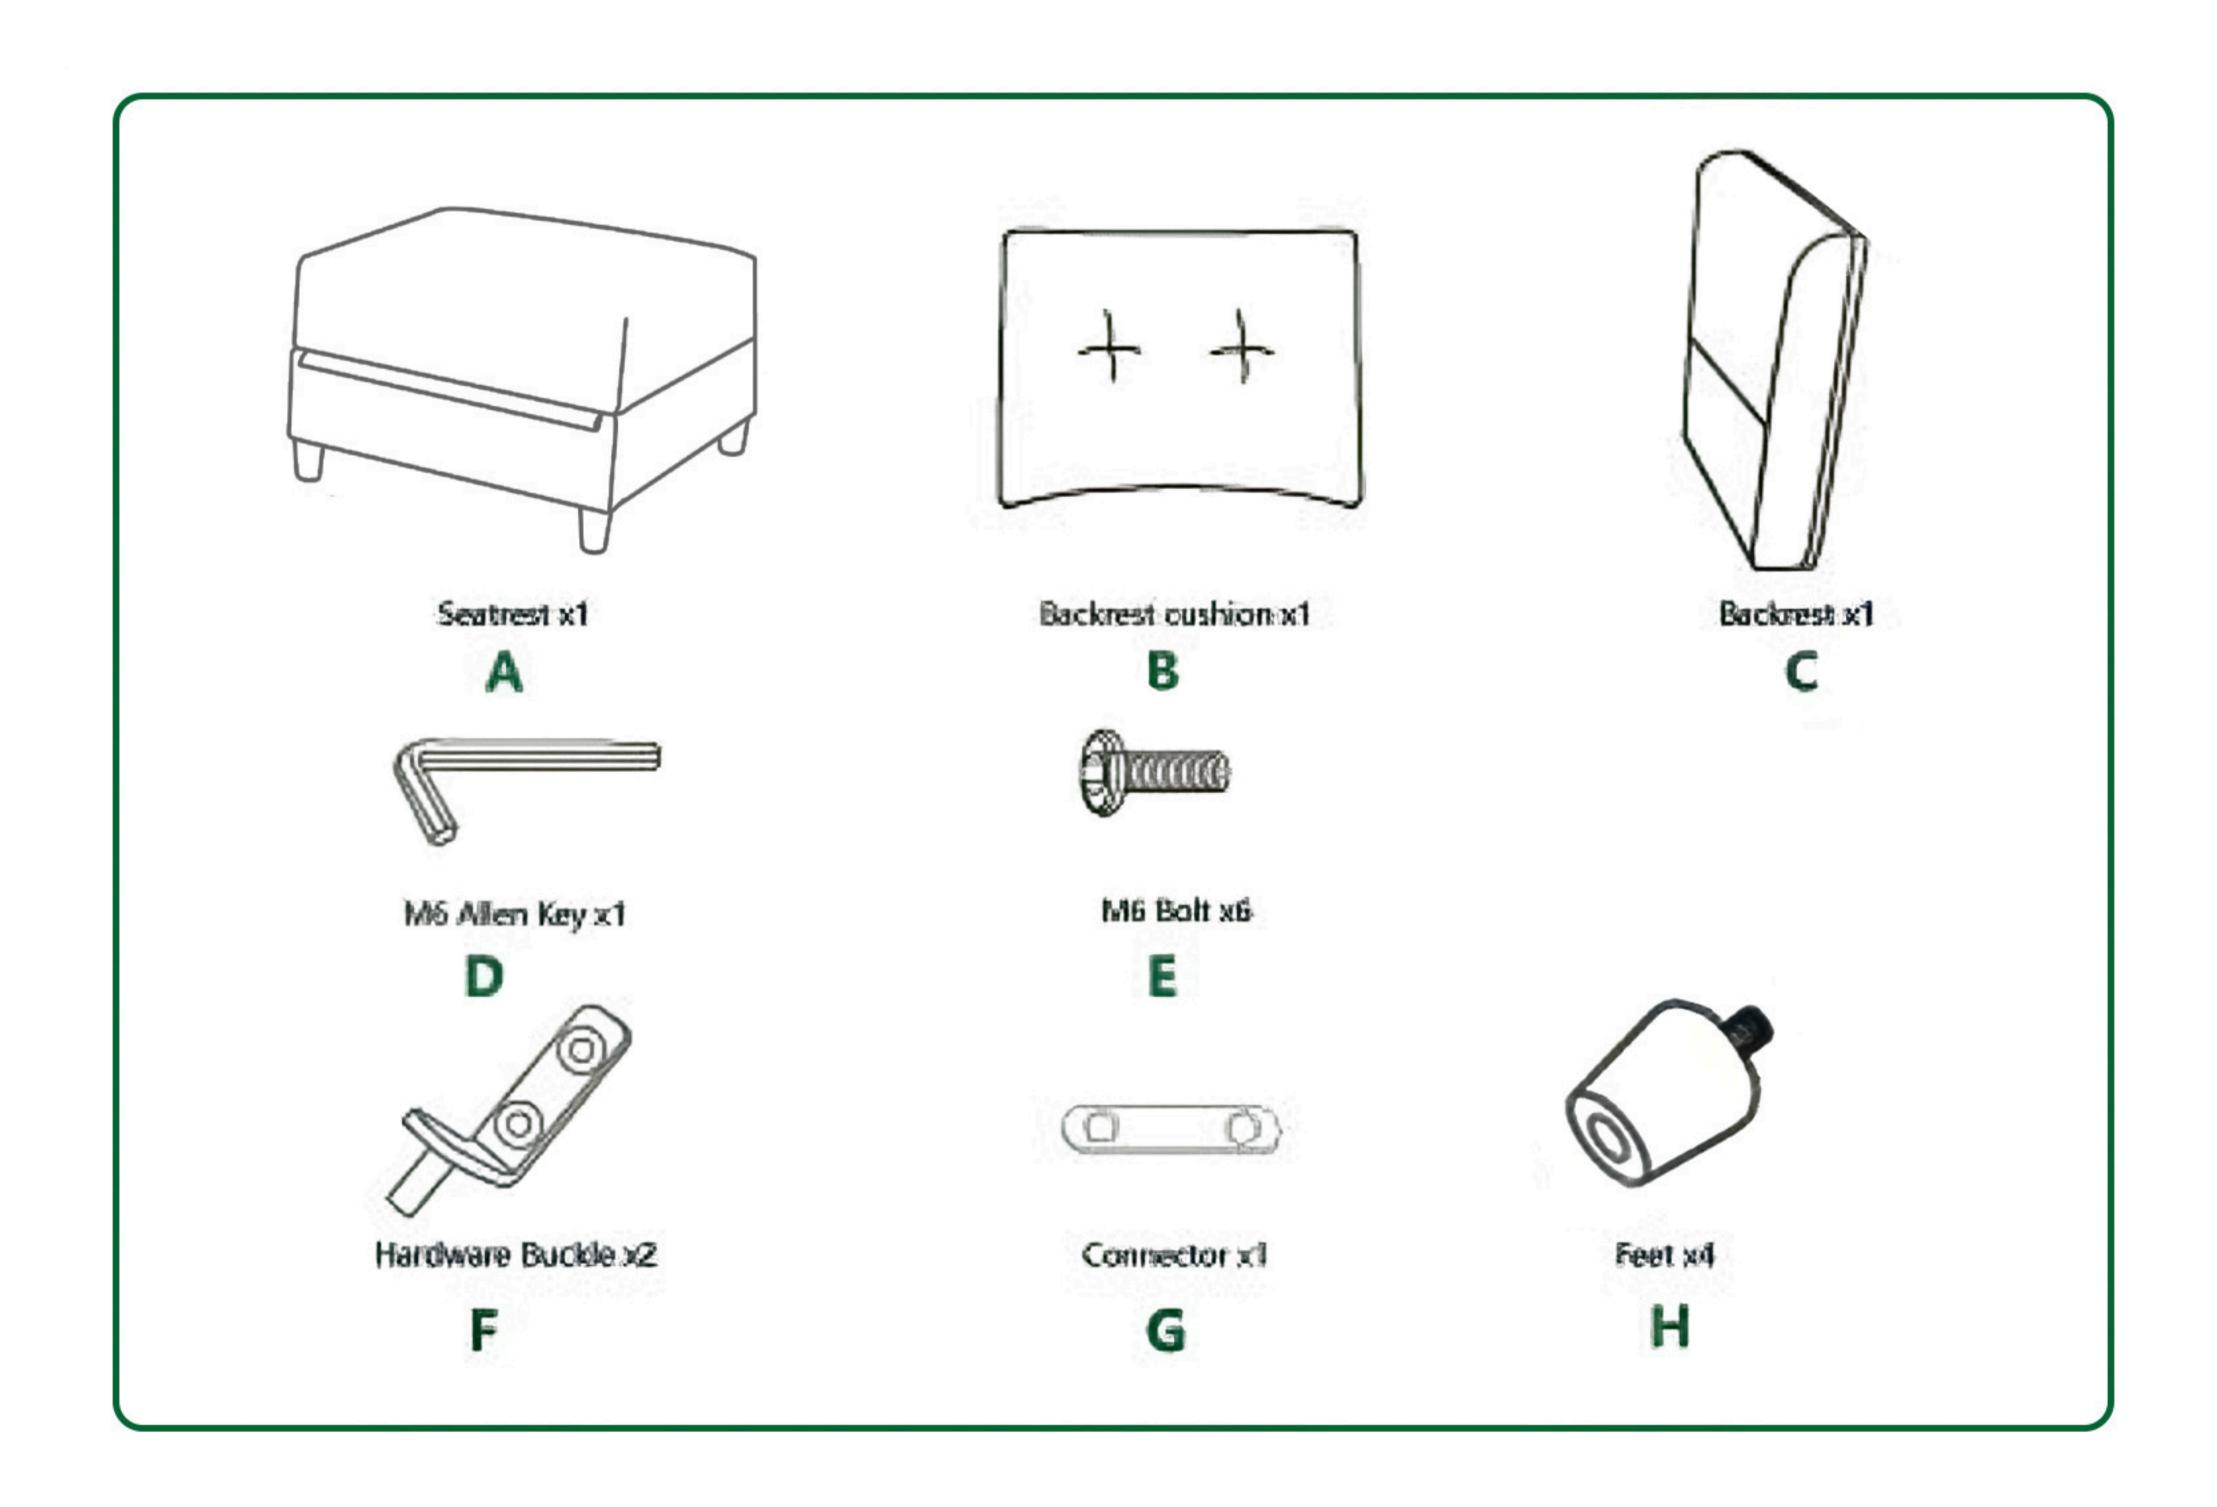




# Warning

Warning:Put one hand on the seat rest when you open it to reduce the impact fore.

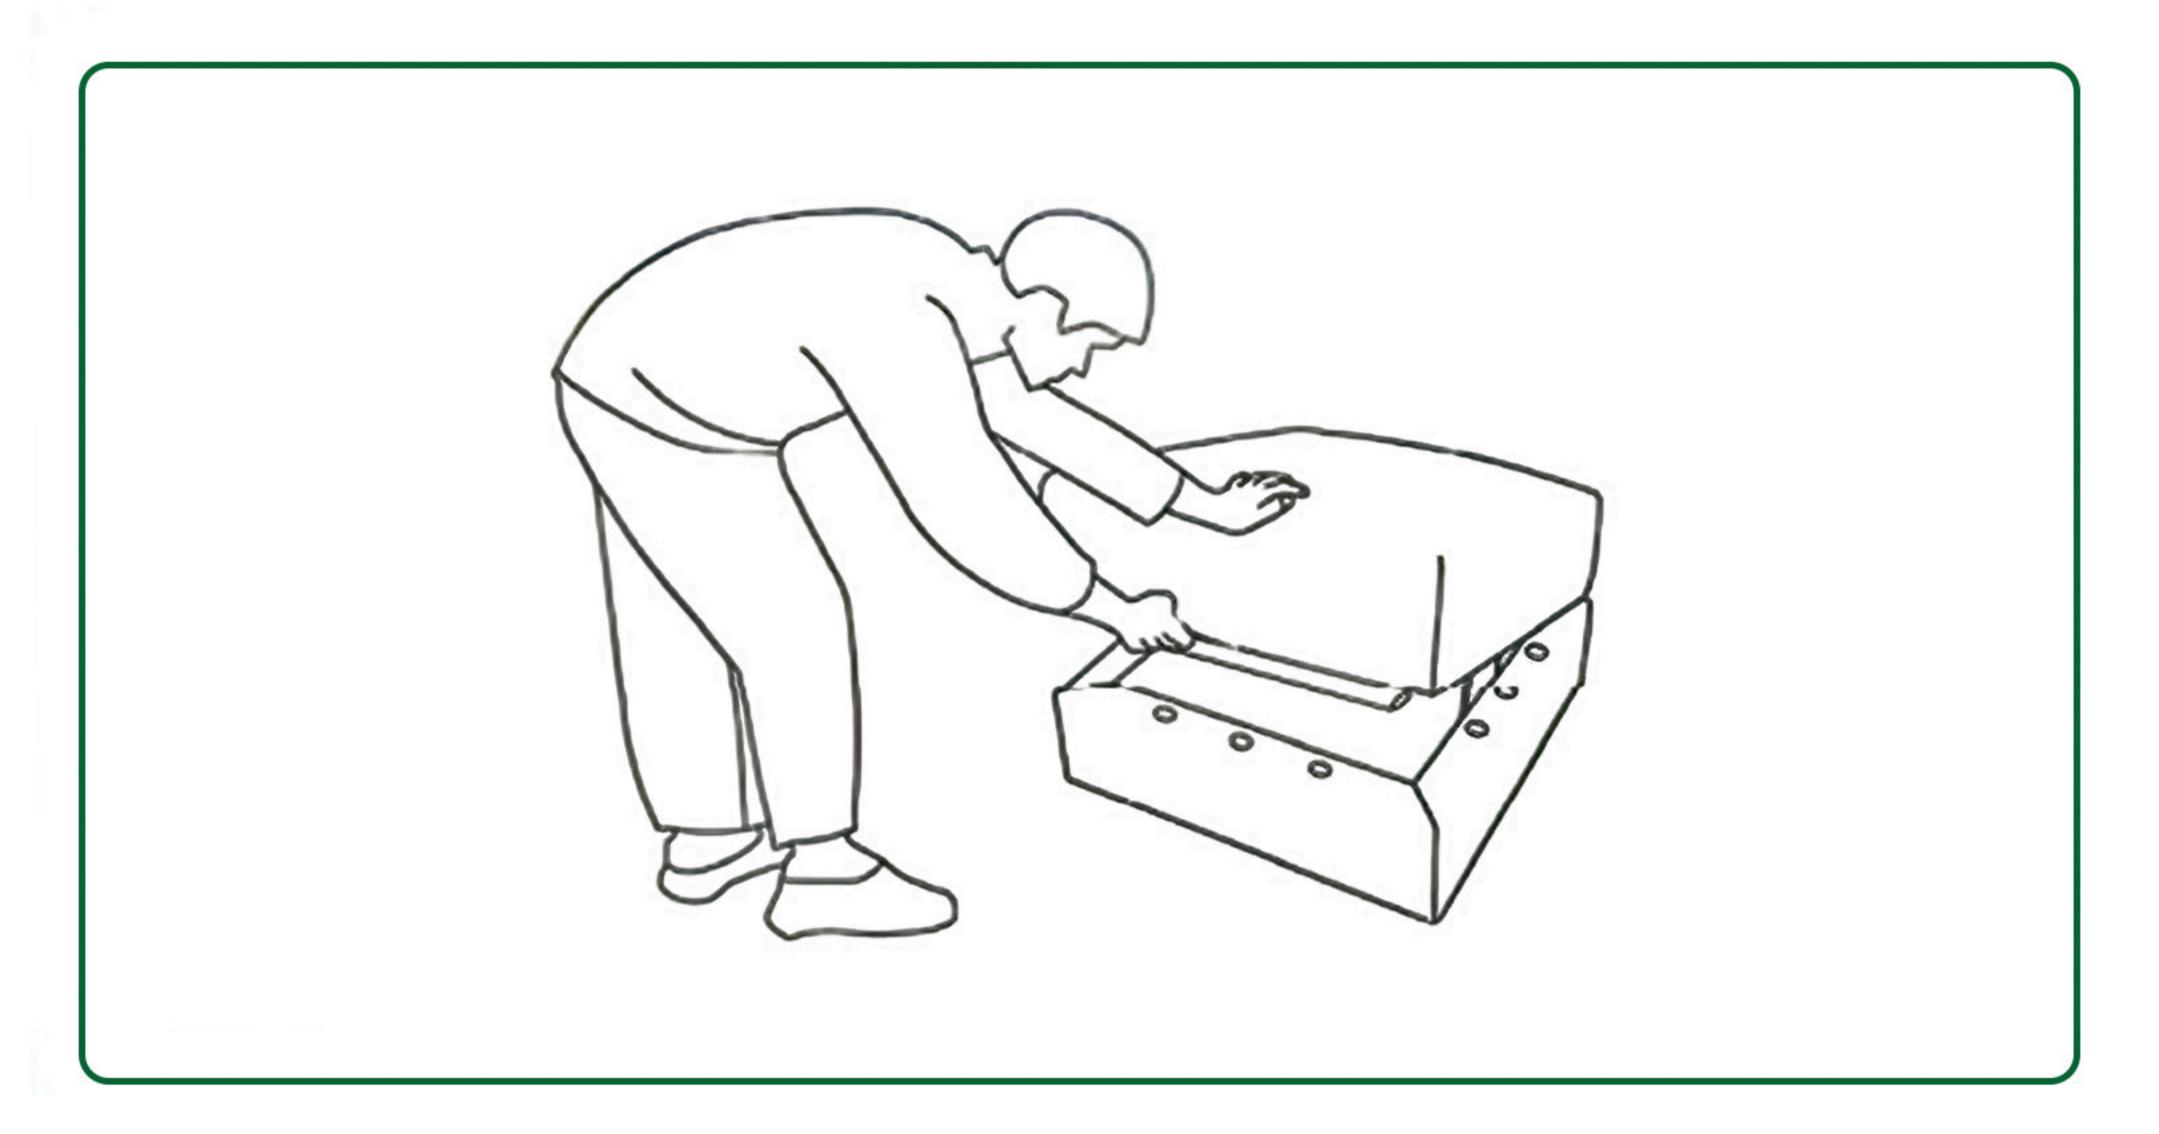


Don't put the hands into the hardware part to avoid getting injured when open and close the seat rest.

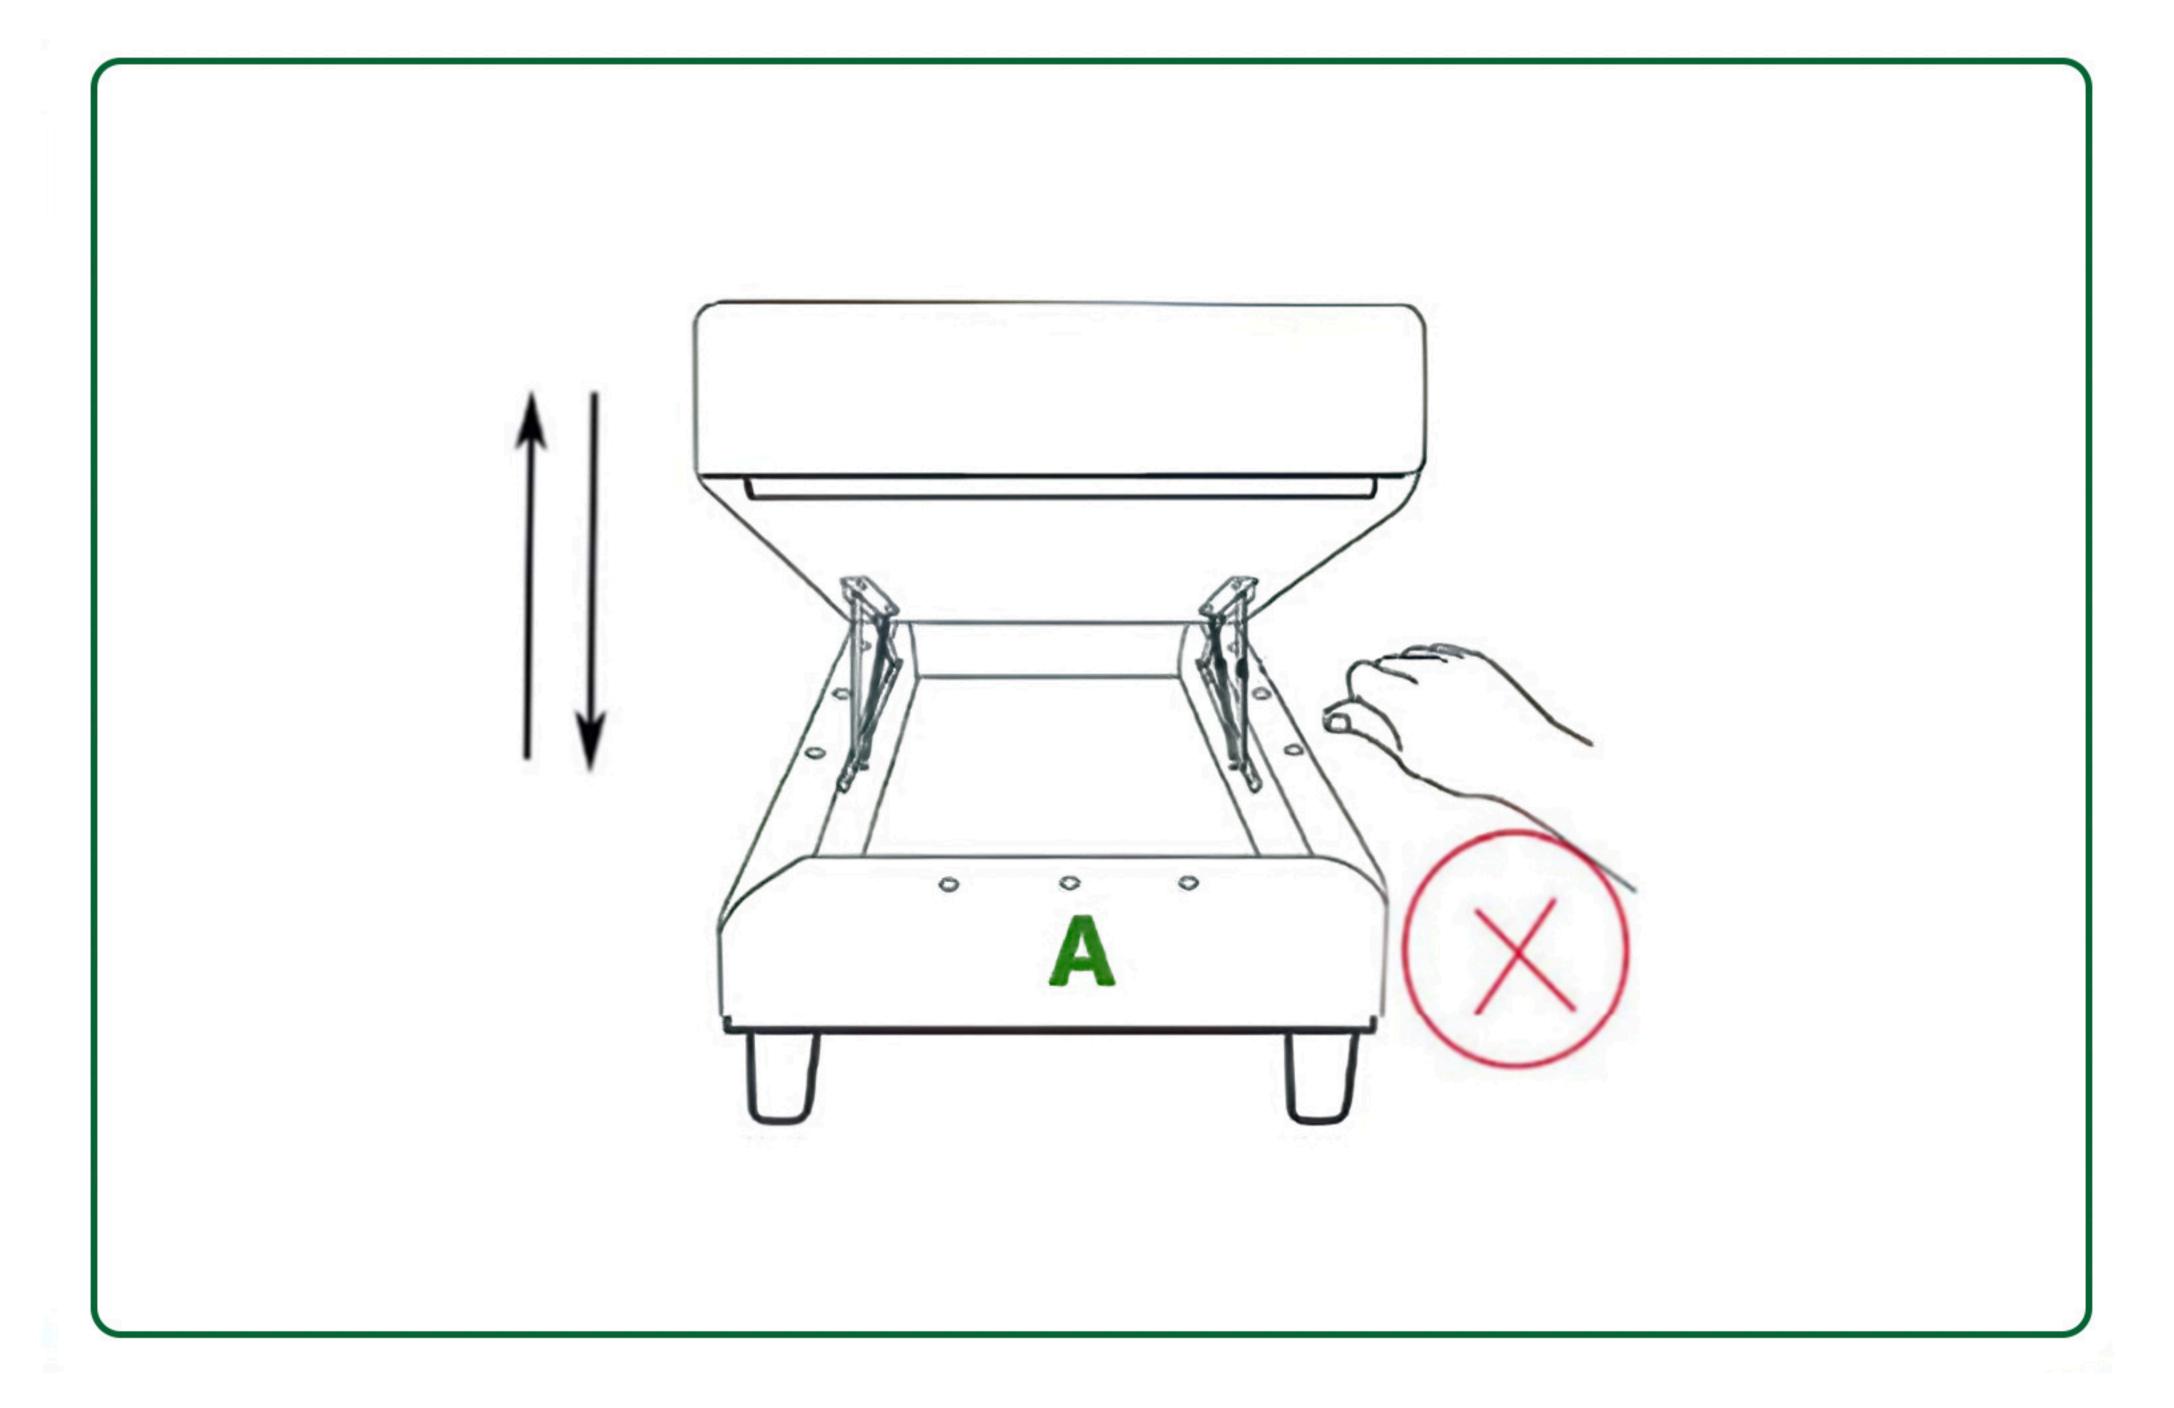




Step 1: Open the seat rest A and take out the accessories.

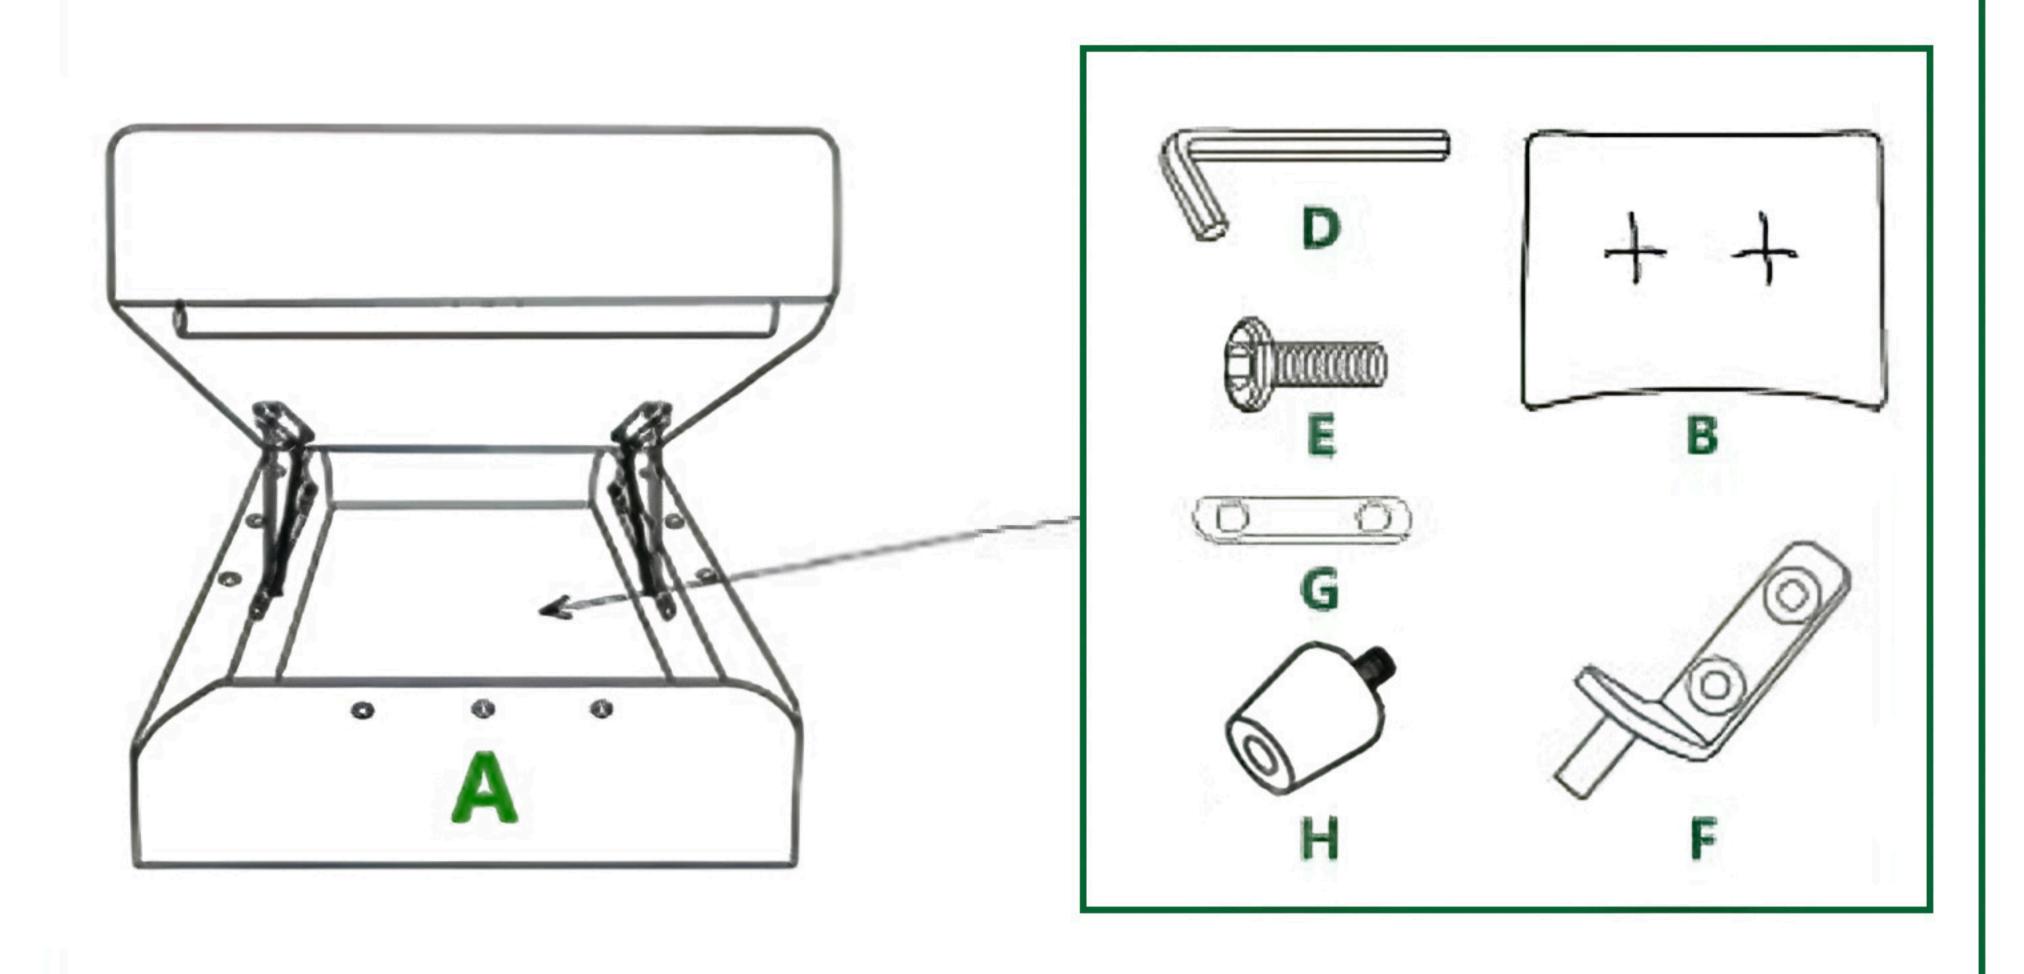


Step 2: Tighten the plastic foot clockwise.

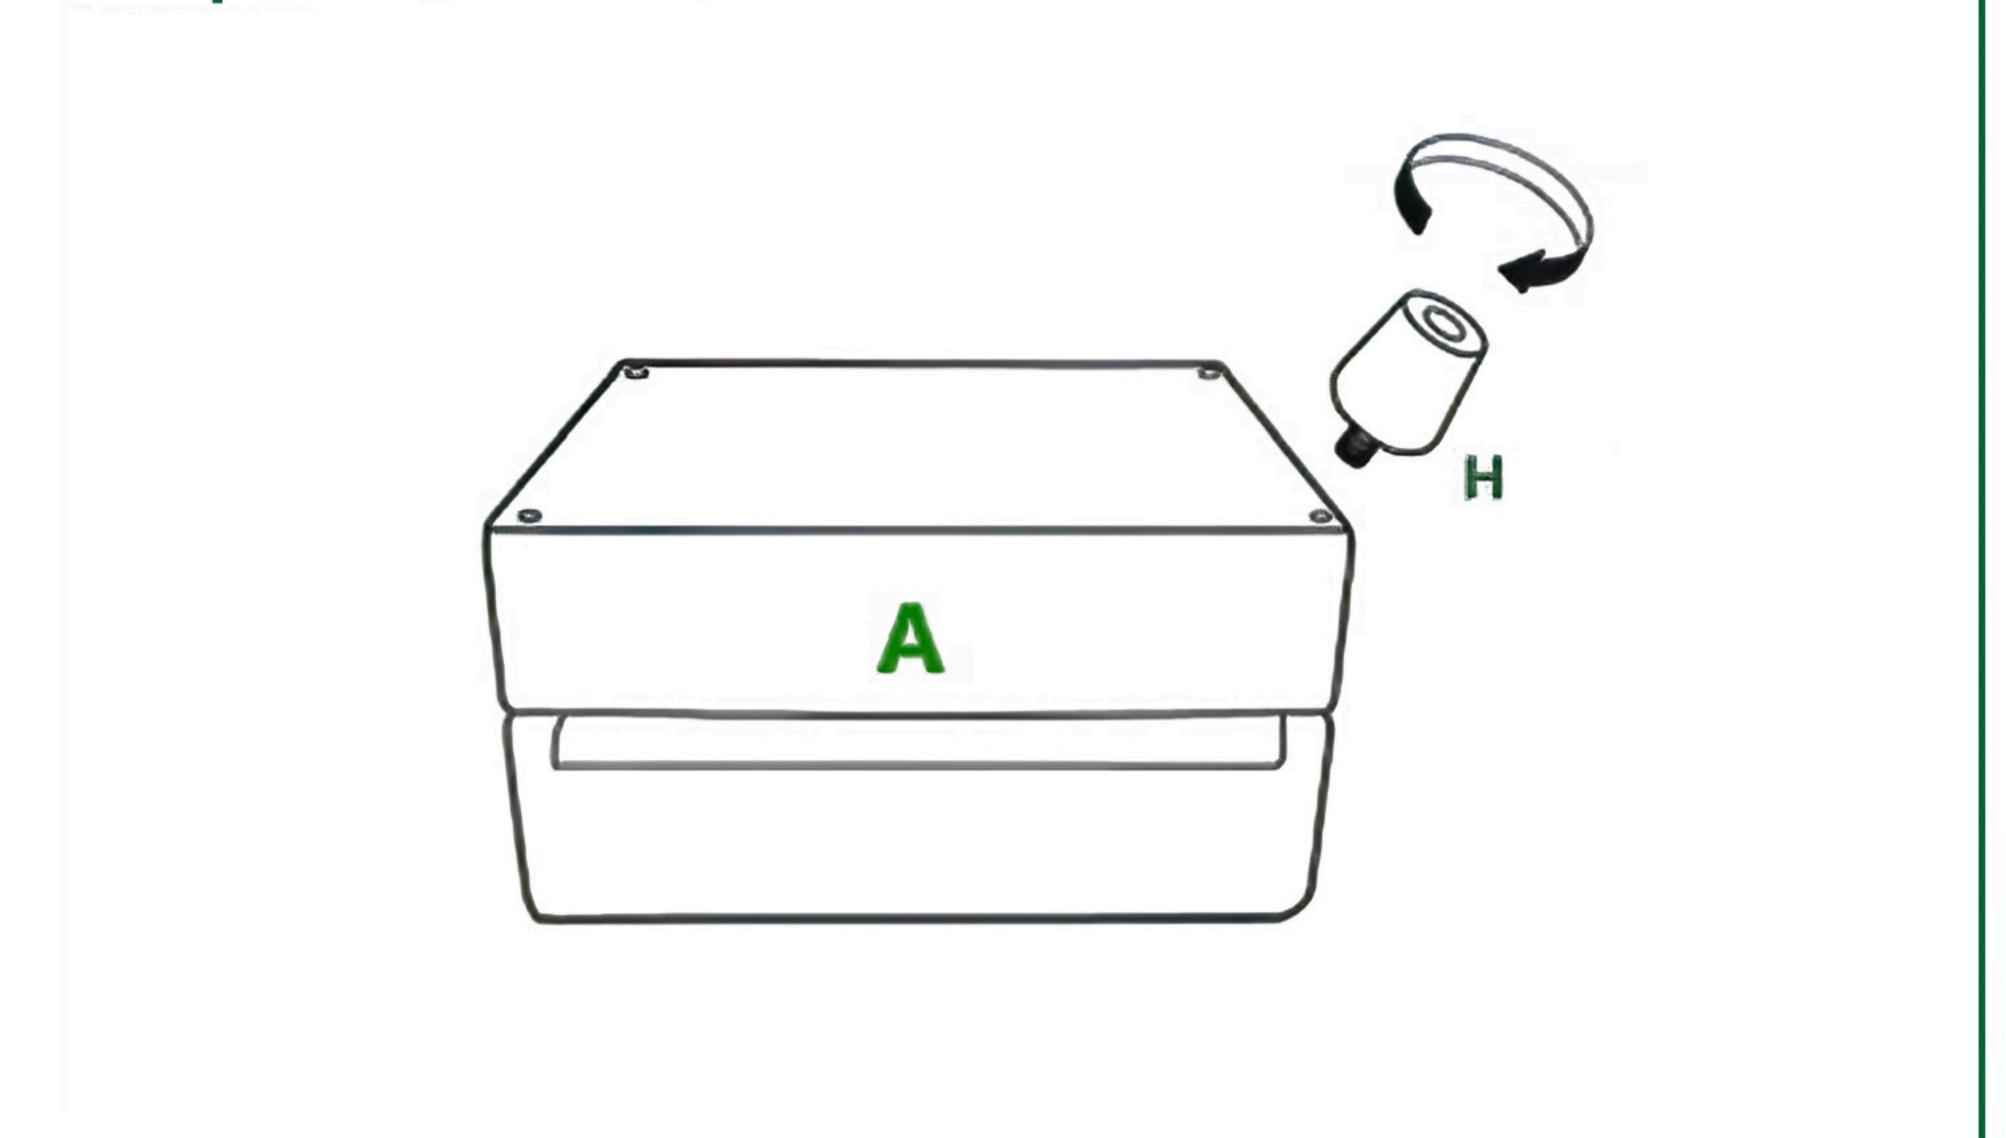




Step 3: Install and fasten the hardware buckle on the backrest.

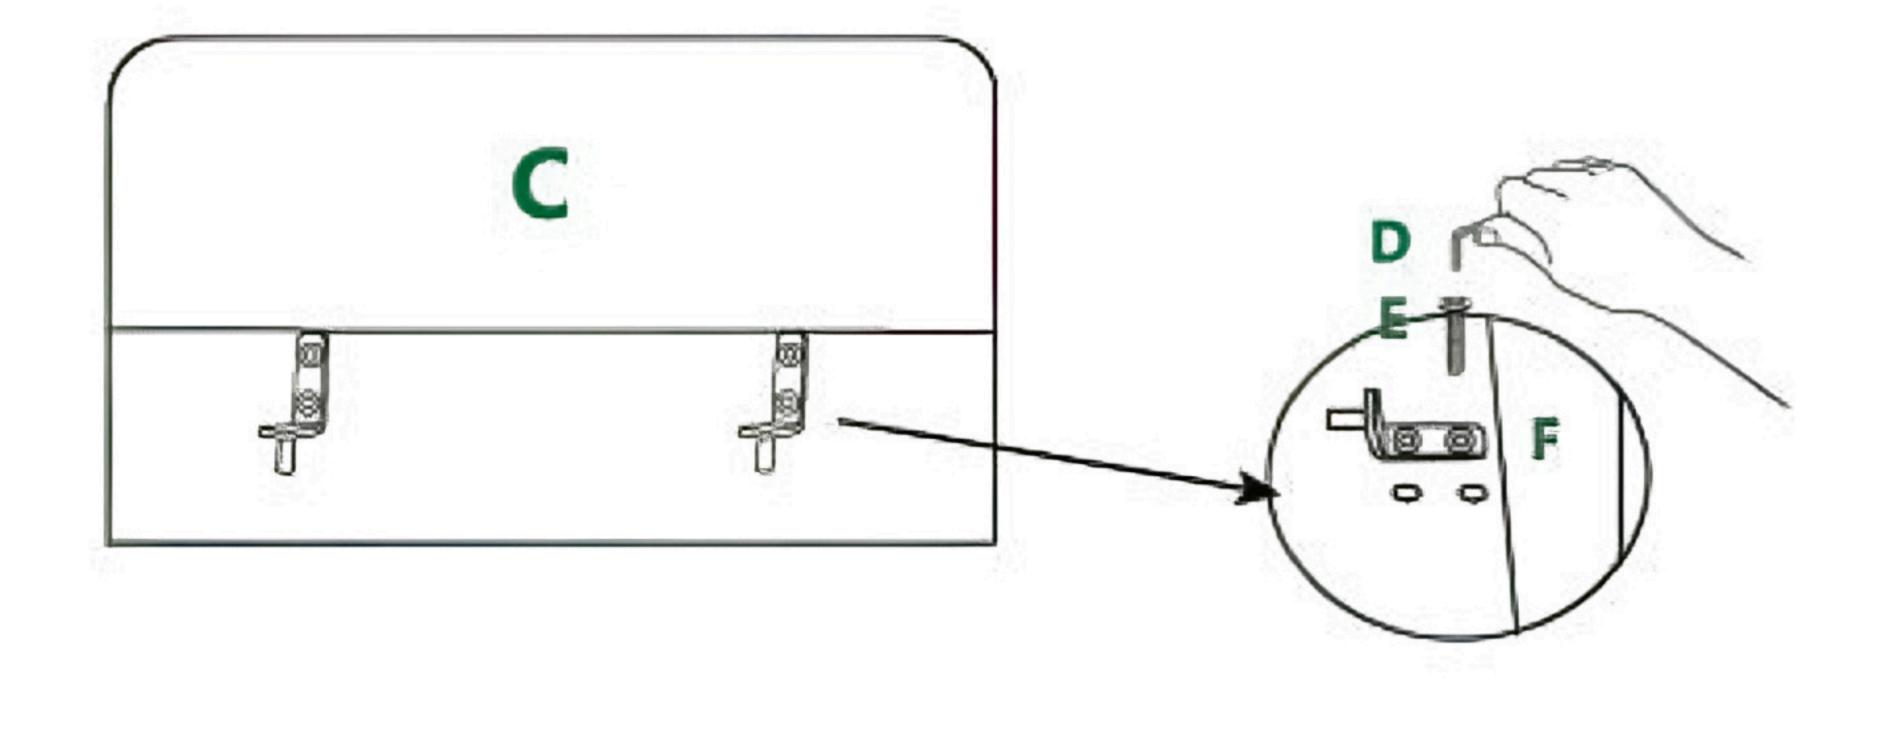


**Step 4:** Tilt the backrest and the insert it to the seat rest (make sure the buckles on backrest align with the hole site on seat rest).

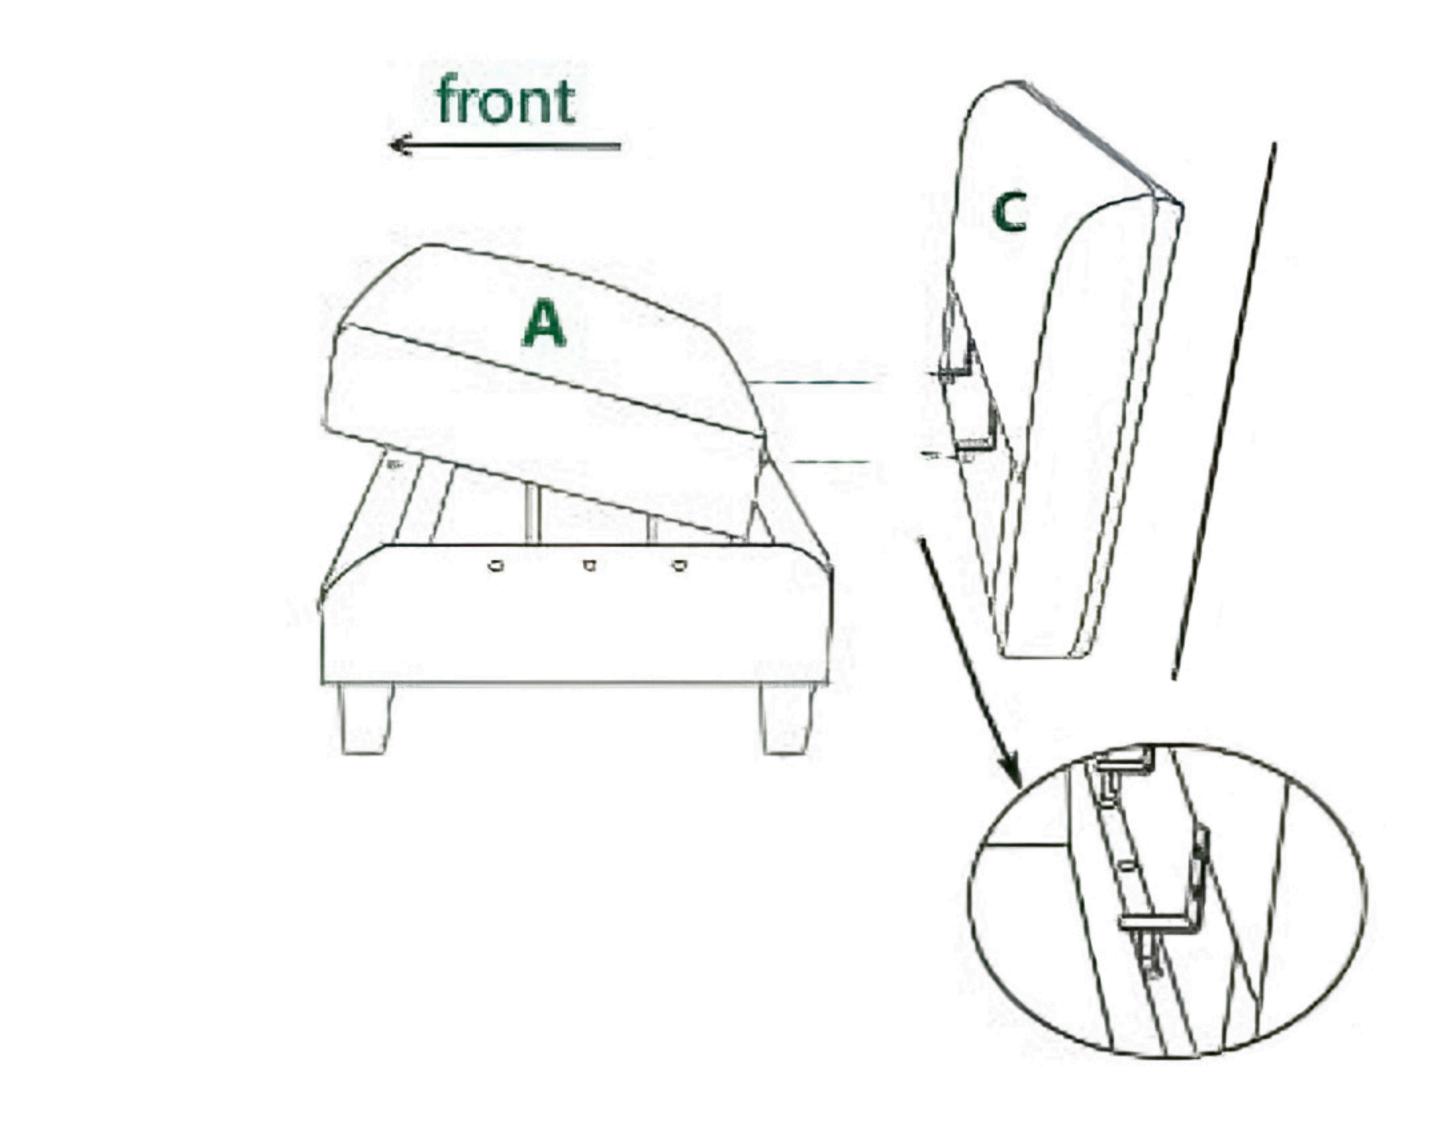




**Step 5:** Install the armrest and pay attention to the front and back direction of the armrest .

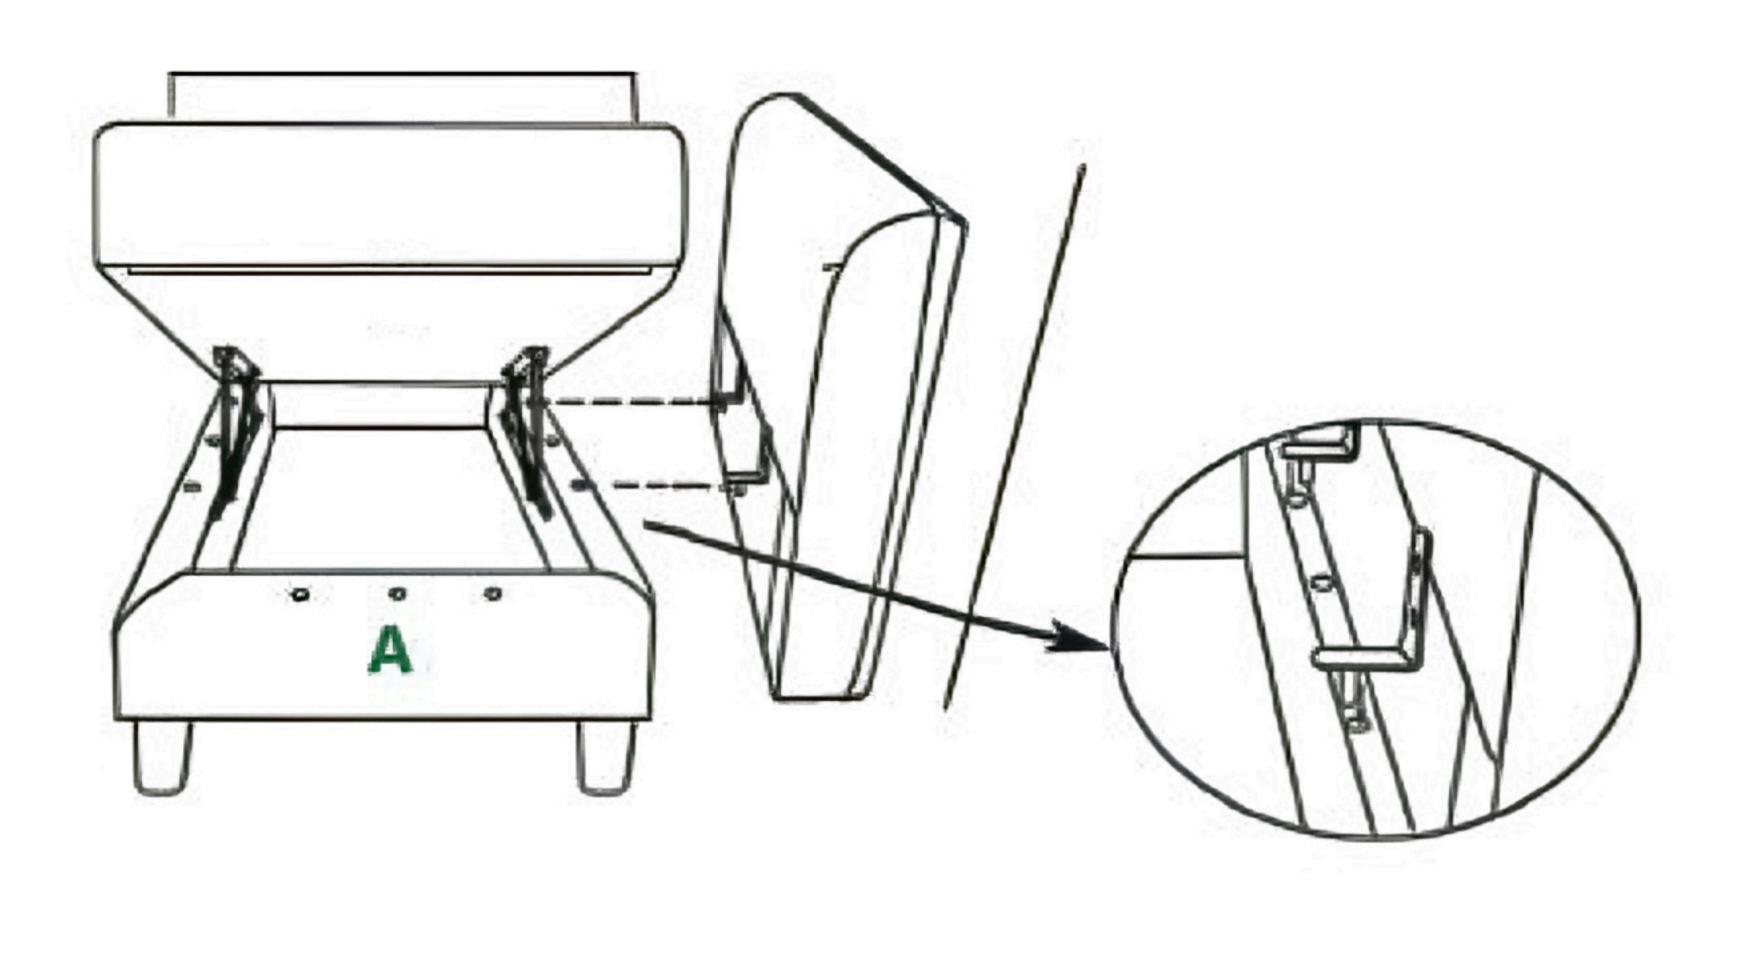

Step 6: Install the conncecting buckle.

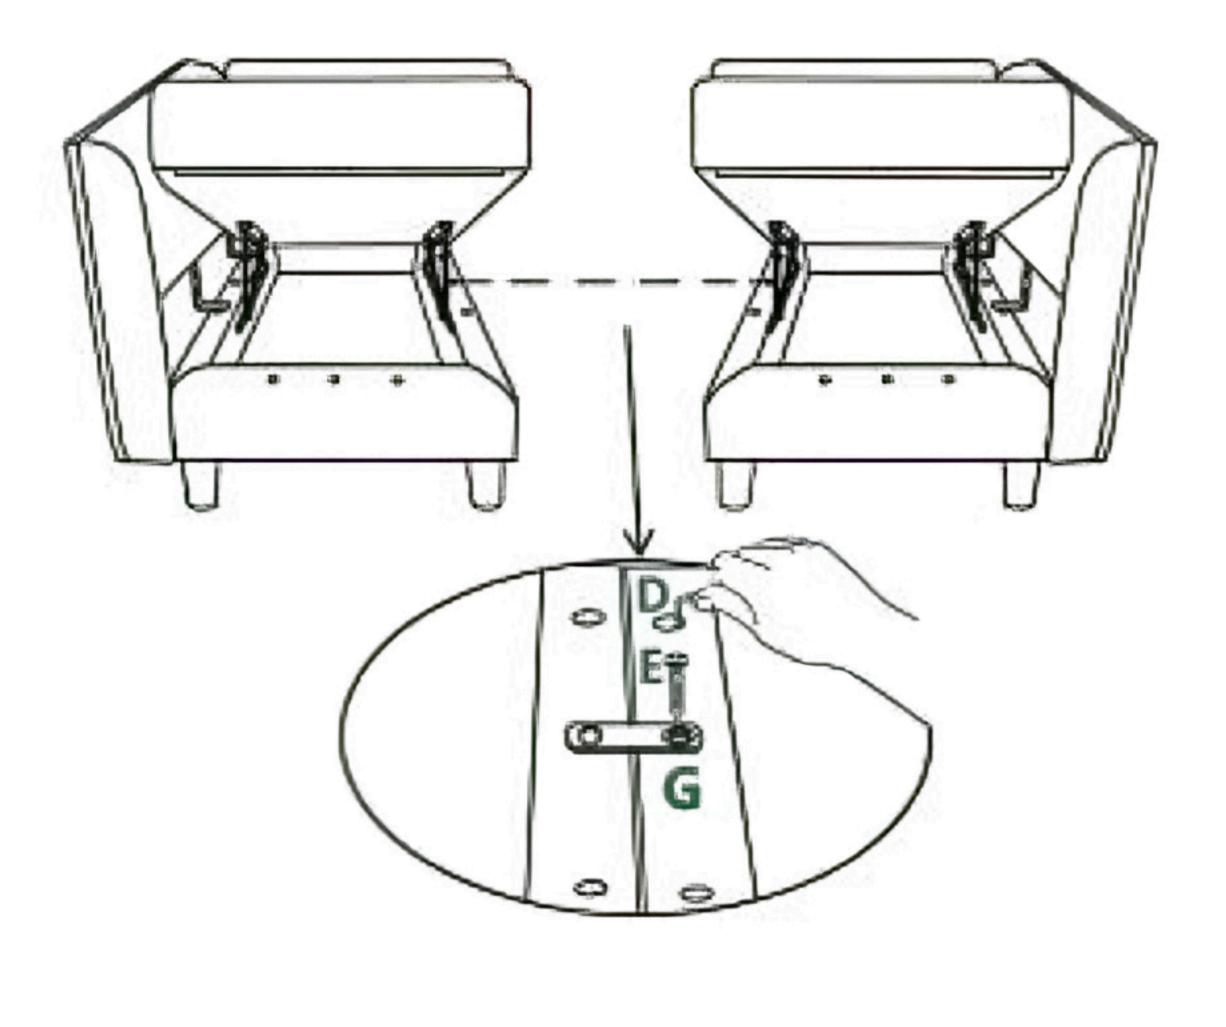




## Middle Sofa Customizable Module




# Parts List (Checking the part lists when you get the packing --please open the)

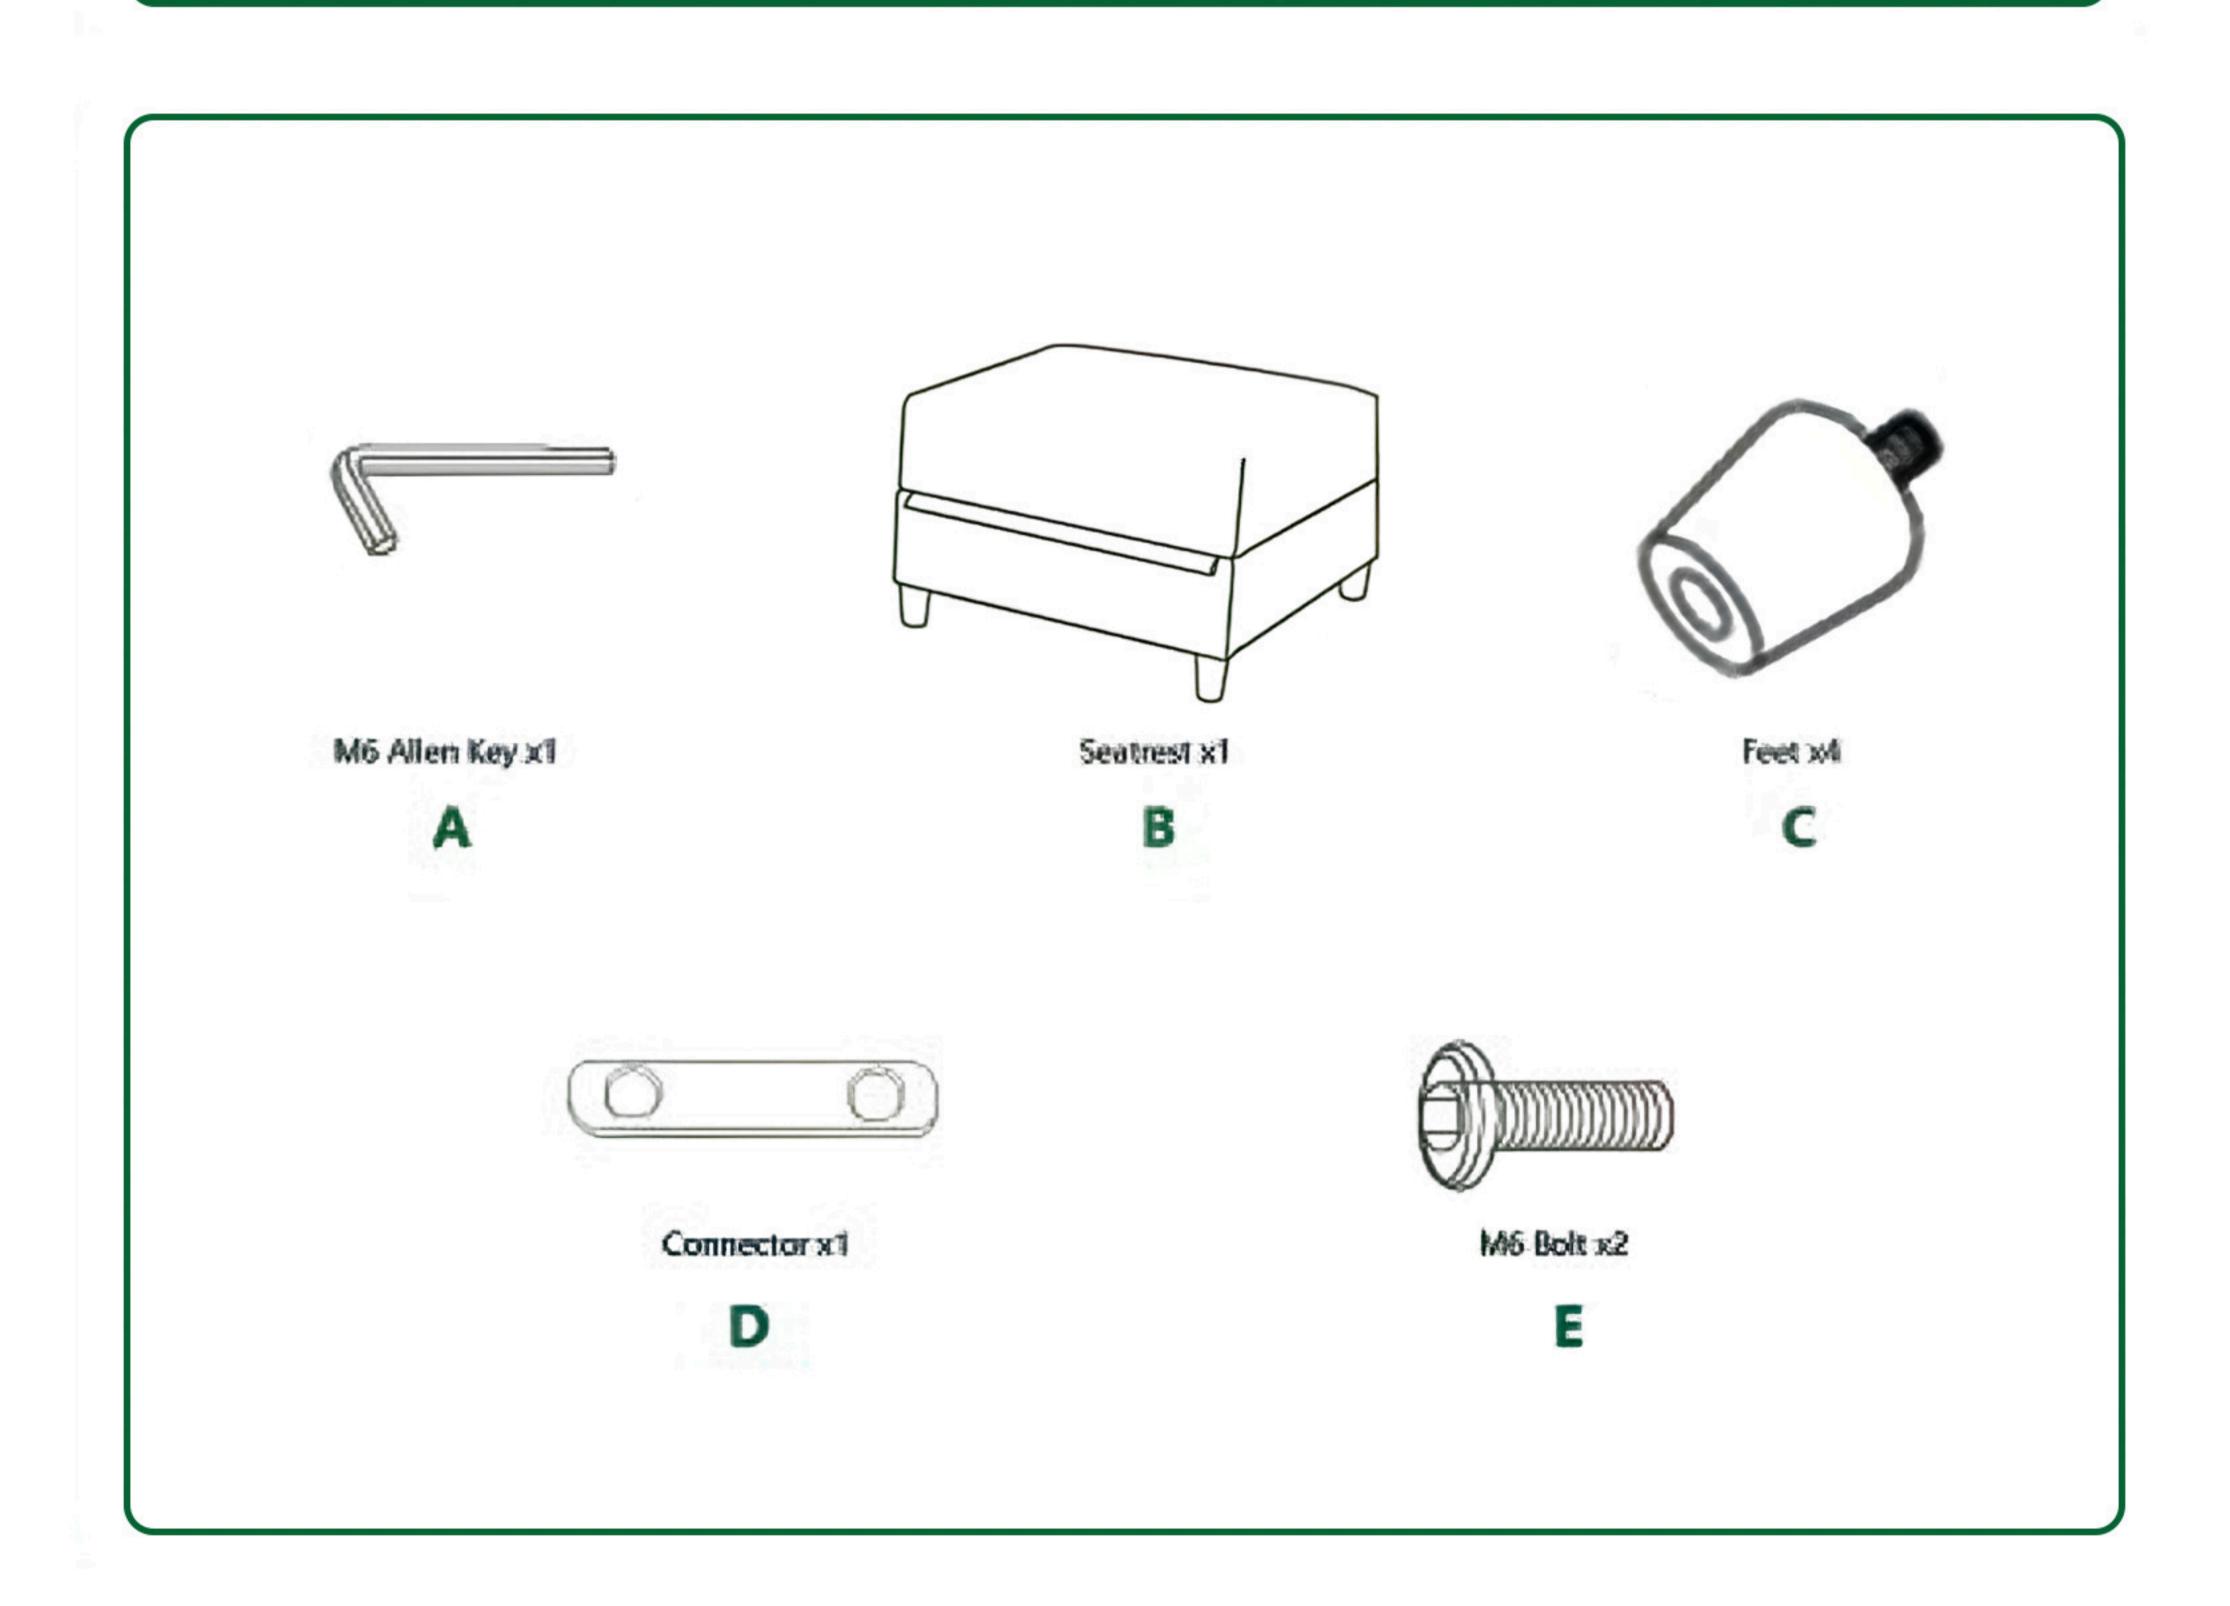




Step 1: Open the seat rest  $\boldsymbol{B}$  and take out the accessories.

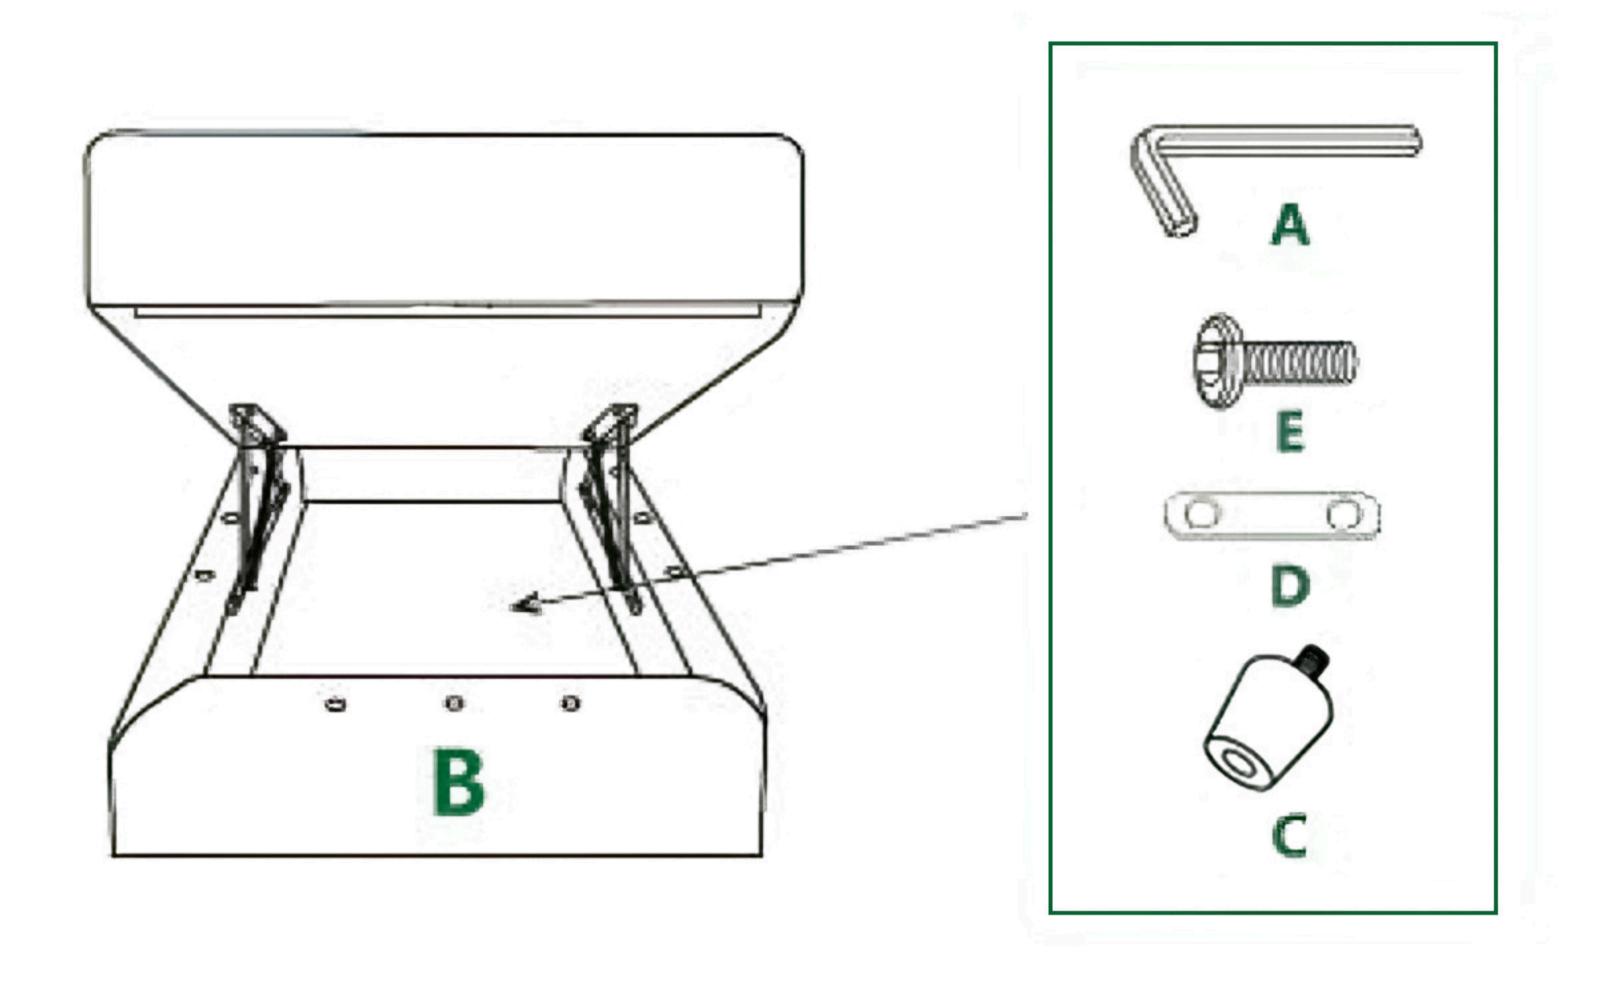

Step 2: Tighten the plastic foot clockwise.

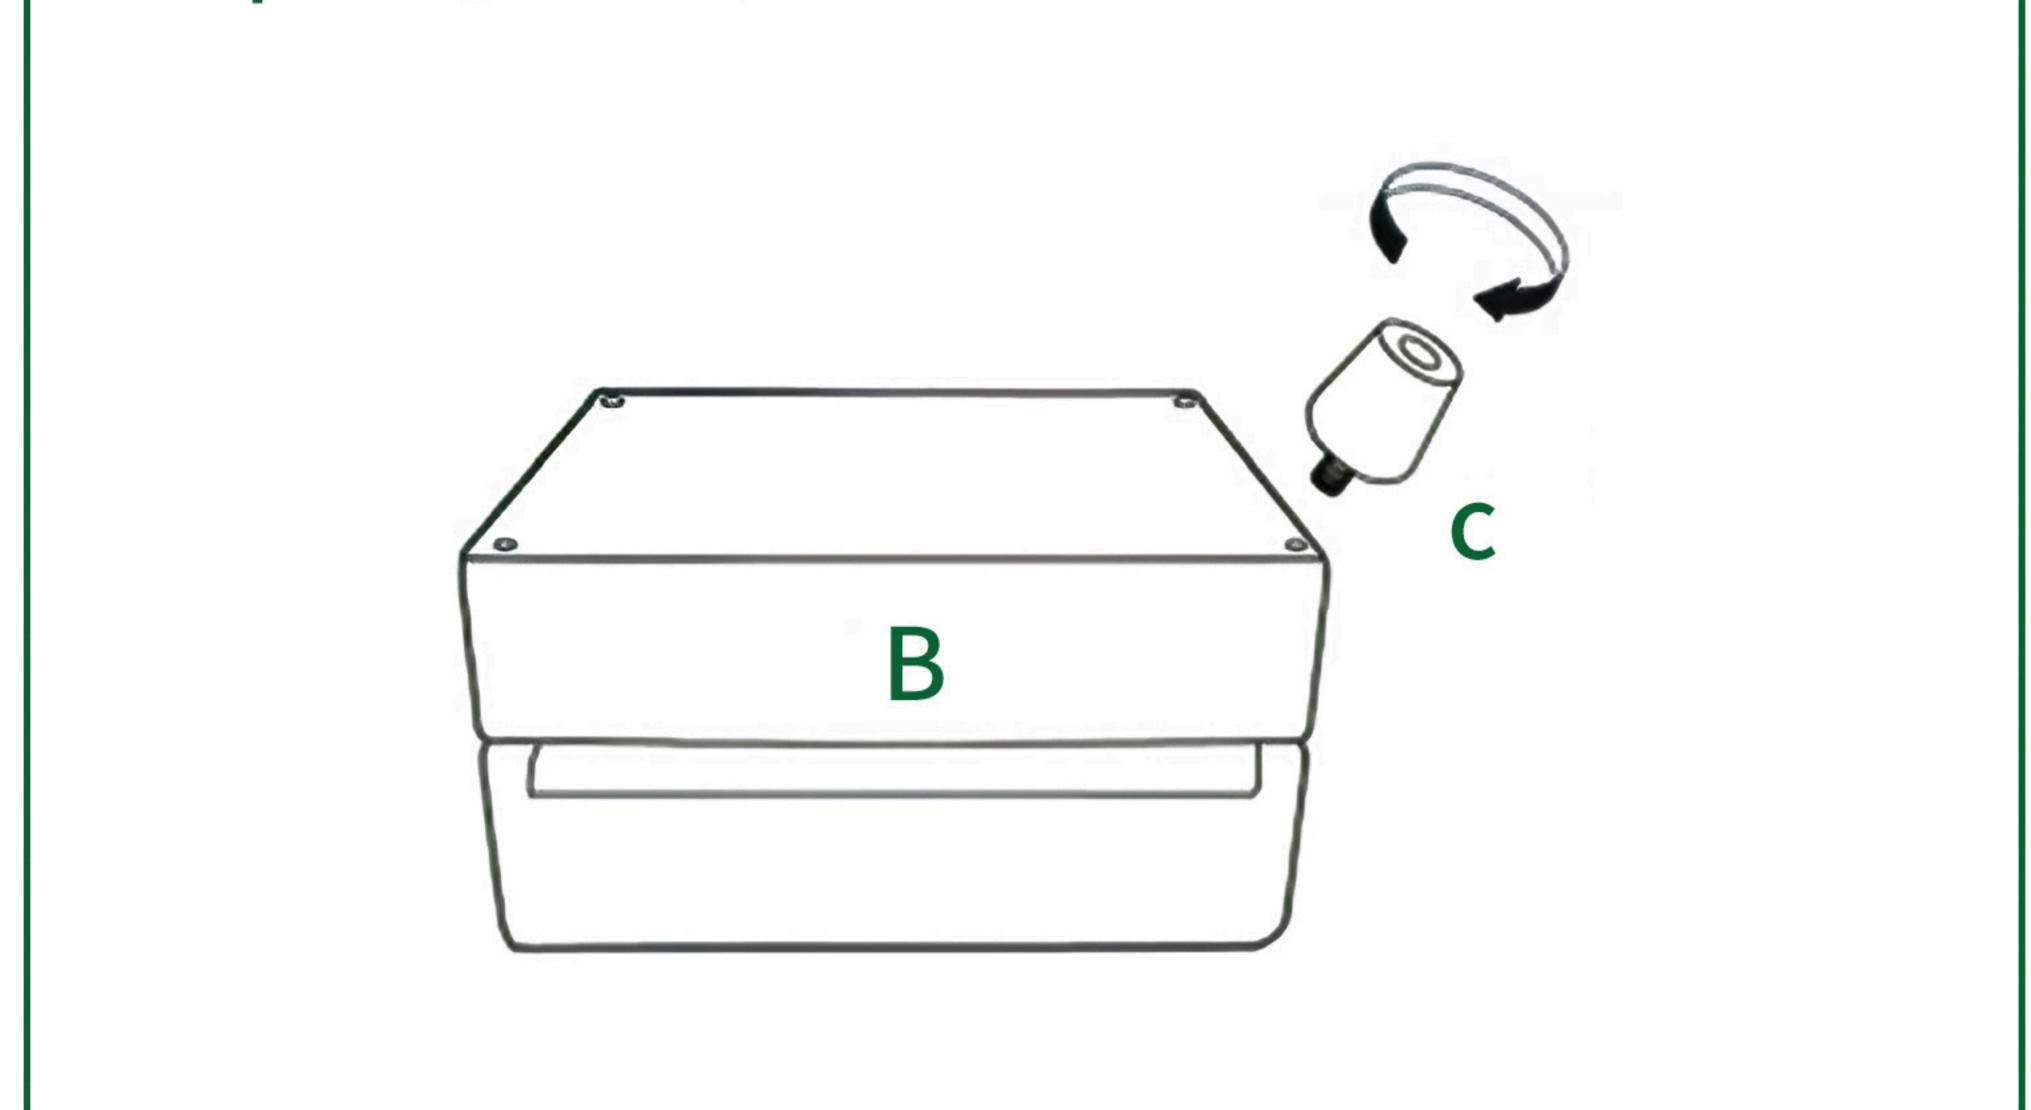



# Step 3: Install the conncecting buckle.