


# 3' Garden Bridge

## Tools Required:

- You will need a #2 Philips or Robertson driver
- For your convenience we use Recex rust resistant zinc plated hardware.


## Package Contents:

- (A) Sides...2
- (B) Foot Planks...10

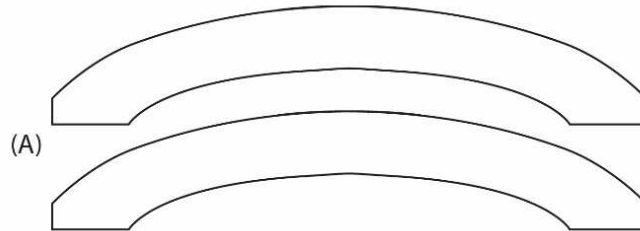


## Hardware:

- 1-3/4" Screw ...40

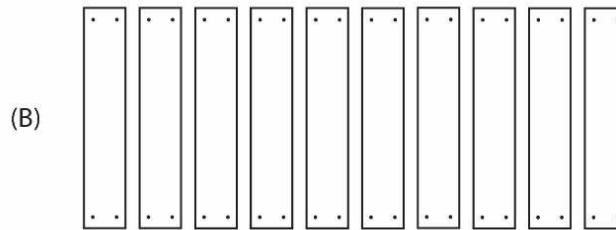

## STEP 1. Align Sides

- Use a foot plank (B) to make sides parallel at 35 inches apart (outside edge to outside edge).
- Attach a foot plank to both ends using 1-3/4-inch screws.

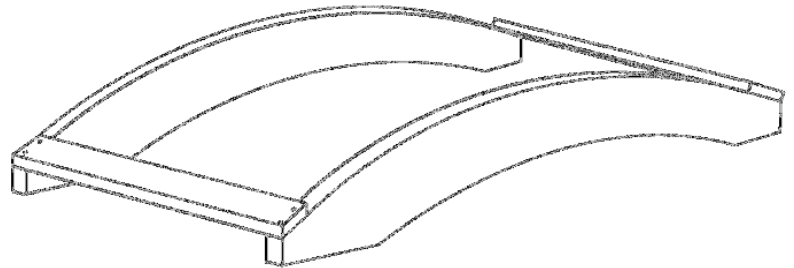

## STEP 2. Attach Foot Planks

- Layout the remaining foot planks across sides.
- Create uniform spacing between each plank and attach using 1-3/4-inch screws.

