

ASSEMBLY INSTRUCTIONS



Fine Furniture for every stage of life

(B1&B2)QueenBed

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME





20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC	C	RIGHT HEADBOARD LEG		1PC
B	LEFT HEADBOARD LEG		1PC				

B1 (BOX 2)

D	FOOTBOARD PANEL		1PC	H	BED SLAT		4PCS
E	FOOTBOARD LEG		2PCS	I	BED SLAT SUPPORT WITH LEVELER		4PCS
F	LEFT SIDE RAIL		1PC	J	USB PLUG		1PC
G	RIGHT SIDE RAIL		1PC				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED


1	BOLT 1 (M8 x 20MM - RBW)		8PCS	6	FLAT WASHER (M6 x 19MM - RBW)		6PCS
2	BOLT 2 (M6 x 35MM - RBW)		4PCS	7	WOOD DOWEL (M4 x 30MM - BLK)		2PCS
3	BOLT 3 (M6 x 50MM - RBW)		6PCS	8	FLAT HEAD SCREW (M4 x 32MM - BLK)		8PCS
4	BOLT 4 (M6 x 70MM - RBW)		2PCS	9	BIG ALLEN WRENCH (M5 x 65MM)		1 PC
5	LOCK WASHER (M6 x 12MM - RBW)		6PCS	10	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however , manufacturer does not provided this item.


ASSEMBLY INSTRUCTIONS

STEP 1

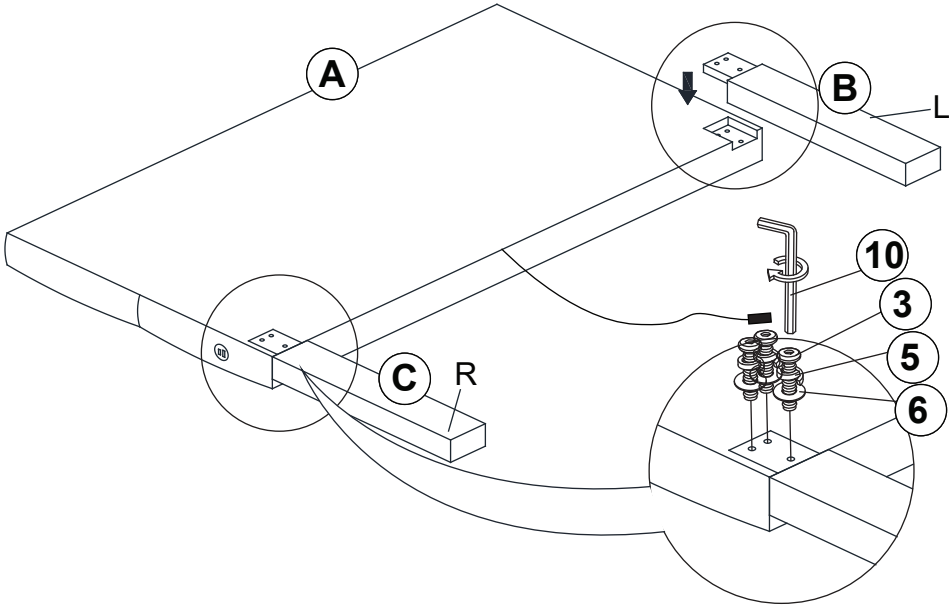


*BACK VIEW

STEP 2

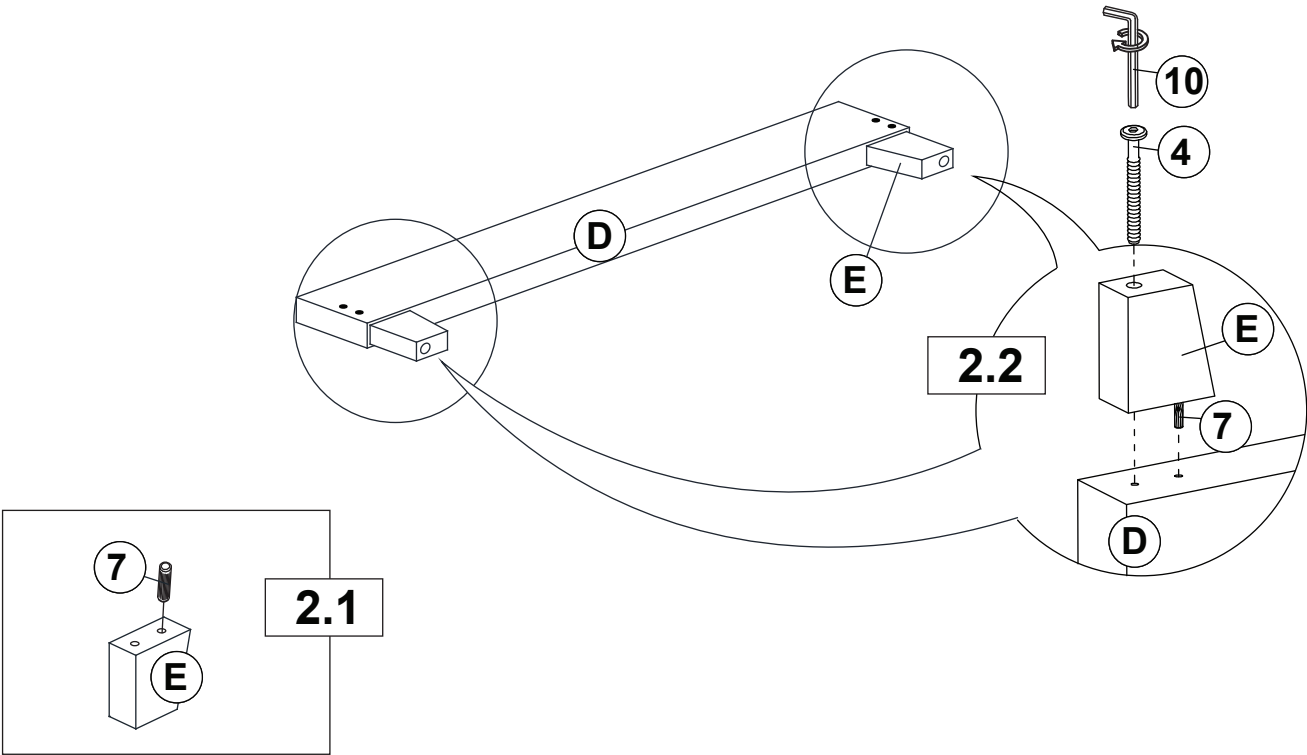


ASSEMBLY INSTRUCTIONS

STEP 3

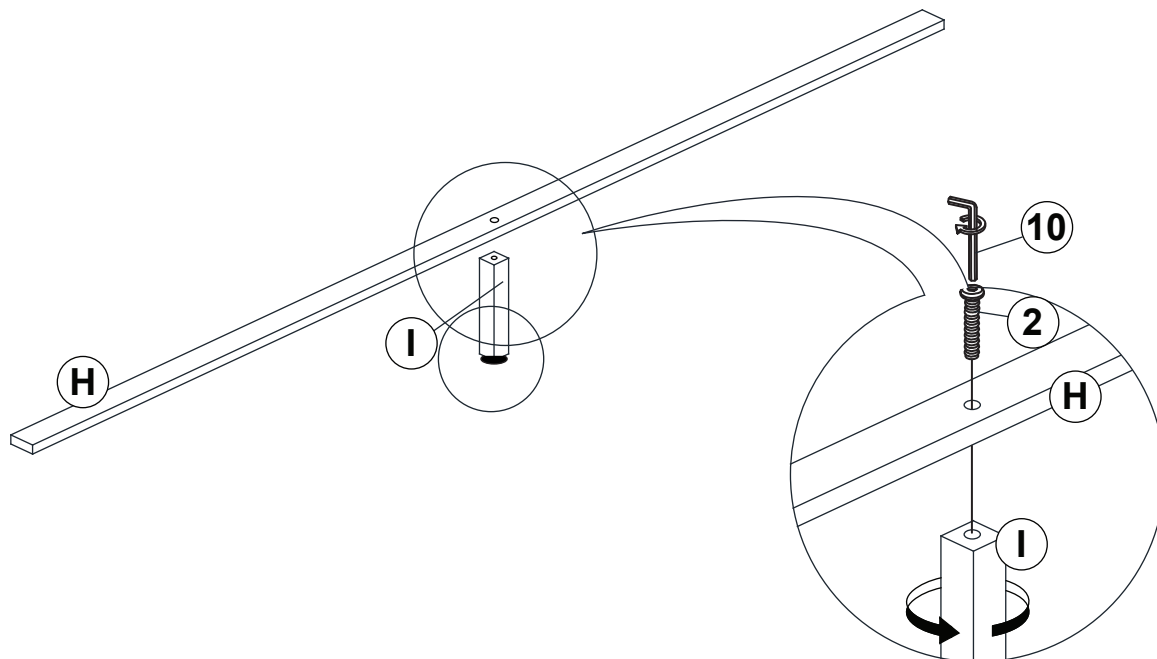


STEP 4

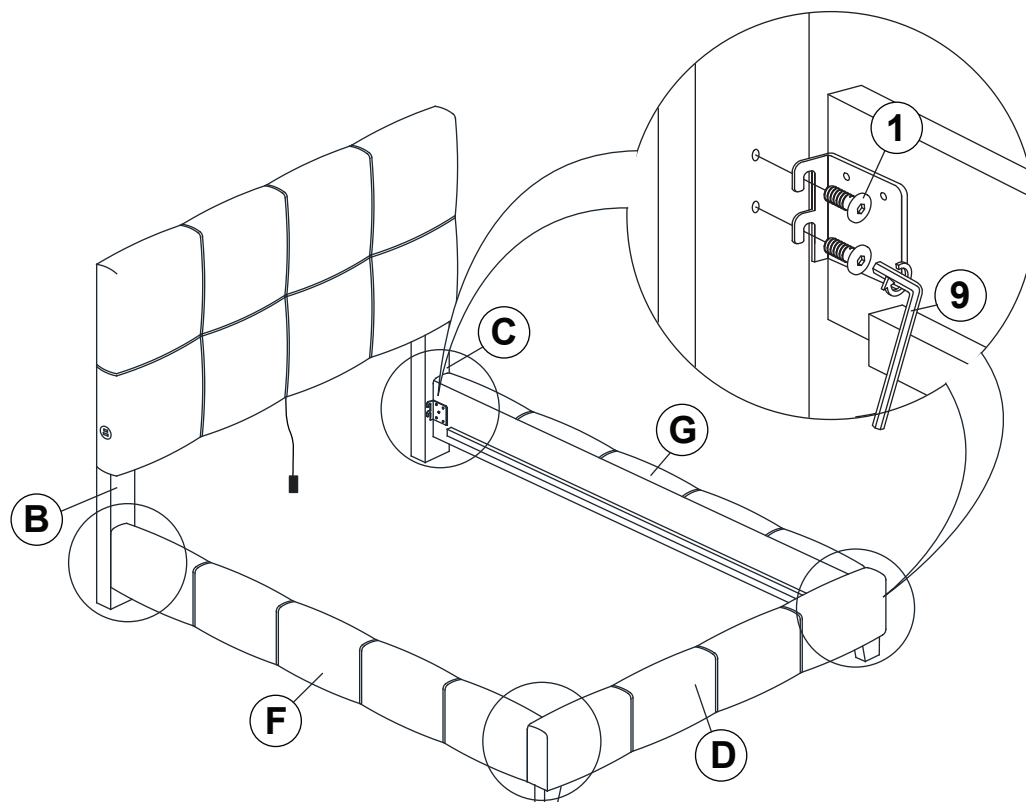


ASSEMBLY INSTRUCTIONS

STEP 5


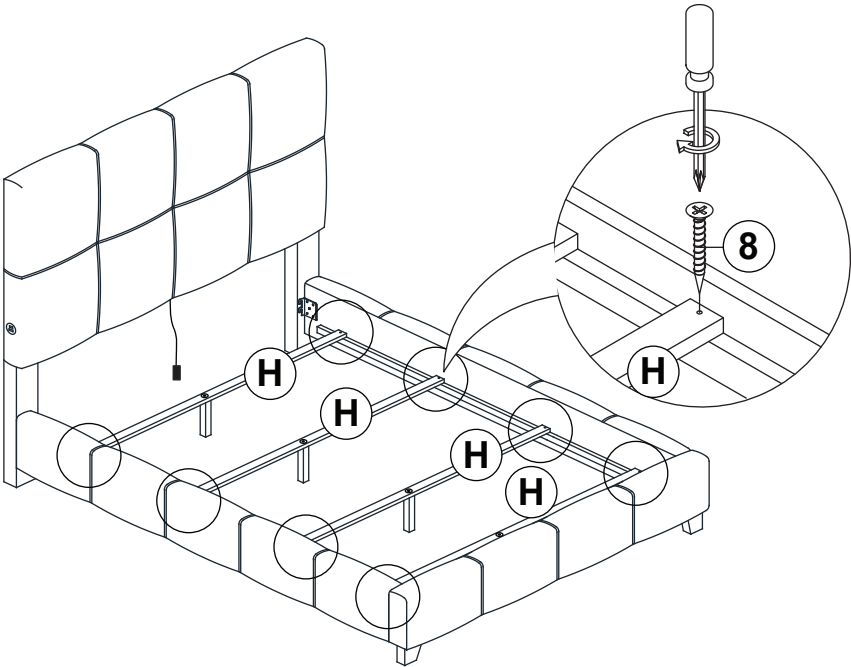


STEP 6

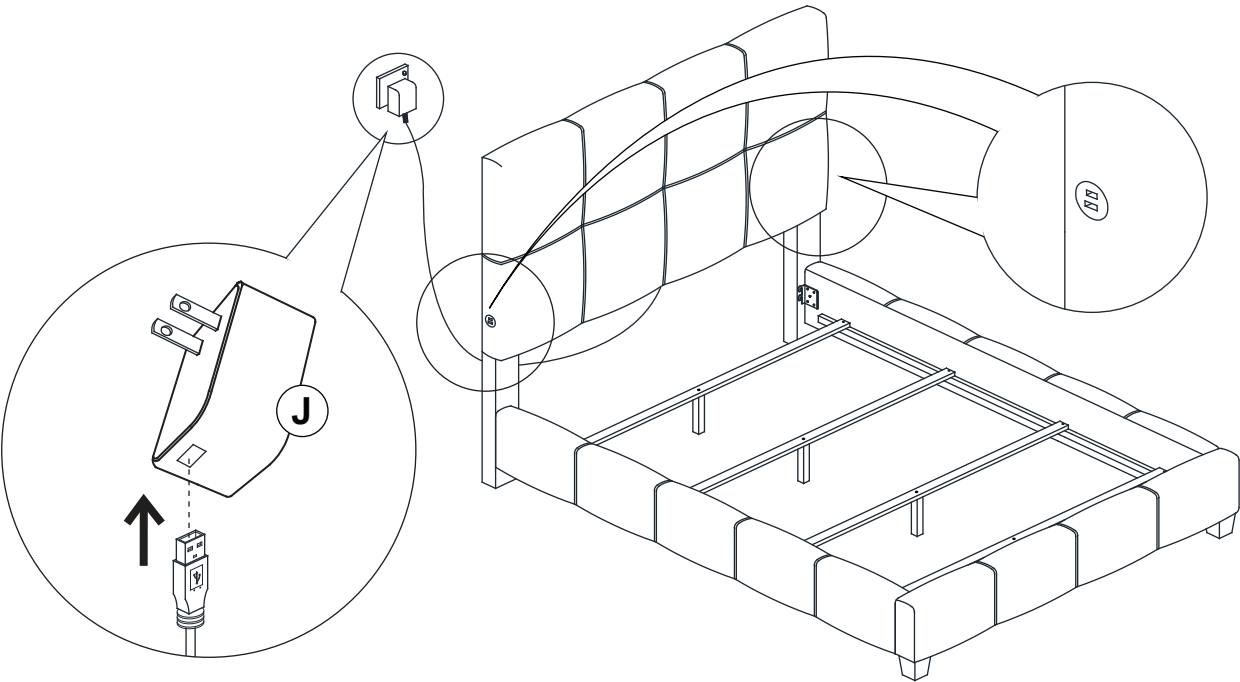


ASSEMBLY INSTRUCTIONS

STEP 7 COMPLETE

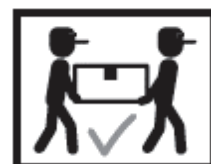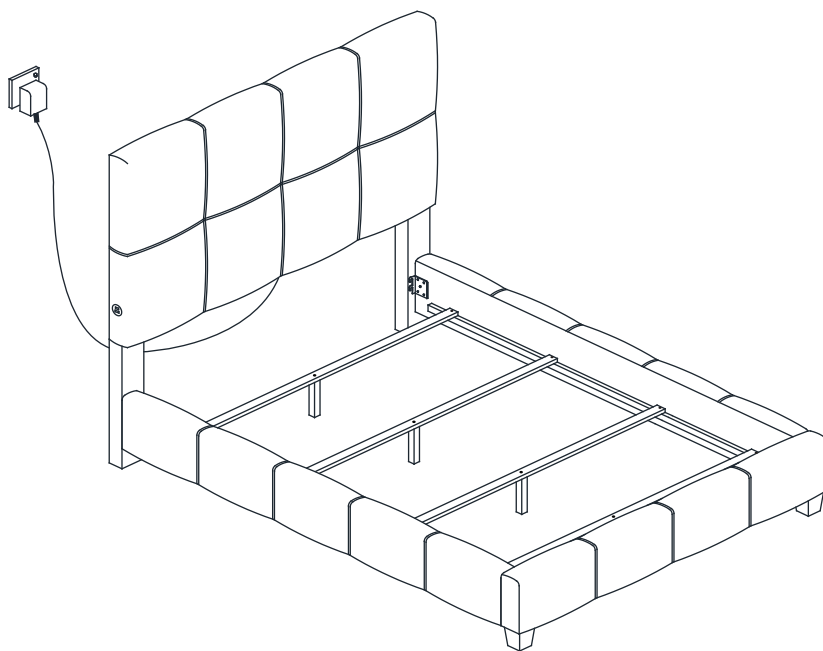

Inner Size: 60.75"W X 81.25"D

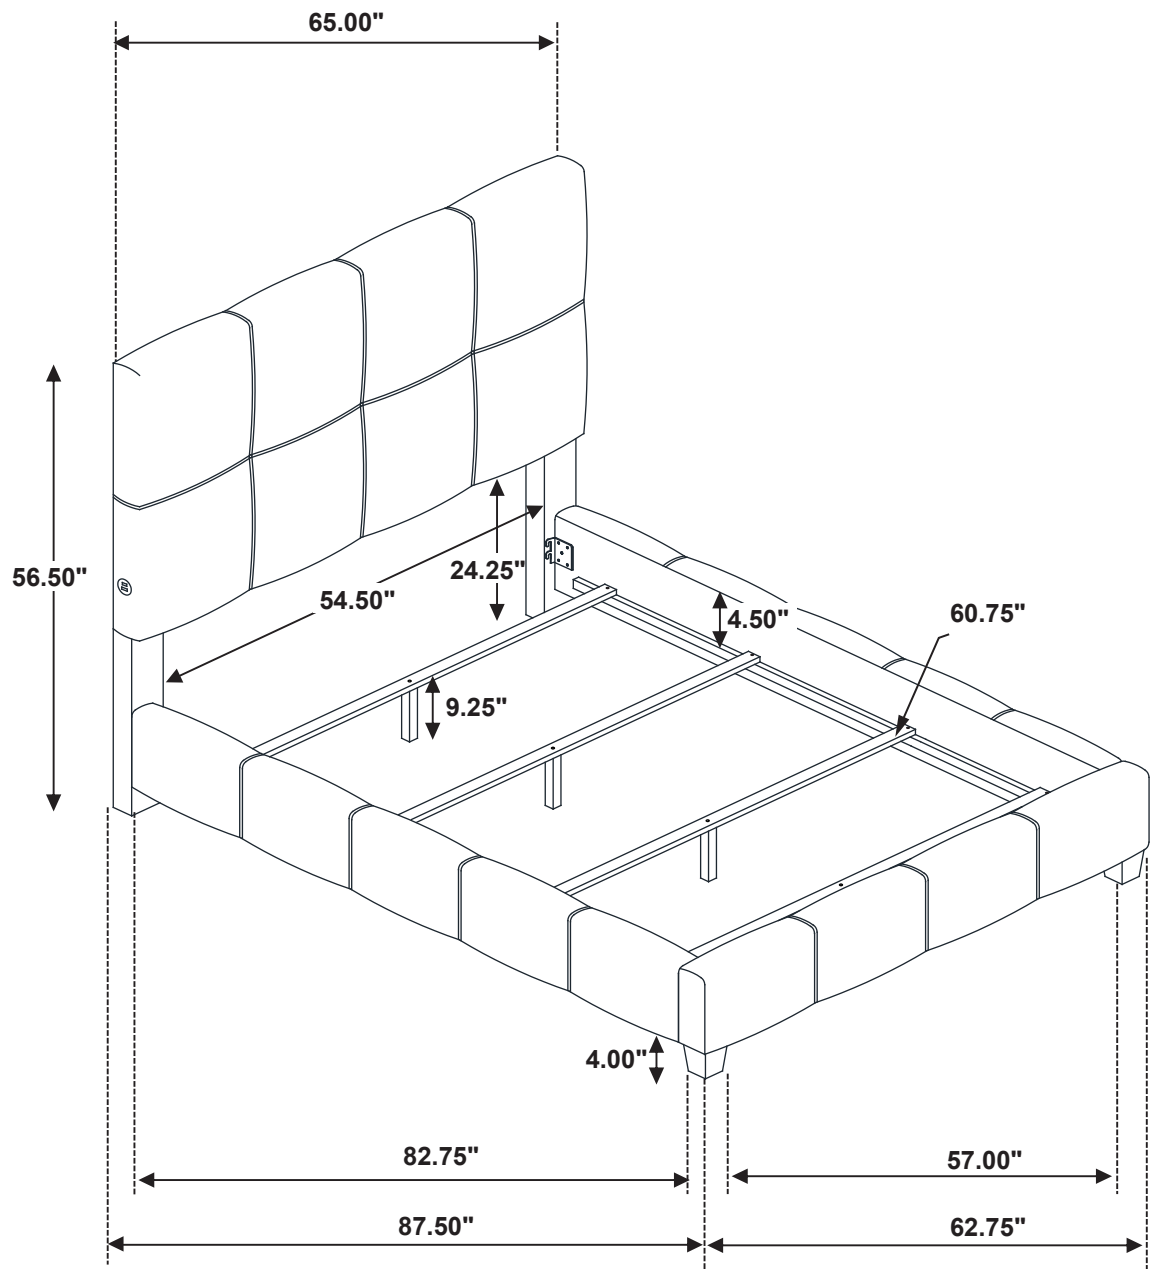

Note : Dimension tolerance $\pm 5\%$