



626-679-3588

service@getprohome.com

www.getprohome.com

162 Atlantic St, Pomona, CA 91768


ASSEMBLY INSTRUCTIONS

HIGH QUALITY MIRROR



STEP 1

Use the positioning template to determine the hanging position, mark the hole locations, and make sure it remains level.

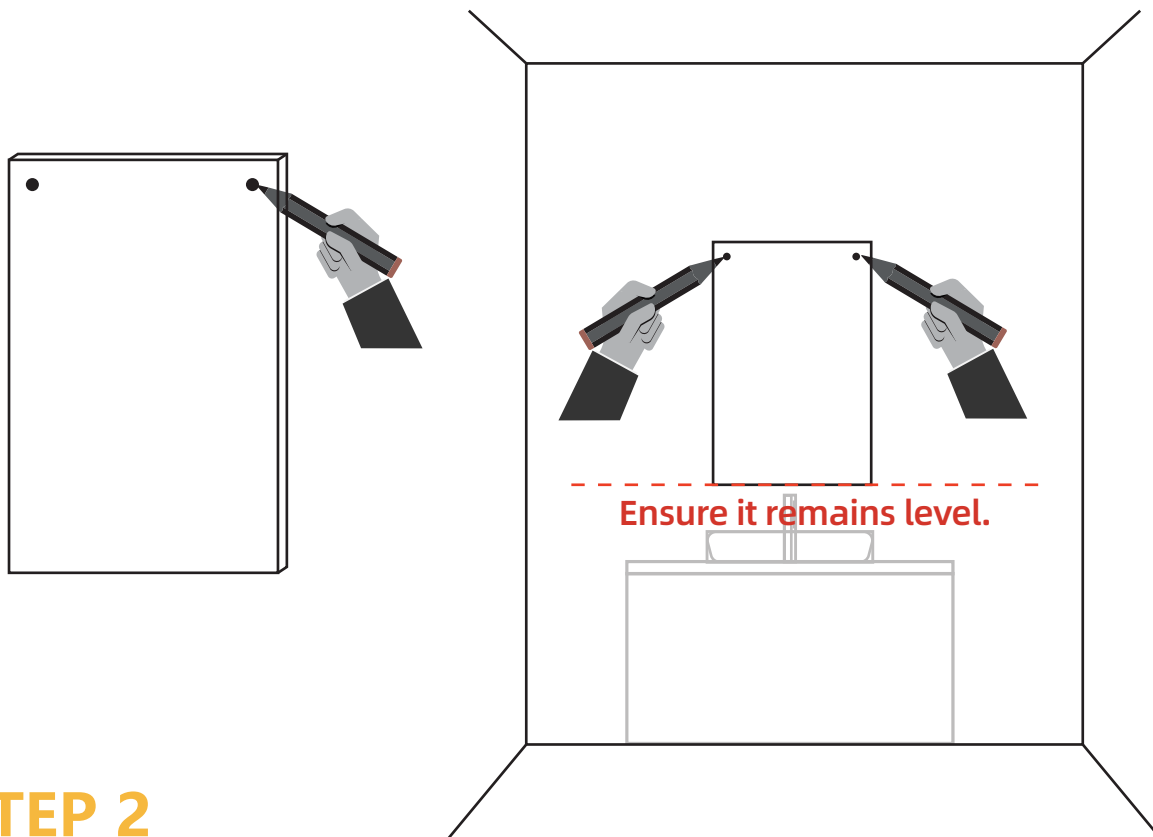

STEP 2

Following the steps shown in the example diagram, install the screws, leaving 1/2 inch of each screw outside. Hang the mirror on the screws to complete the installation.

