


FLOOR STORAGE SIDE CABINET

INSTALLATION INSTRUCTIONS AND PROCEDURES




PLEASE WEAR PROTECTIVE GLOVES BEFORE ASSEMBLING

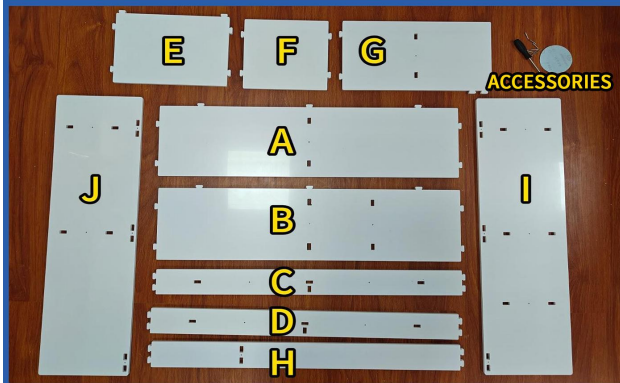

1. ASSEMBLE THE E PLATE ONTO THE A PLATE



2. ASSEMBLE THE B PLATE

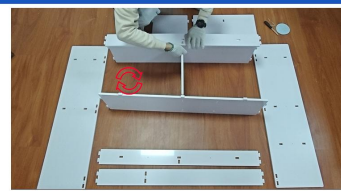


3. FLAT FLIP, ASSEMBLE THE C PLATE



4. ASSEMBLE THE D PLATE




5. FLIP UP; ASSEMBLE G PLATE TO B PLATE

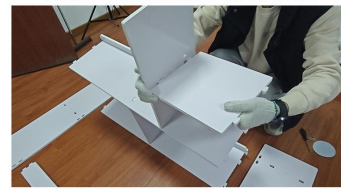

6. ASSEMBLE F PLATE TO G PLATE



7. FLAT FLIP; ASSEMBLE THE G PLATE

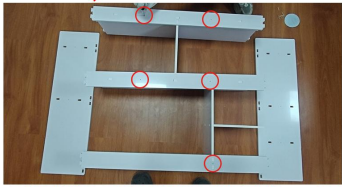


8. EACH HOLE IS SCREWED IN PLACE



9. THERE ARE HOLES AT THE JOINTS OF EACH PLATE



10. FIRST FLIP TO THE LEFT TO ASSEMBLE I PLATE

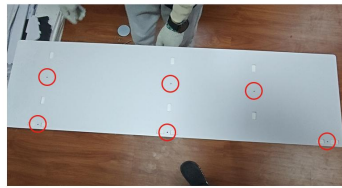

11. EACH HOLE IS SCREWED IN PLACE



12. FLIP OVER TO THE OTHER END AND ASSEMBLE THE J PLATE



13. EACH HOLE NEEDS TO BE SECURED WITH A SCREW



14. SHARPEN EDGES