

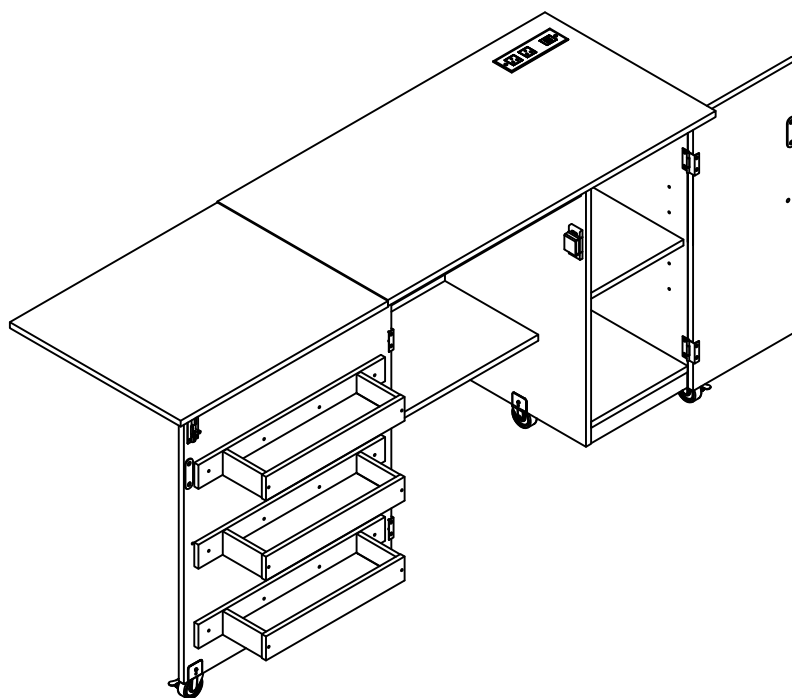



















FTHKSG-1004

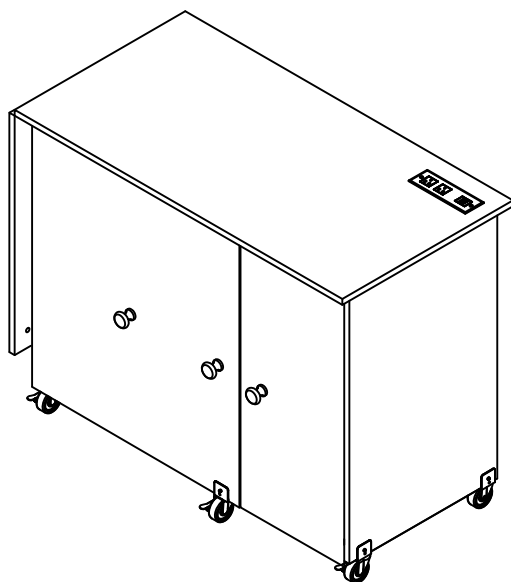





Parts List









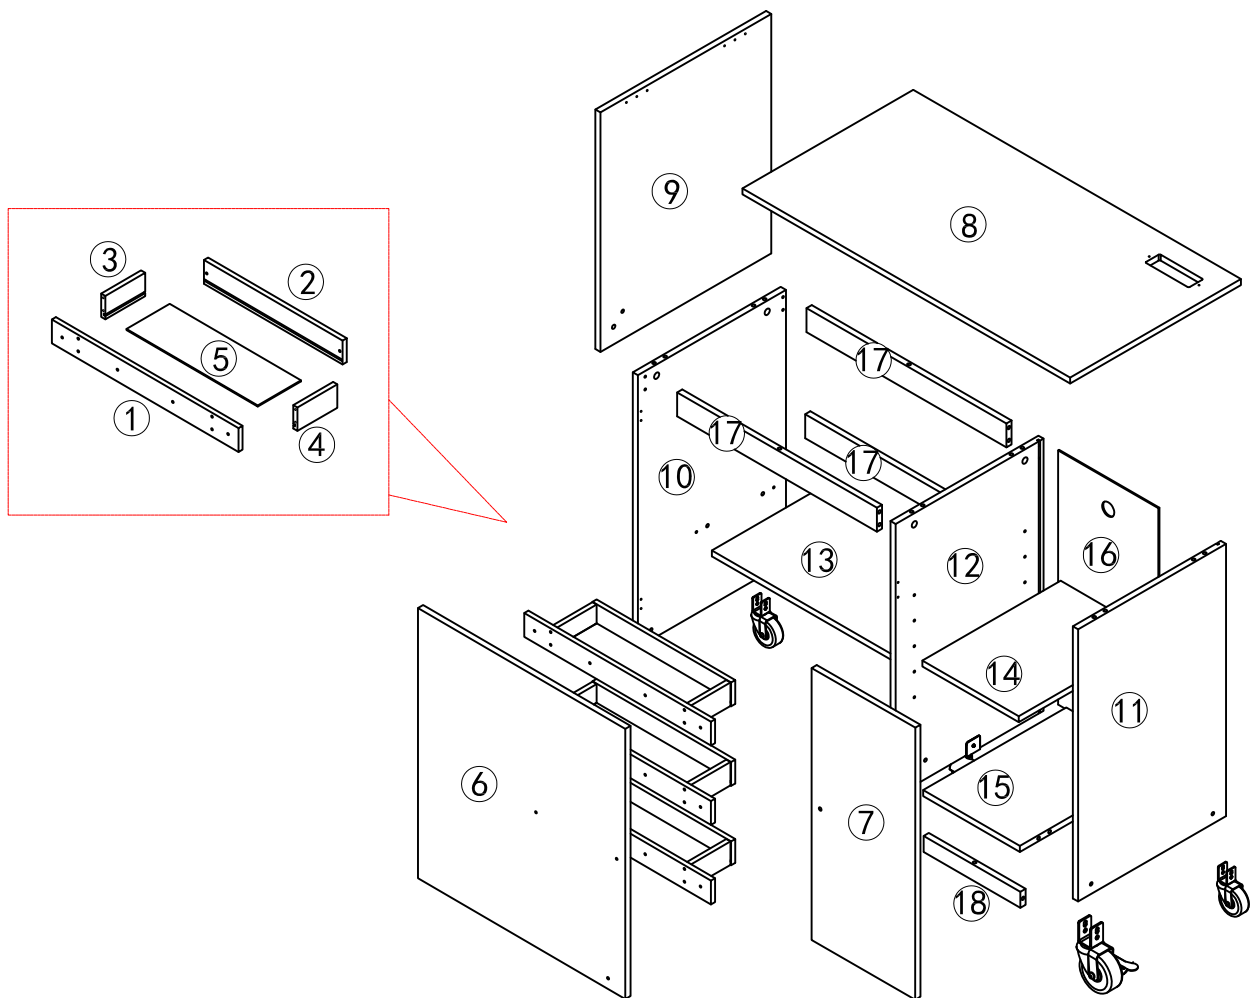


Hardware List

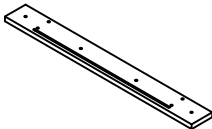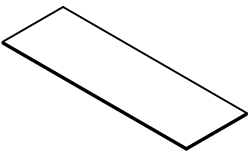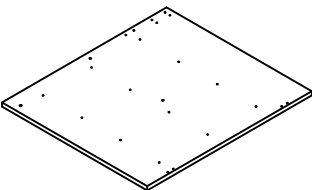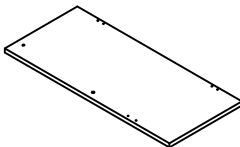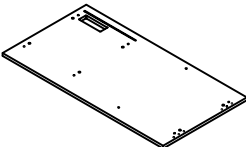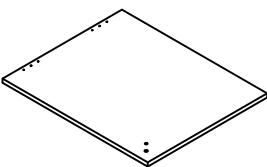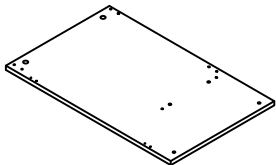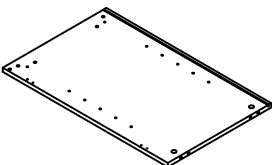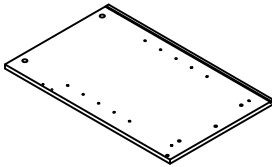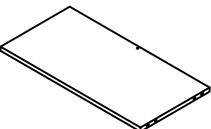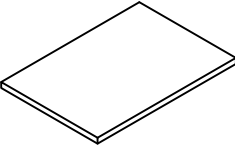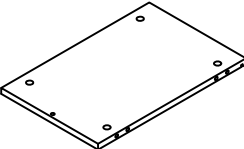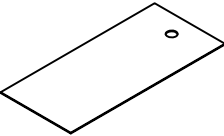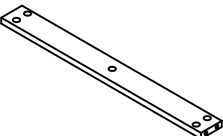1  3 PC	2  3 PC	3  3 PC	4  3 PC
5  3 PC	6  1 PC	7  1 PC	8  1 PC
9  1 PC	10  1PC	11  1PC	12  1PC
13  1PC	14  1PC	15  1PC	16  1PC
17  3PC	18  1PC	19	20



Hardware List

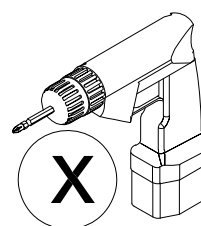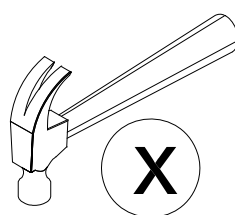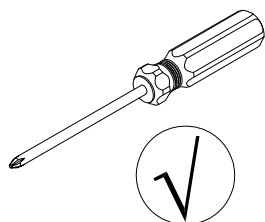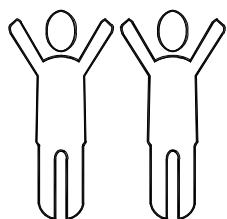


A  Ø6*35MM 29PCS	B  Ø15*9.5MM 29PCS	C  Ø8*30MM 17PCS	D  Ø4*22MM 30PCS
E  Ø3*15MM 32PCS	F  Ø4*15MM 14PCS	G  41*35*19MM 4PCS	H  2PCS
I  2PCS	J  1PCS	K  2PCS	L  1PCS
M  3PCS	N  Ø4*25MM 3PCS	O  4PCS	P  1PCS
Q  3PCS	R  3PCS	S  ØM6*25MM 6PCS	T  Ø20MM 16PCS
U  4PCS			

Assembly Steps

CAM BOLT INSTALLATION AS BELOW:

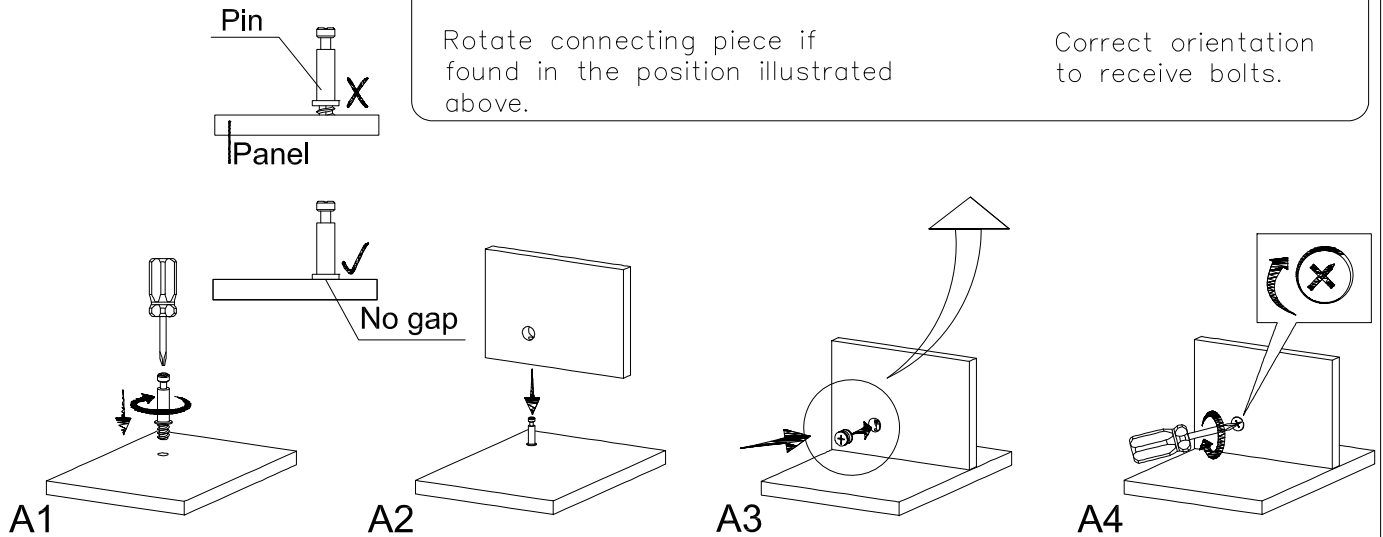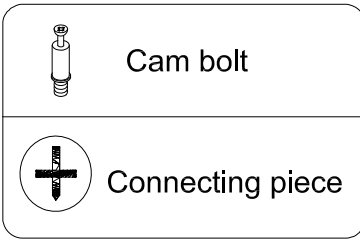



STEP 1

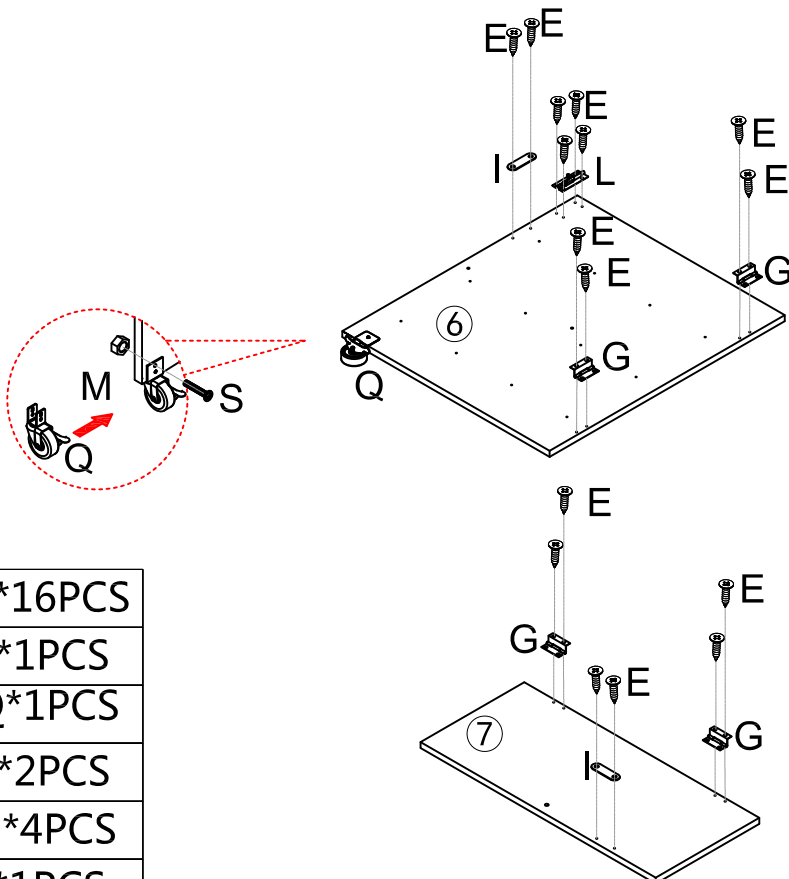




	E*16PCS
	S*1PCS
	Q*1PCS
	I*2PCS
	G*4PCS
	L*1PCS

Assembly Steps

STEP 2


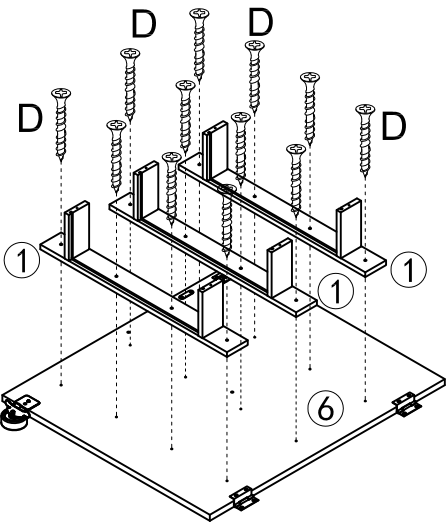
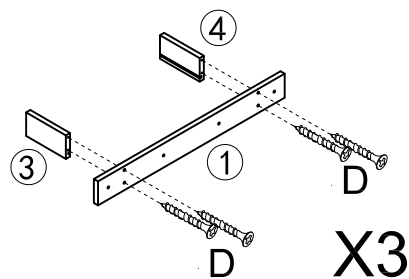


STEP 3

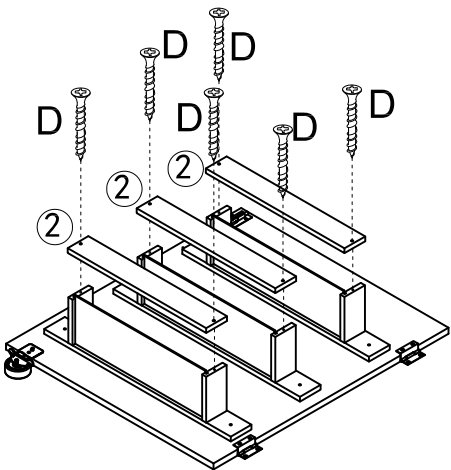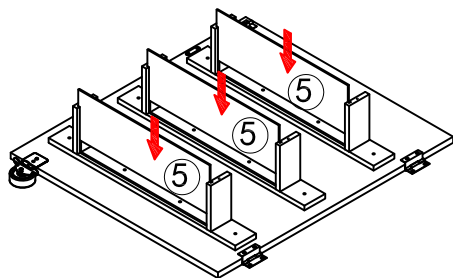



Assembly Steps

STEP 4

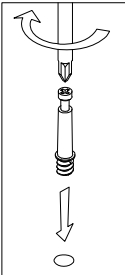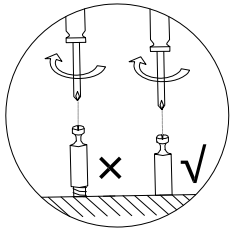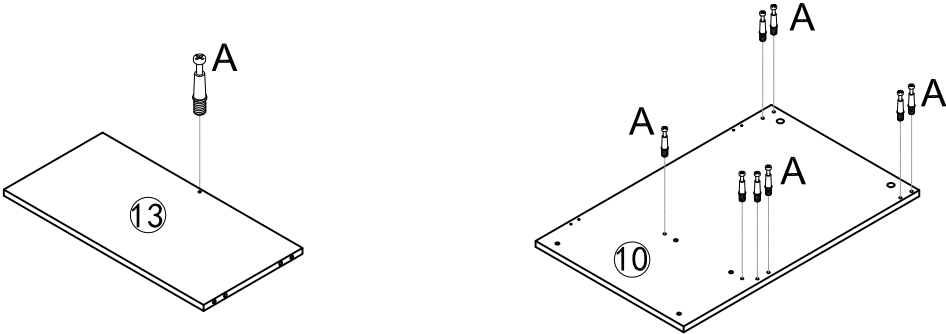

A*9PCS

STEP 5

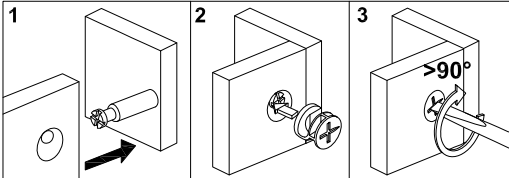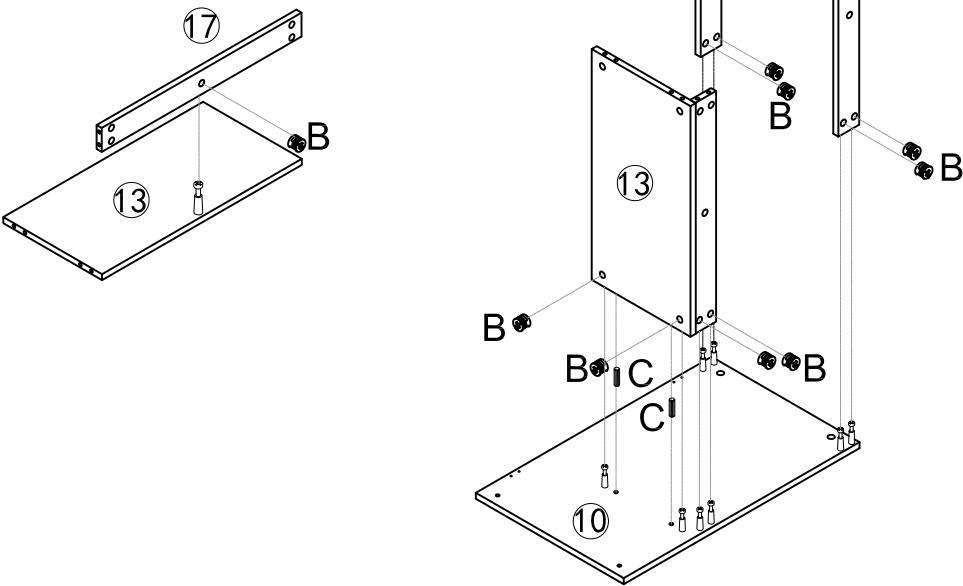




C*2PCS



B*9PCS





Assembly Steps

STEP 6

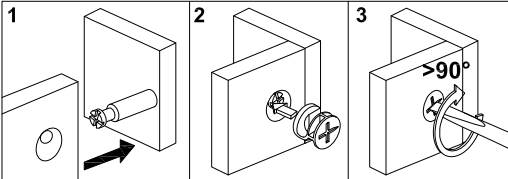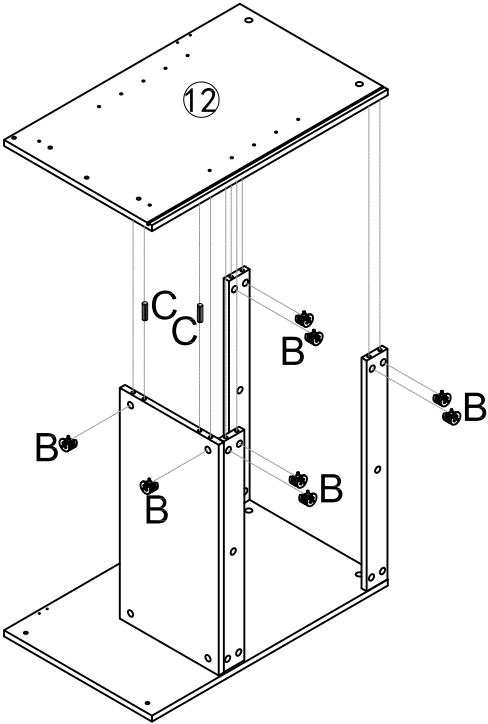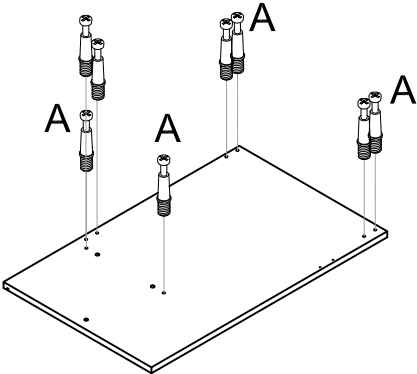

	A*8PCS
	C*2PCS
	B*8PCS



STEP 7

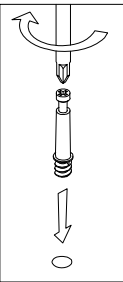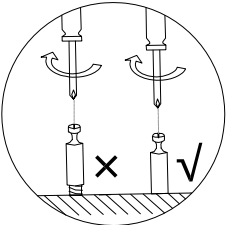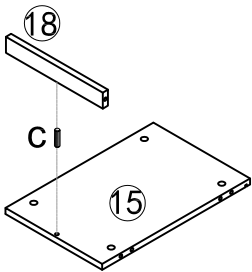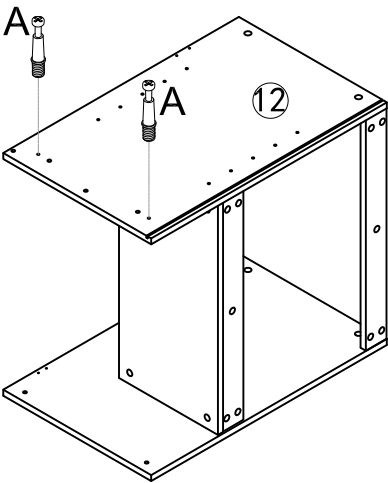

	A*2PCS
	C*2PCS



Assembly Steps

STEP 8


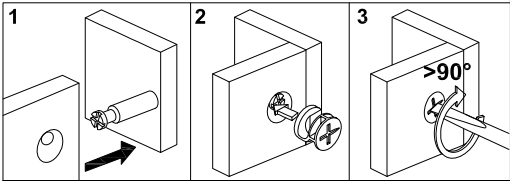
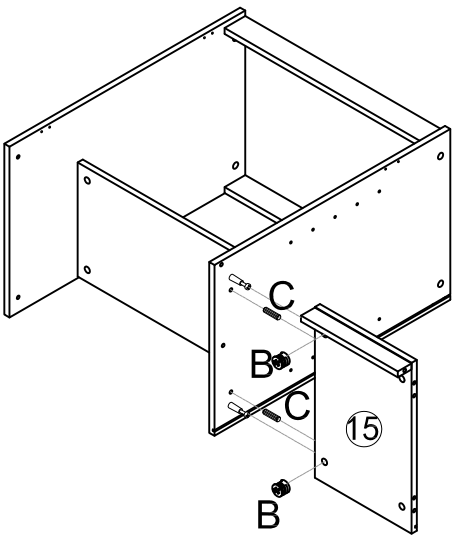


	C*2PCS
	B*2PCS

STEP 9

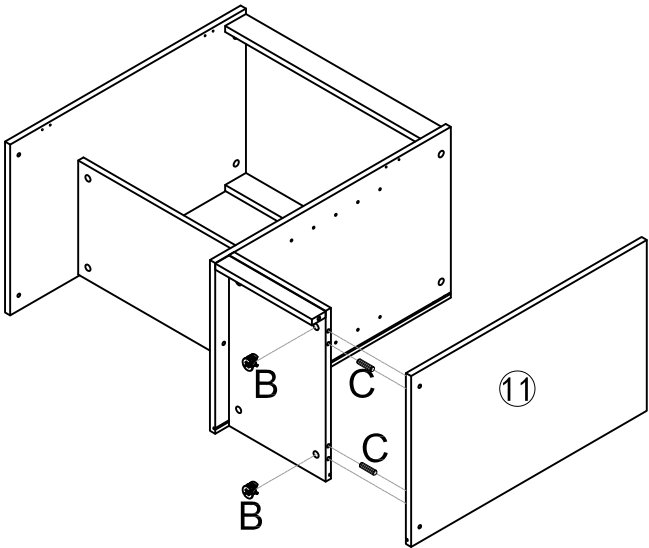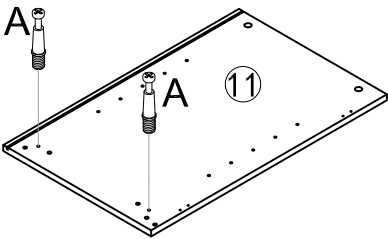


	A*2PCS
	C*2PCS
	B*2PCS

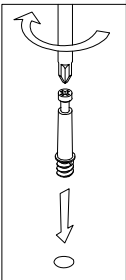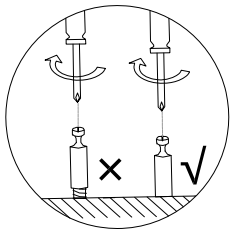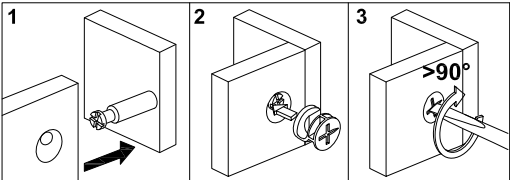


Assembly Steps

STEP 10

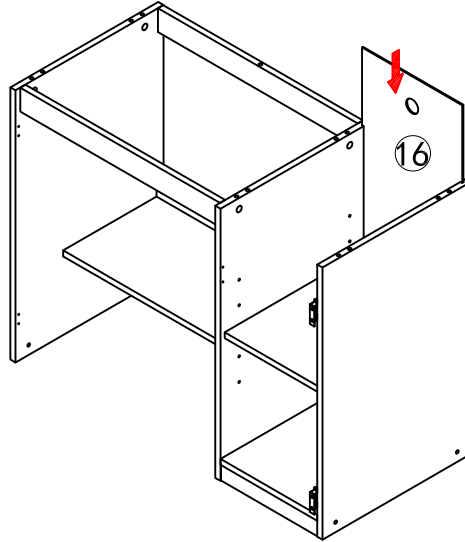



STEP 11

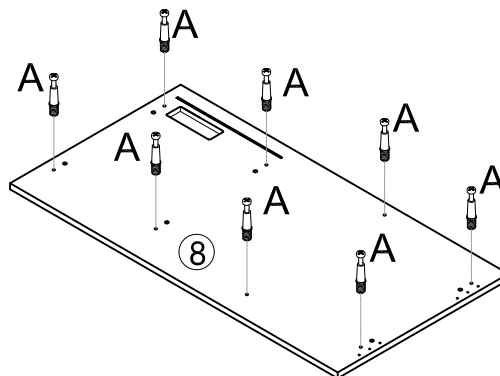

A*8PCS


Assembly Steps

STEP 12

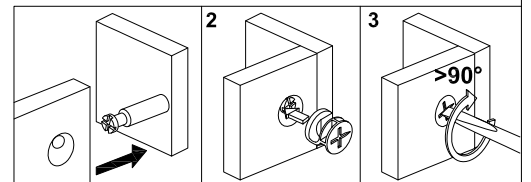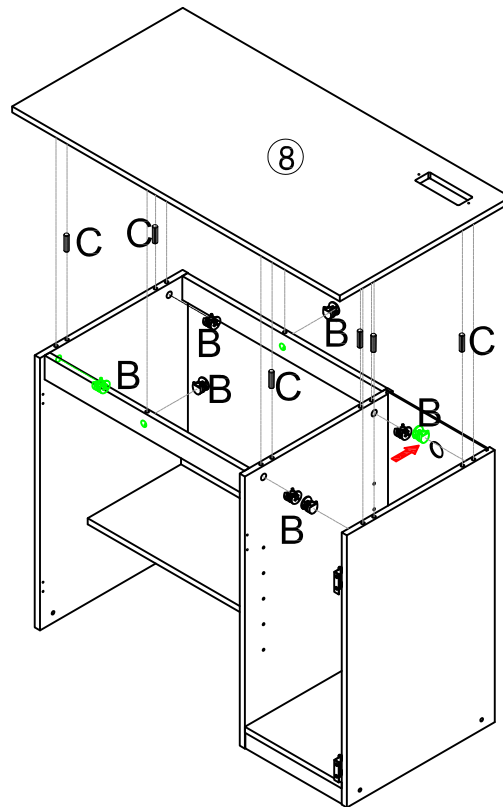

	C*6PCS
	B*8PCS


STEP 13

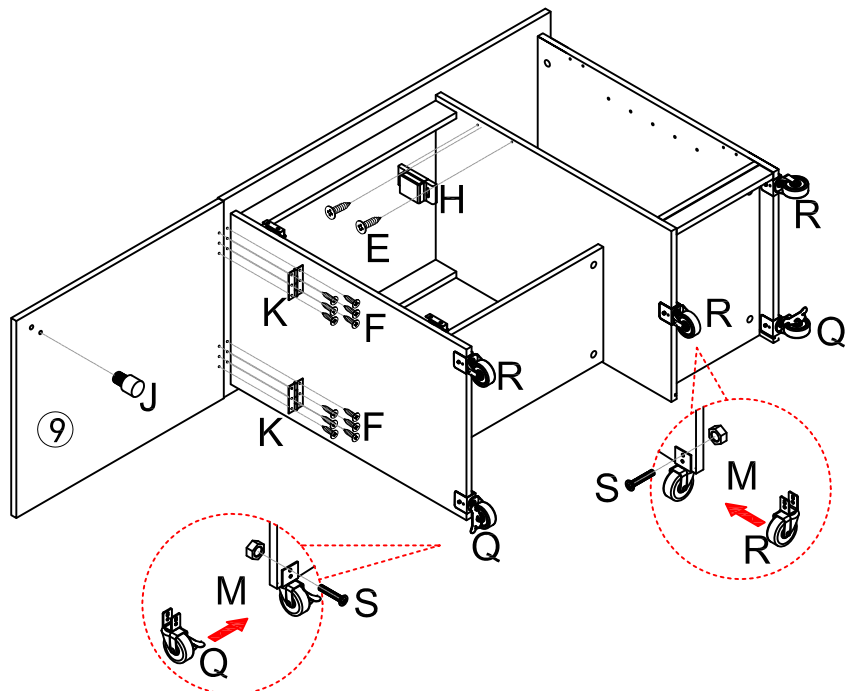

	F*12PCS
	H*1PCS
	S*5PCS
	R*3PCS
	Q*2PCS
	J*1PCS
	E*2PCS
	K*2PCS


Assembly Steps

STEP 14

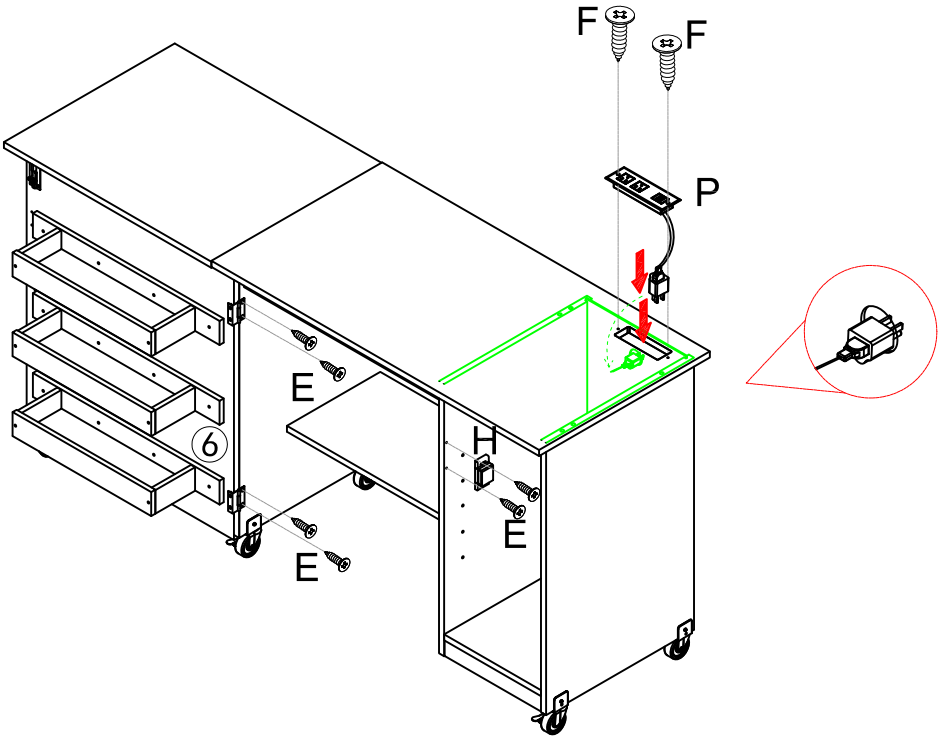

	F*2PCS
	P*1PCS
	E*6PCS
	H*1PCS


STEP 15

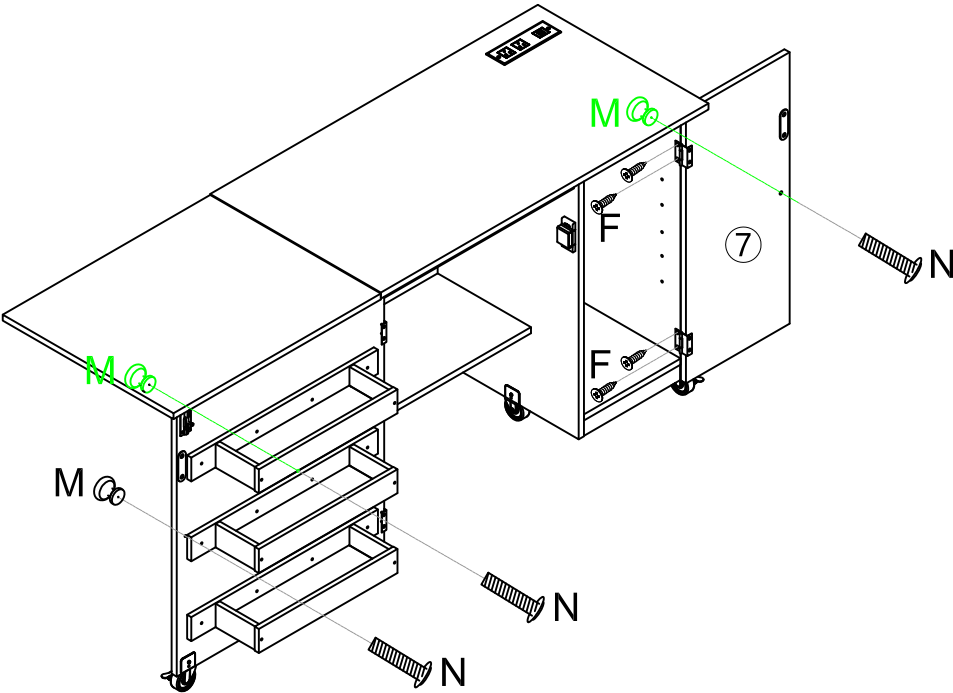

	N*3PCS
	M*3PCS
	F*4PCS

Assembly Steps


STEP 16

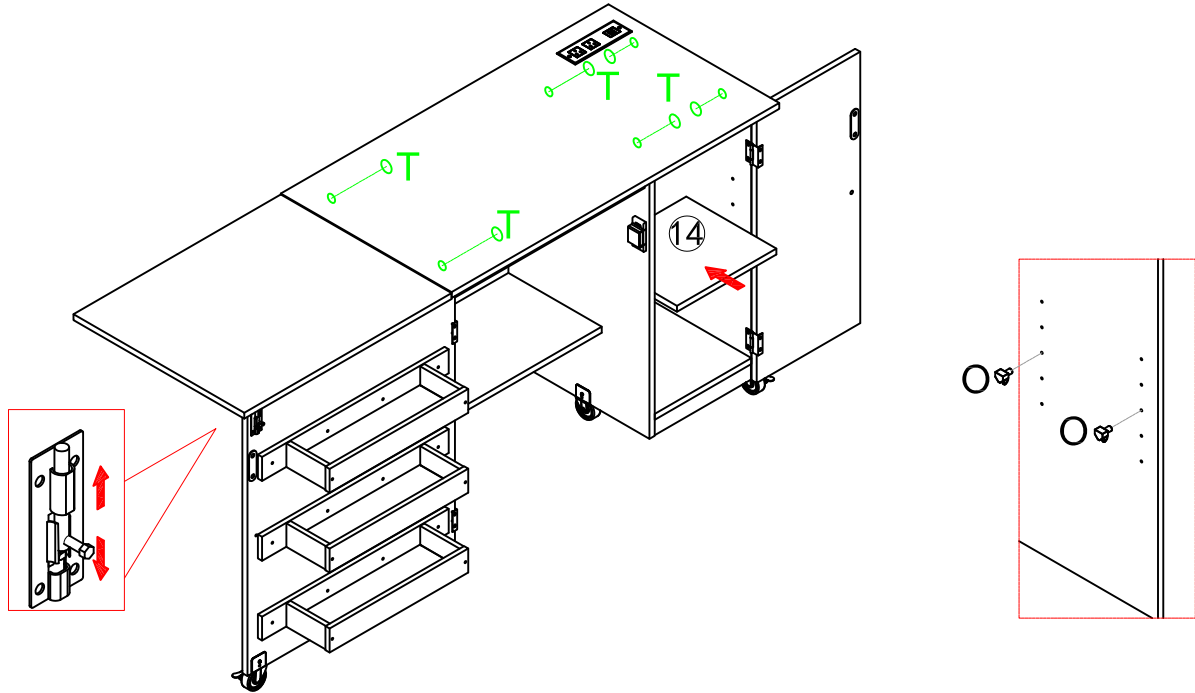

	T*6PCS
	O*4PCS

"T" Follow the color and pattern circular sticker, stick it on the screw hole position

STEP 17

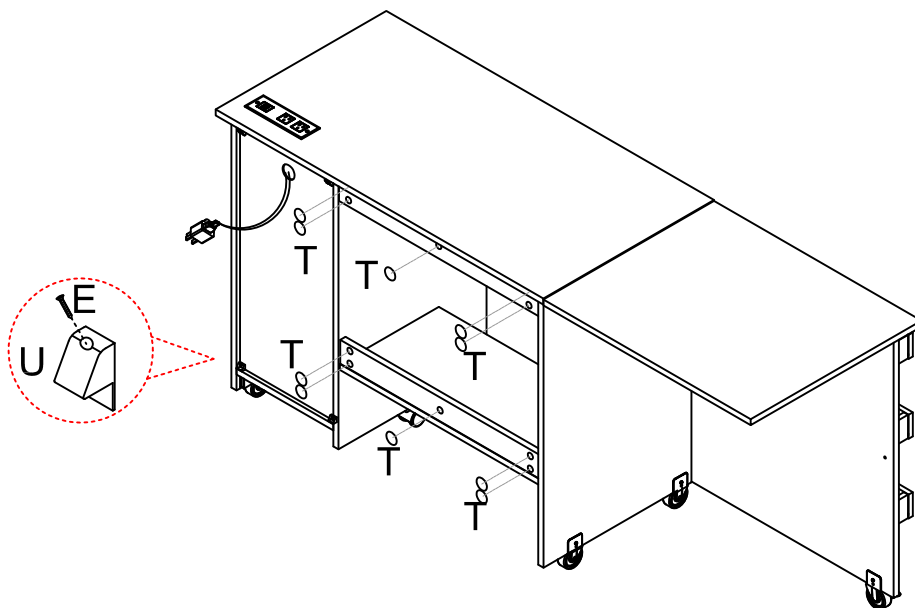

	T*10PCS
	E*4PCS
	U*4PCS

"T" Follow the color and pattern circular sticker, stick it on the screw hole position

Assembly Steps

STEP 18

