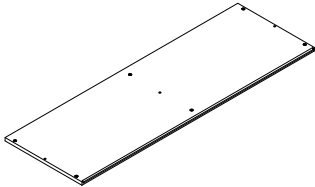
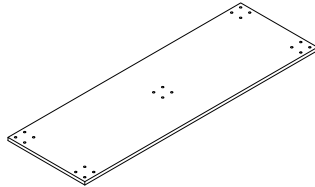









ASSEMBLY INSTRUCTIONS

Page 2 of 16

Part List:


ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Partition Panel		1
6	Cross rail		4

Part List:

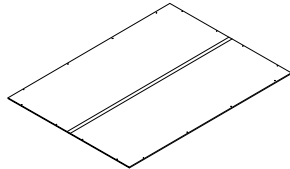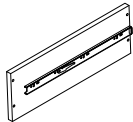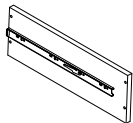ITEM	DESCRIPTION	PART	QTY
7	Back panel		1
8	Leg		5
9	drawer front		6
10	Drawer back		6
11	Drawer Left Side		6
12	Drawer Right Side		6

MADE IN CHINA

Part List:

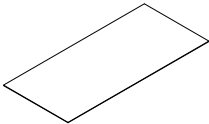ITEM	DESCRIPTION	PART	QTY
13	Drawer bottom		6


ASSEMBLY INSTRUCTION

Page 4 of 16

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Wooden dowel	 Φ8*30mm	14
B	Short bolt	 Φ1/4"*1/2"	20
C	Cam Bolt		8
D	Cam Lock		8
E	Allen wrench		1
F	Round head screw	 Φ3*16mm	16
G	Safety wall strap		2
H	Plastic anchor		2


Hardware List:

ITEM	DESCRIPTION	PART	QTY
I	Mounting screw	 Φ4*38mm	2
J	Flat Head screw	 Φ4*30mm	48
K	Handle		6
L	Bolt	 Φ5/32"*1-1/8"	12
M	Washer		4
N	Long bolt	 Φ1/4"*1"	6

MADE IN CHINA



- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Plastic Lock

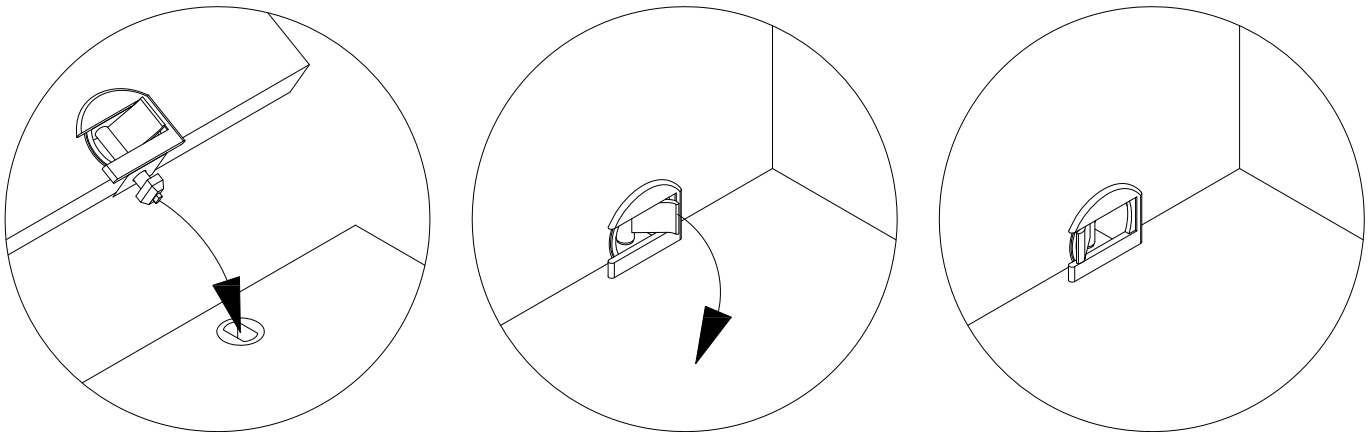

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)

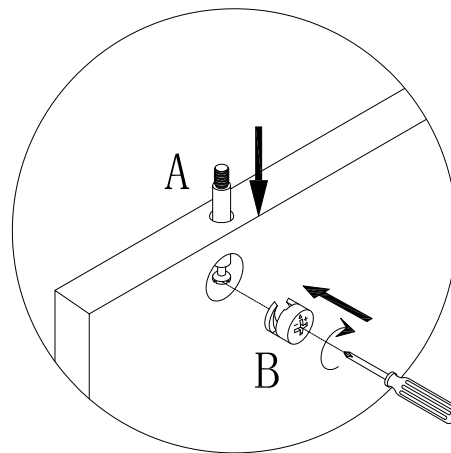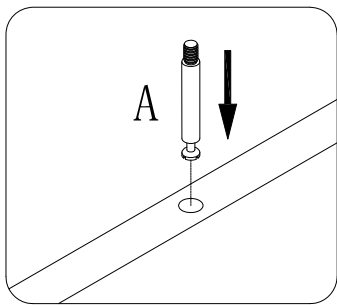

Screw camlock bolt (A) to wood part.


Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION

STEP 1


J:		24PCS
K:		6PCS
L:		12PCS

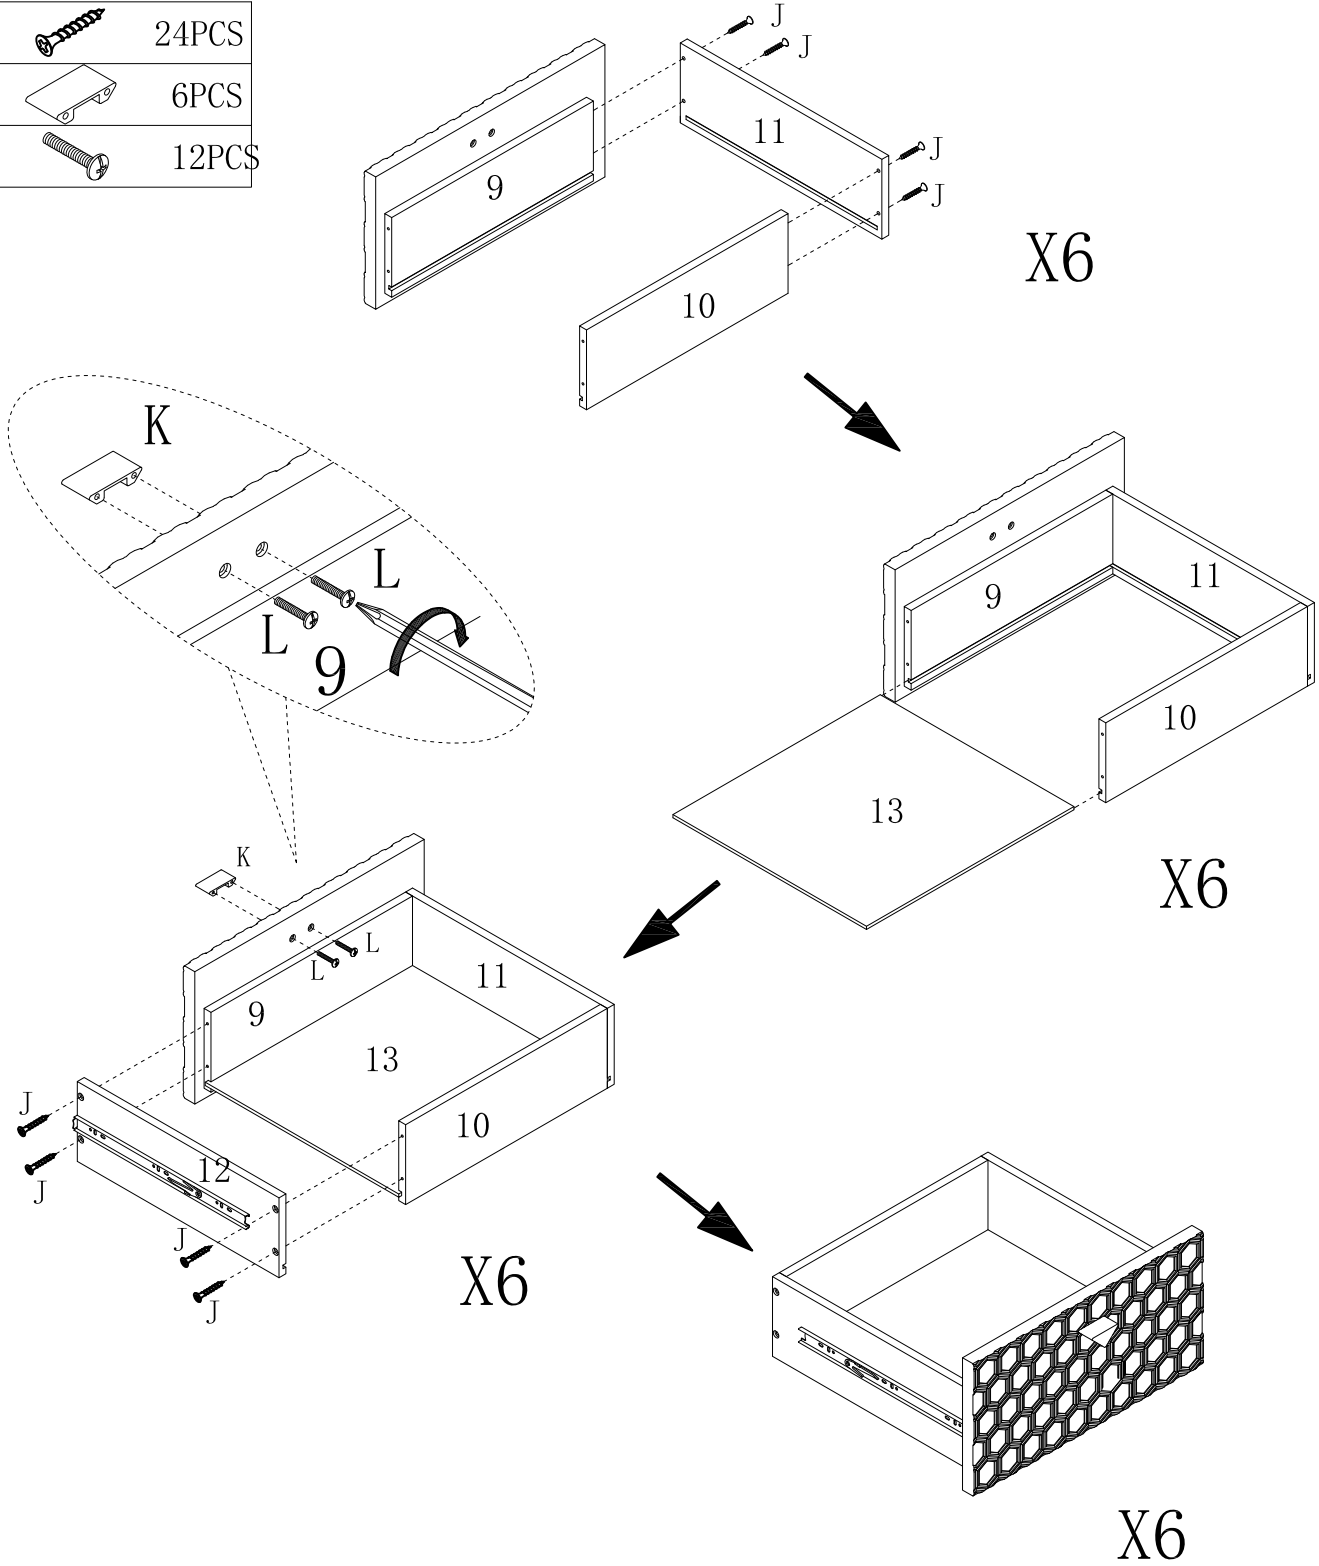

ASSEMBLY INSTRUCTION


STEP 3

C:  8PCS

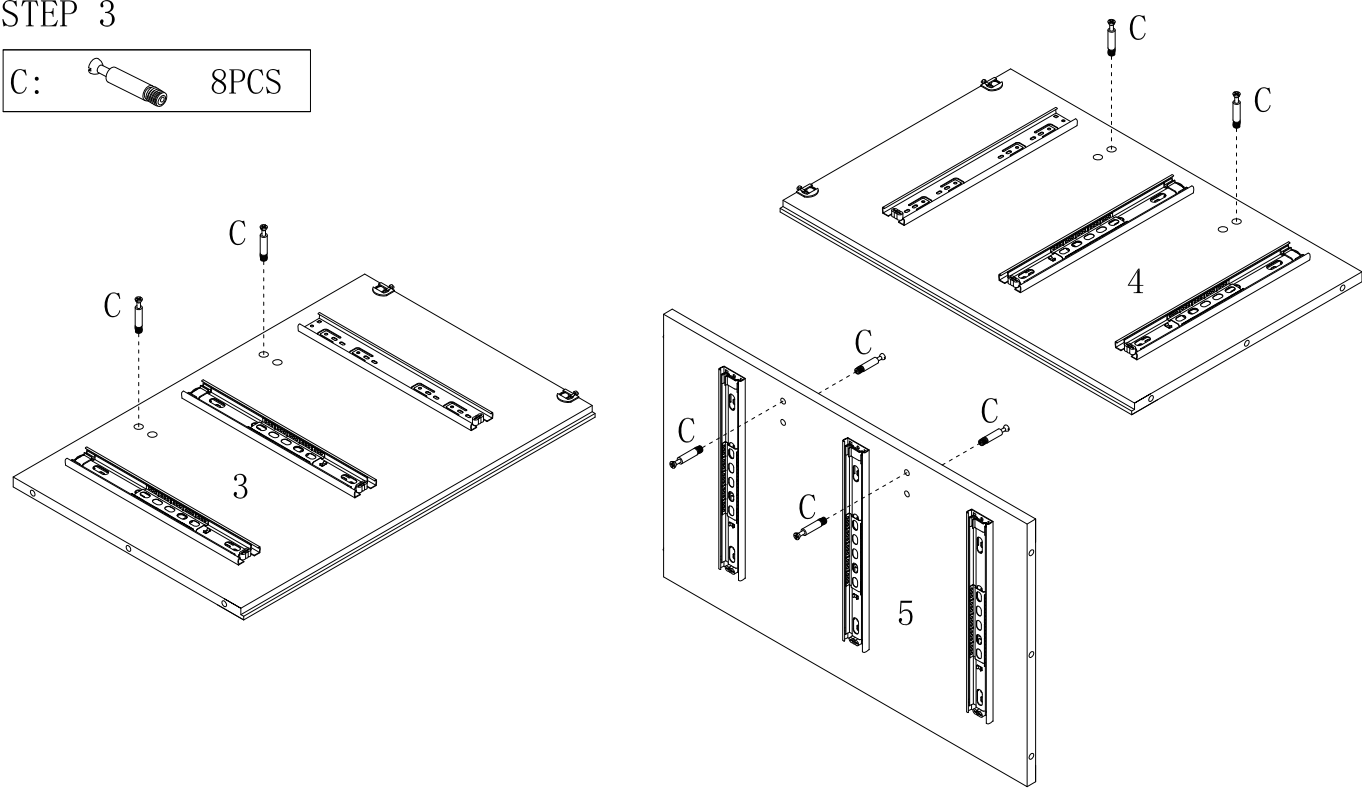

STEP 4


A:  8PCS
D:  8PCS

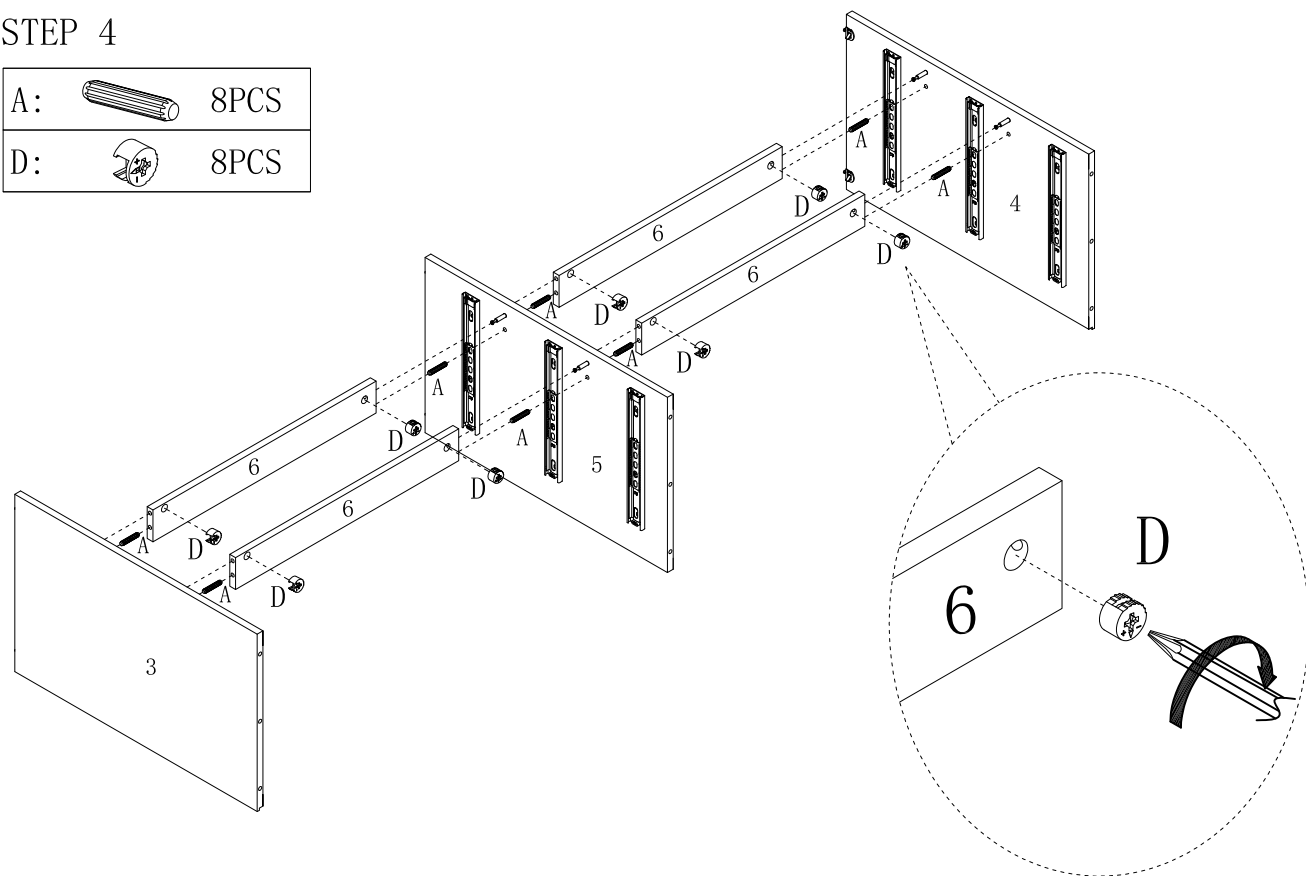

ASSEMBLY INSTRUCTION

STEP 5


A:		3PCS
E:		1PC
N:		6PCS

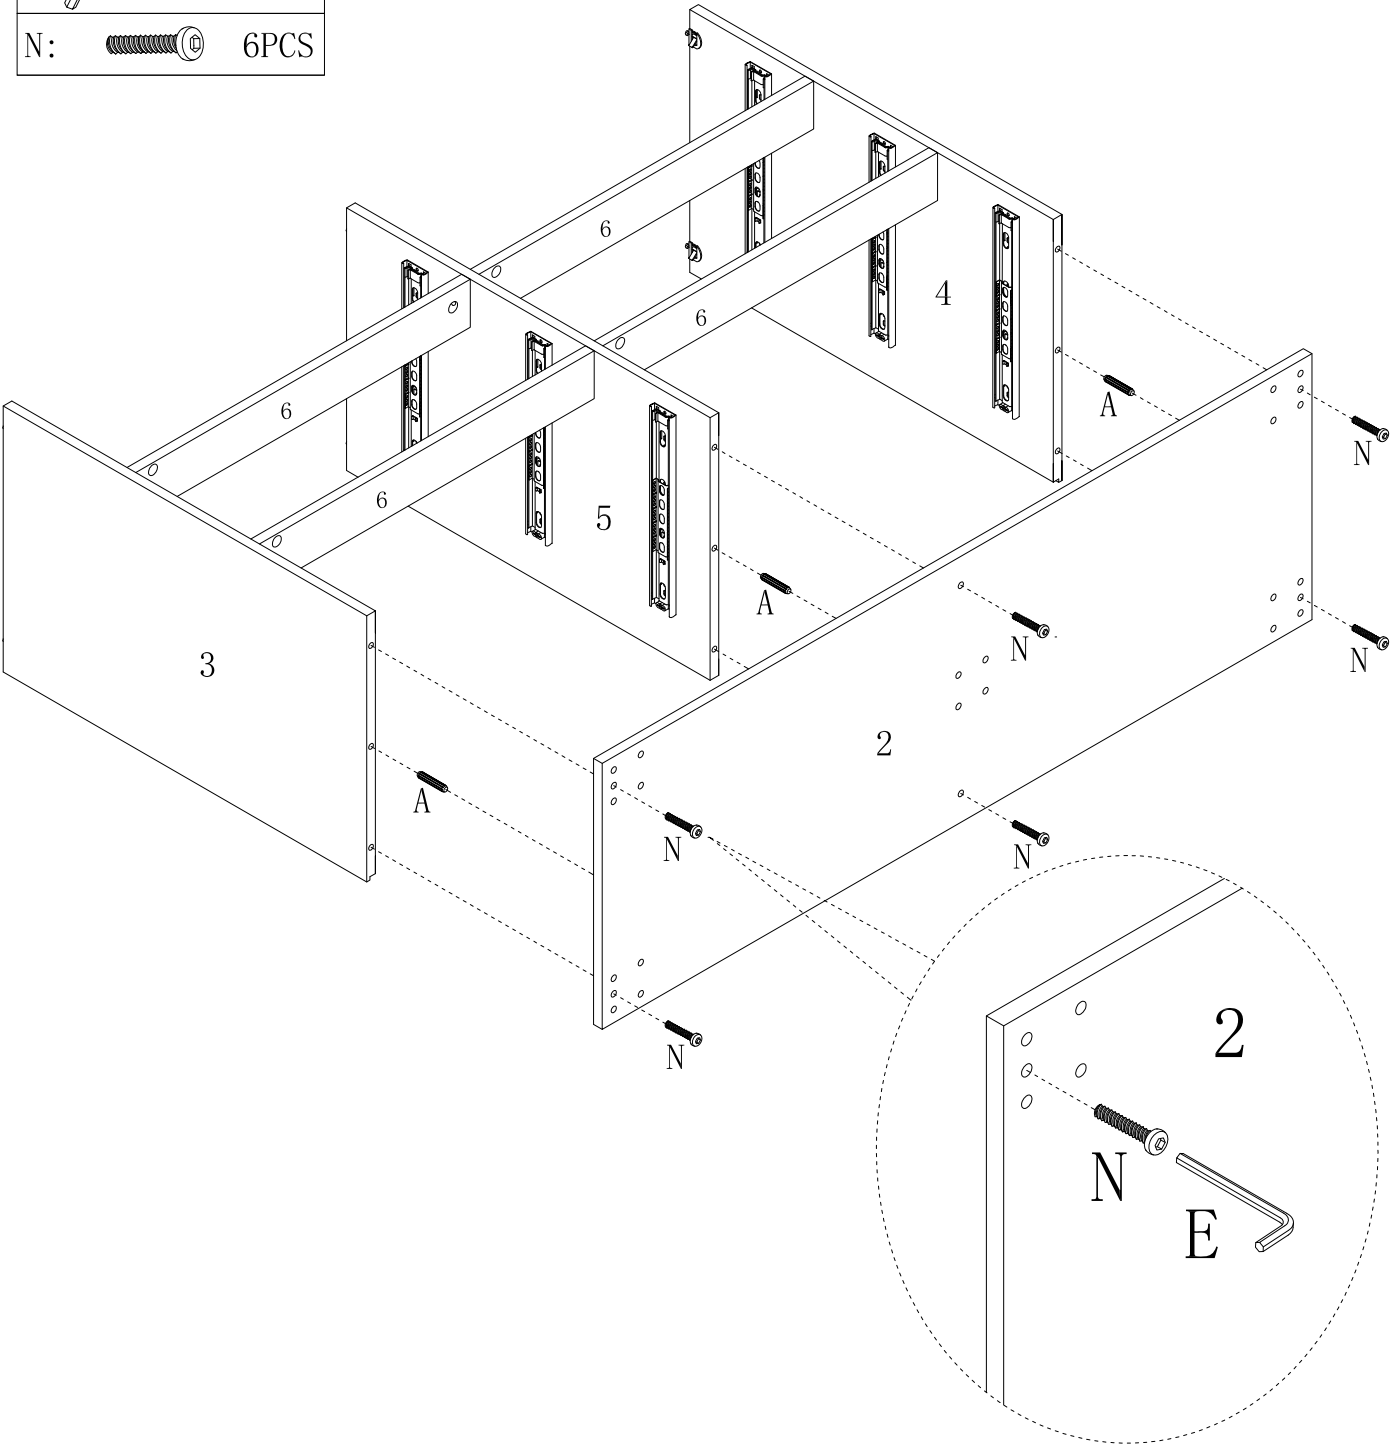

ASSEMBLY INSTRUCTION



STEP 6

B:		20PCS
E:		1PC

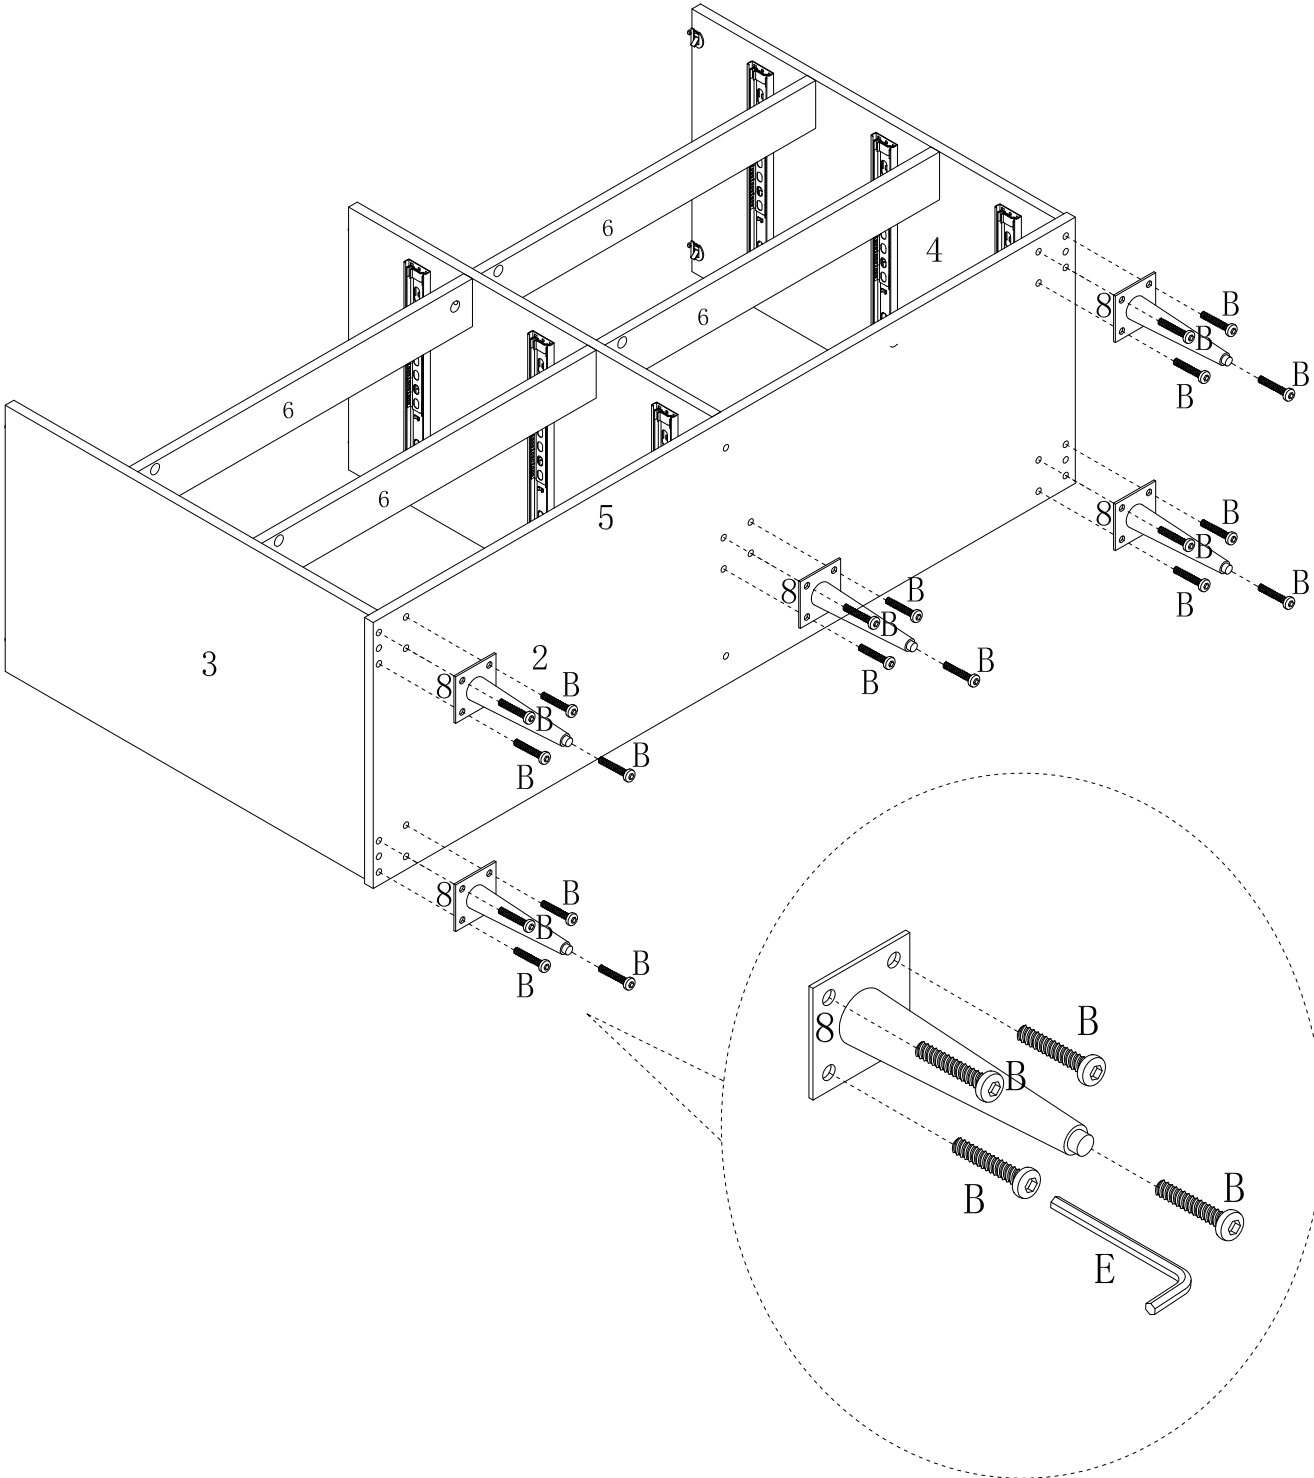

STEP 7


A:  3PCS

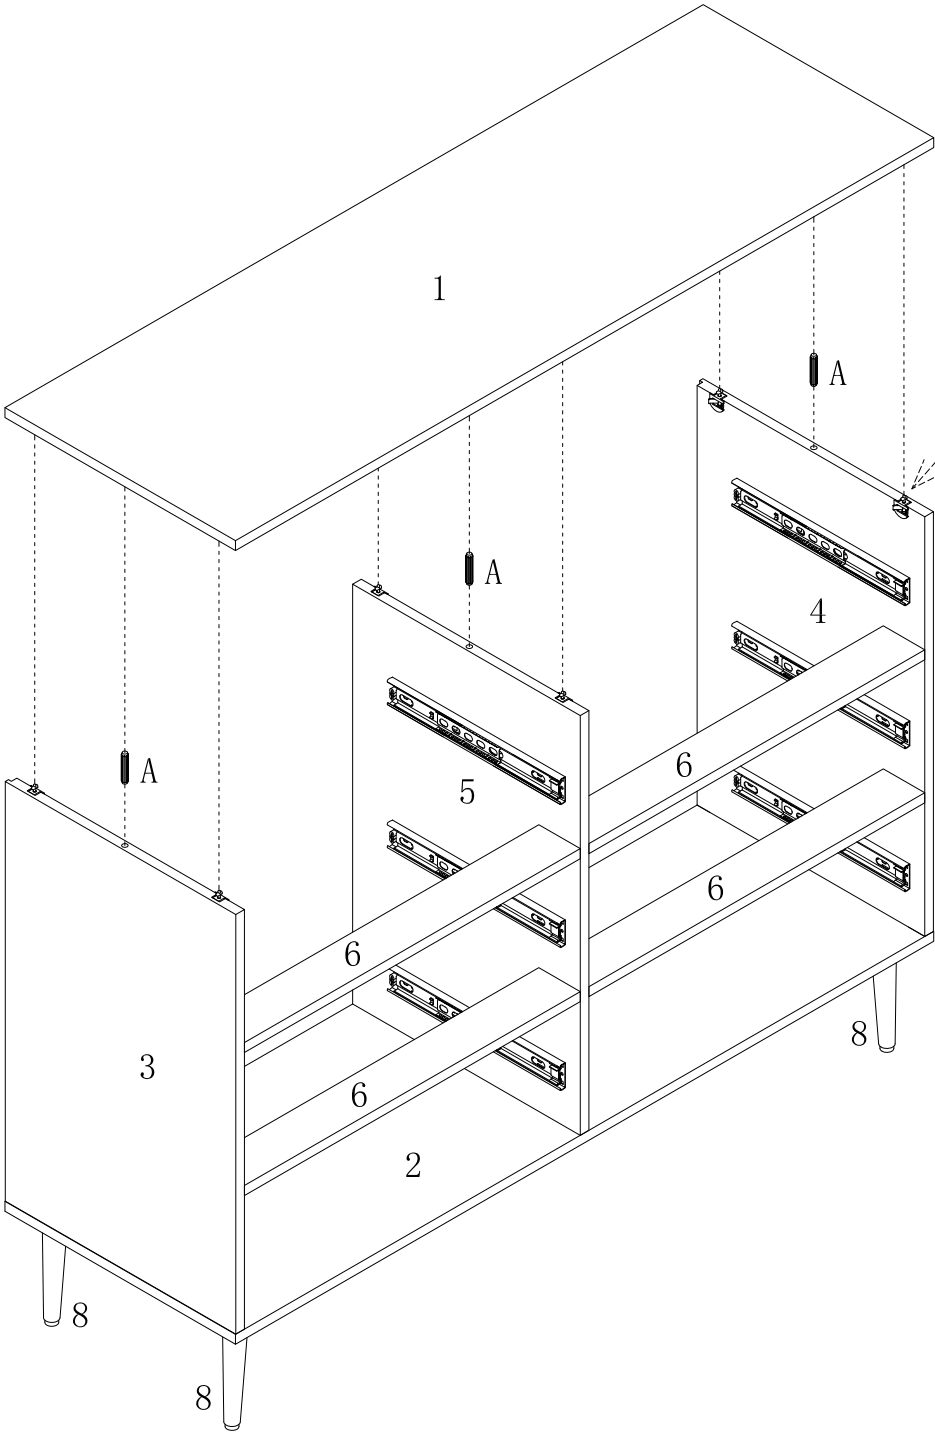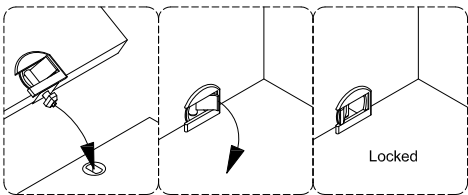


ASSEMBLY INSTRUCTION

STEP 8


F:		16PCS
G:		2PCS
M:		2PCS

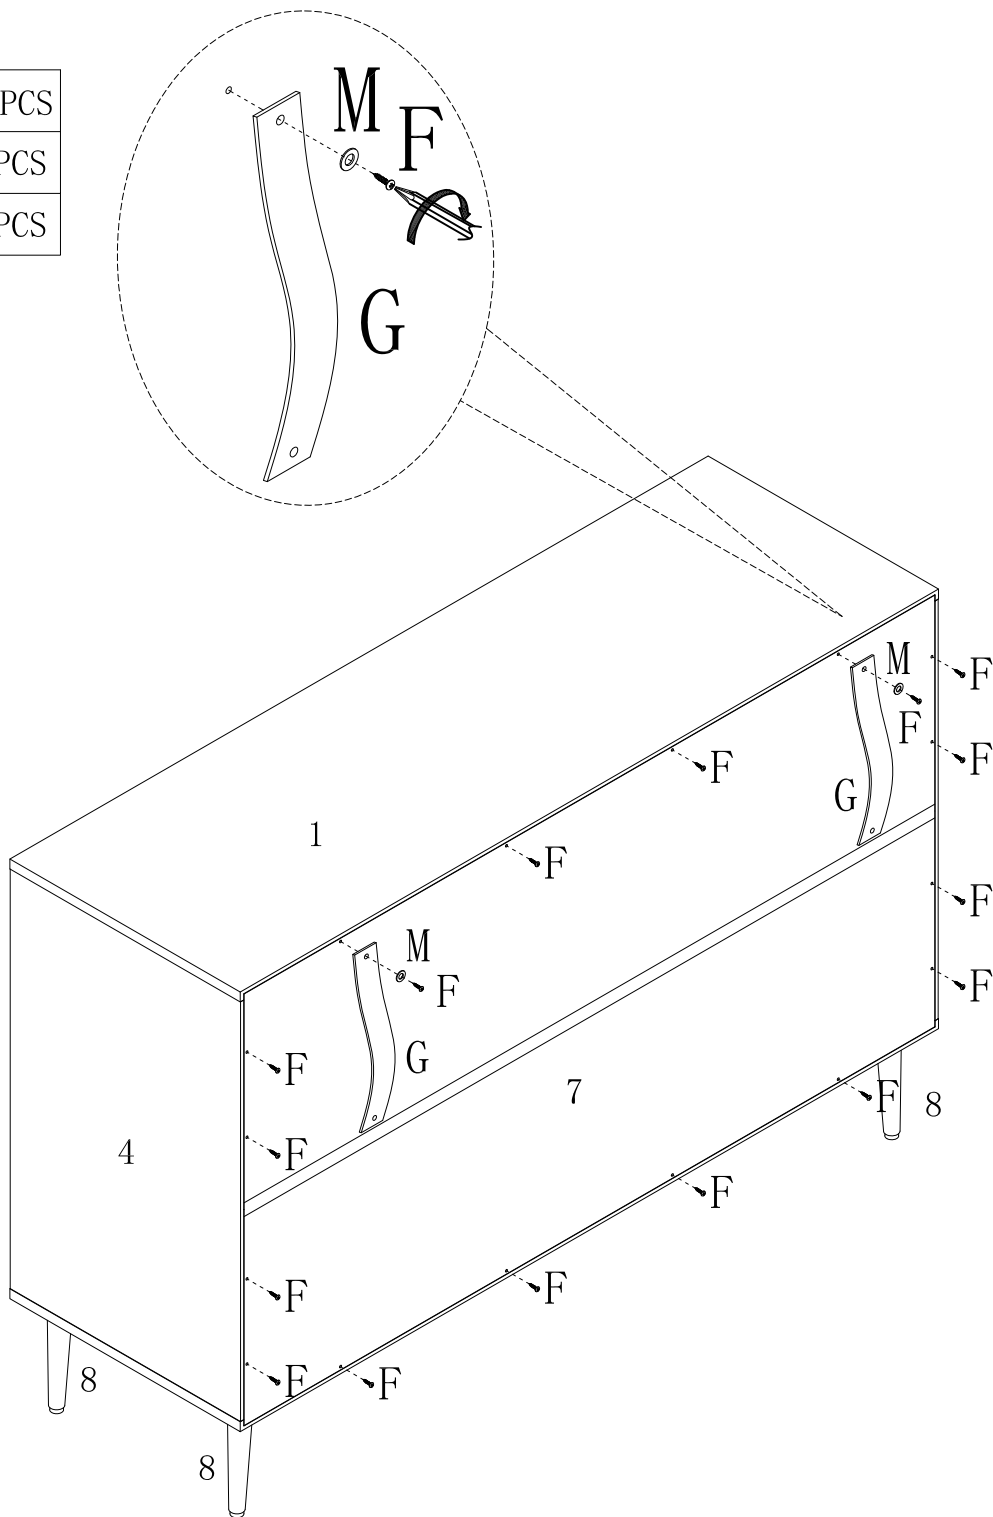

STEP 9

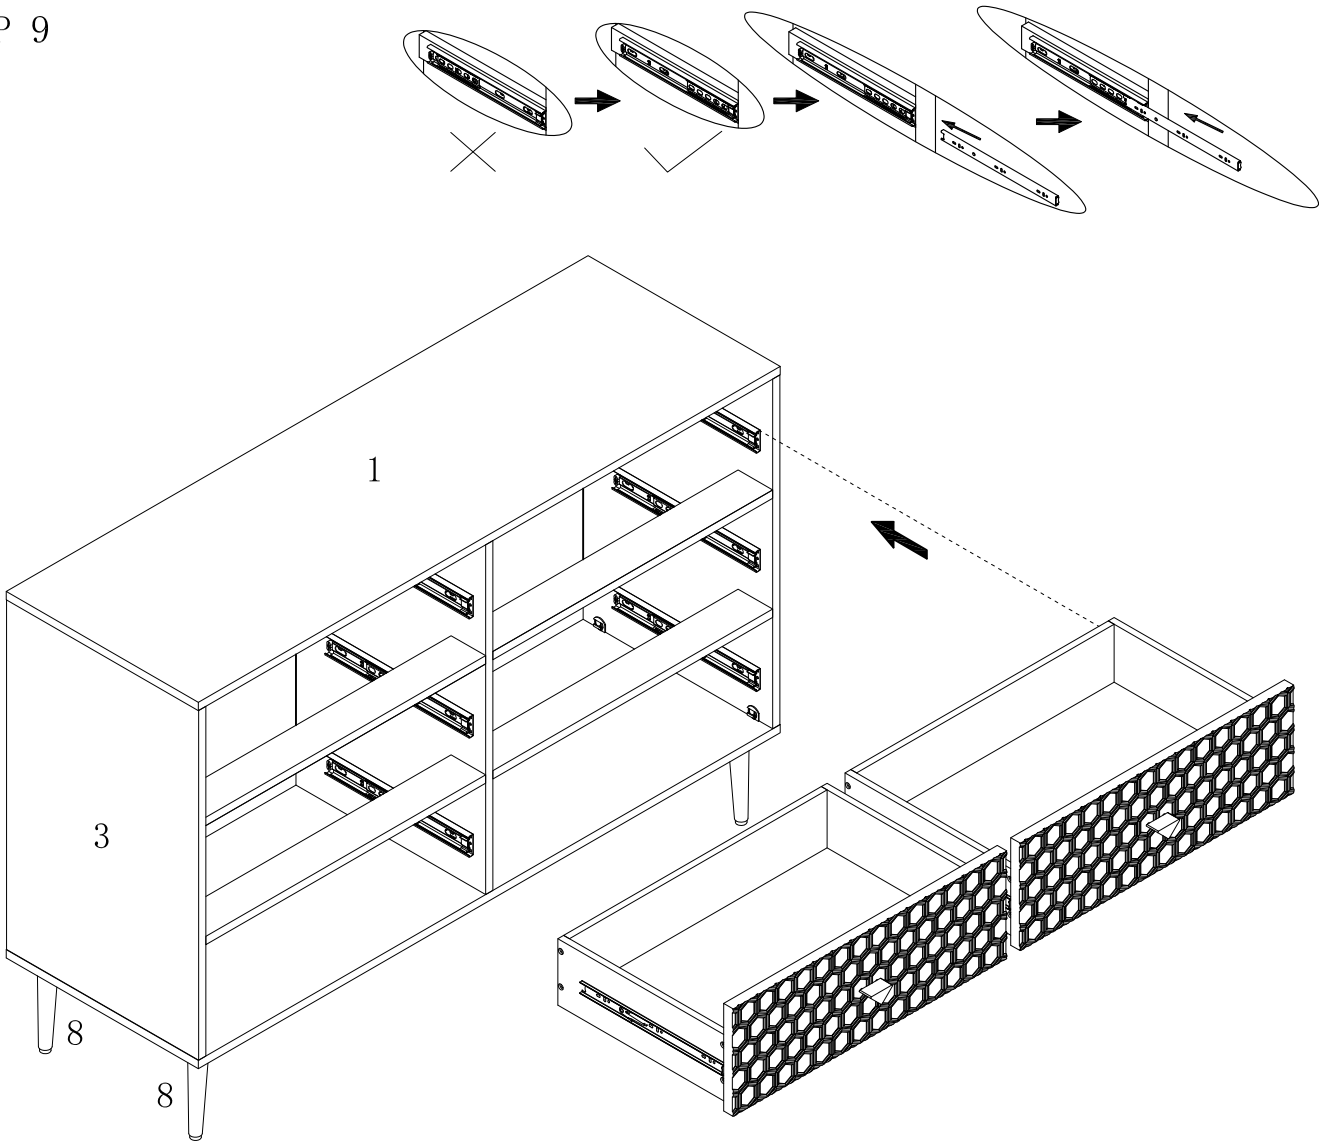


STEP 10

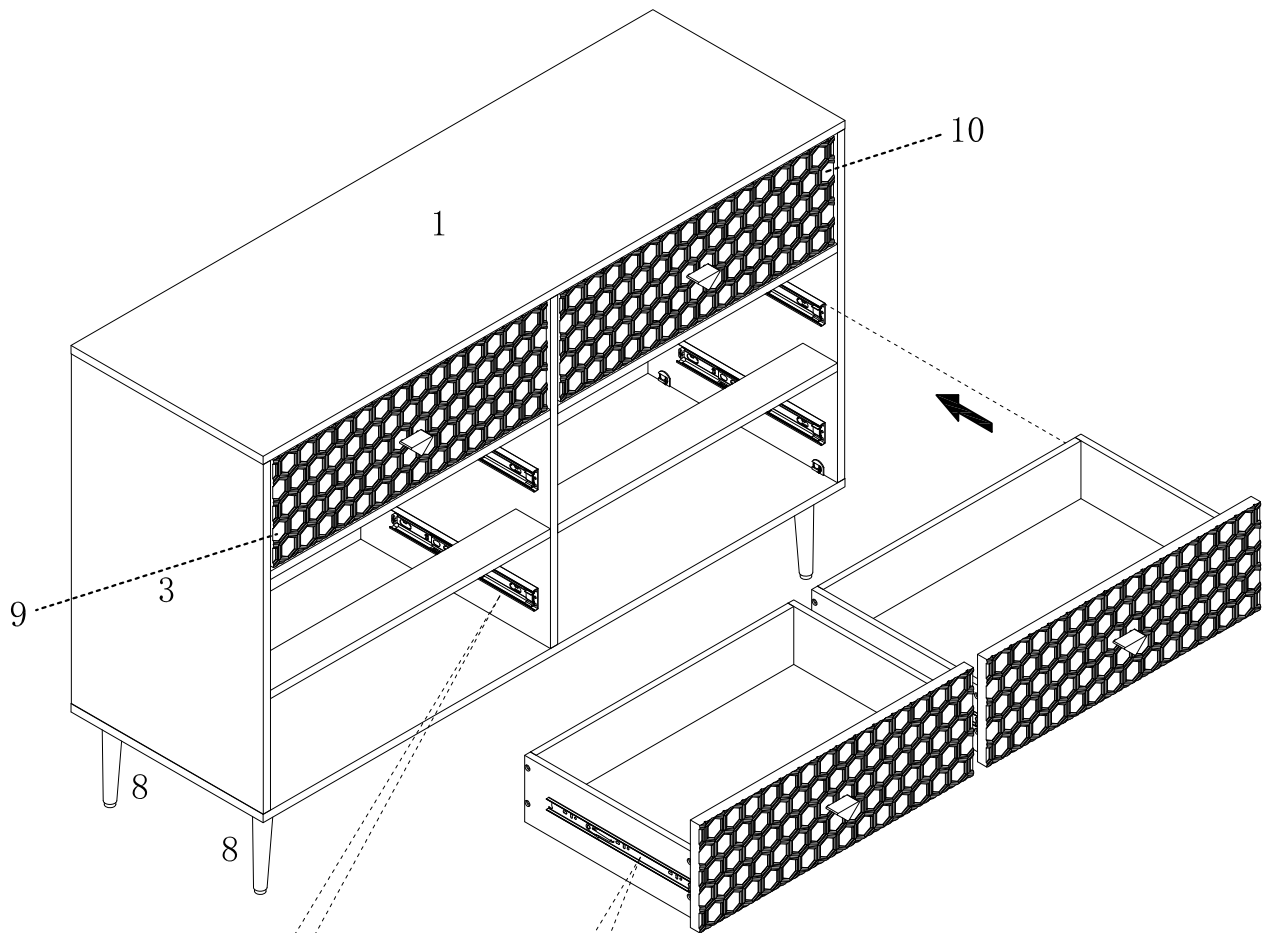

Tip: the front of the drawer, if there is tilt, do not force out, can be adjusted according to these two positions, please refer to the following steps.

STEP 11 1. Hold down the PVC buckle on the rails on both sides of the suction drum, and gently pull out the suction drum;


2. Loosen the screw of the original fixed track on the suction drum and the side plate, lock it up and fix it by adjusting the position of the hole next to it up and down, then install it into the suction drum.

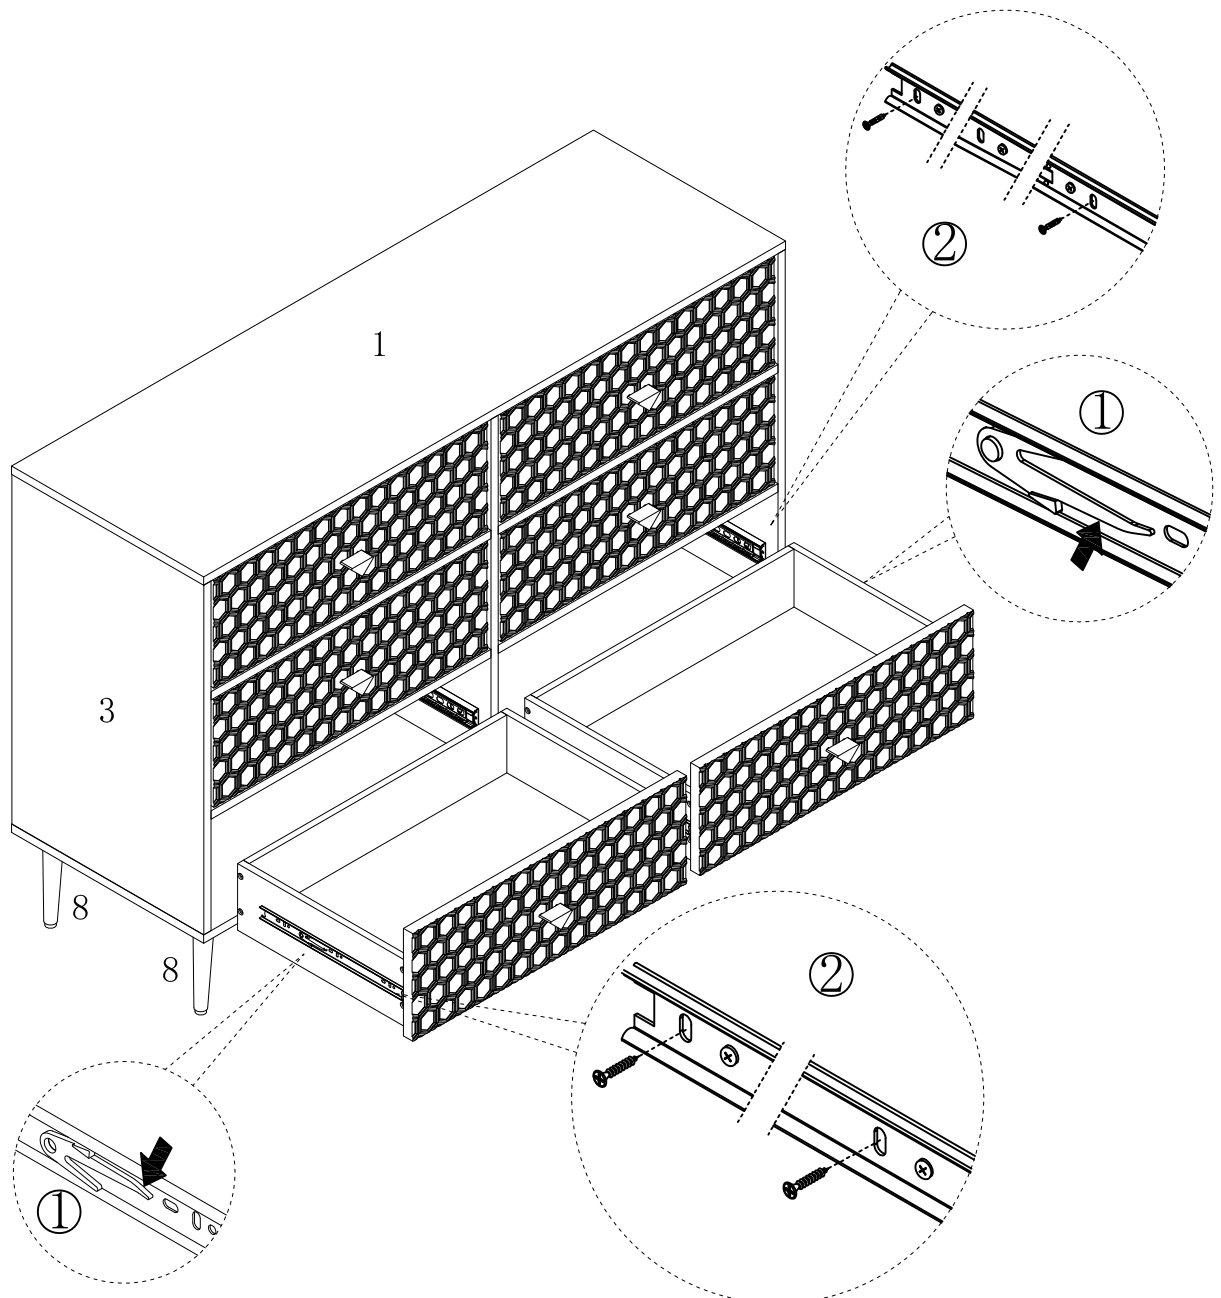

STEP 12

H:		2PCS
I:		2PCS
M:		2PCS

For safety reasons,
it is recommended to install
safety wall strap to fix the item.

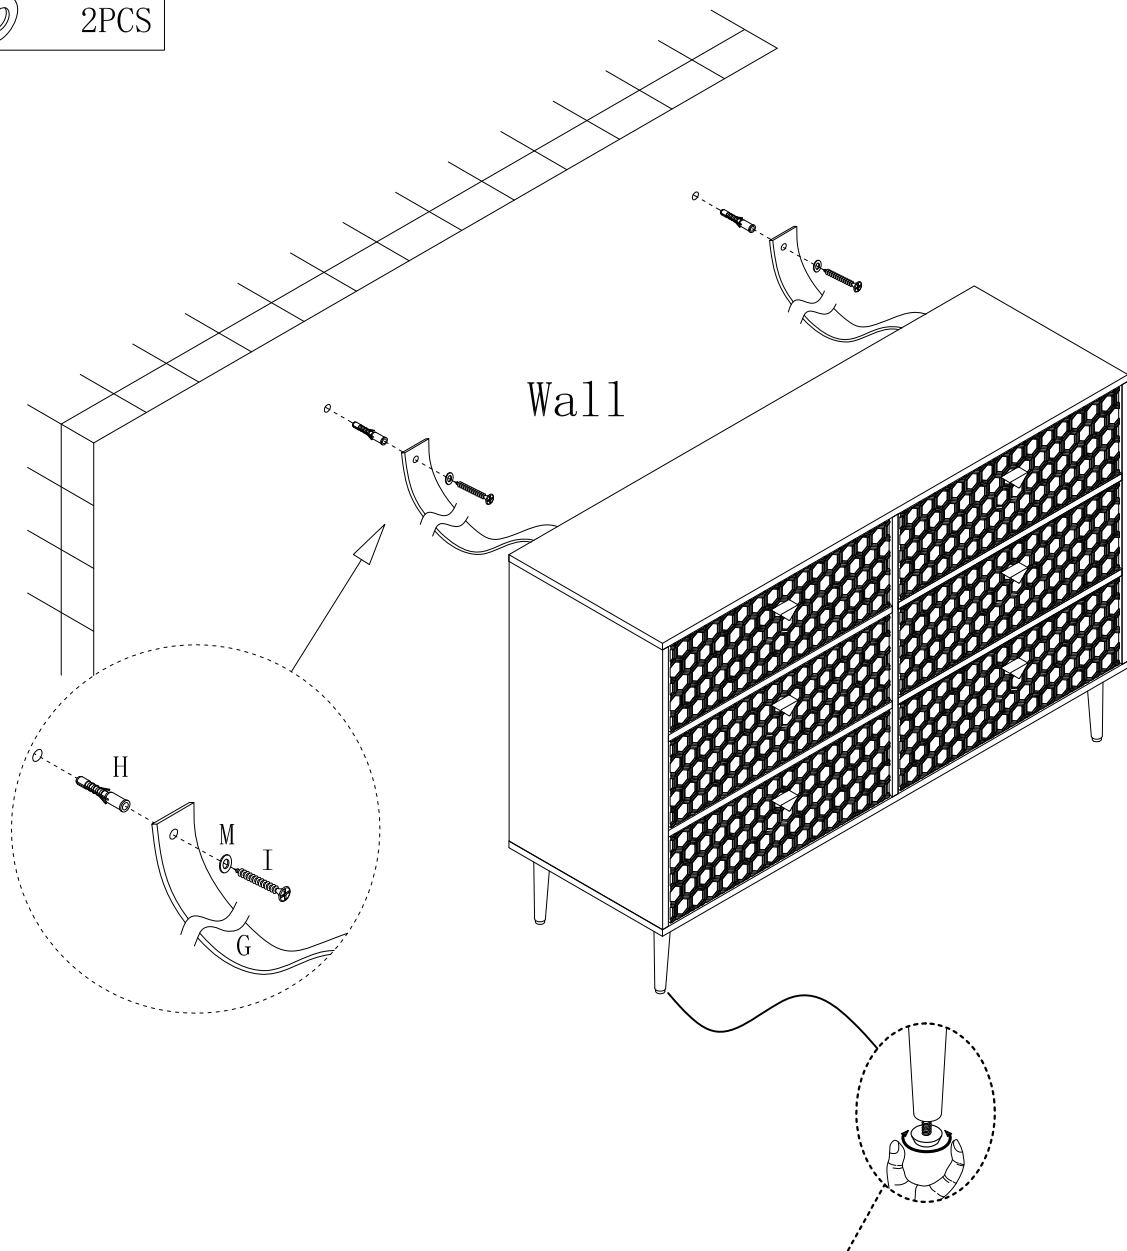

The feet pads can be
adjusted to help level
the cabinet.