




Assembly Instructions

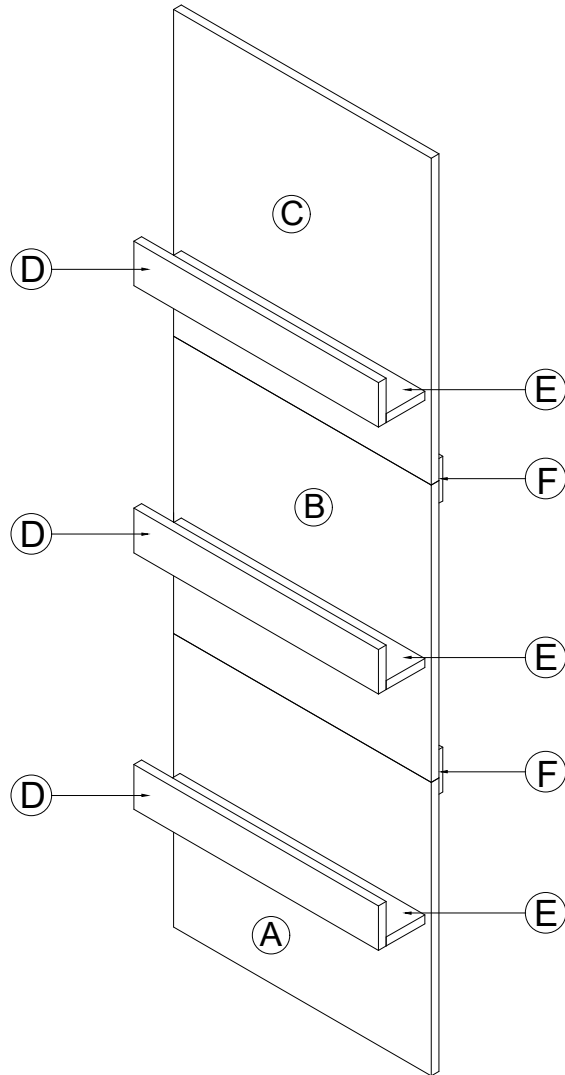


List of accessories

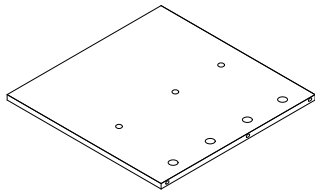


Ⓐ x 1pc

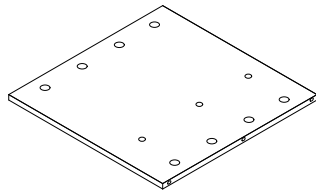


Ⓑ x 1pc

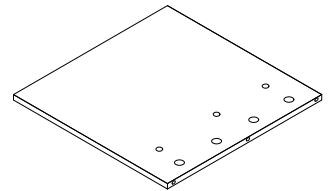


Ⓒ x 1pc

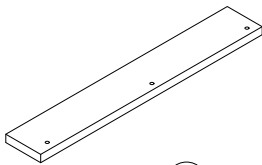

Ⓓ x 3pcs

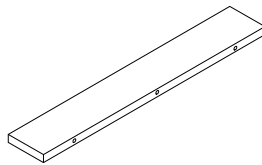


Ⓔ x 3pcs

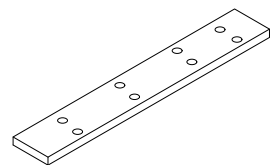

Ⓕ x 2pcs

①


M6*20mm

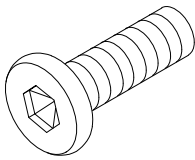

16+1pcs

②


M5*40mm

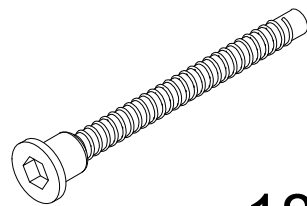

18+1pcs


③

Ø5.8*30mm

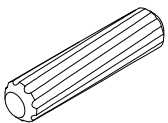

6+1pcs


④



M3

x1pcs

⑤



M4

x1pcs

Step 1


A x 1pc

B x 1pc

C x 1pc

③ x 6pcs

The three through holes of the B board are 10cm away from the edges and are installed towards the A board

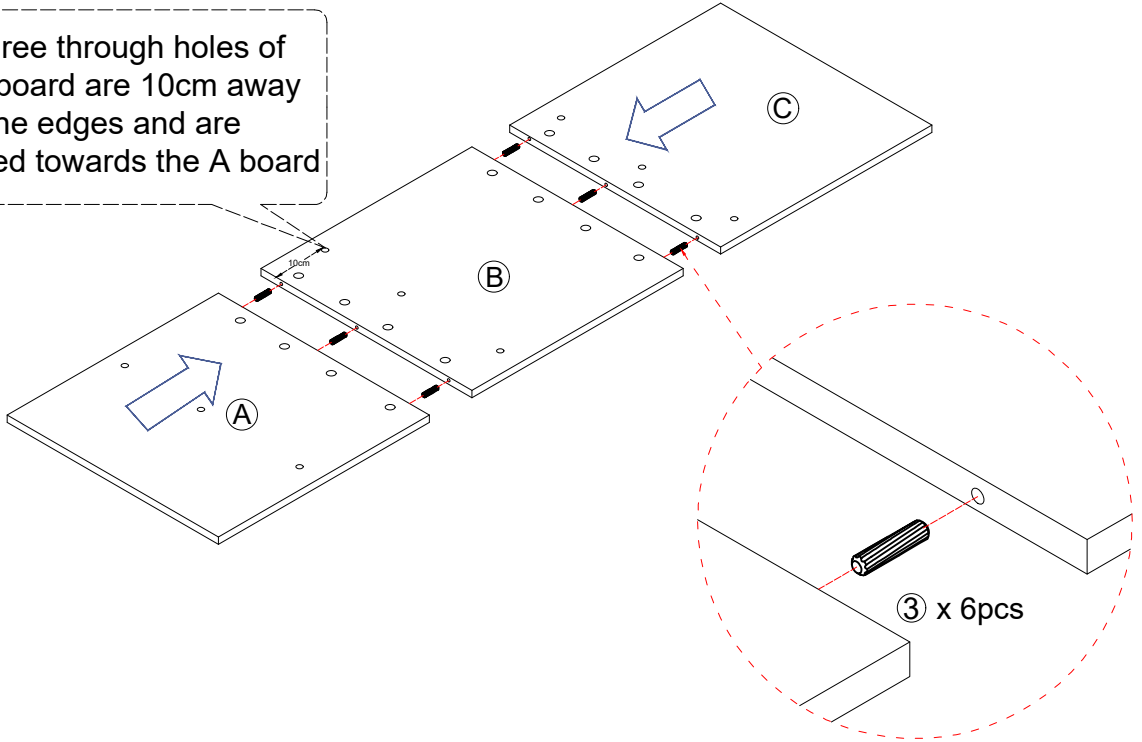


Step 2

F x 2pcs


① x 16pcs

⑤ x 1pc

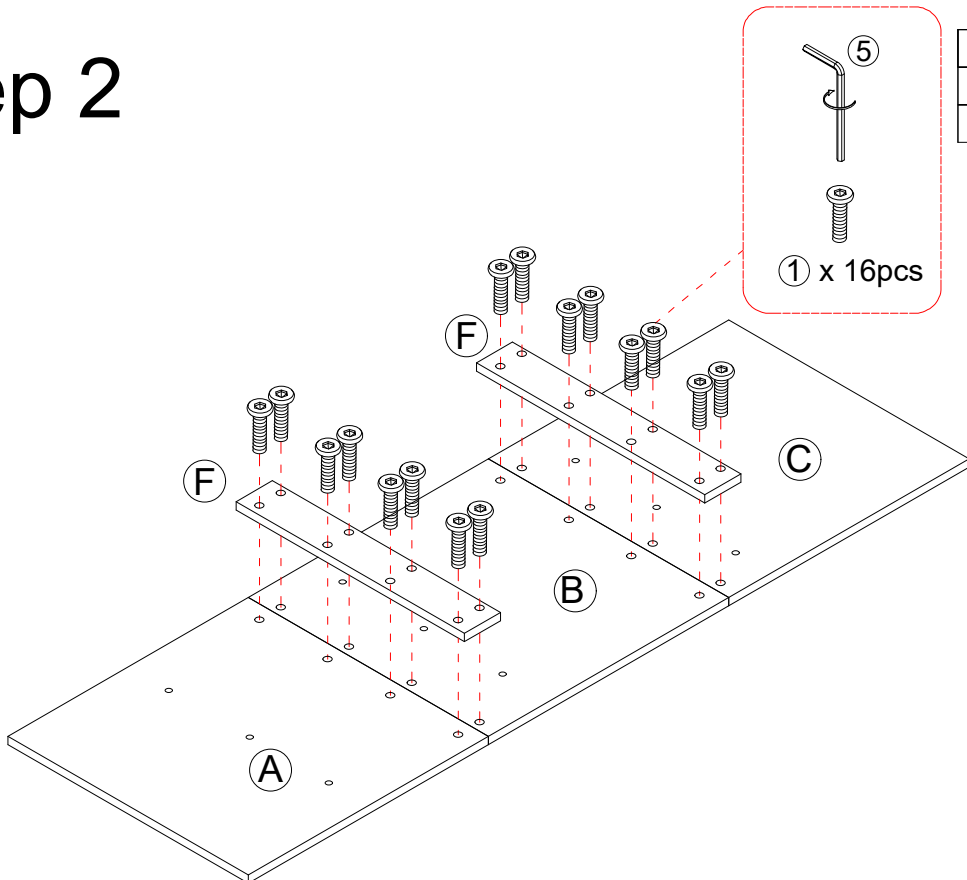

Step 3

- D x 3pcs
- E x 3pcs
- ② x 18pcs

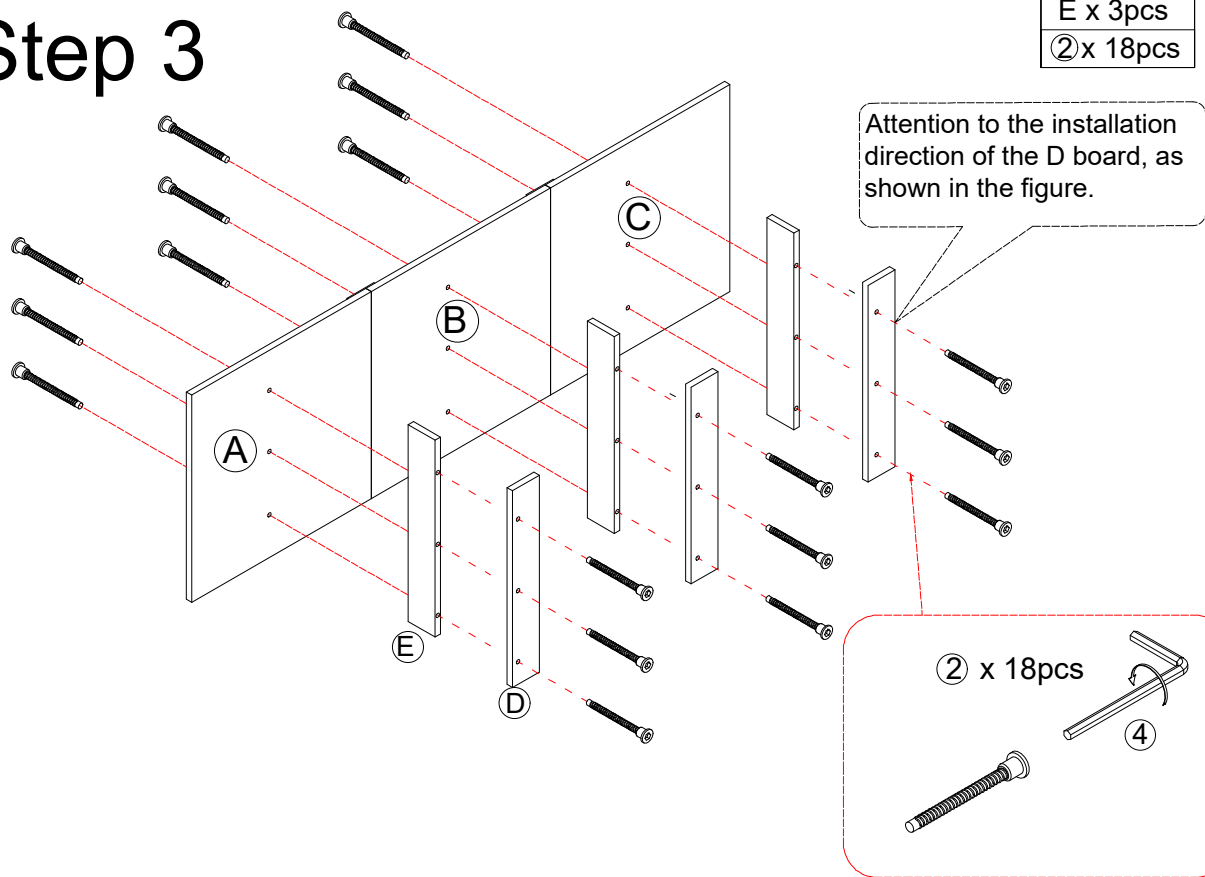

Step 4

