



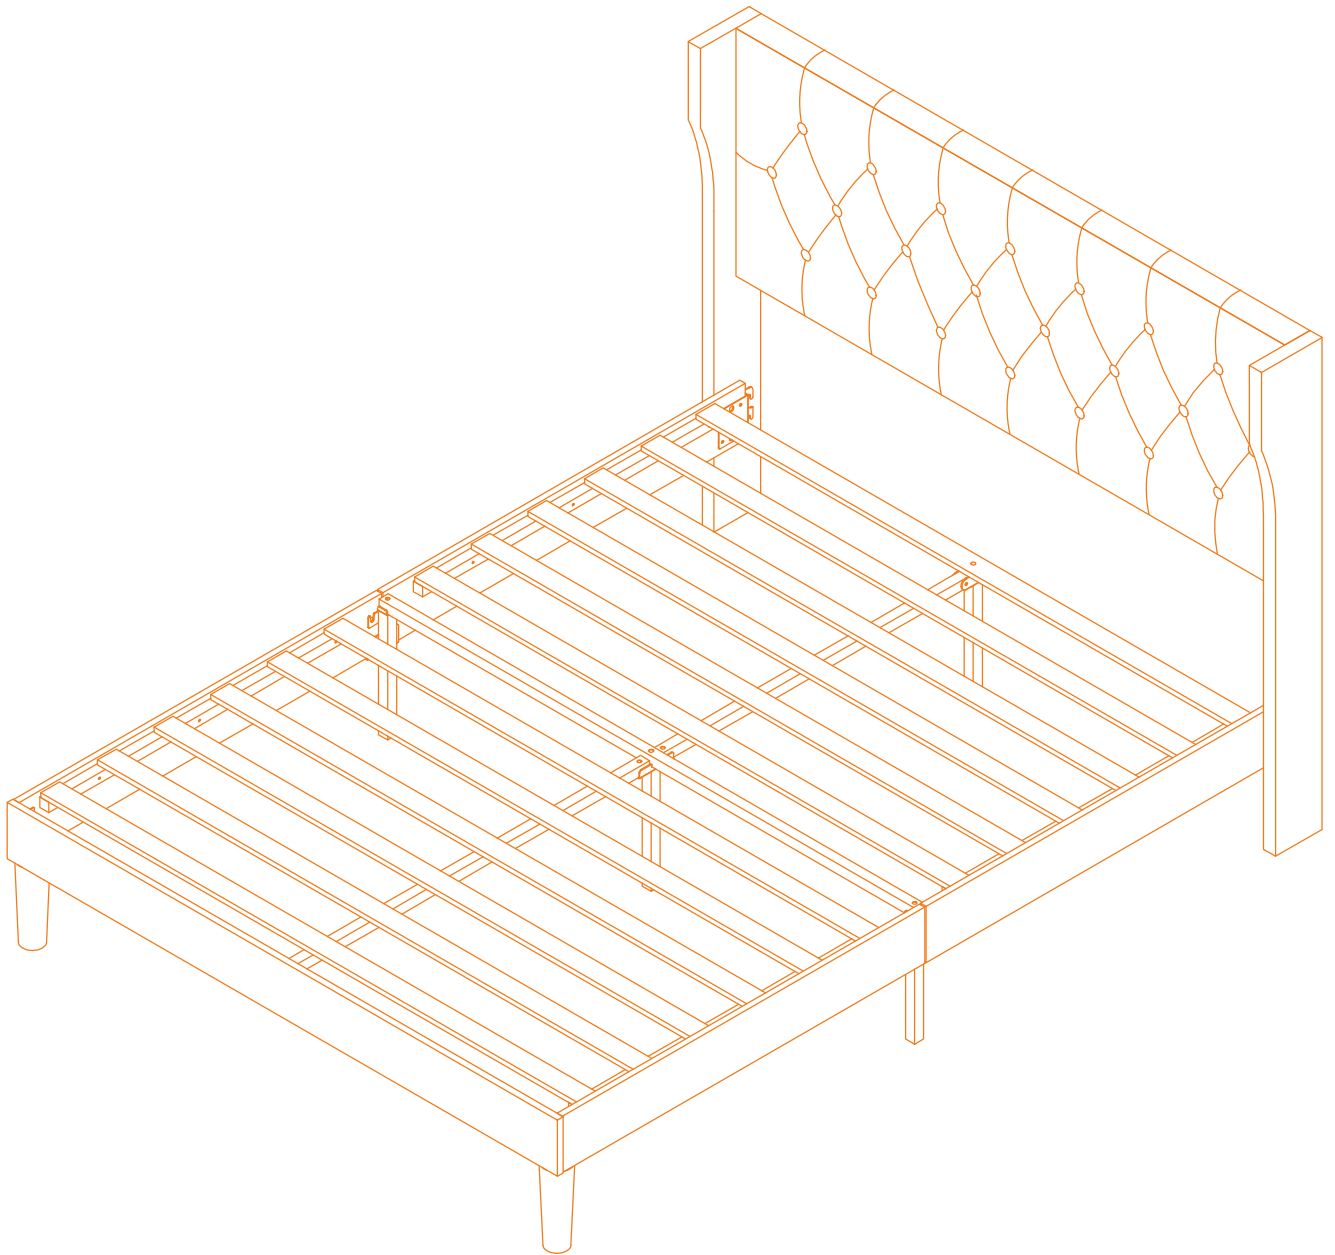


X 2

75X54 Upholstered Bed Frame-Full
80X60 Upholstered Bed Frame-Queen

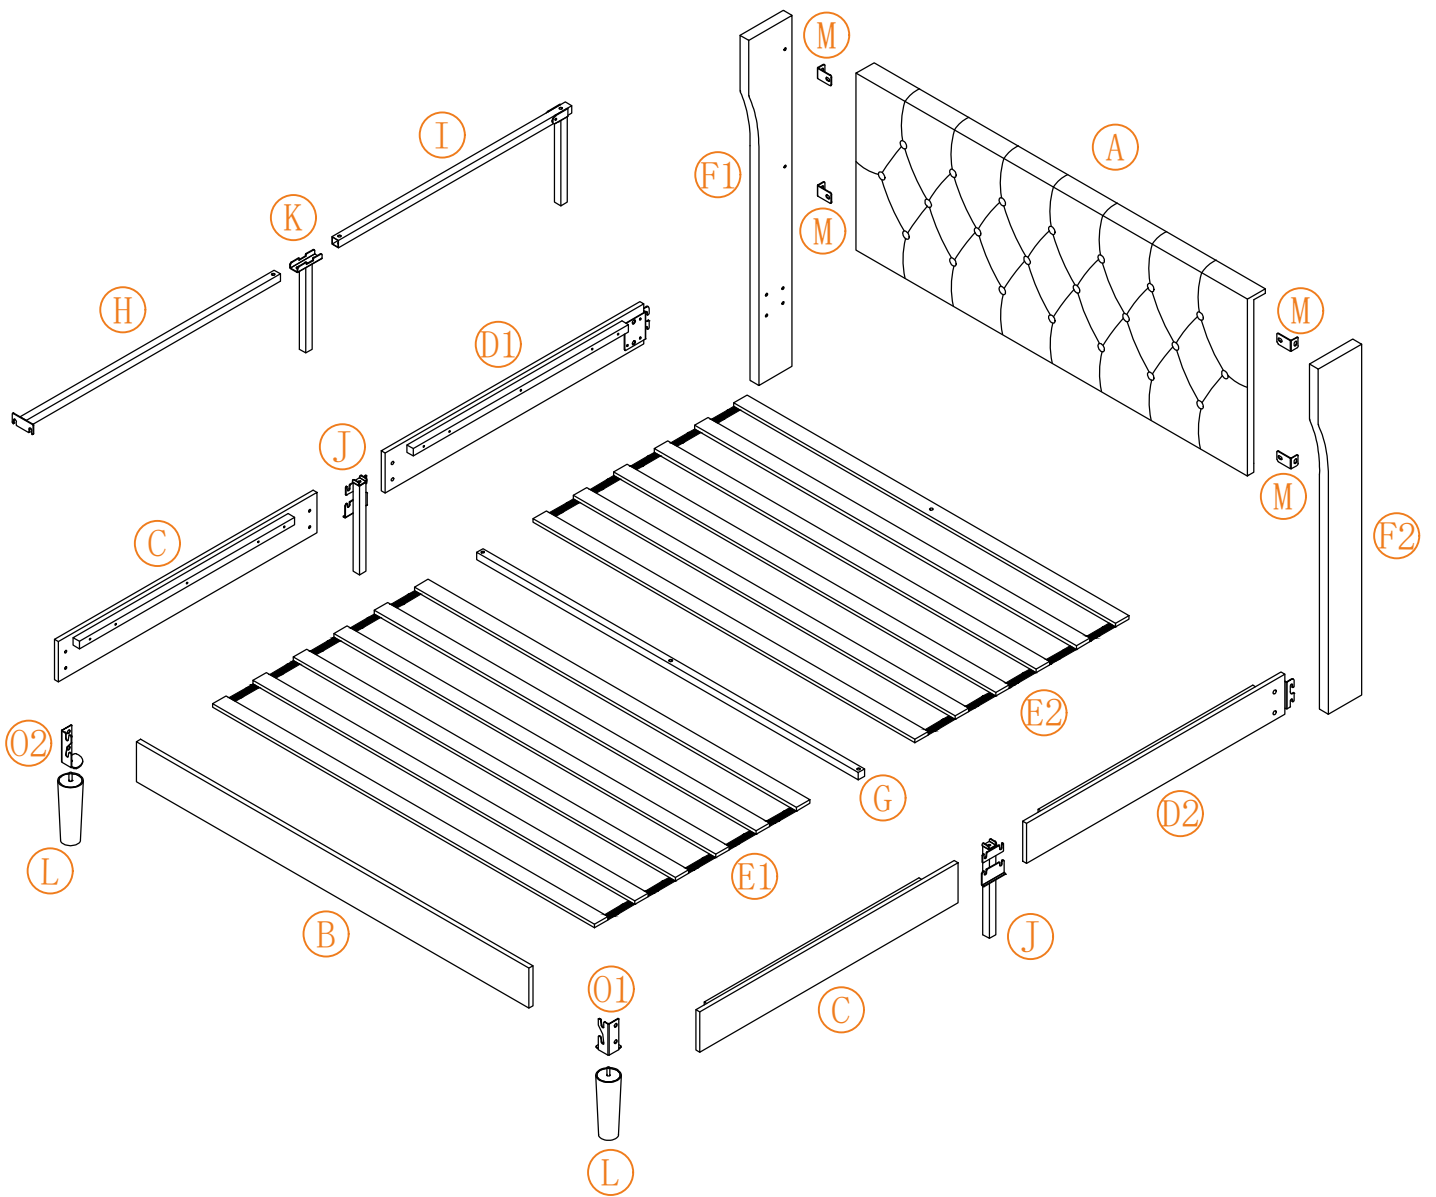




P x 2

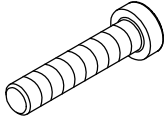


Flat head screw
M8*50

Q x 4



Countersunk screw
M8*50

R x 4




M8*40

S x 8



M8*25

T x 12



M8*18

U x 1




Ø22*Ø8.5

V x 1




M8 Spanner


A x1

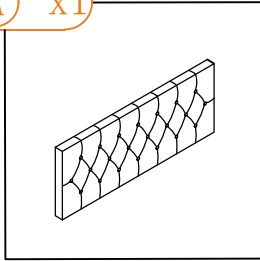


B x1

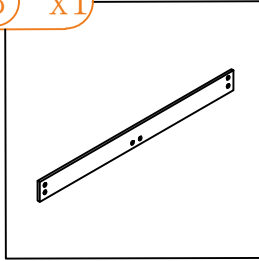


C x2

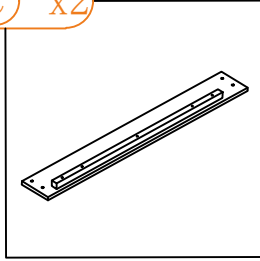


D1 x1

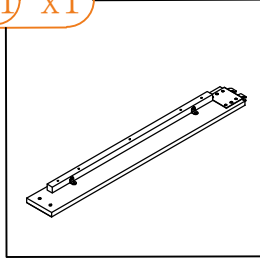


D2 x1

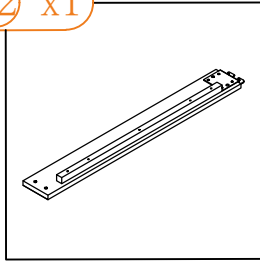


E1 x1

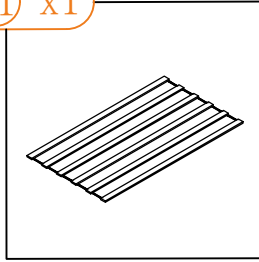


E2 x1

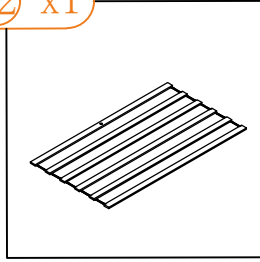


F1 x1

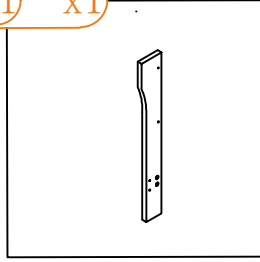


F2 x1

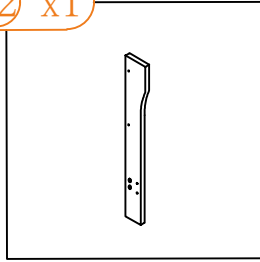


G x1

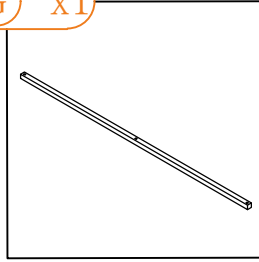


H x1

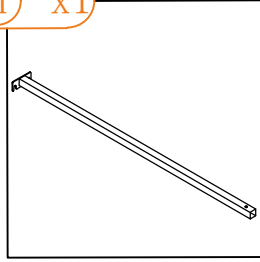


I x1

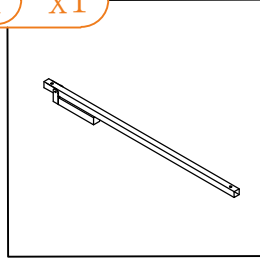


J x2

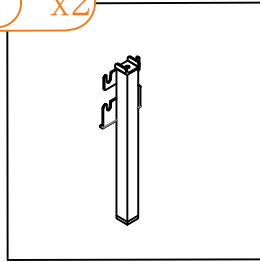


K x1

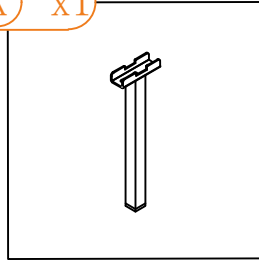


L x2

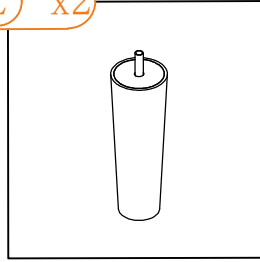


M x4

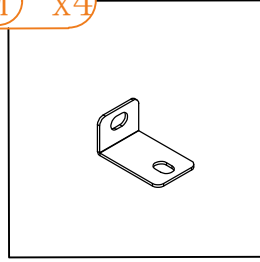





O1 x1

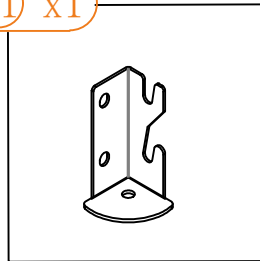

O2 x1






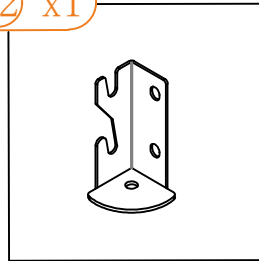


1

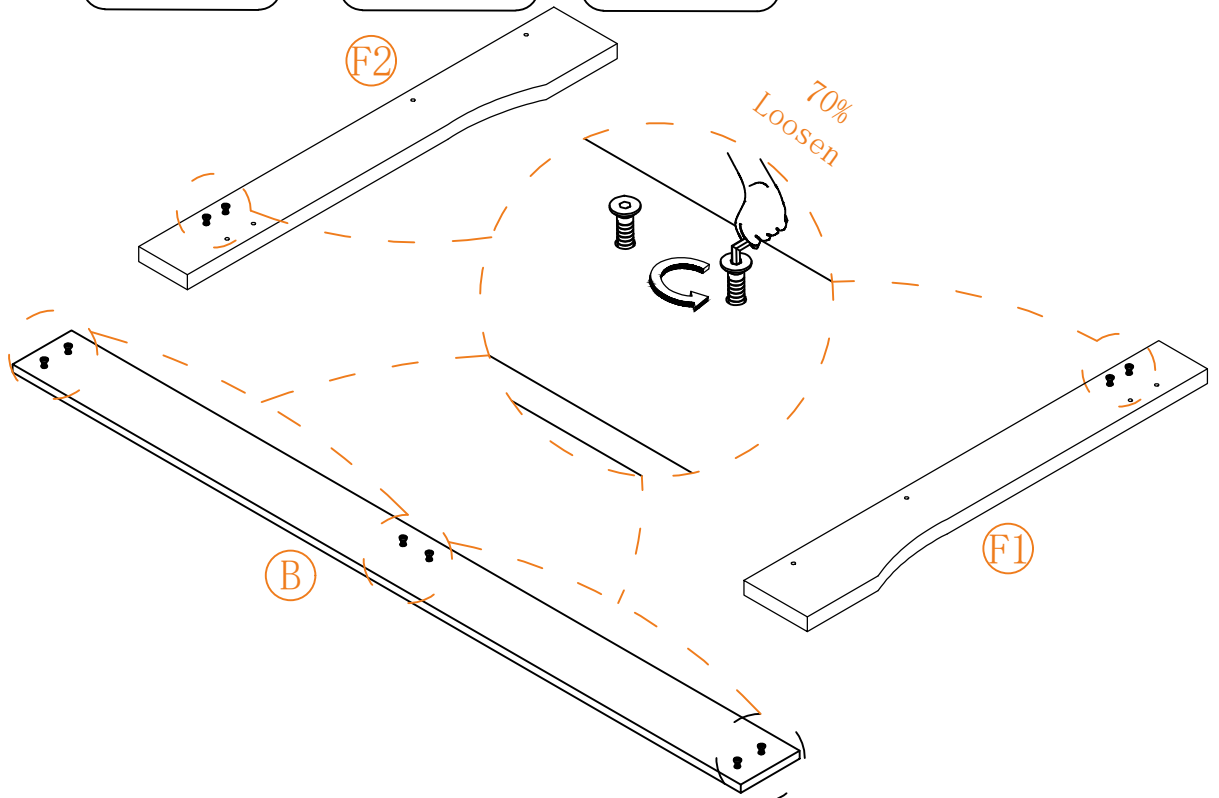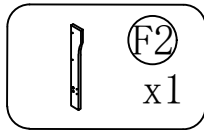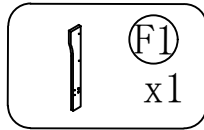
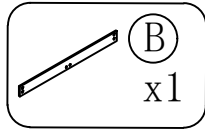


Loosen but don't remove the pre-installed screws.



2

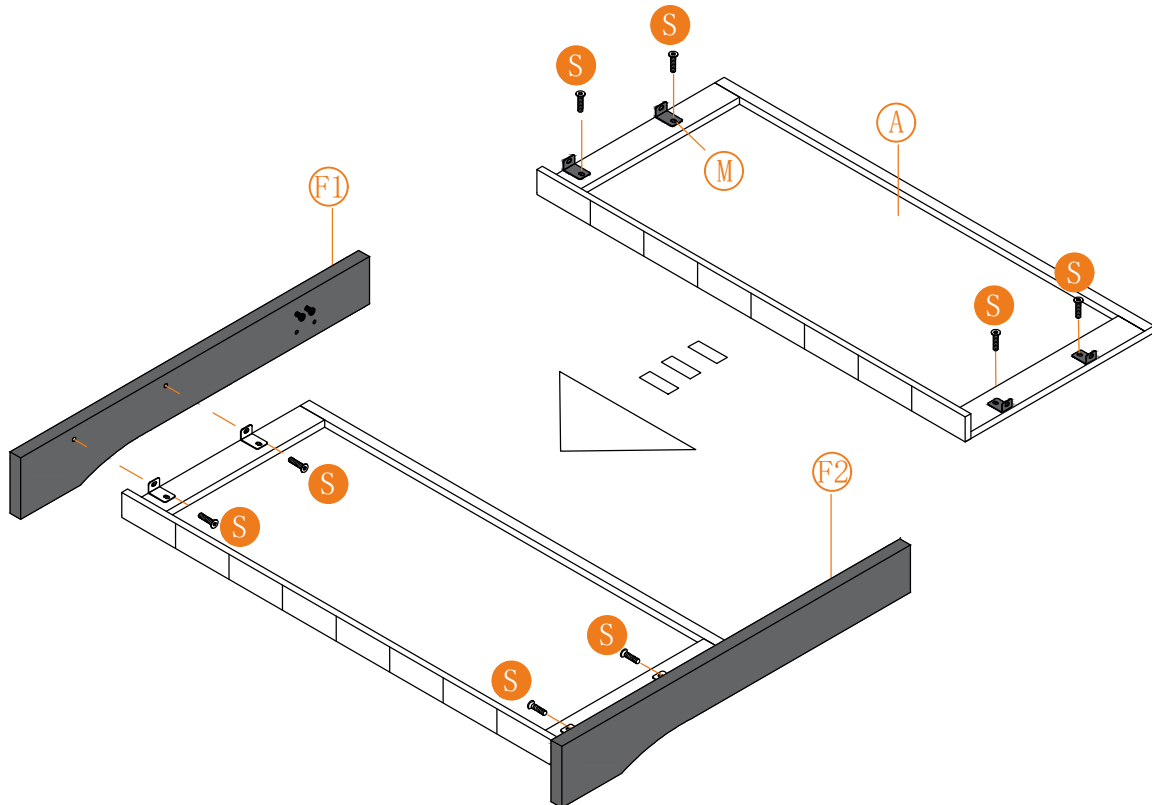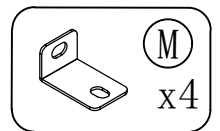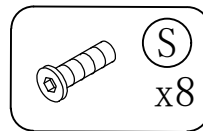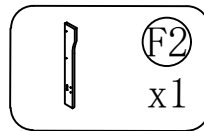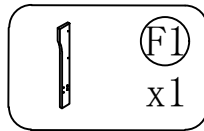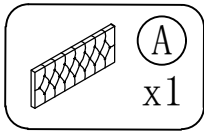






3

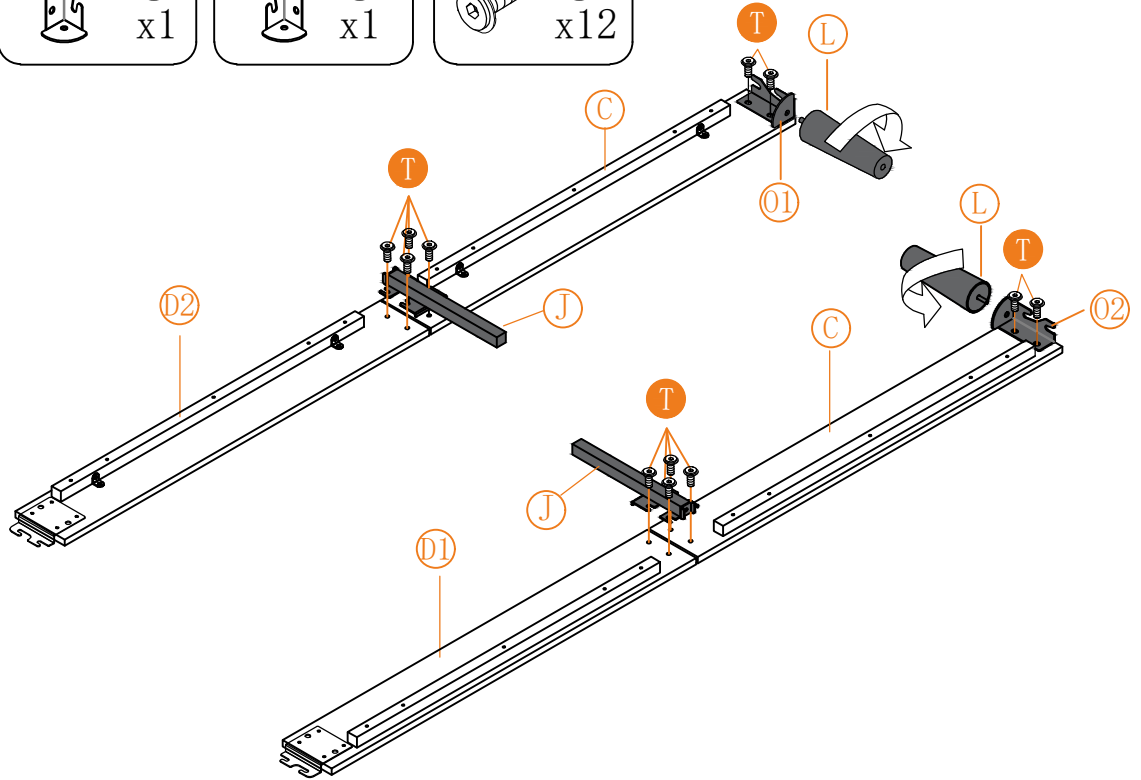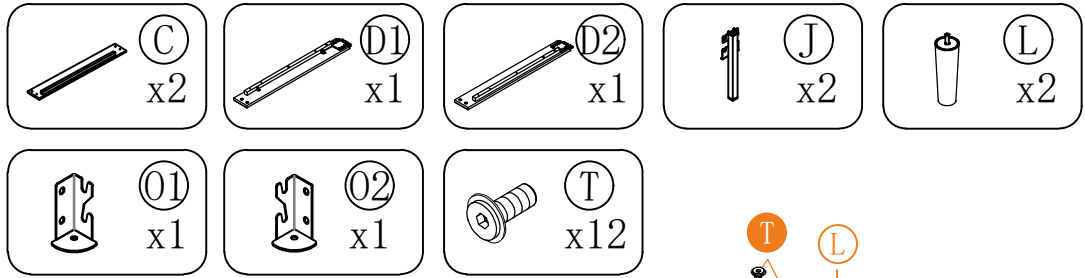


4

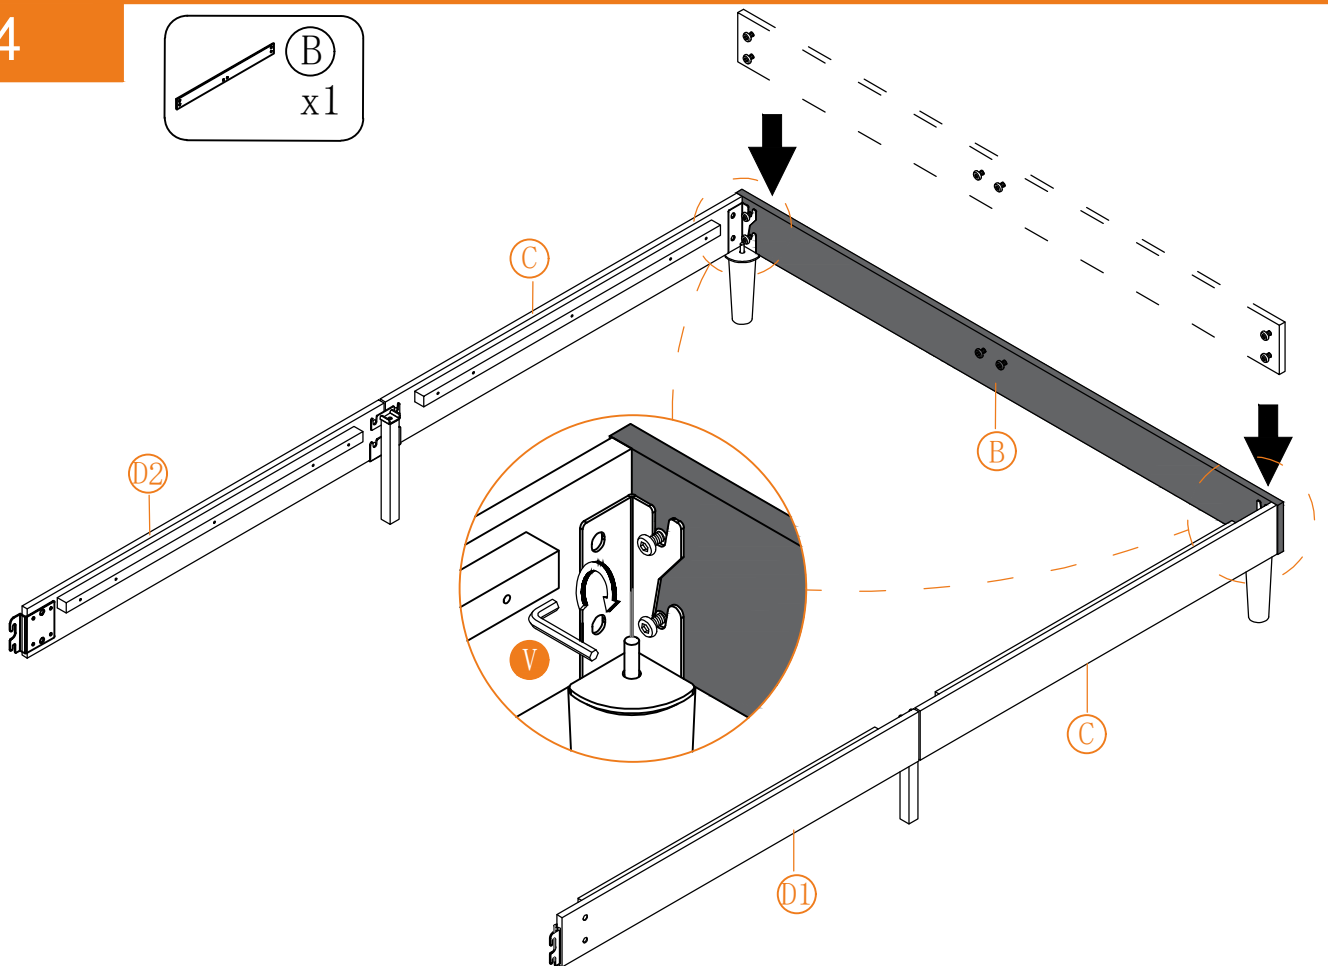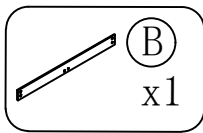





5

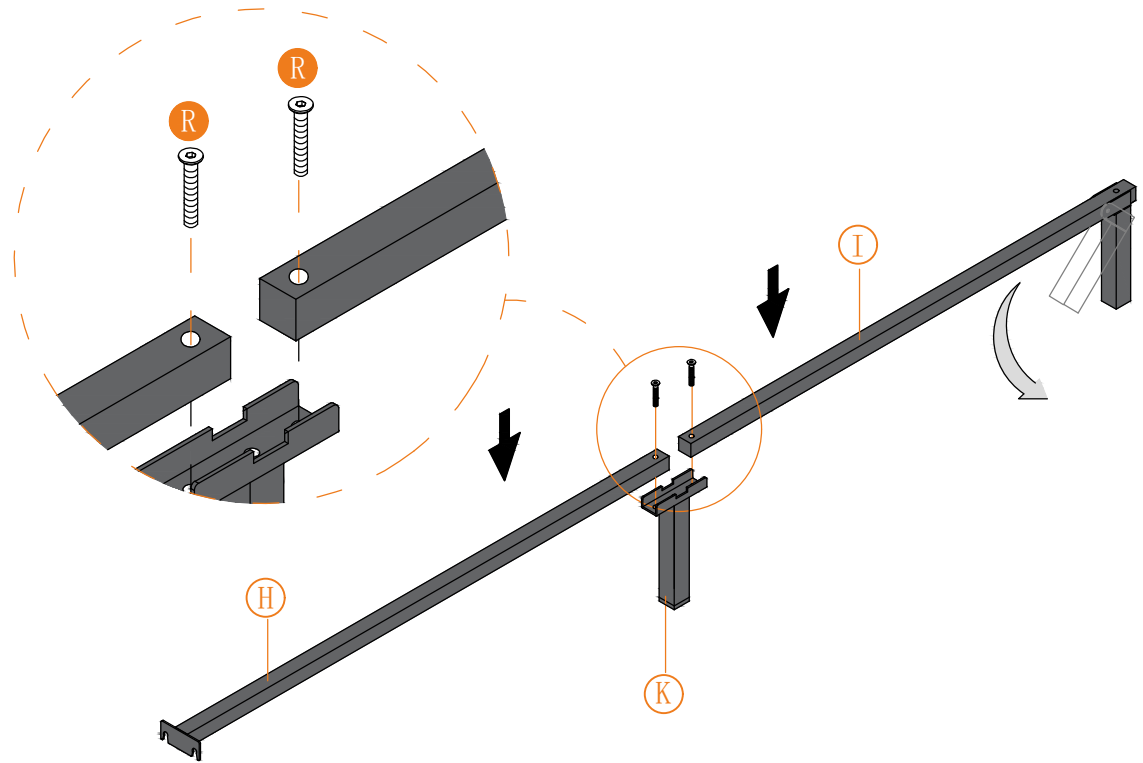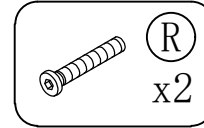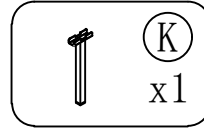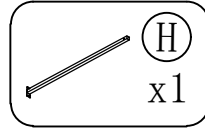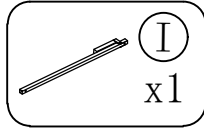


6

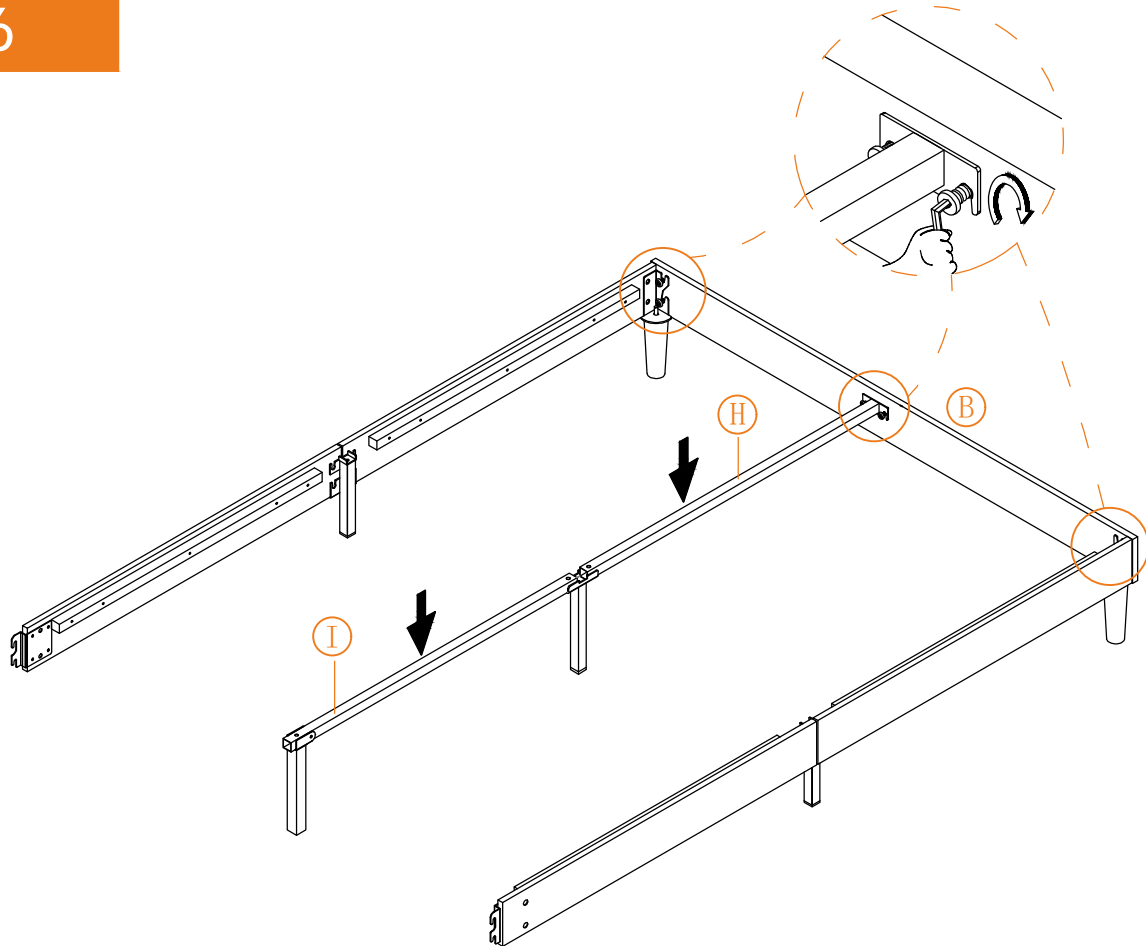




7

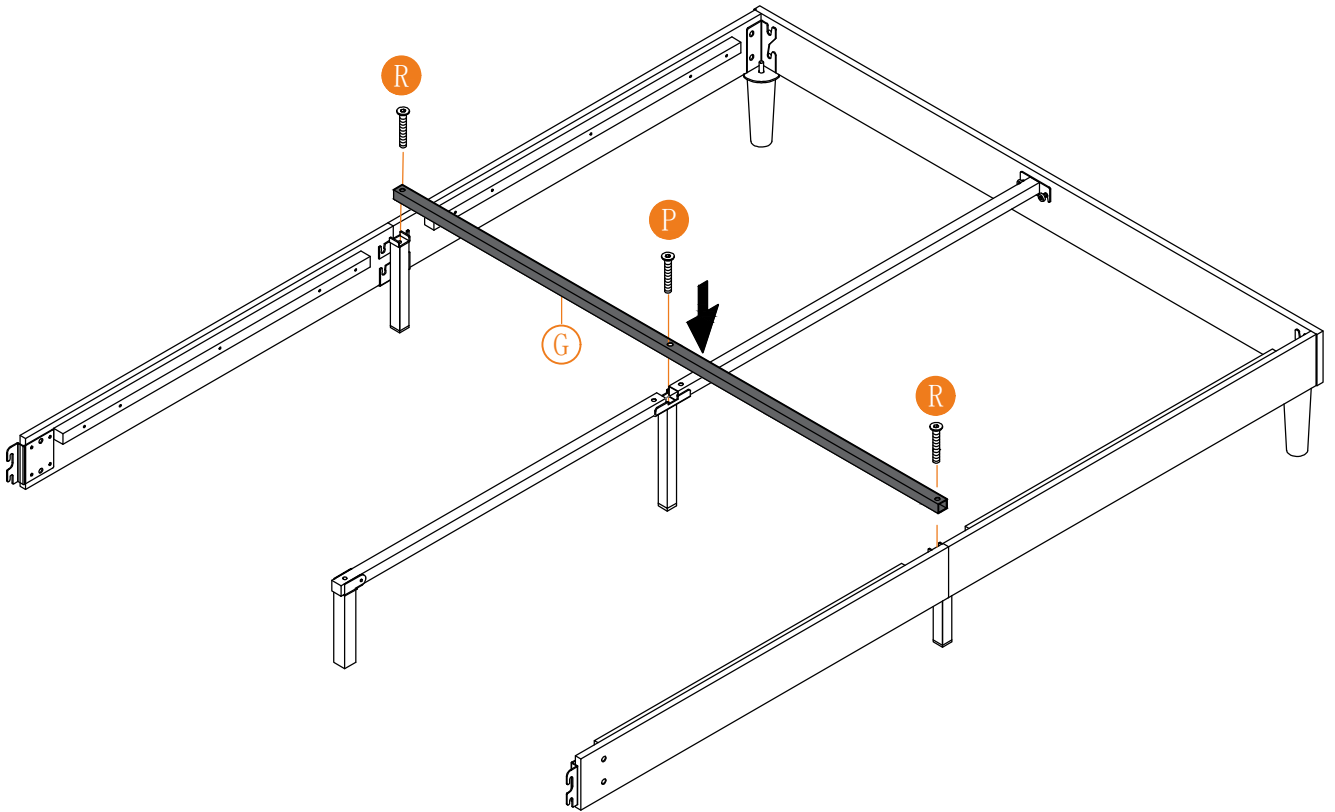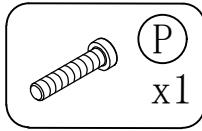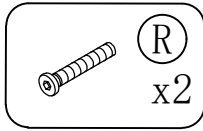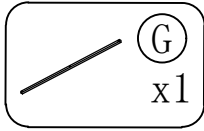

8

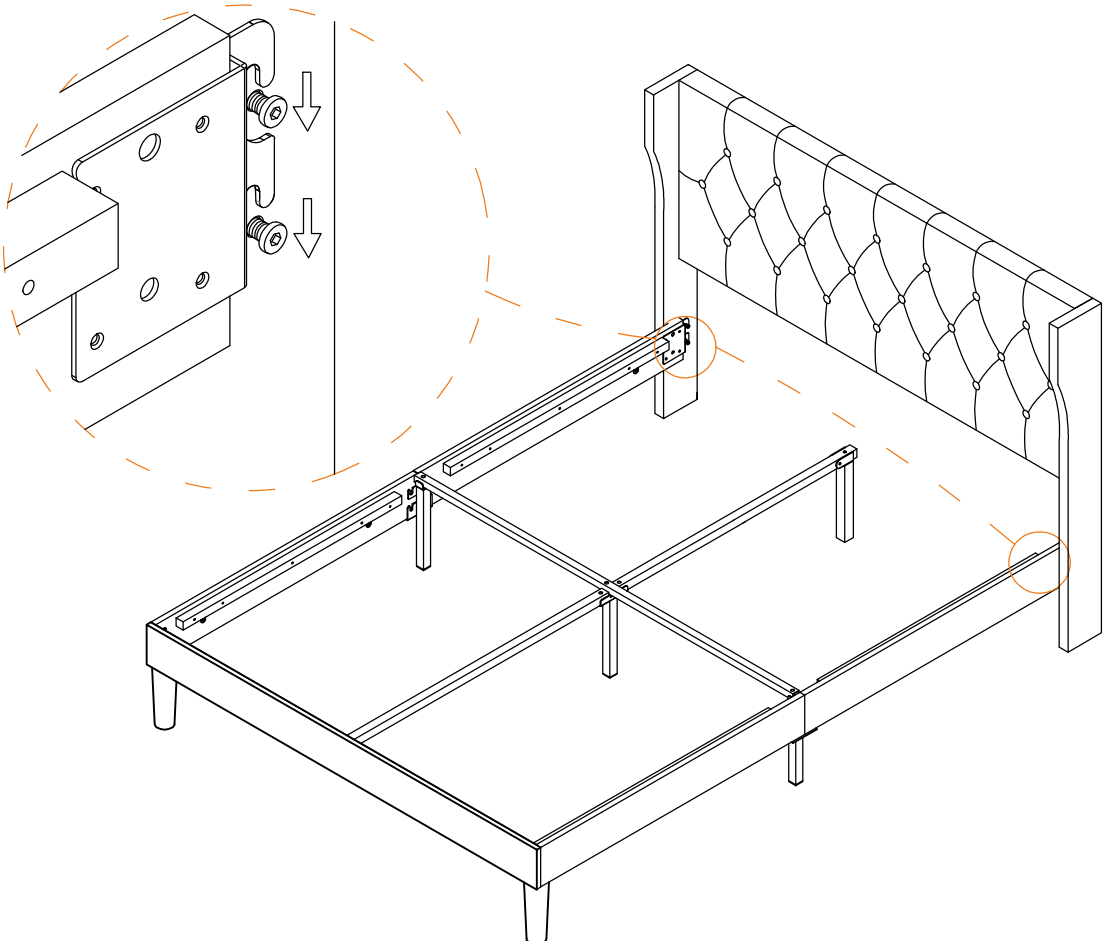

9

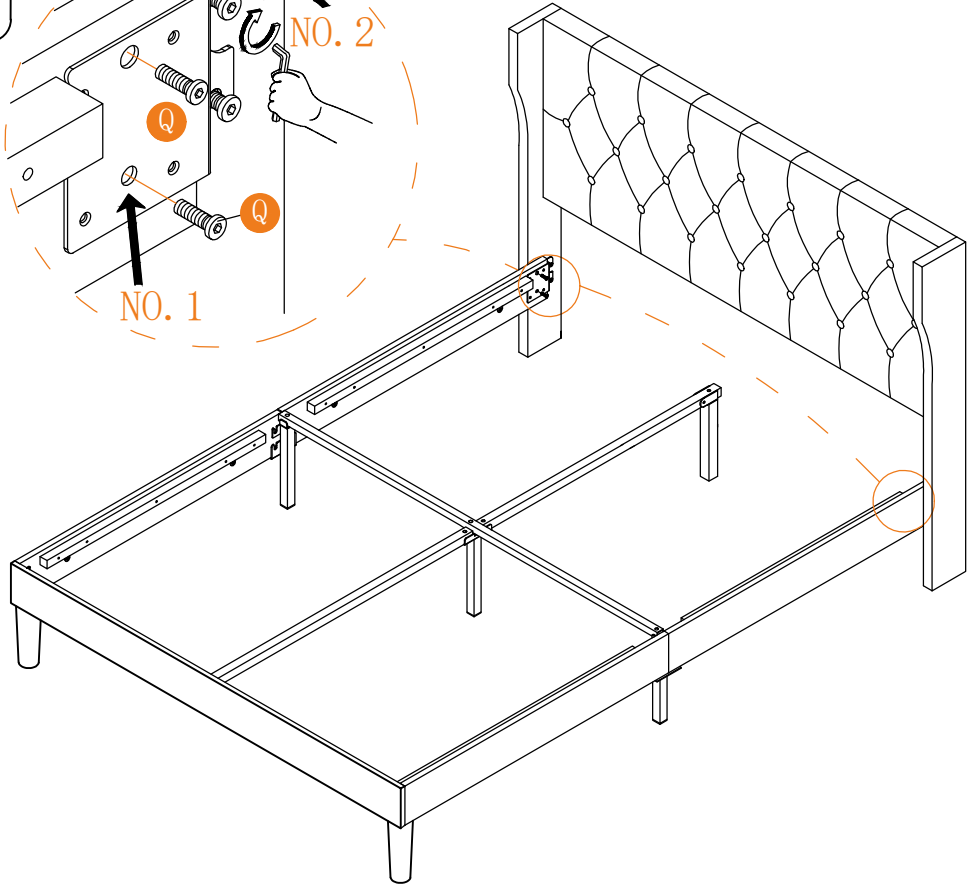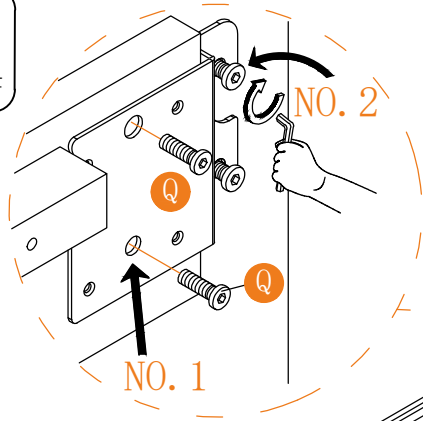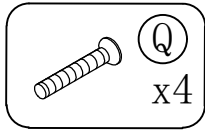

10

