



ASSEMBLY INSTRUCTIONS

PREPARATION OF BASE

Your garden building should be located upon a suitable base that is both level and firm enough to take the weight of the shed (and it's contents) without subsiding. Existing concrete, tarmac and paving slabs can all form a suitable base if both structurally sound and level.

We recommend that the base onto which your building will stand should be at least 75mm larger in each direction than the total floor size of the building (Actual floor area of the building: 1848x690 (6'x 2'3")) with a minimum height clearance of 1390mm. The chosen position in your garden for the siting of the building should be excavated to a depth of 75mm to allow a base of sand, on to which paving slabs can be evenly laid

IMPORTANT!

PLEASE READ PRIOR TO ASSEMBLY OF THE BUILDING

EVERY PRECAUTION IS TAKEN TO ENSURE THAT YOUR BUILDING HAS NO ELEMENT INCORRECTLY PLACED OR POSSIBLY HAZARDOUS, HOWEVER PRIOR TO USE PLEASE CHECK ALL SURFACES FOR THE FOLLOWING:

- 1 RAISED GRAIN, SPLINTERS: Sand down timber to smooth finish
- 2 NAIL/SCREW/PIN HEADS PROUD: Tap home to be flush with surface of timber
- 3 DAMAGED SCREW HEADS RESULTING IN SHARP SPLINTERS OF METAL: Replace
- 4 SHARP ENDS OF NAILS/ SCREWS/ PINS PROTRUDING THROUGH THE PANEL: Remove and reposition.
- 5 ENSURE ALL PARTS ARE SECURED AGAINST REASONABLE FORCE: Remove and refit
- 6 ENSURE THERE ARE NO LOOSE PARTS: Remove and refit/discard

WE RECOMMEND THAT PROTECTIVE GLOVES BE WORN THROUGHOUT

TREATMENT / CARE OF YOUR GARDEN BUILDING

Treat with a suitable decorative wood finish immediately. We recommend that all timber pieces be treated again prior to assembly and then again. We further recommend that all pieces are treated again at least annually or as frequently as the instructions on the product used recommends.

We would suggest that all wall panels be treated (prior to being assembled) in an upside-down position to allow the finish/treatment to ingress into the tongue and groove jointing.

Do not apply decorative wood finish / treatments to wet or damp timber. Please observe the instructions of the wood finish / treatment manufacturer.

Garden buildings are not waterproof, therefore on assembling the building we recommend using a silicon based sealant between wall panels.

PLEASE NOTE








Wood is a natural product and is therefore prone to changes in appearance, including some warping, movement and splitting, particularly during unusual climatic conditions (long hot or wet spells of weather). As a natural occurrence this is not covered by a guarantee.

TOOLS REQUIRED

- Hammer
- Sand paper
- Gloves
- Battery-powered drill /screwdriver
- 8mm drill bit
- Tape measure
- Sharp knife

PARTS LIST


PLEASE LAY OUT PARTS AND CHECK OFF AGAINST CHECK LIST

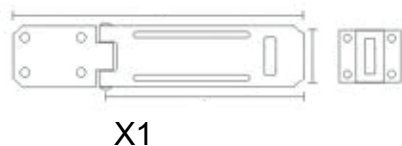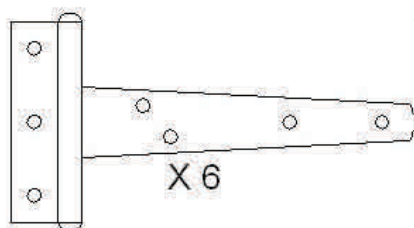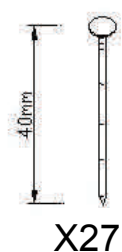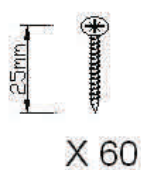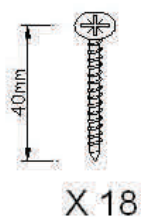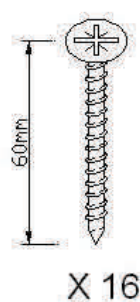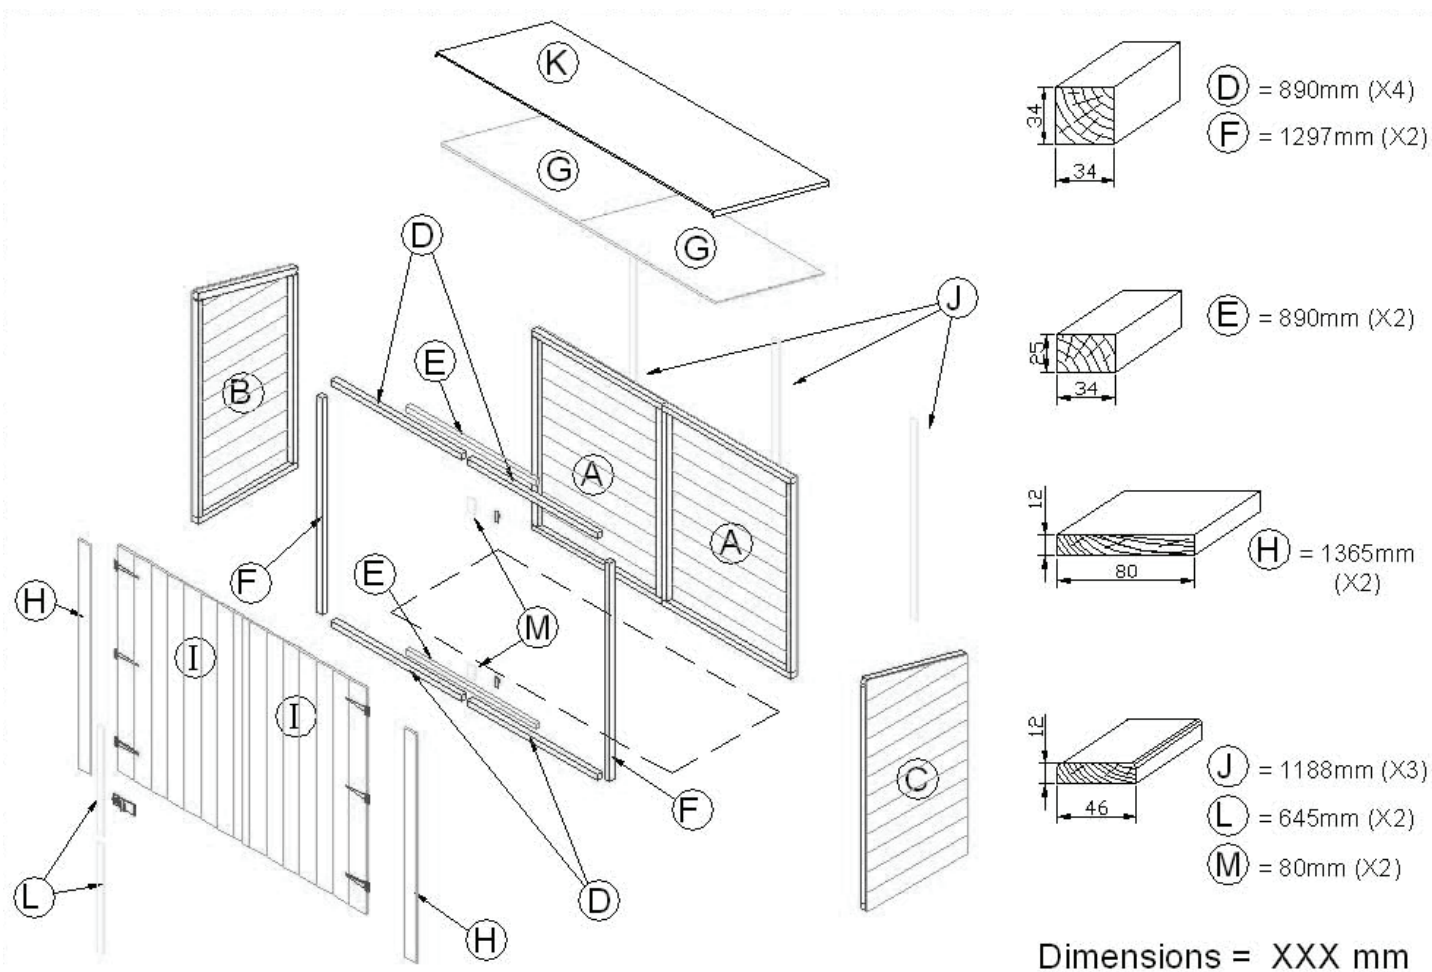


X 1




WALL ASSEMBLY - STEP ONE

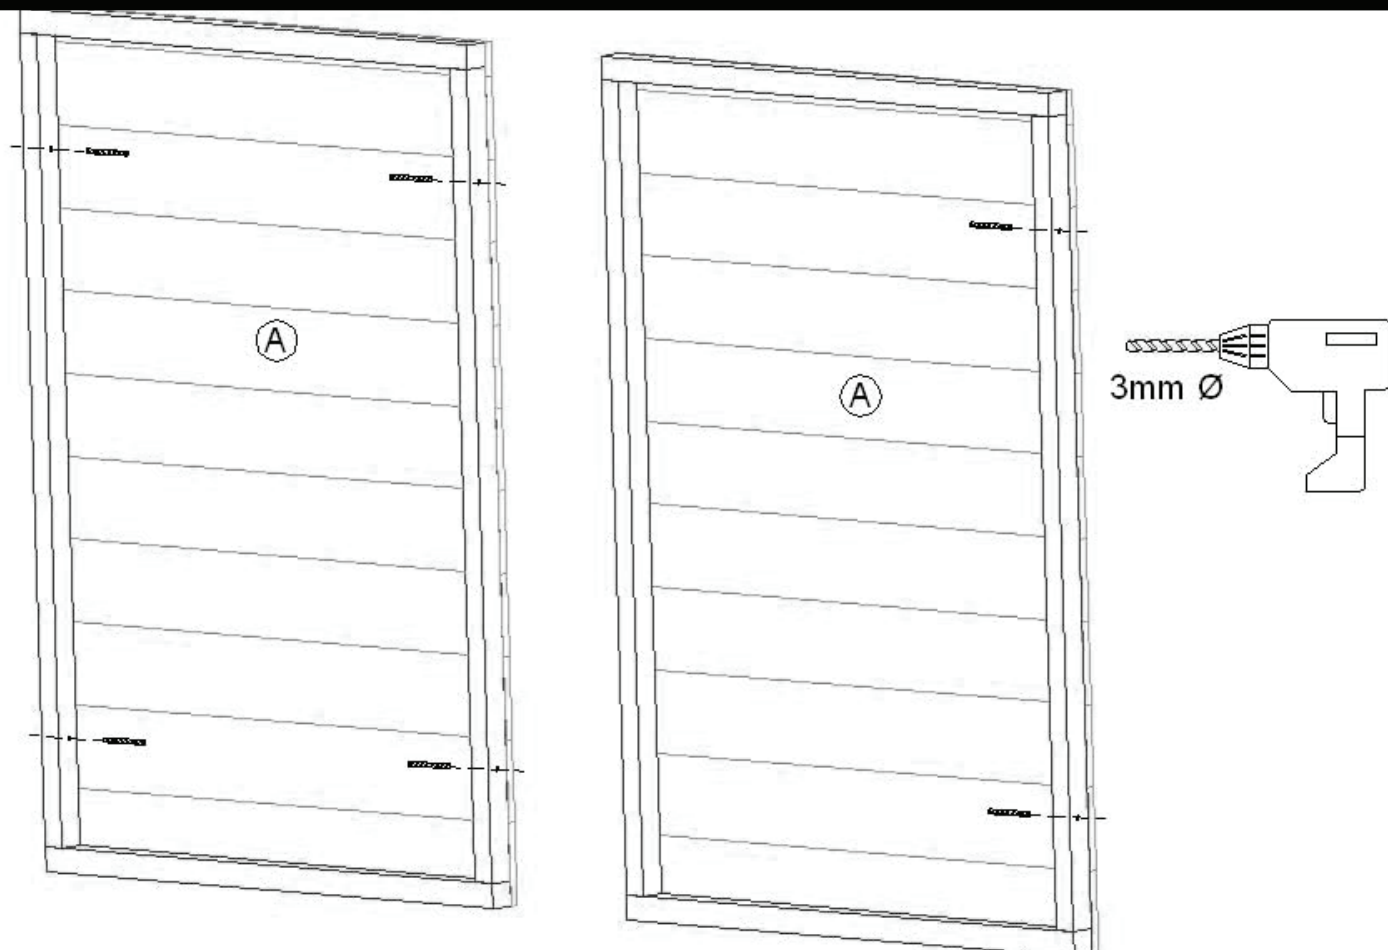


WALL ASSEMBLY - STEP TWO

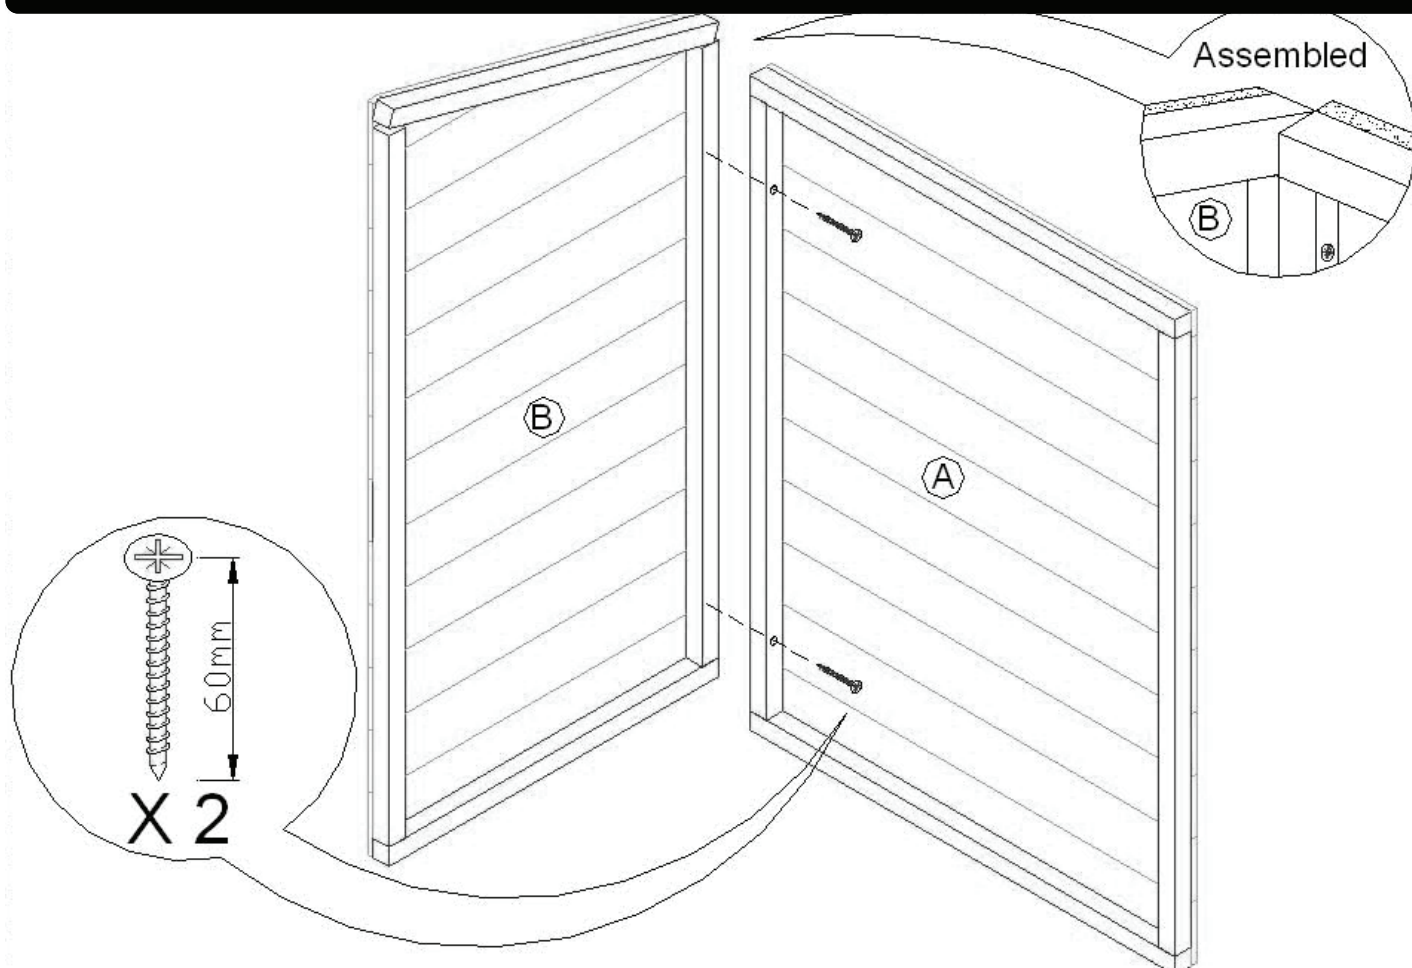


WALL ASSEMBLY - STEP THREE

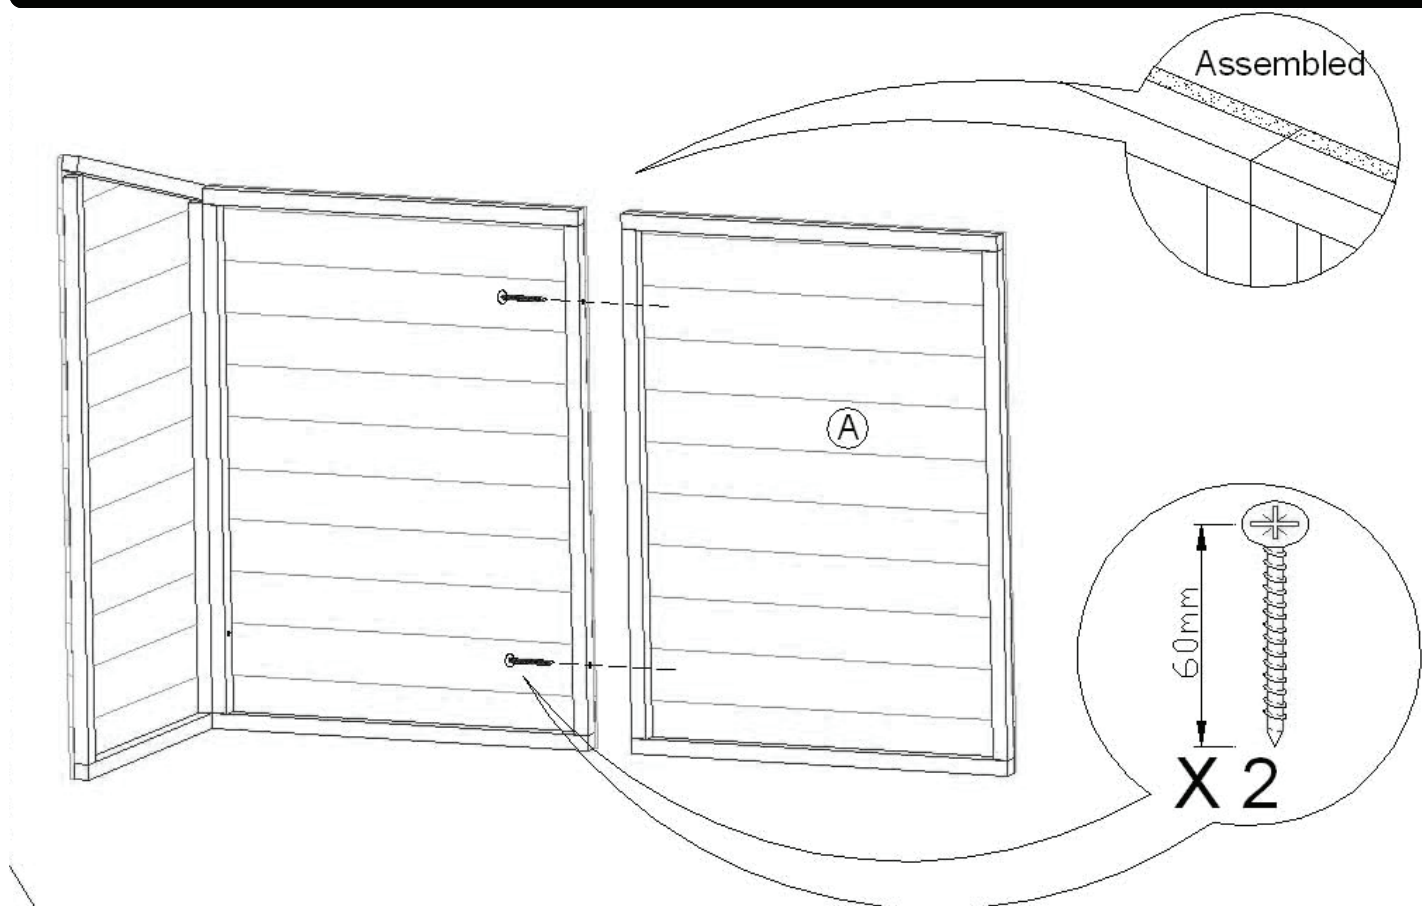


WALL ASSEMBLY - STEP FOUR

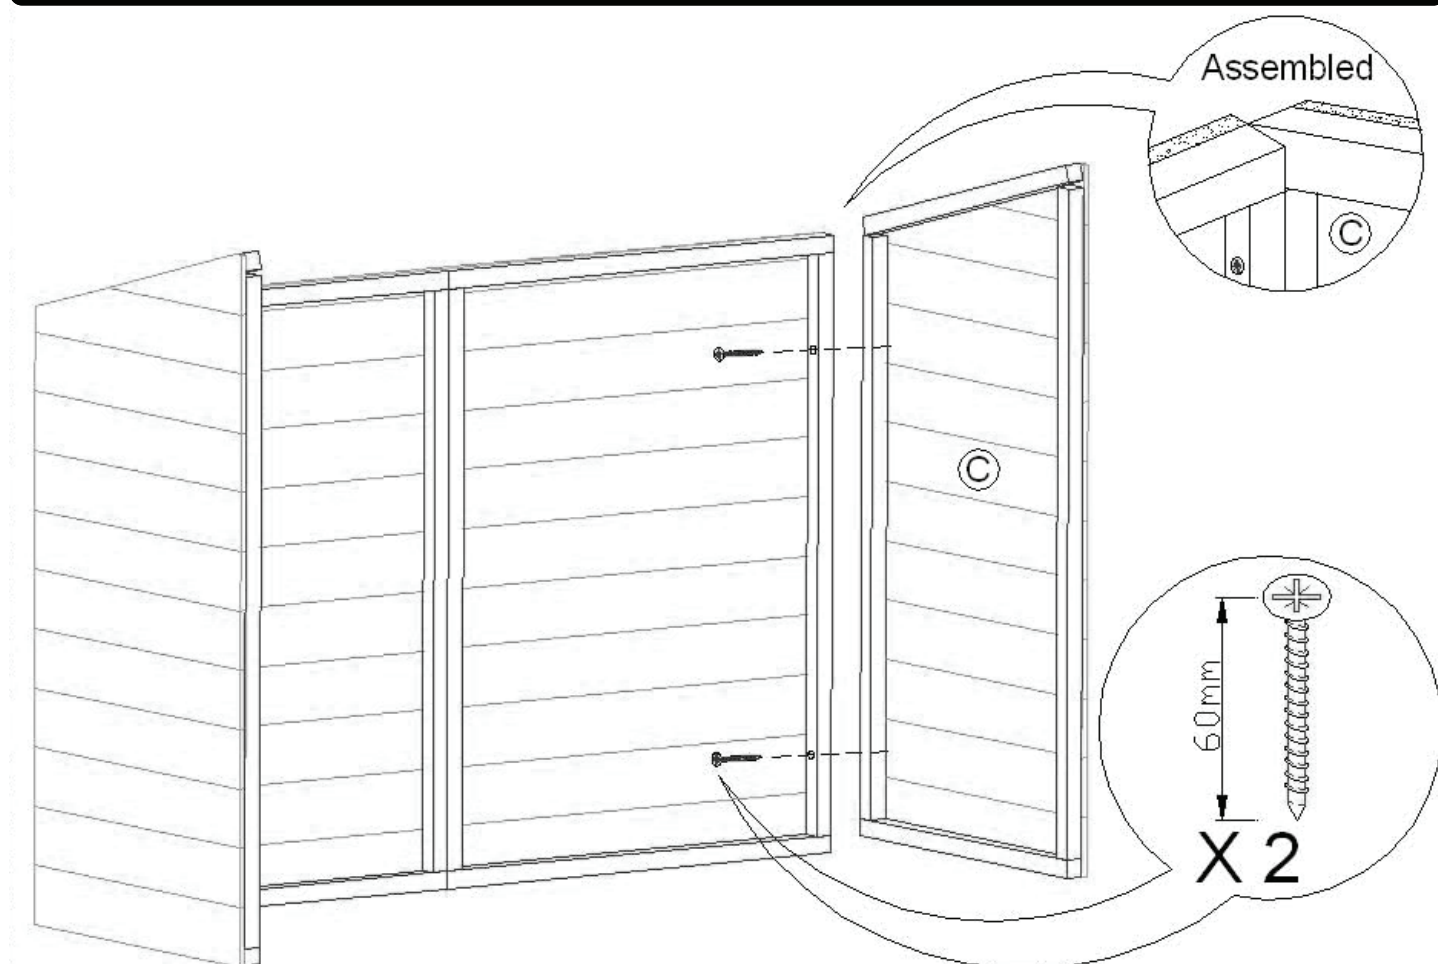


DOOR FRAME ASSEMBLY - STEP ONE

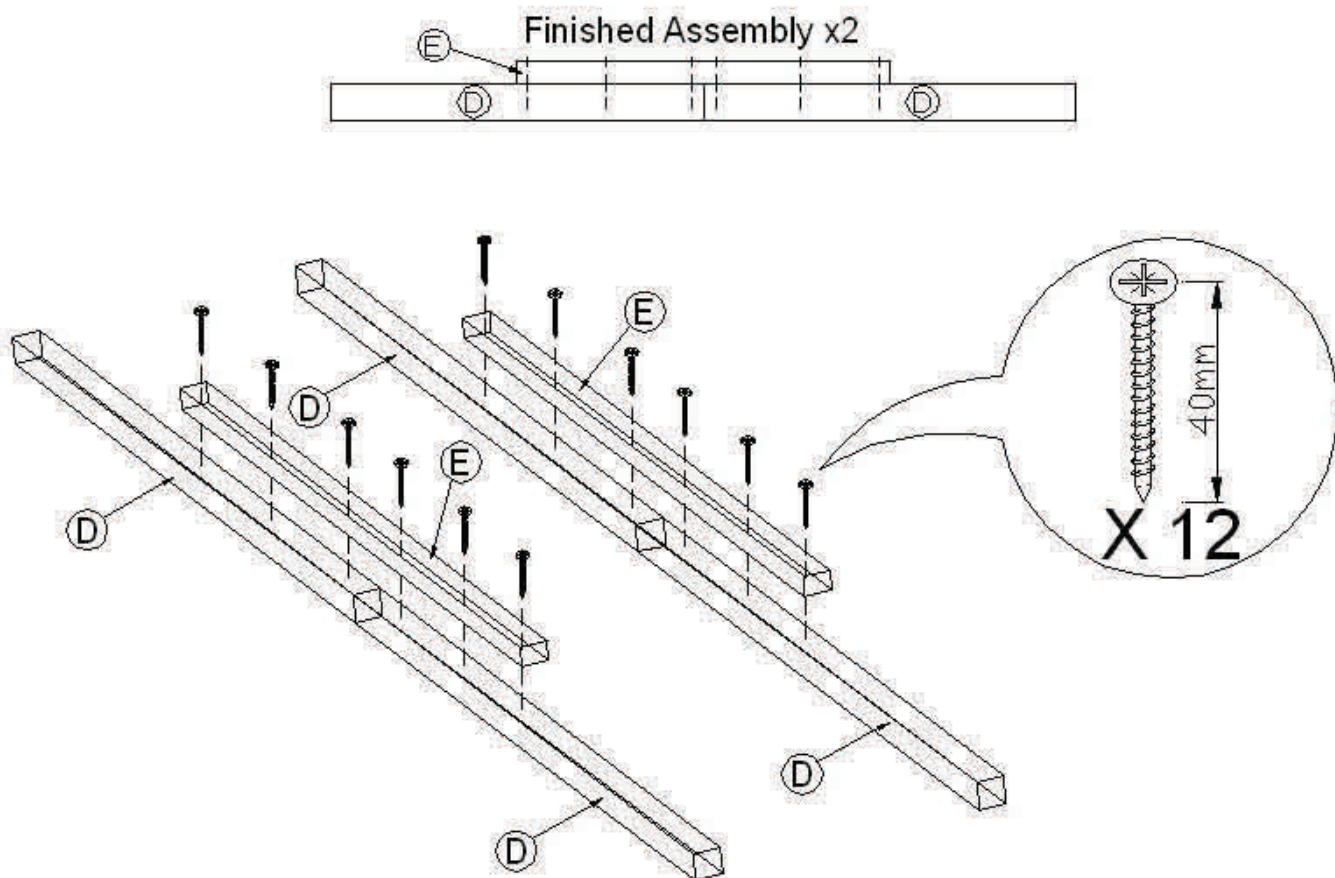


DOOR FRAME ASSEMBLY - STEP TWO

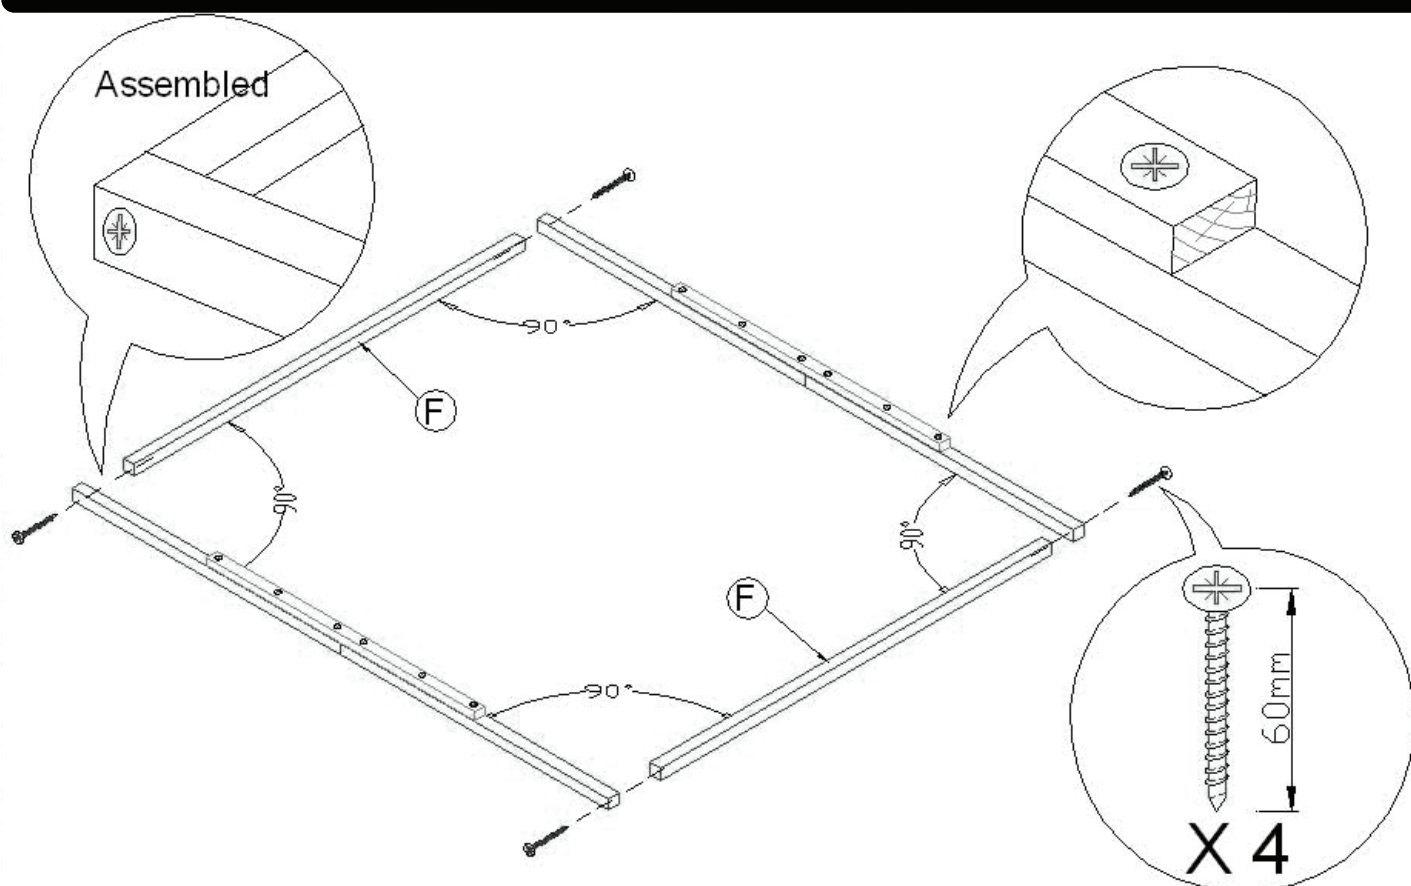


DOOR FRAME ASSEMBLY - STEP THREE

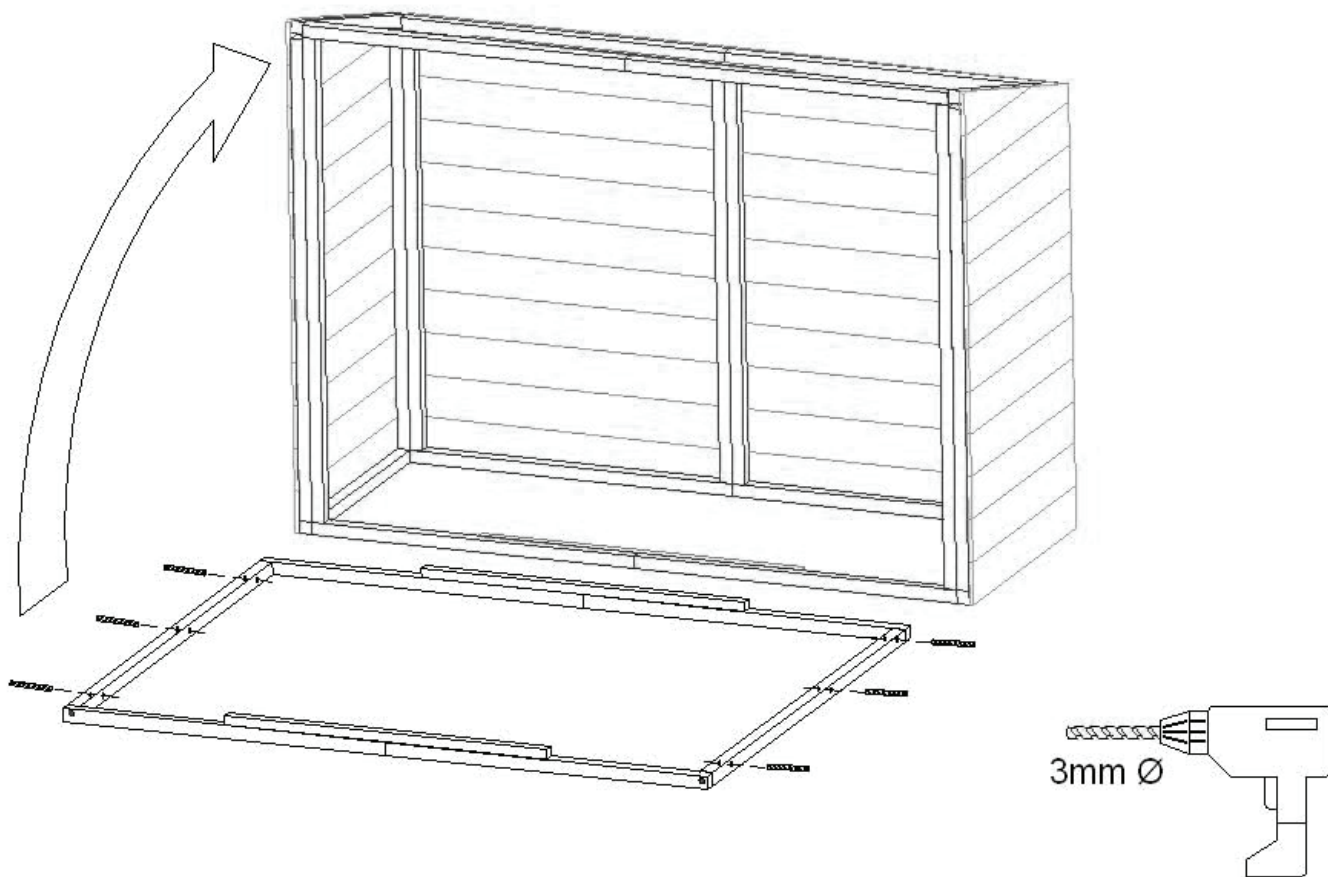


DOOR FRAME ASSEMBLY - STEP FOUR

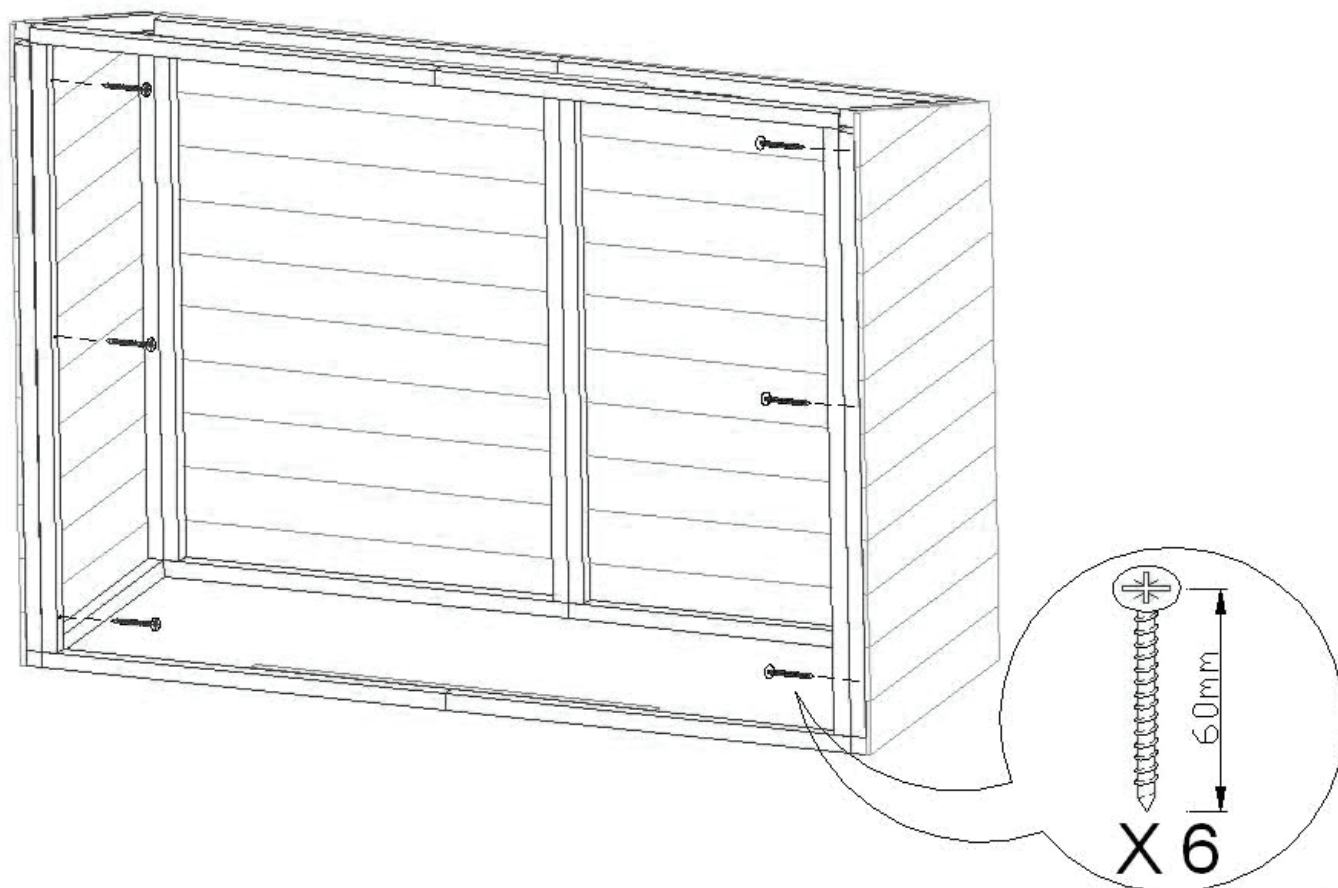


ROOF ASSEMBLY - STEP ONE

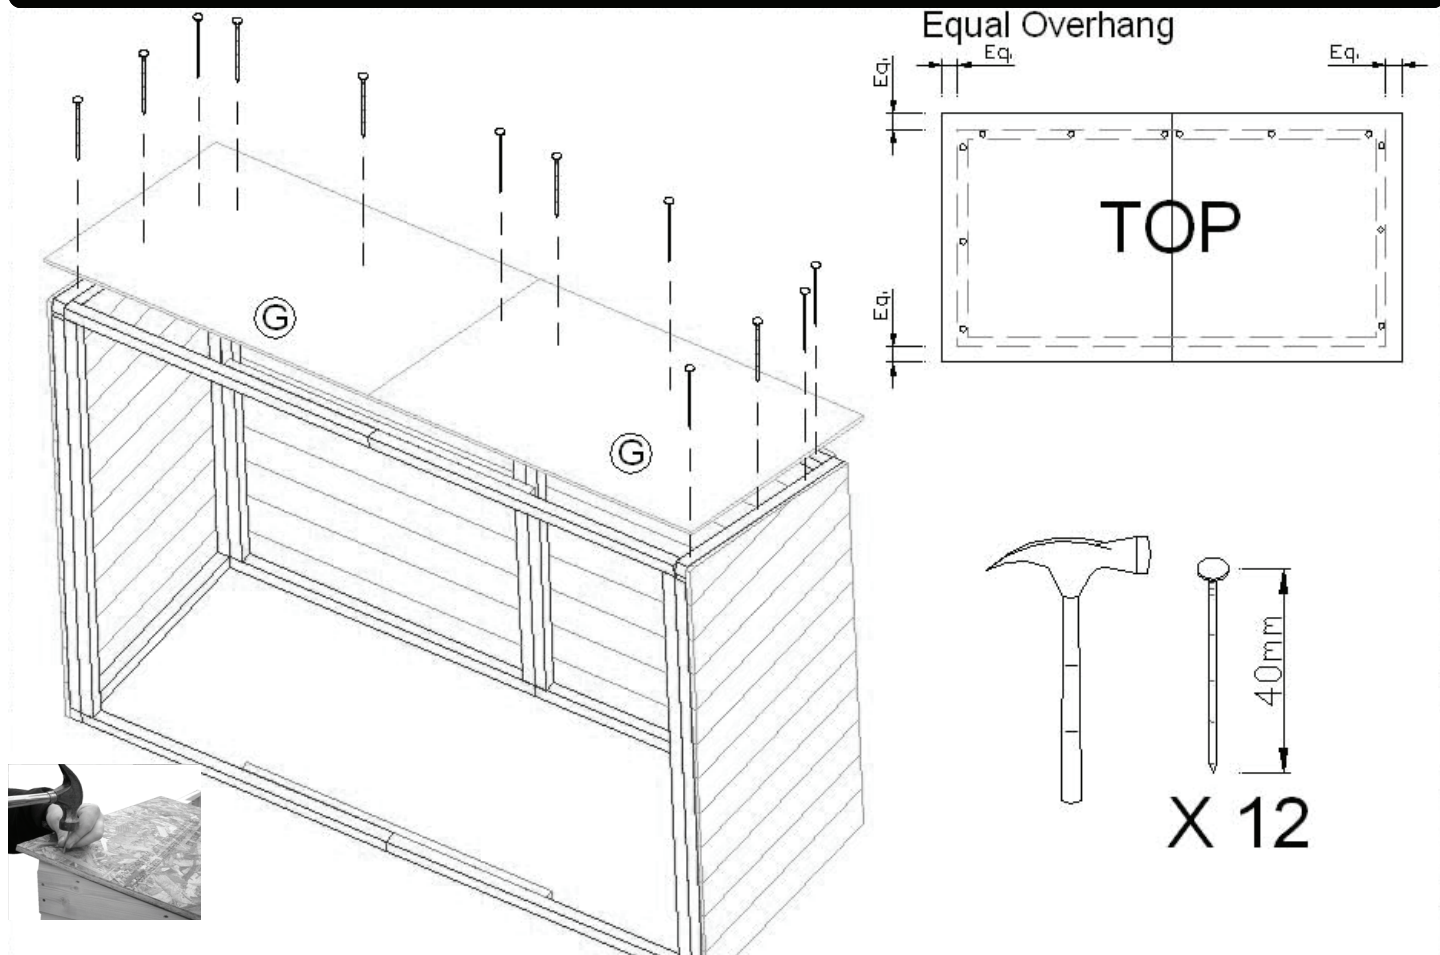


ROOF ASSEMBLY - STEP TWO

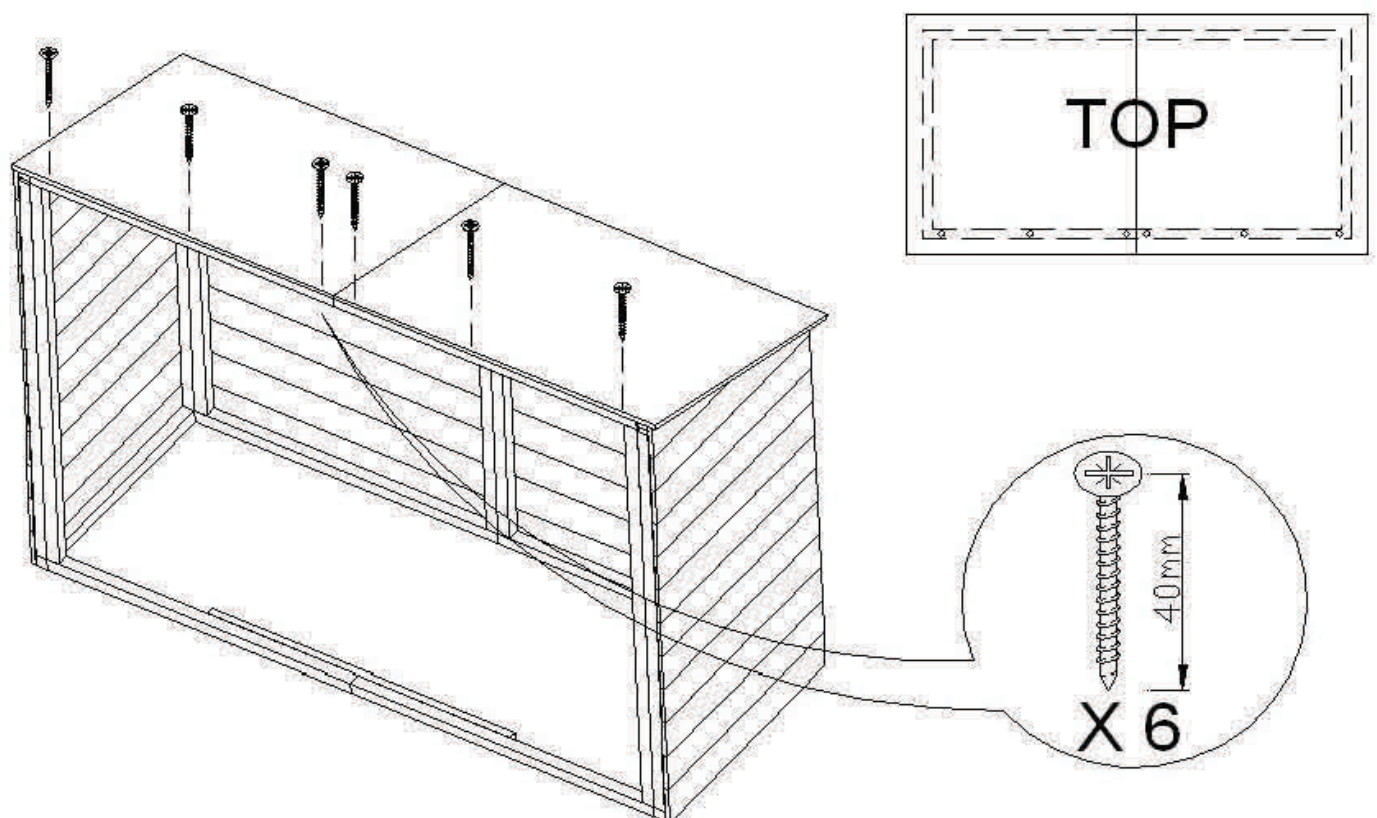



FRONT COVER STRIPS

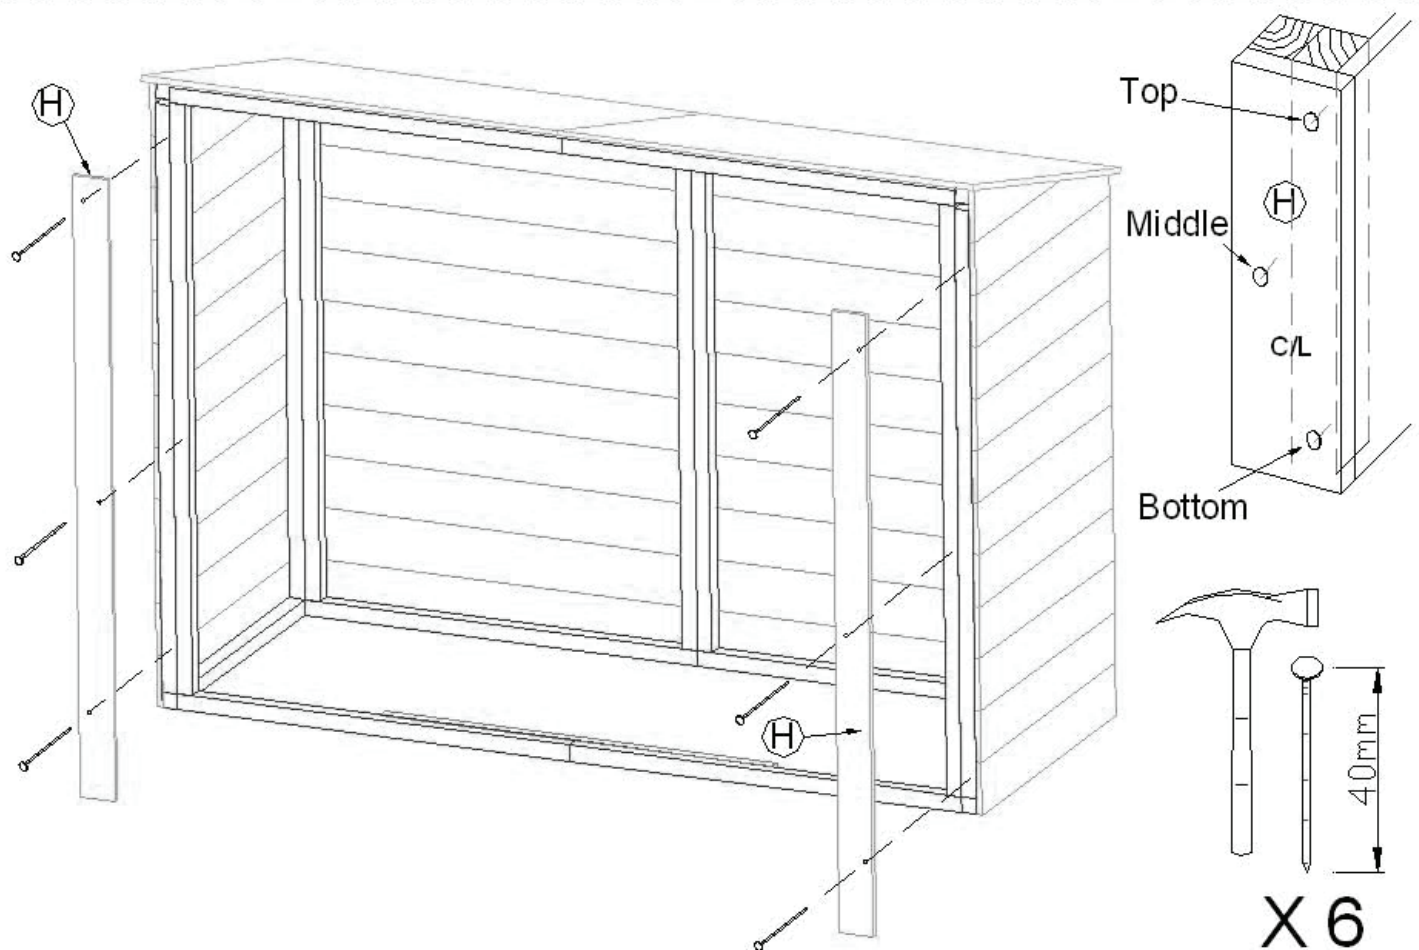


REAR COVER STRIPS

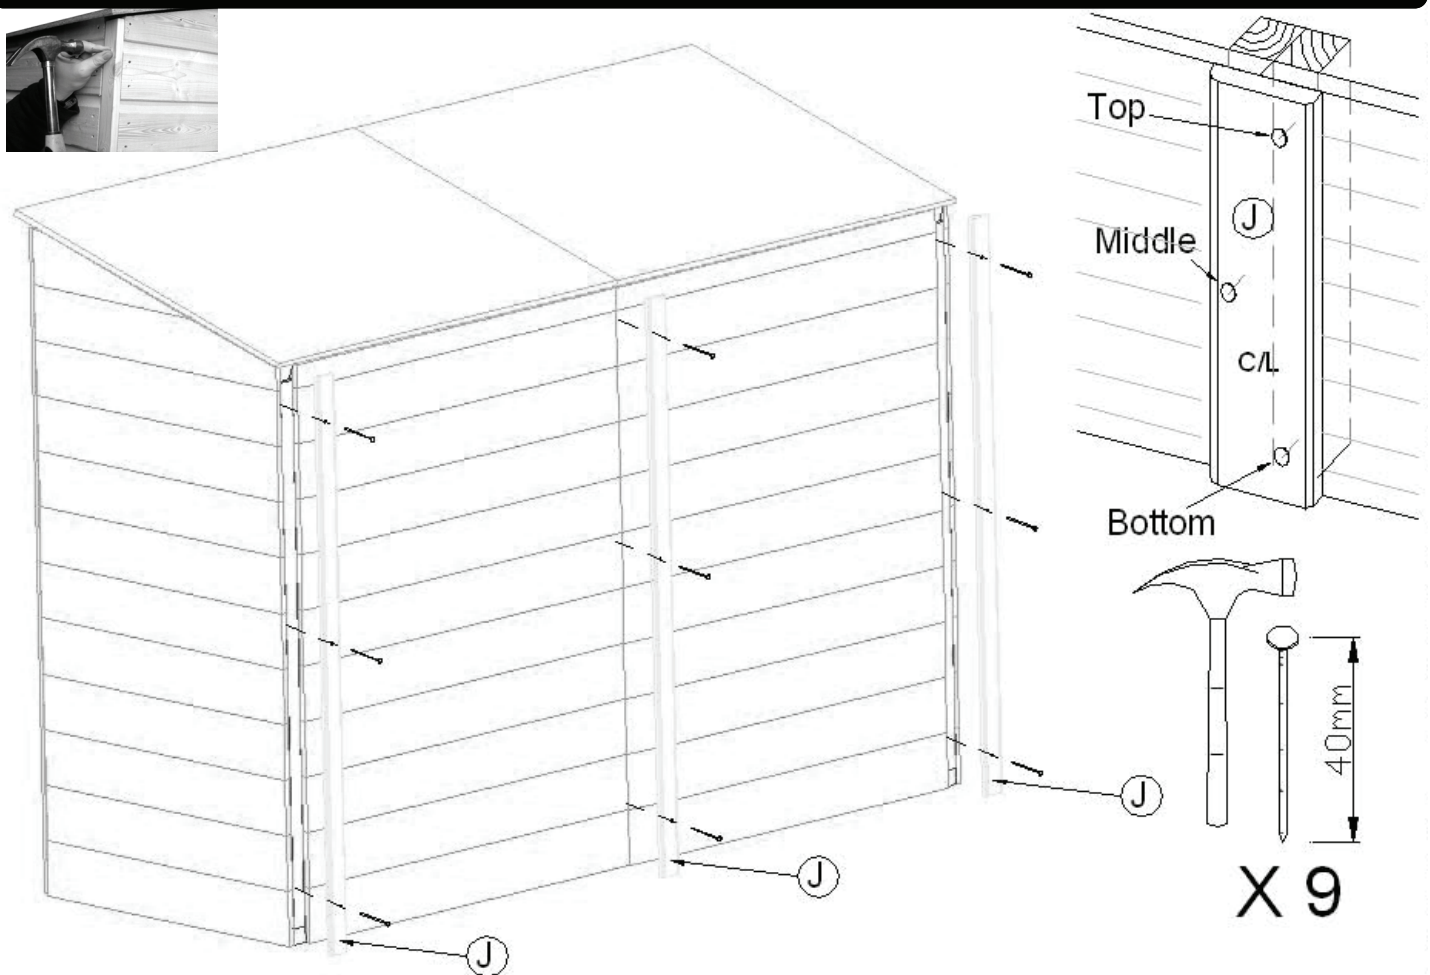




ROOF FELT - STEP ONE

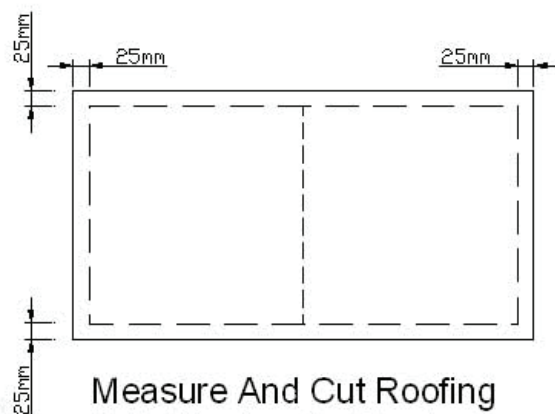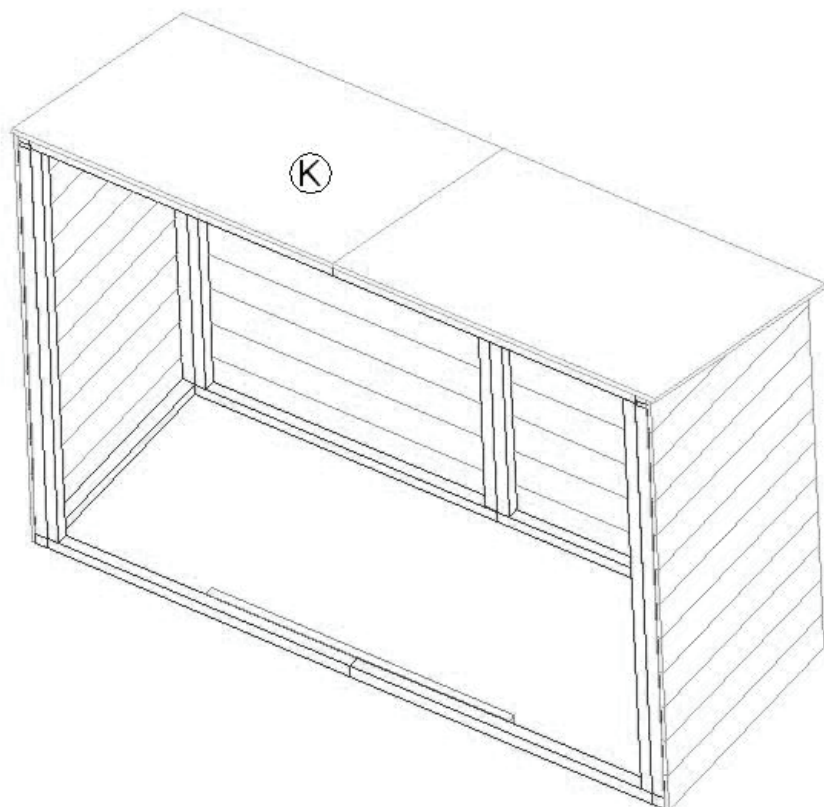

Measure And Cut Roofing Felt Allowing An Overhang of 25mm To All Sides.




ROOF FELT - STEP TWO

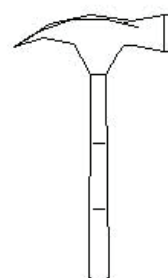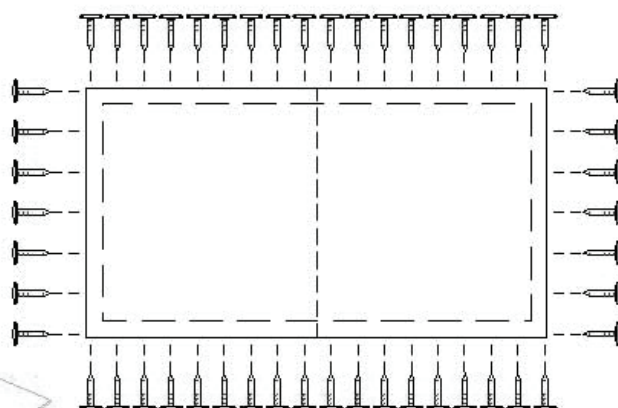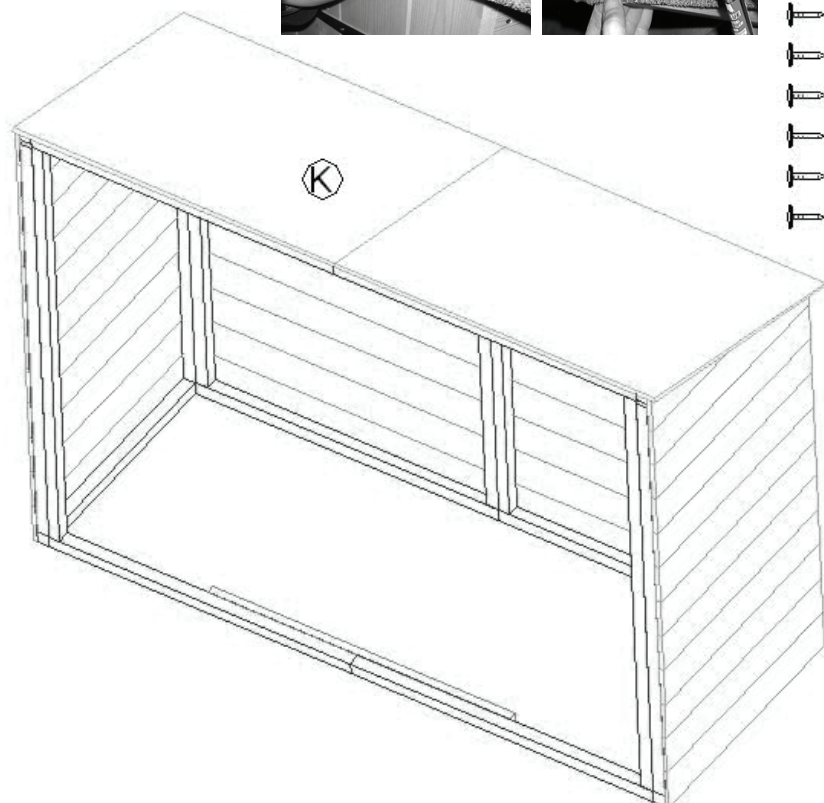


X 50


DOOR ASSEMBLY - STEP ONE

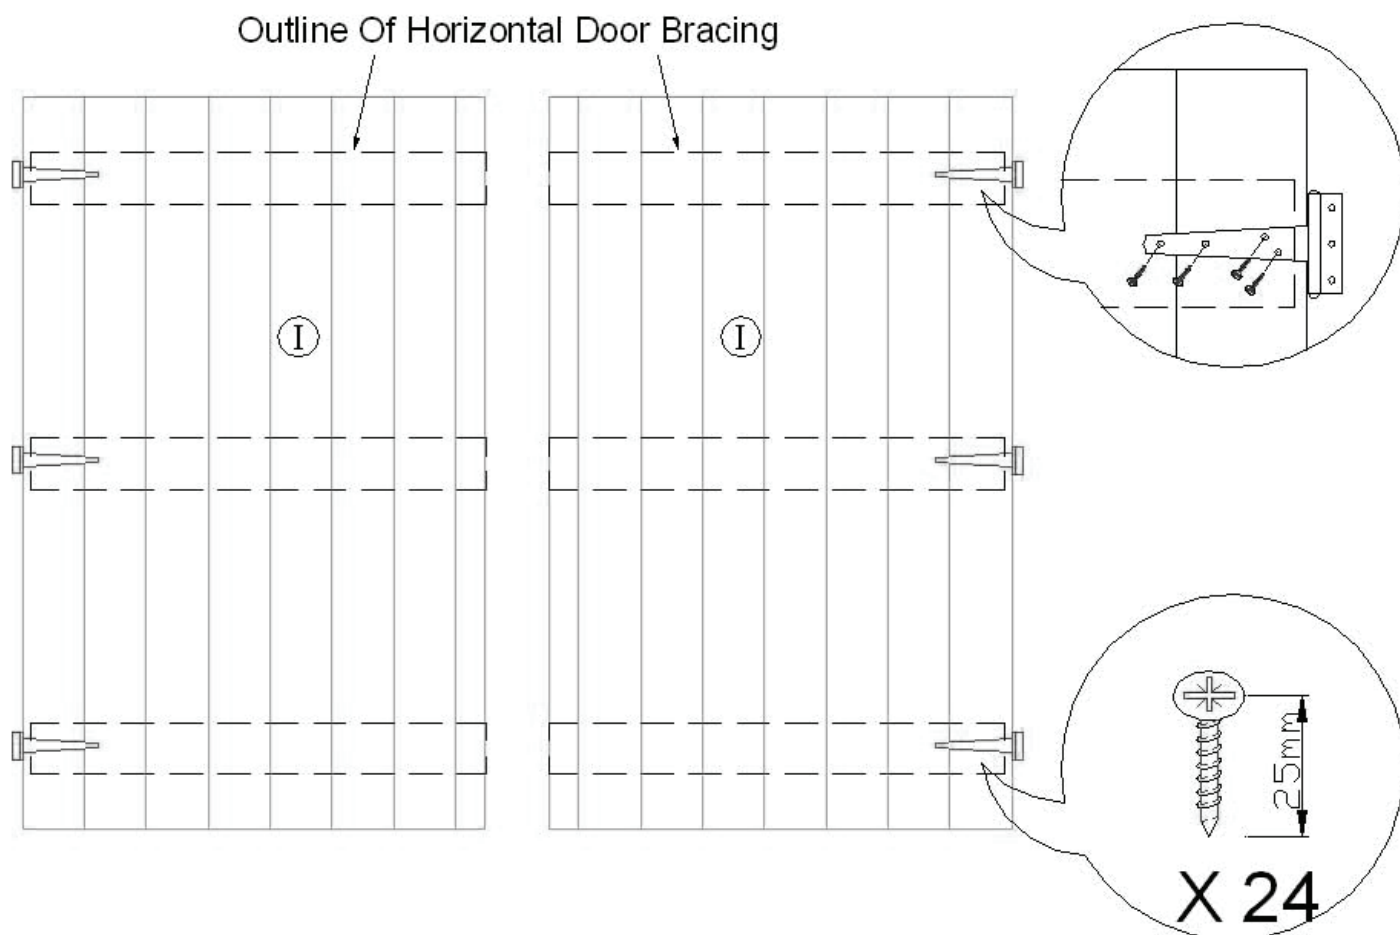


DOOR ASSEMBLY - STEP TWO

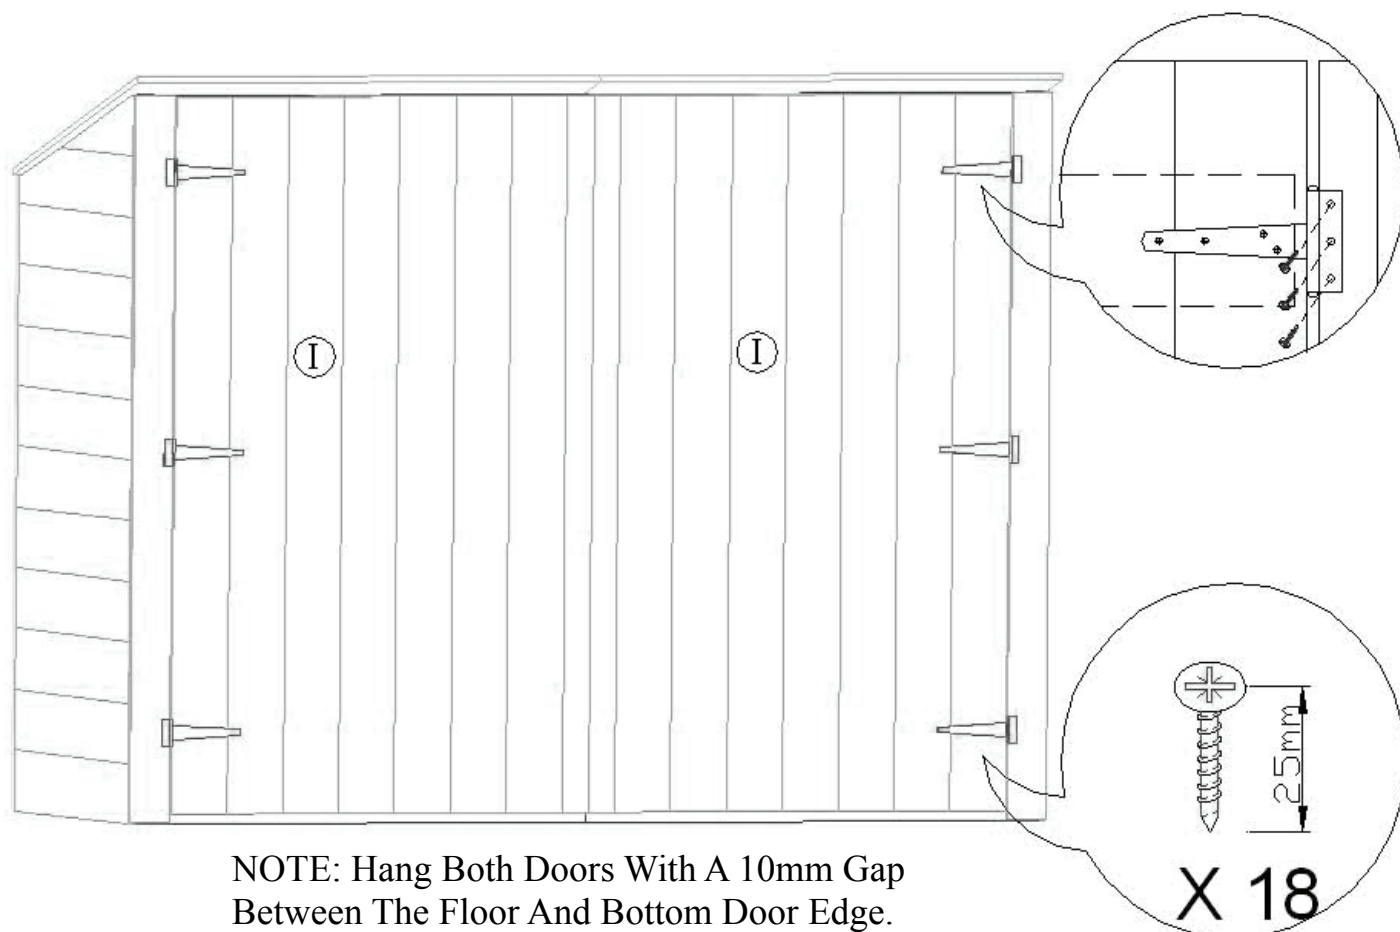


DOOR ASSEMBLY - STEP THREE

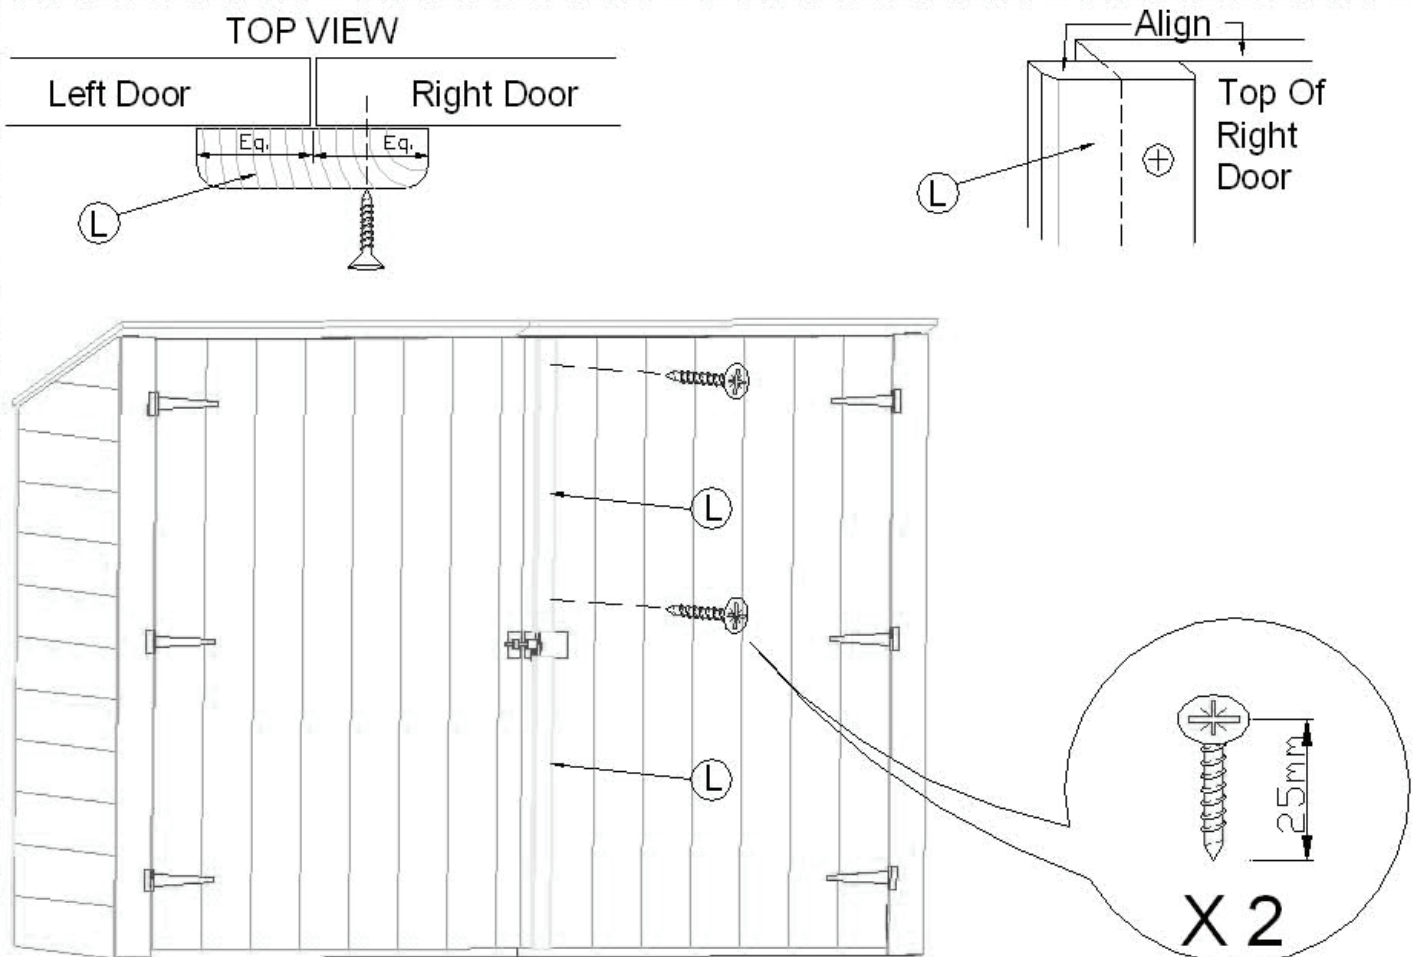


DOOR ASSEMBLY - STEP FOUR

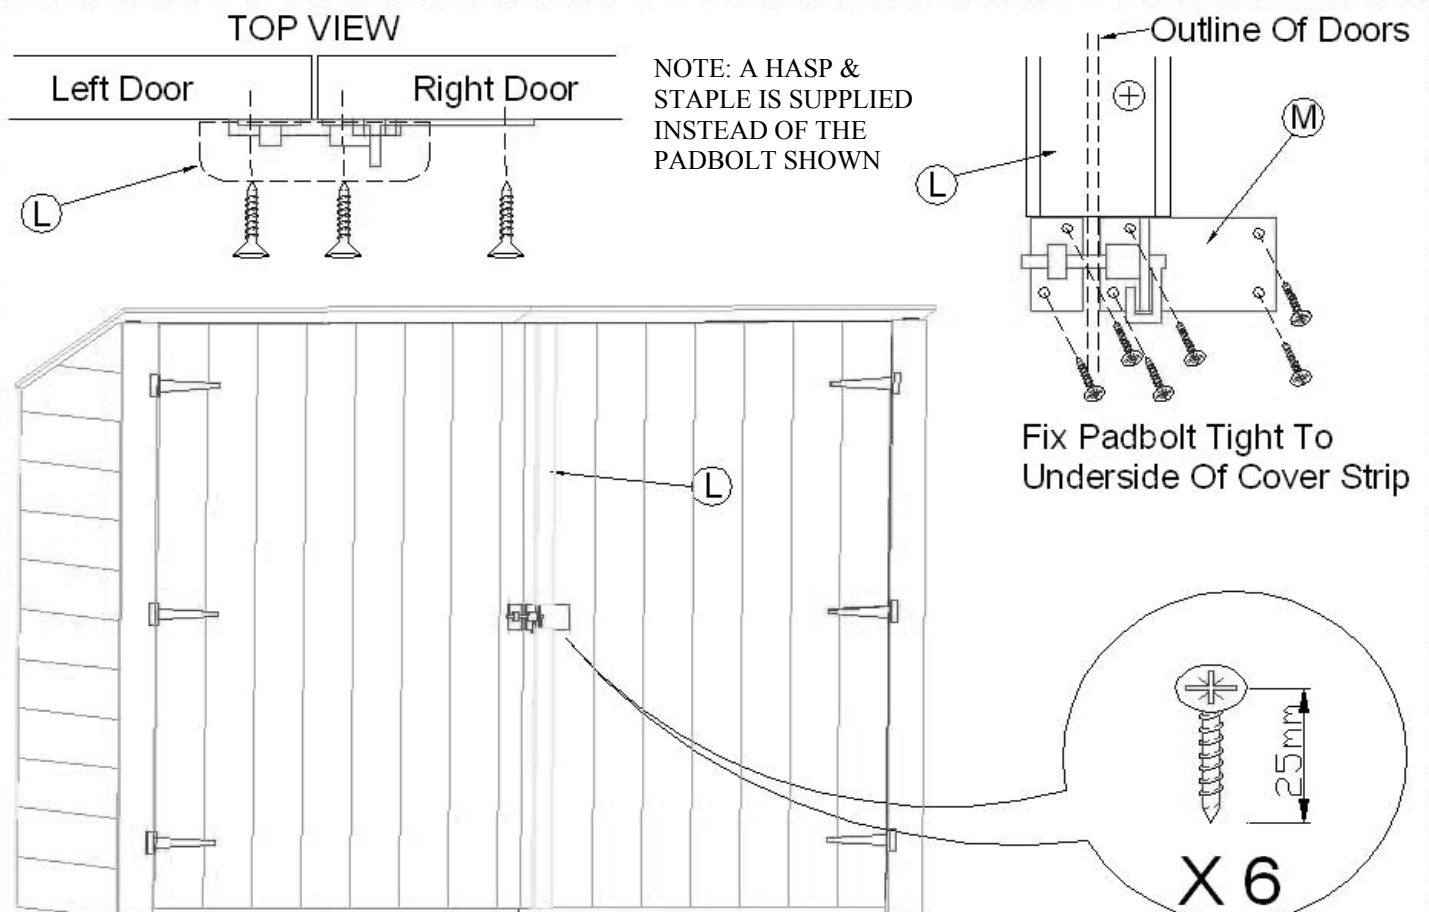

DOOR ASSEMBLY - STEP FIVE

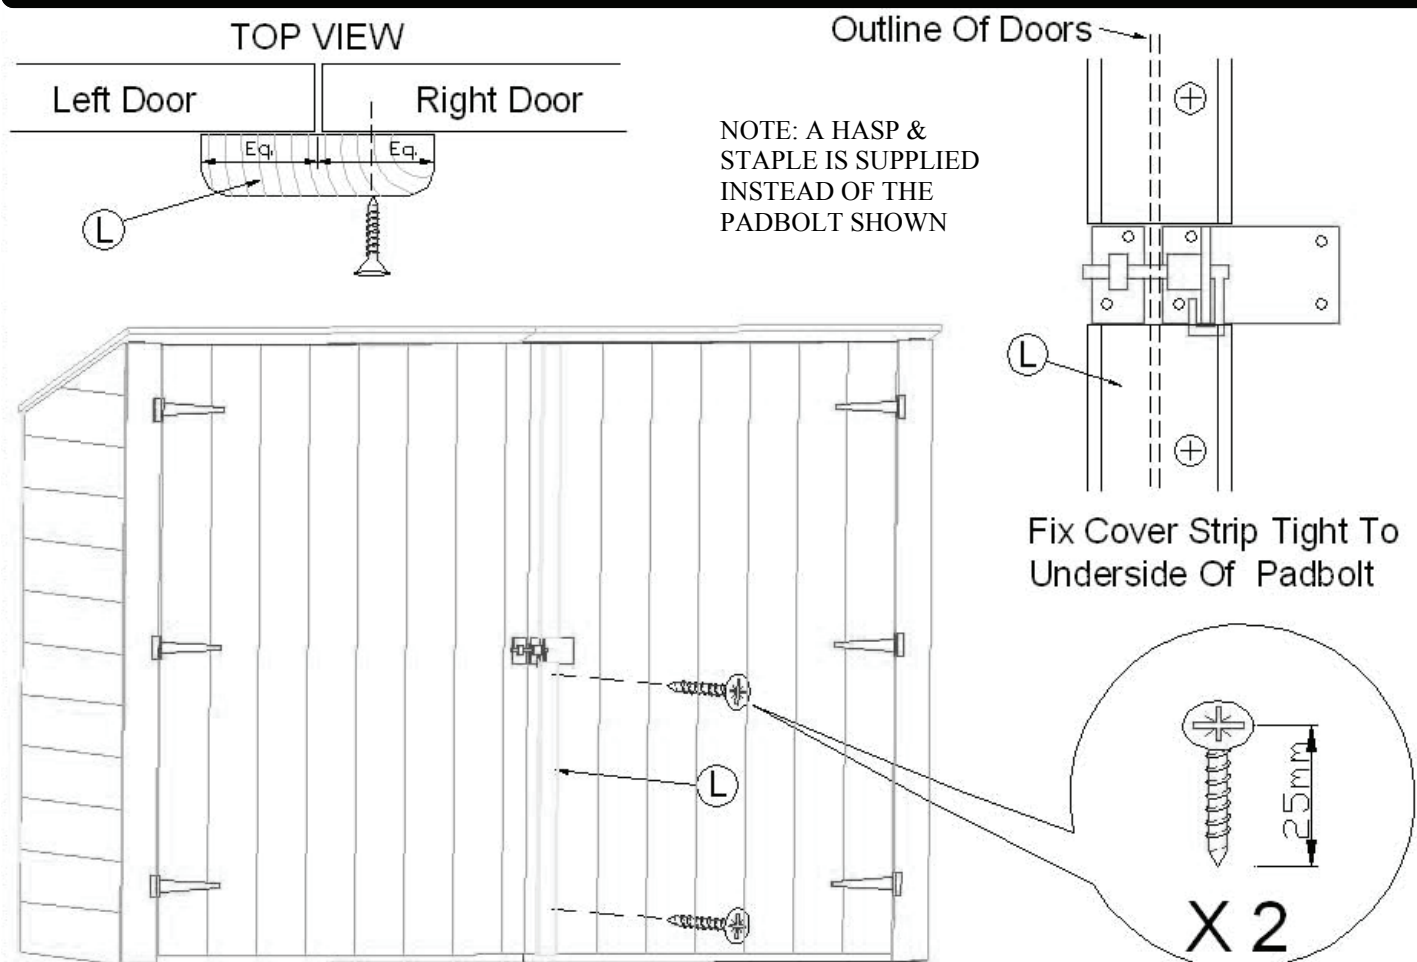


DOOR ASSEMBLY - STEP SIX

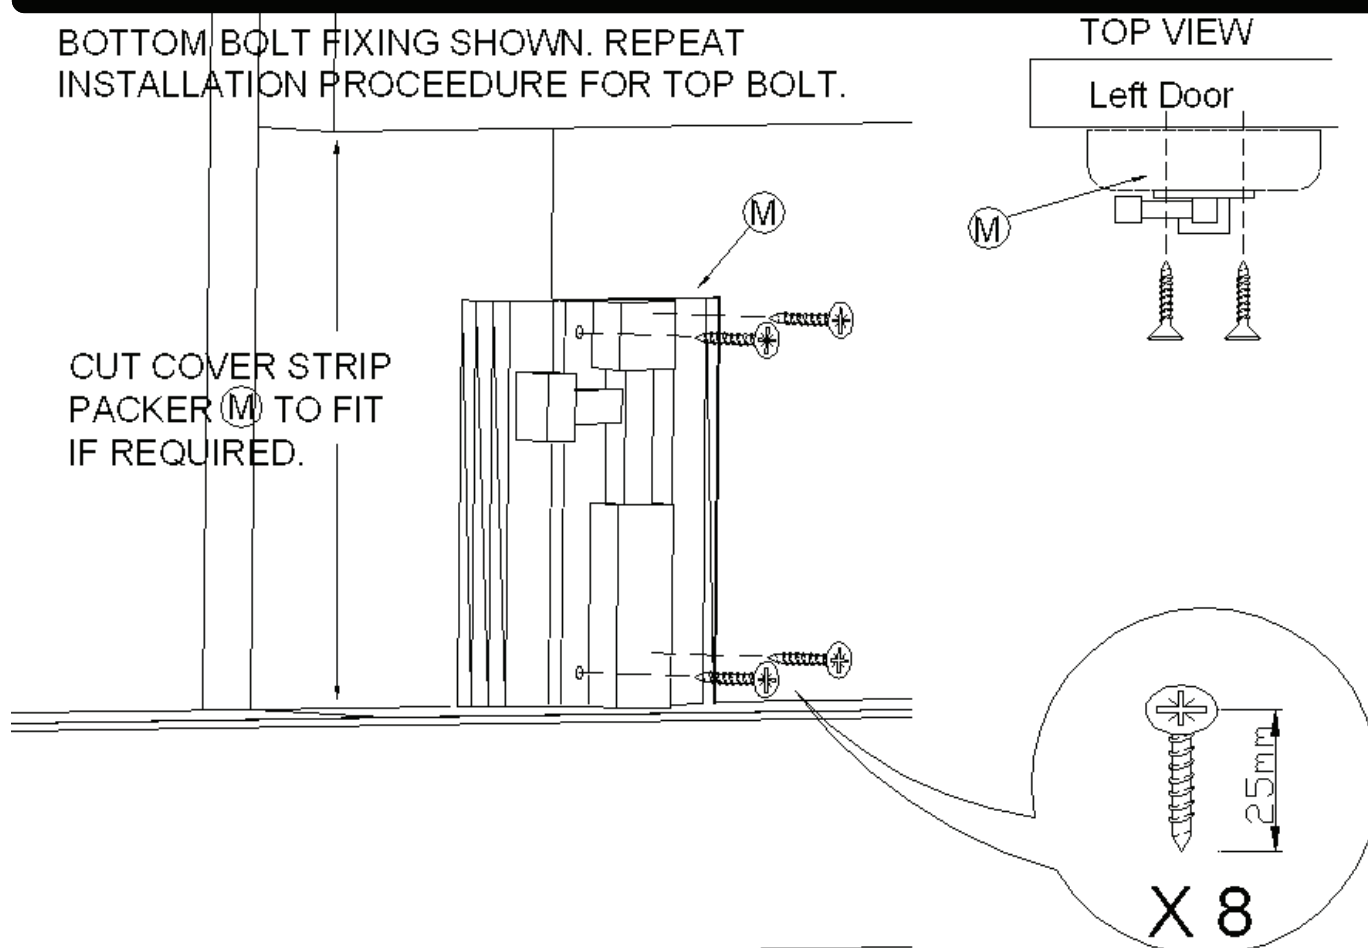


DOOR ASSEMBLY - STEP SEVEN


BOTTOM BOLT FIXING SHOWN. REPEAT INSTALLATION PROCEEDURE FOR TOP BOLT.

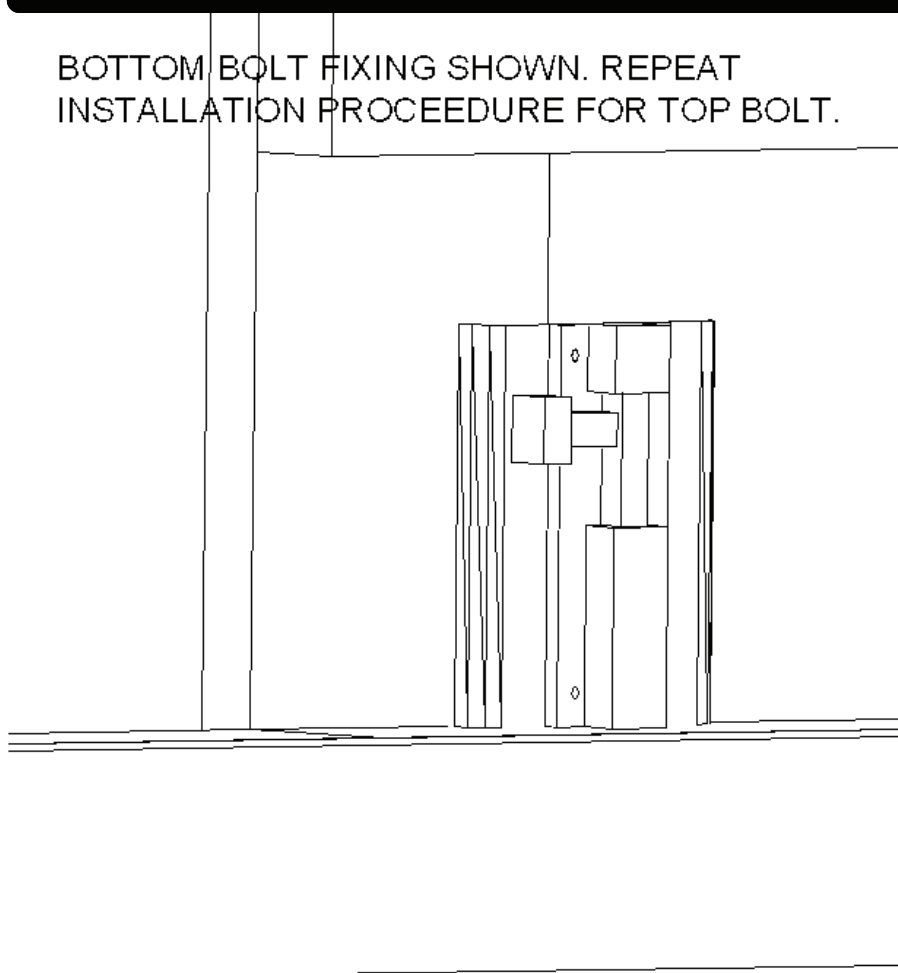

TOP VIEW

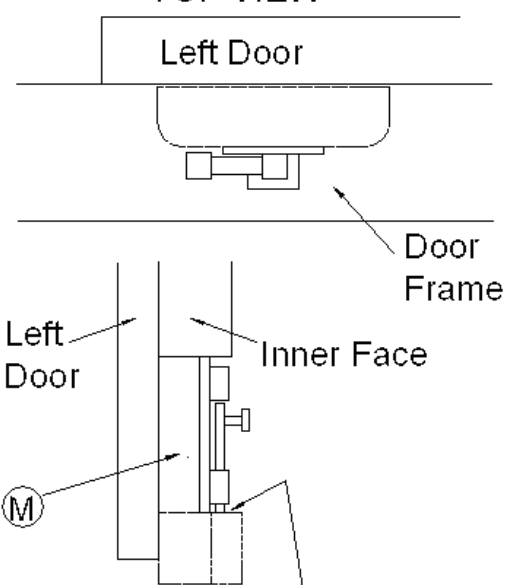

Mark Position Where Bolt Meets The Door Frame. Drill A Shallow Hole Where Marked To Allow Closing Of Bolt.

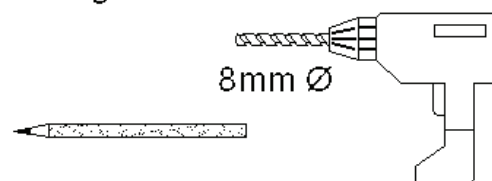

IF YOUR BIKESTORE IS TO BE POSITIONED ON EXISTING TIMBER DECKING, 6 No. 80 mm SCREWS HAVE BEEN SUPPLIED TO SECURE YOUR BUILDING, BY SCREWING THROUGH THE FRAMEWORK OF THE SIDE AND BACK WALL PANELS IN TO THE TIMBER DECKING BELOW .

IF YOUR BIKESTORE IS TO BE POSITIONED ON A PAVING SLAB, TARMAC OR CONCRETE SLAB BASE, SUITABLE FIXINGS CAN BE PURCHASED FROM MOST DIY STORES TO SECURE YOUR BUILDING TO YOUR BASE.

Assembly Completion Checklist

- | | | |
|--|---|---|
| <p>1 Check and ensure that no raised grain or splinters are evident on timber components. Sand down any raised grain or splinters using fine grade sandpaper.</p> | <p>2 Check that all screw, nail and pin heads are properly tapped home and are not proud of the timber surface.</p> <p>3 Check and ensure that no screws, nails or pins protrude through any panel.</p> | <p>4 Check and ensure that all parts are properly secured against reasonable force.</p> <p>5 Do not apply decorative wood finish/treatments to wet or damp timber. Please observe the instructions of the wood finish/treatment manufacturer.</p> |
|--|---|---|