



1. Confirm the installation steps (unpacking please verify the list)

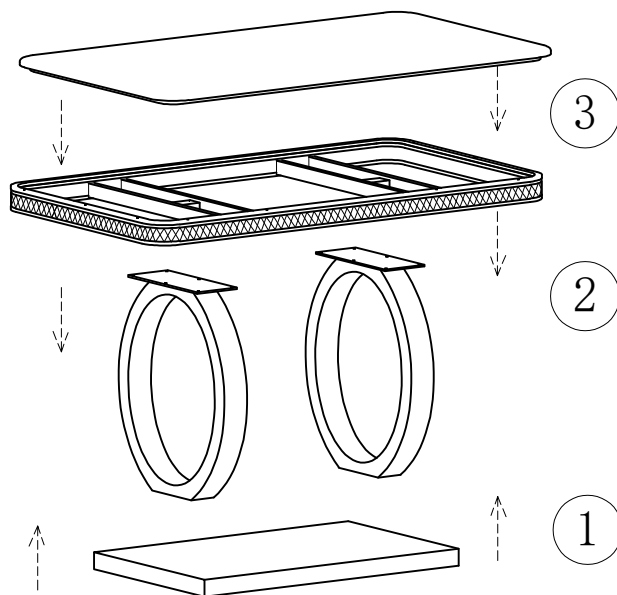


2. Place the base upside down and interconnect the table legs with the base

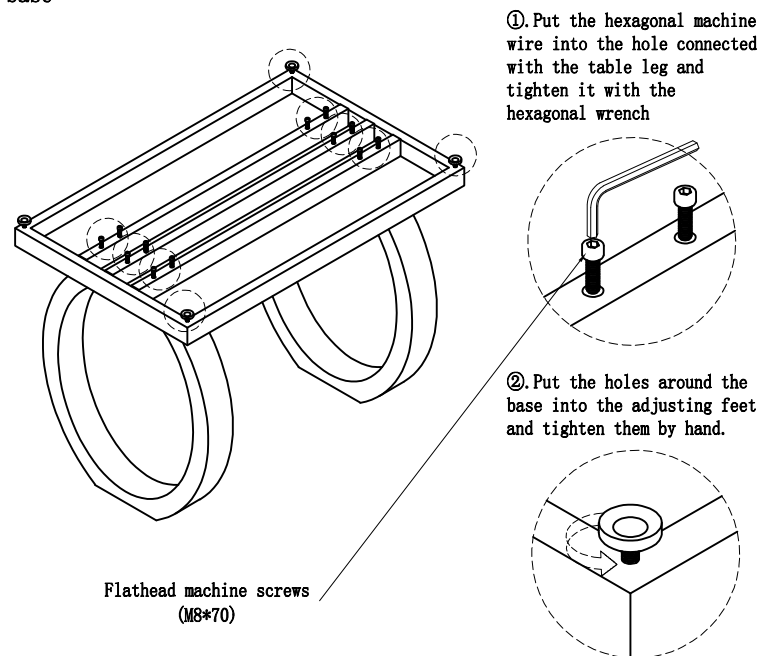

POVISON®


Installation instruction

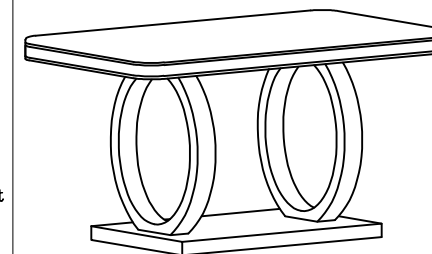

DT052 Installation
Installation number:2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation


3. Place the support frame above the table legs, align the holes to be connected, and fix the connection.

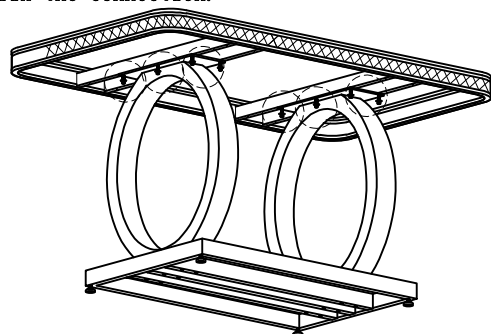


①. The hexagonal machine wire is put into the hole connected with the support frame and screwed tightly with the hexagonal wrench

Flathead machine screws
(M8*20)

4. Place the tabletop over the frame.

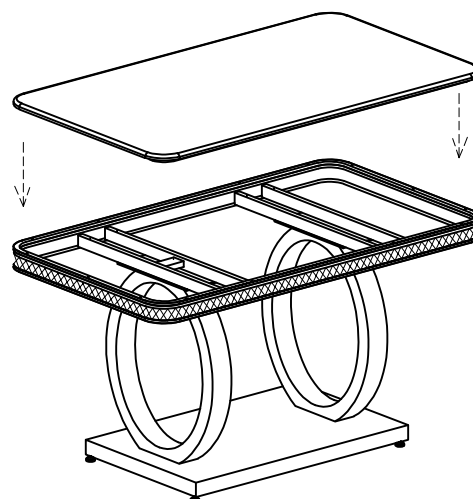

5. Installation finish.

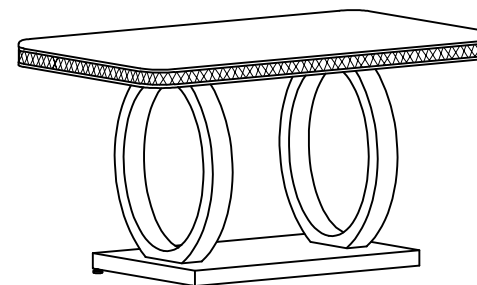

Parts list

Serial number	Shape	Name	Quantity
A		Flathead machine screws (M8*70)	12
B		Flathead machine screws (M8*20)	12
C		Regulating Foot (M8*15)	4
C		Gasket	24