

SKU:NYX08-266

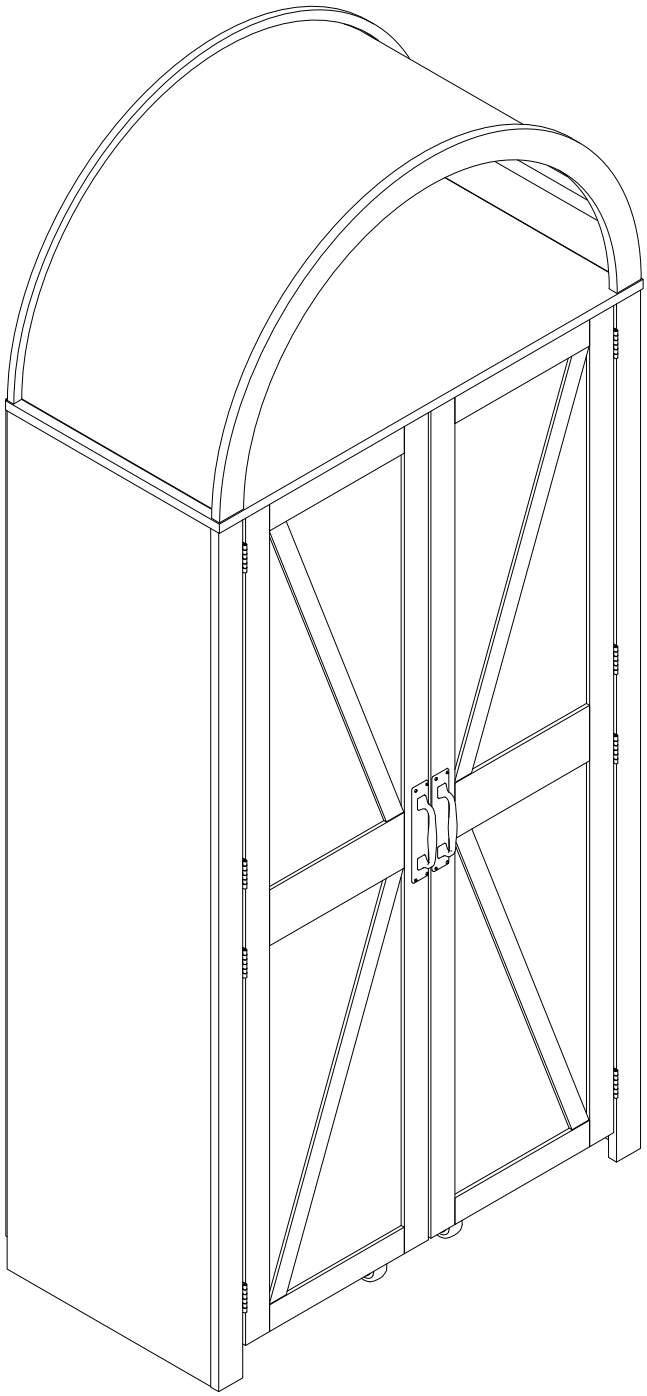

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

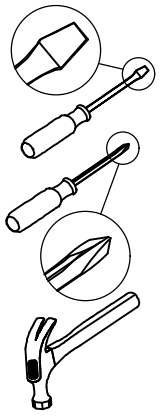


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.

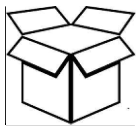


- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

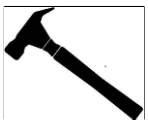

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

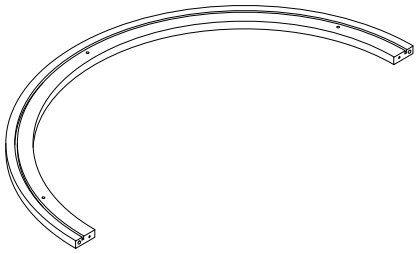


Ⓐ
TOP MOLDING FRONT
Qty:1

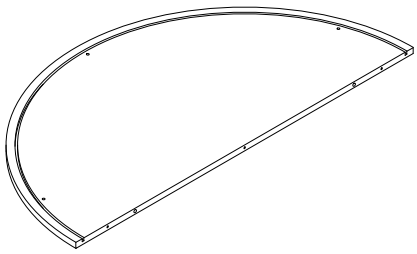


Ⓑ
UPPER BACK
Qty:1

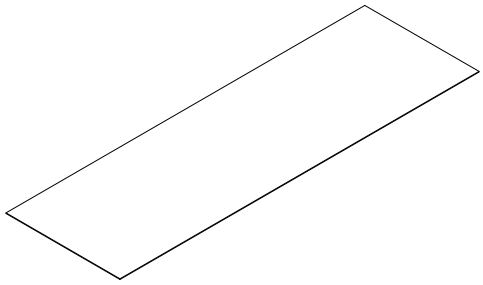


Ⓒ
TOP
Qty:1

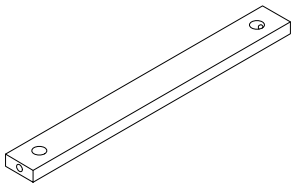


Ⓓ
RAIL
Qty:3

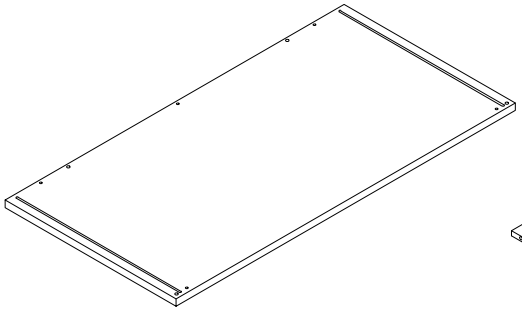


Ⓔ
FIXED SHELF
Qty:1

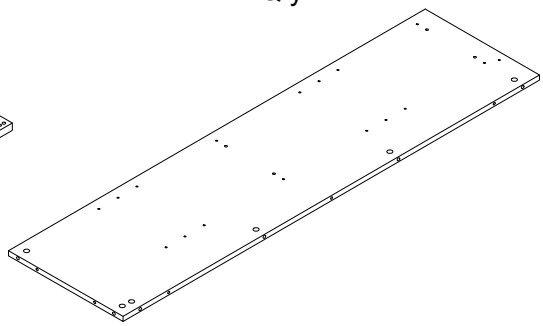


Ⓕ
LEFT SIDE PANEL
Qty:1

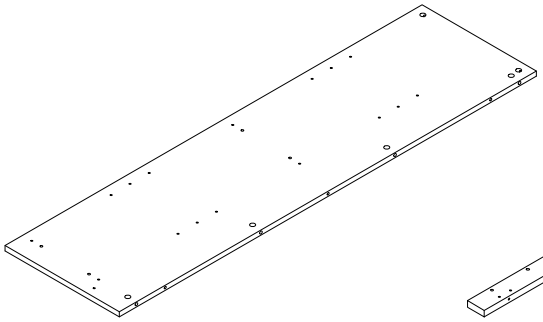


Ⓖ
RIGHT SIDE PANEL
Qty:1

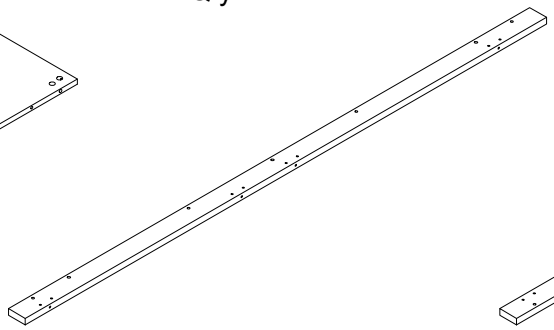


Ⓗ
FRONT VERTICAL POST
Qty:1

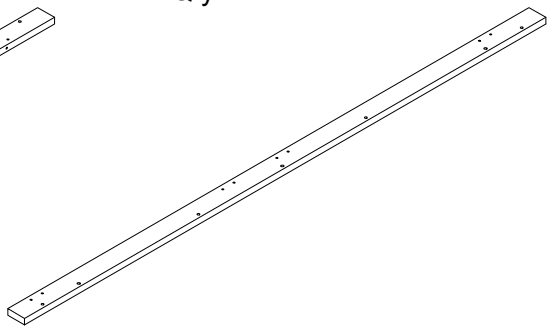


Ⓘ
FRONT VERTICAL POST
Qty:1

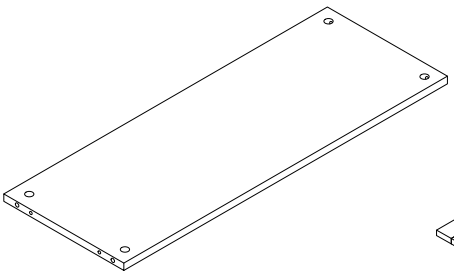

Ⓙ
FIXED SHELF
Qty:1

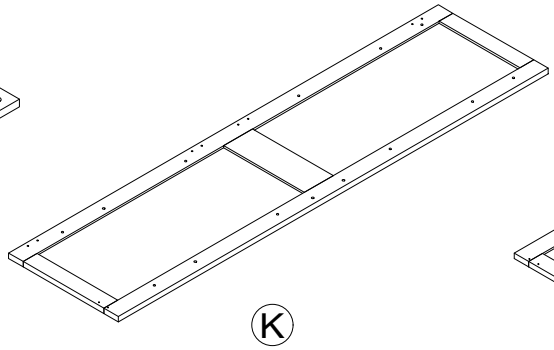


Ⓚ
LEFT
Qty:1

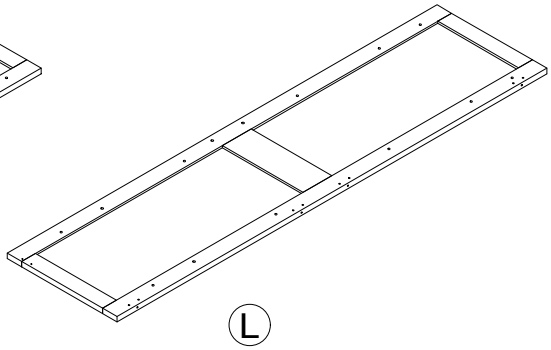

Ⓛ
RIGHT
Qty:1


Board Identification

Not actual size

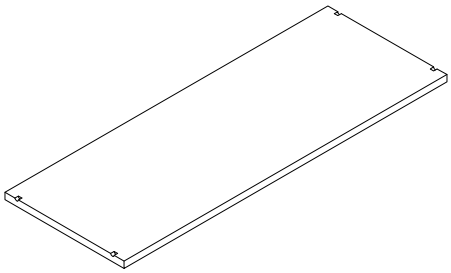


Ⓜ

ADJUSTABLE SHELF
Qty:2

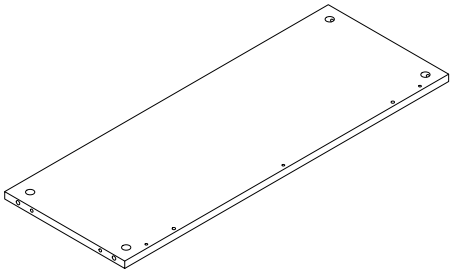


Ⓝ

BOTTOM
Qty:1

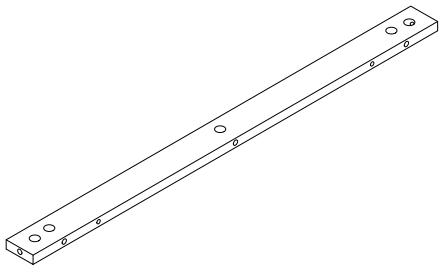


Ⓞ

BOTTOM RAIL
Qty:1

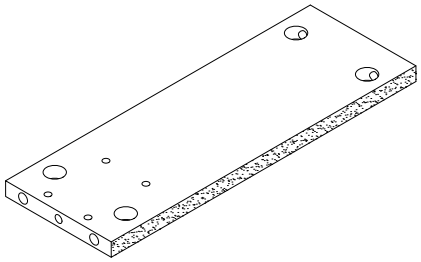


Ⓟ

FIXED SHELF
Qty:1

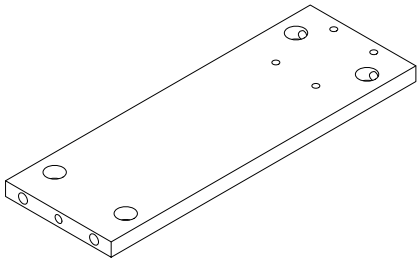


Ⓠ

FIXED SHELF
Qty:1

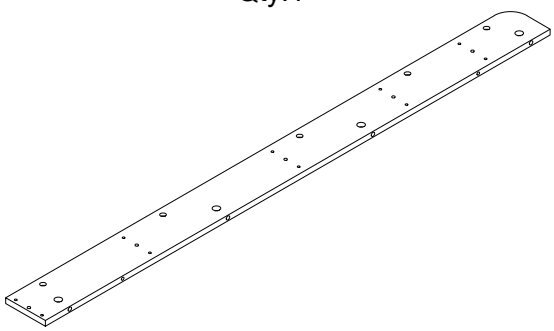


Ⓡ

LEFT LNTERNAL PANEL
Qty:2

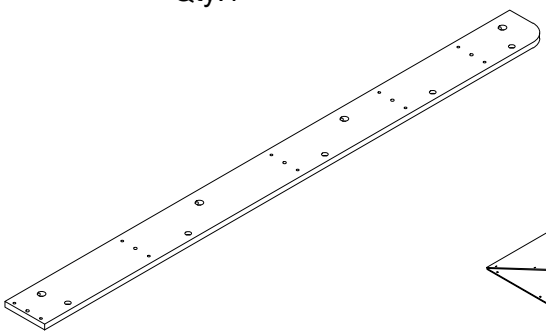


Ⓢ

RIGHT LNTERNAL PANEL
Qty:2

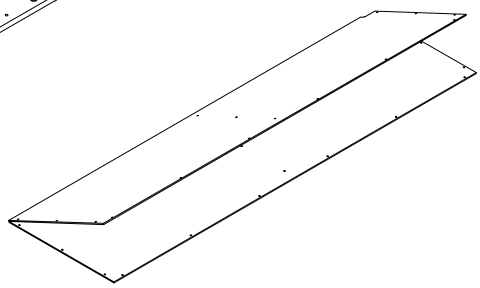


Ⓣ

BACK PANEL
Qty:1

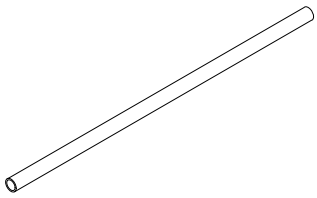

Ⓥ


ROUND TUBE
Qty:10

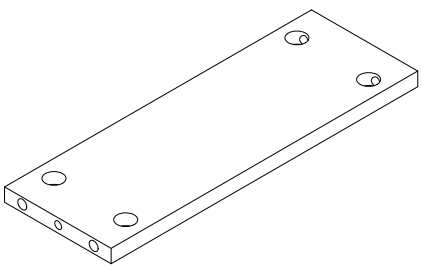

Ⓦ

FIXED SHELF
Qty:8


Part List



Ø15X9.5mm

1	X 87

CAM LOCK
spare:2



Ø6.5X35mm

2	X 87


CAM BOLT
spare:2



Ø6X30mm

3	X 52


WOODEN DOWEL
spare:3



Ø4X40mm

4	X 5

SCREW
spare:1



43X20X1mm

5	X 8


HINGLE



Ø5X11.5mm

6	X 48


SCREW
spare:3



Ø5X17mm

7	X 8


SHELF SUPPORT
spare:1



41X16X13mm

8	X 2


MAGNETIC CATCHER



39.5X12X1mm

9	X 2


MAGNETIC CATCHER



Ø3X14mm

10	X34

SCREW
spare:3



153X29X34mm

11	X 2

HANDLE



M4X14mm

12	X 4


BOLT
spare:1



Ø50mm

13	X 2

CASTER



Ø6X12mm

14	X 8


SCREW
spare:1



Ø3.5X12mm

15	X 4

SCREW
spare:1



Ø21mm

16	X 31

PERFECT STICKERS
spare:3




Ø4X40mm



Ø4X12mm



Ø6X29mm



73X15X24mm


17	X 1 set

ANTI - TIPPING HARDWARE

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

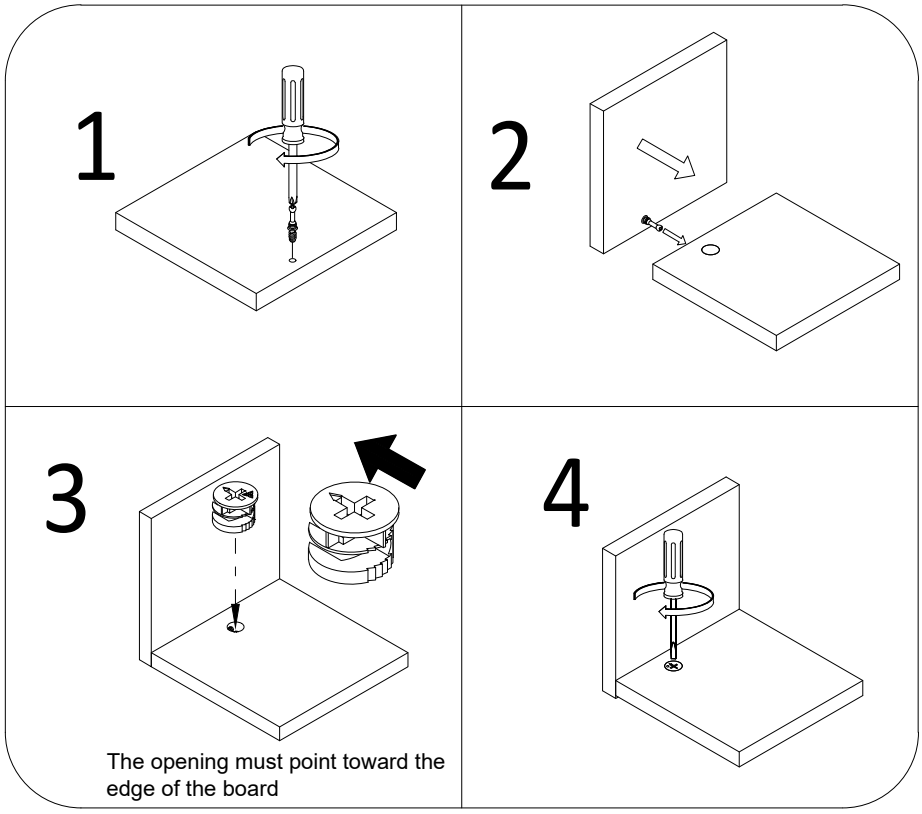



Board Identification


Not actual size

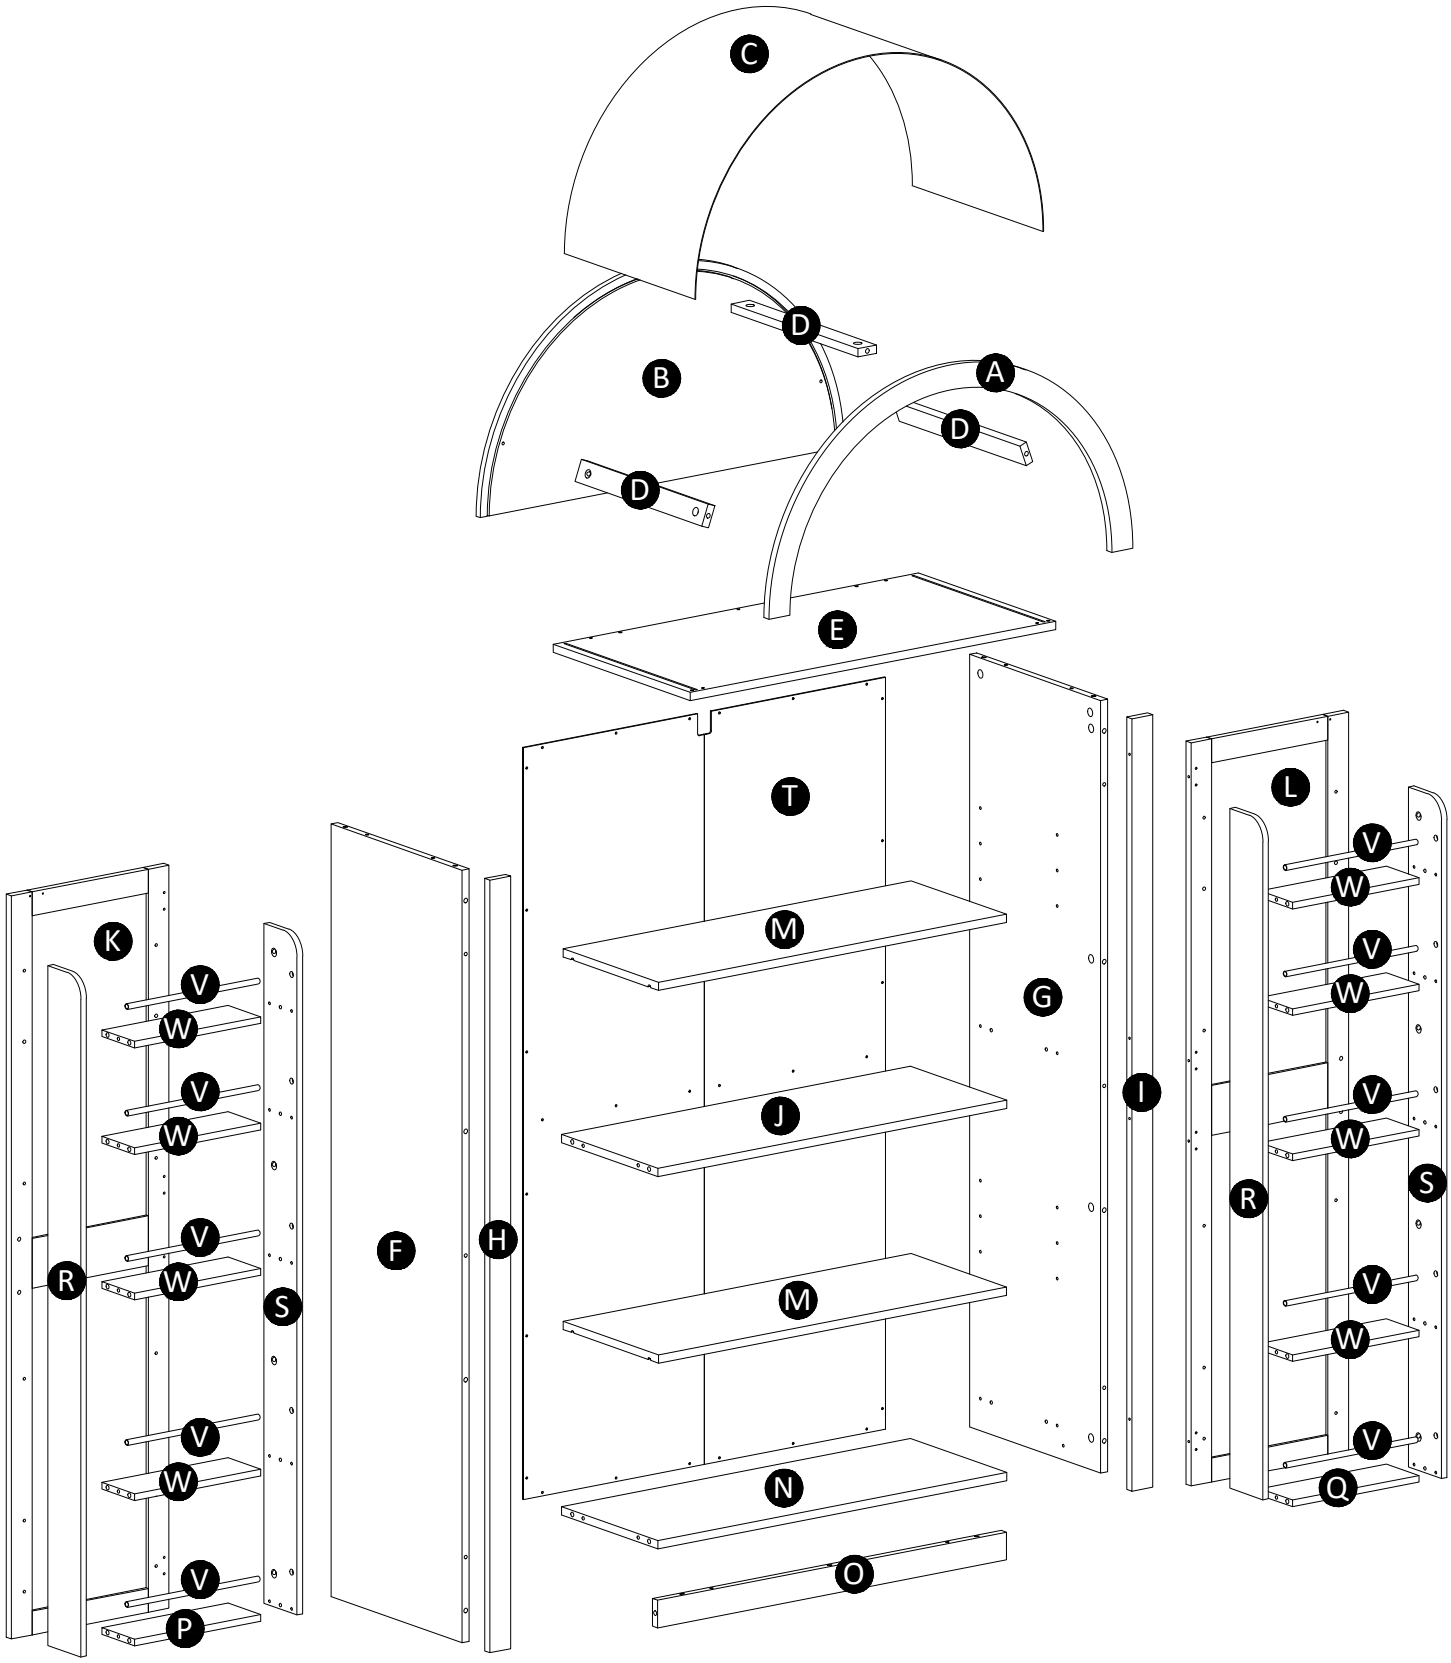



STEP1

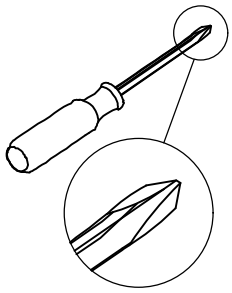


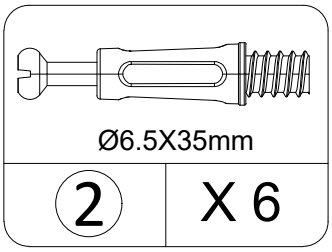

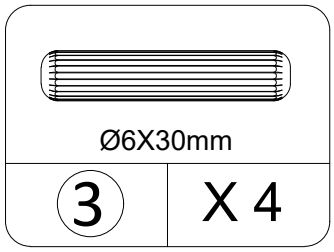


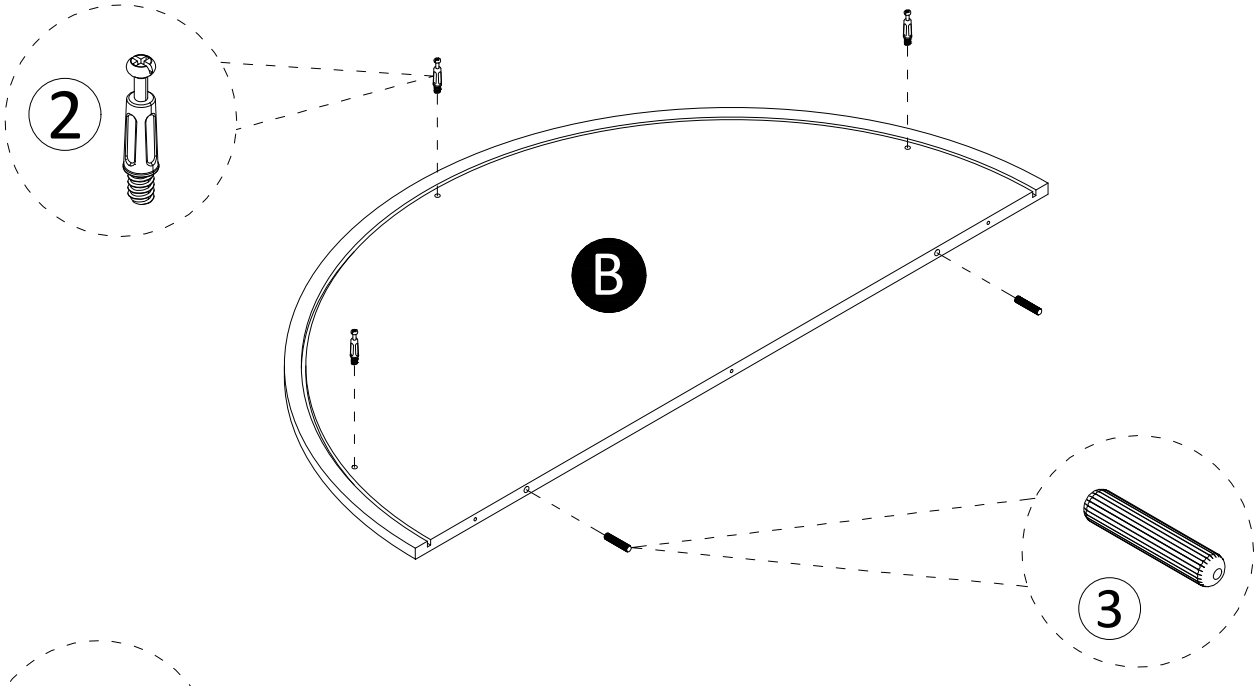


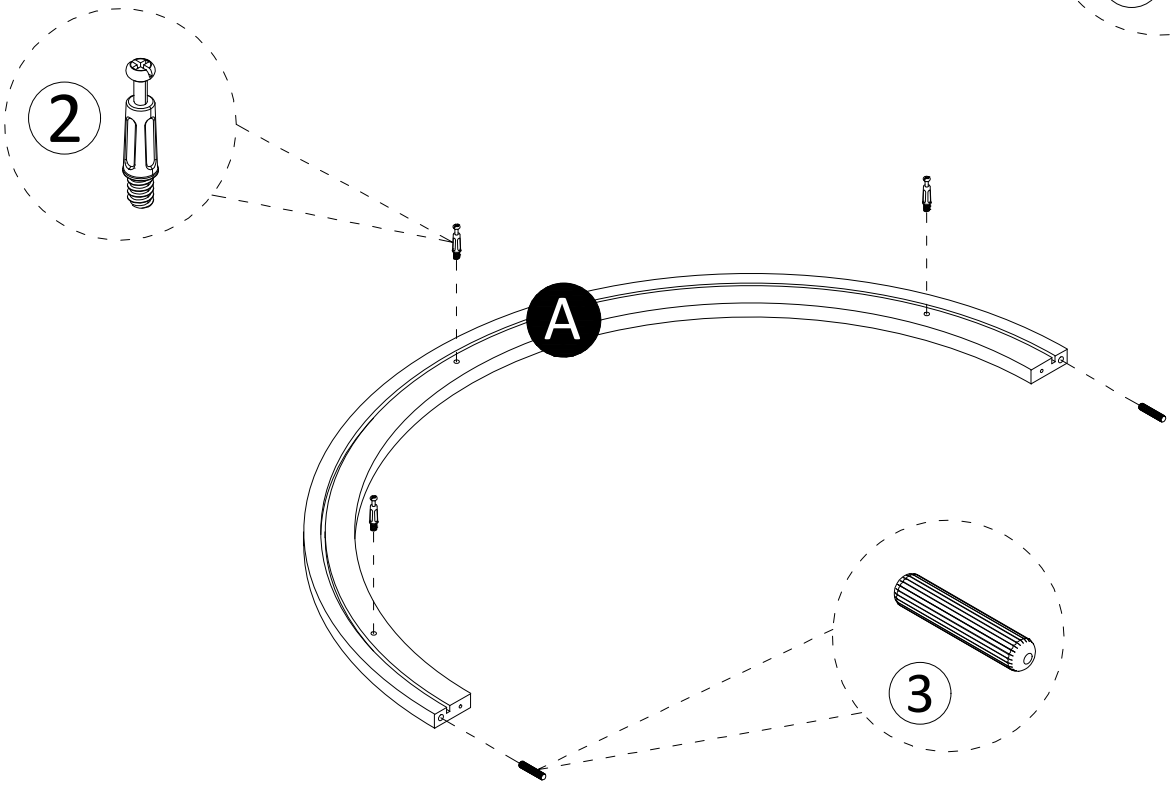


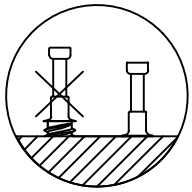

STEP2

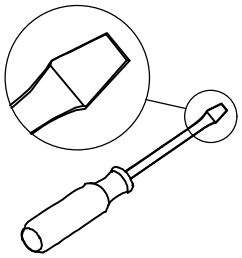

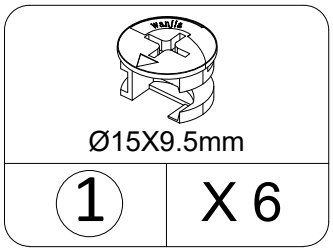


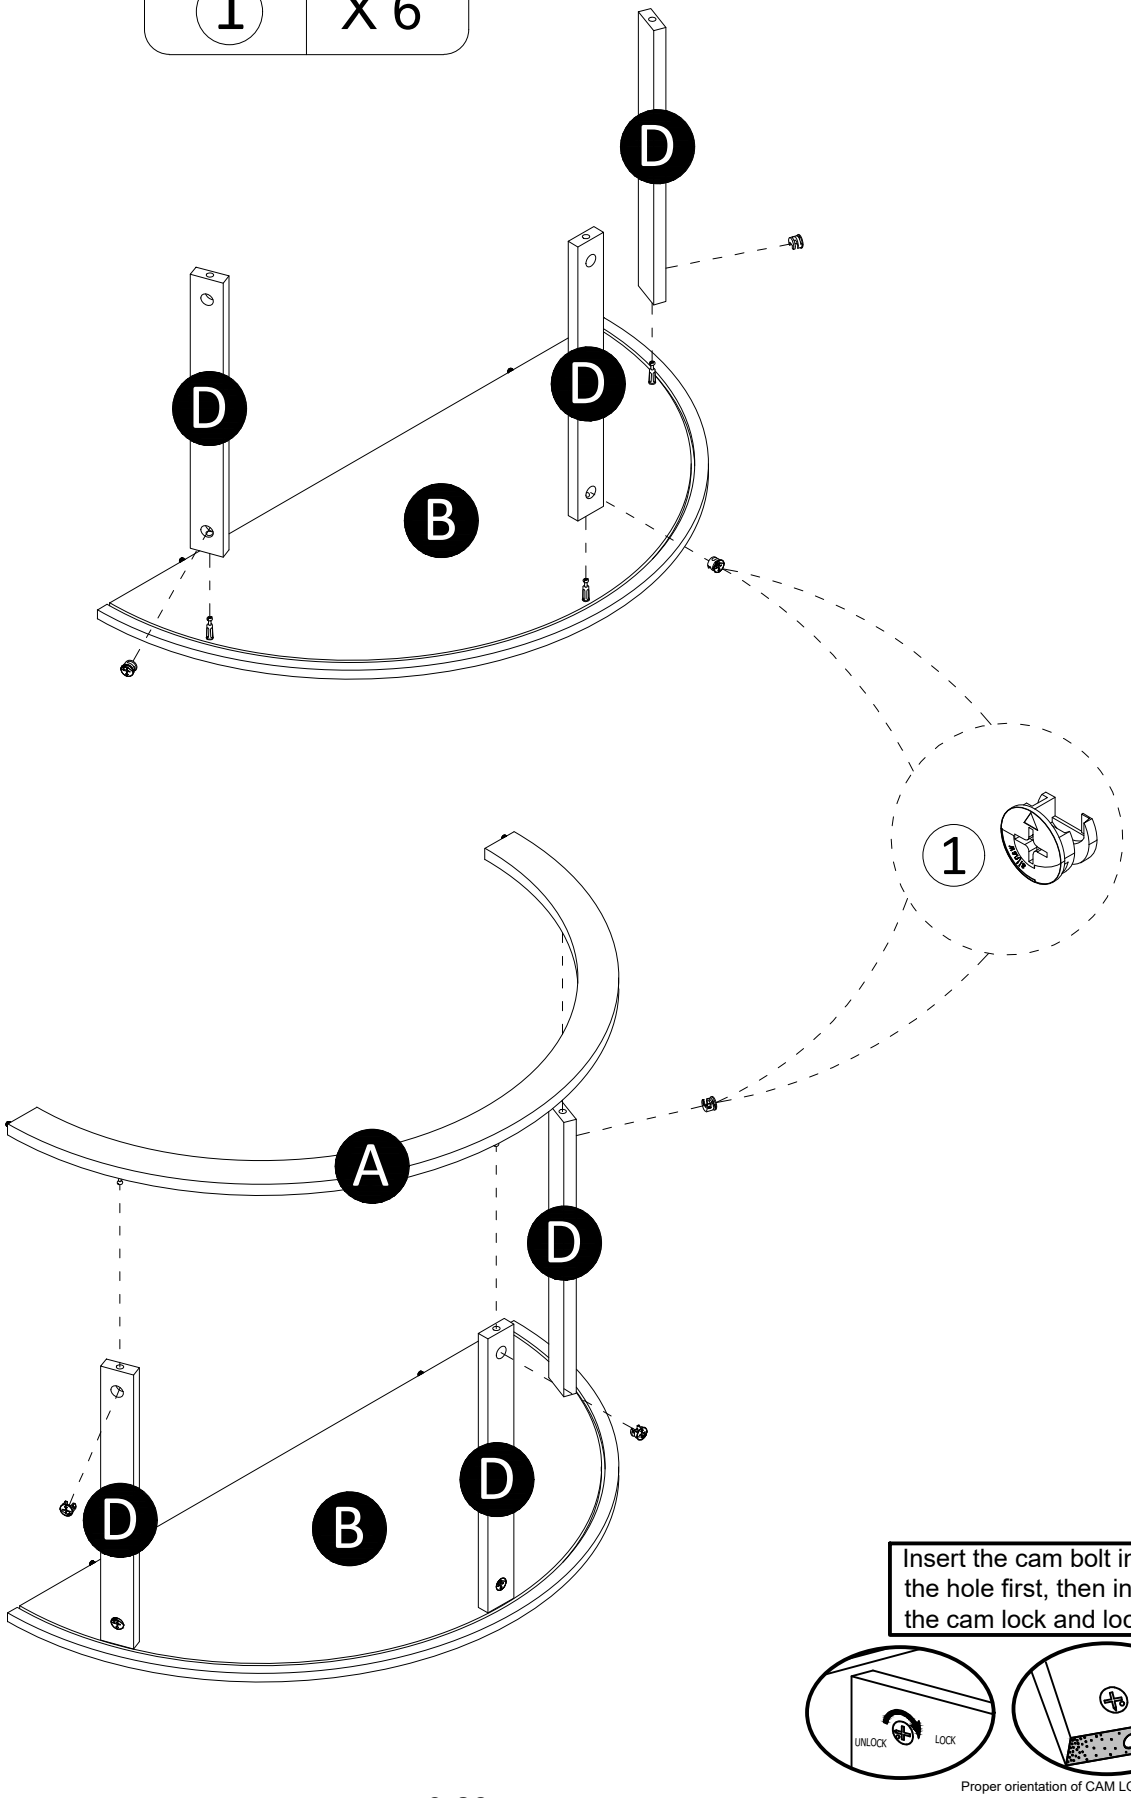


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Proper orientation of CAM LOCK


STEP3

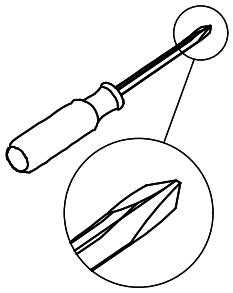




Ø6.5X35mm

2 X 4

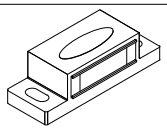


41X16X13mm


8 X 2




Ø3X14mm


10 X 4

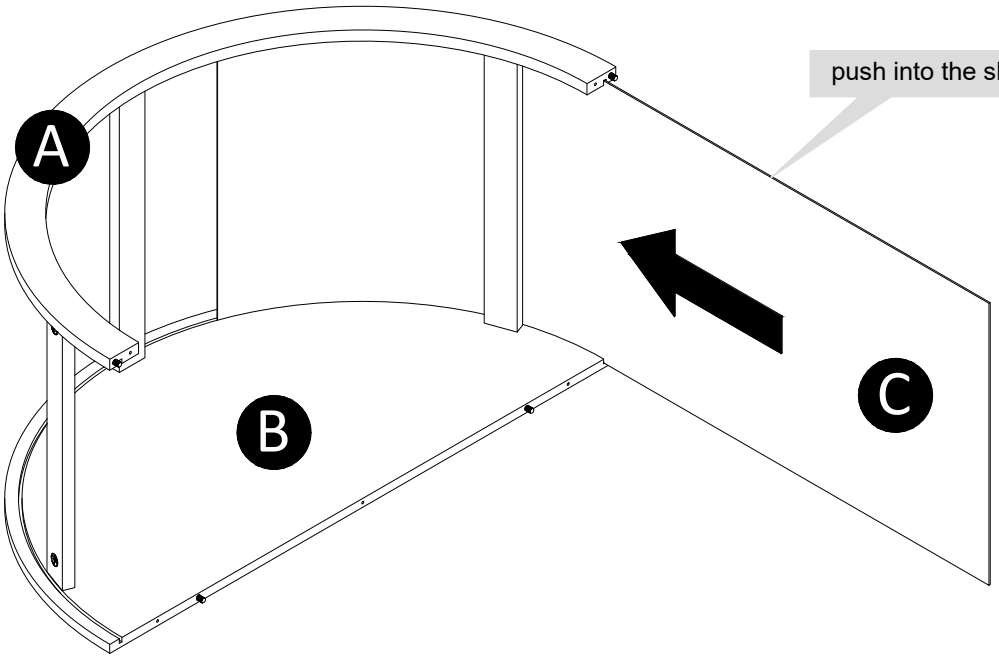


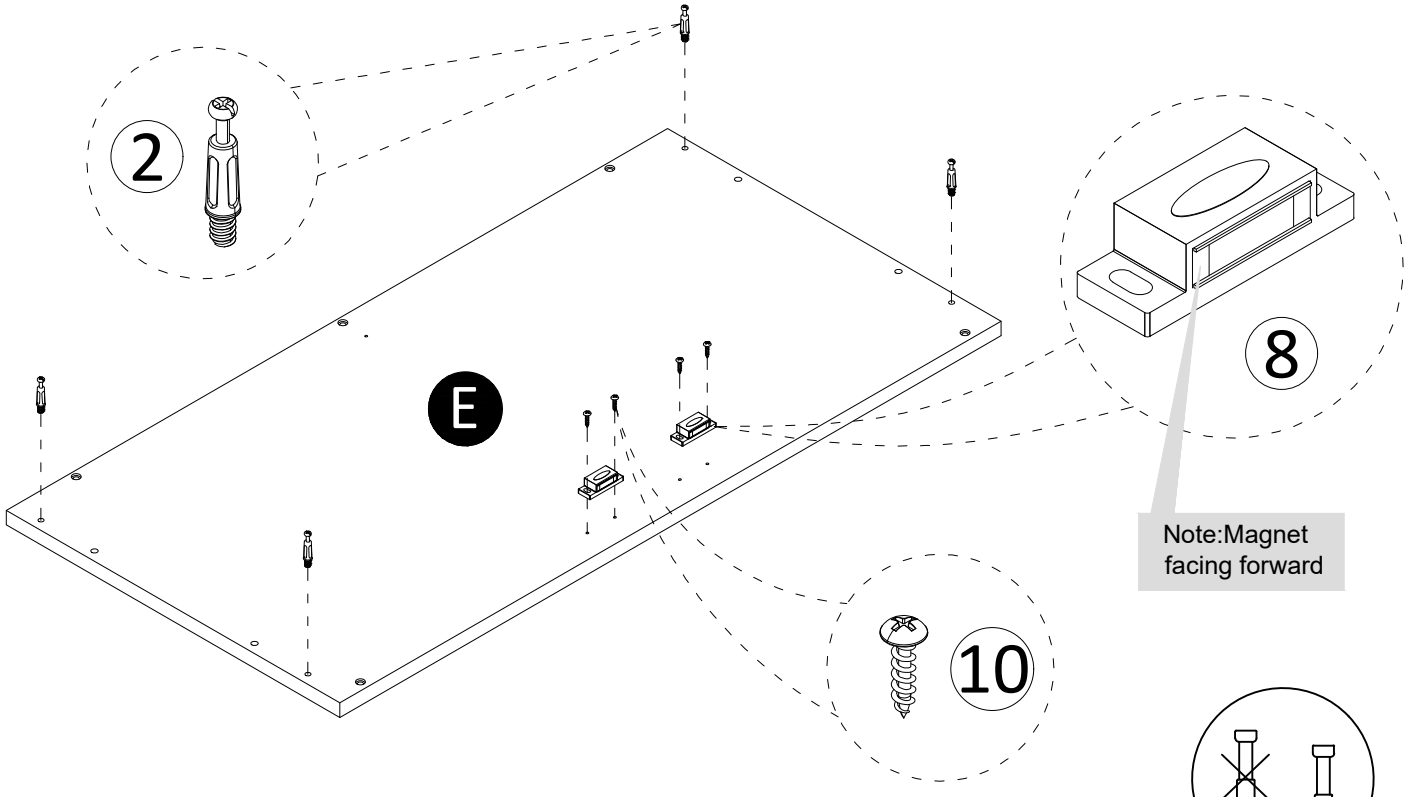



STEP4

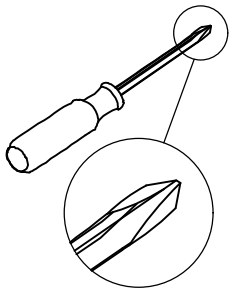

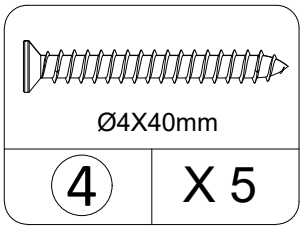

Ø4X40mm
4
X 5

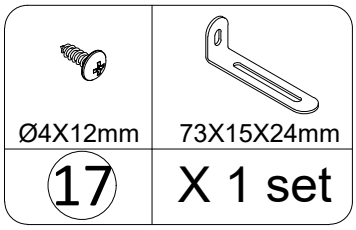

Ø4X12mm
73X15X24mm
17
X 1 set

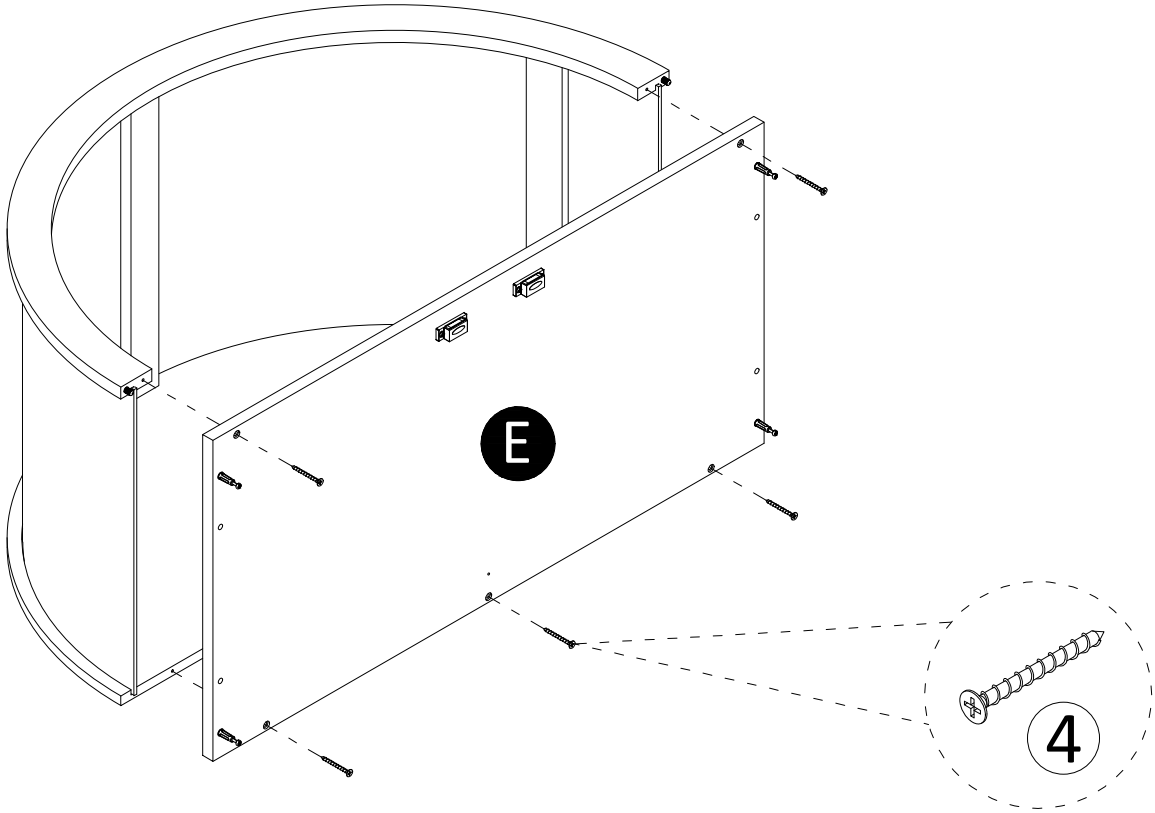

E
4

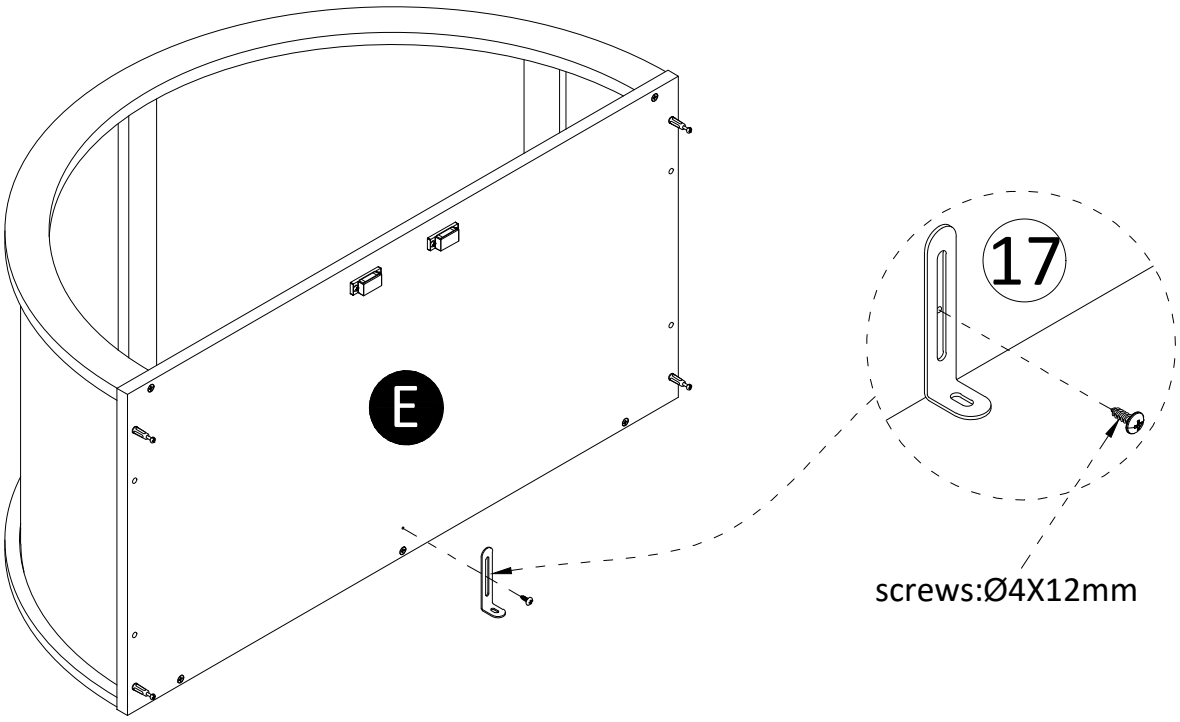

E
17
screws:Ø4X12mm

STEP5

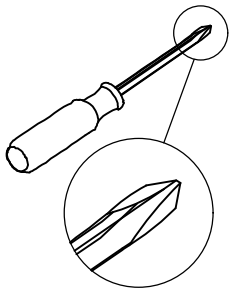


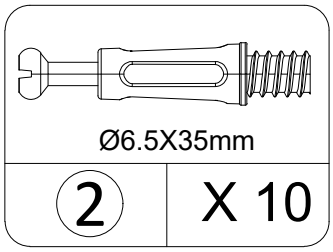


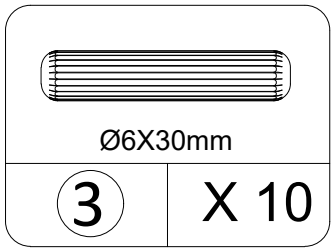


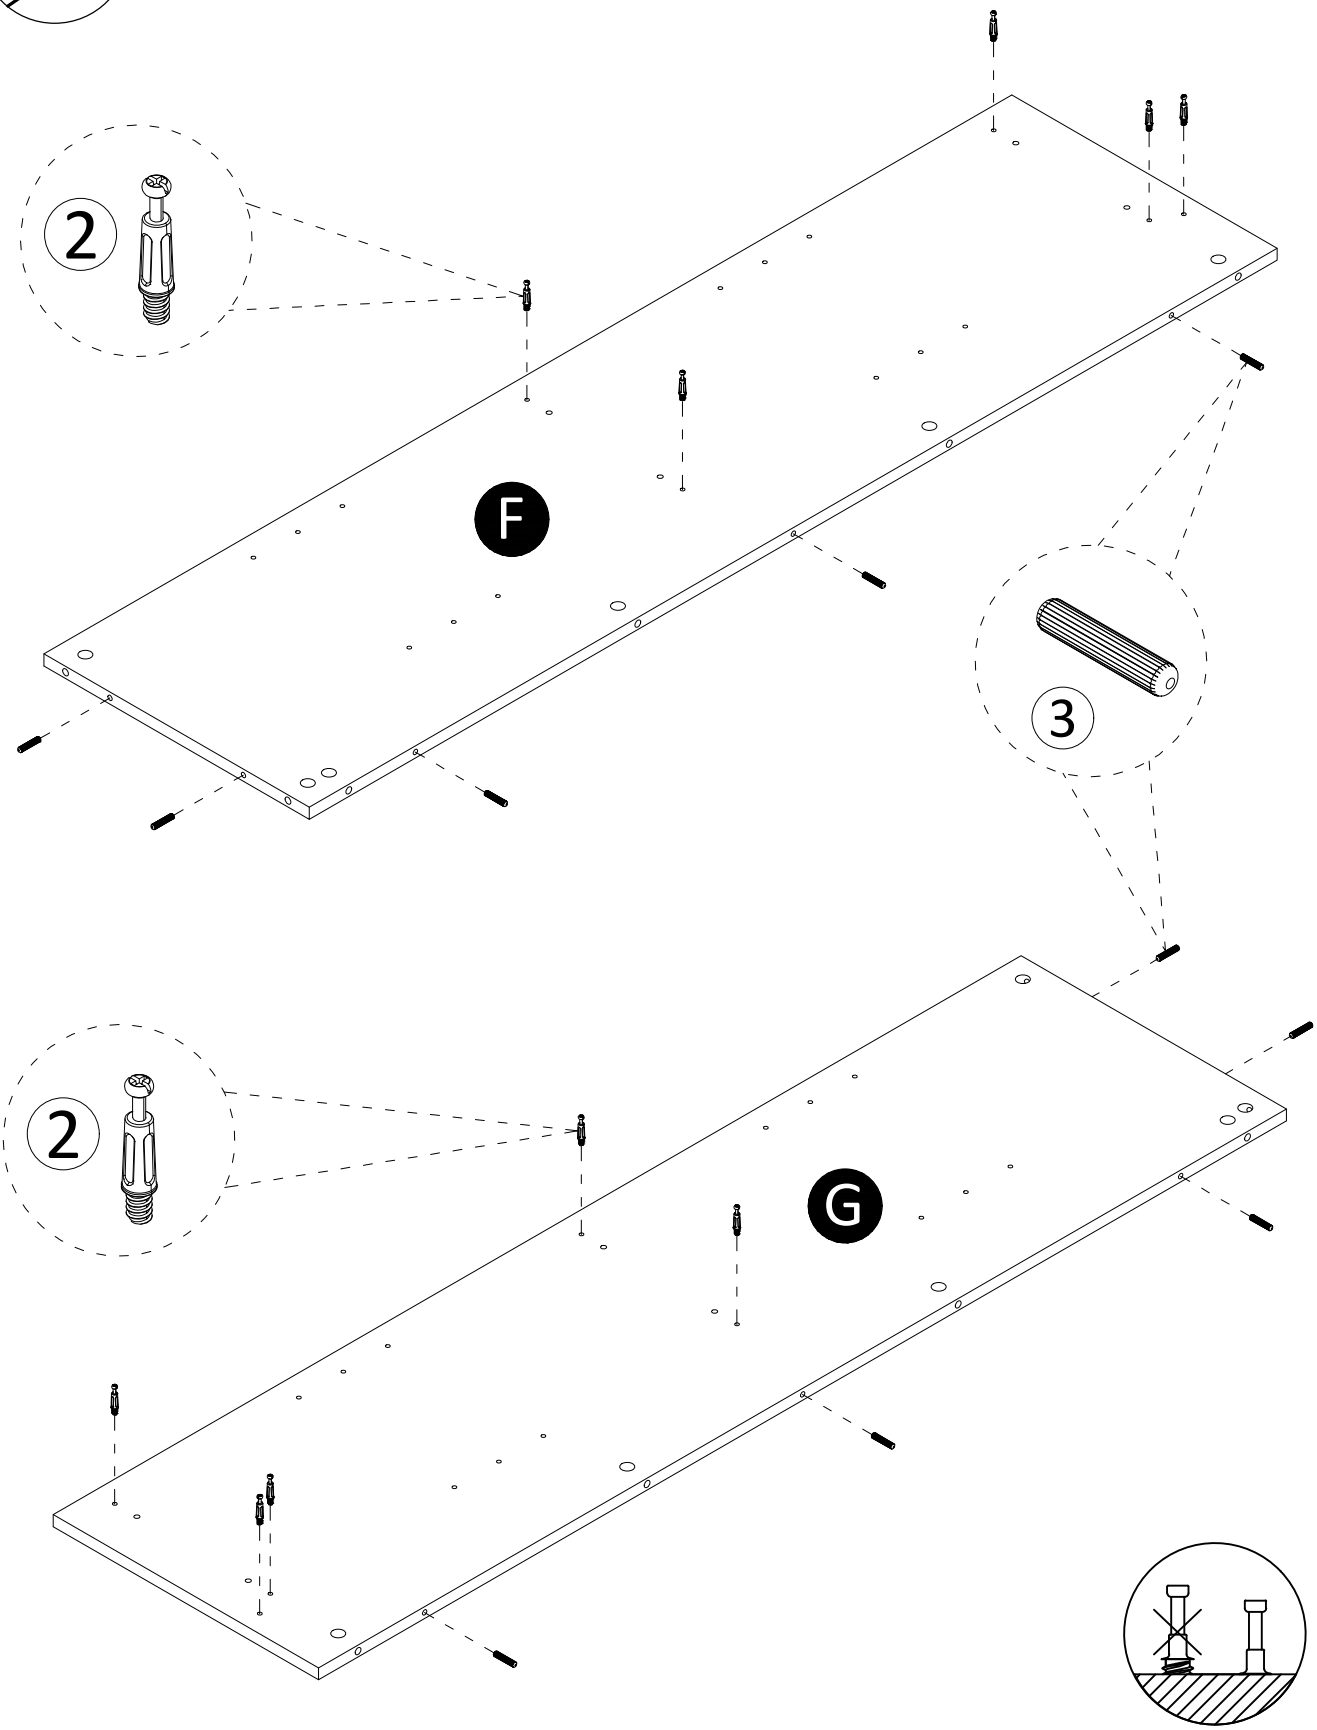



STEP6

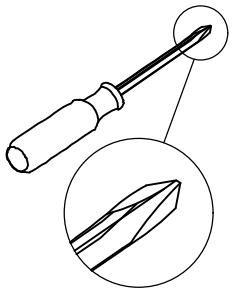


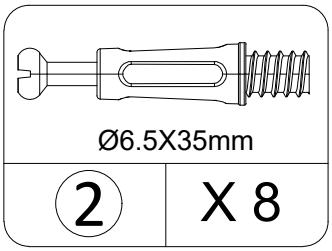

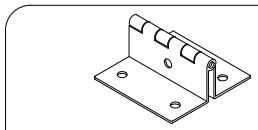





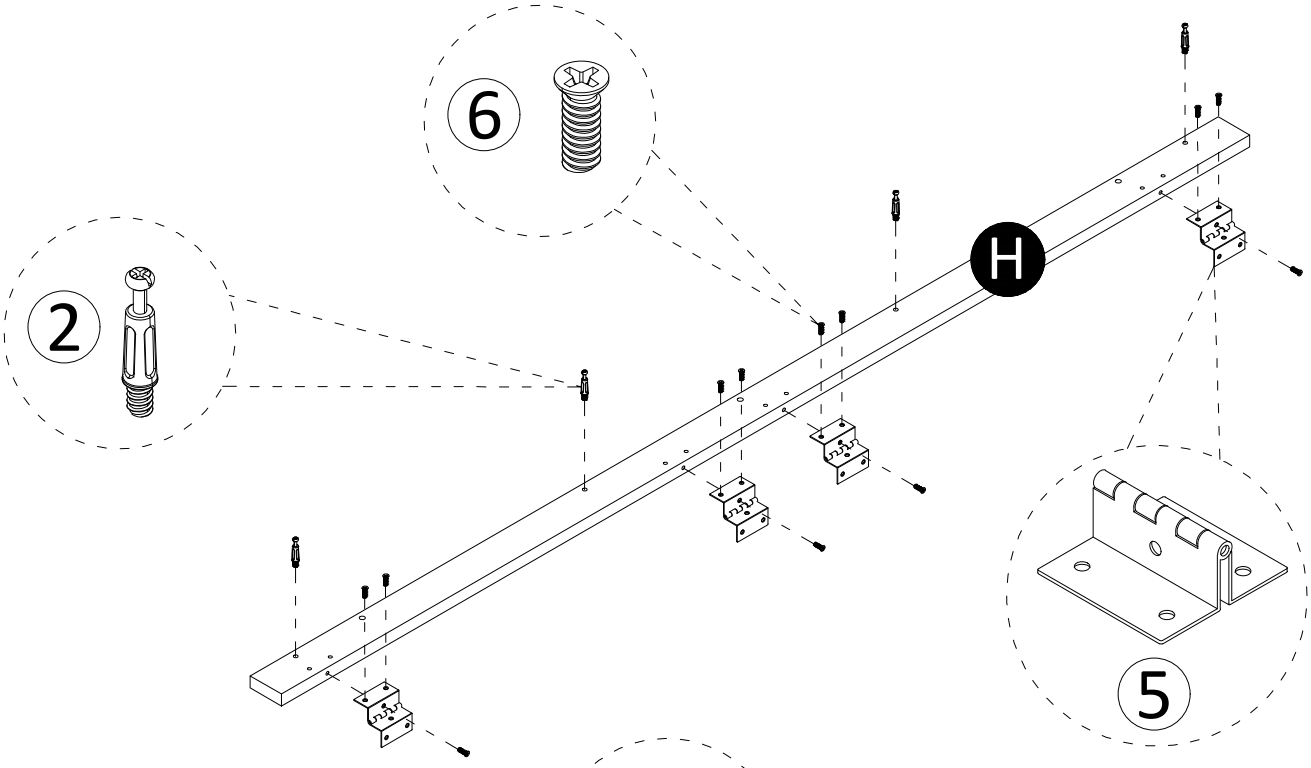


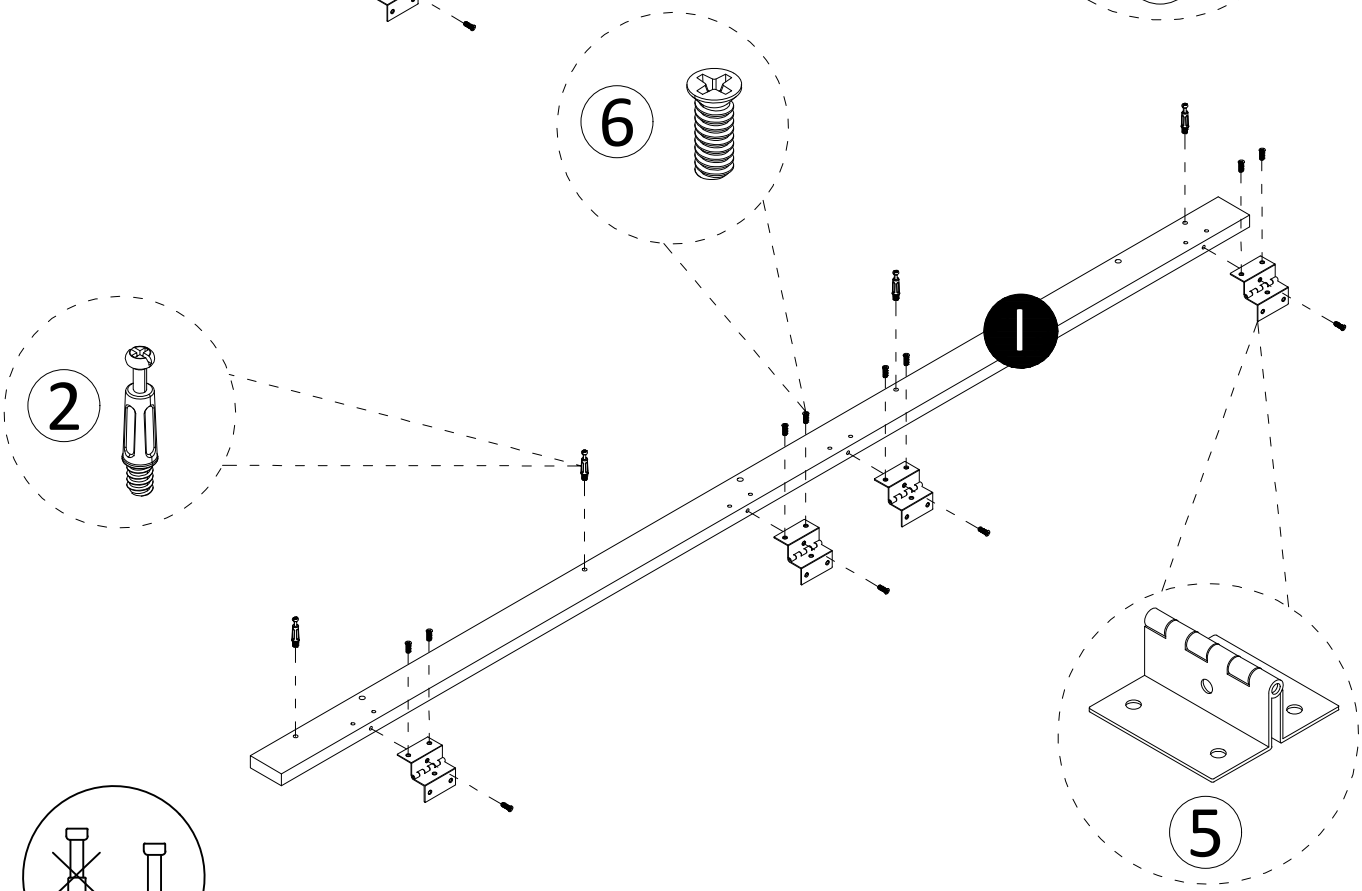

STEP7

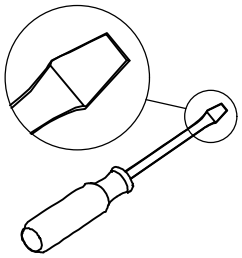

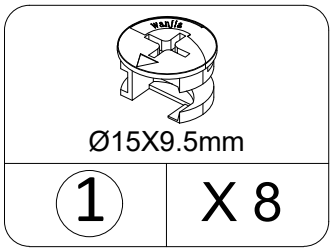


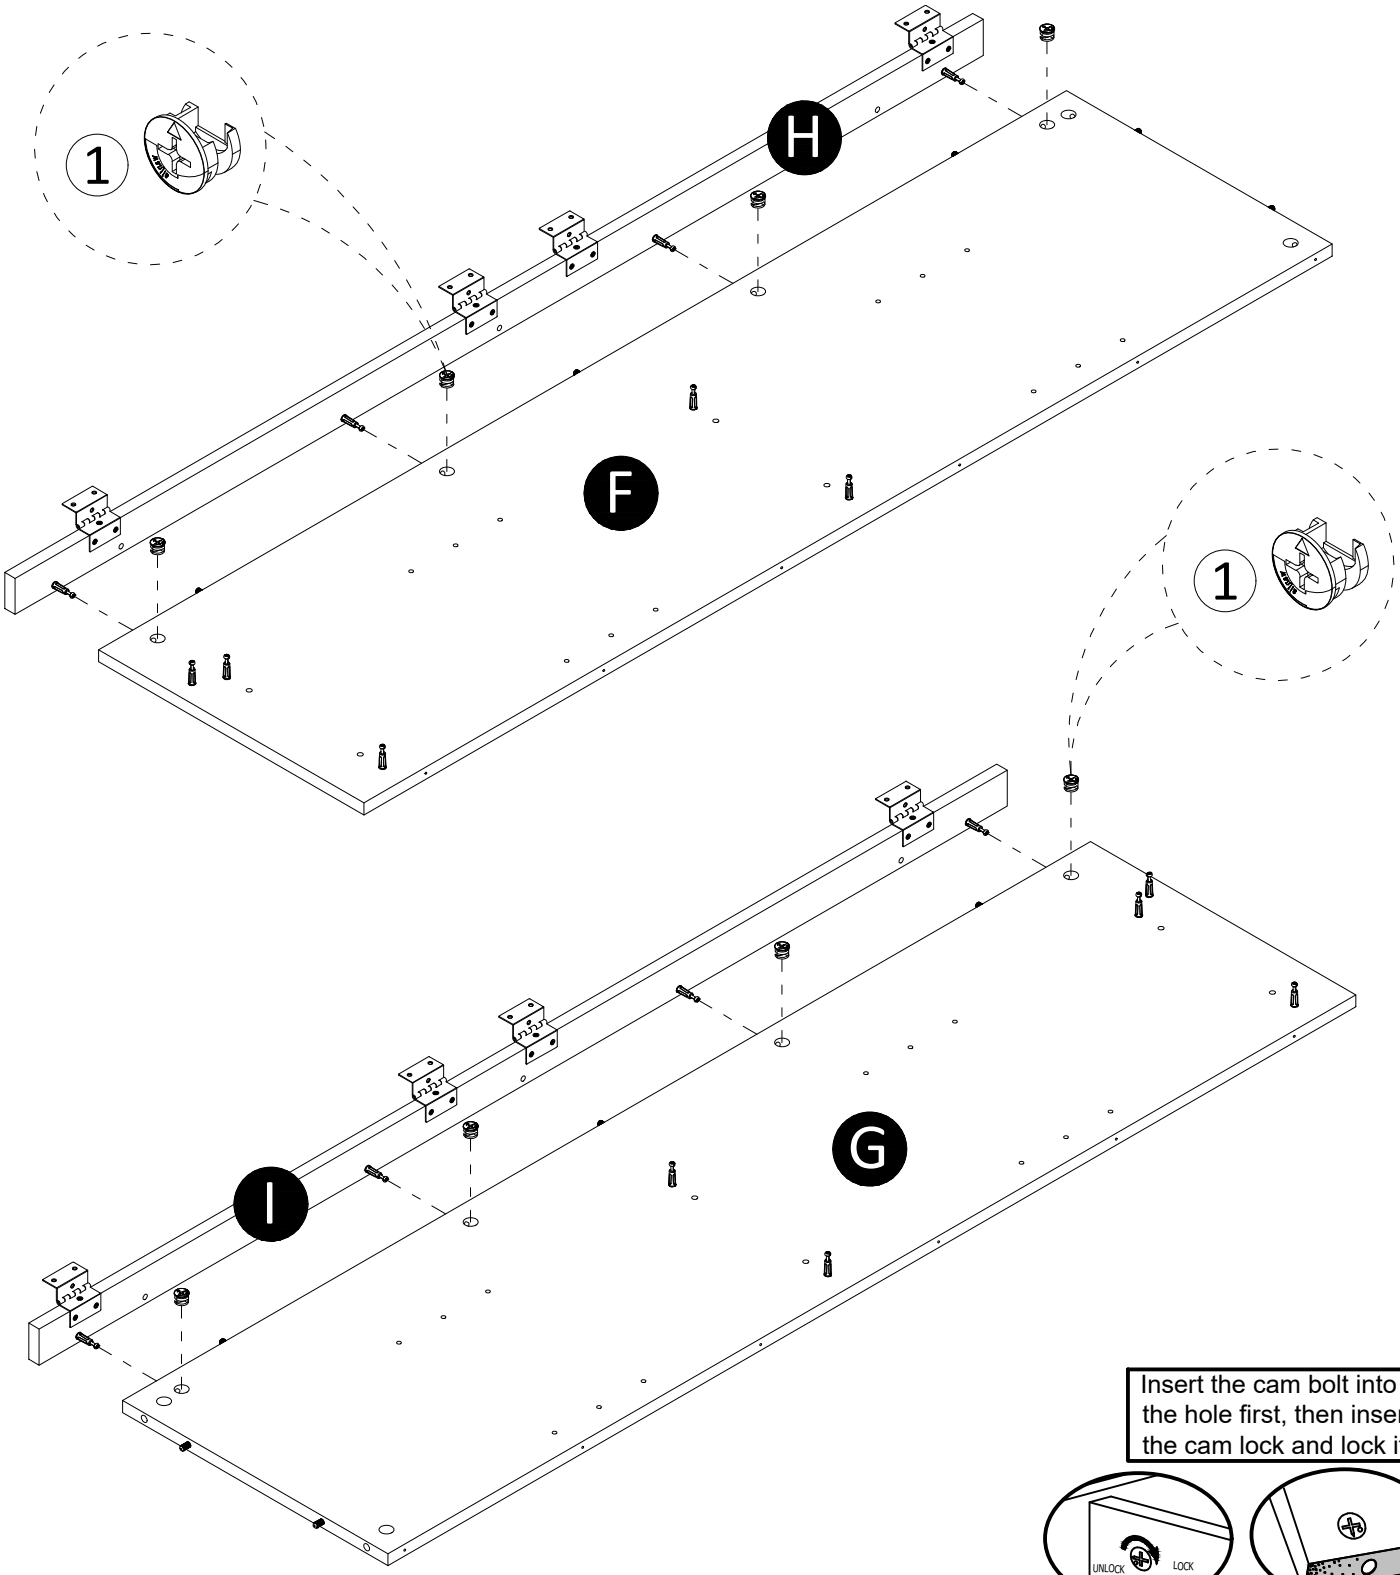



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK


STEP8

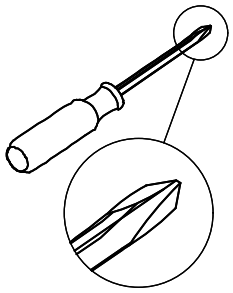

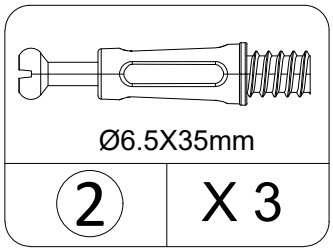


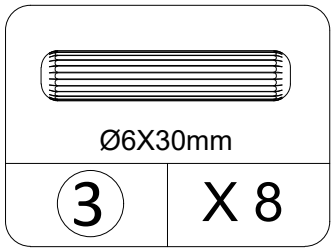


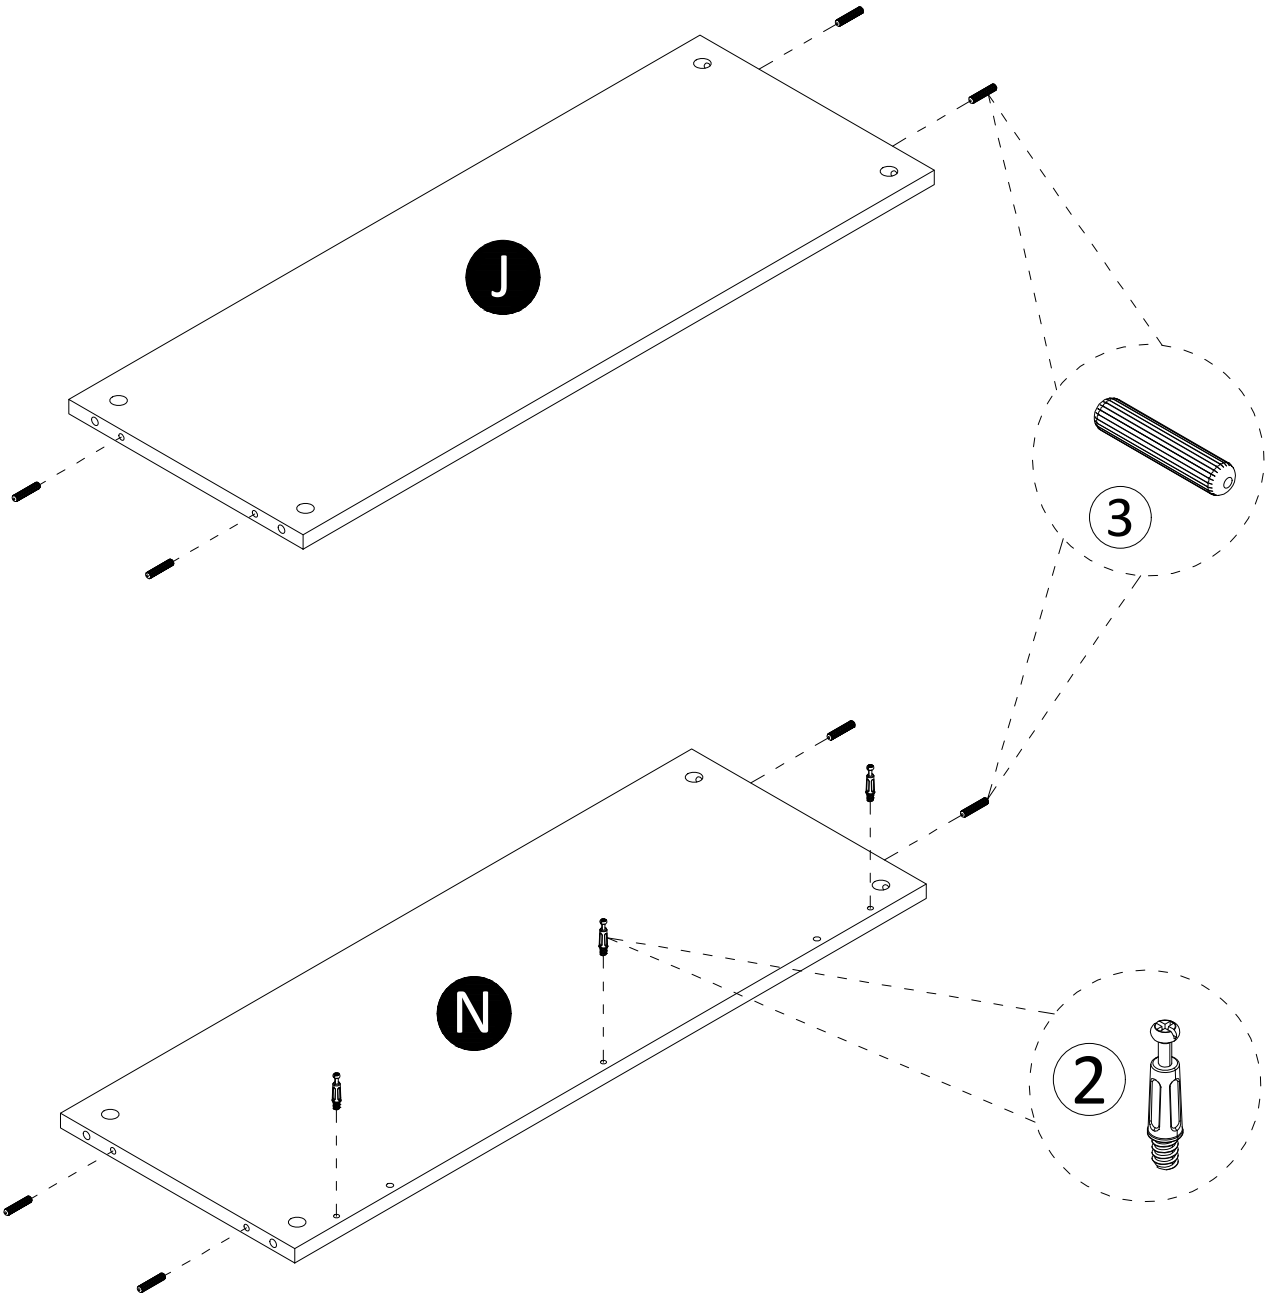


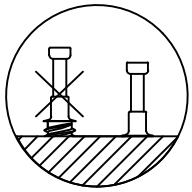



STEP9

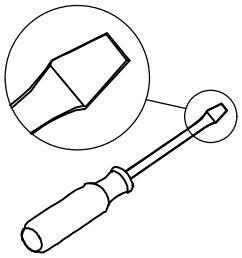

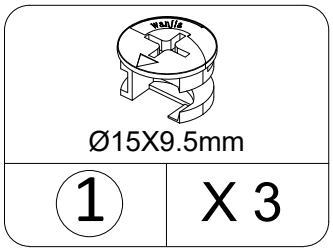


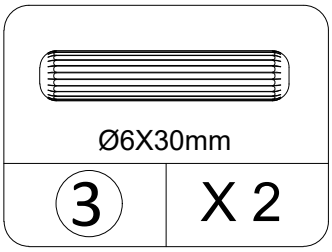

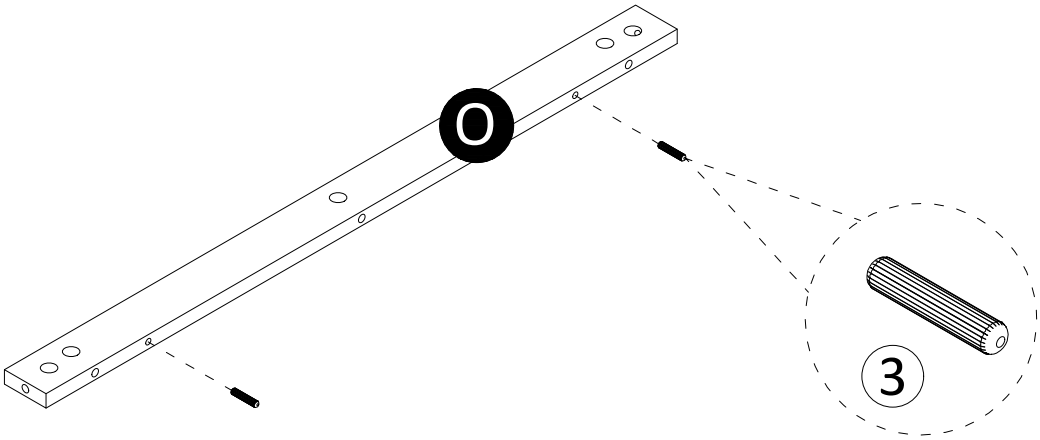

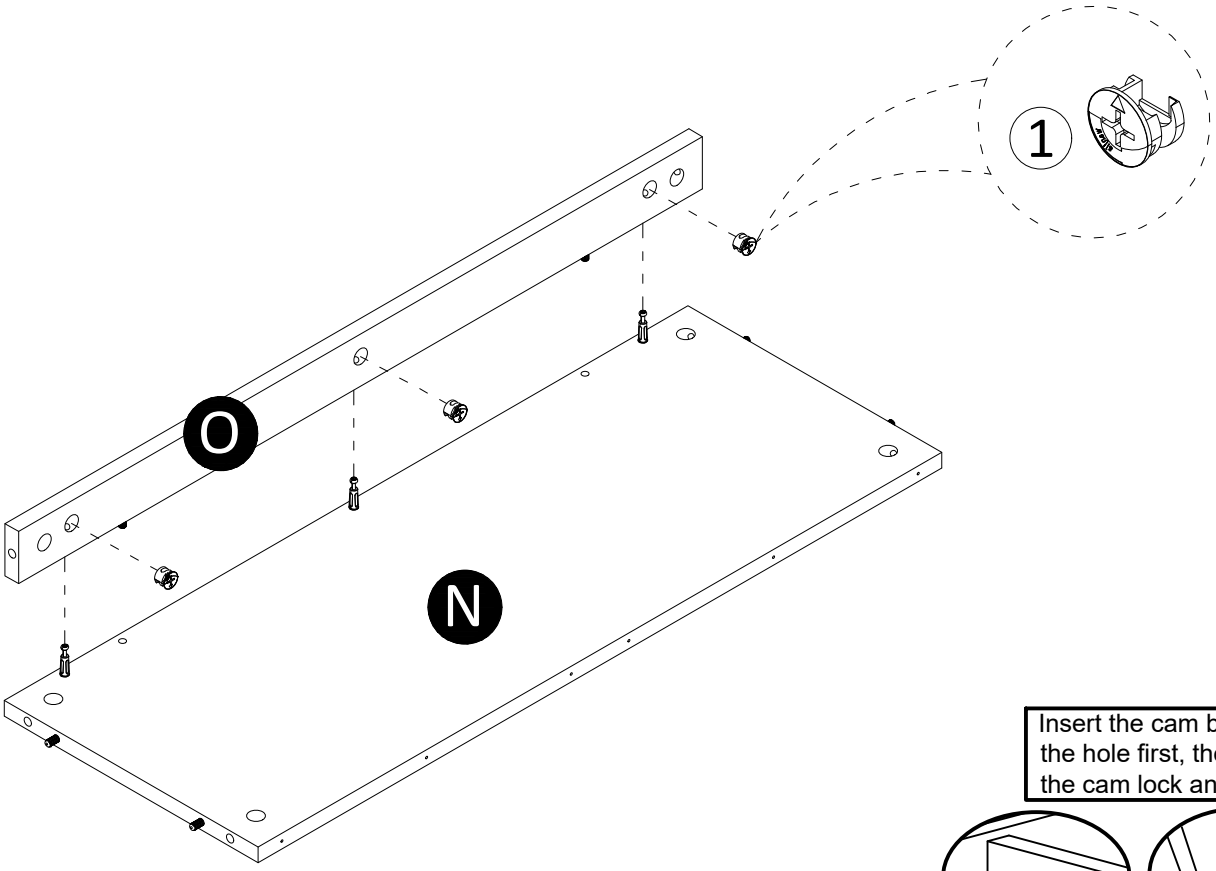



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

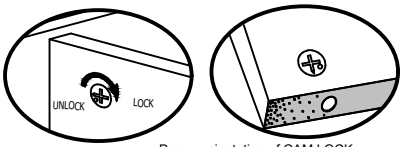


Proper orientation of CAM LOCK


STEP10

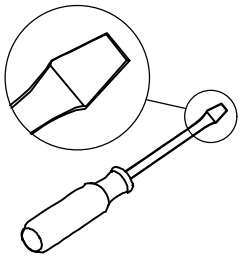

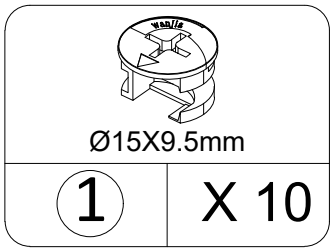

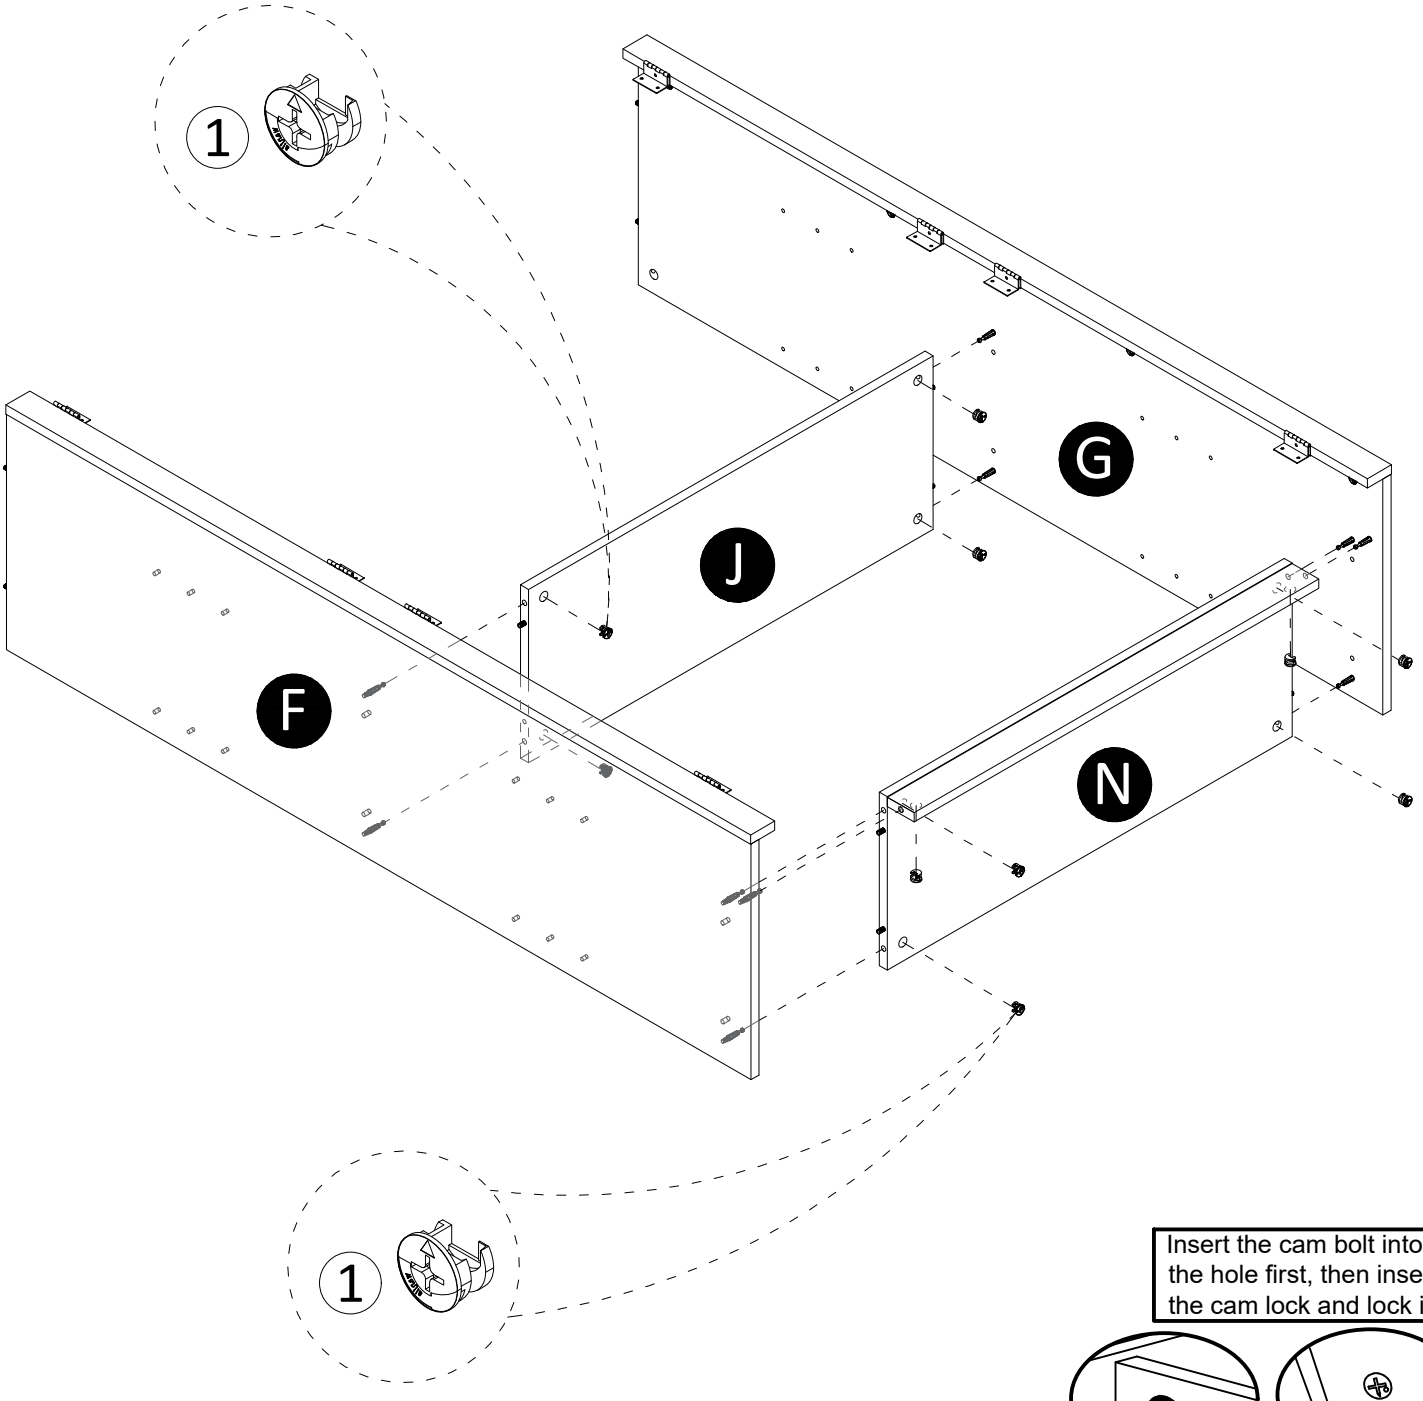



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

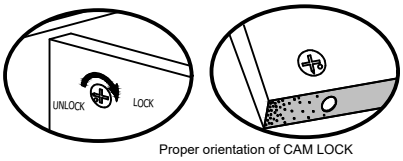


Proper orientation of CAM LOCK


STEP11

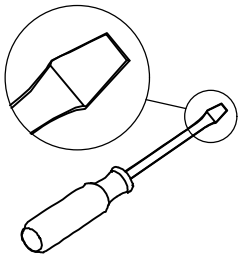

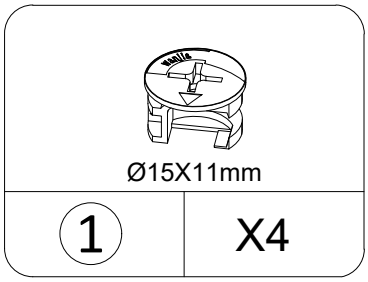

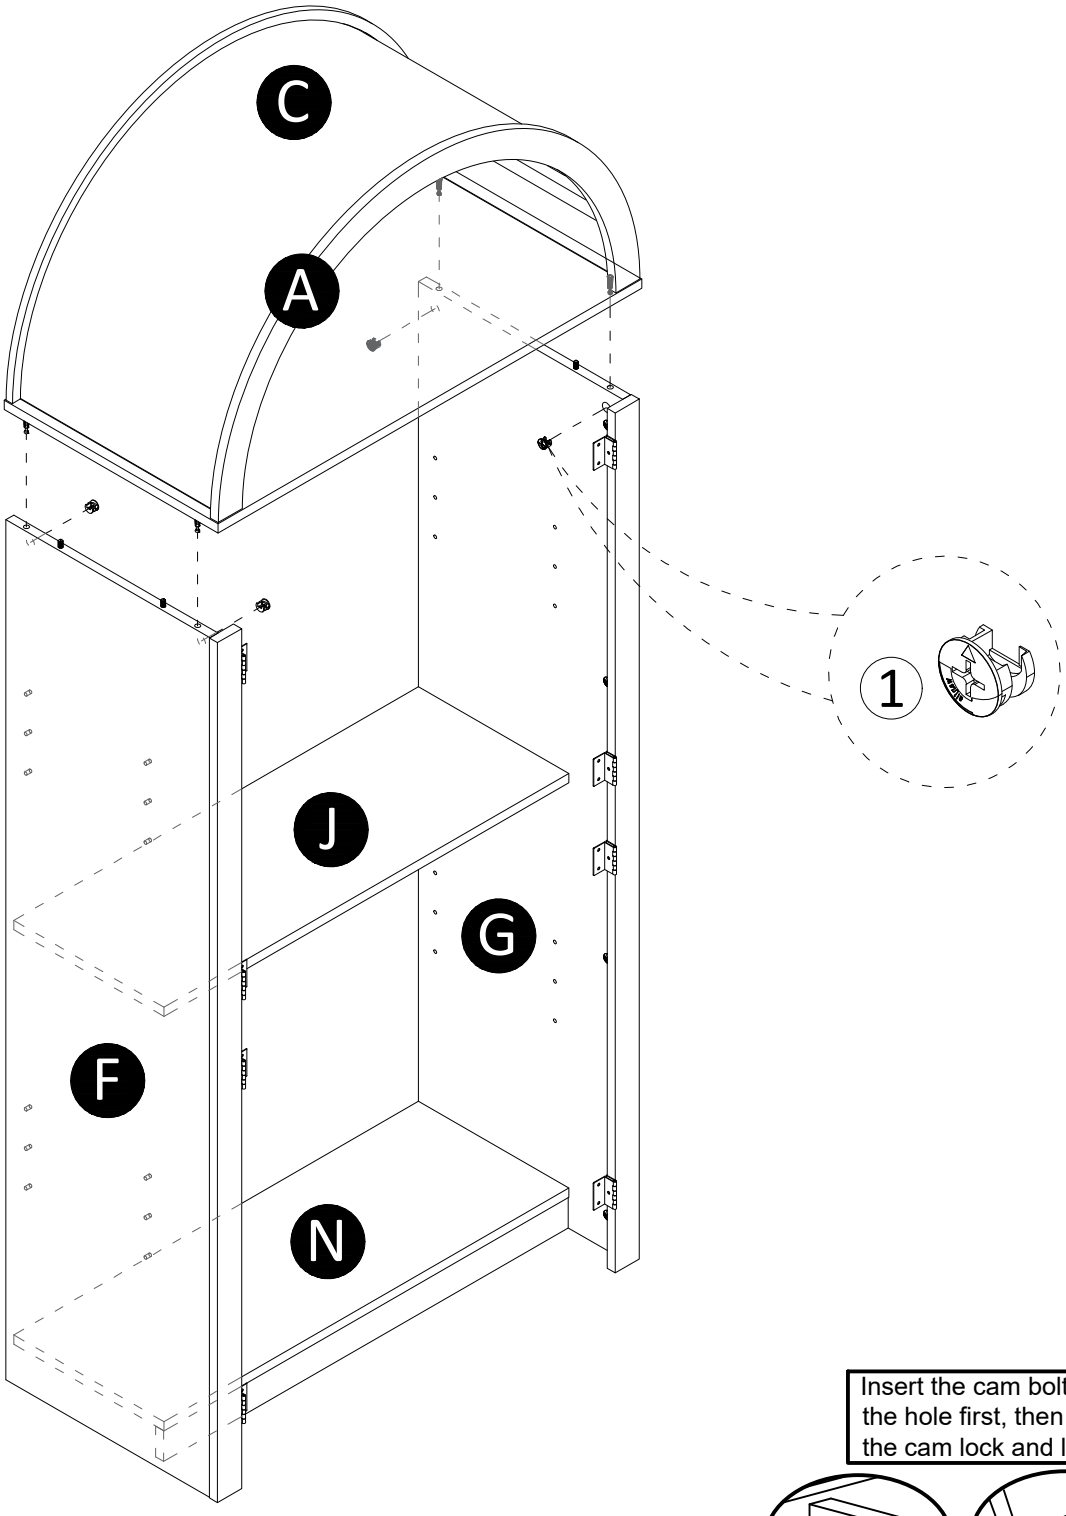



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

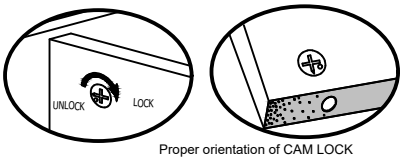

Proper orientation of CAM LOCK


STEP12

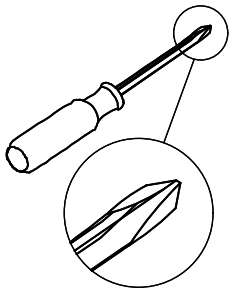




Ø3X14mm

10 X 30

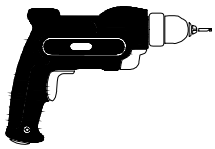



If you have an electric screwdriver tool at home, it will make installation faster

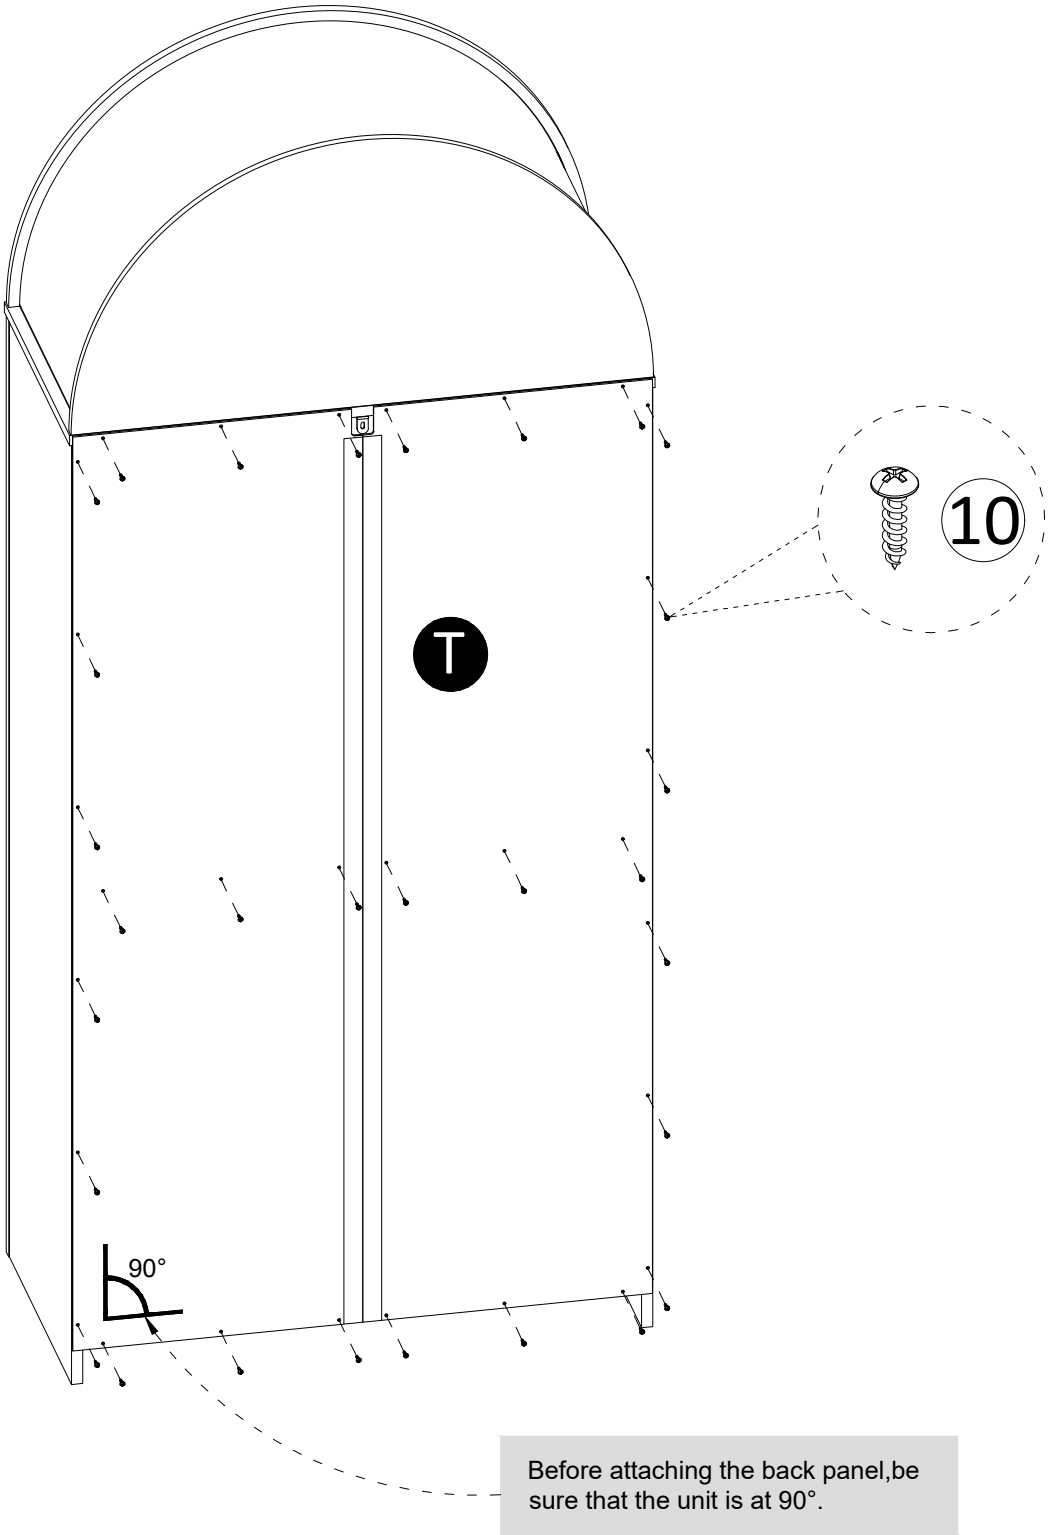

Before attaching the back panel,be sure that the unit is at 90°.


STEP13

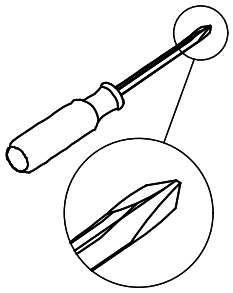




Ø6.5X35mm


2 X 40




Ø6X30mm


3 X 8

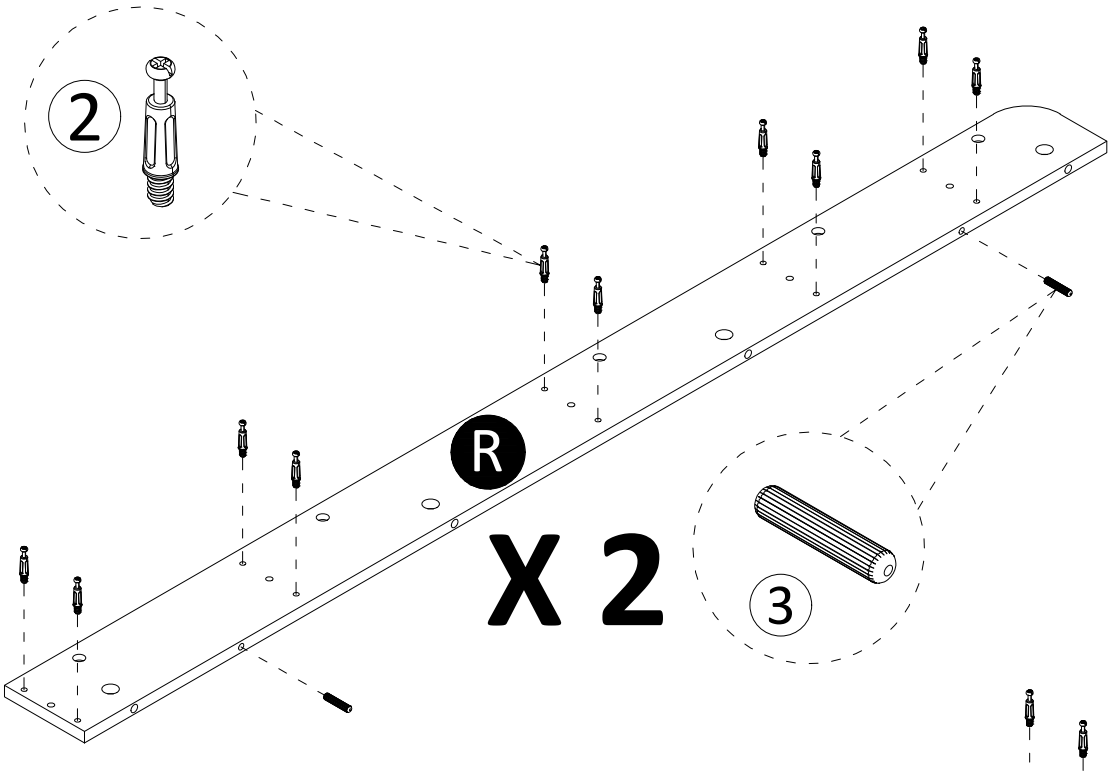

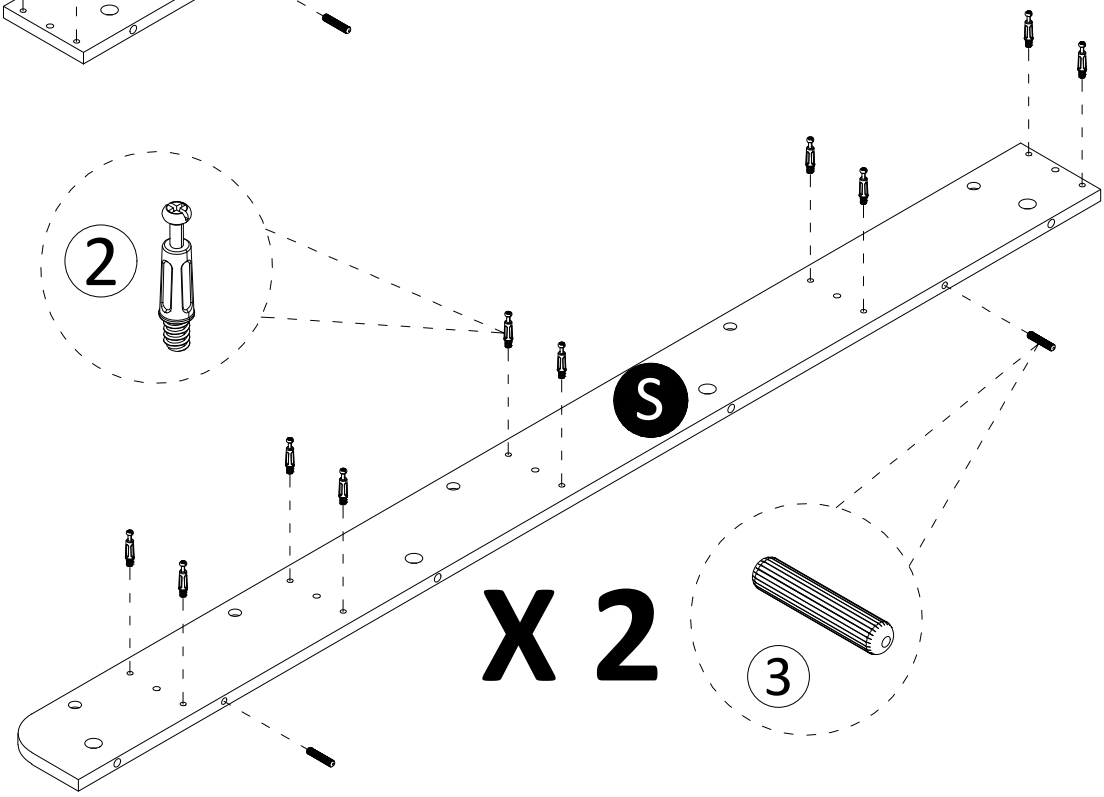


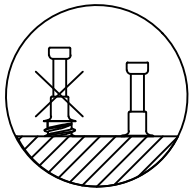



STEP14

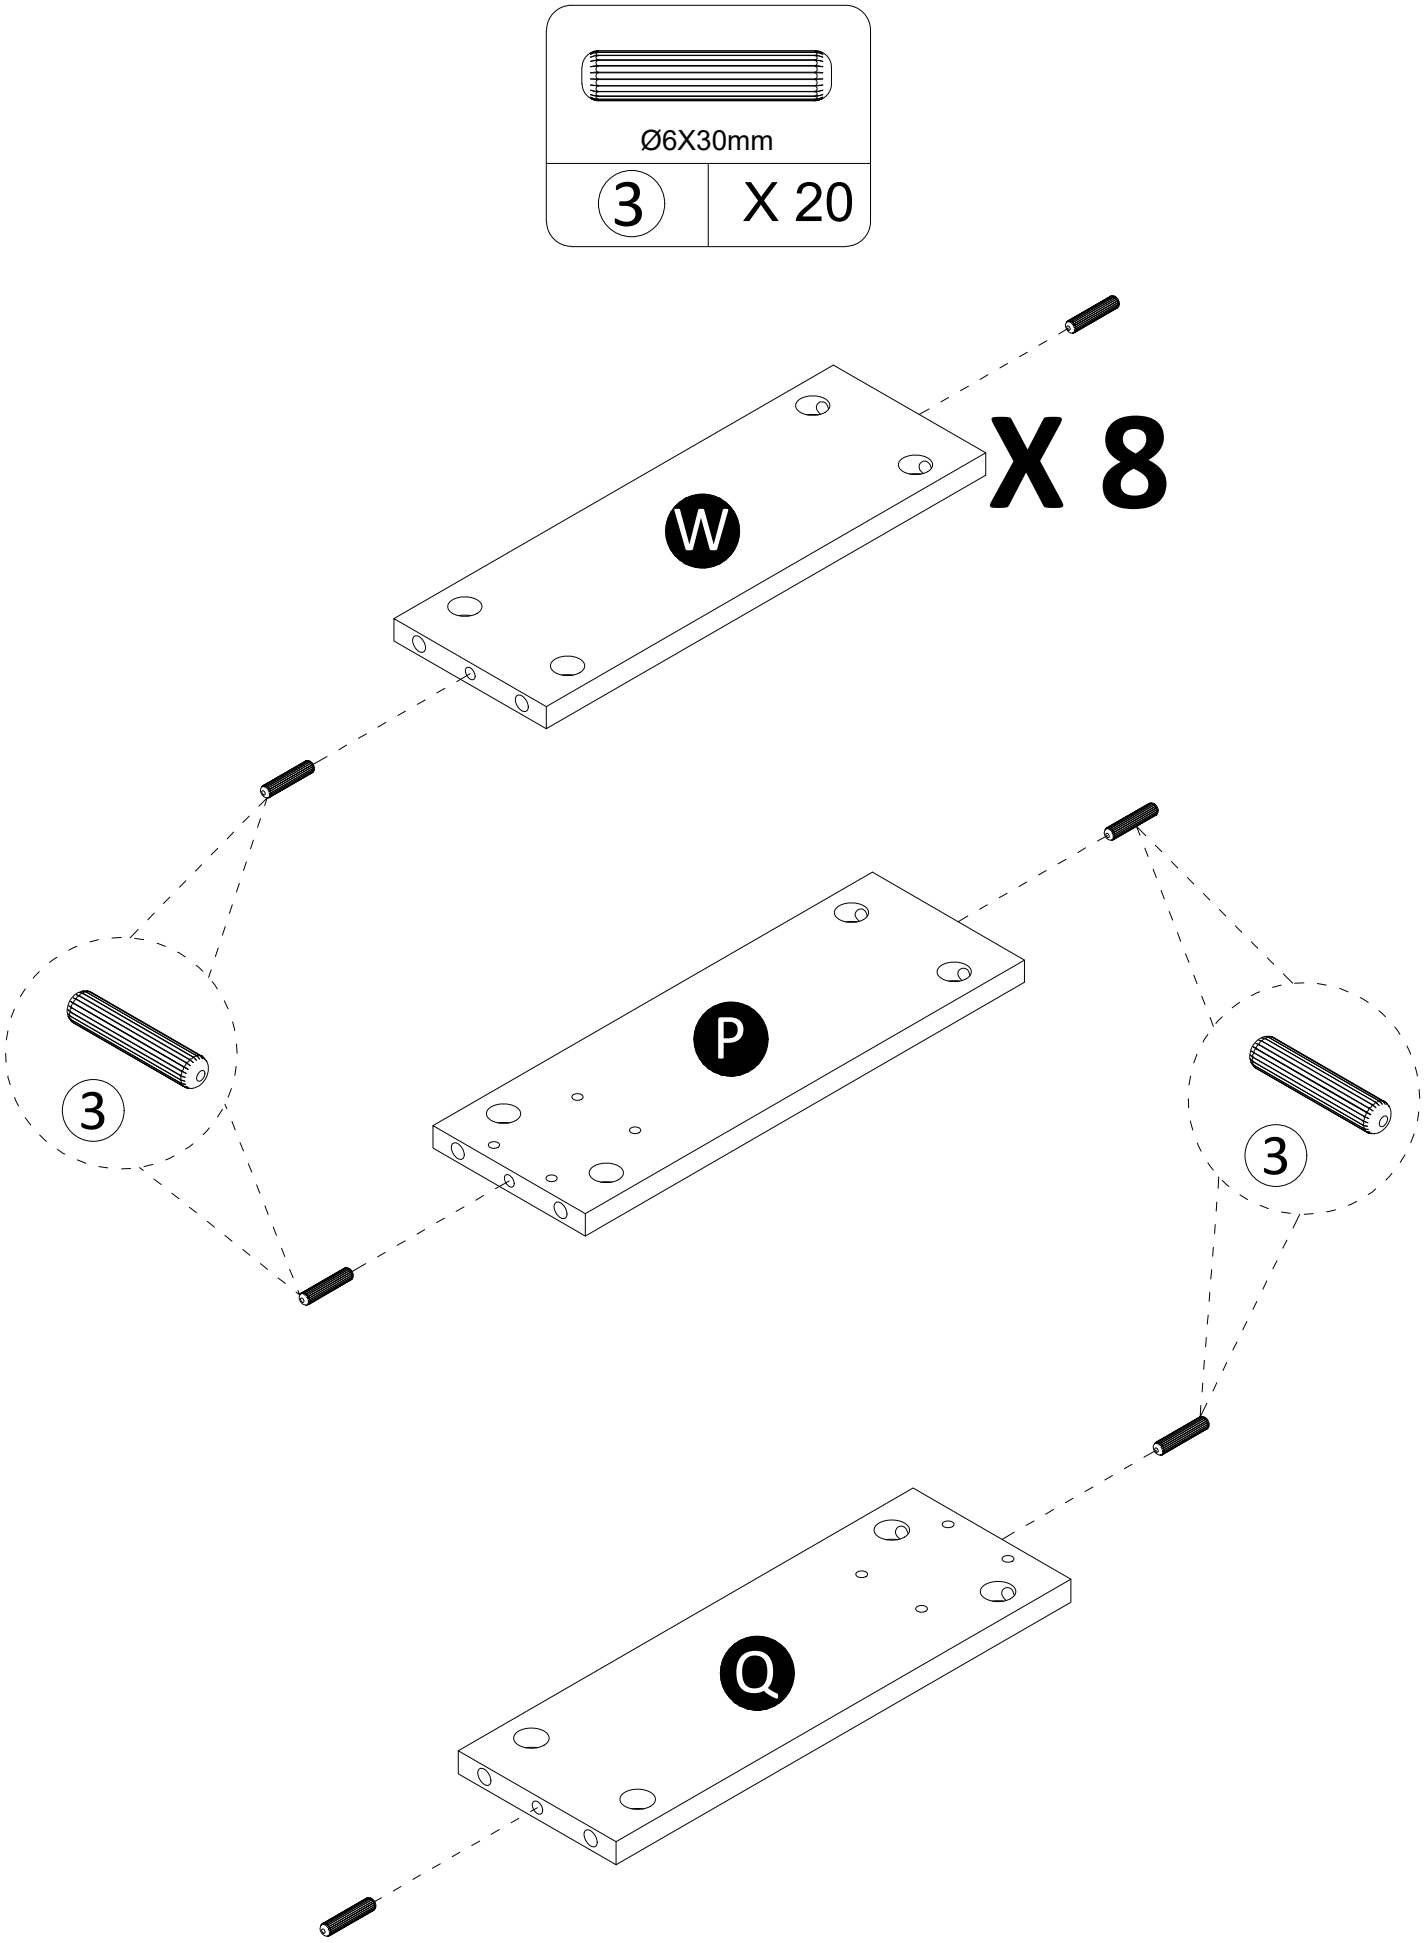


STEP15

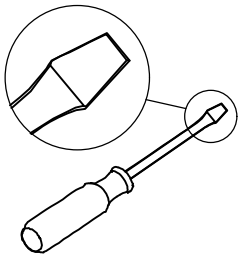


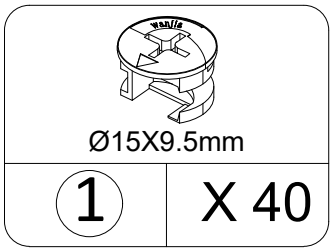

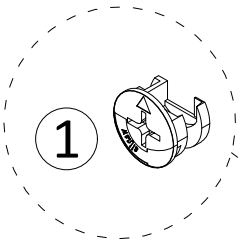

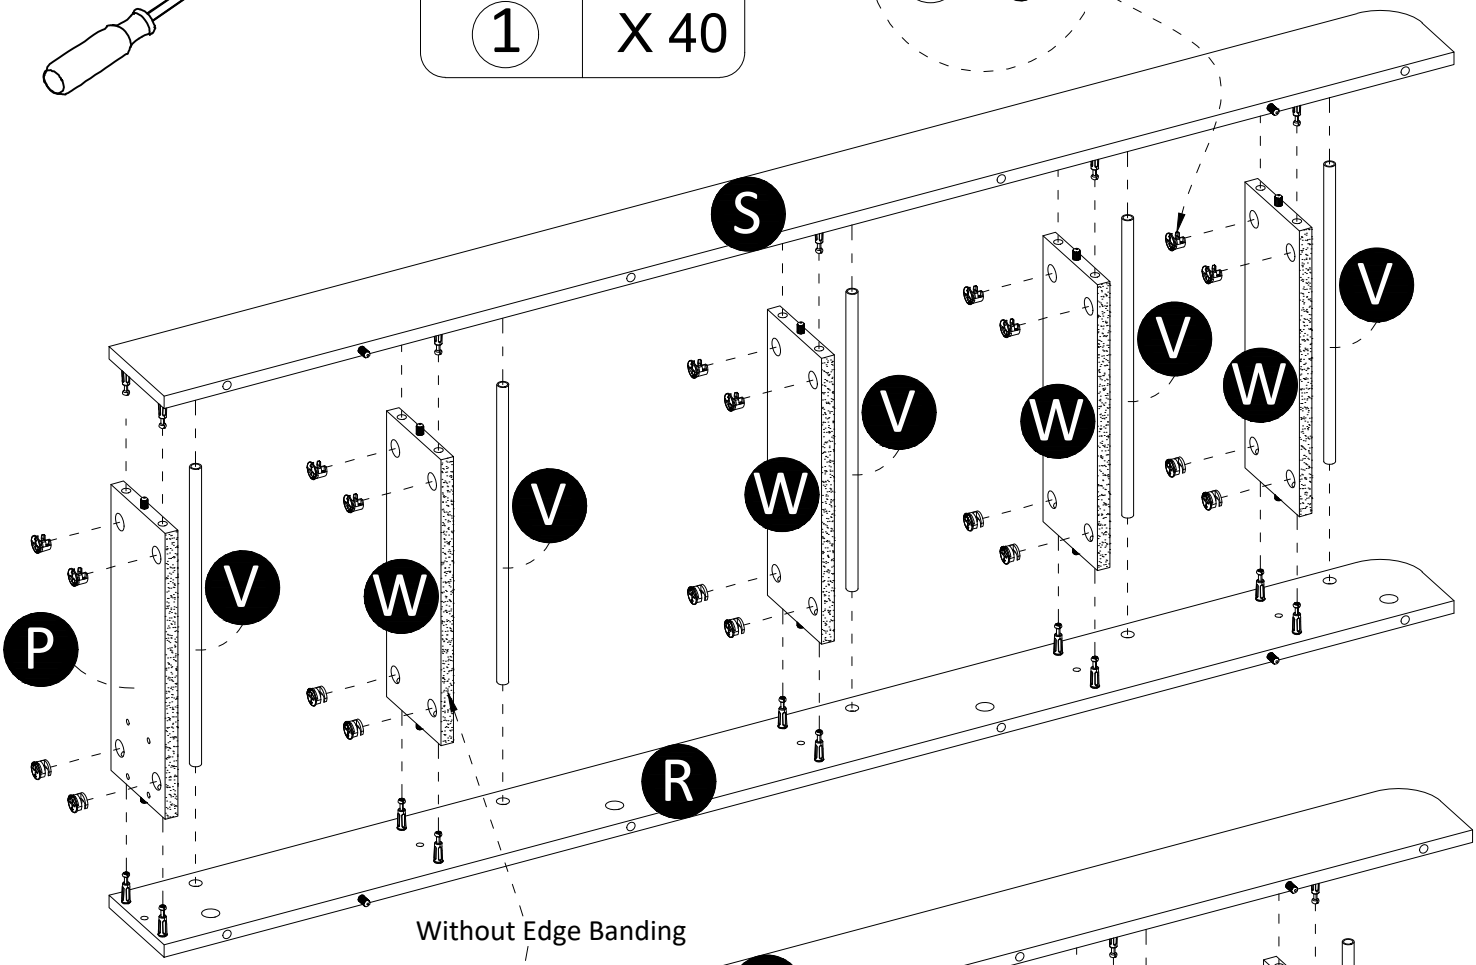


Without Edge Banding

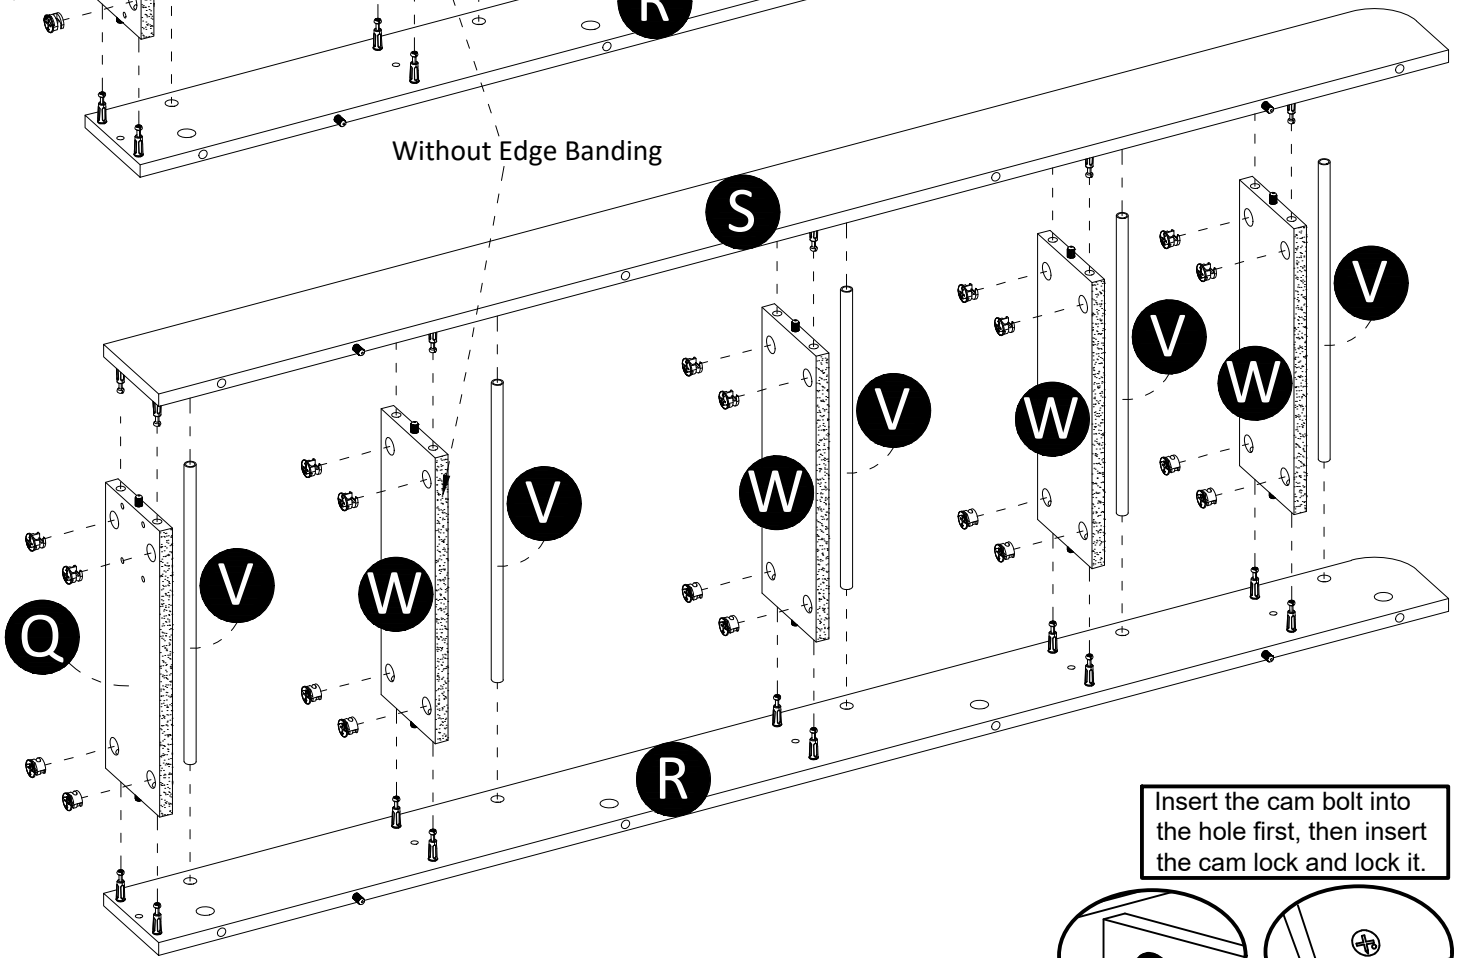


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Proper orientation of CAM LOCK


STEP16

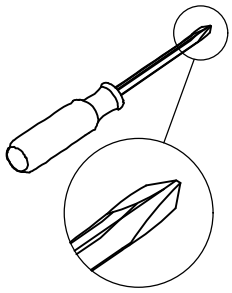




Ø50mm

13 X 2




Ø6X12mm

14 X 8

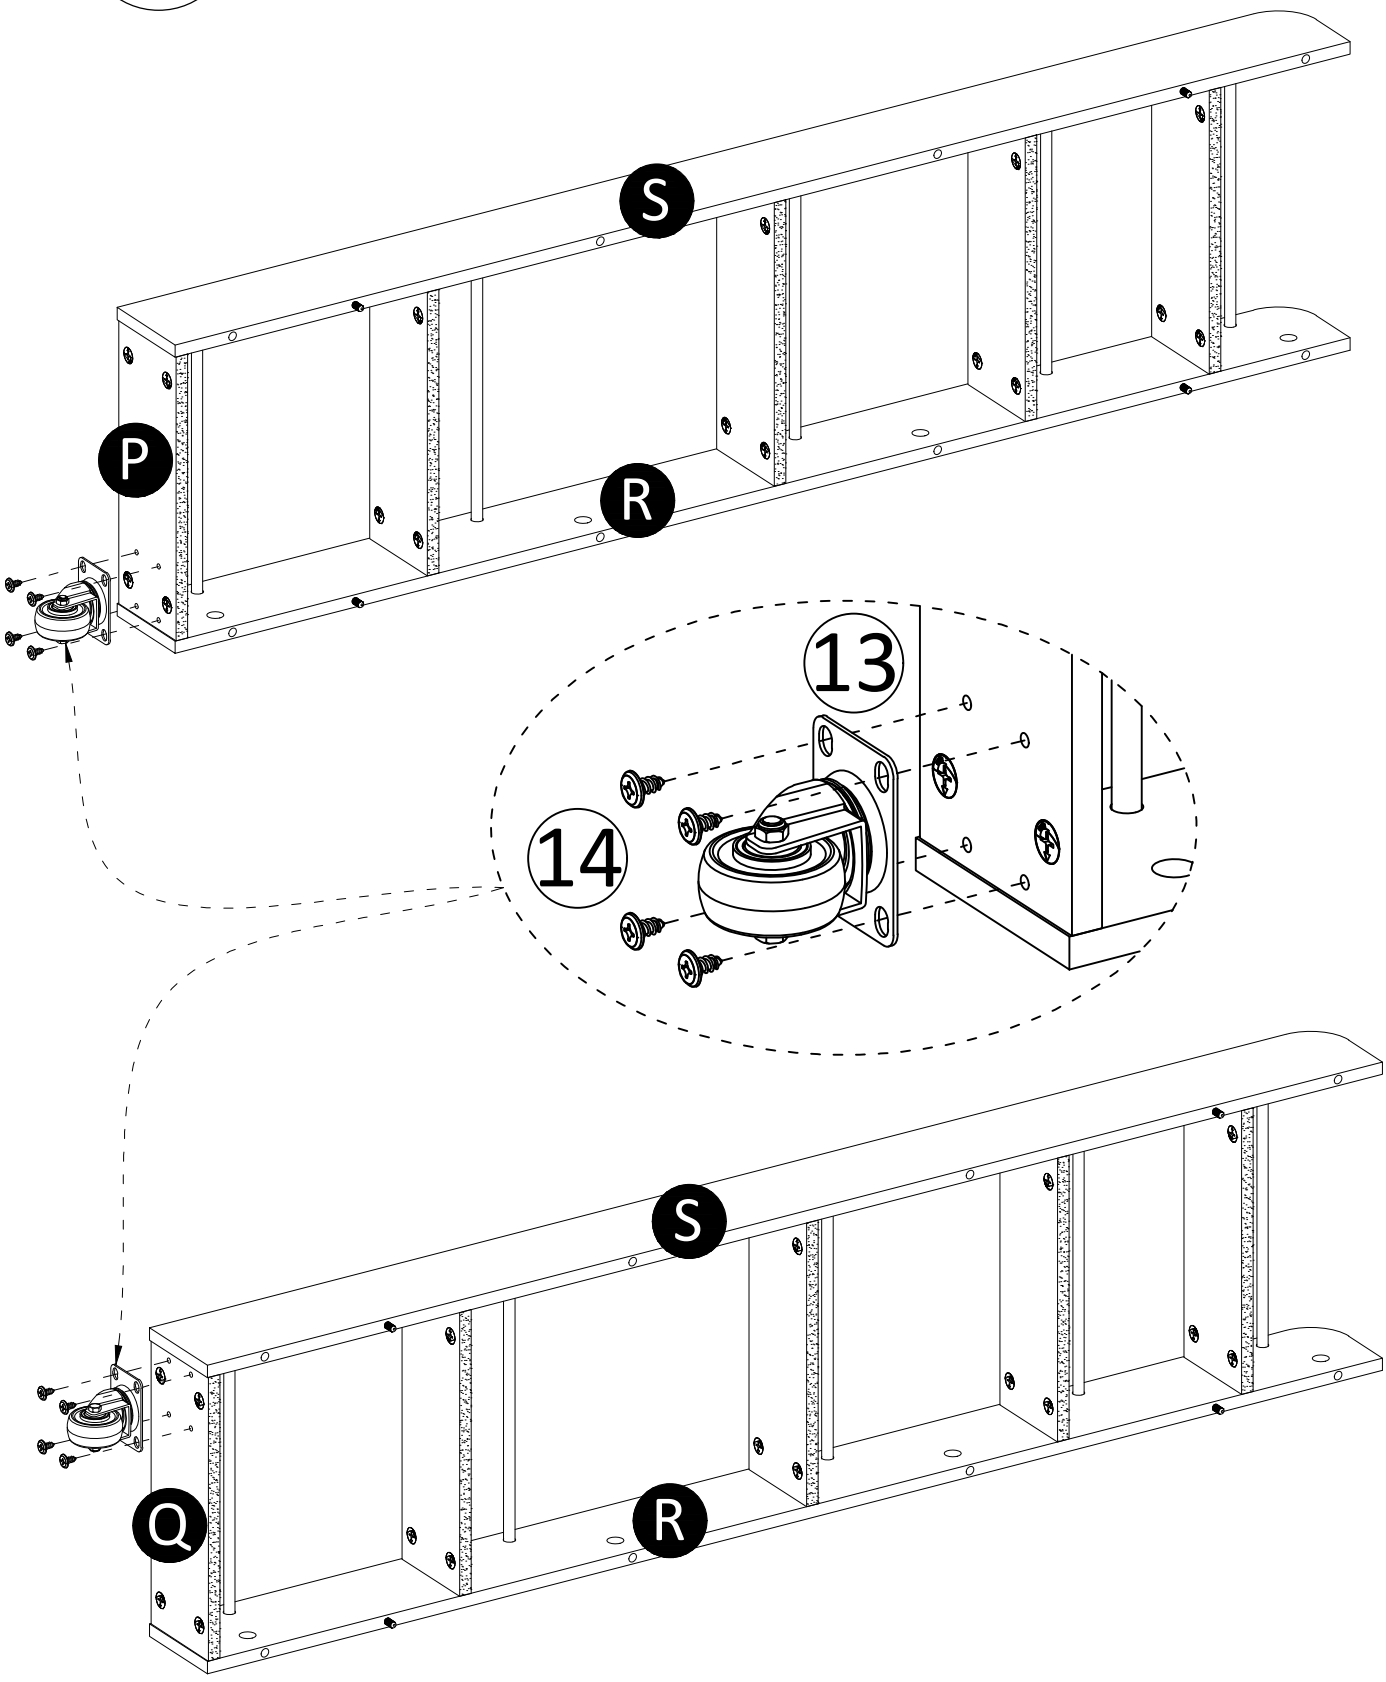


STEP17

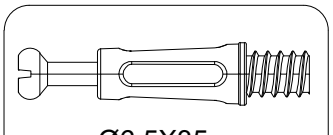

Ø6.5X35mm

2	X 16




153X29X34mm

11	X 2




M4X14mm

12	X 4




39.5X12X1mm

9	X 2





Ø3.5X12mm


15	X 4

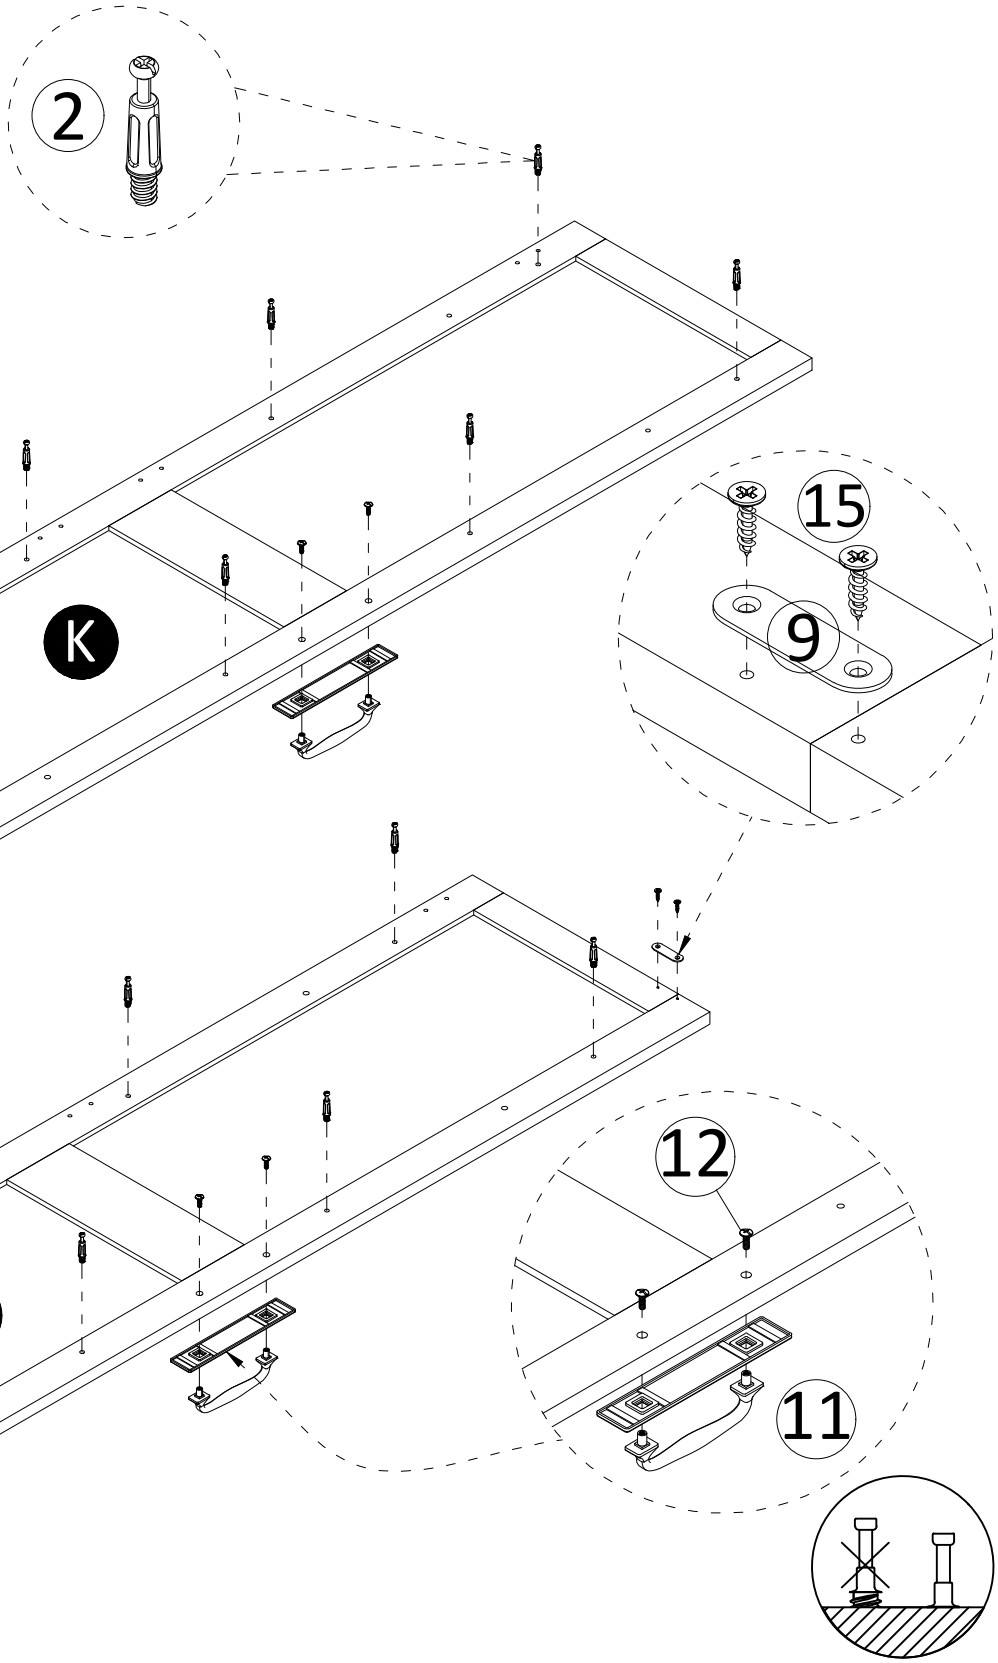


STEP18

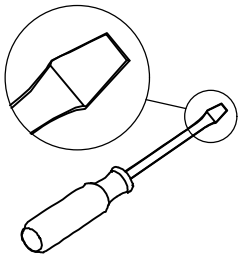

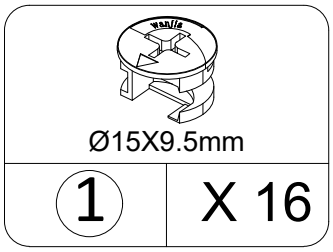

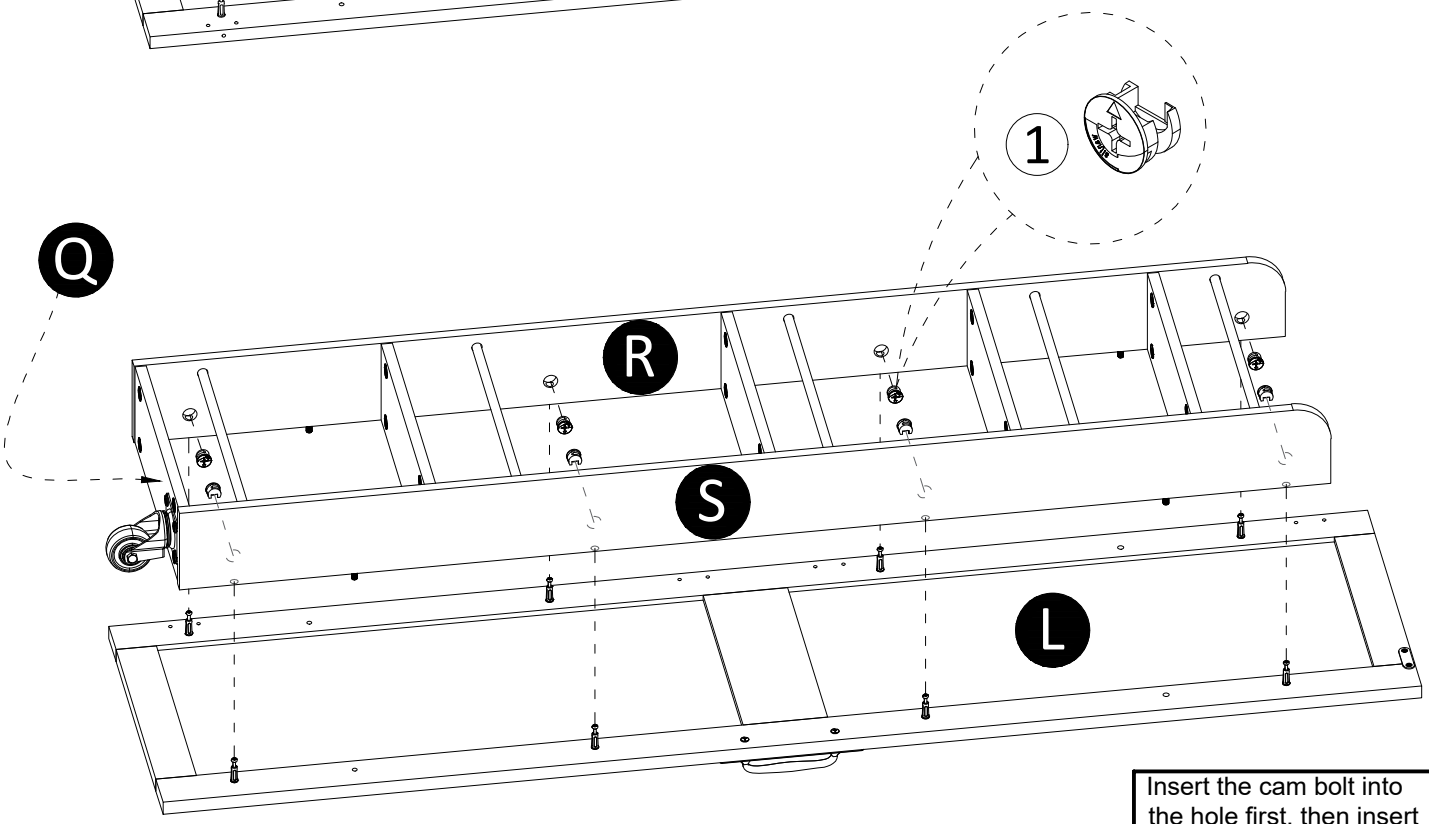



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

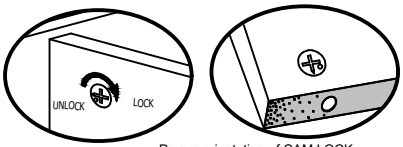


Proper orientation of CAM LOCK

STEP19

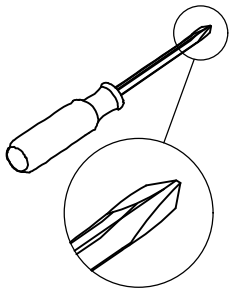


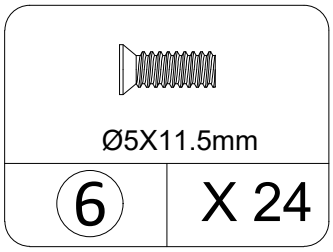


THIS STEP REQUIRES 2 PEOPLE

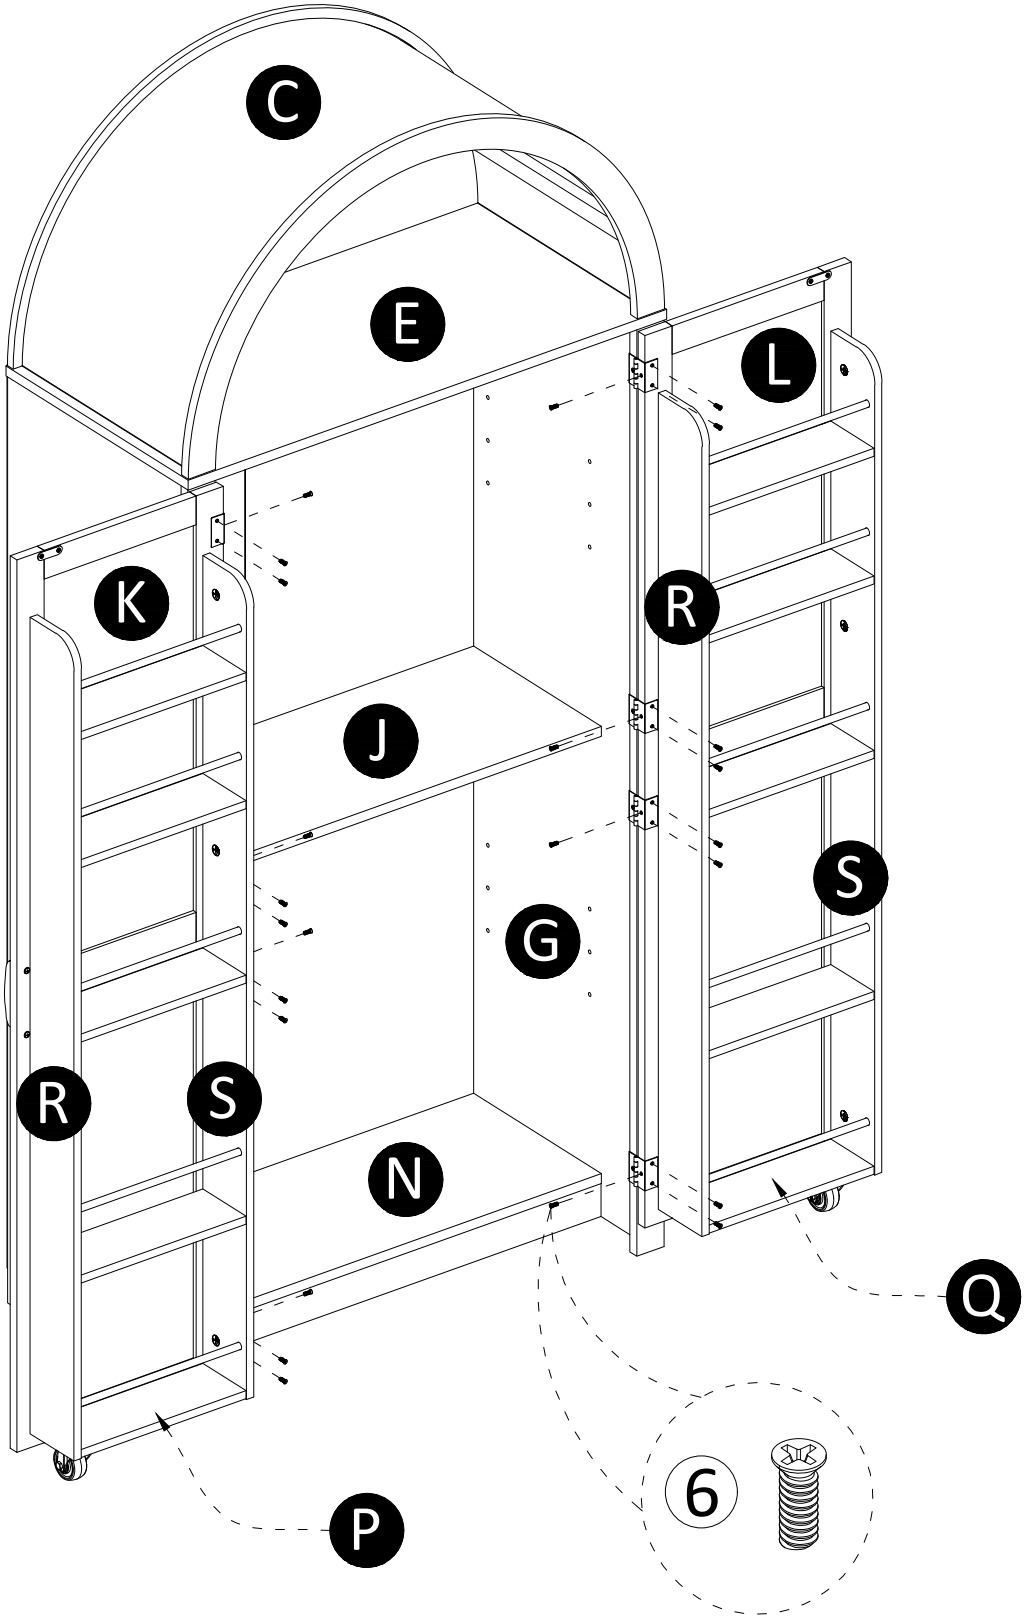



STEP20

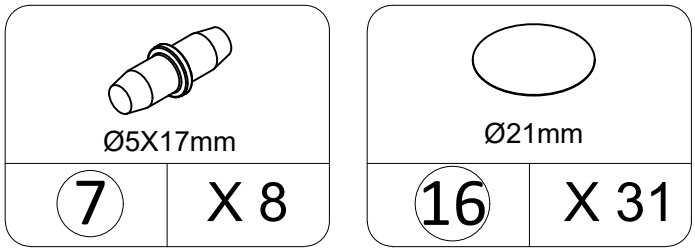

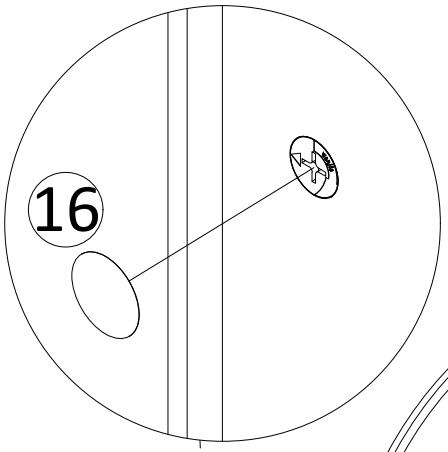


Stick the exposed holes of the cabinet body with hole stickers (16)

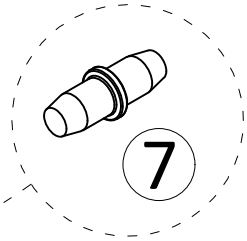

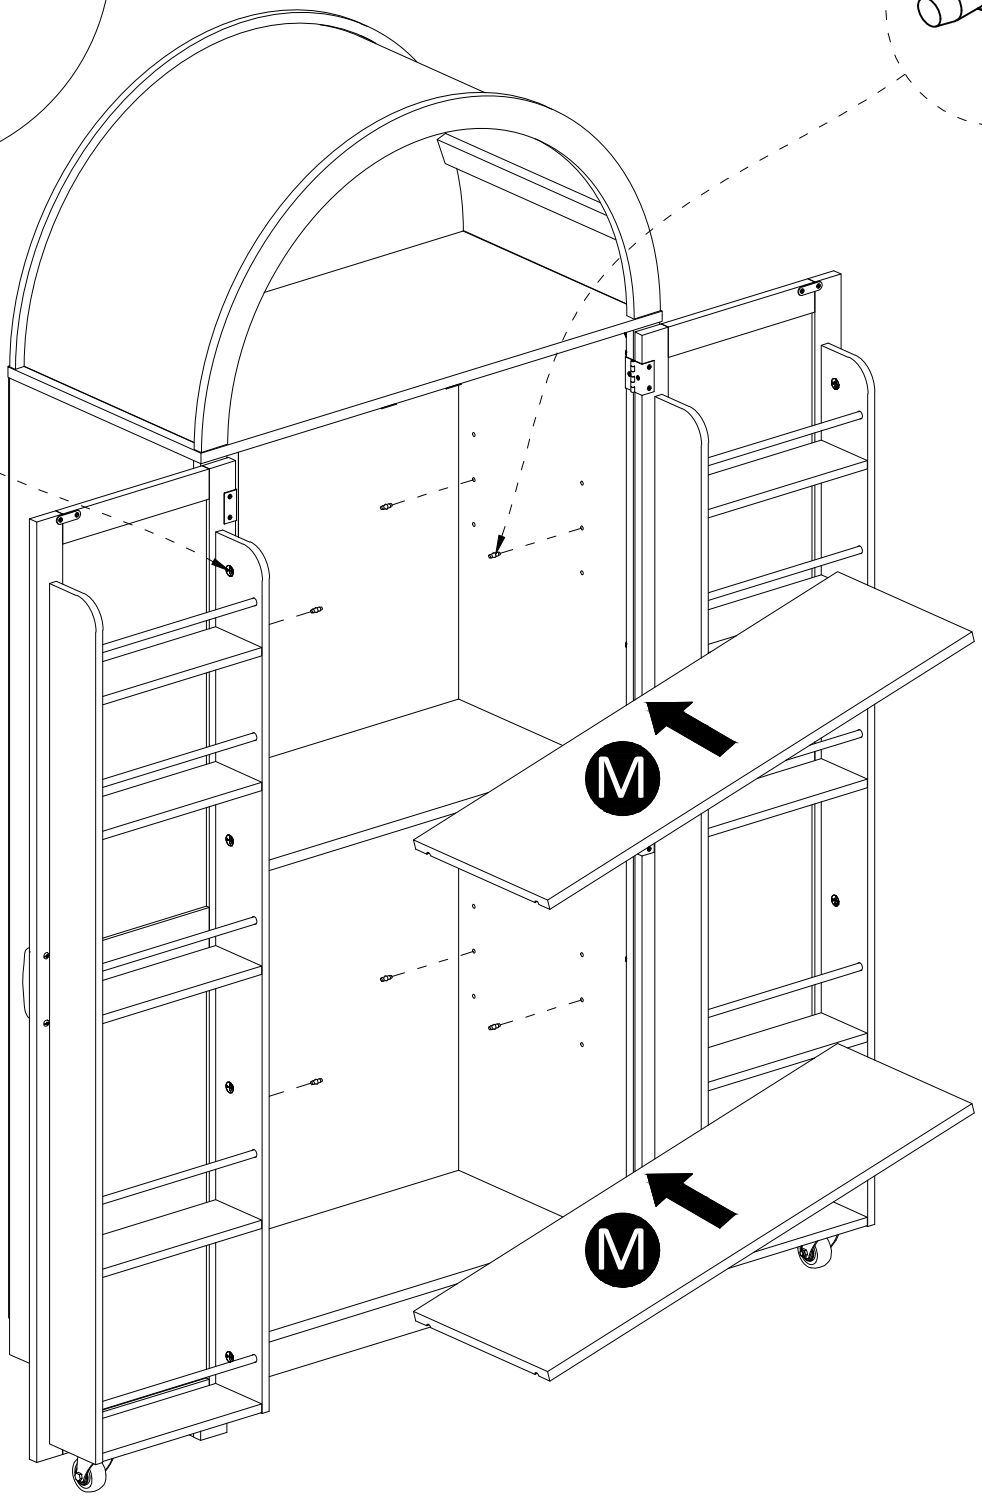


STEP21

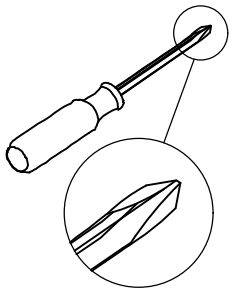


Ø4X40mm	Ø8X29mm
17	X 1 set

1.Put the cabinet against the wall and mark the hole locked against the wall with a marker.

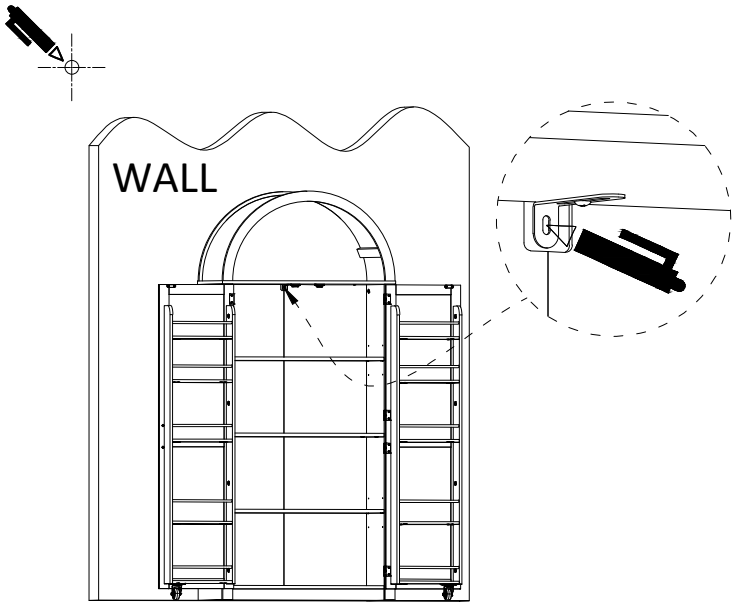


1

2.Use an electric drill to drill 1 holes with a diameter of Ø 6 and a depth of 45mm at the marked location.

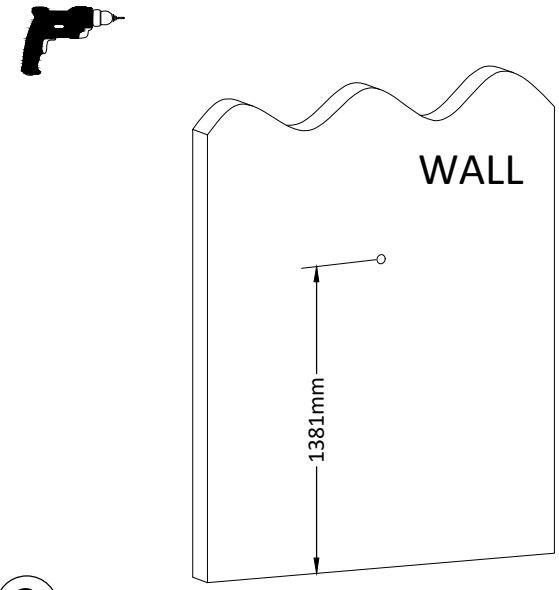


2

3.Place anchors (17) into the hole.

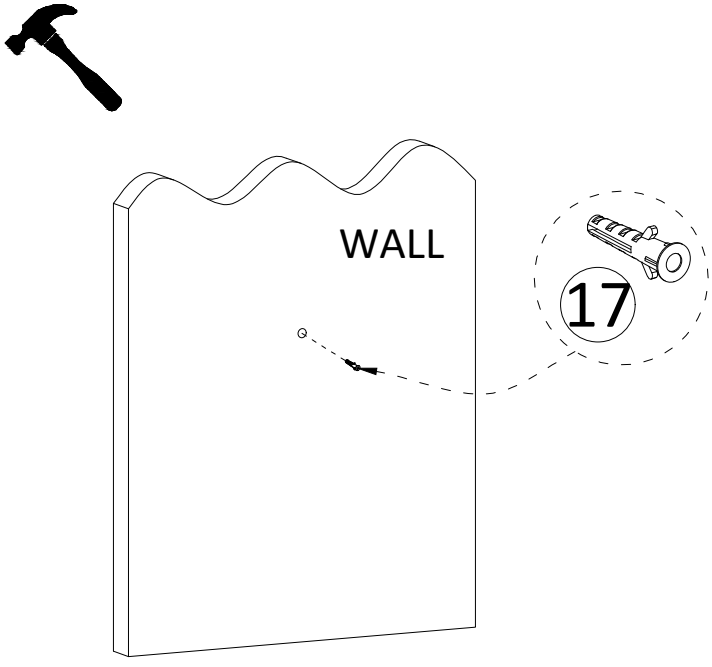

3

4.Push the shelf close to the wall, align it with theholes, and then tighten it with screws(17).

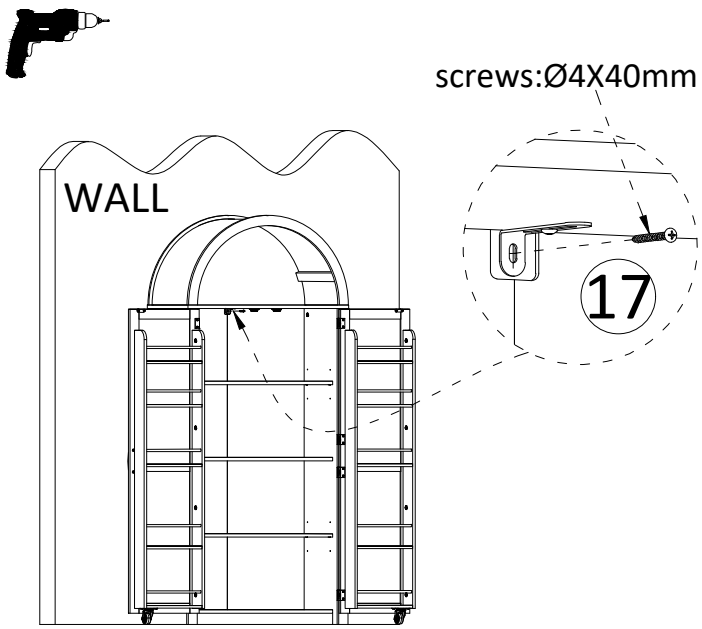

4