


Hall tree

Assembly Instructions - Please keep for future reference

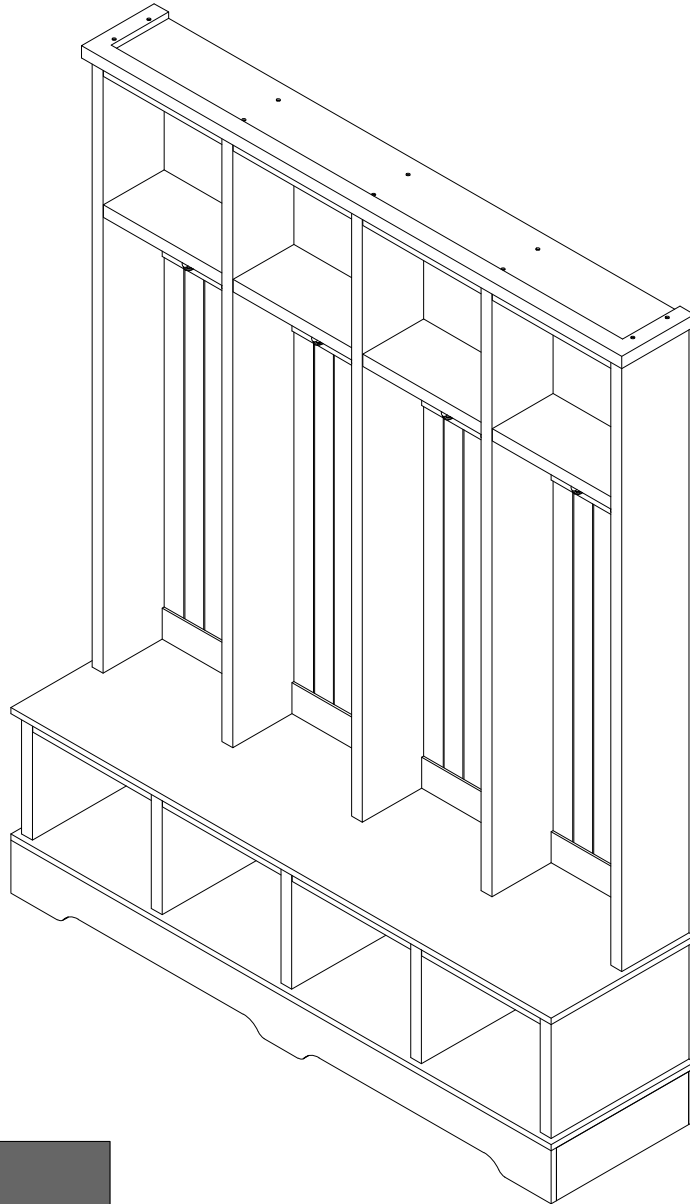

Dimensions

Width-59.06inch

Depth-15.67inch

Height-76.5inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important-Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti-tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

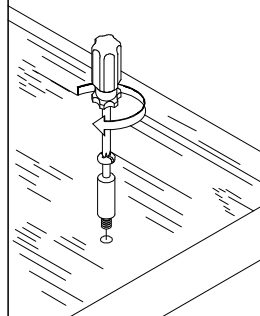

Step 2

Push the male camlock into the entry hole.

2

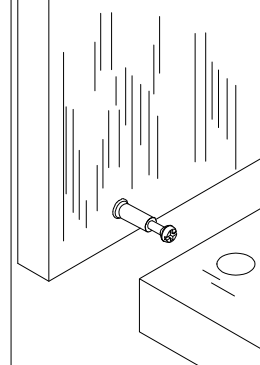


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

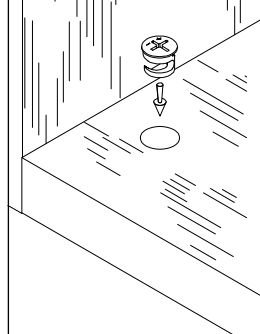


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

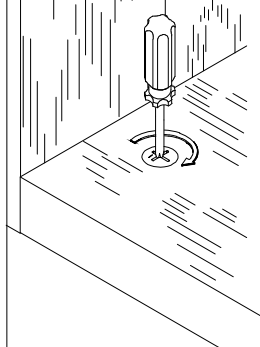








Assembly Instructions

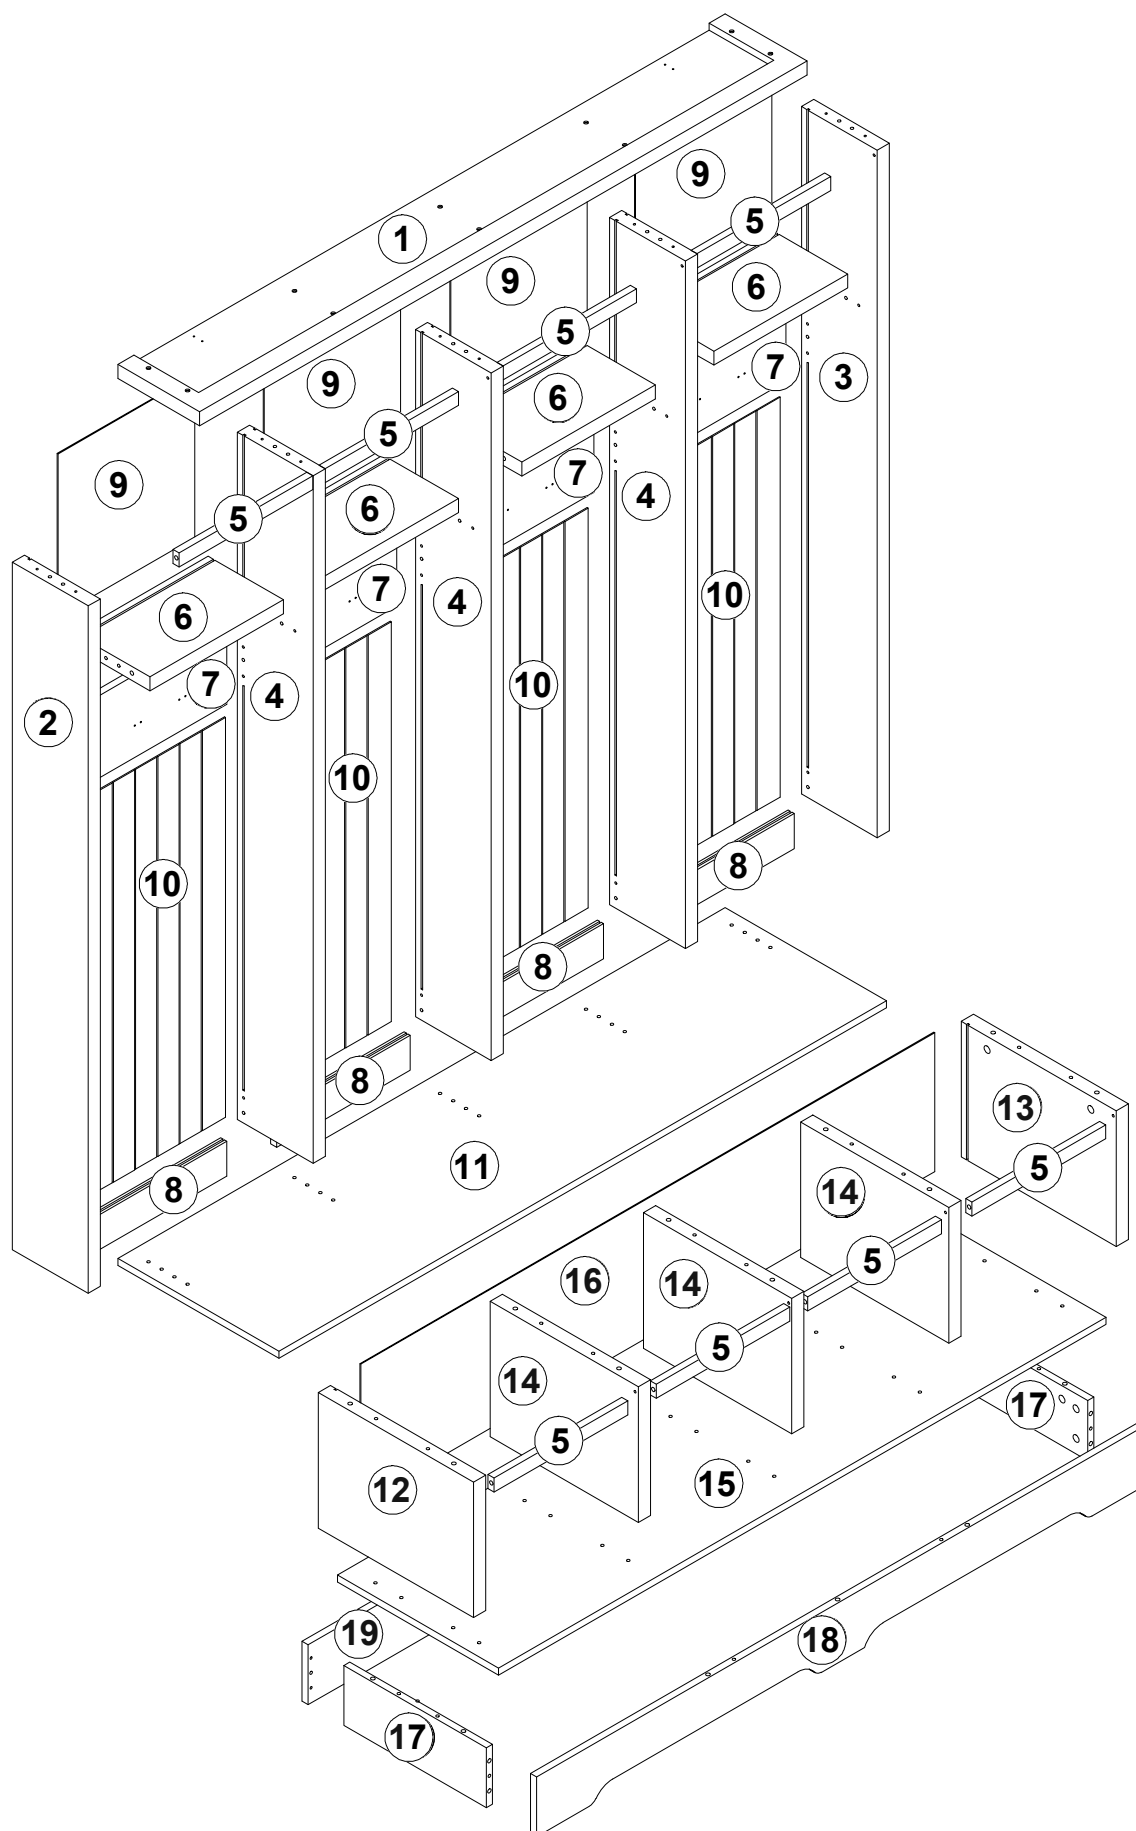

Assembly Instructions

There are 2 boxes of this product




BOX-1: N721P508787

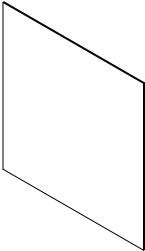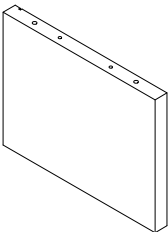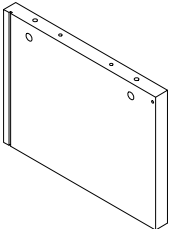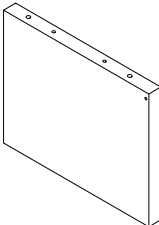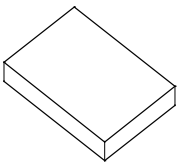 330x28x14mm ⑤ x 8	 330x186x28mm ⑥ x 4	 330x176x14mm ⑦ x 4	 330x75x14mm ⑧ x 4	 352x338x2.5mm ⑨ x 4
 856x338x4mm ⑩ x 4	 290x385x28mm ⑫ x 1	 290x385x28mm ⑬ x 1	 290x368x28mm ⑭ x 3	 368x132x14mm ⑰ x 2
 Hardware Pack				

Assembly Instructions

There are 2 boxes of this product










BOX-2: N721P508788

 1500x202x28mm ① x 1	 1470x187x28mm ② x 1	 1470x187x28mm ③ x 1	 1470x187x28mm ④ x 3	 1500x398x14mm ⑪ x 1
 1500x398x14mm ⑮ x 1	 1412x298x2.5mm ⑯ x 1	 1498x132x14mm ⑱ x 1	 1498x132x14mm ⑲ x 1	



Components - Fittins

Please check you have all the panels below

Note : The quantitie below are the correct amount to complete the assembly . In some cases more fittings may be supplied than are required,(N721P508787).

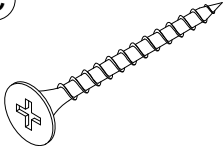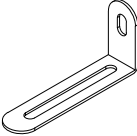(A)  Ø6*34mm Cam Bolt x 76+1	(B)  Ø15*9mm Cam lock x 76+1	(C)  4*50mm Screw x 30+1	(D)  6*30mm Dowel x 92+2	(E)  3.5*15mm Screw x 16+1
(F)  Clothes-Hook x 8	(G)  30*15mm Non-Slip mat x 10	(H)  3*15mm Screw x 48+2	(I)  Plastic Nail x 48+2	(J)  4*40mm Screw x 2
(K)  4*12mm Screw x 4	(L)  6*29mm Wall Anchor x 2	(M)  Iron sheet x 2		


Tools required




Phillips screwdriver
(medium large)

Assembly Instructions

step 1

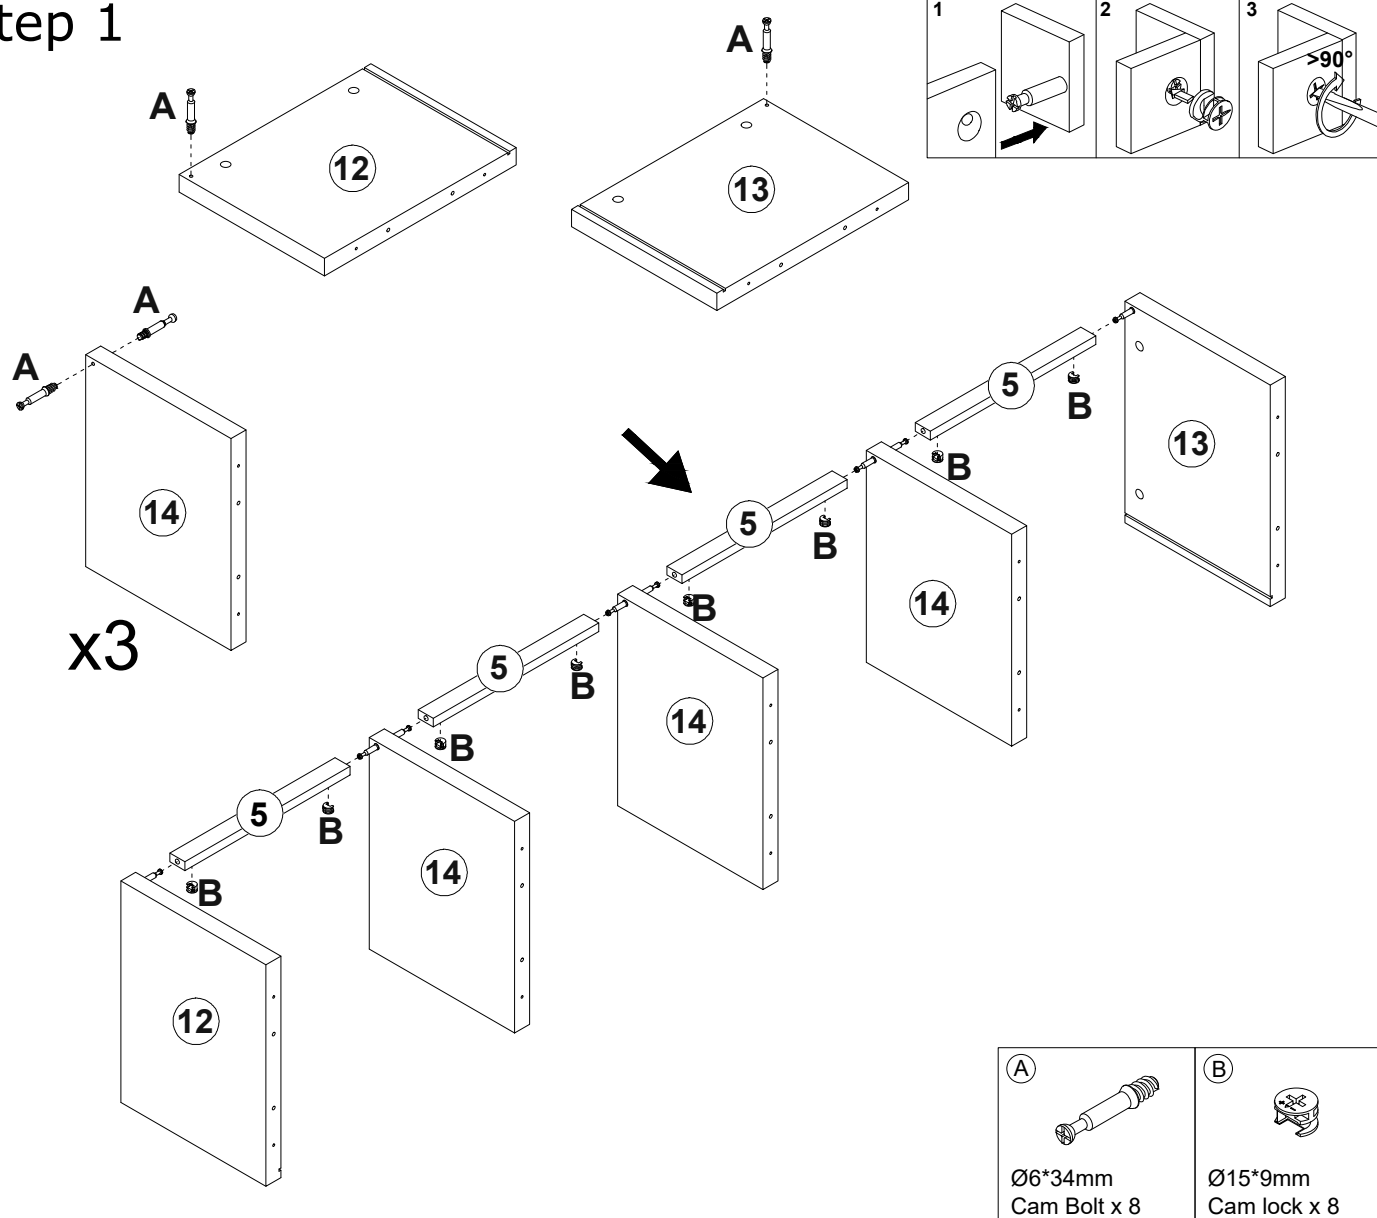


step 2

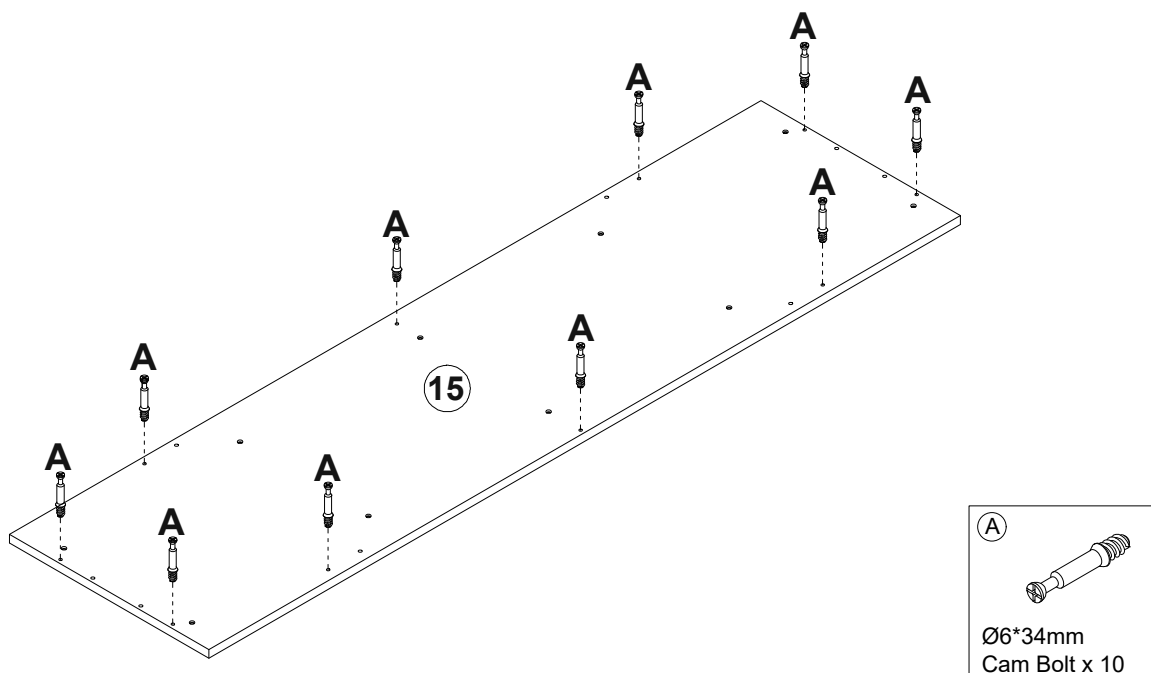


Assembly Instructions

step 3



"When installing Screw C, tighten properly without over-tightening to avoid damaging the panel."

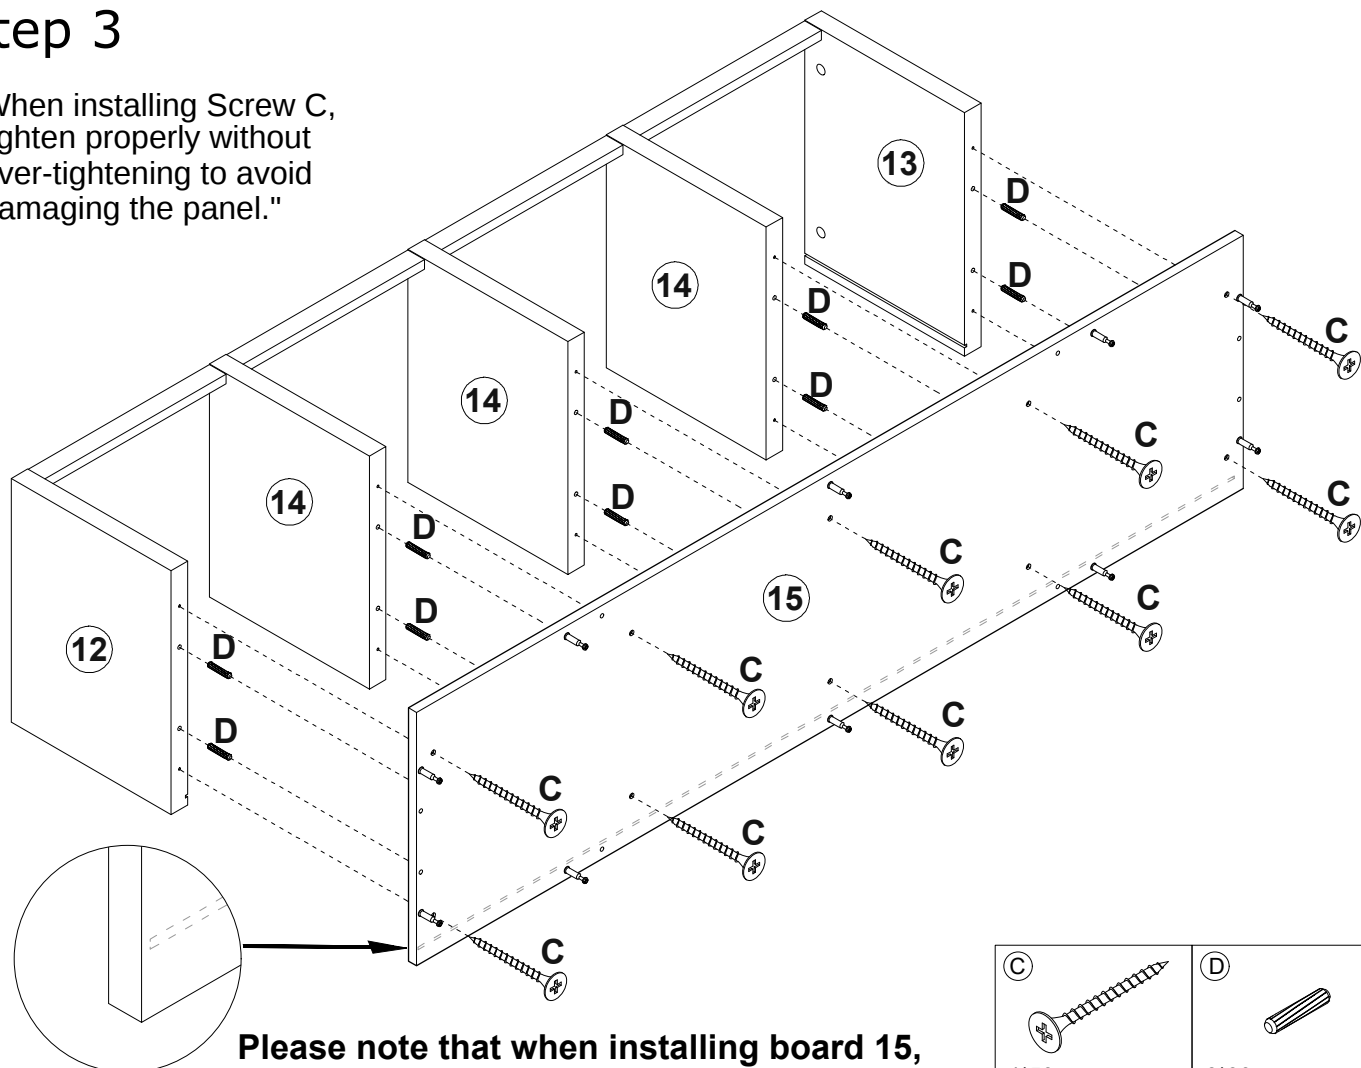

Please note that when installing board 15, the slot on the board is at the bottom.



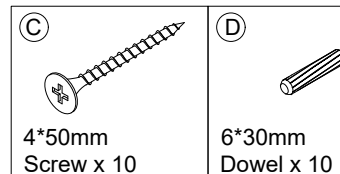


step 4


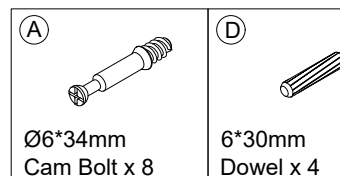
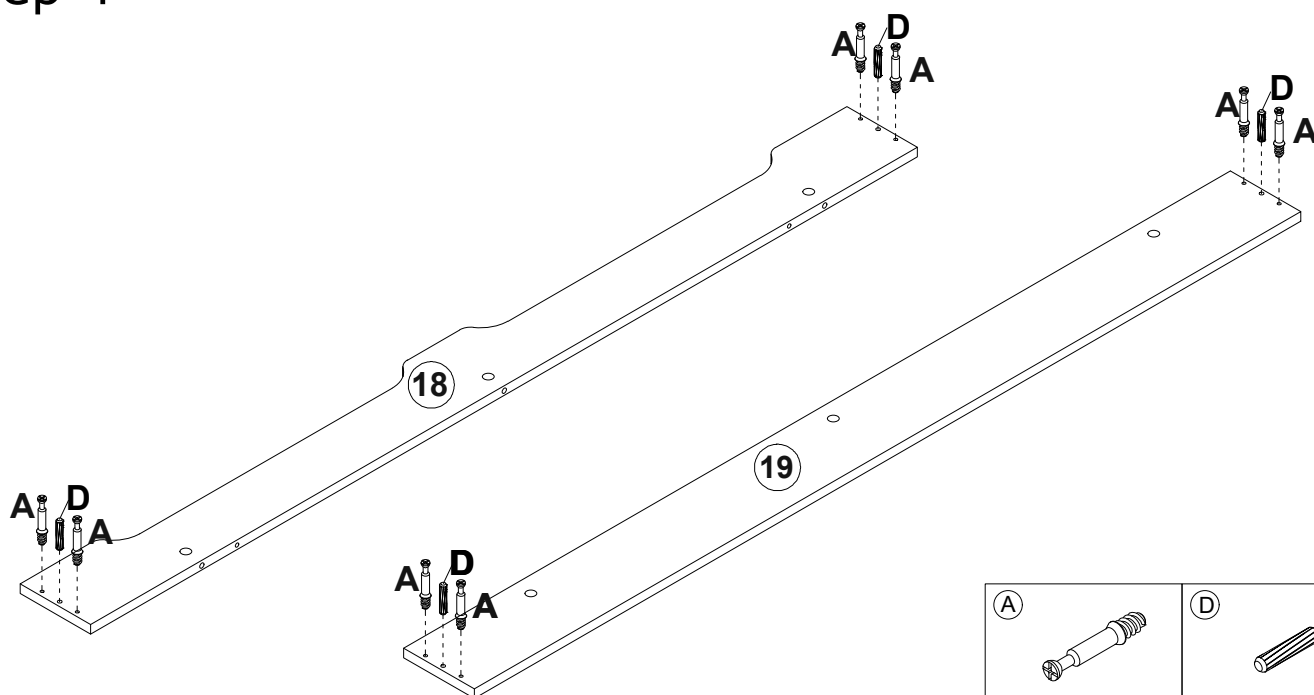


Assembly Instructions

step 5

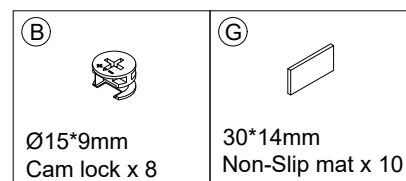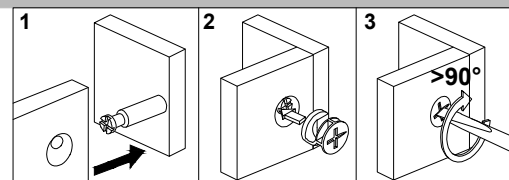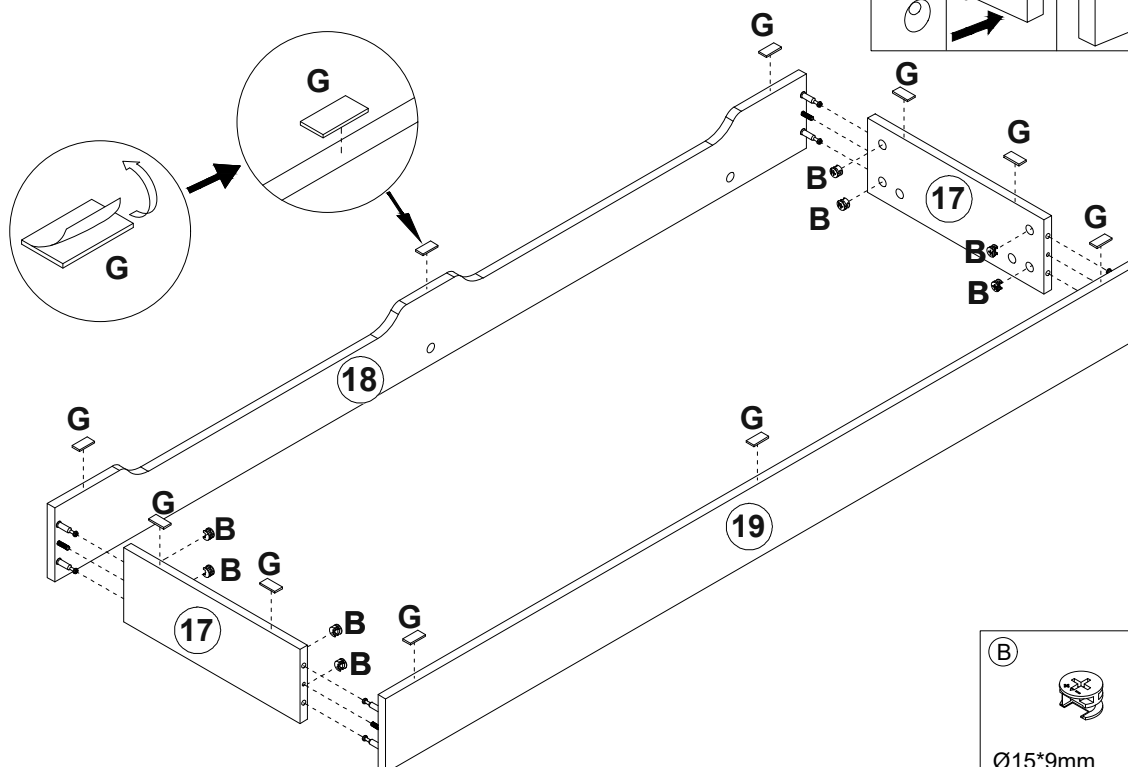

step 6

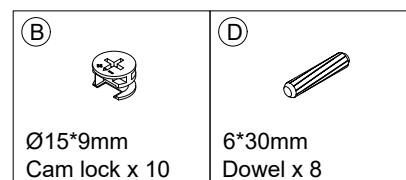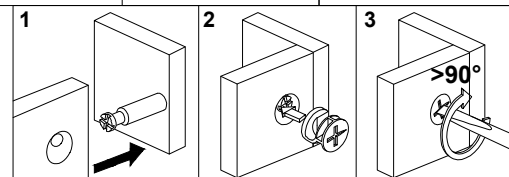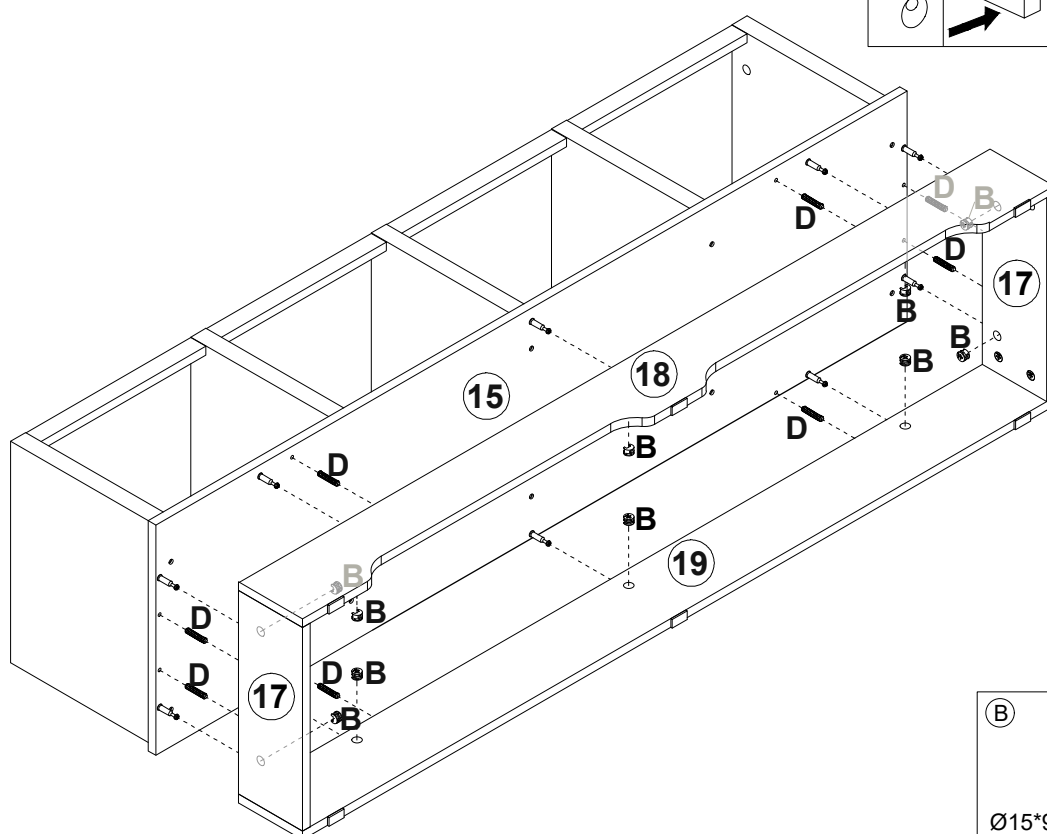


Assembly Instructions

step 7



90°

"Requires 2 people to assemble,
Please flip carefully."

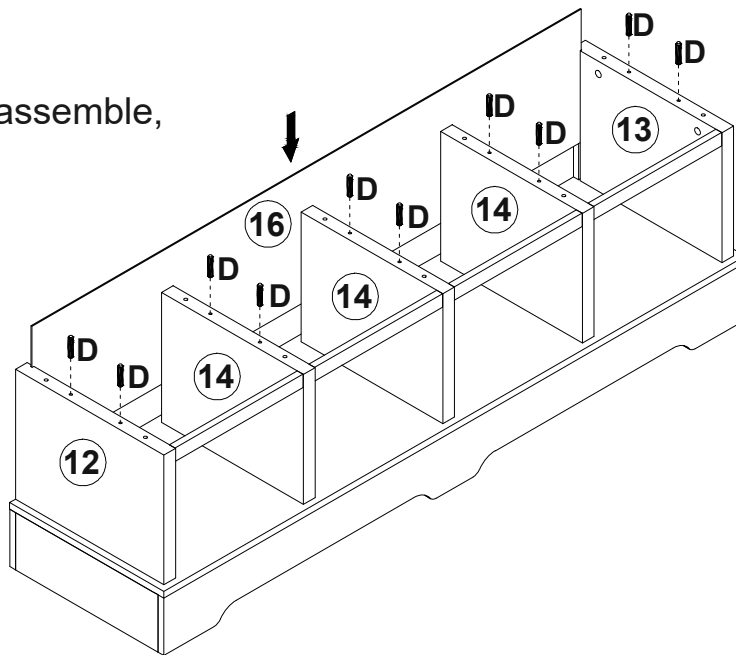


D




6*30mm
Dowel x 10

step 8

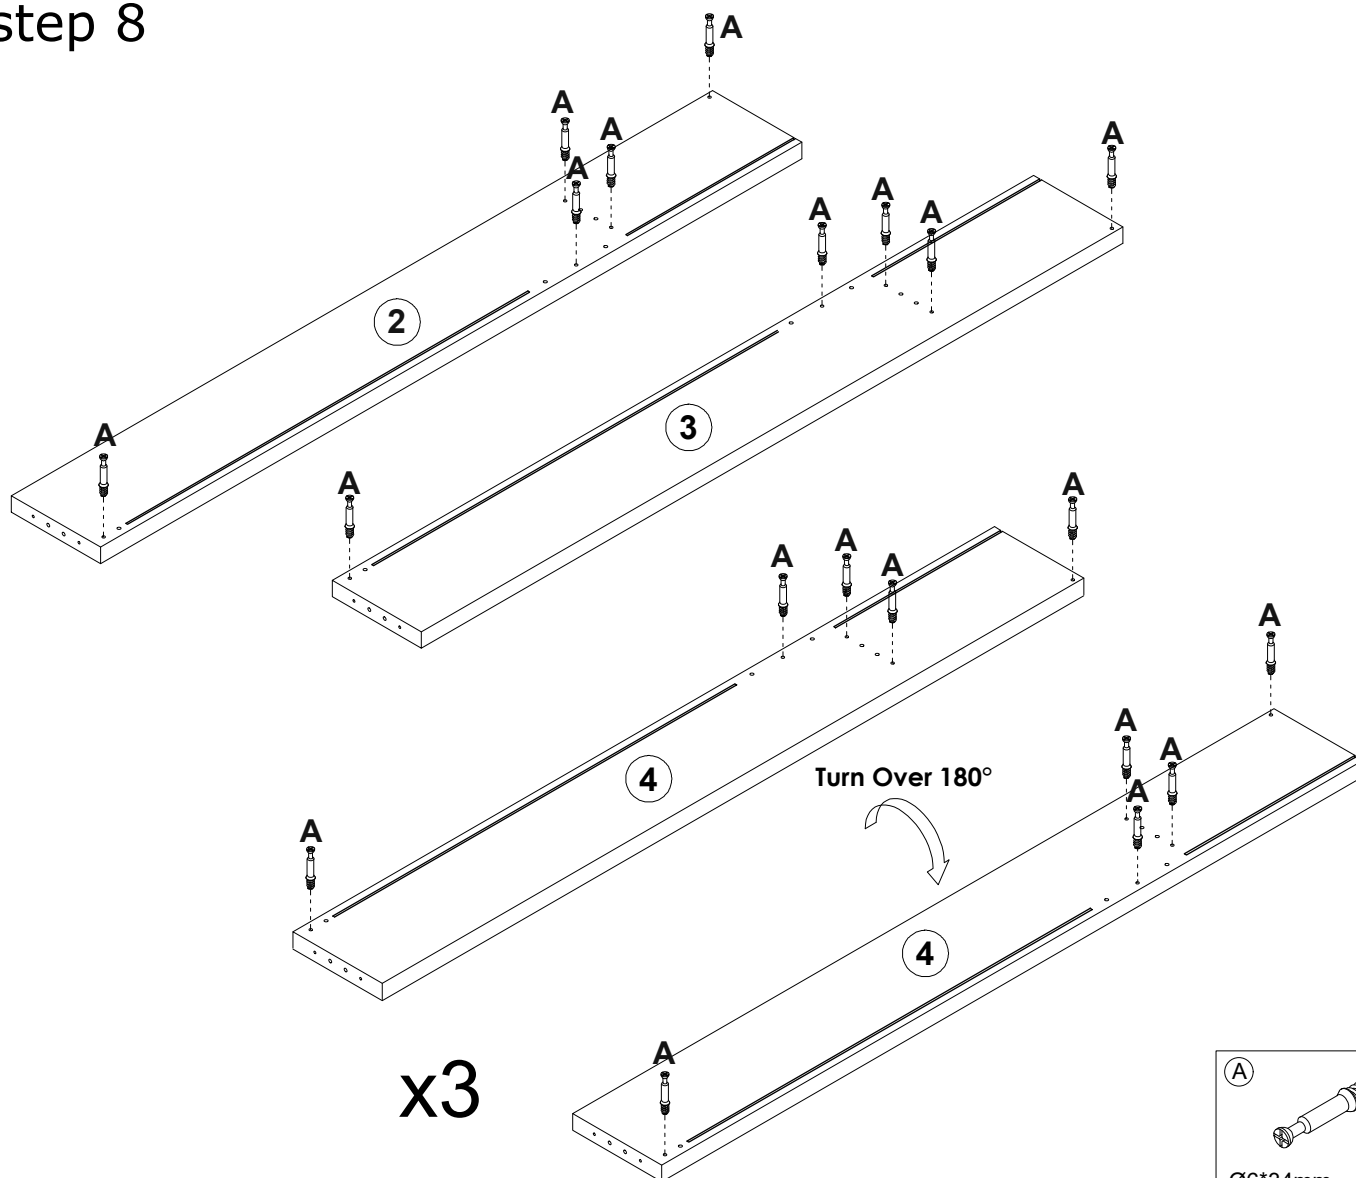



A




Ø6*34mm
Cam Bolt x 40

Assembly Instructions





step 9

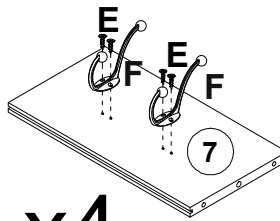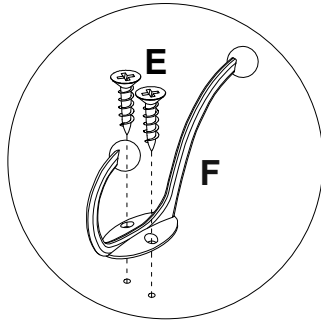



x4

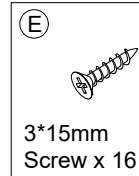

step 10

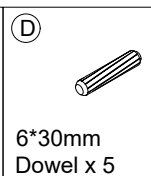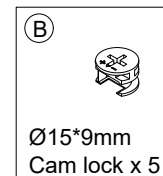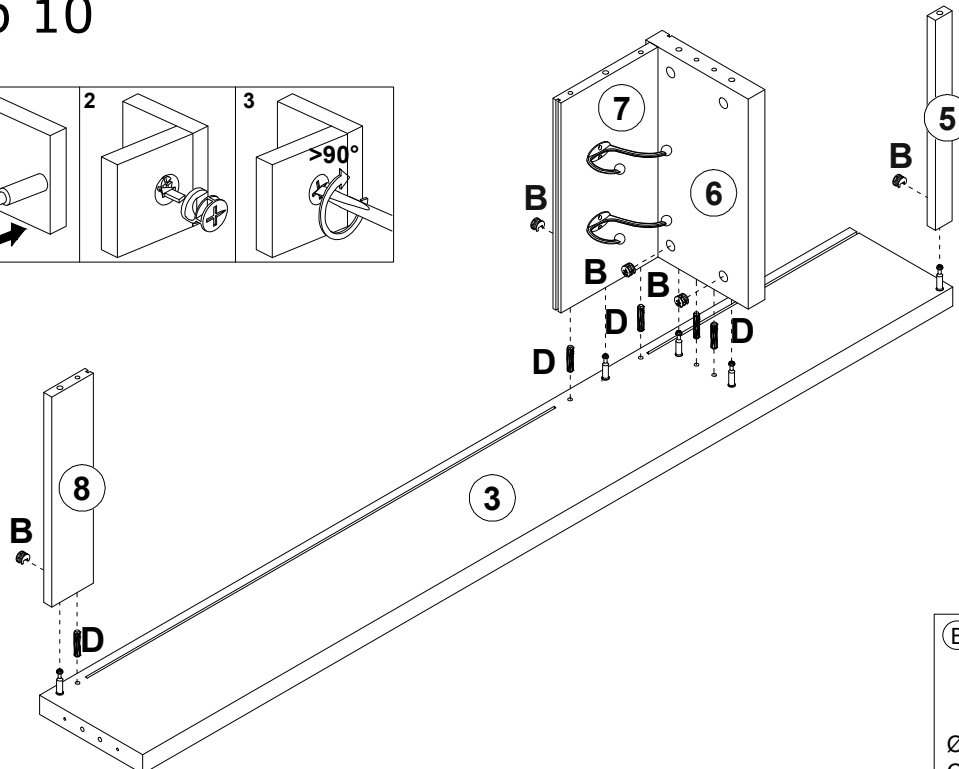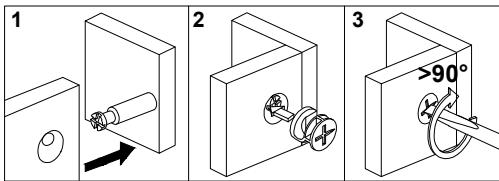


step 11

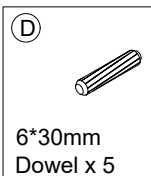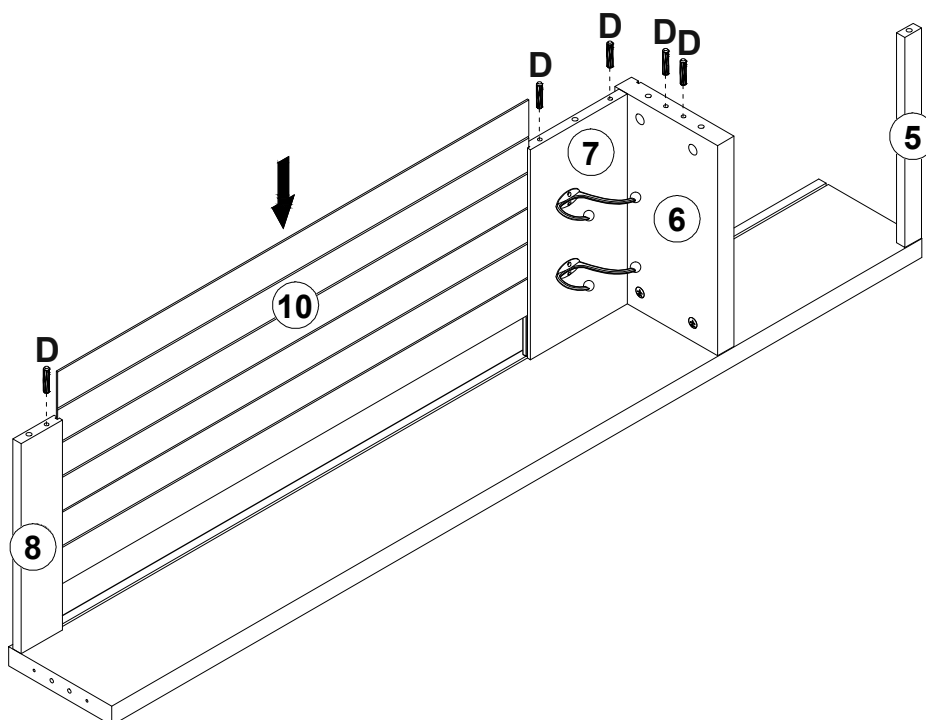

Assembly Instructions


step 12

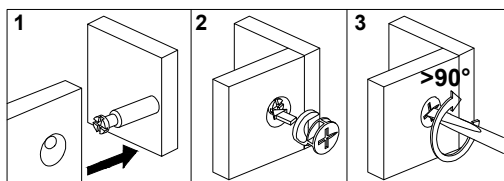


(B)



Ø15*9mm
Cam lock x 5

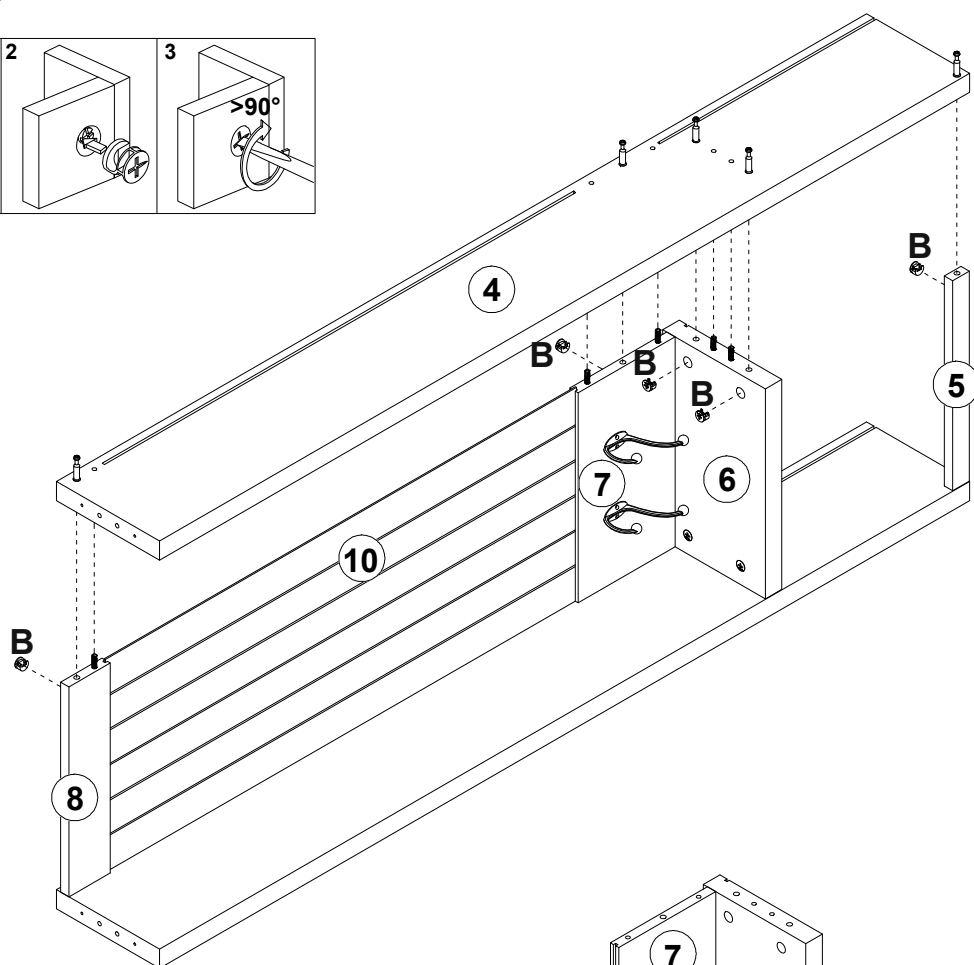

step 13

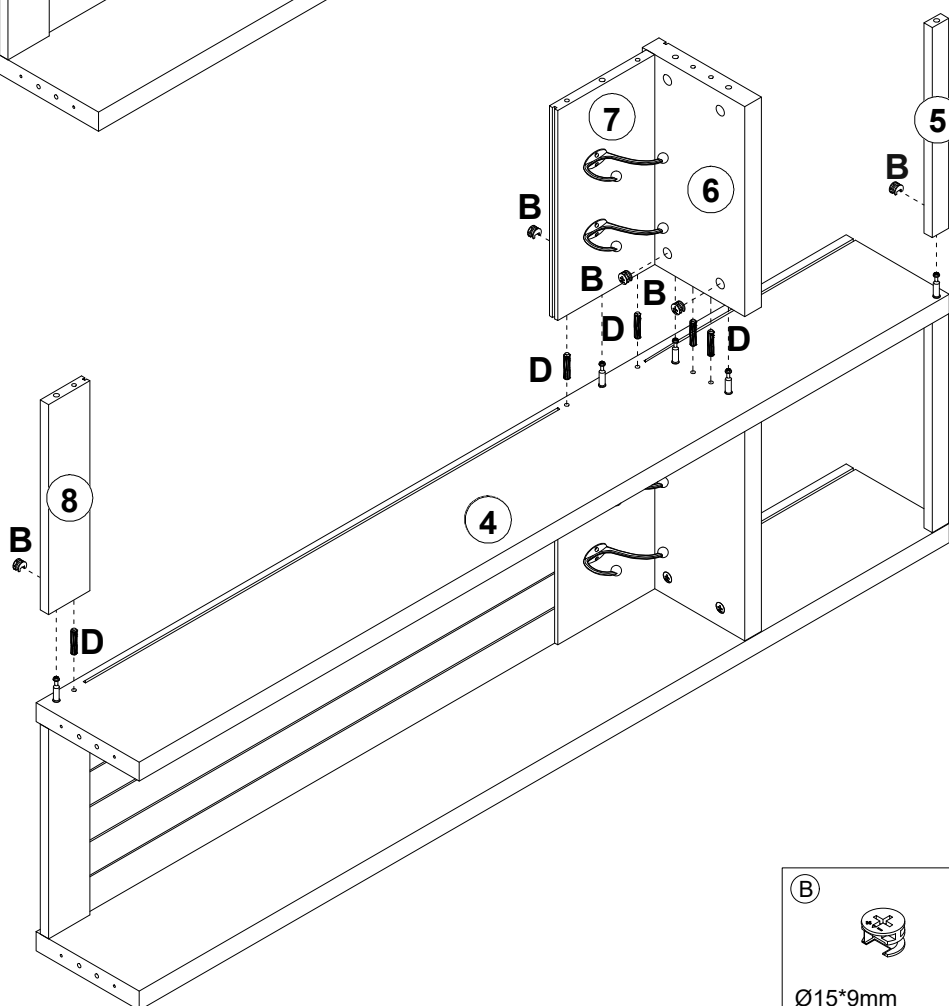

(B)



Ø15*9mm
Cam lock x 5



(D)





6*30mm
Dowel x 5

Assembly Instructions

step 14

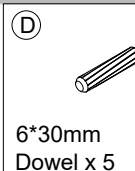
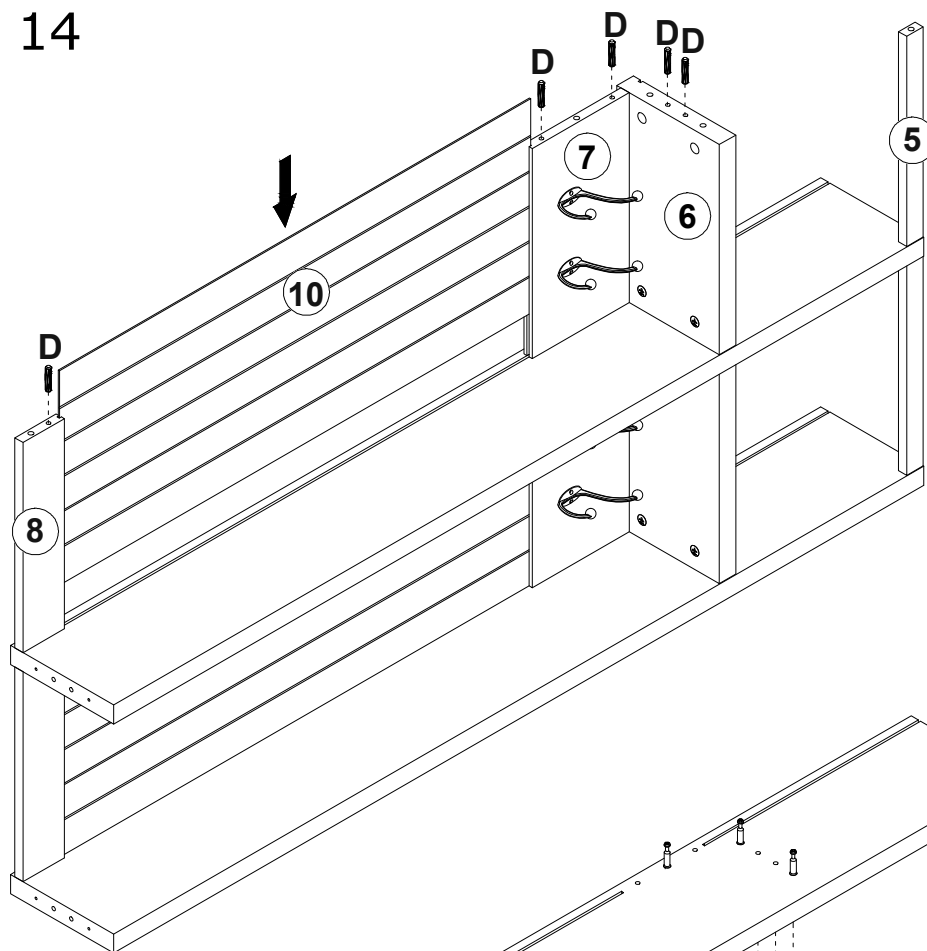


step 15

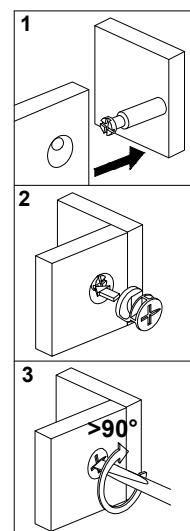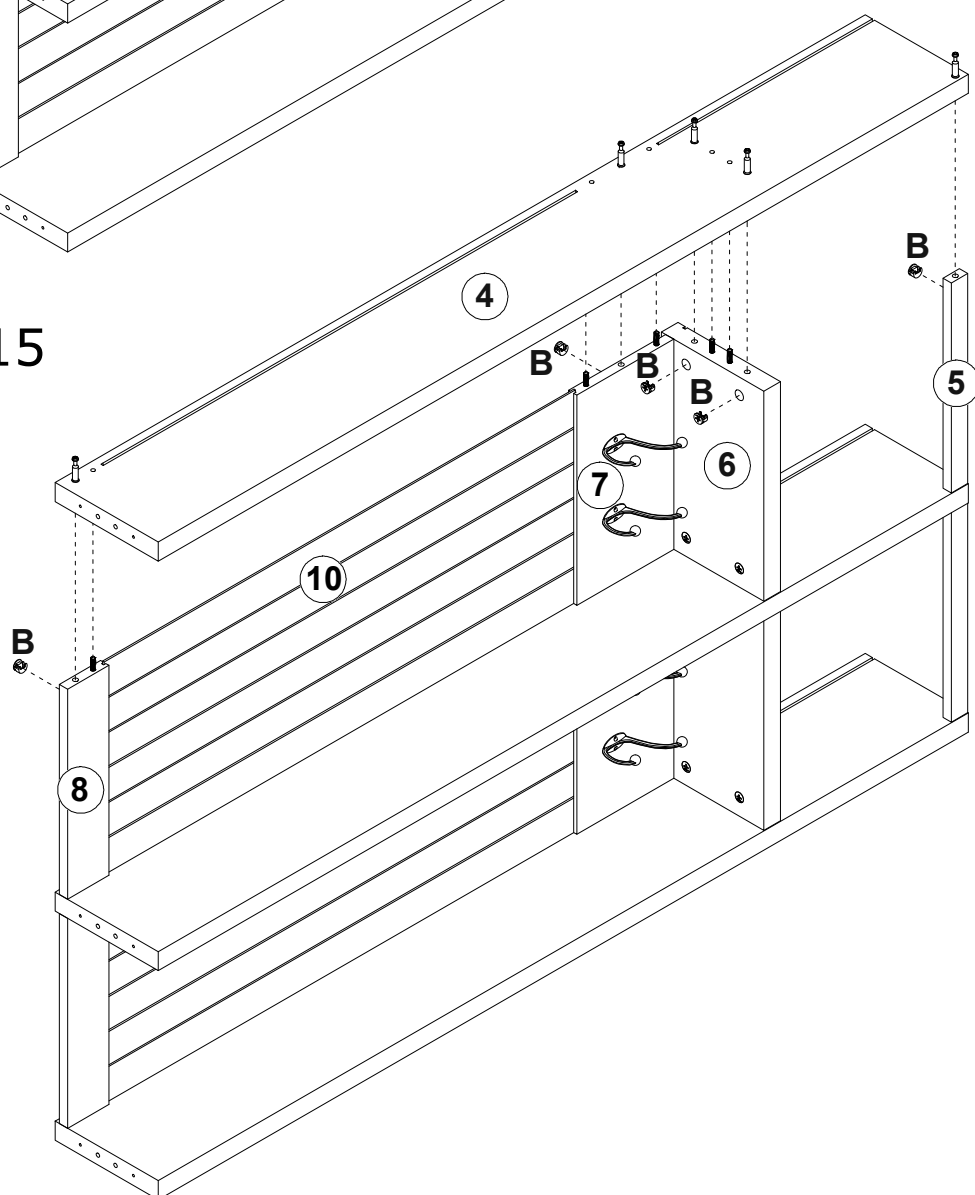

Assembly Instructions

step 16

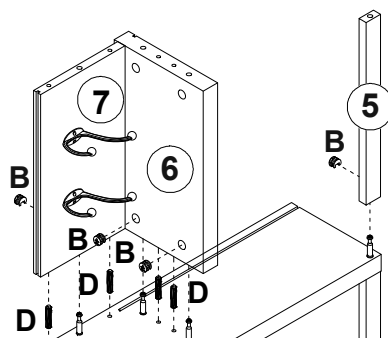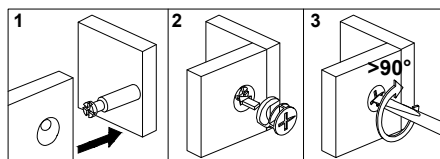


(B)


 Ø15*9mm
 Cam lock x 5

(D)

 6*30mm
 Dowel x 5

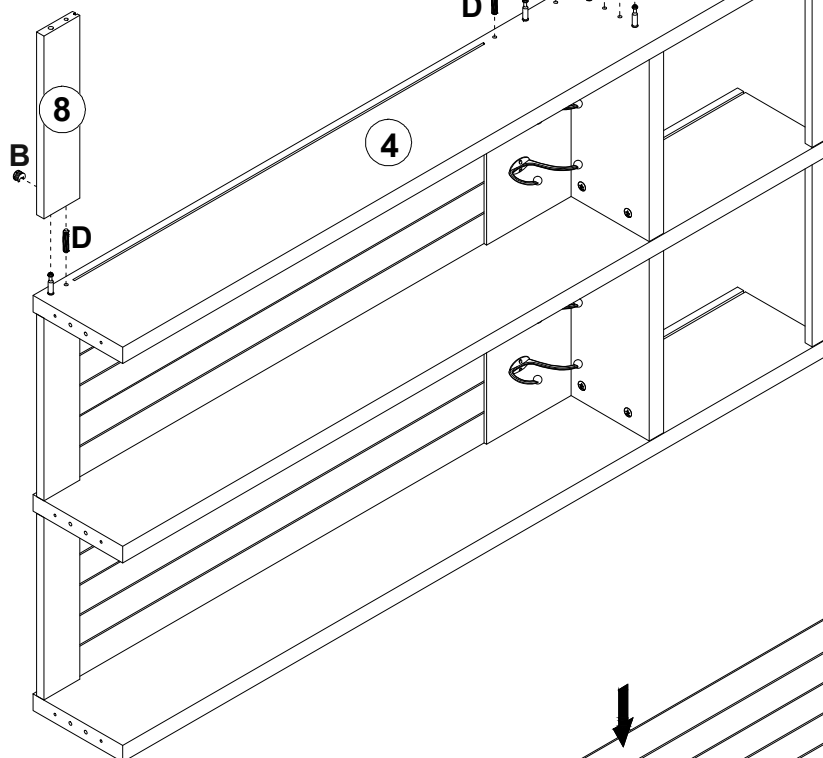

step 17

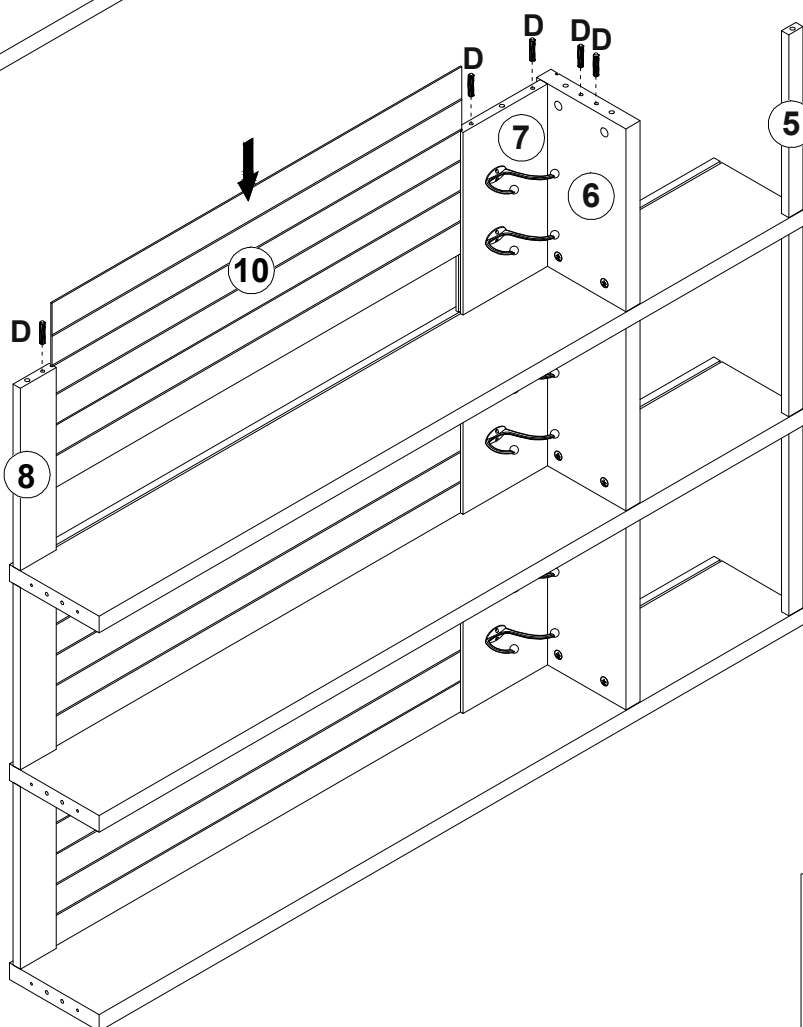


(D)

 6*30mm
 Dowel x 5

Assembly Instructions

step 18

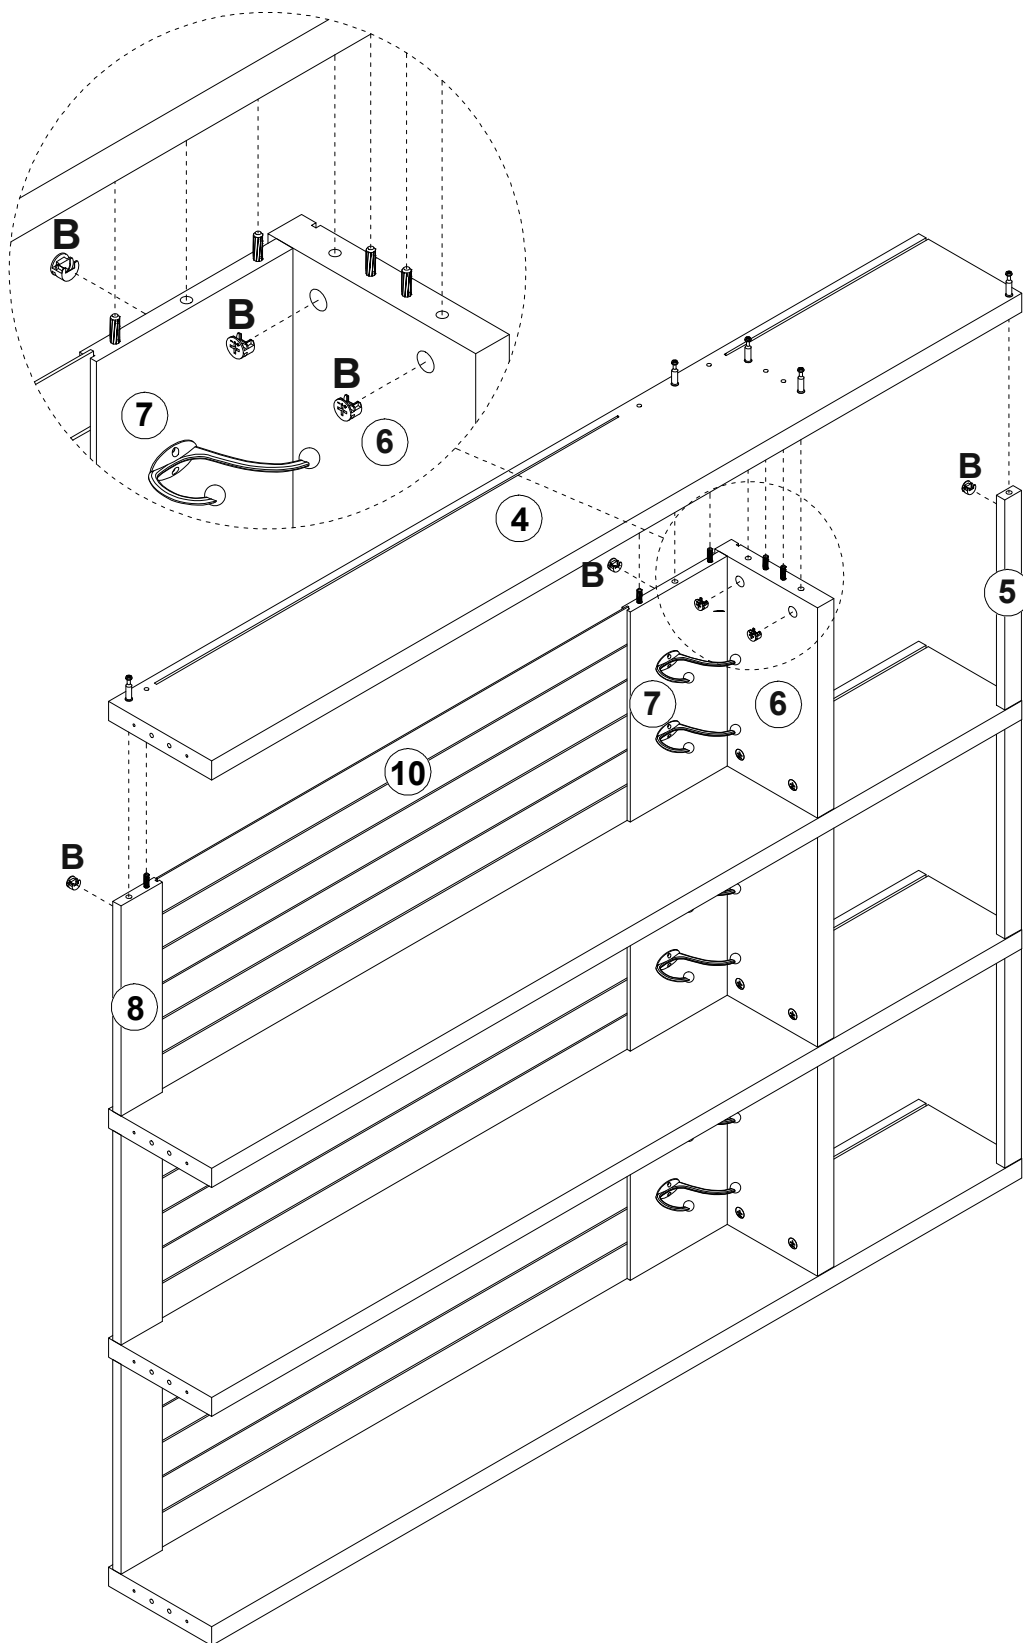



(B)



Ø15*9mm
Cam lock x 5

Assembly Instructions



step 19

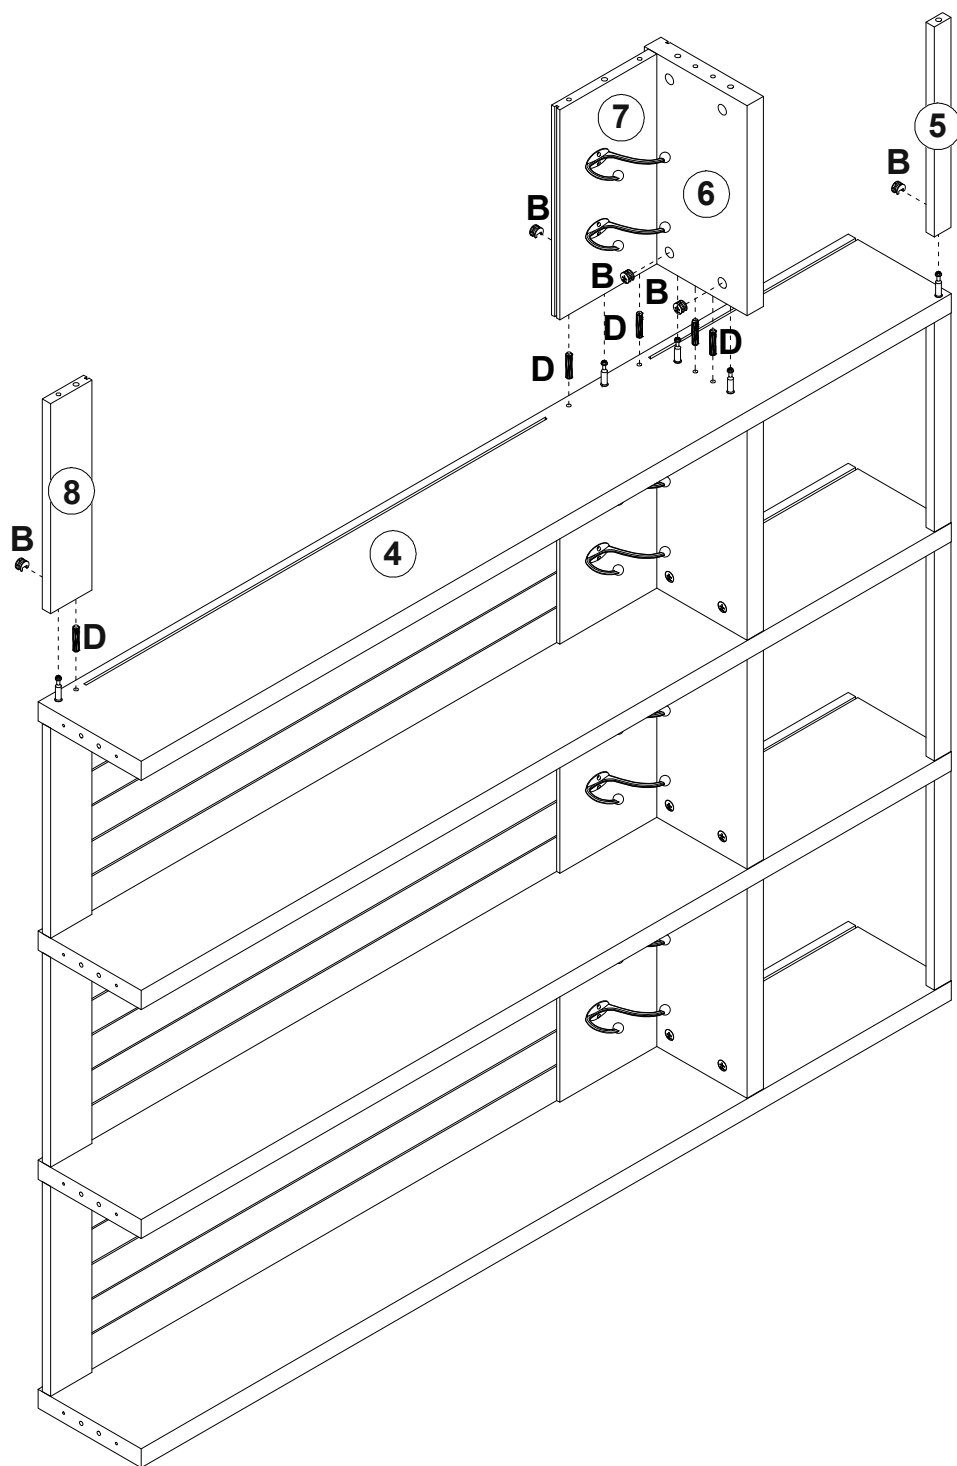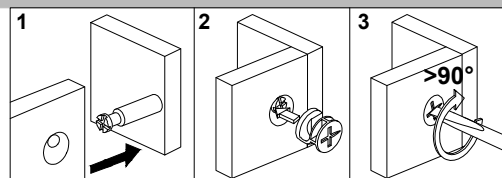

(B)  Ø15*9mm Cam lock x 5	(D)  6*30mm Dowel x 5
--	--

Assembly Instructions


step 20

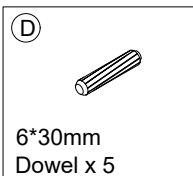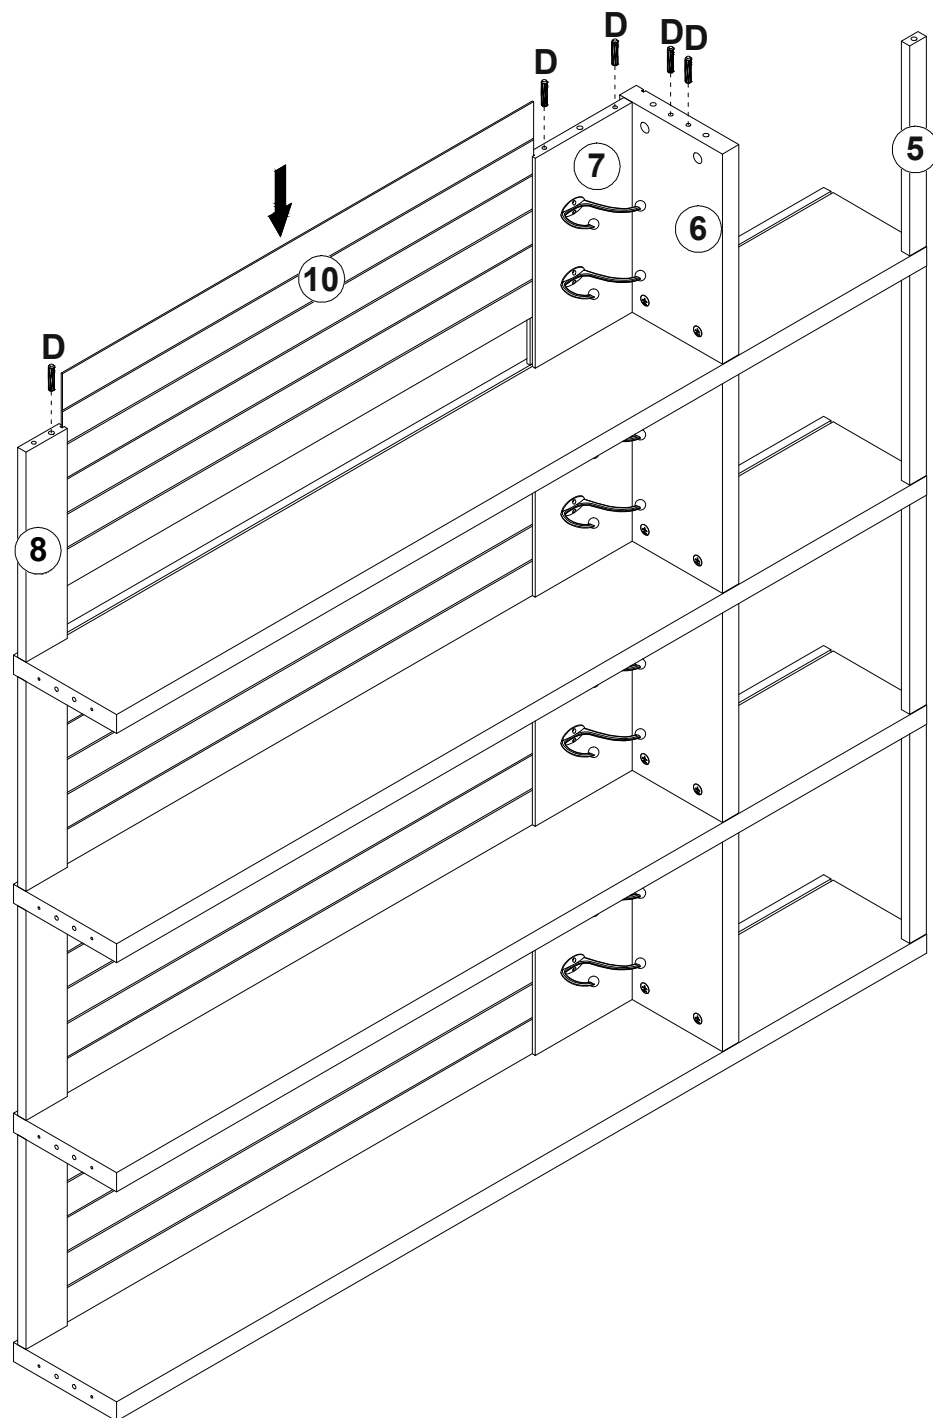

Assembly Instructions

step 21

"Requires 2 people to assemble,
Please be careful."

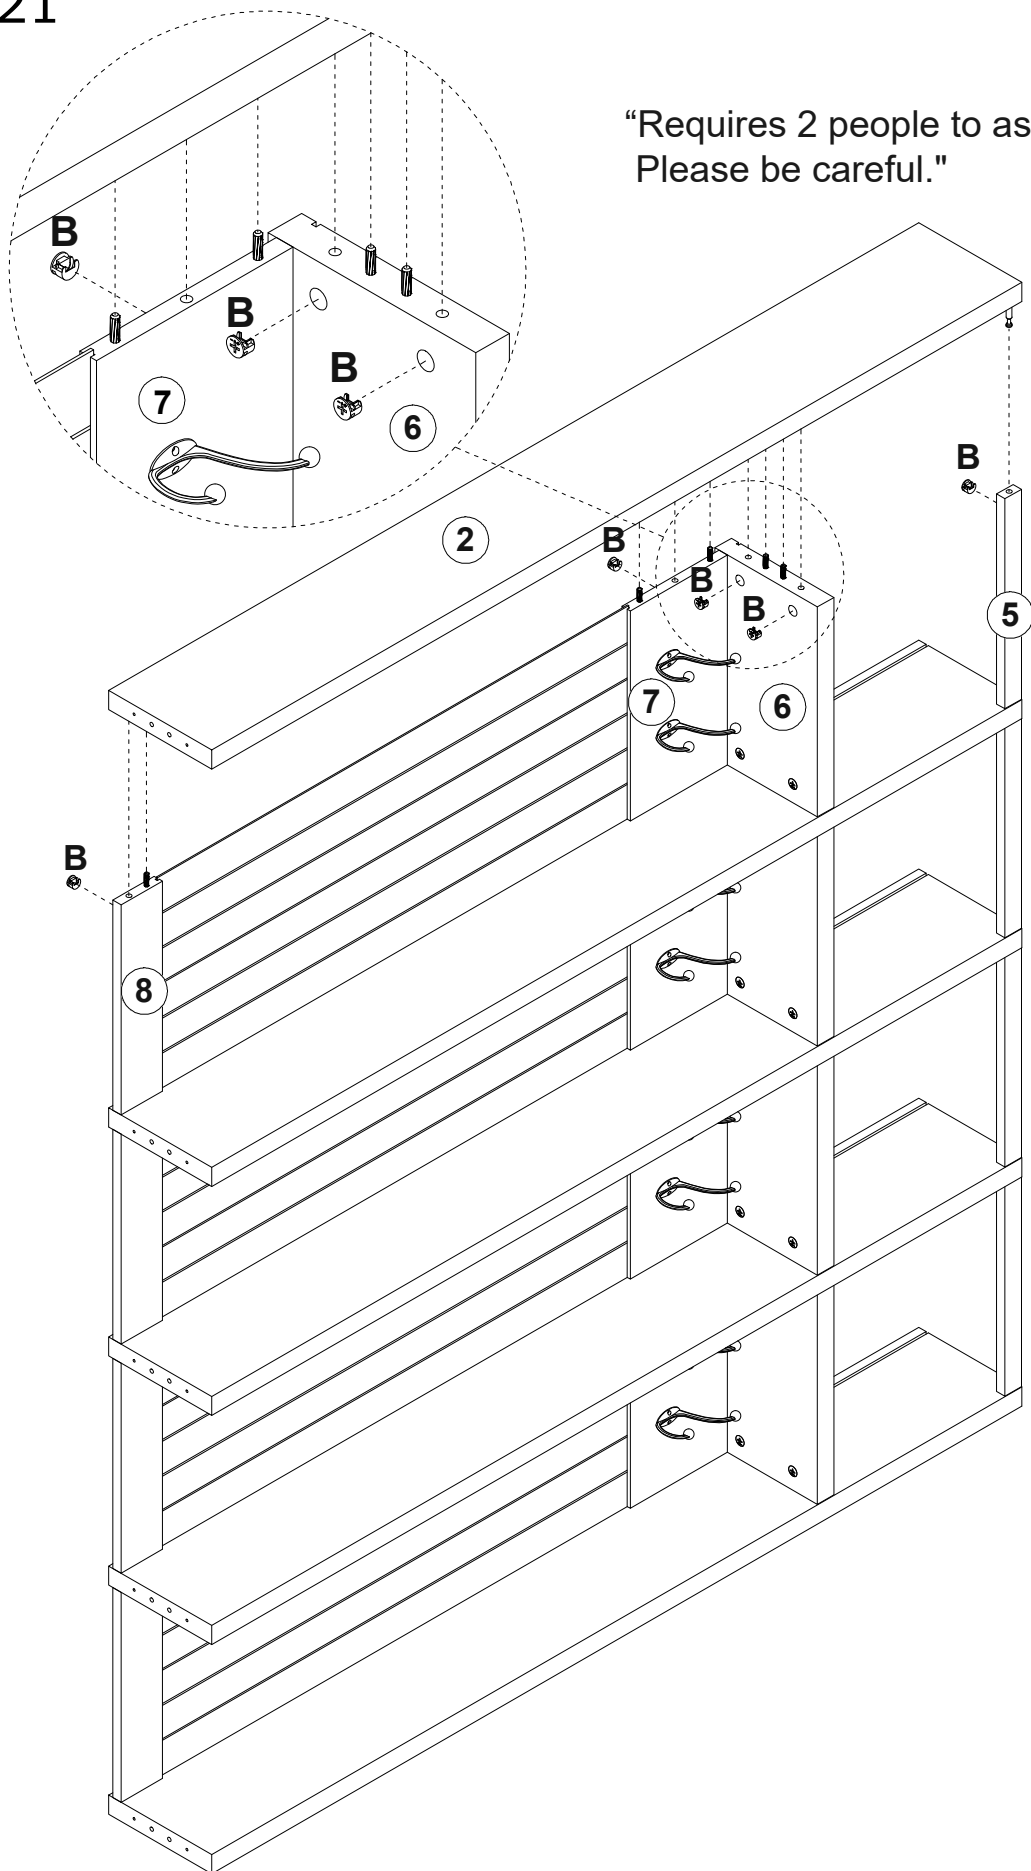


(B)



Ø15*9mm
Cam lock x 5

Assembly Instructions

step 22

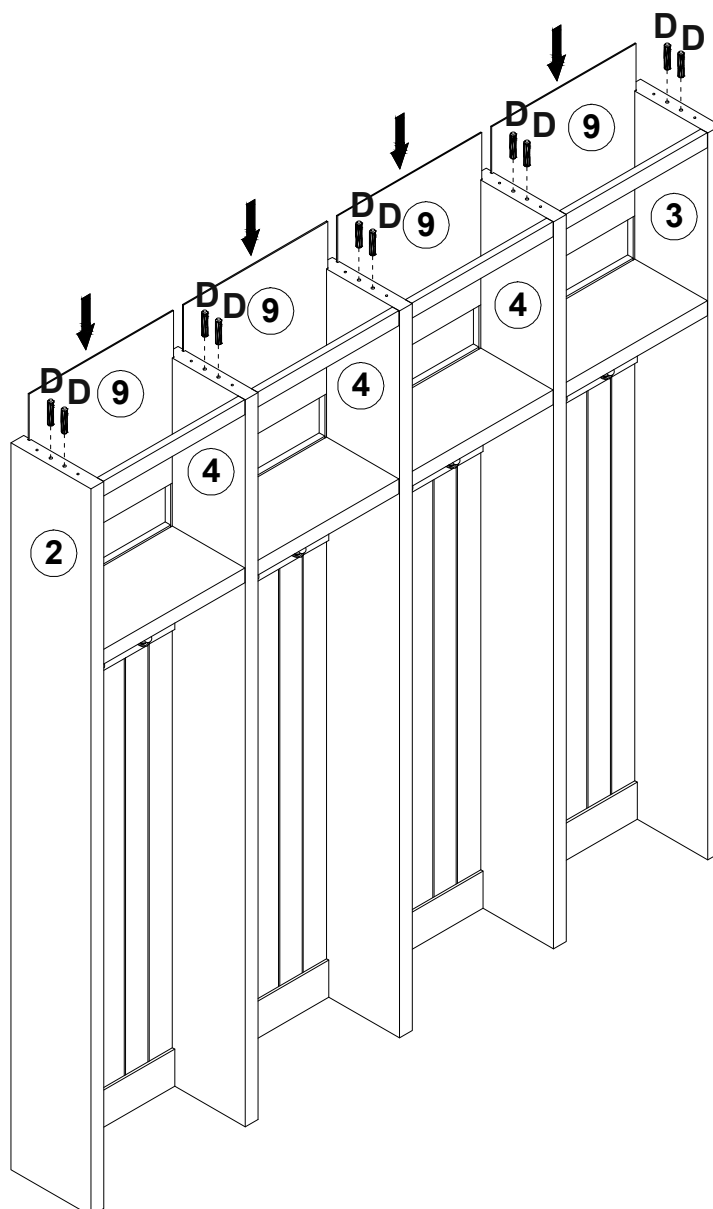


(D)



6*30mm
Dowel x 10

step 23

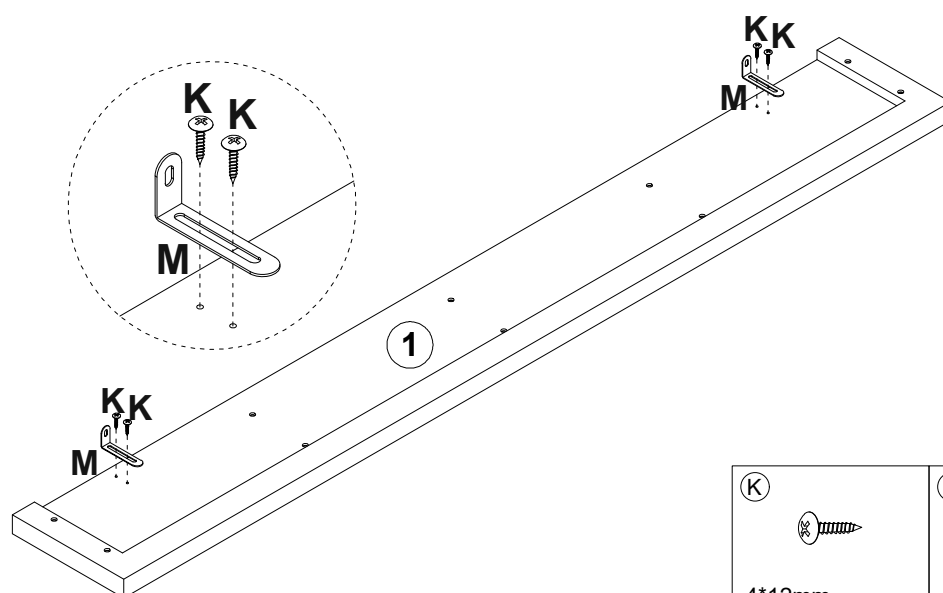

(K)



4*12mm
Screw x 4

(M)





Iron sheet x 2

Assembly Instructions

step 24


"When installing Screw C, tighten properly without over-tightening to avoid damaging the panel."

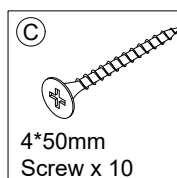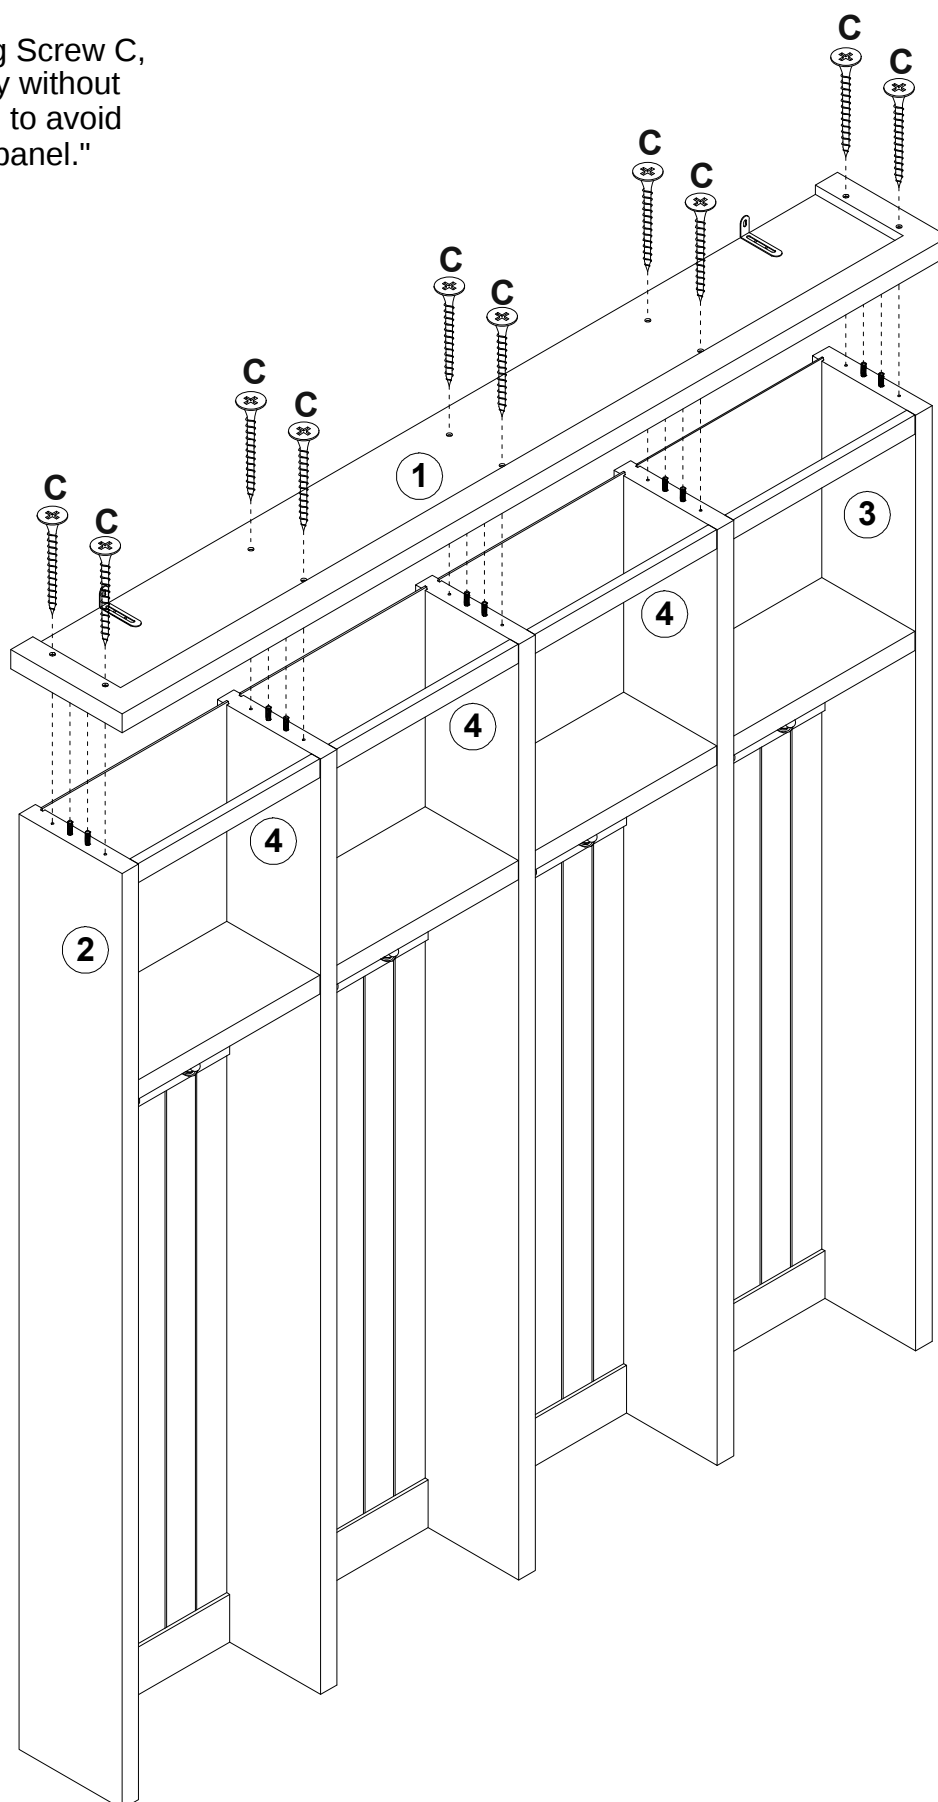

4*50mm
Screw x 10


Assembly Instructions

step 25

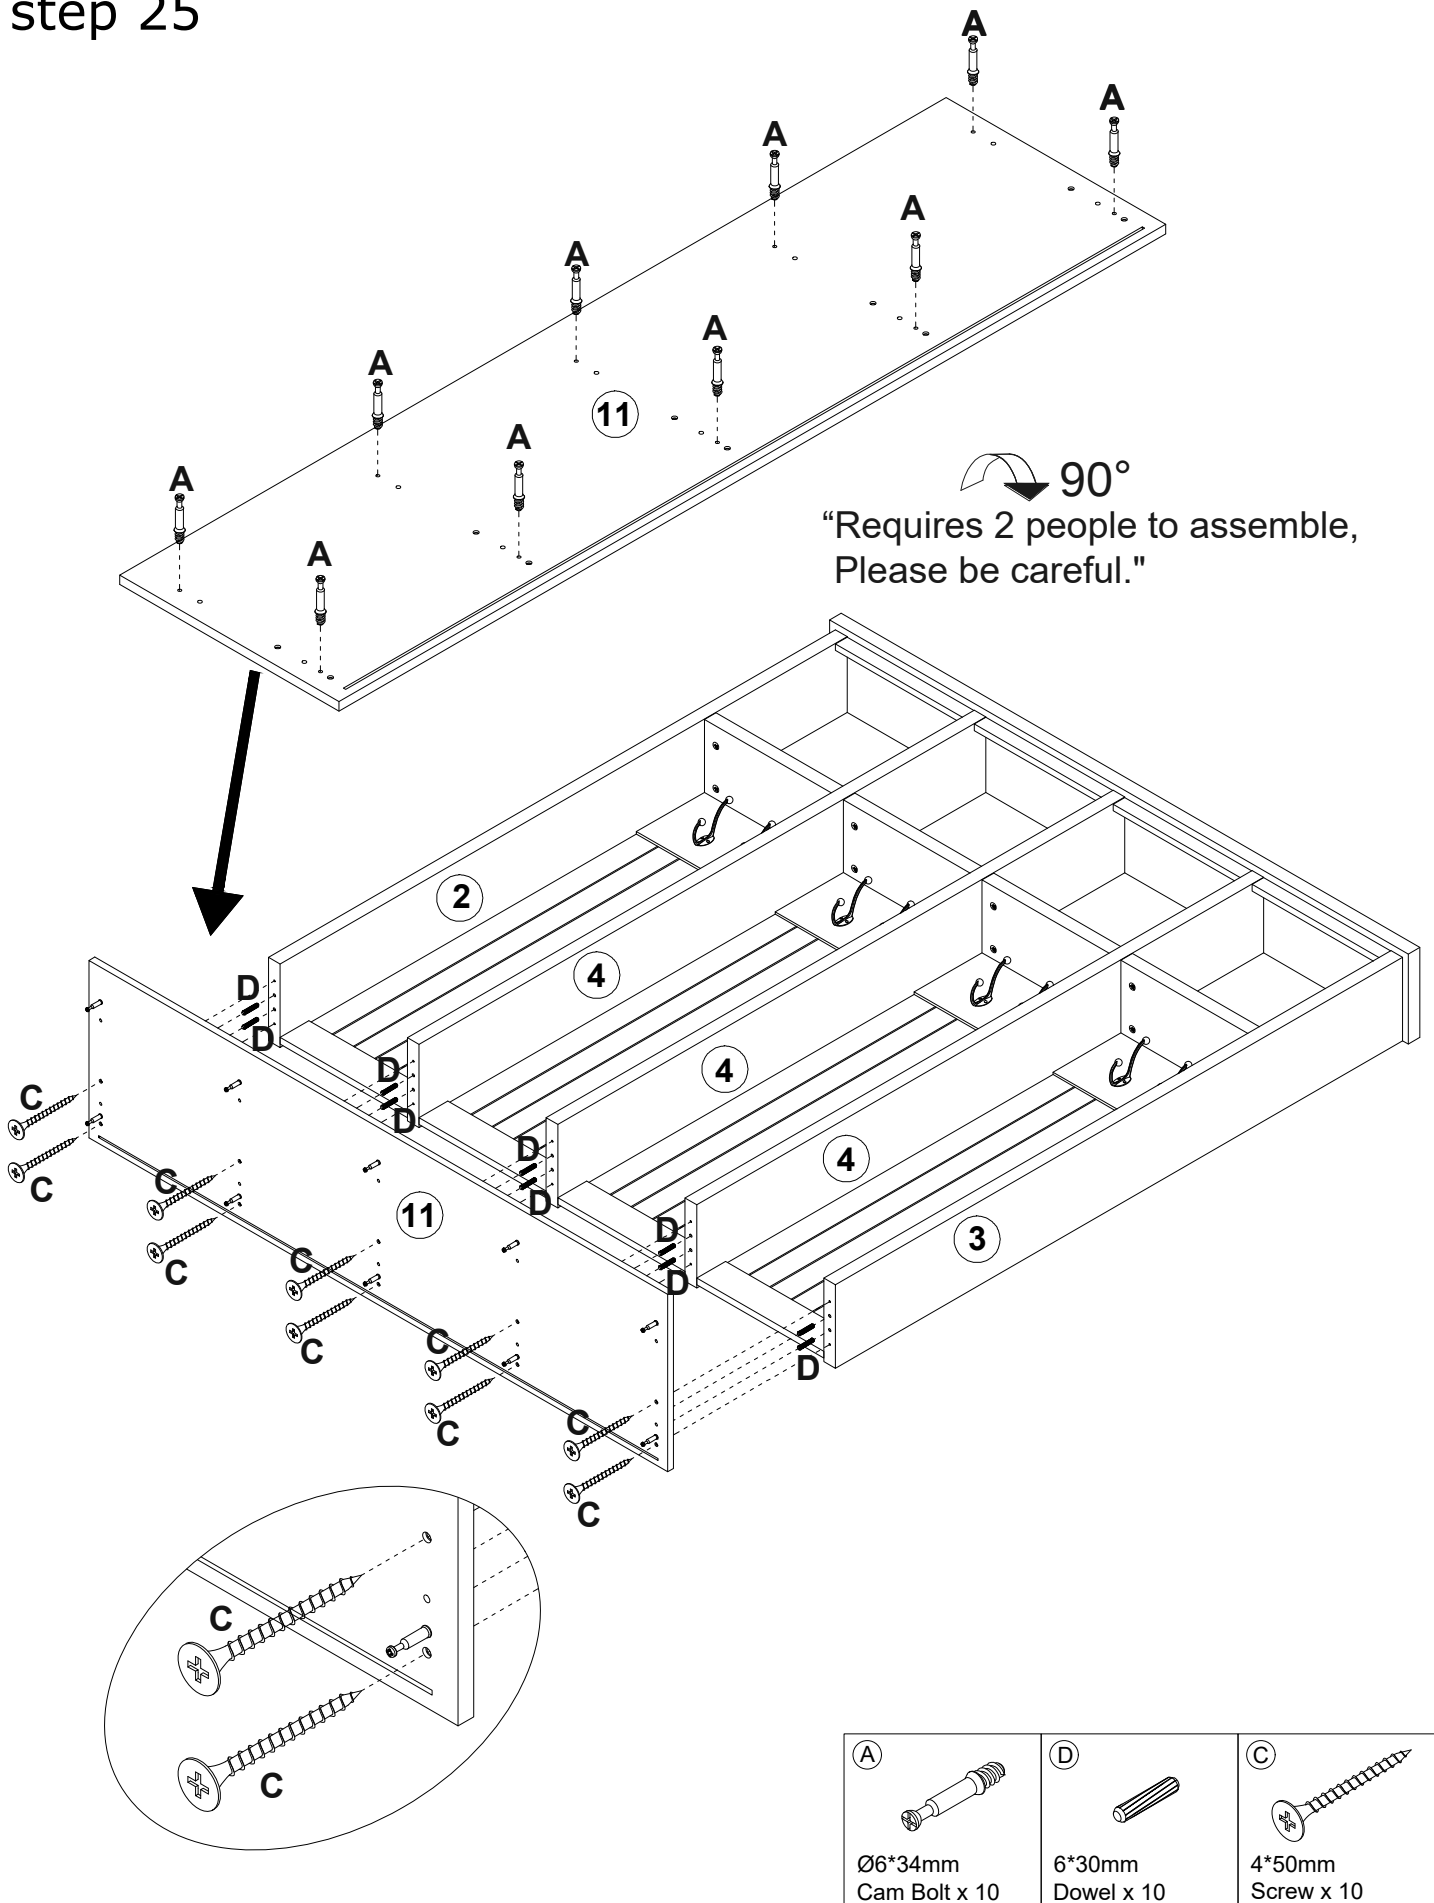


Assembly Instructions

step 26

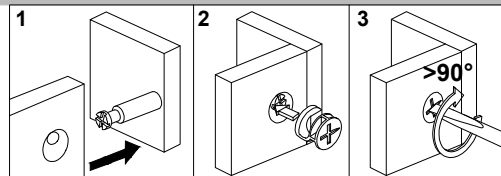

"Requires 2 people to assemble,
Please flip carefully."

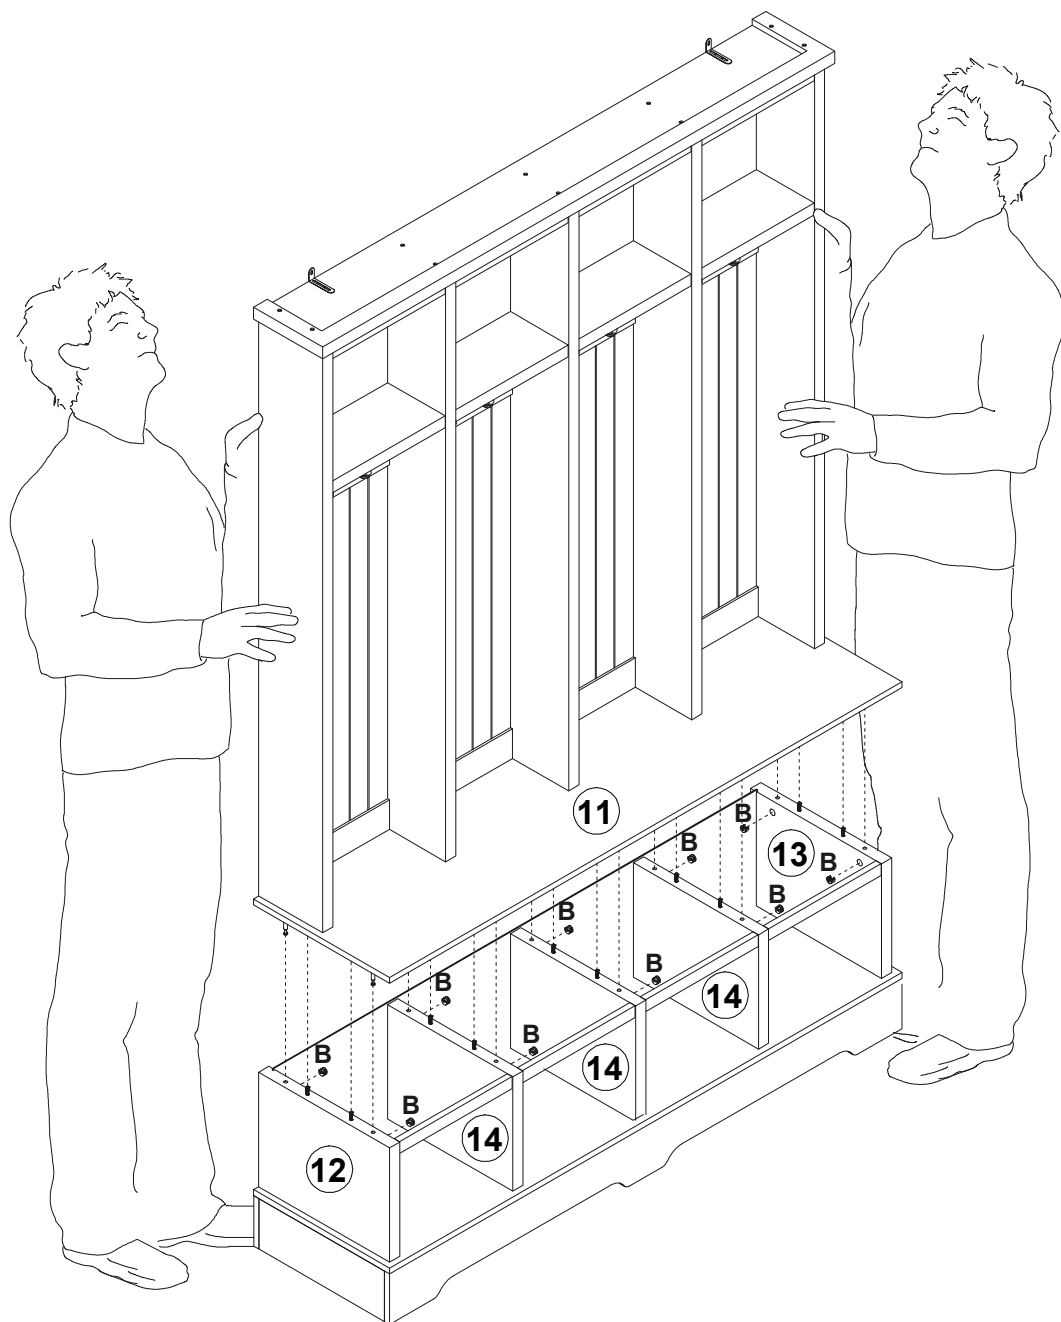


(B)






Ø15*9mm
Cam lock x 10

Assembly Instructions

step 27




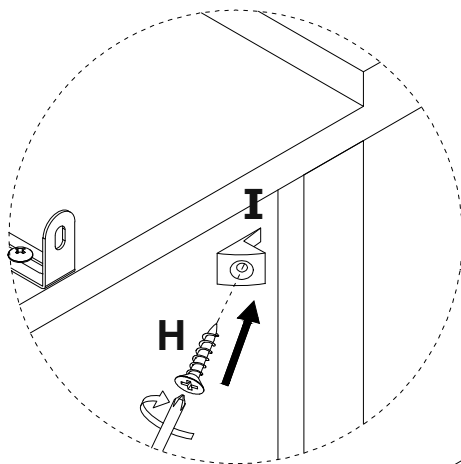


As the picture shows,
Fix hardware "I" into the gap with screws
to make the back panel more stable.

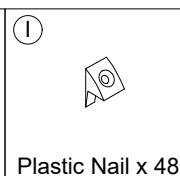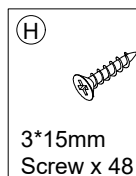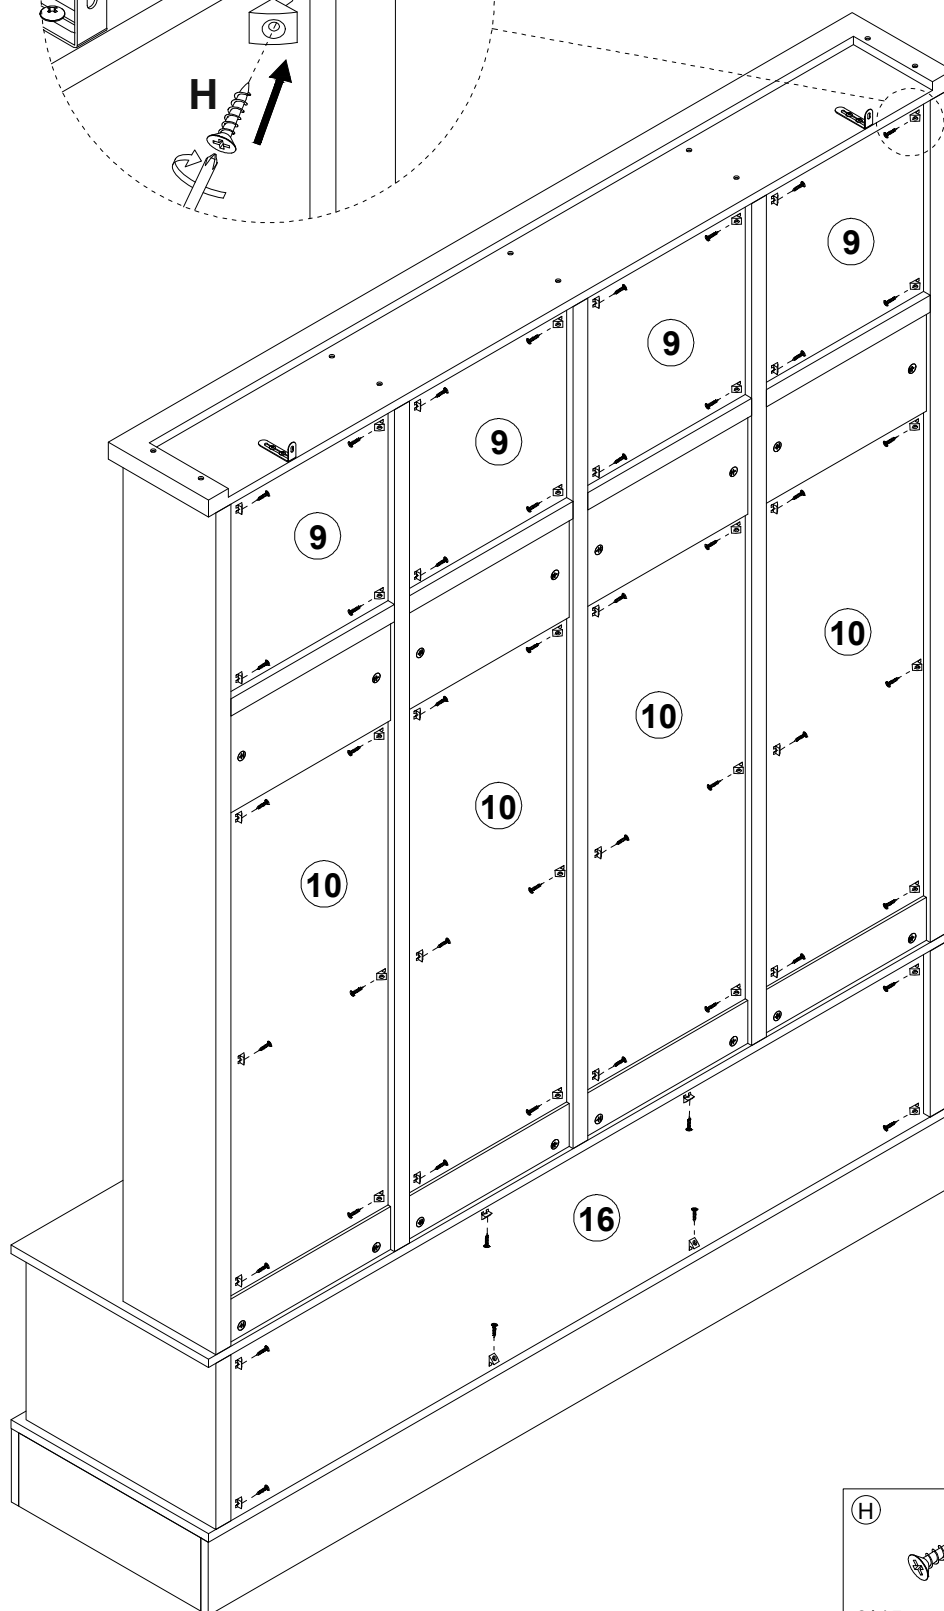

Assembly Instructions

step 28

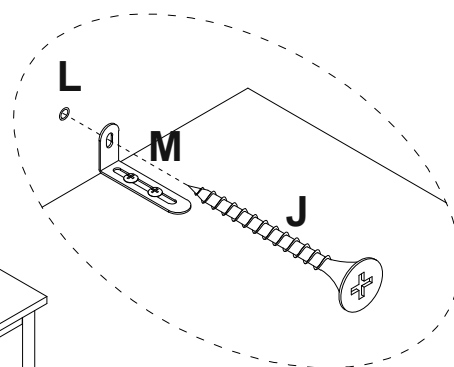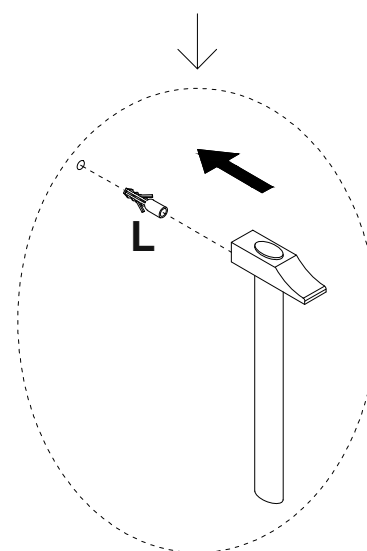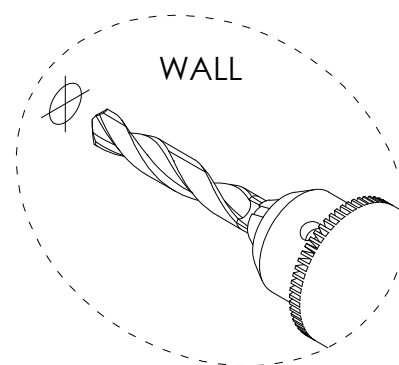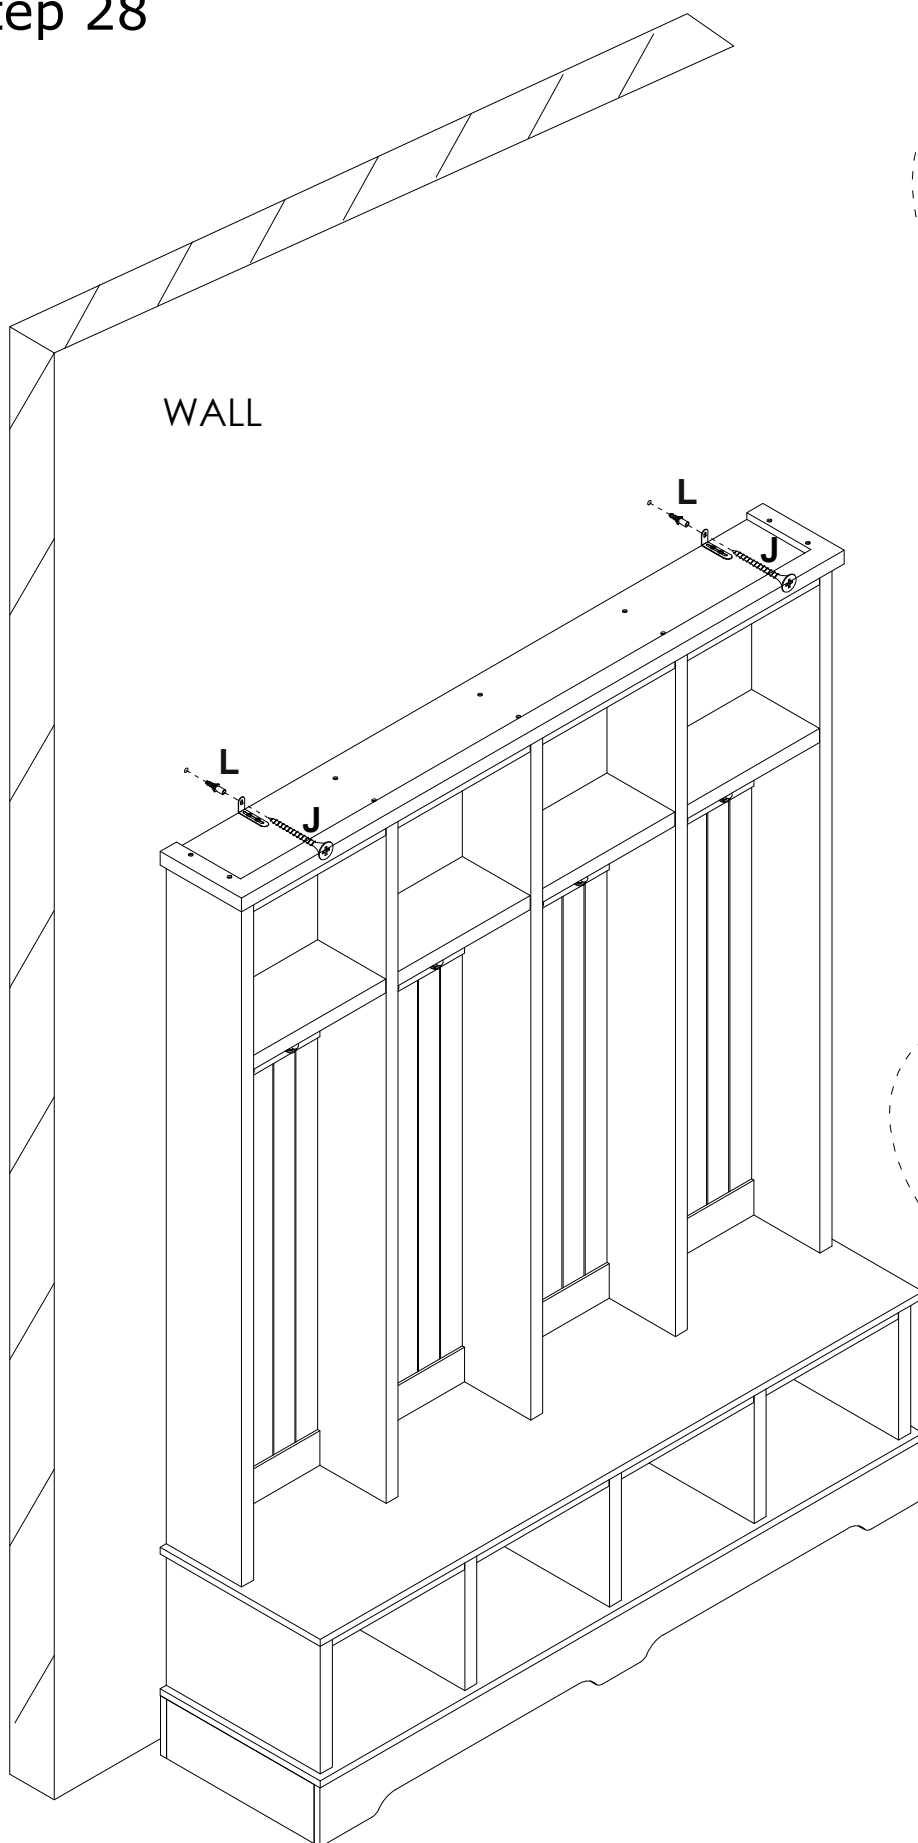

 4*40mm Screw x 2	 6*29mm Wall Anchor x 2
--	--

Assembly Instructions

