



TWIN STUDY DESK

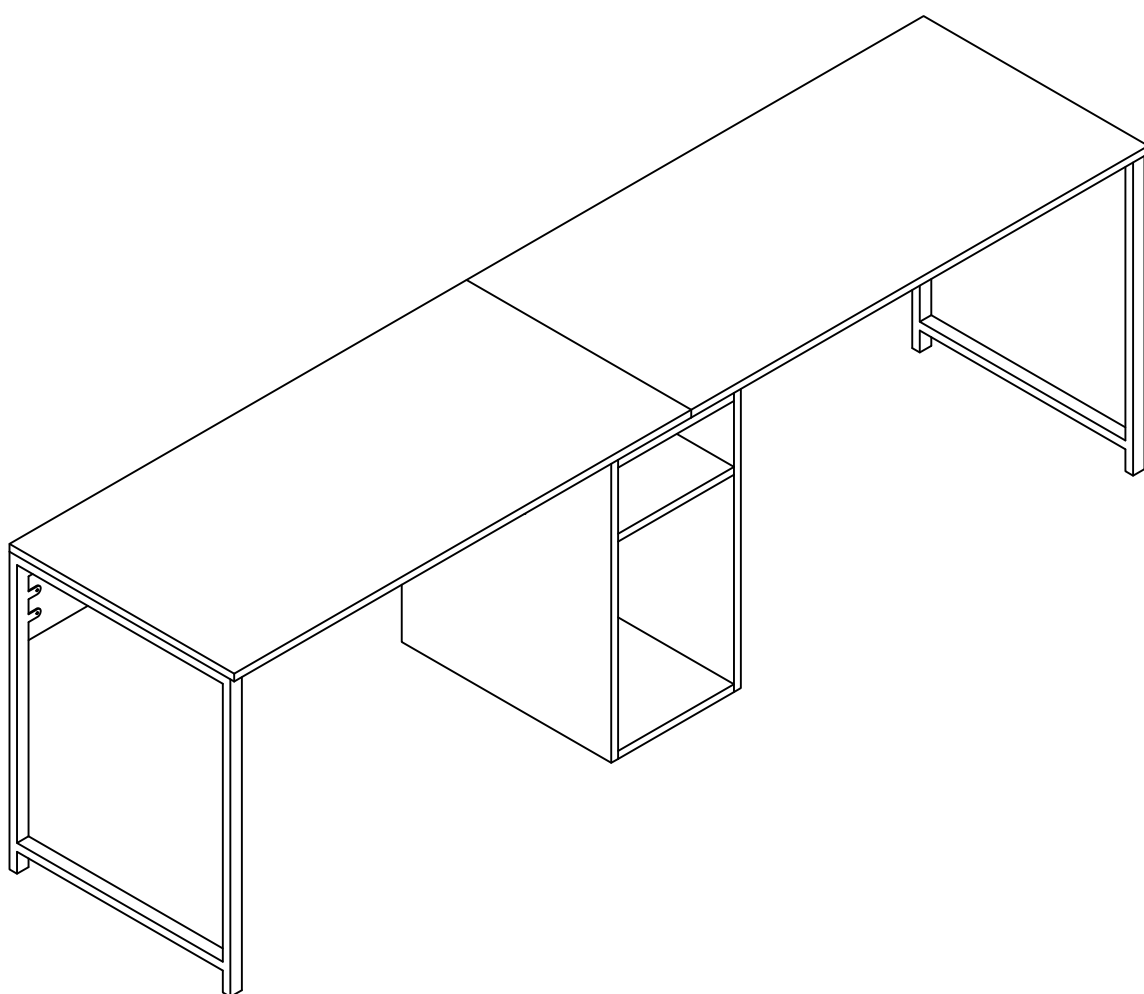


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.


C03

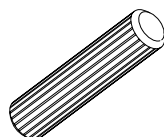


C02

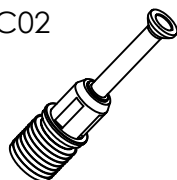


C01




1

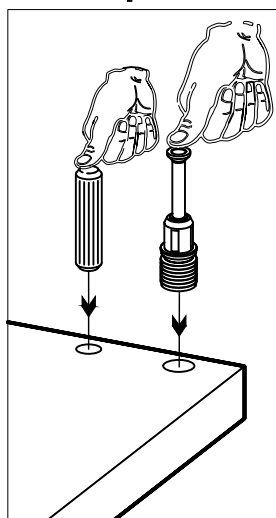



2

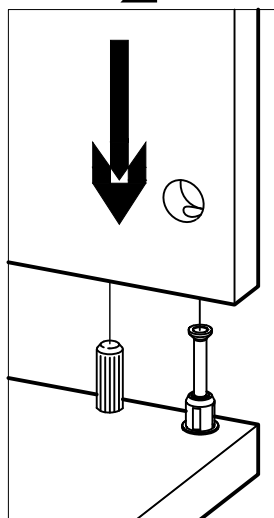


3

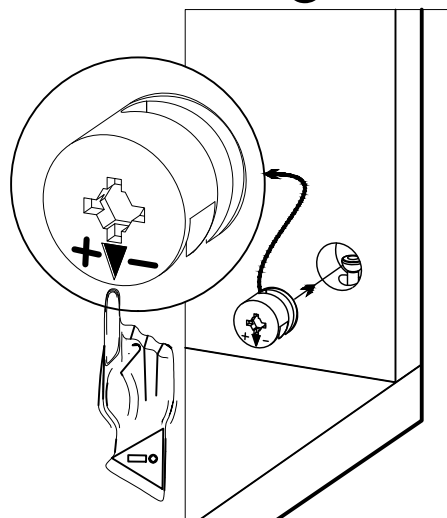


4

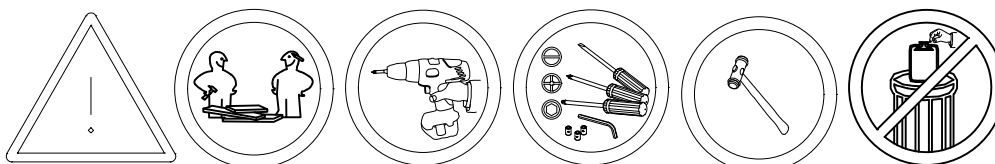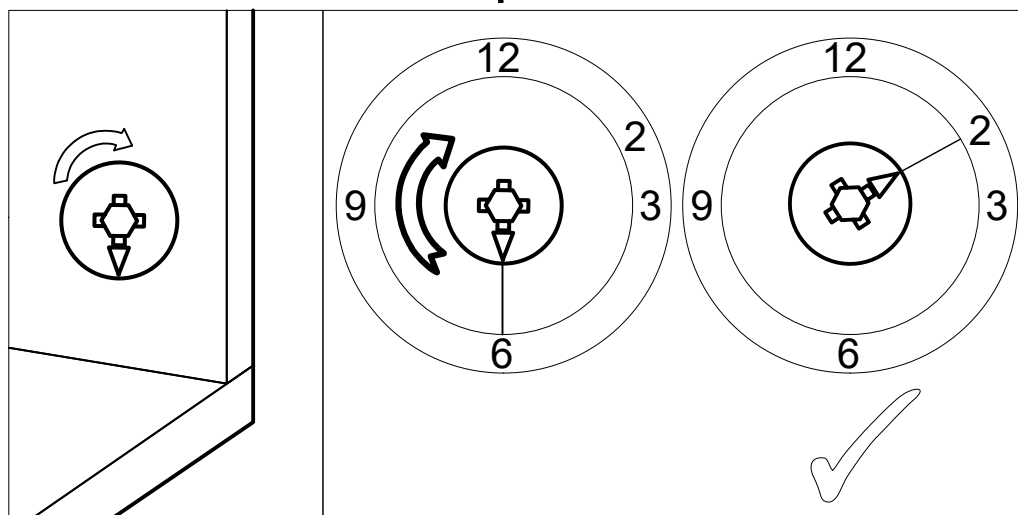

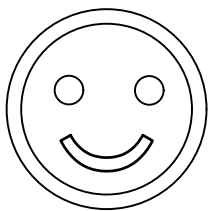


Dear Customer,


We design and produce our product for people to love and have fun with them as we do.
The product you bought was subjected to all sorts of tests and control before sending out to you.

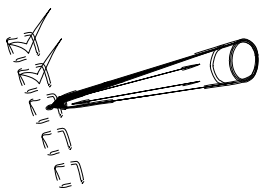

Before start assembling, please check the whole components and accessories according to the lists. If you bought more than one product, to prevent confusion be sure that you completed the first product. Then start the other product's assembling.

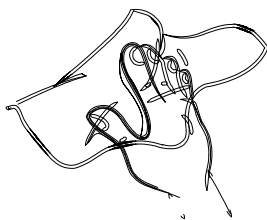


Before start assembling, please clean all the components with a damp cloth. Also for usual cleaning, this will be enough.

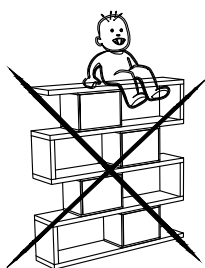

Do not use furniture for other purposes. If you would like to use it, please contact us for further questions.






Do not directly contact your furniture with excessive heat, cold and humidity because the product can be affected.

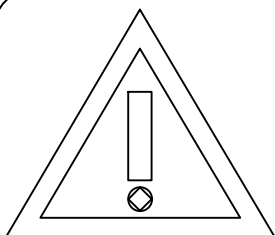


WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To prevent the furniture from tipping over, it must be permanently fixed to the wall with the included wall attachment devices.

Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer.

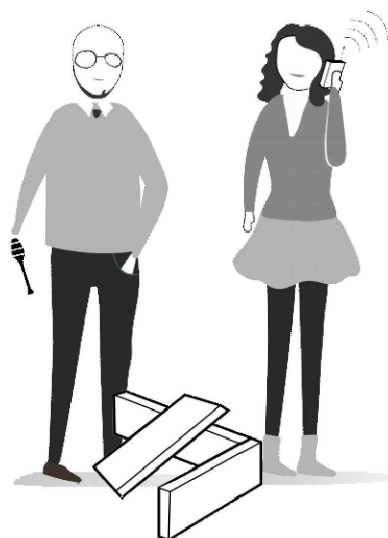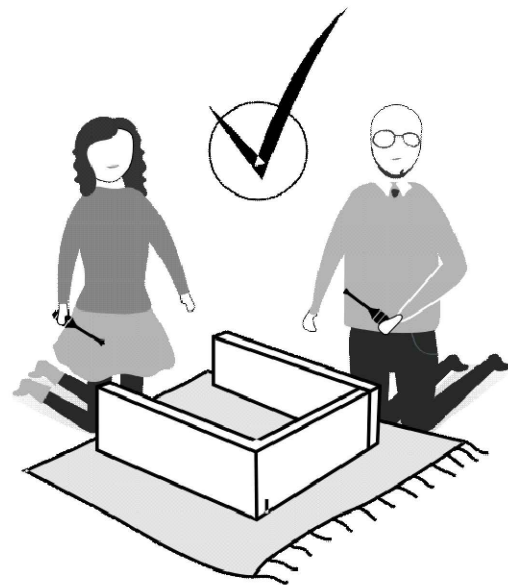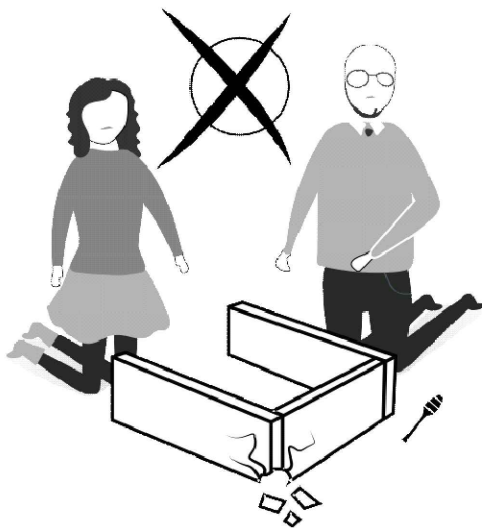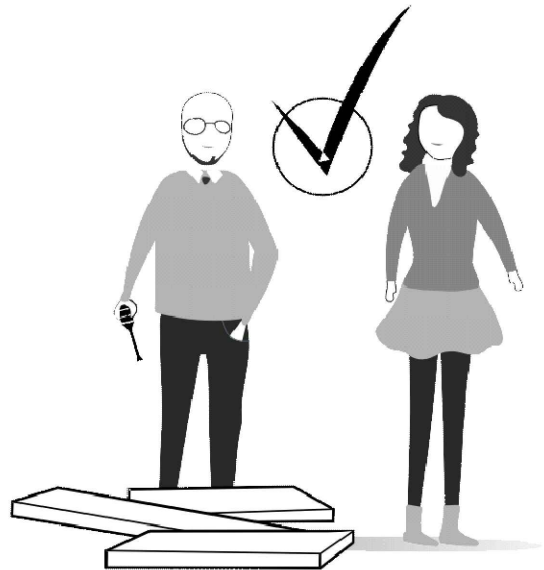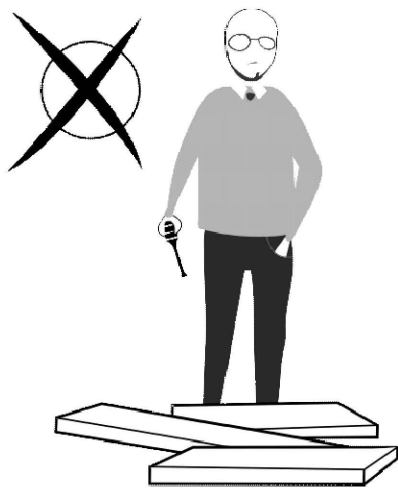



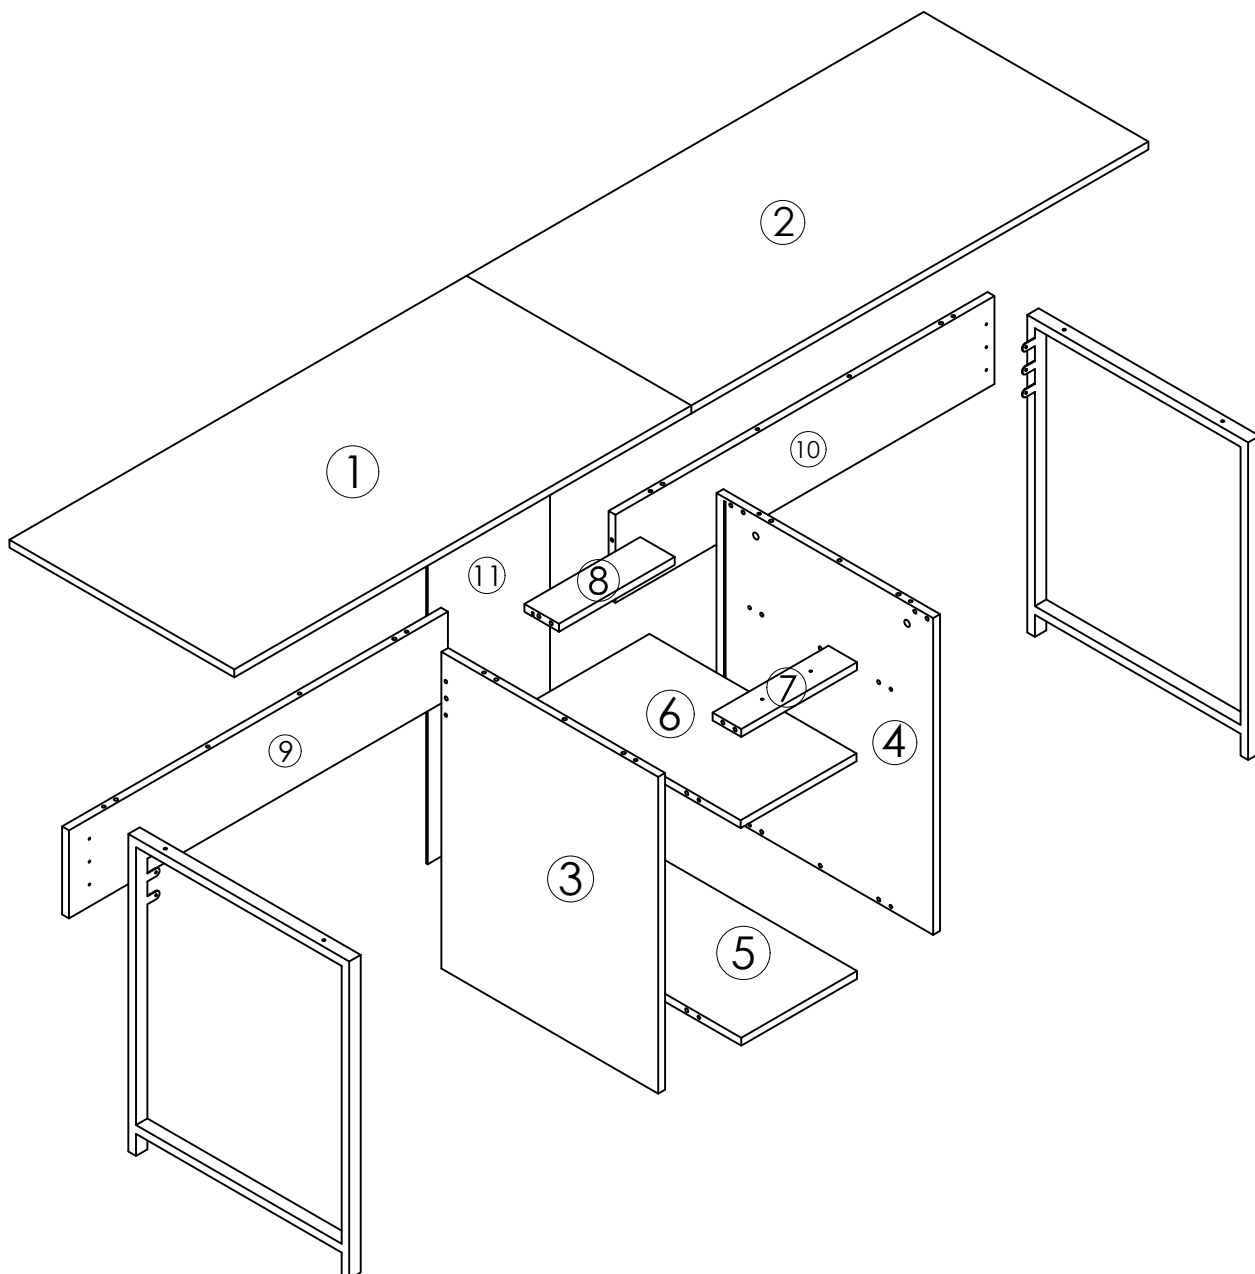














Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.










hardware list


A01	3,5*18 screw (black)	A04		A05		A06		A07	
	6x		26x		32x		36x		3x
A09	4x30 screw	A10	4x35 screw (black)	A11		A13		A14	3,5*18 screw
	2x		4x		4x		8x		8x
A18		A19							
	32x		4x						


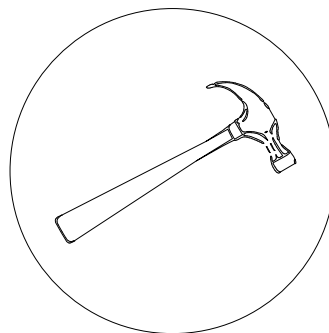
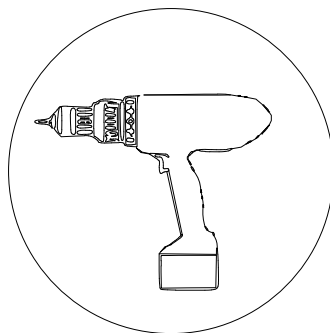
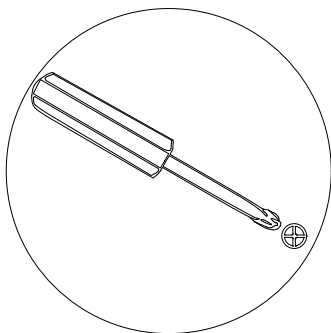
tools required

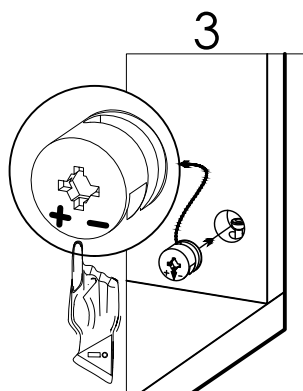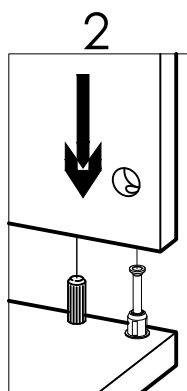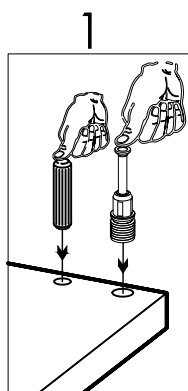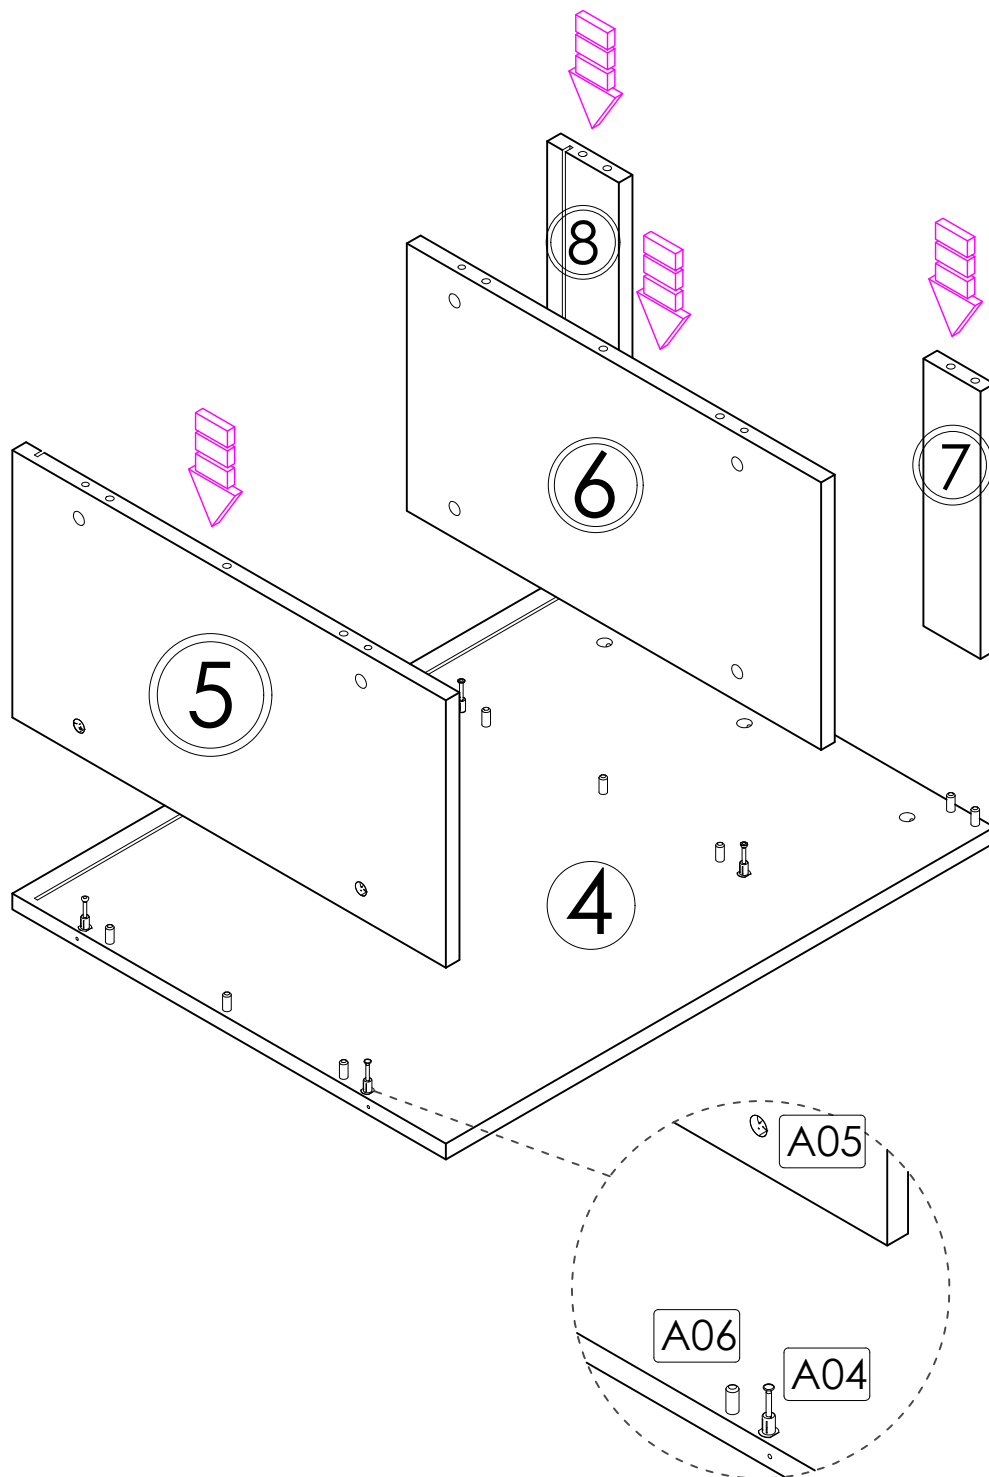

















A04	A05
 26x	 32x
A06	
 36x	

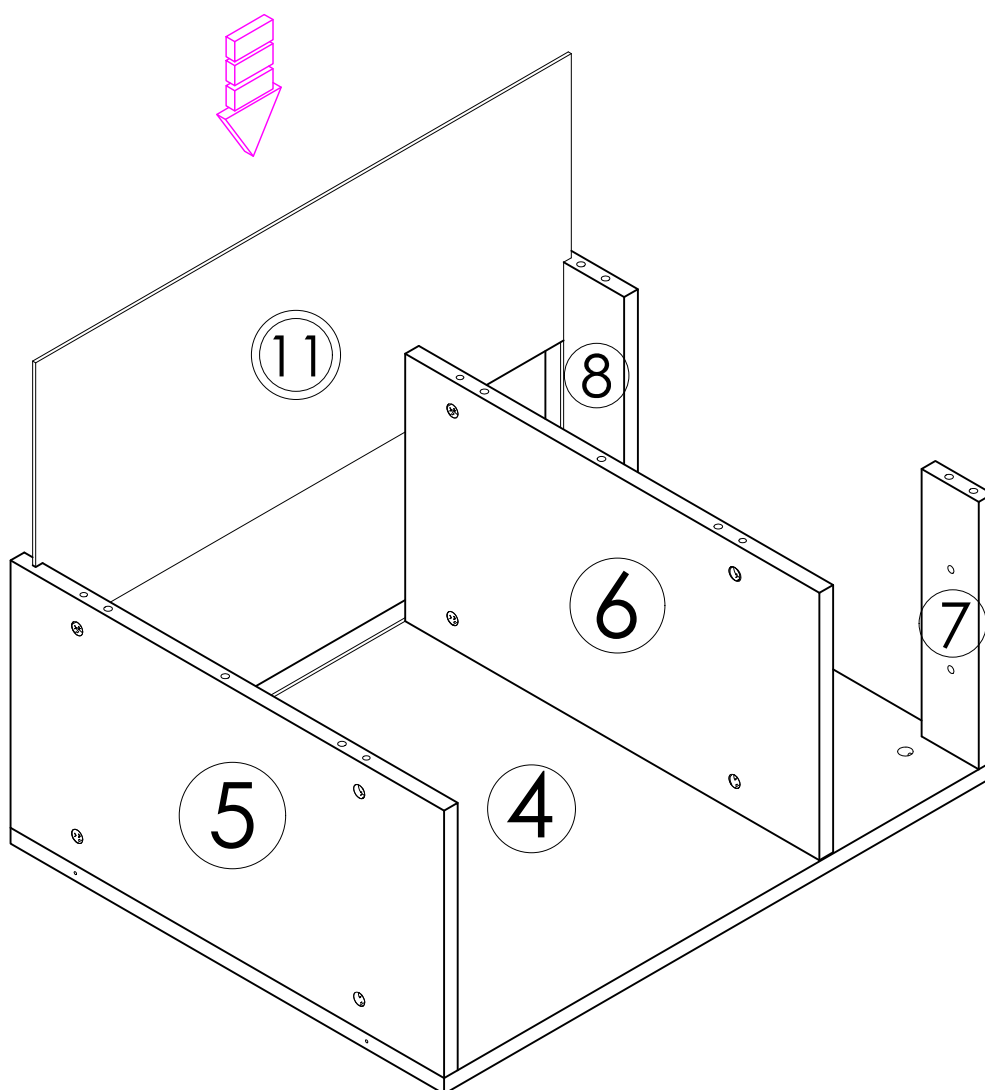


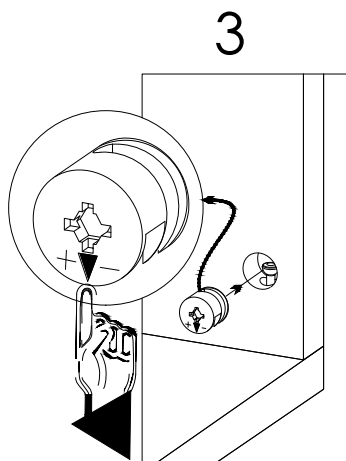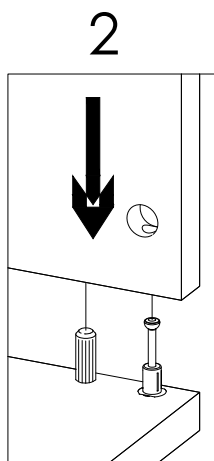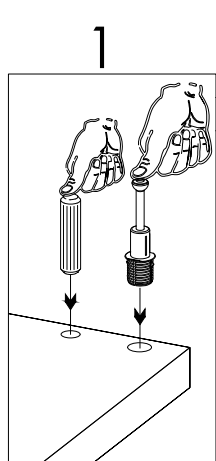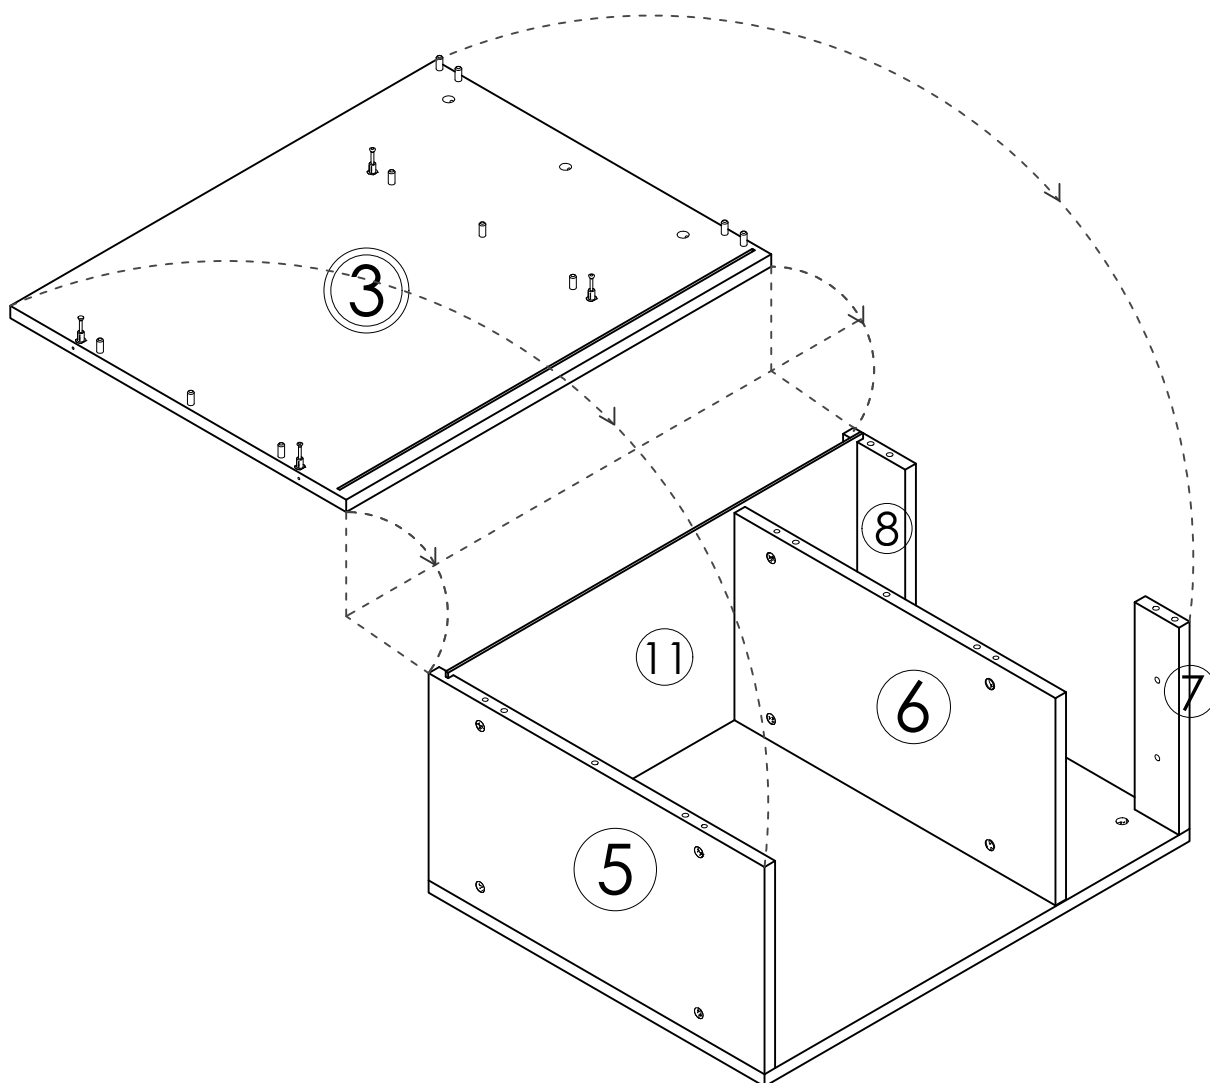


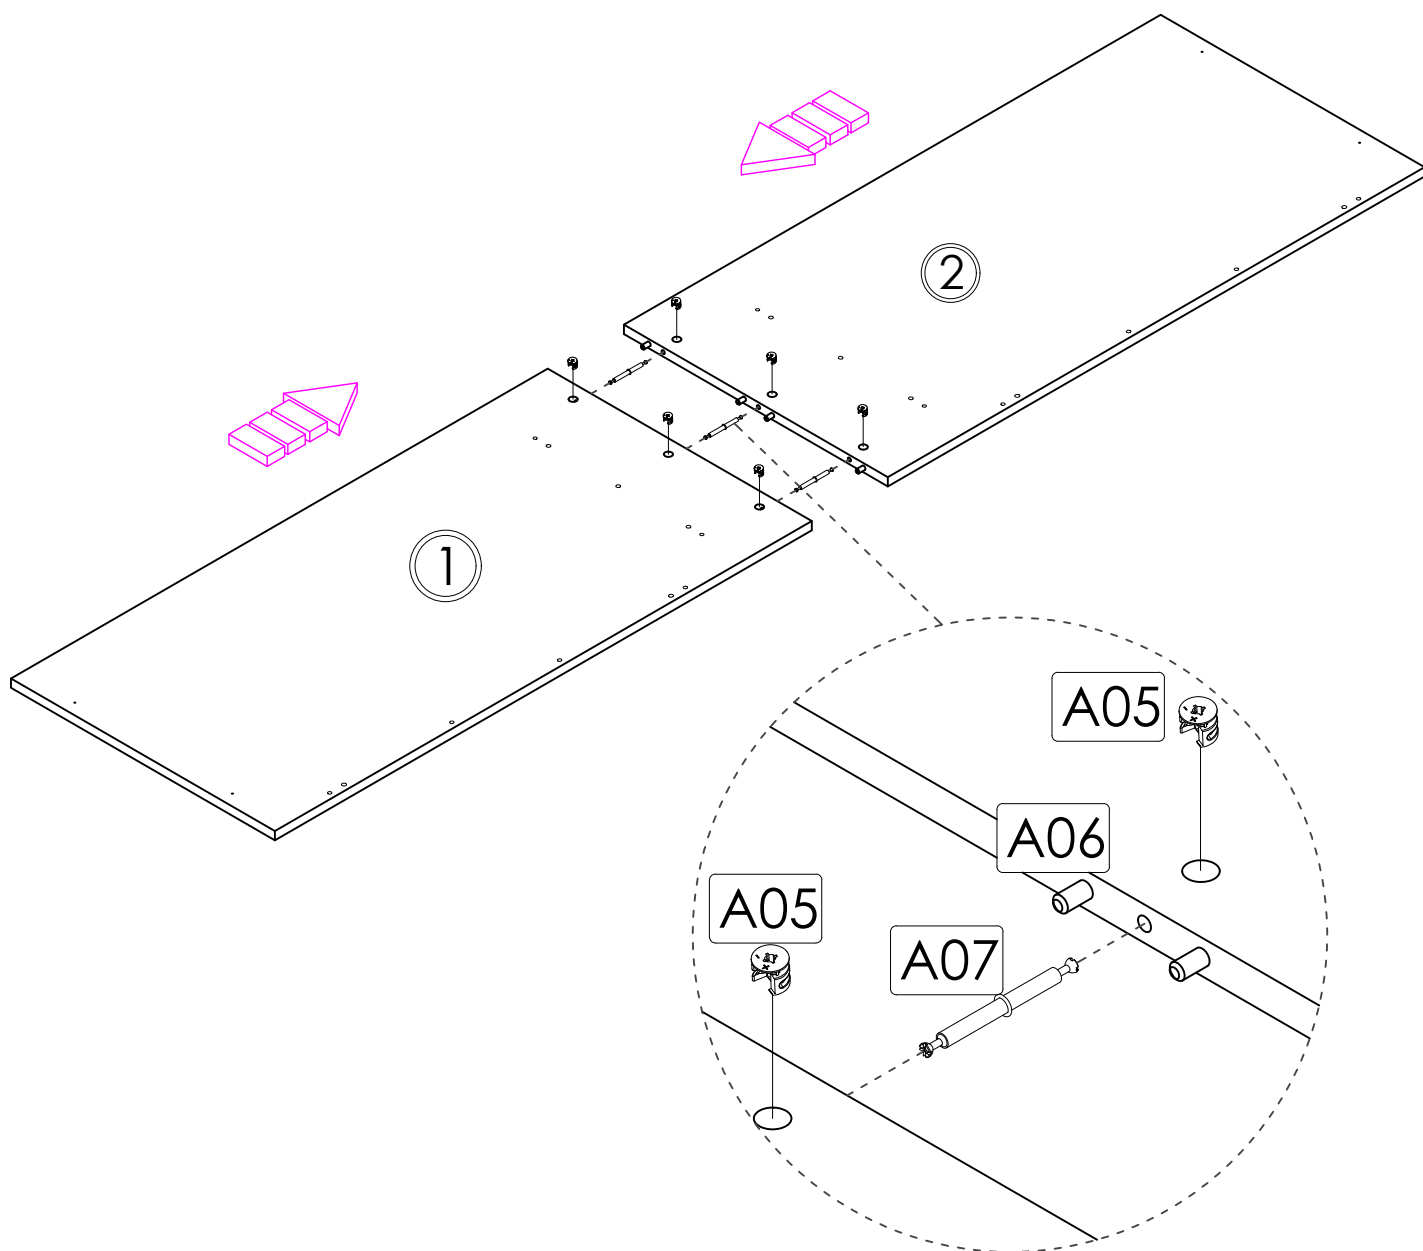


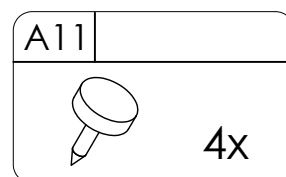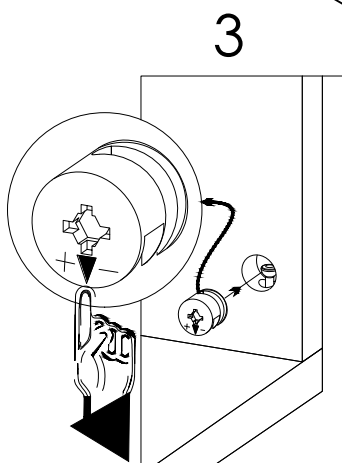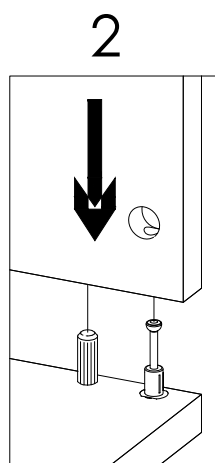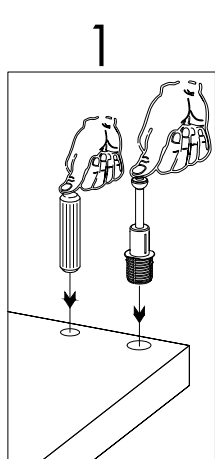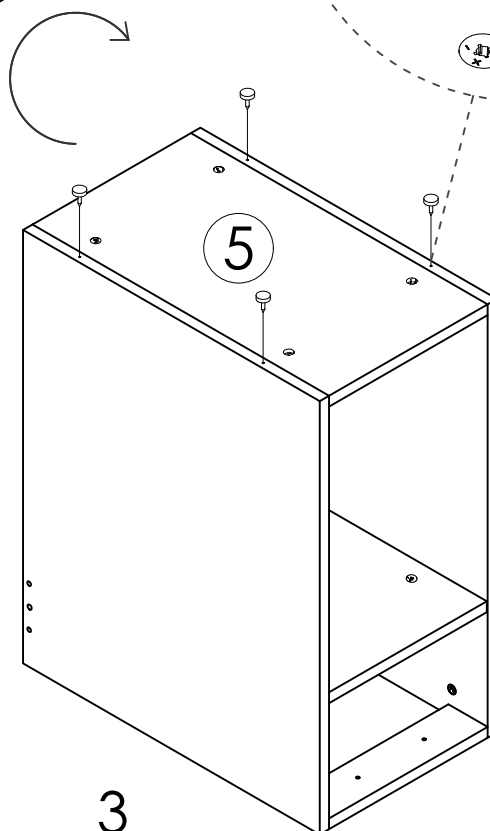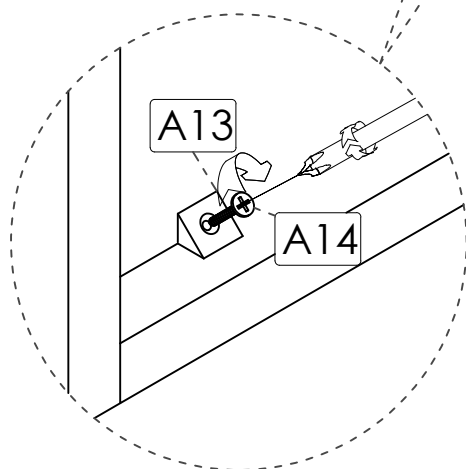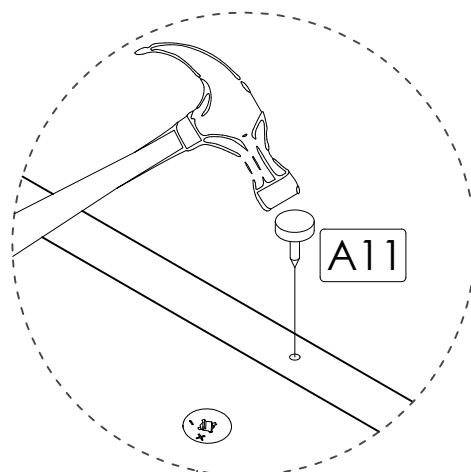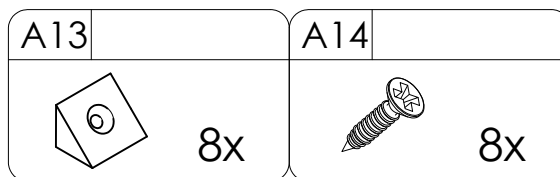
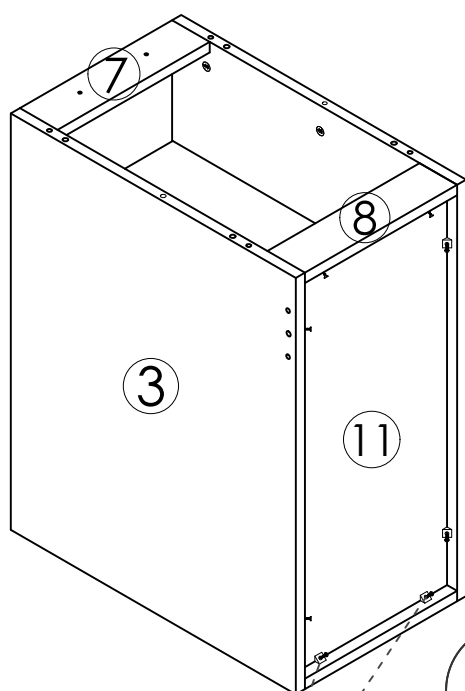

A04		A05	
	26x		32x
A06			
	36x		




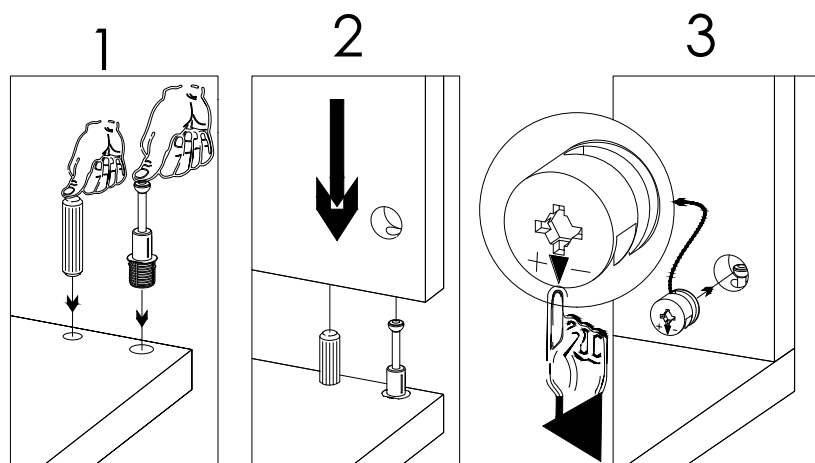
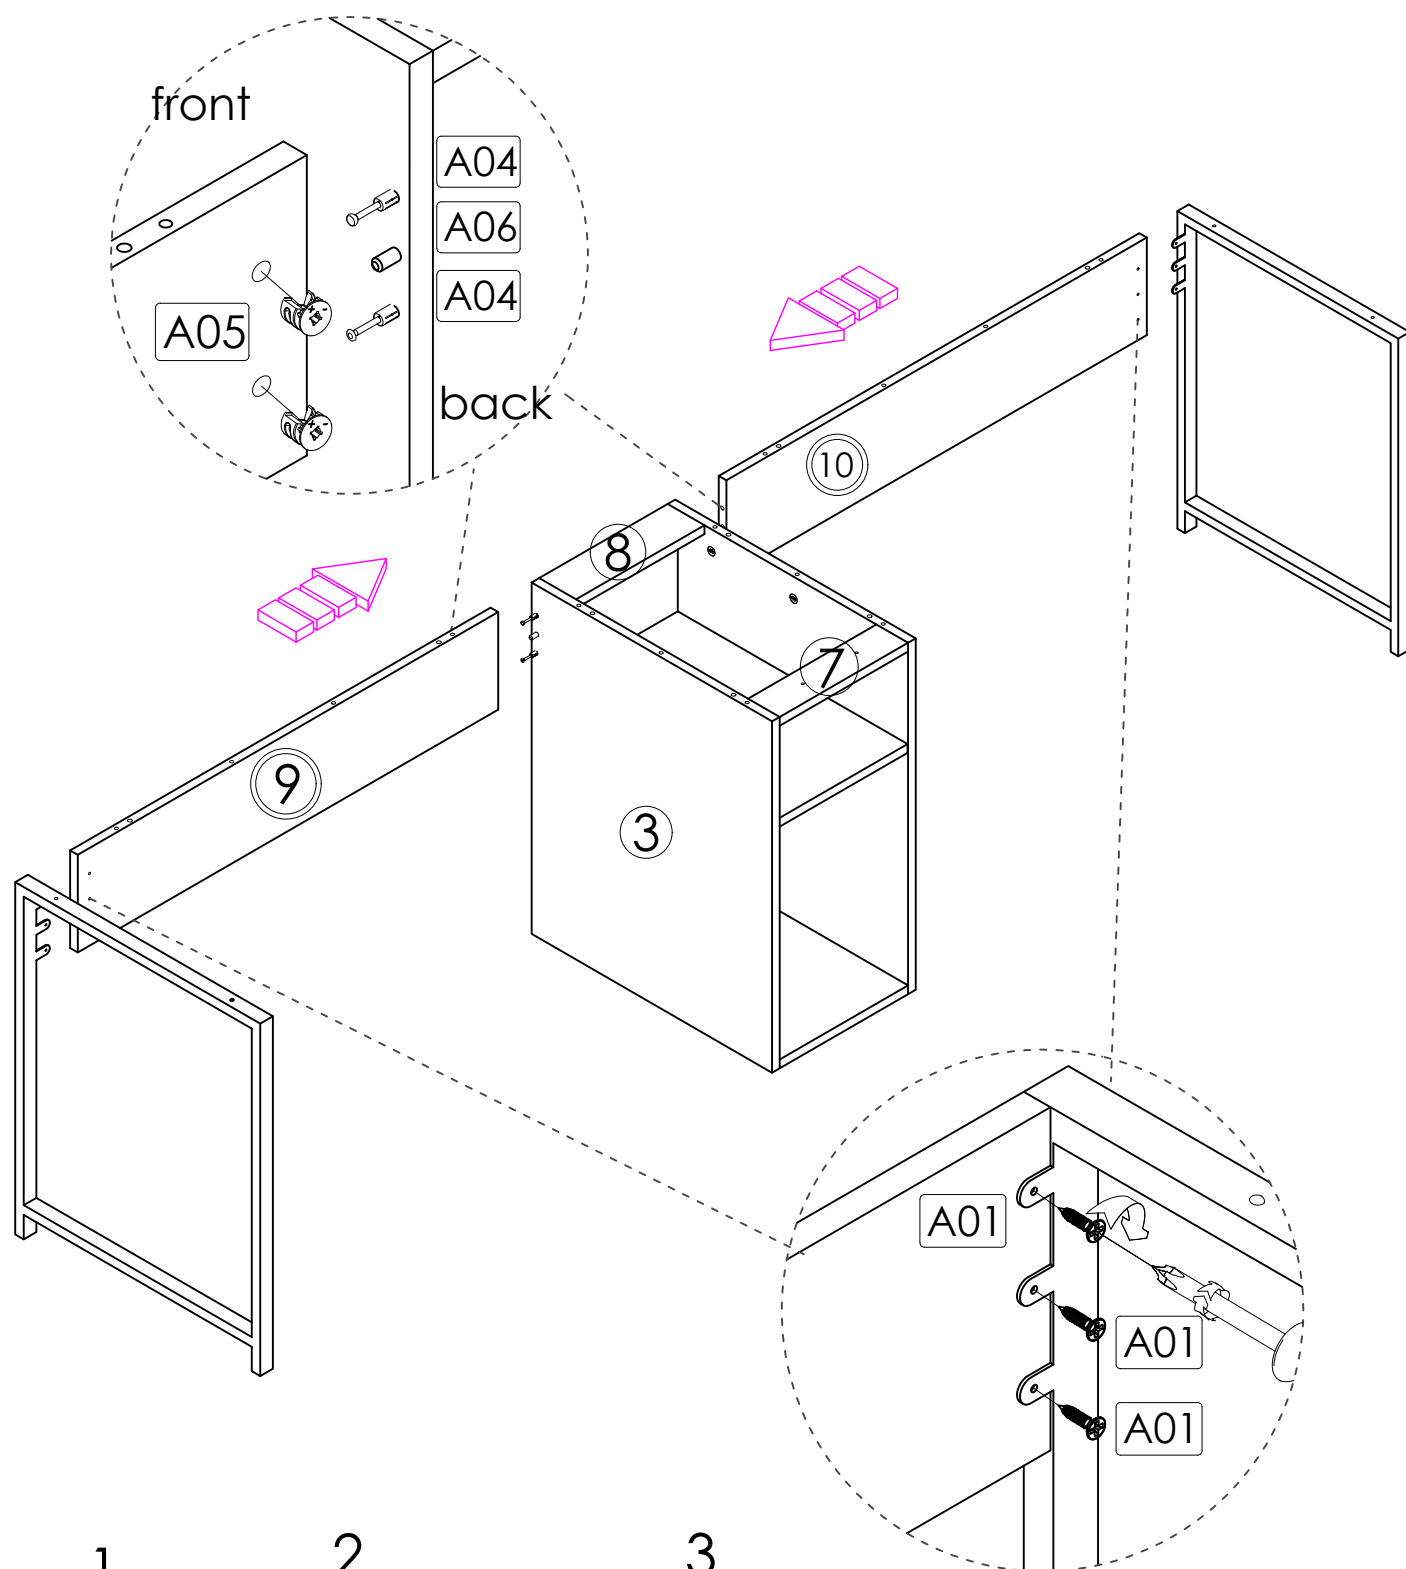









A04	A05
 26x	 32x
A06	A01 3.5*18 screw (black)
 36x	 6x






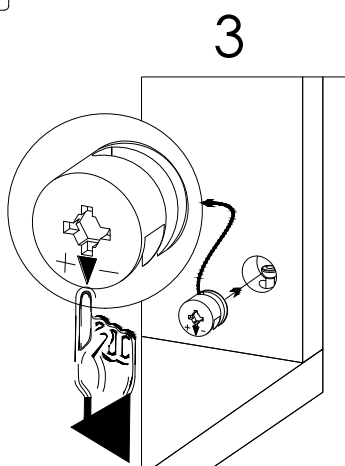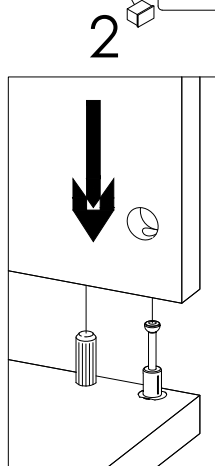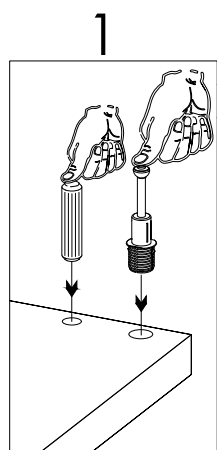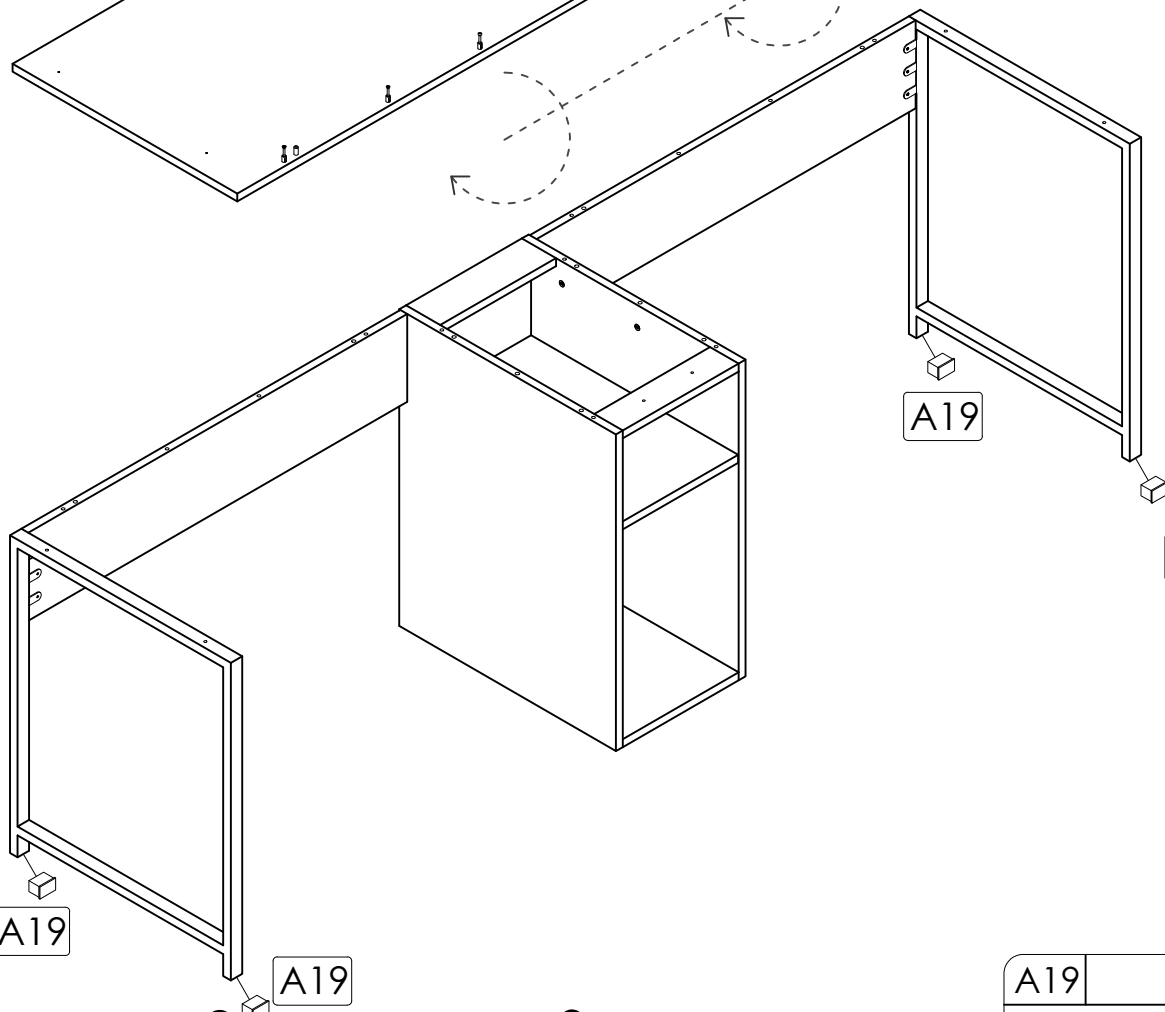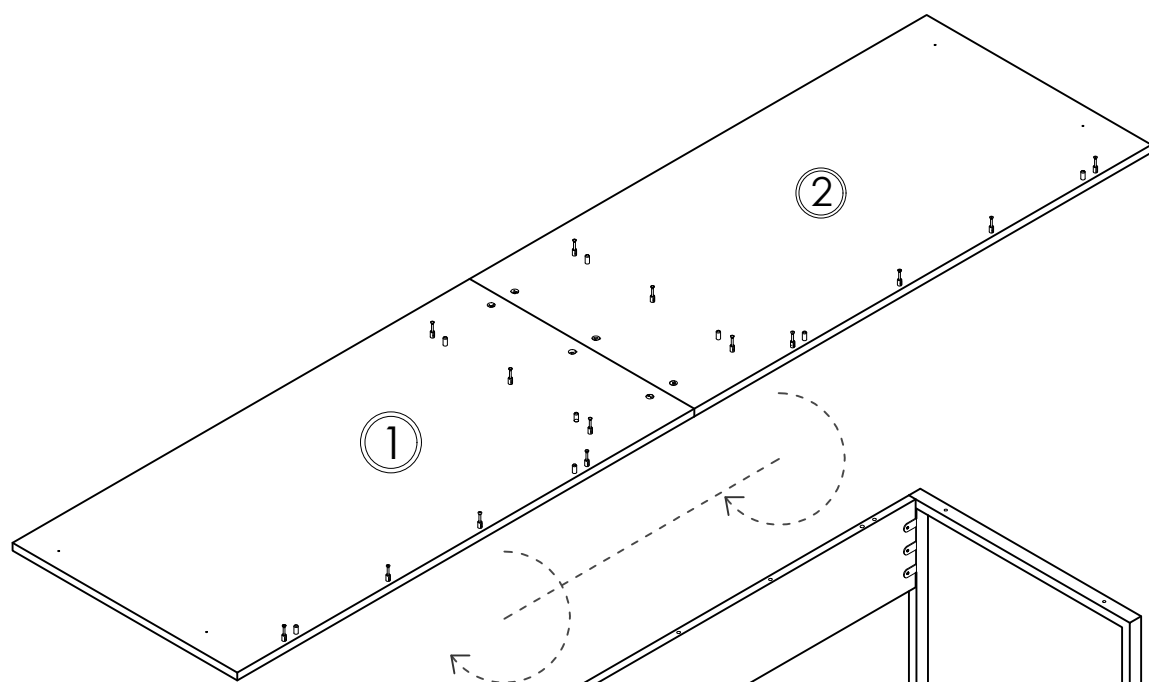


A06		A07		A05	
	36x		3x		32x

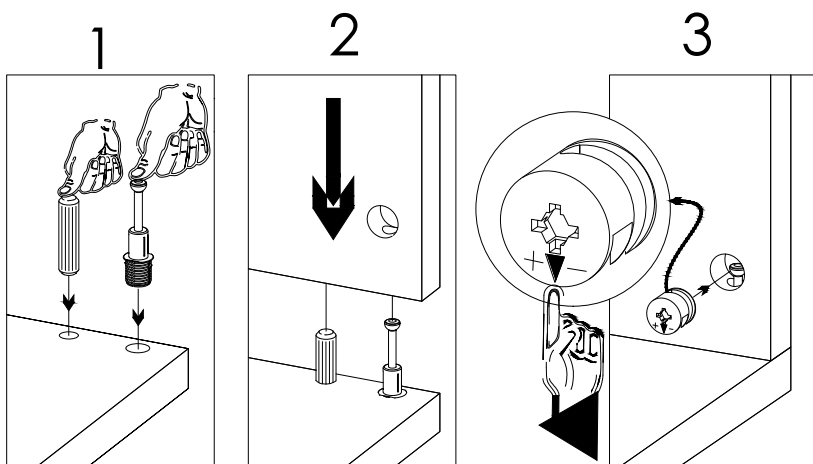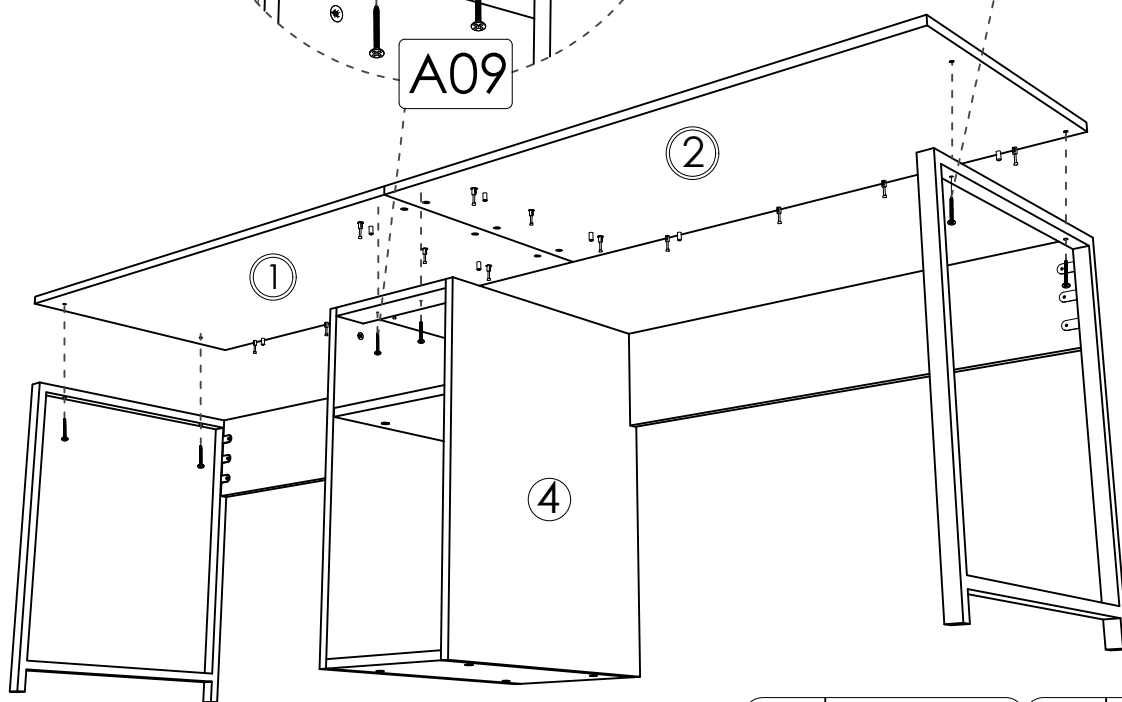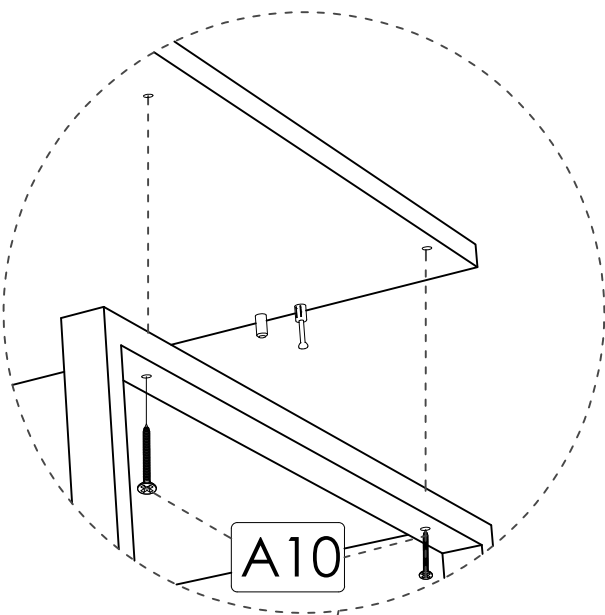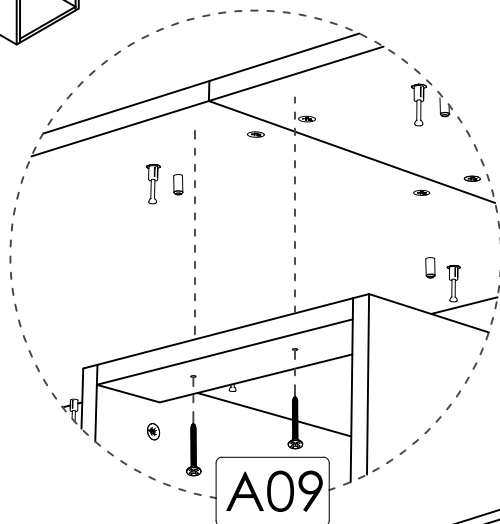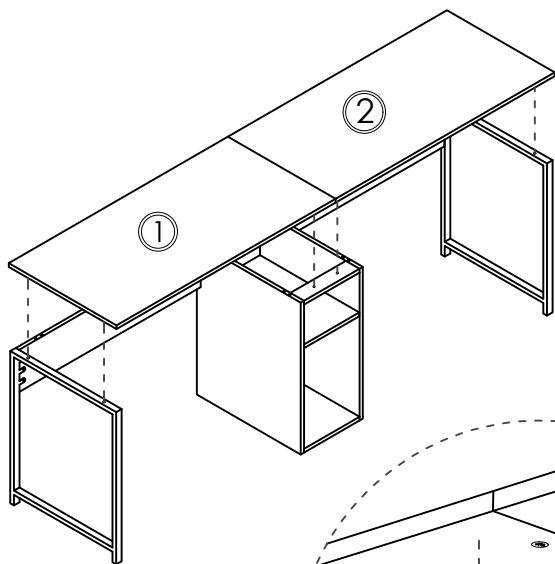


A19	
	4x
A04	
	26x
A05	
	32x
A06	
	36x



A09	4x30 screw	A10	4x35 screw (black)
	2x		4x
A04		A05	
	26x		32x
A06			
	36x		

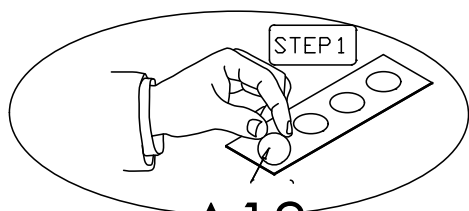

A18

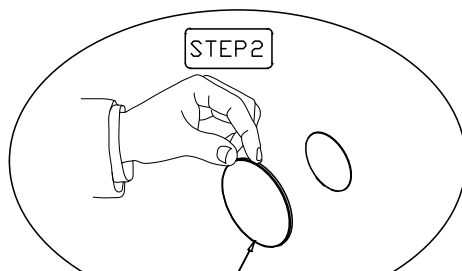

A18

