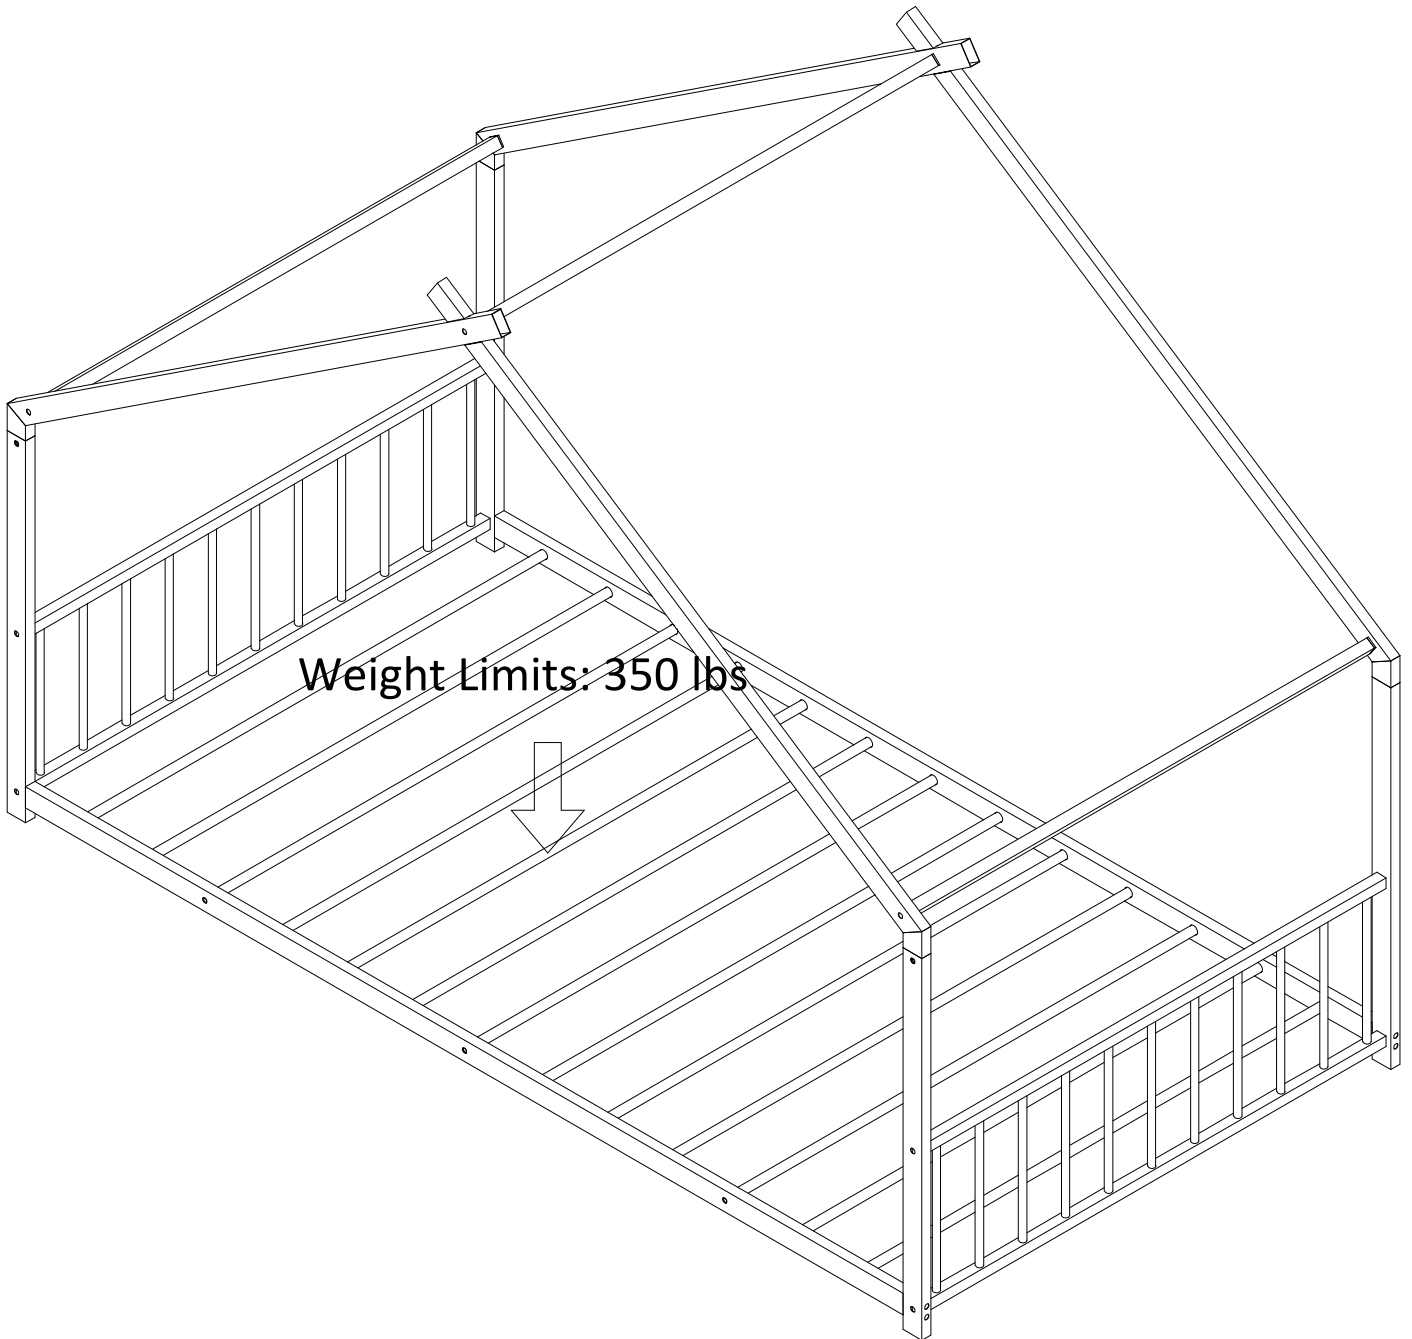



ASSEMBLY INSTRUCTIONS

SKU CODE: MF305886




BUNK BED

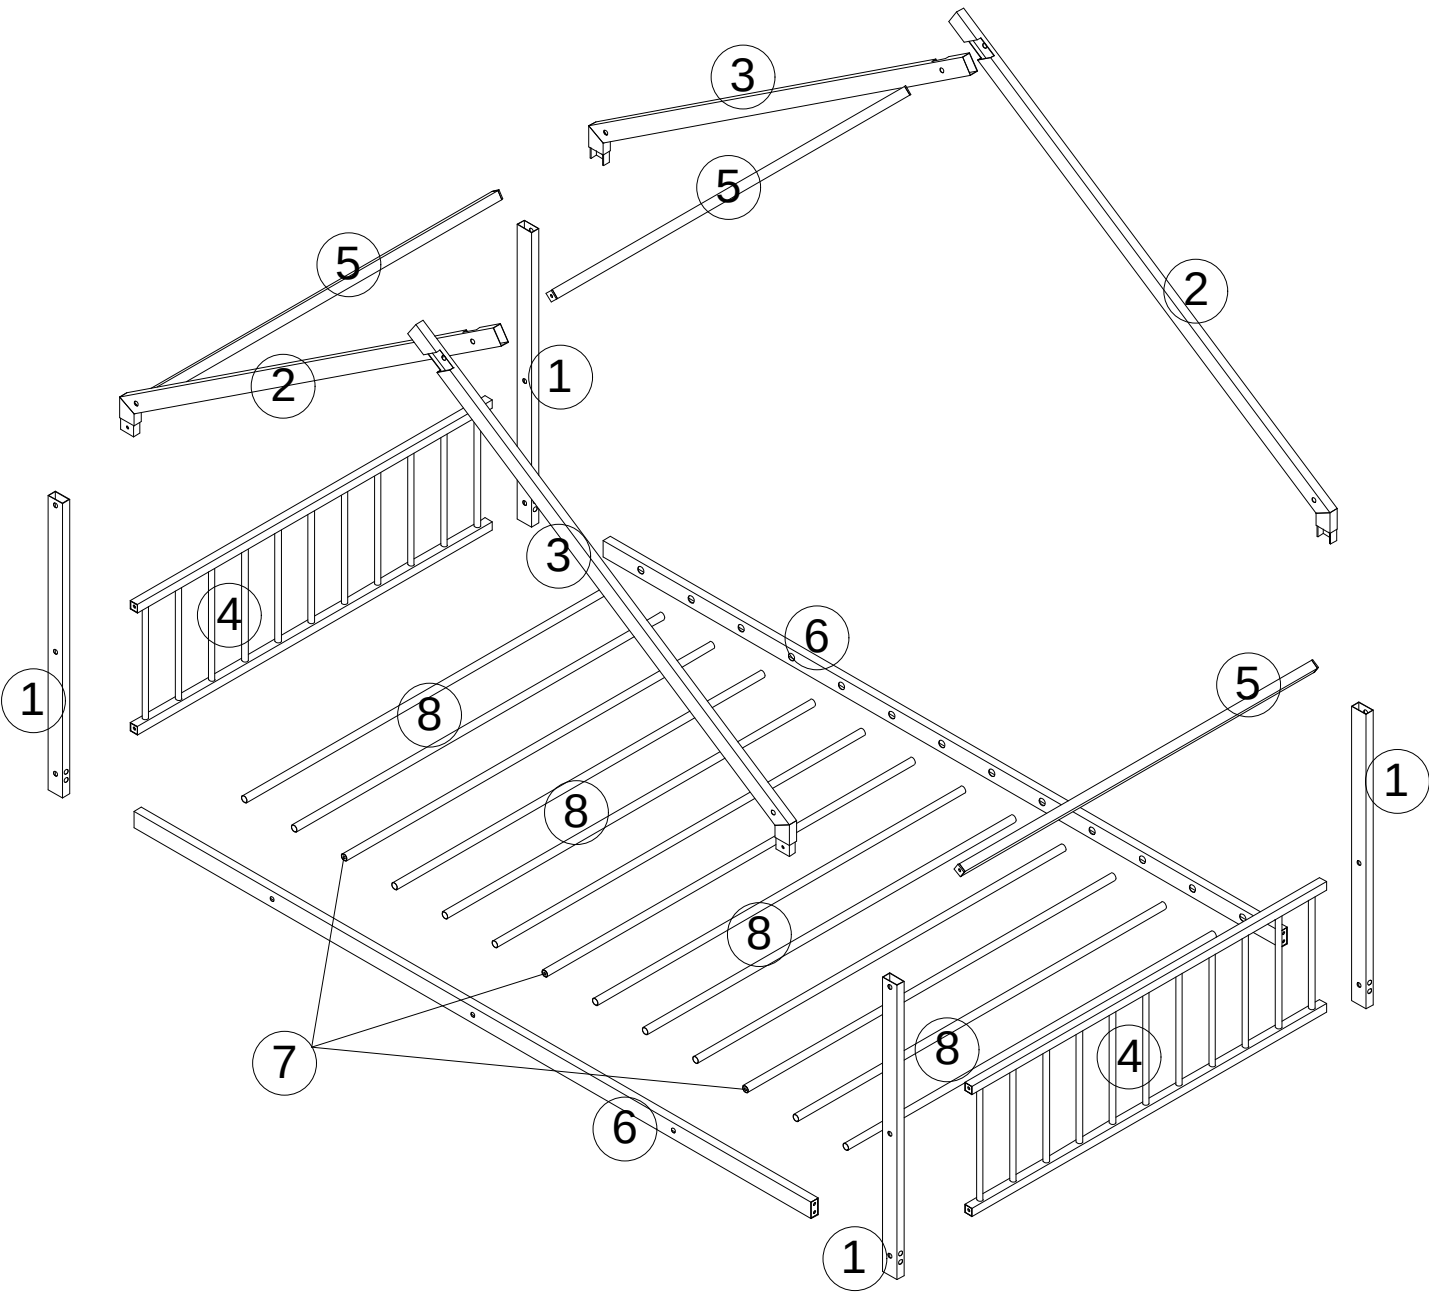IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY



ASSEMBLY INSTRUCTIONS

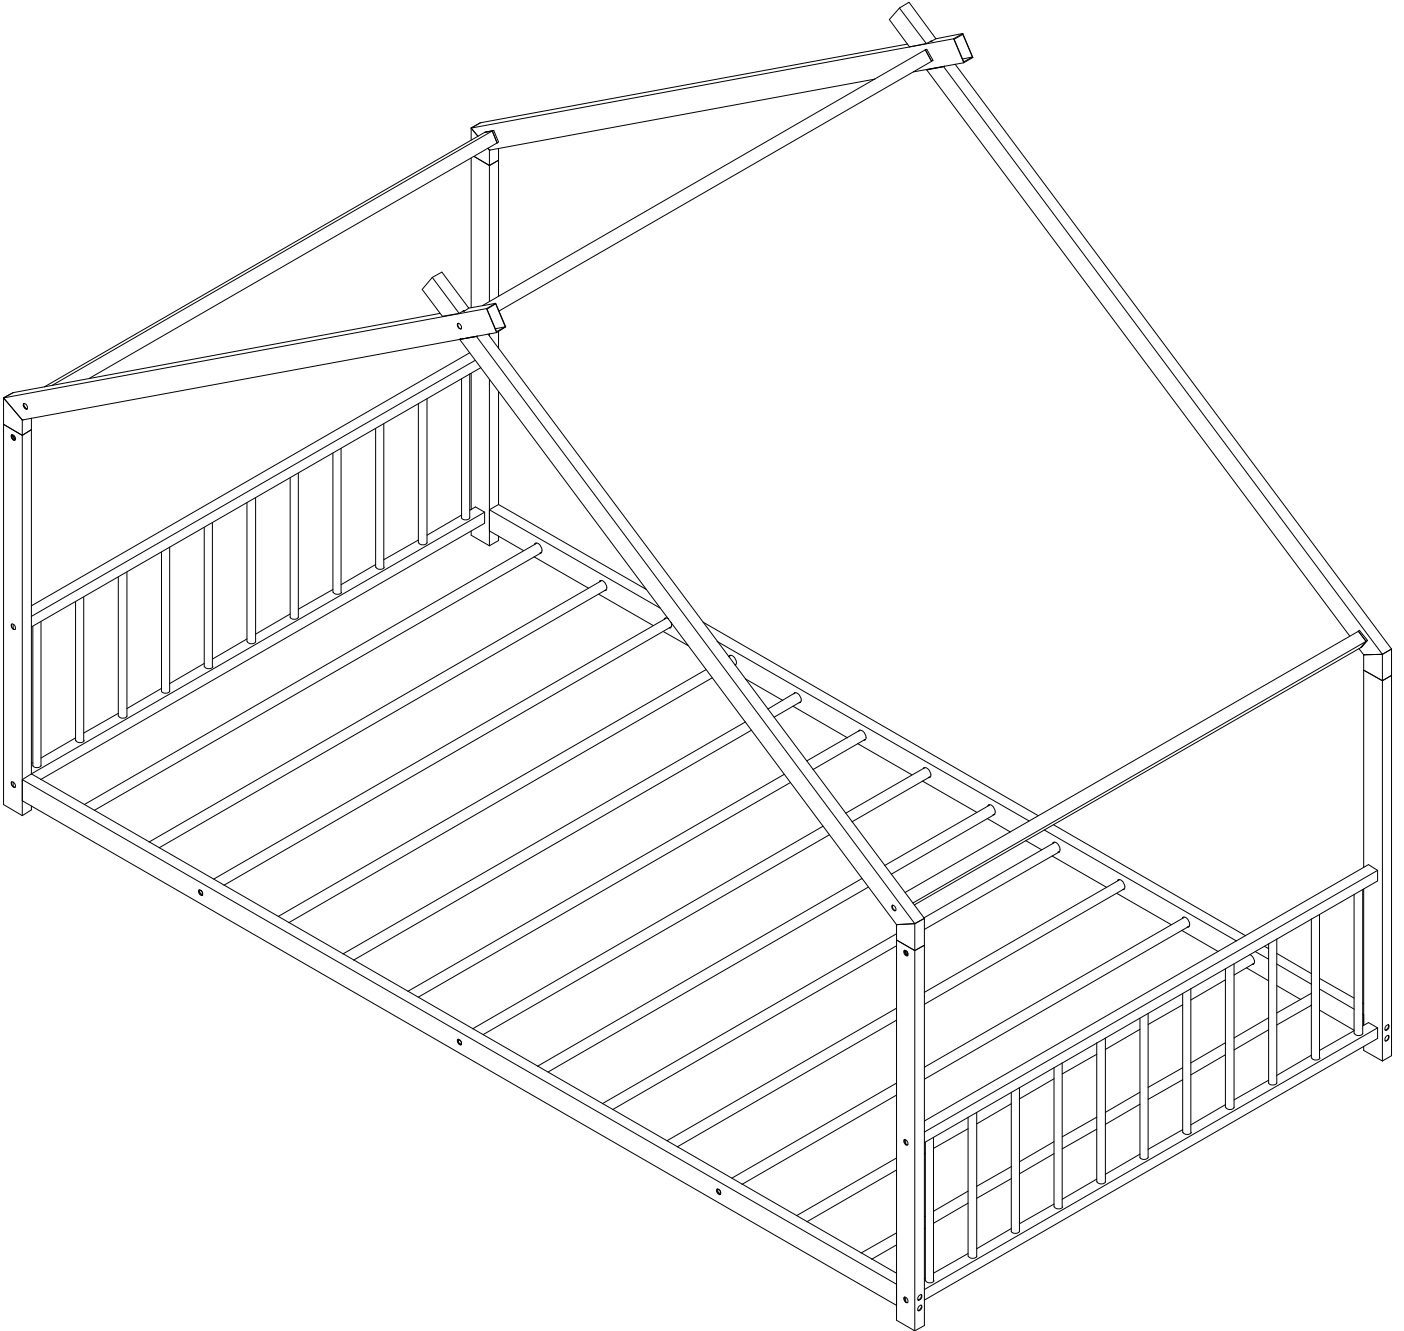BUNK BED










Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.




Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

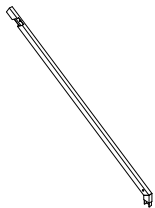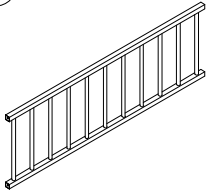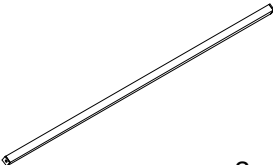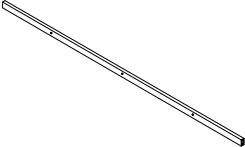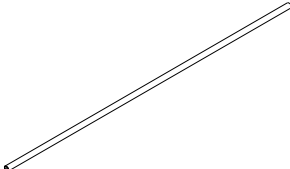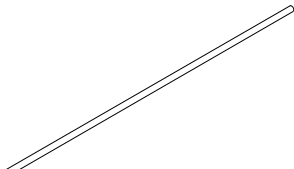PART LIST MF305886


1 Vertical bar  4 pcs	2 Roof bar  2 pcs	3 Roof bar  2 pcs	4 Headboard  2 pcs
5 Horizontal bar  3 pcs	6 Horizontal bar  2 pcs	7 Slats  3 pcs	8 Slats  10 pcs

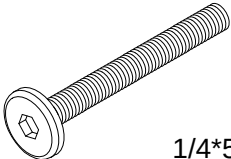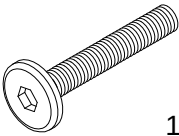HARDWARE LIST MF305886

A Bolts  1/4*55 8 pcs	B Bolts  1/4*40 14 pcs	C Bolts  1/4*18 10 pcs	D Allen Key  4*59 1 pcs
--	---	--	--


BUNK BED
ASSEMBLY INSTRUCTIONS
ITEM: MF305886

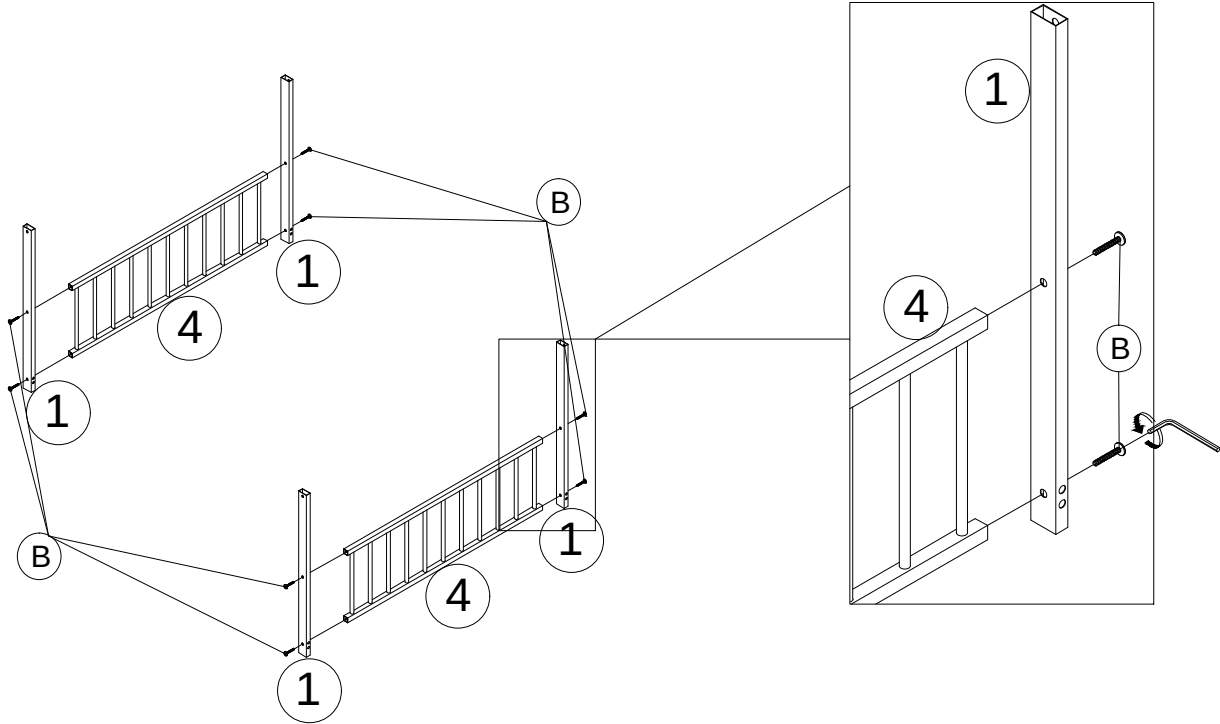STEP 1



B		1/4*40	8 pcs
---	---	--------	-------

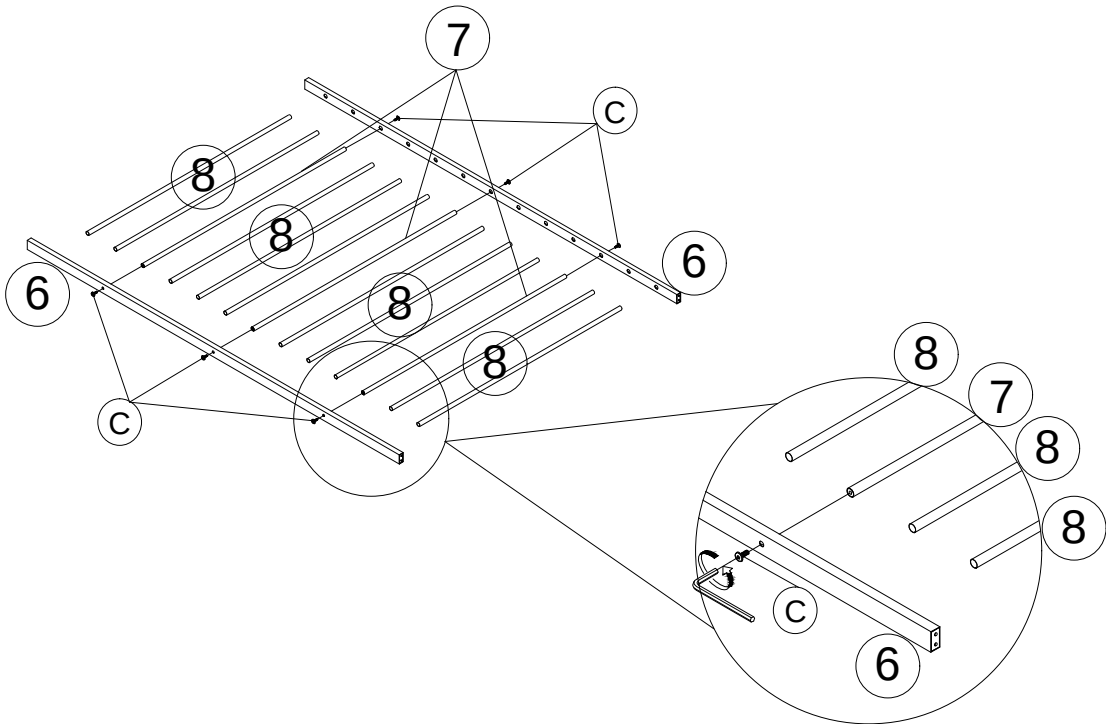
STEP 2




C		1/4*18	6 pcs
---	---	--------	-------


BUNK BED
ASSEMBLY INSTRUCTIONS
ITEM: MF305886

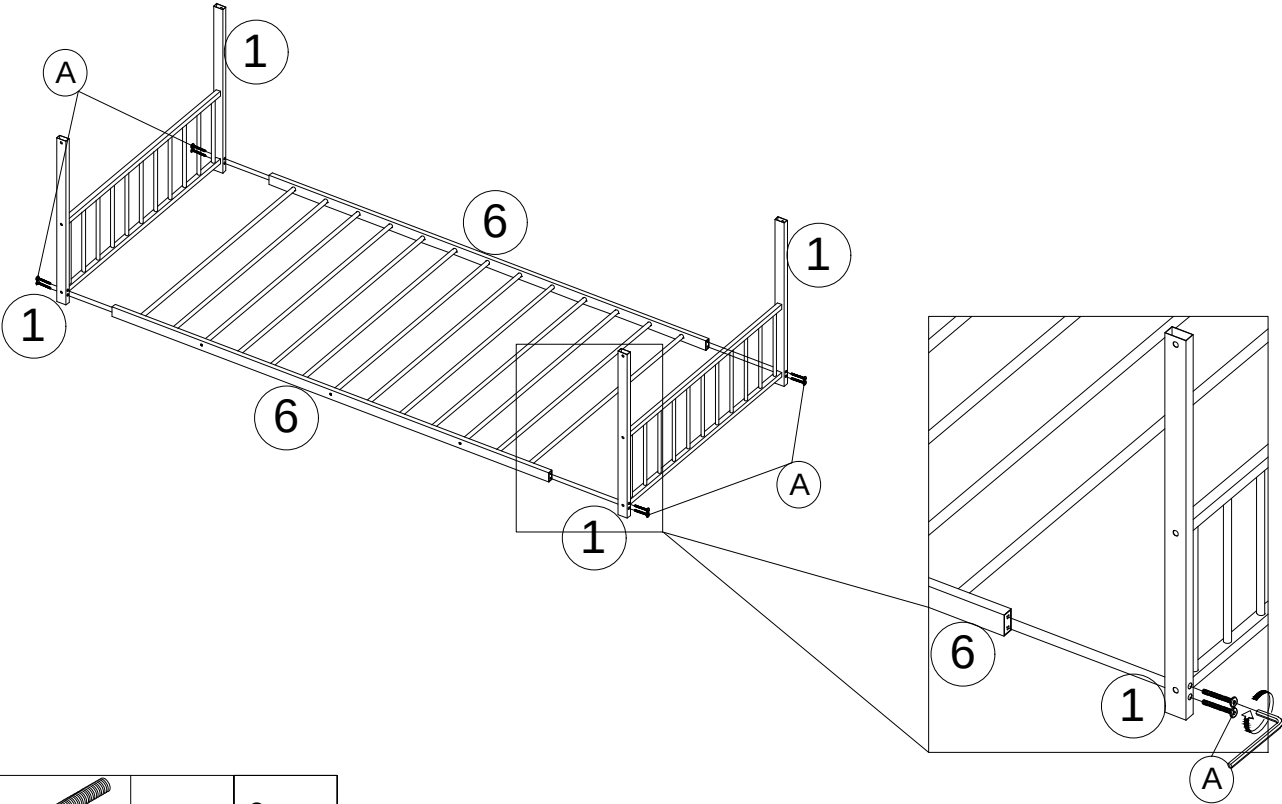STEP 3



A		1/4*55	8 pcs
---	---	--------	-------

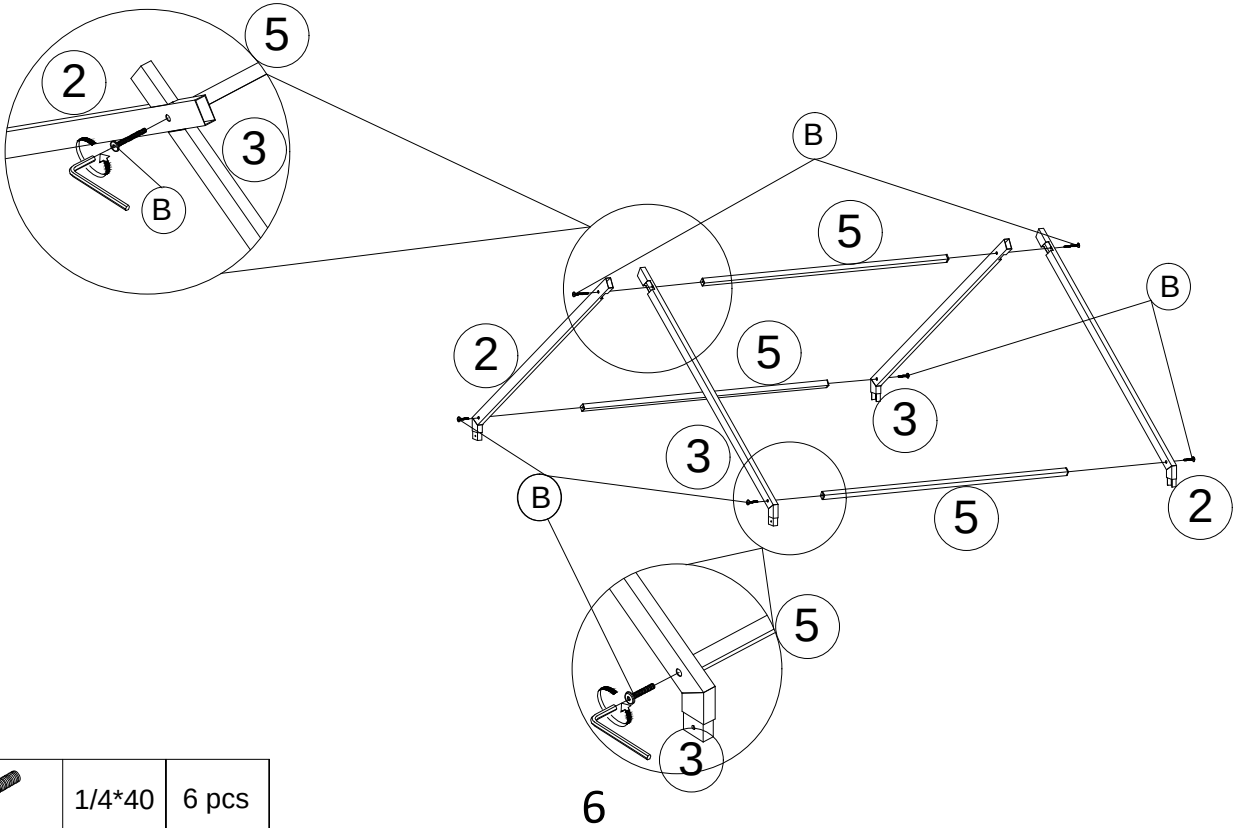
STEP 4



B		1/4*40	6 pcs
---	---	--------	-------

BUNK BED
ASSEMBLY INSTRUCTIONS
ITEM: MF305886

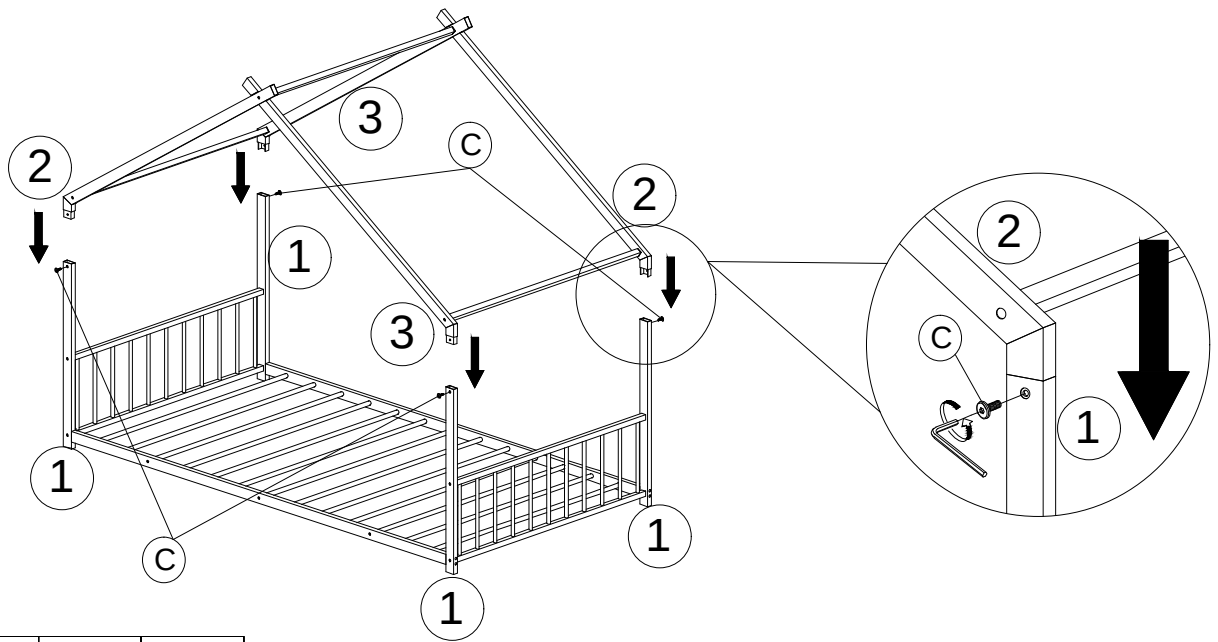STEP 5



C		1/4*18	4 pcs
---	---	--------	-------

COMPLETE

