

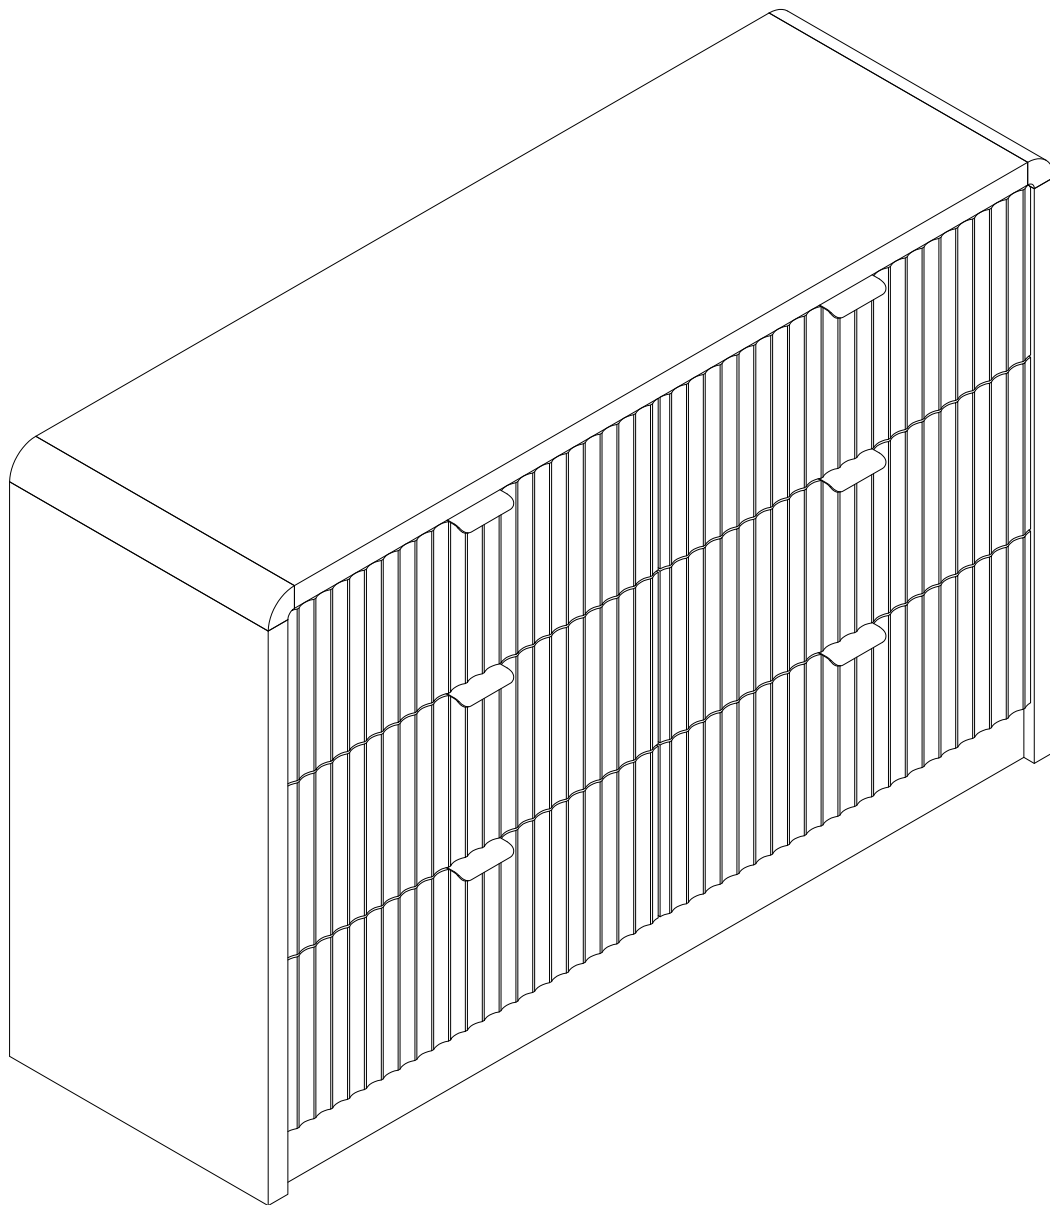
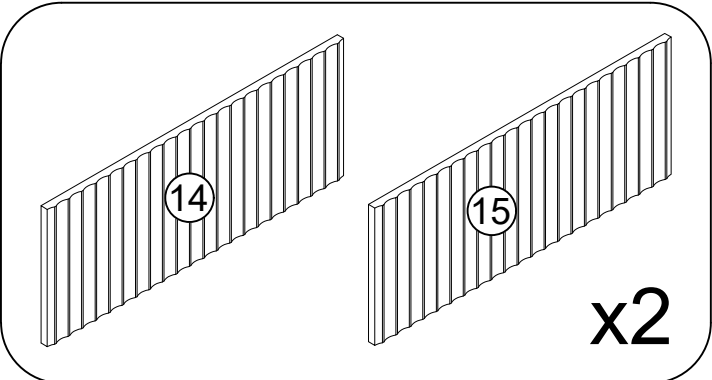


Dressers & Chests of Drawers
















Installation Instructions

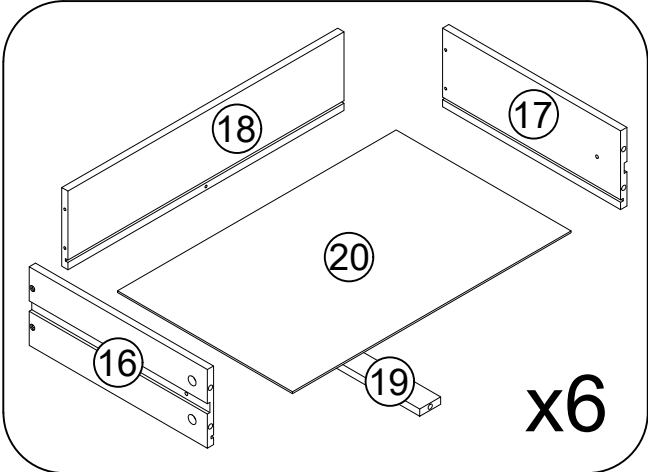






Disassemble Diagram

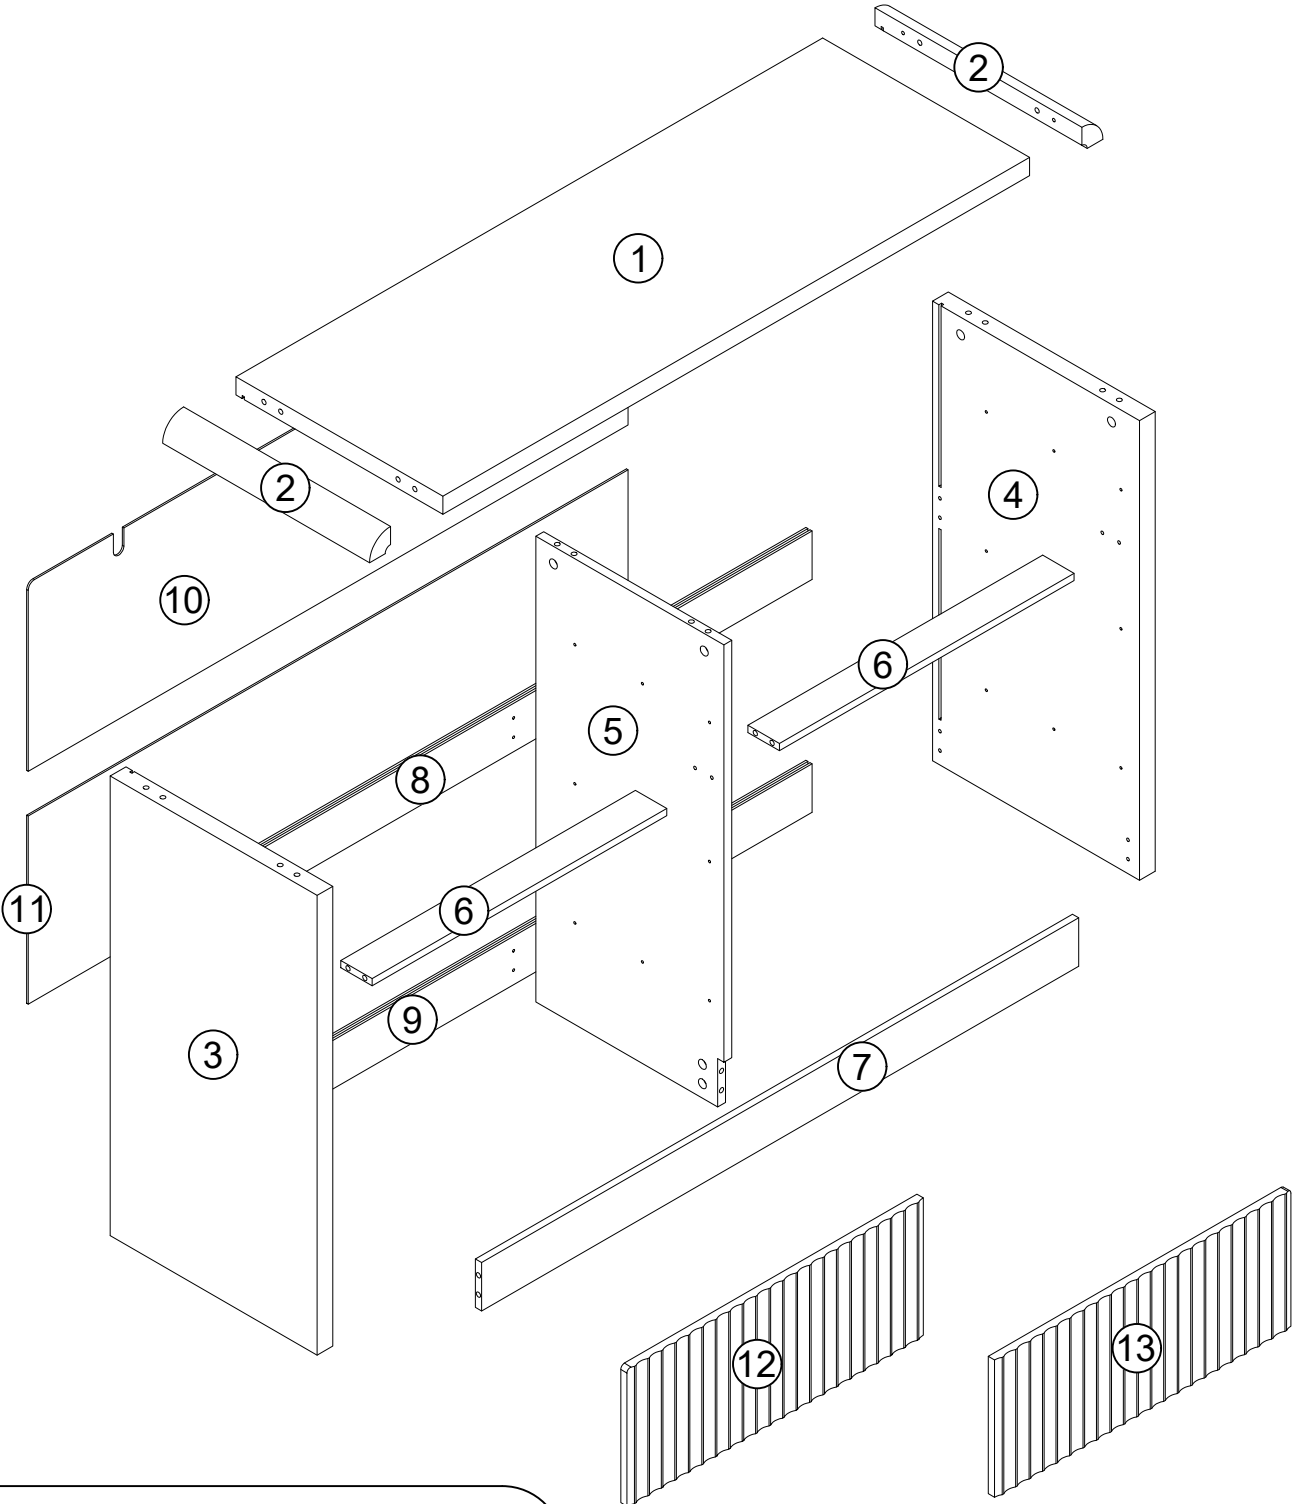




Components Part List

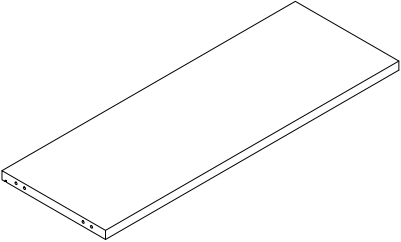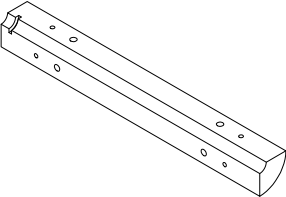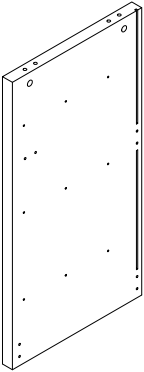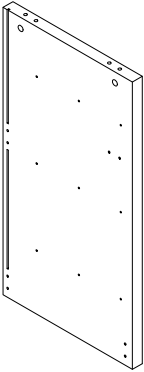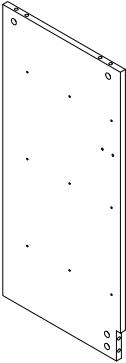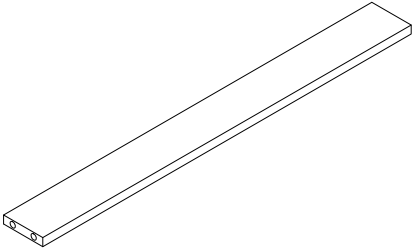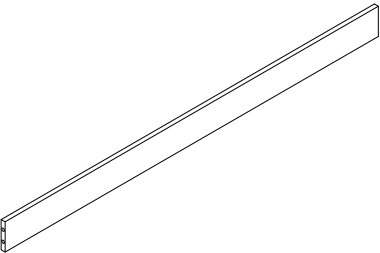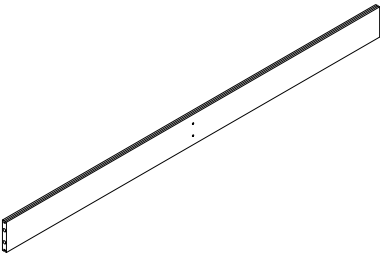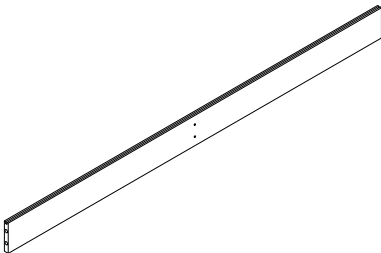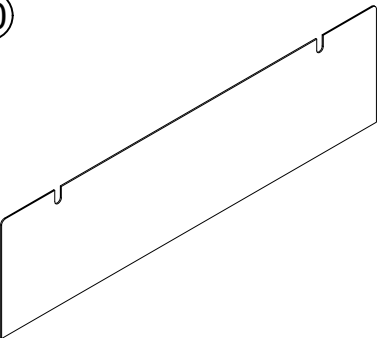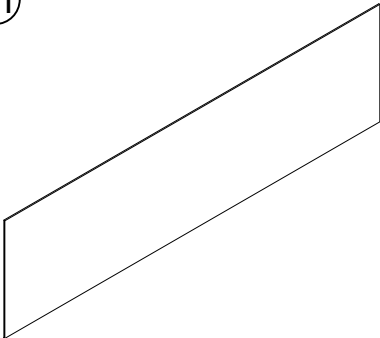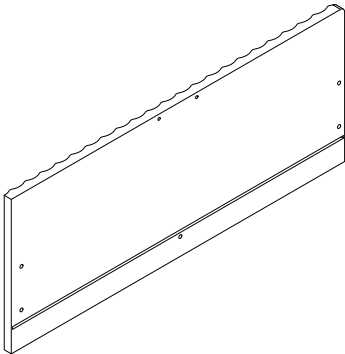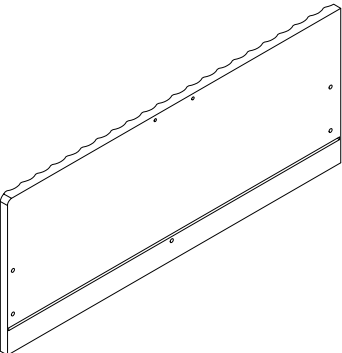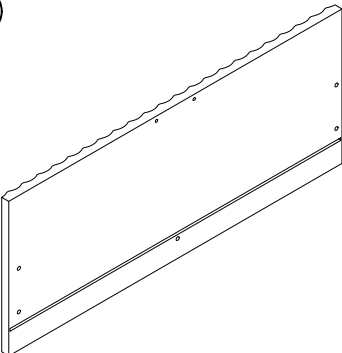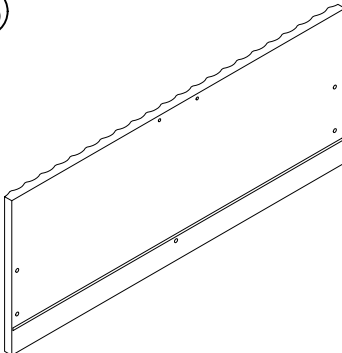①  x1	②  x2	③  x1
④  x1	⑤  x1	⑥  x2
⑦  x1	⑧  x1	⑨  x1
⑩  x1	⑪  x1	⑫  x1
⑬  x1	⑭  x2	⑮  x2

Components Part List

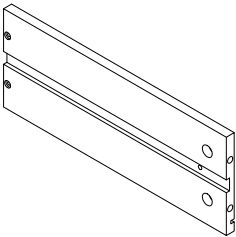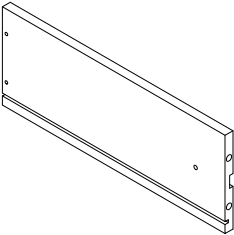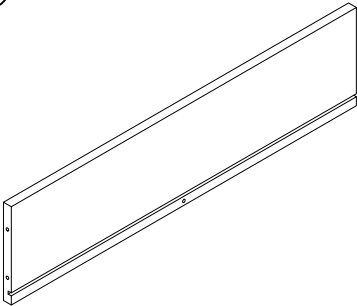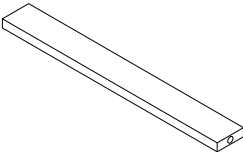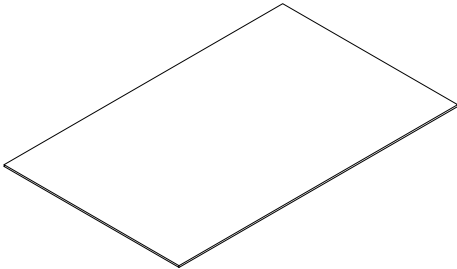①6  x6	①7  x6	①8  x6
①9  x6	②0  x6	










Installation Recommendations

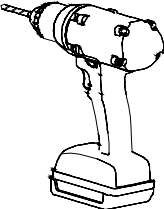		
---	---	---





Note:

- 1.Recommend using tools such as a screwdriver, electric drill, and small hammer for the installation.
- 2.Recommend that two people collaborate to complete the installation.

Hardware Part List

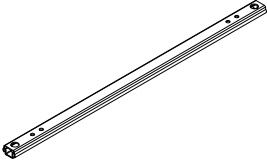A	x62+3	B	x62+3	C	x10+1	D	x12
							
M6x35mm		M15x10mm		M6x30mm			
E	x48+2	F	x6	G	x6+1	H	x30+2
							
M3x12mm				M4x35mm		M4x30mm	
I	x6	J	x12+1	K	x12+1	L	x12+1
							
				M3x16mm		M4x10mm	
M	x2	N	x2	O	x2		
							
M4x12mm							

STEP 1

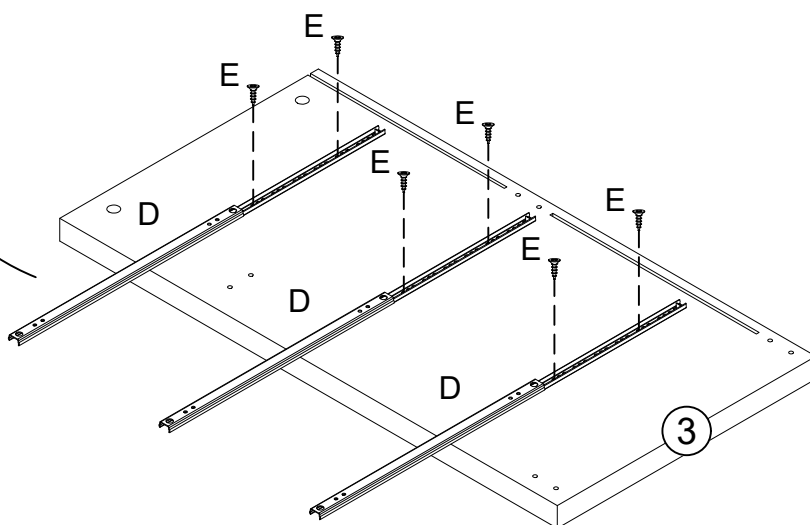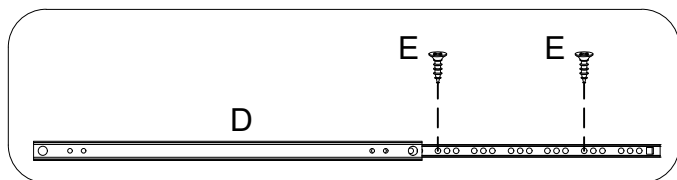
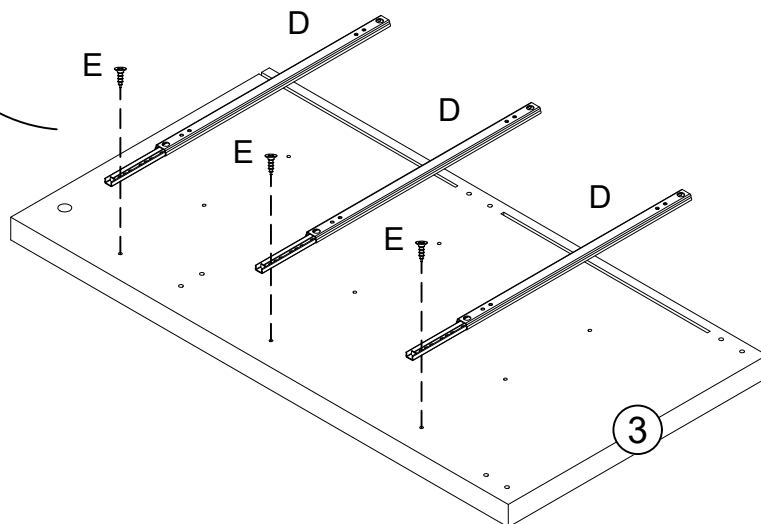
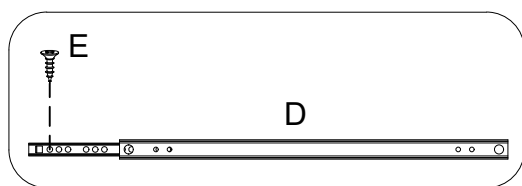


Note:

For the left and right side panels (3 & 4), install the slides starting from the first hole position.


	Dx3
	Ex9

STEP 2

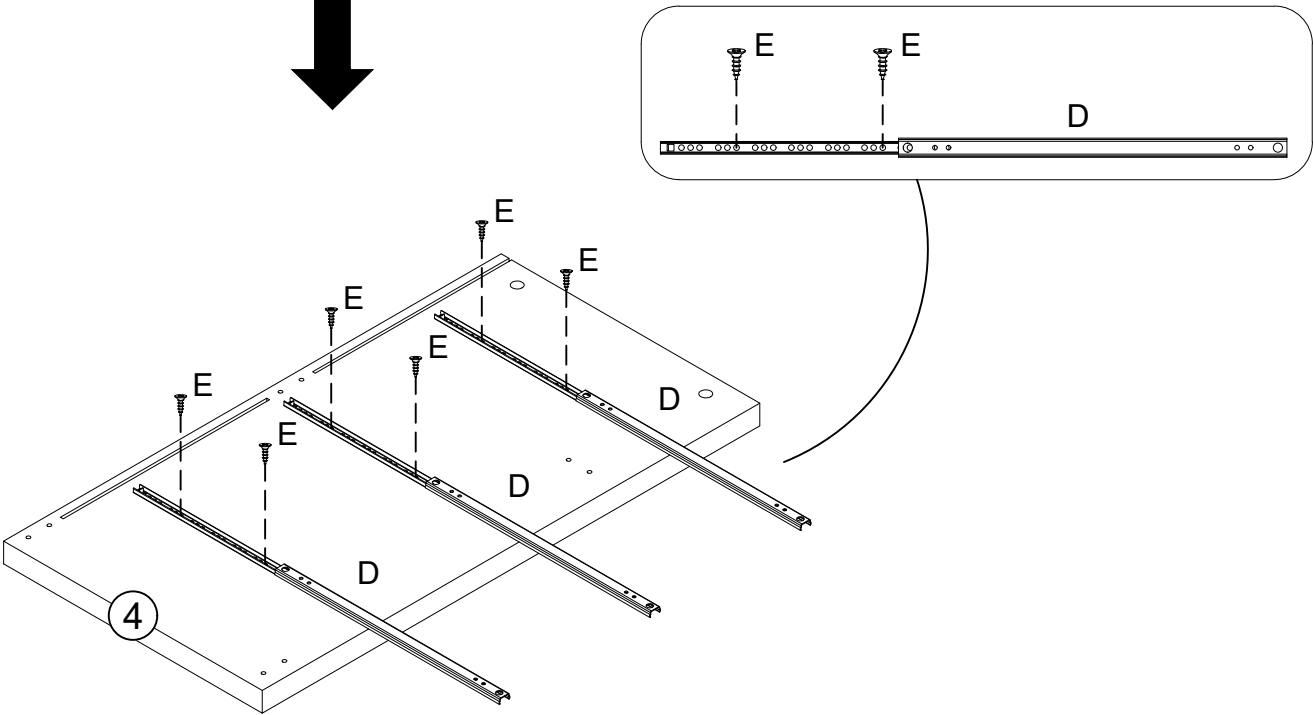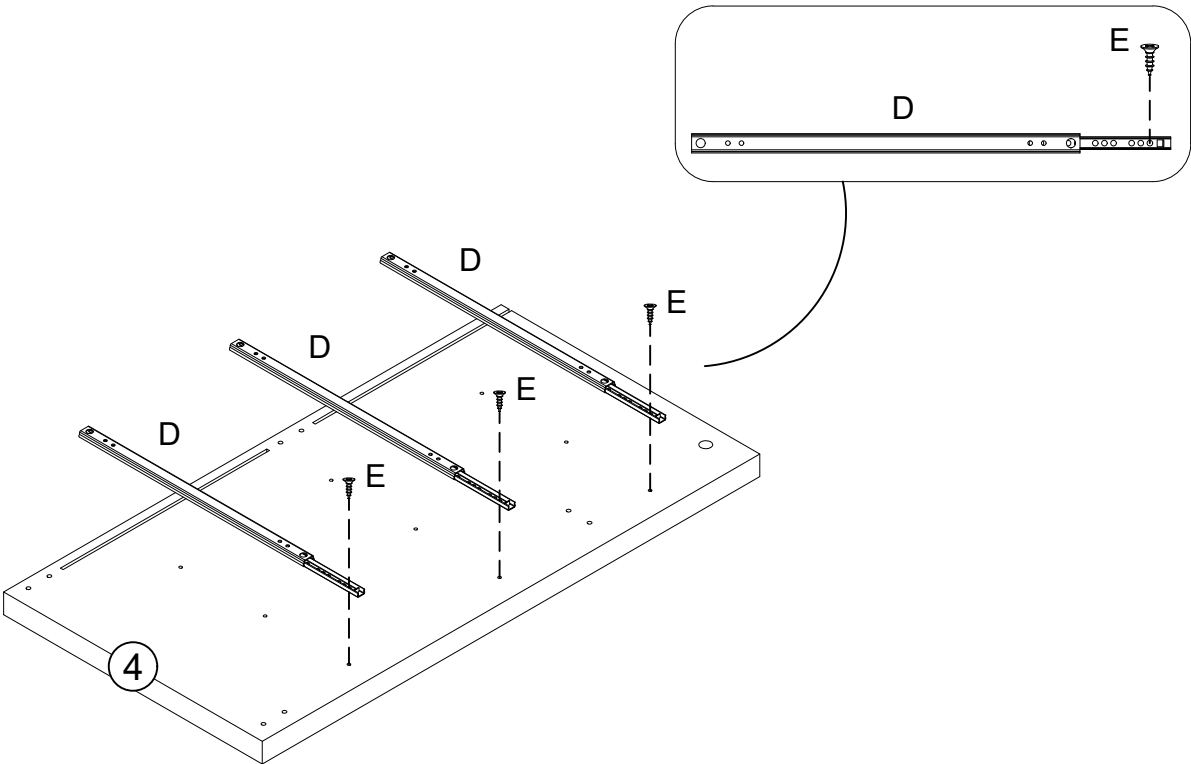



	Dx3
	Ex9

STEP 3

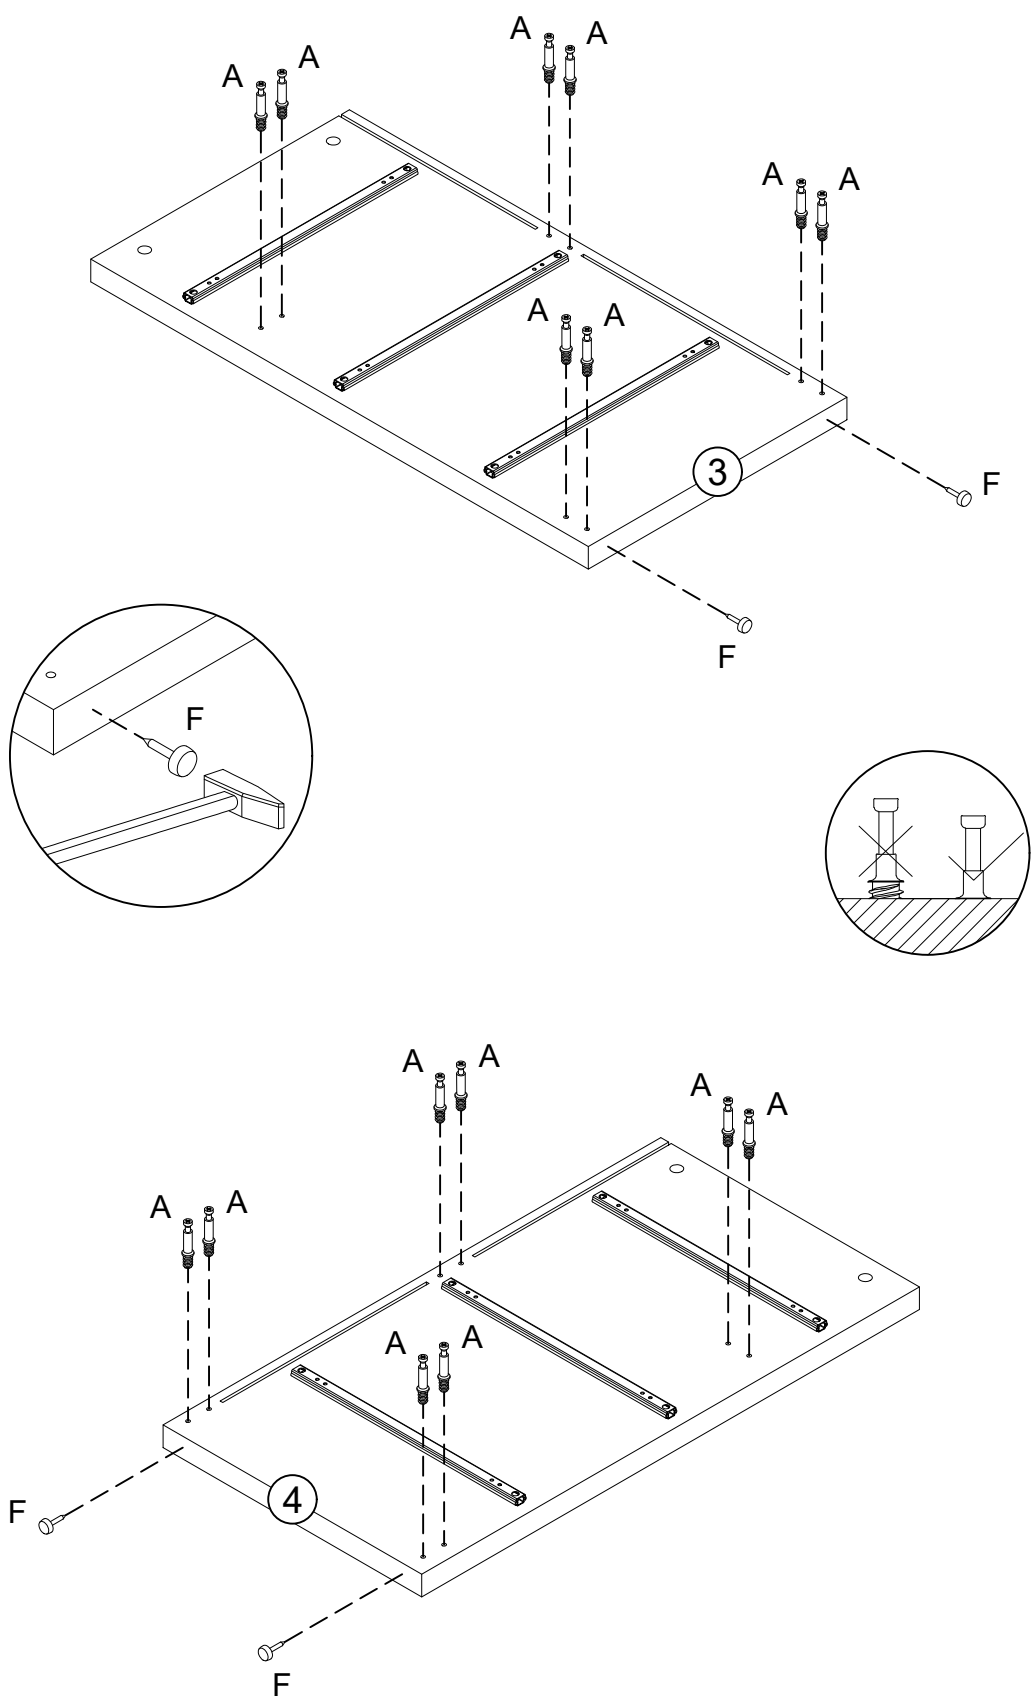

	Ax16
	Fx4

STEP 4


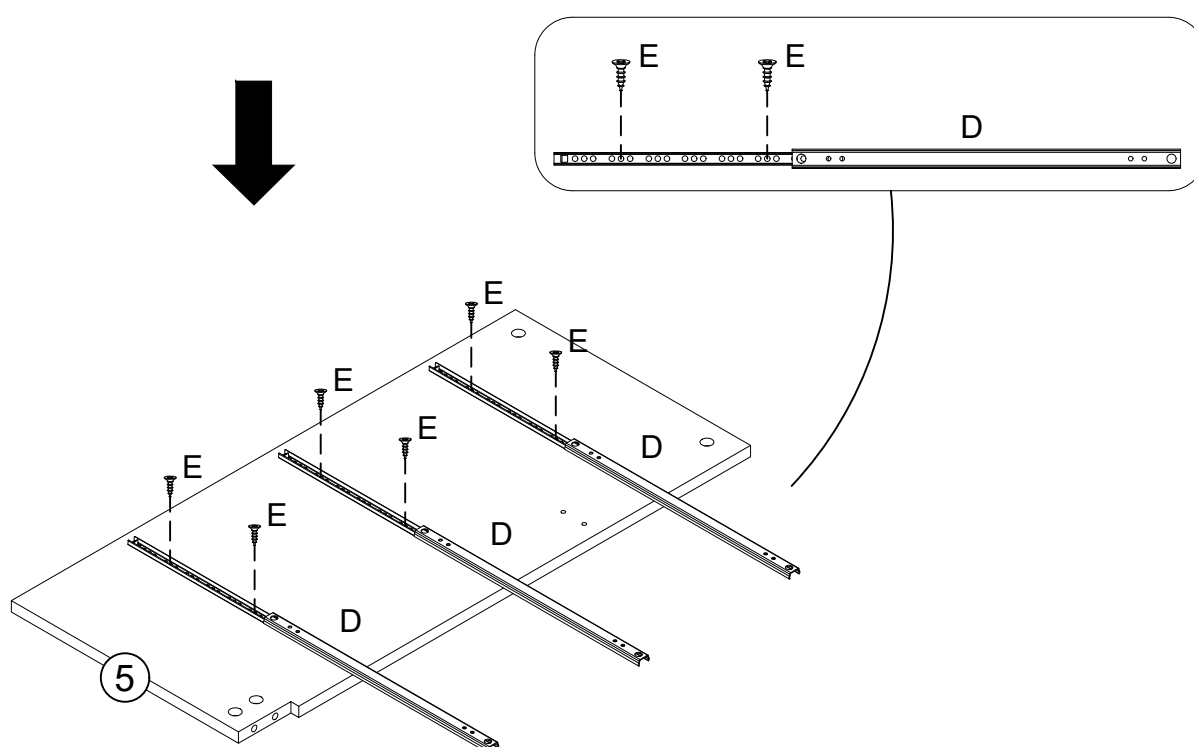
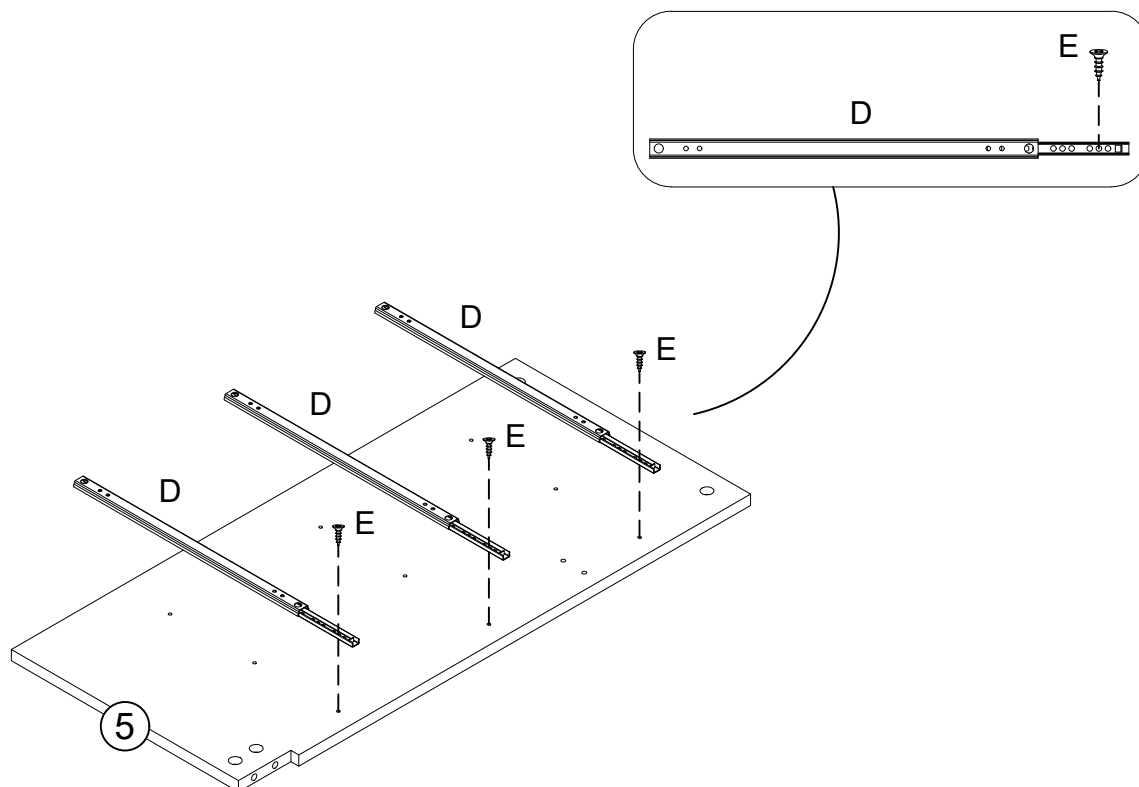


Note:

For the middle vertical panel (5), install the left slide starting from the second hole position, and install the right slide starting from the first hole position.


	Dx3
	Ex9

STEP 5

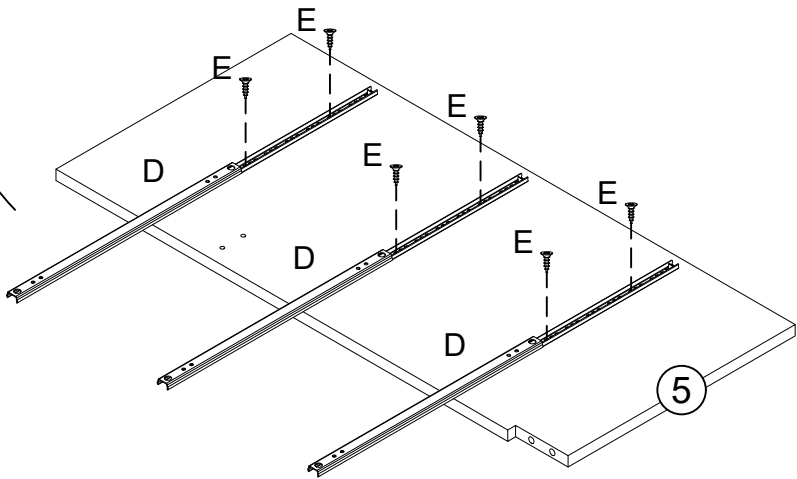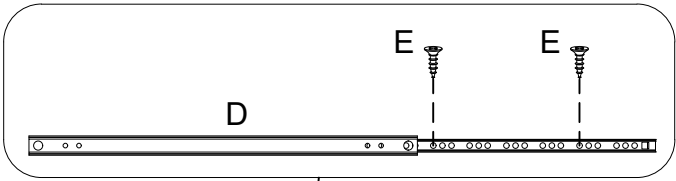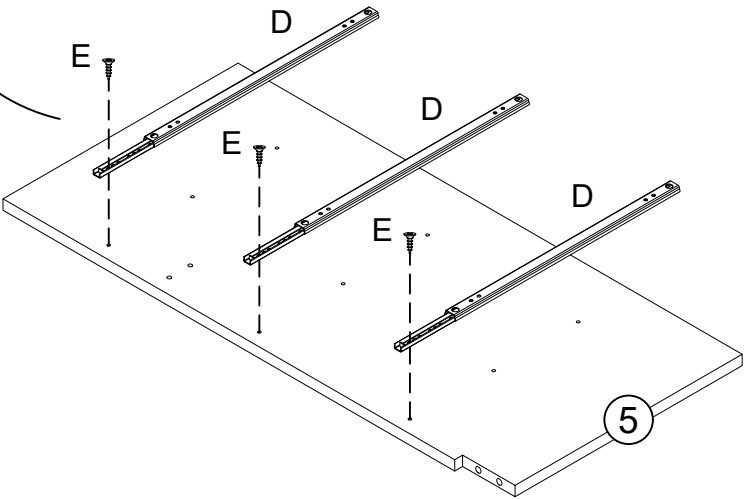


	Dx3
	Ex9

STEP 6

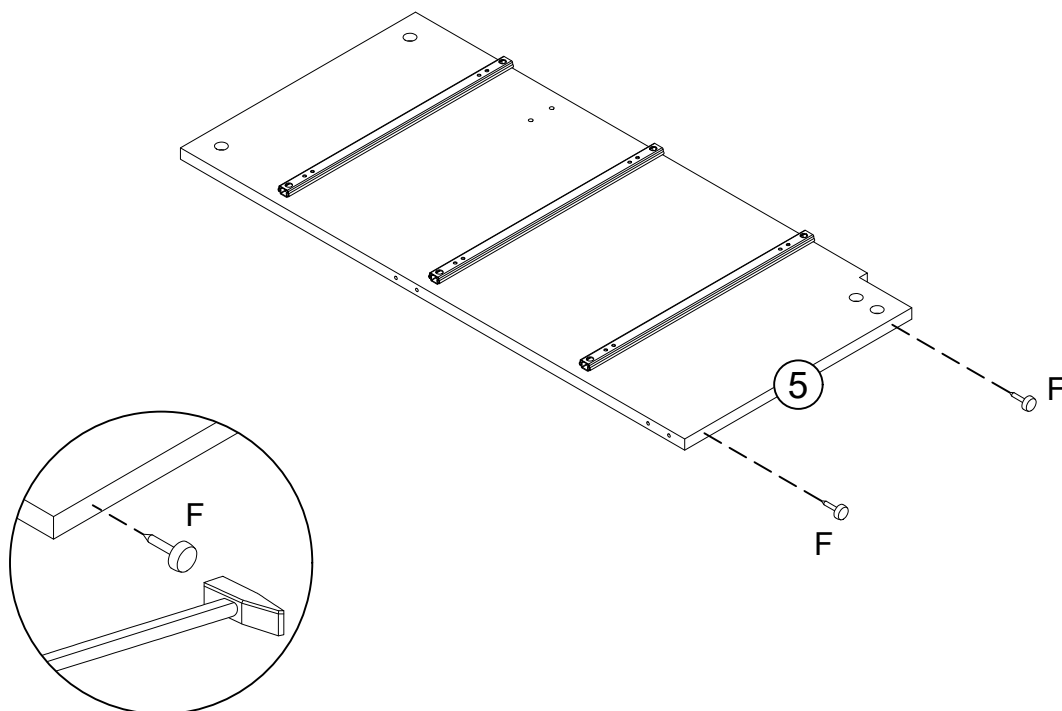


Fx2

STEP 7

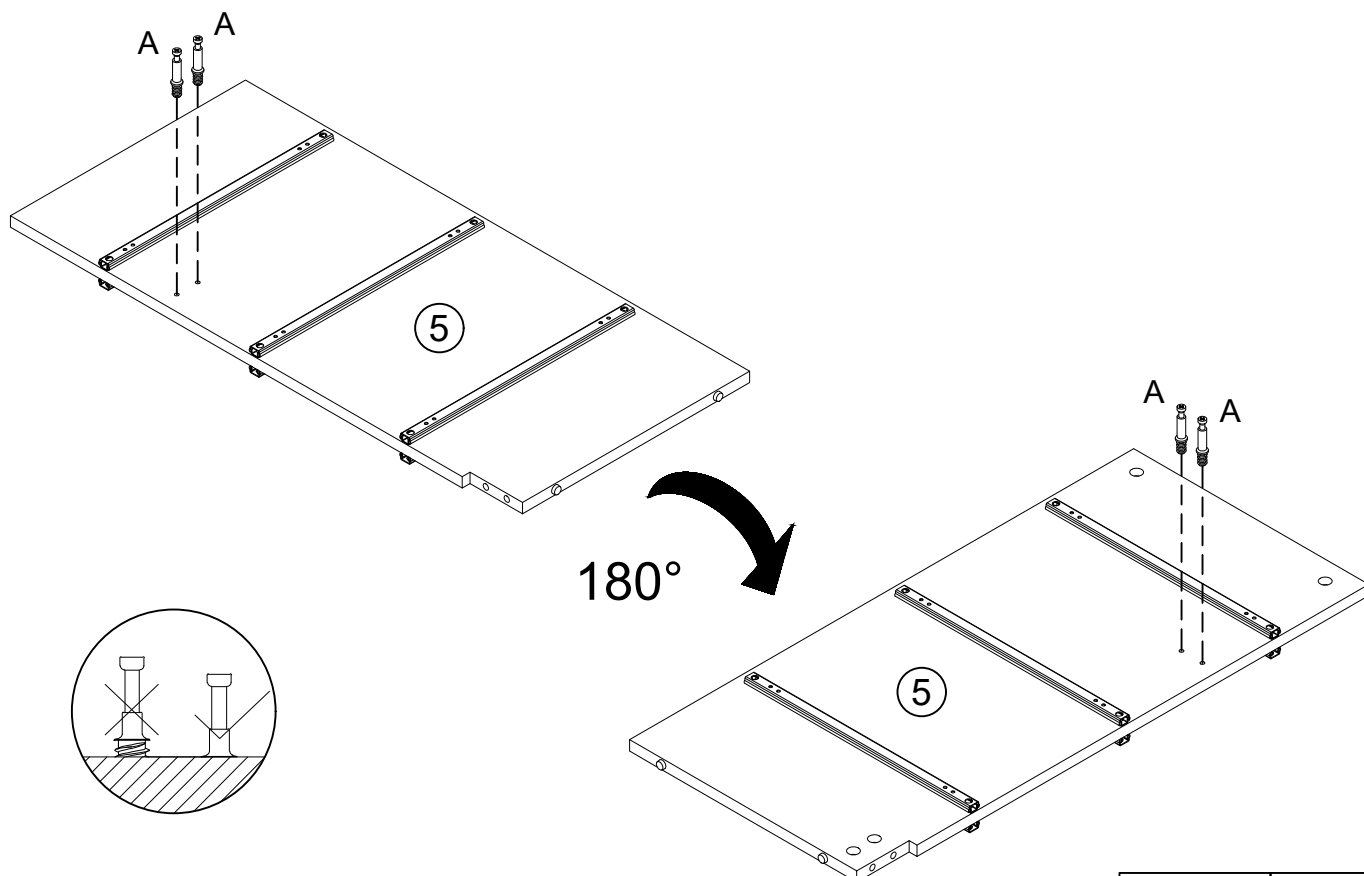


Ax4

STEP 8

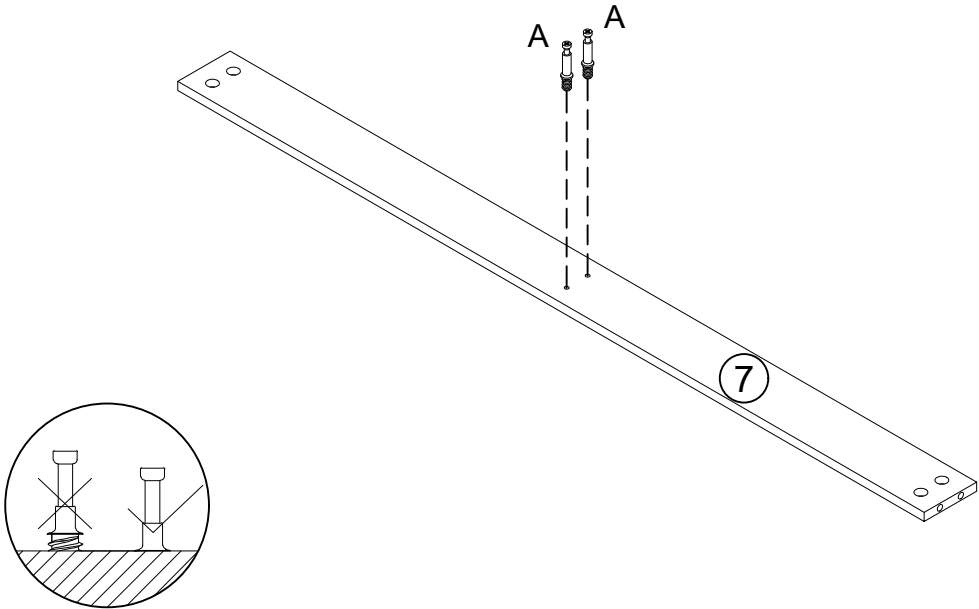


Ax2

STEP 9

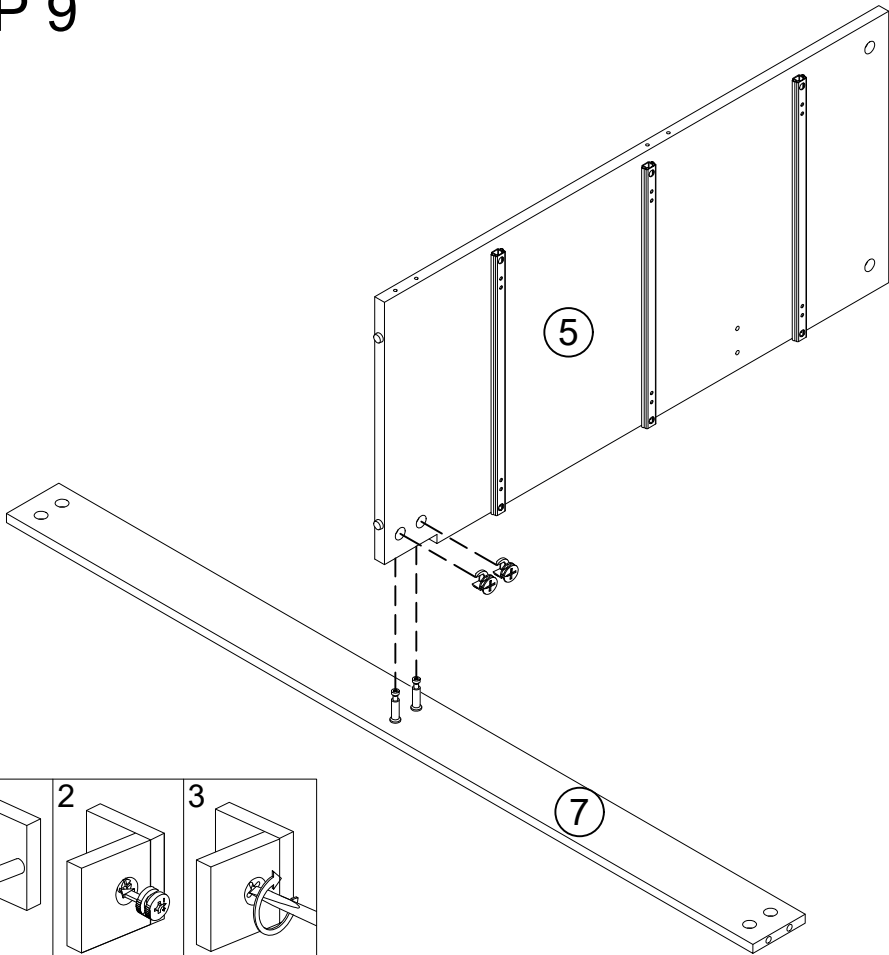


Bx2

STEP 10

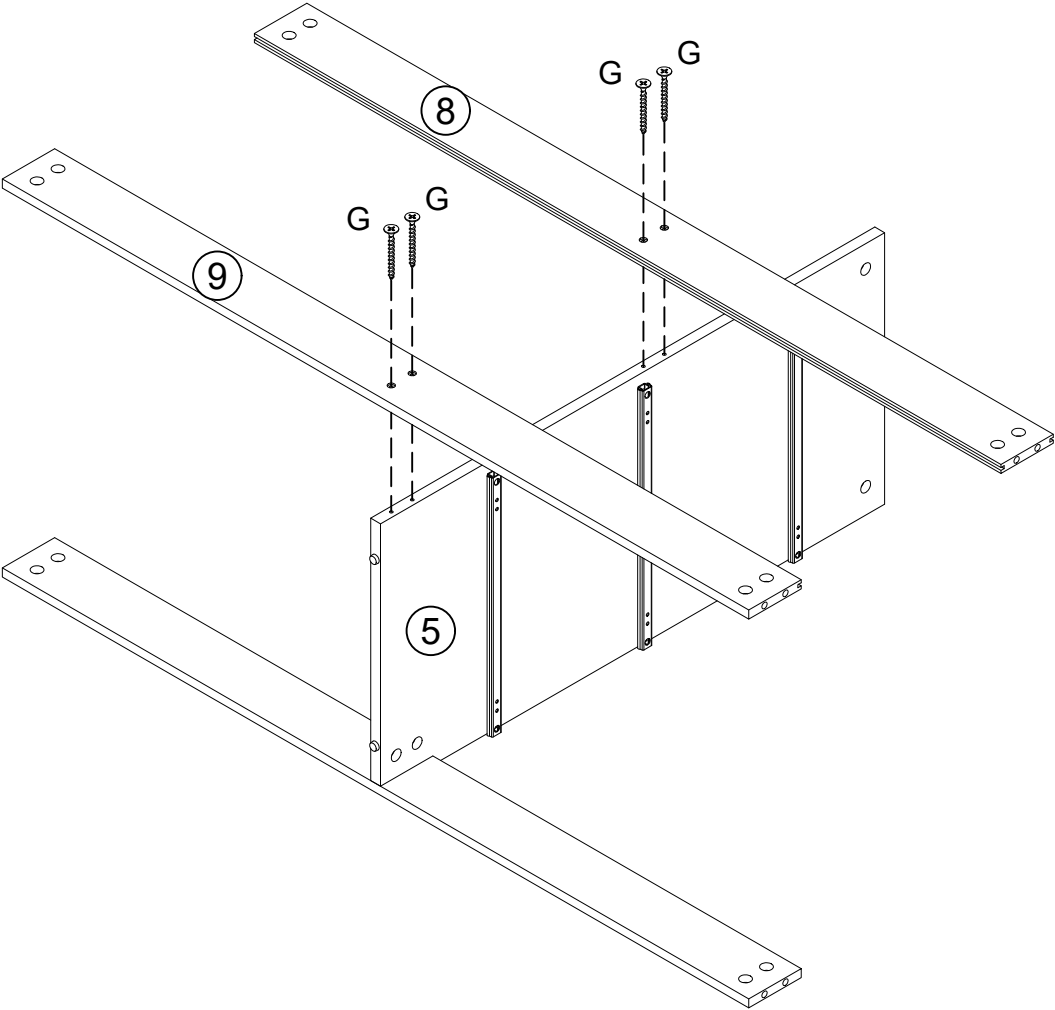


Gx4



STEP 11

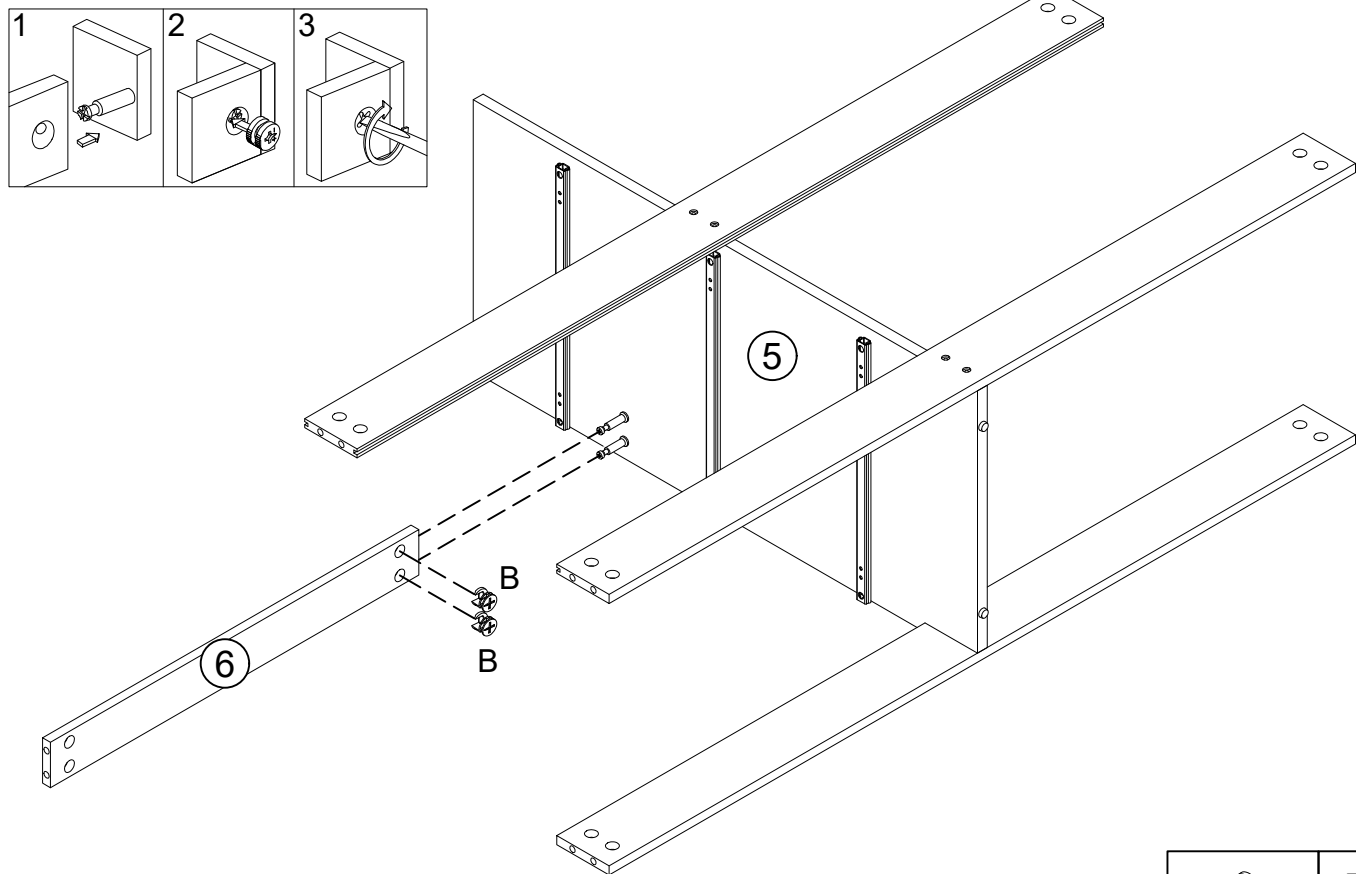

STEP 12

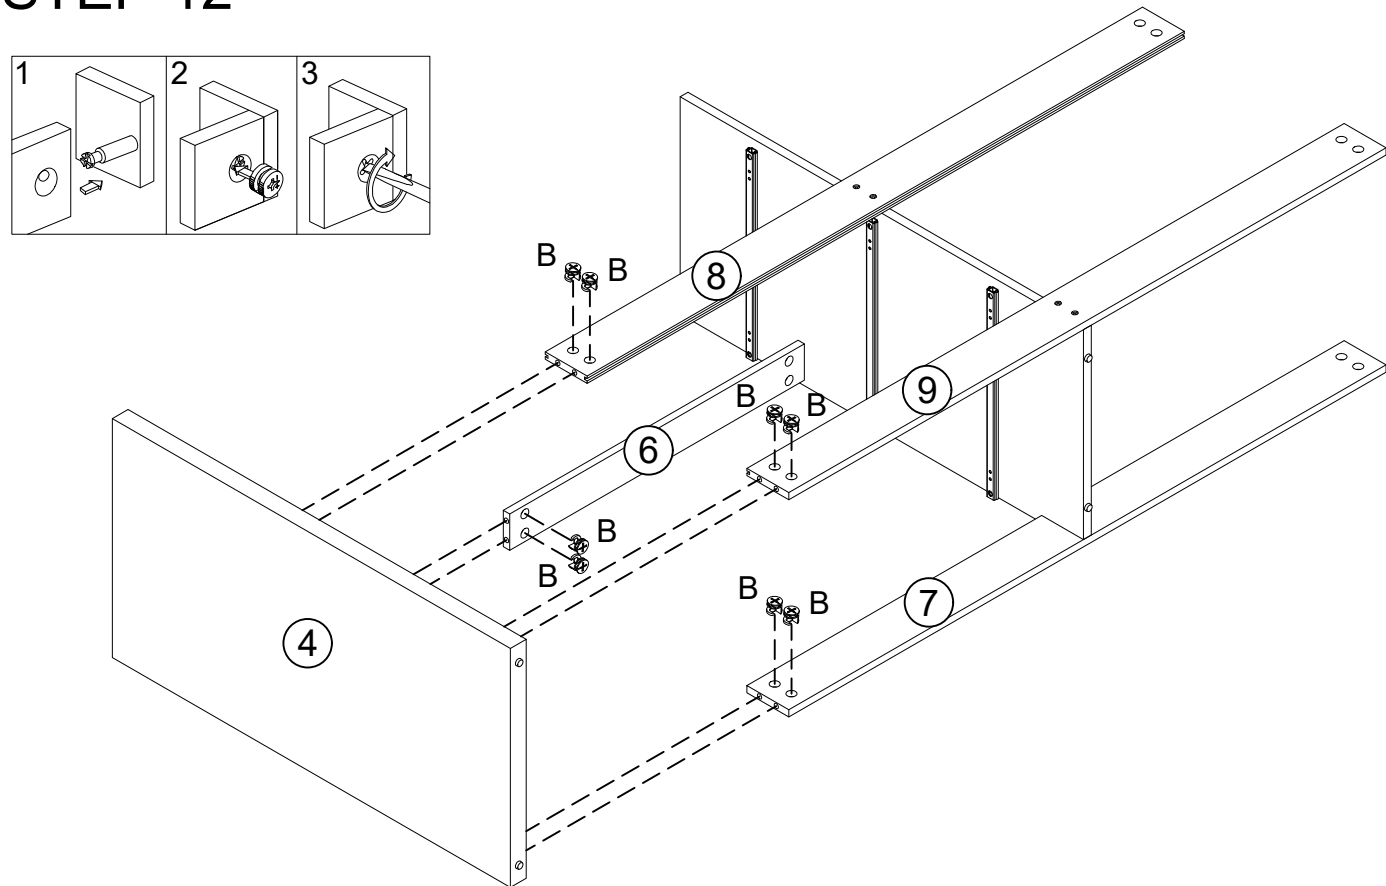


STEP 13

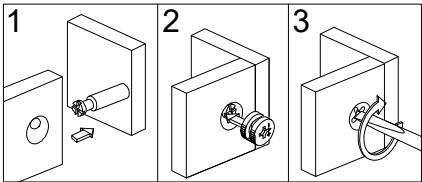
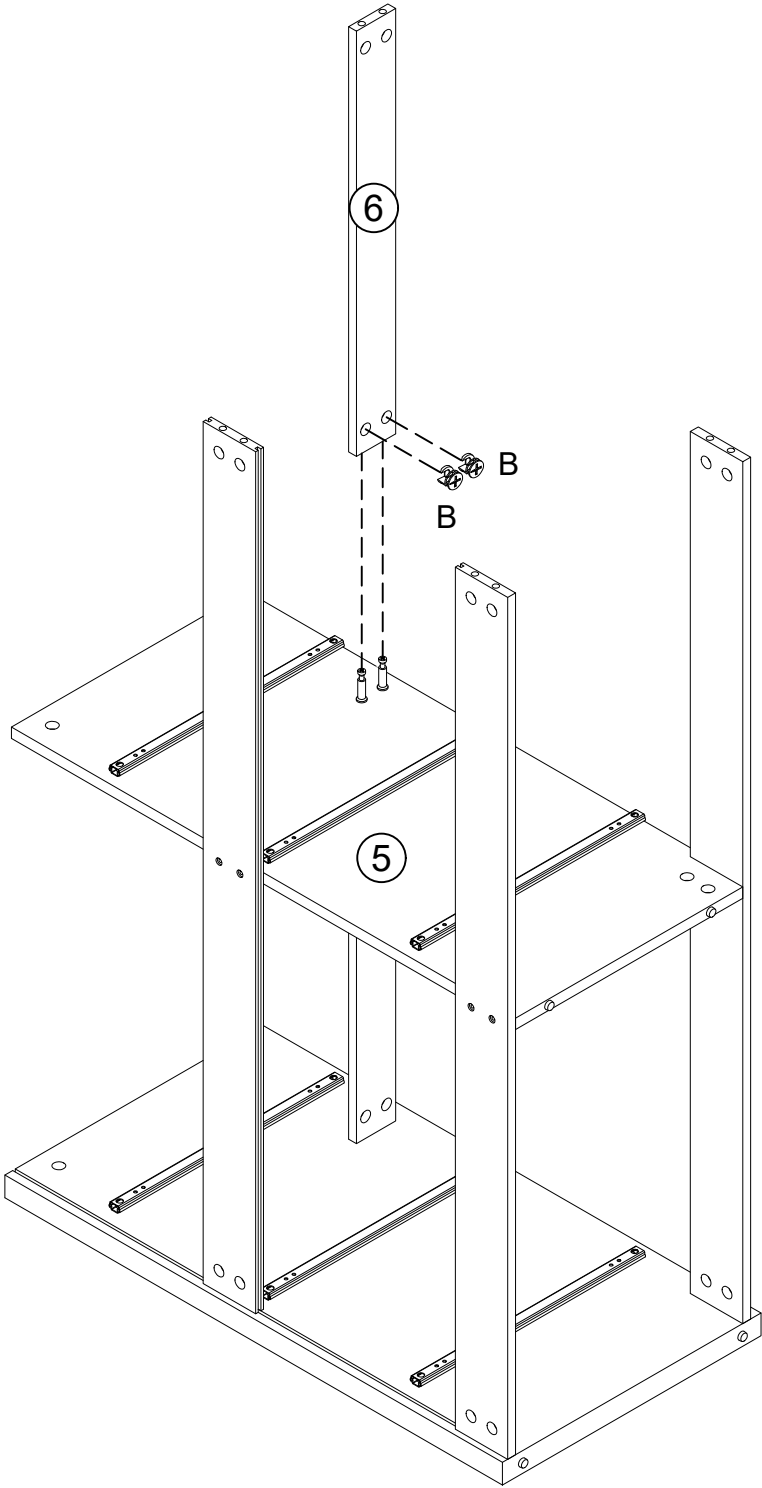


Bx2

STEP 14

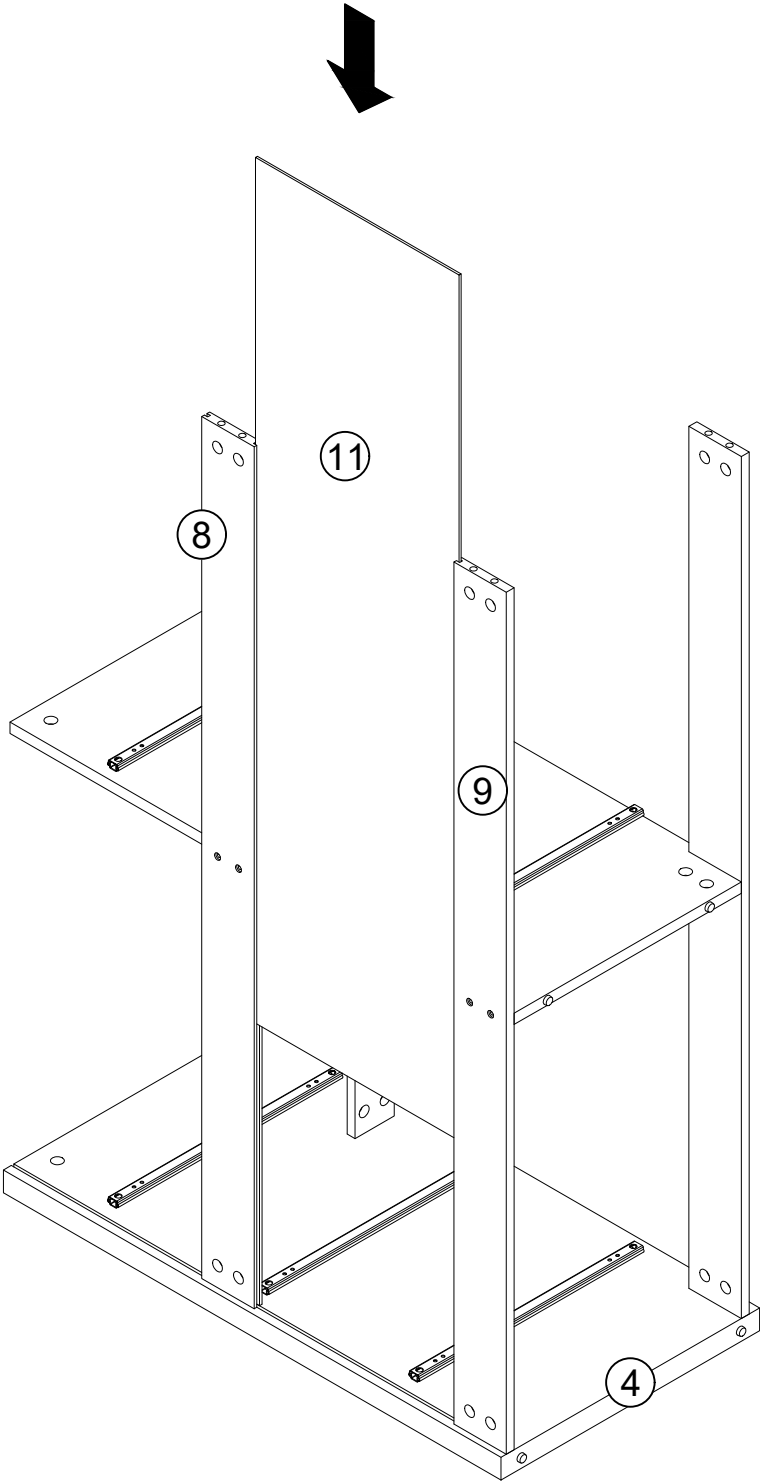


STEP 15

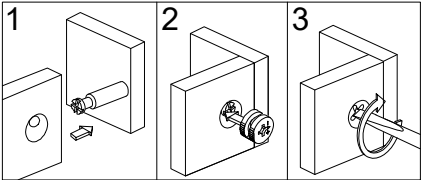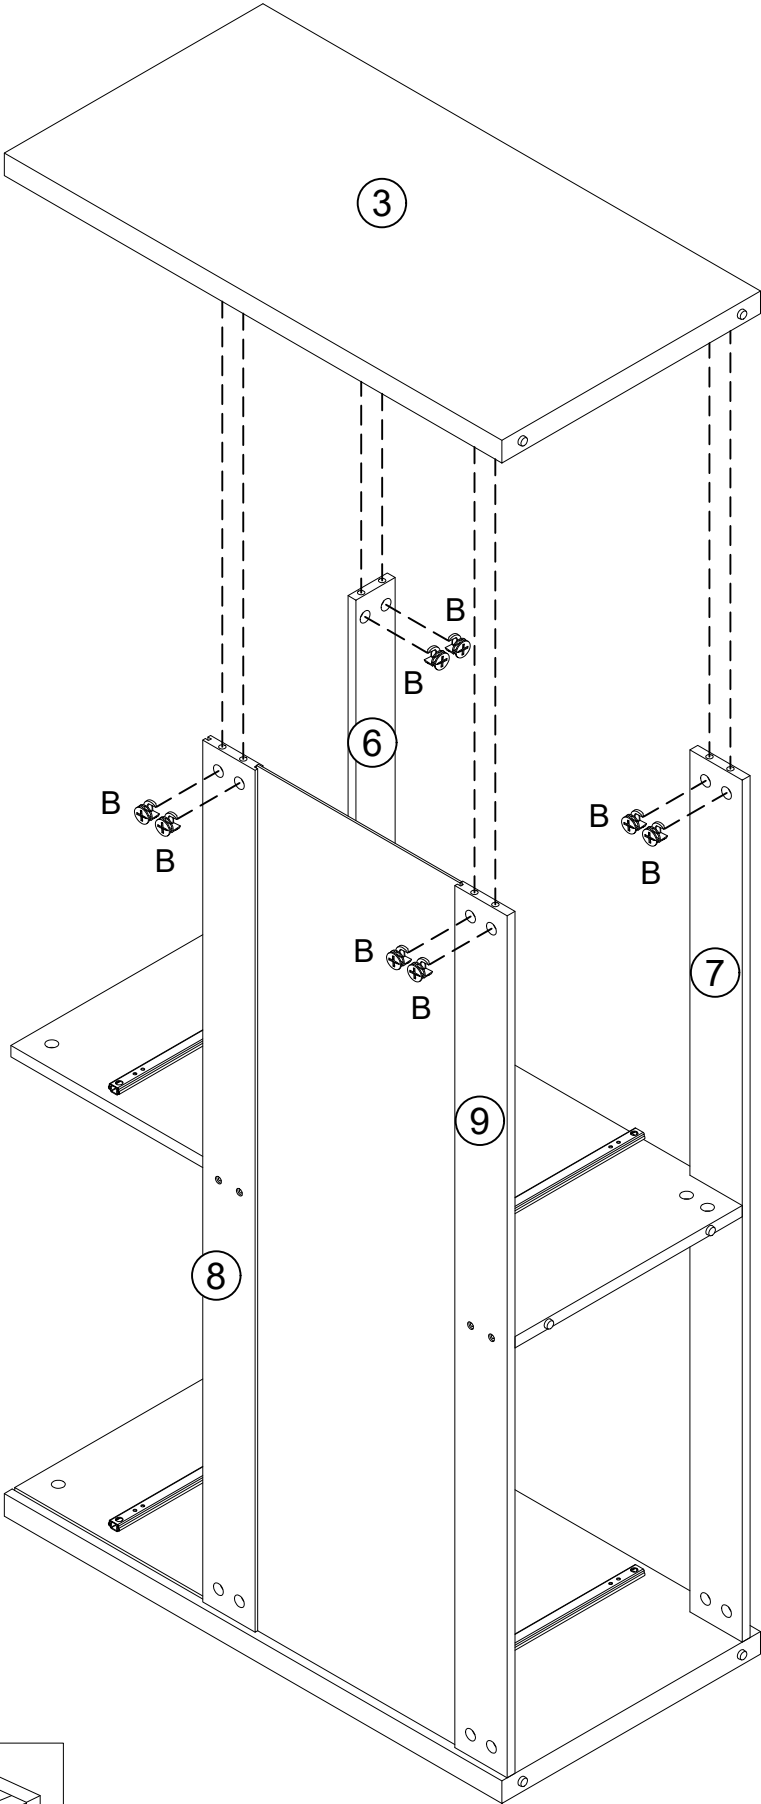


	Bx8
---	-----

STEP 16

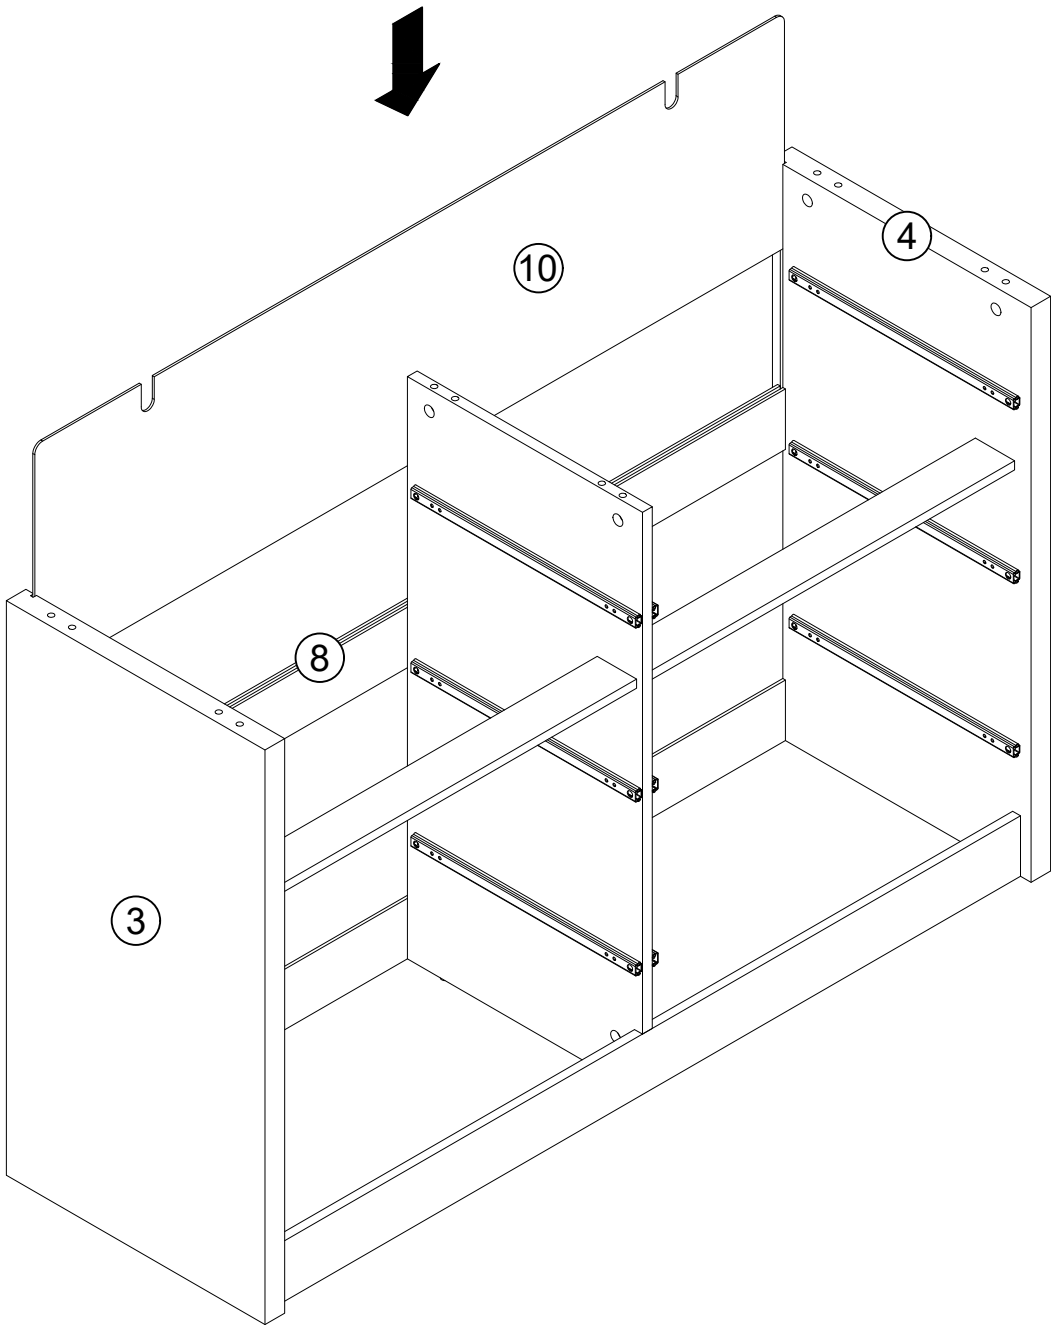


STEP 17

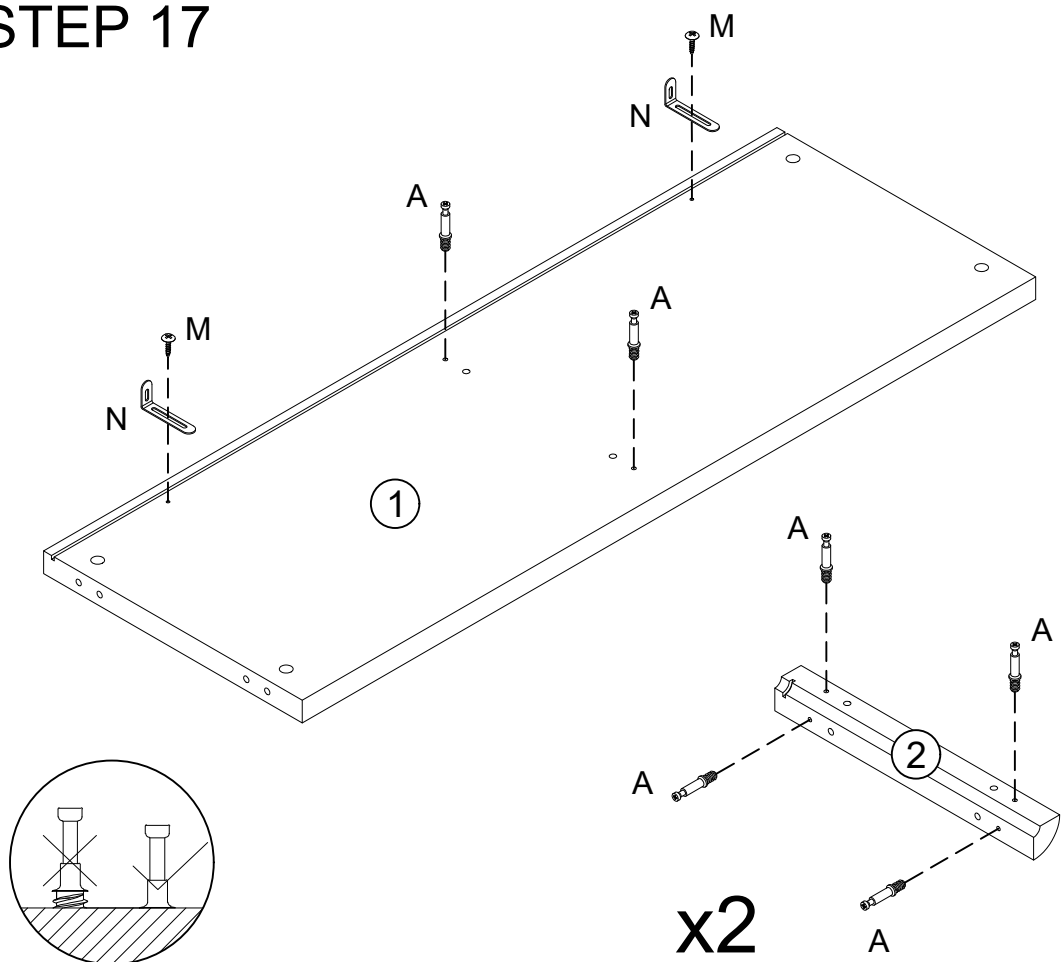

	Ax10
	Mx2
	Nx2



x2

STEP 18

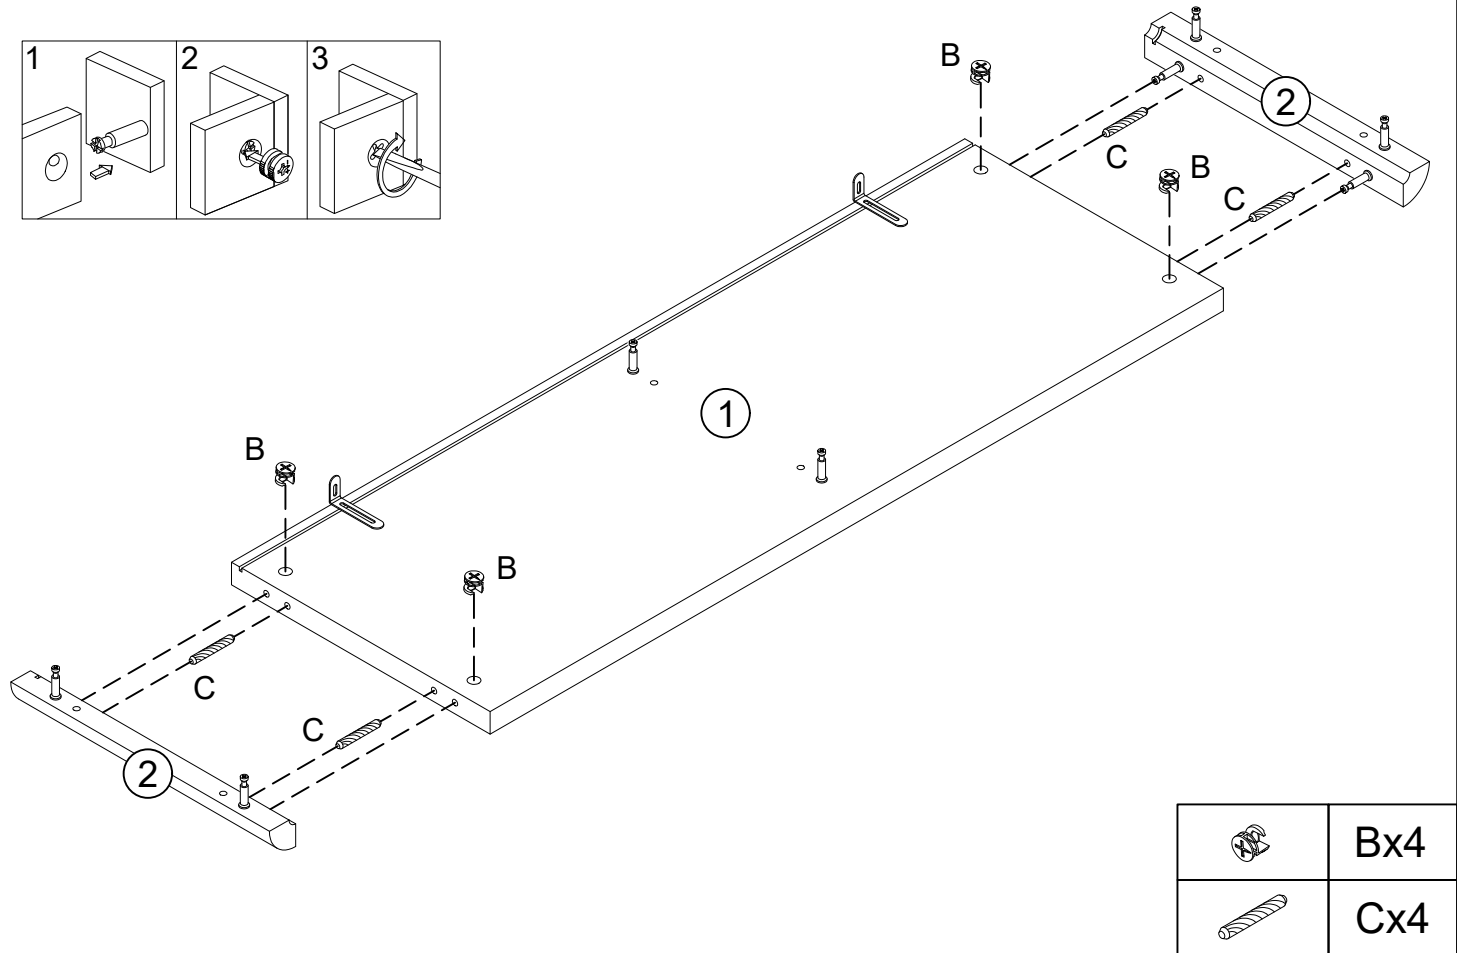


	Bx4
	Cx4

STEP 19

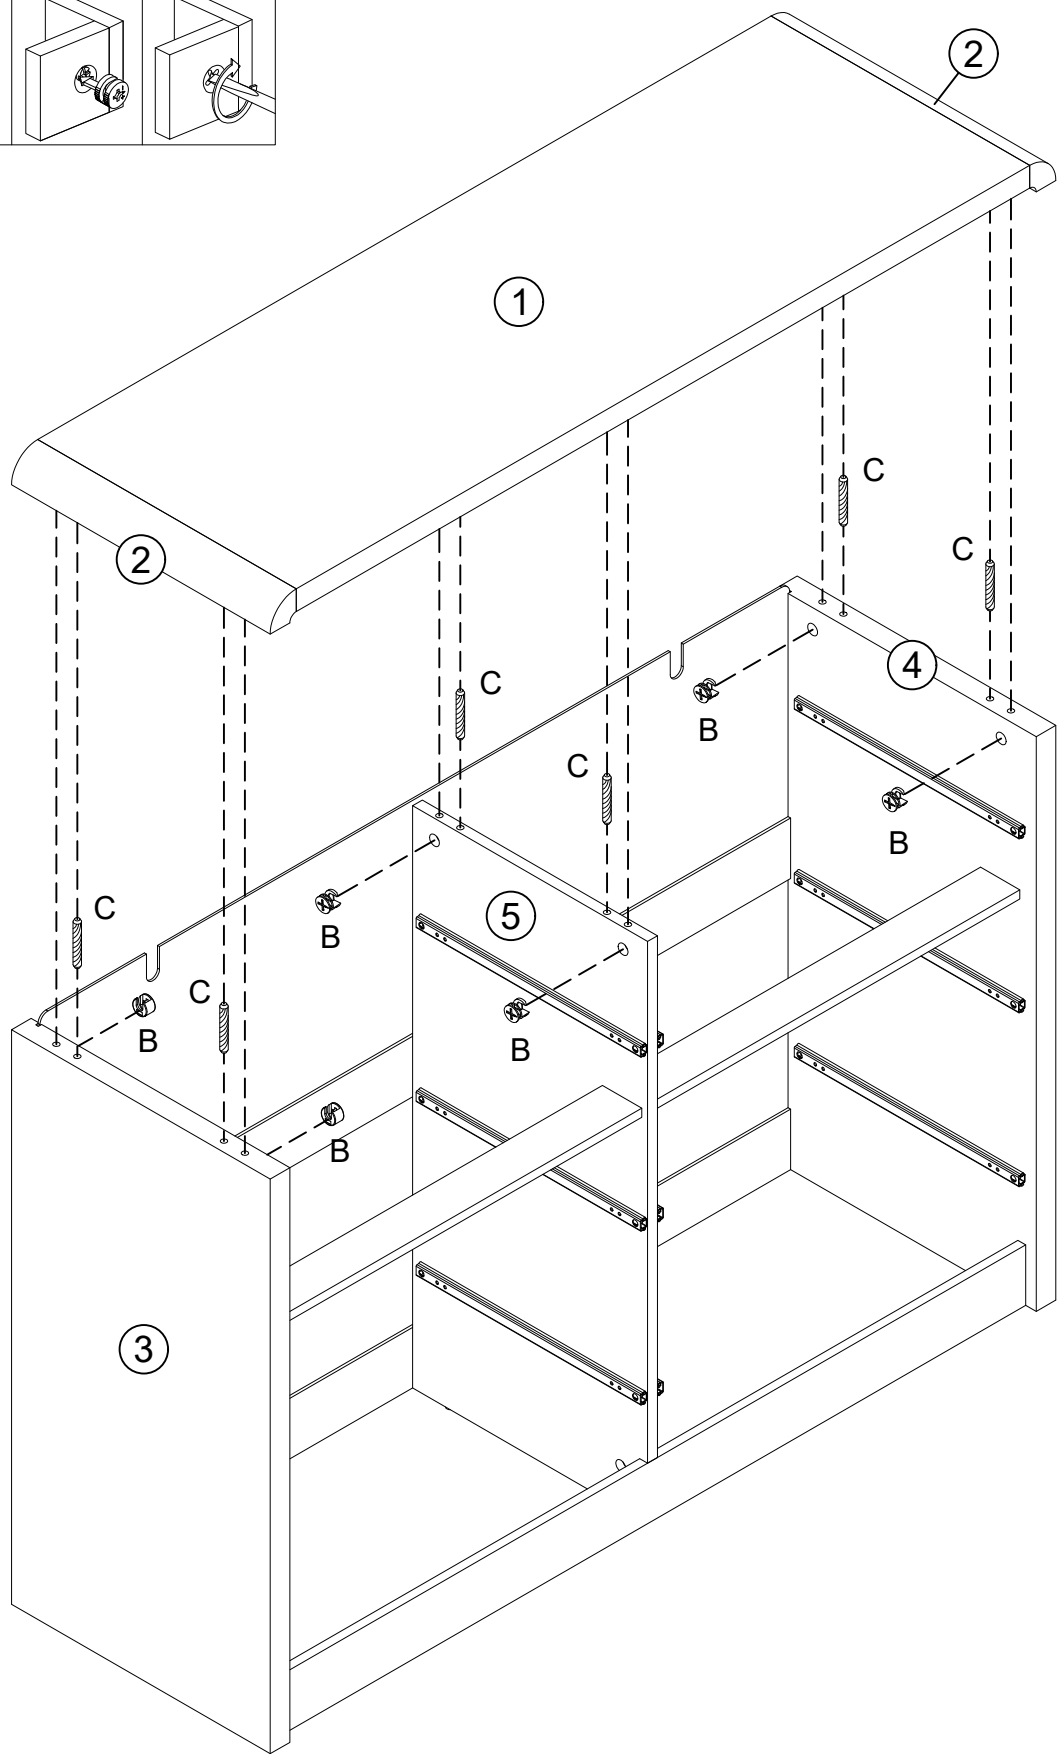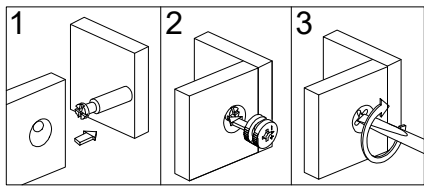


	Bx6
	Cx6




STEP 20

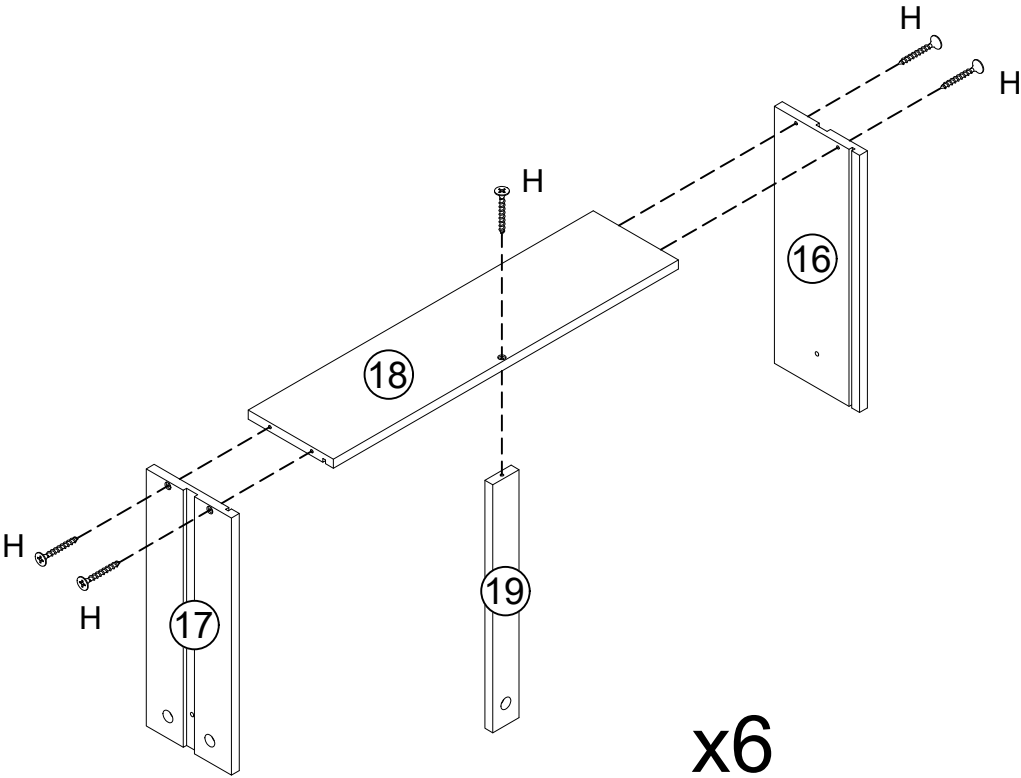


STEP 21

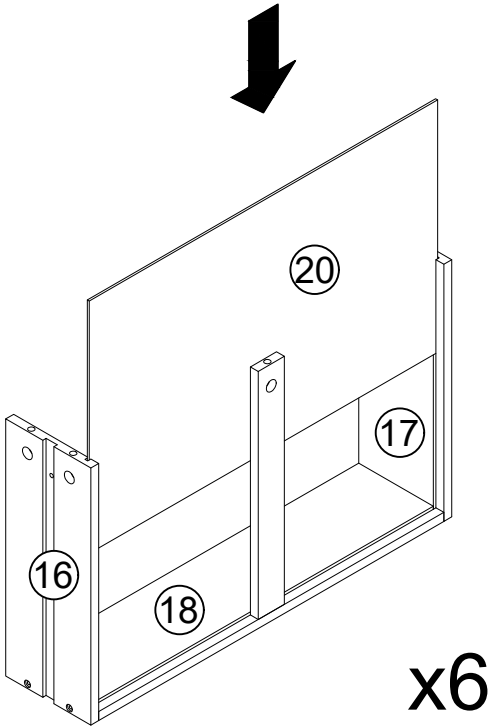


STEP 22

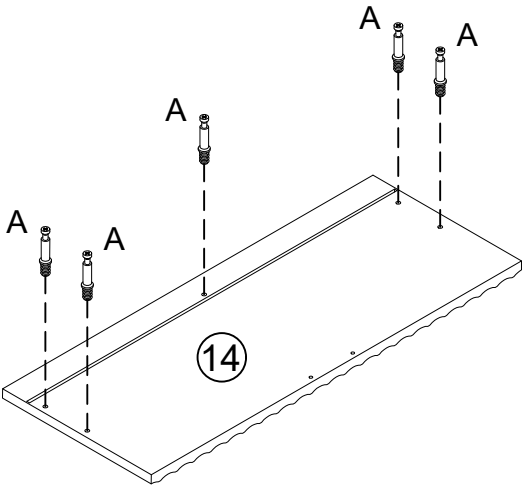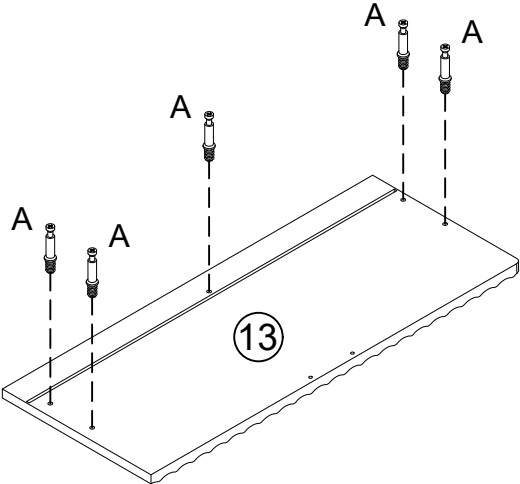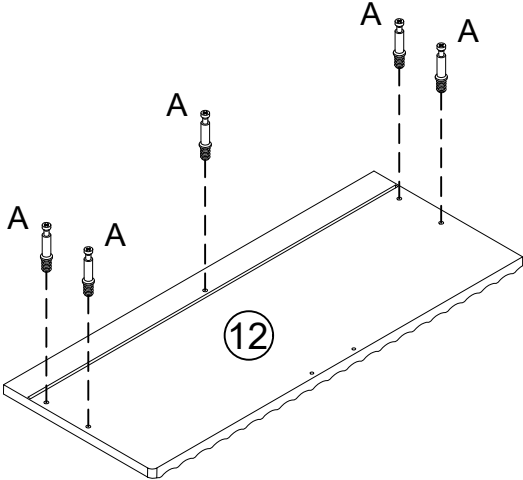

x2




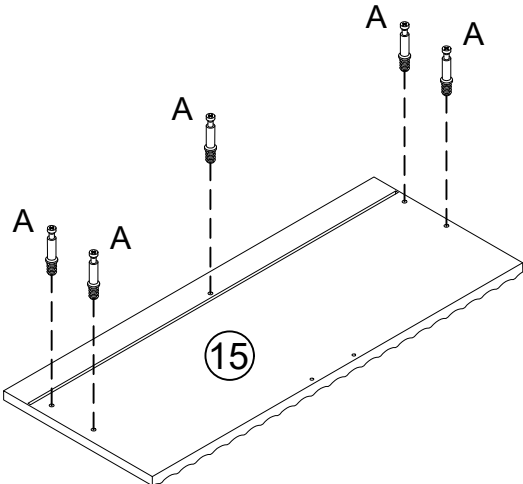


x2

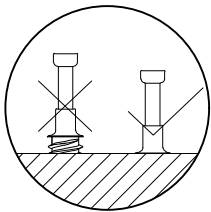


Ax30

STEP 23

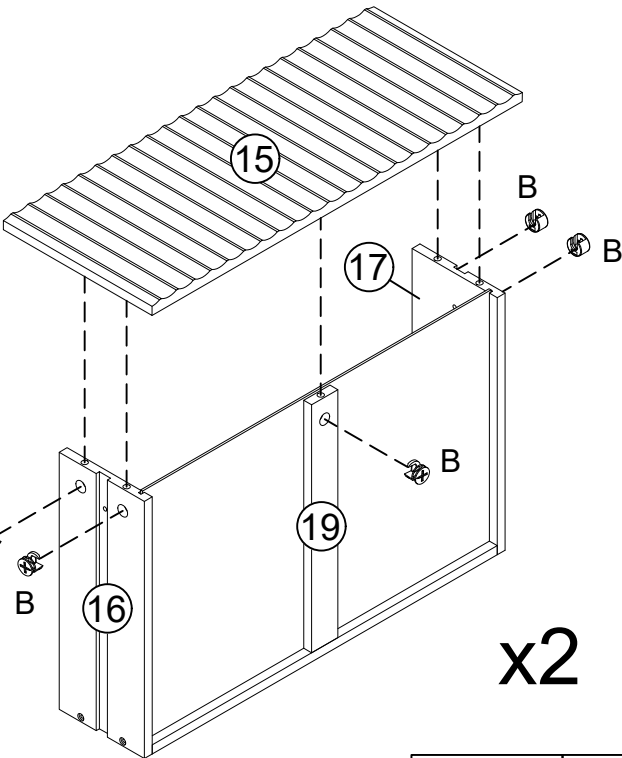
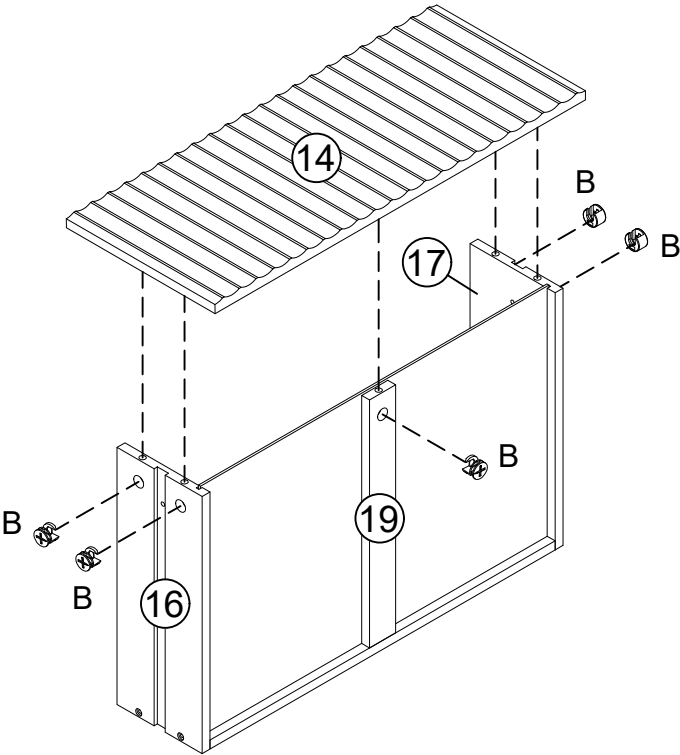
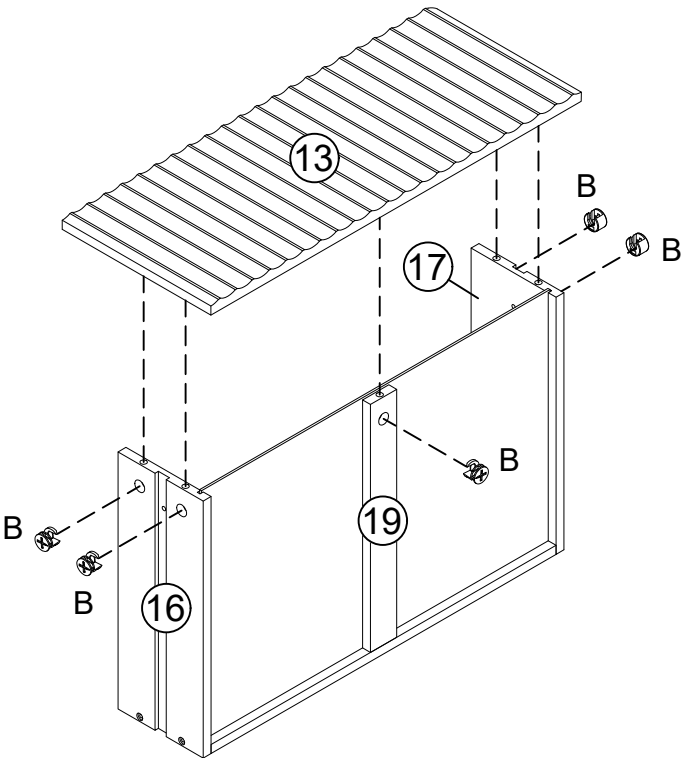
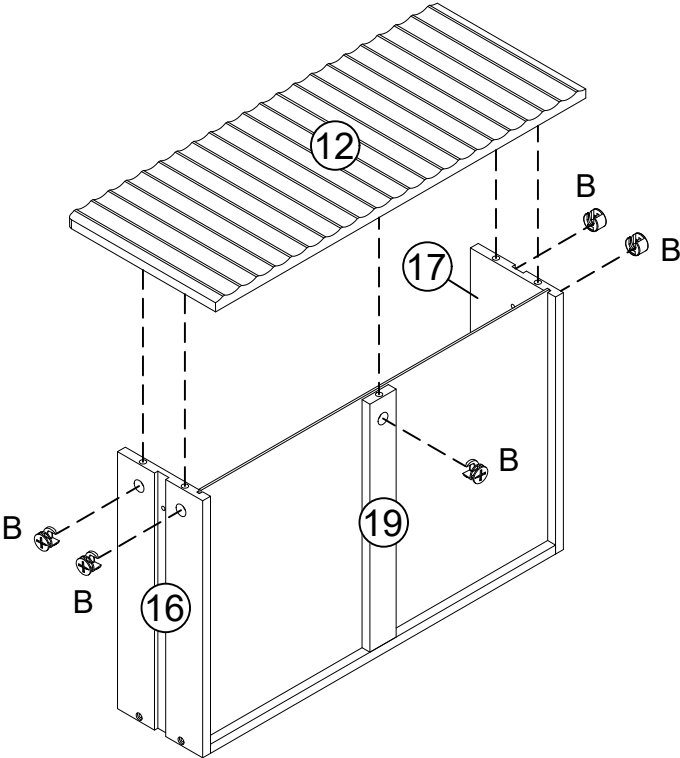


x2

x2

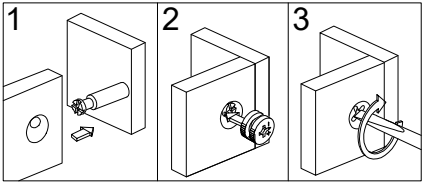


STEP 24

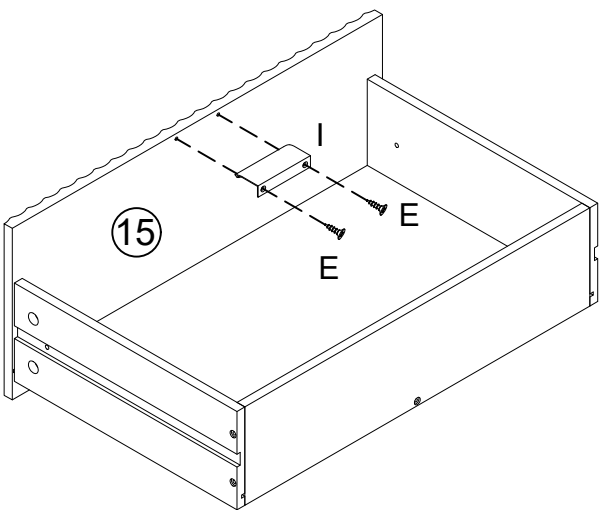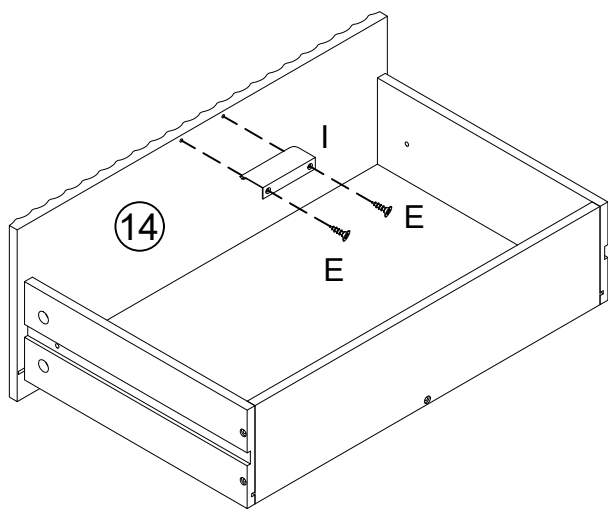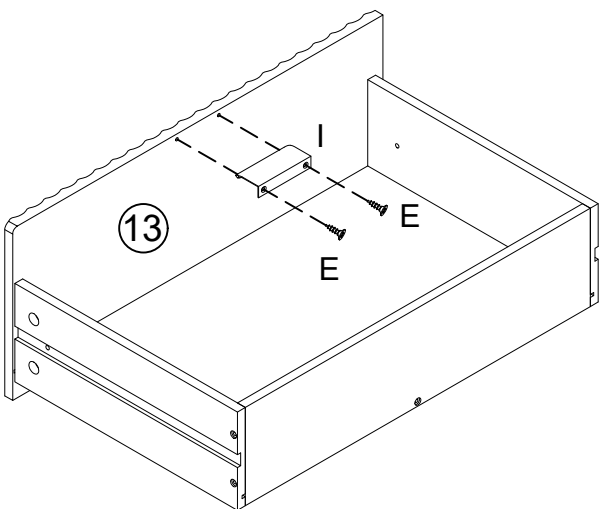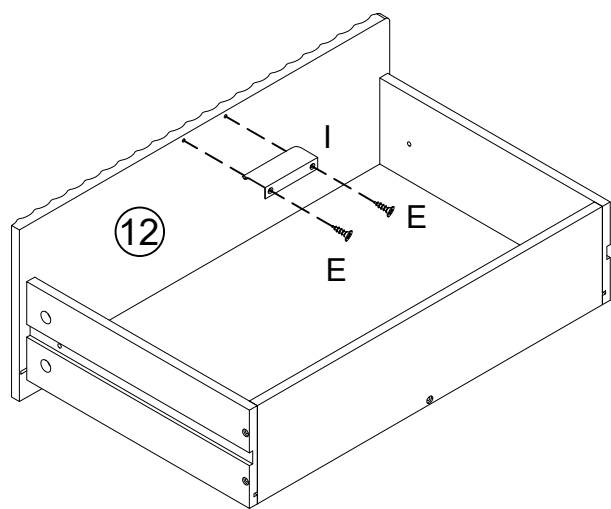




	Ex12
	Ix6

STEP 25

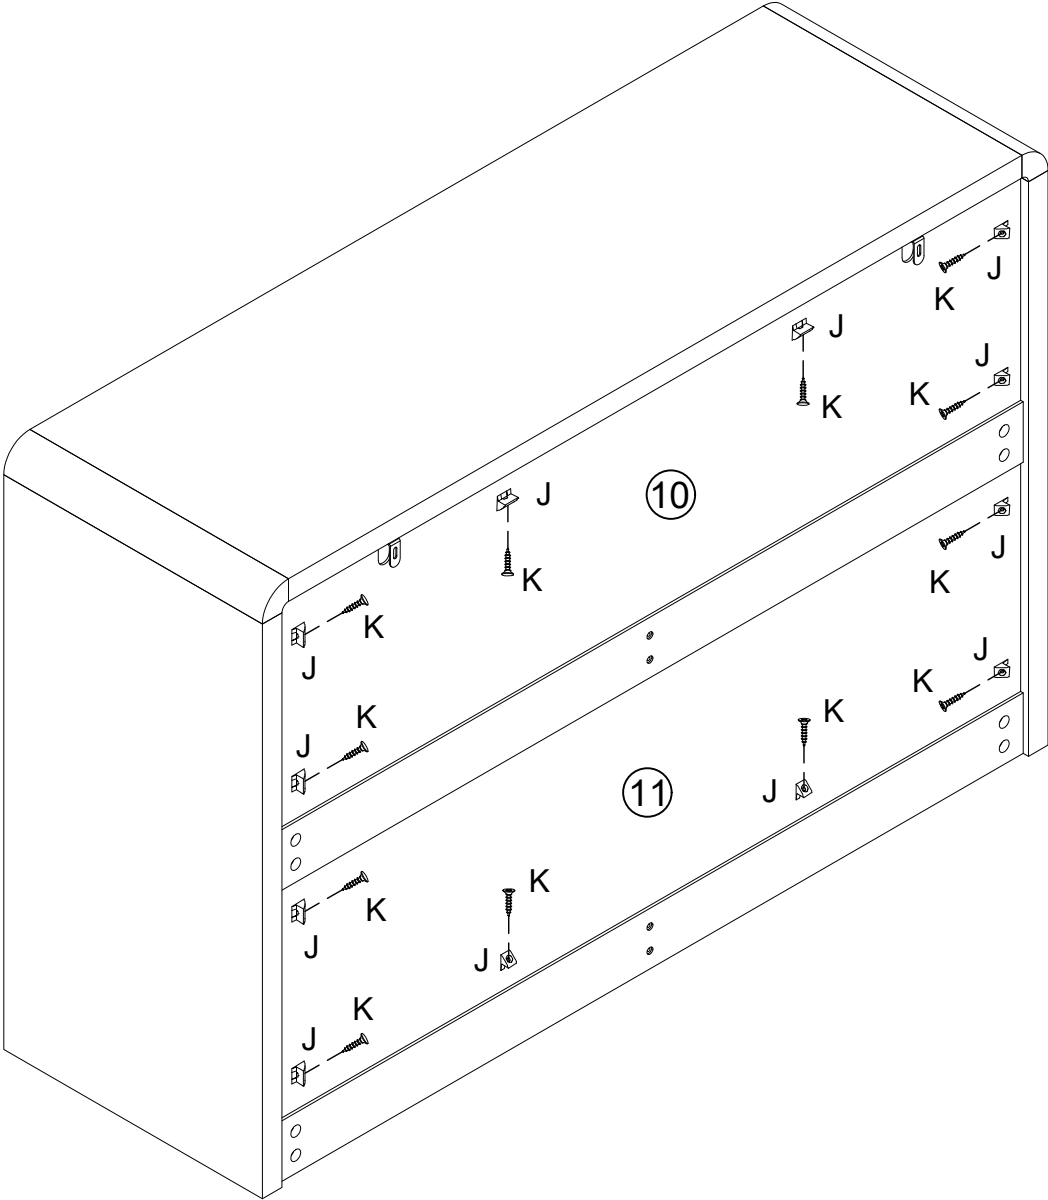



	Jx12
	Kx12

STEP 26

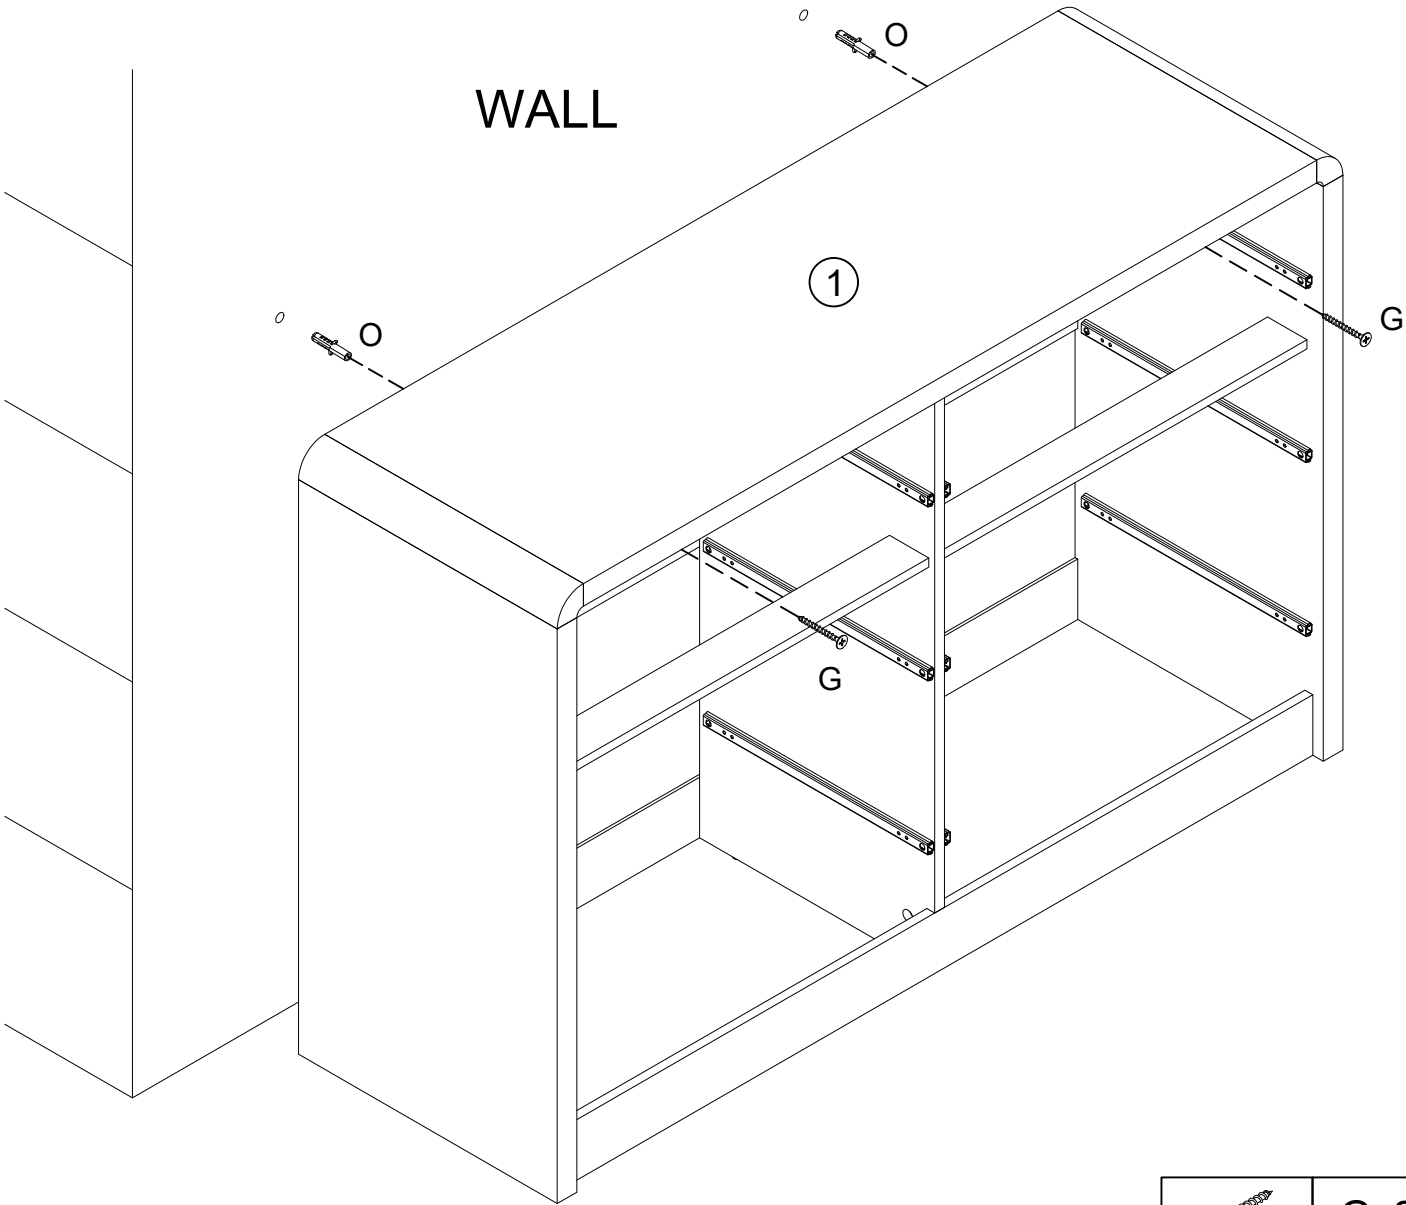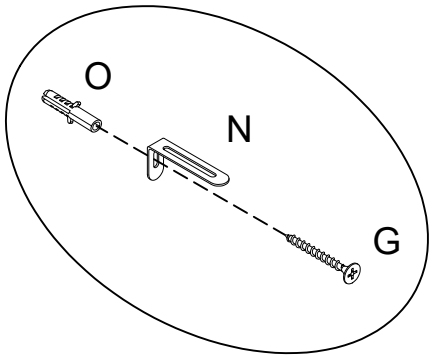
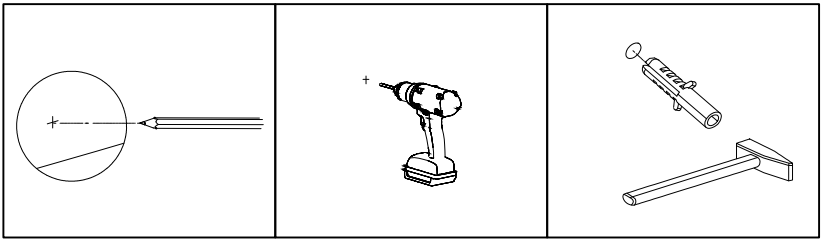


	Gx2
	Ox2

STEP 27

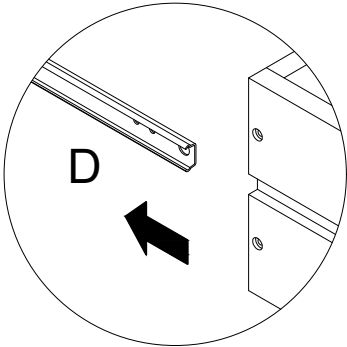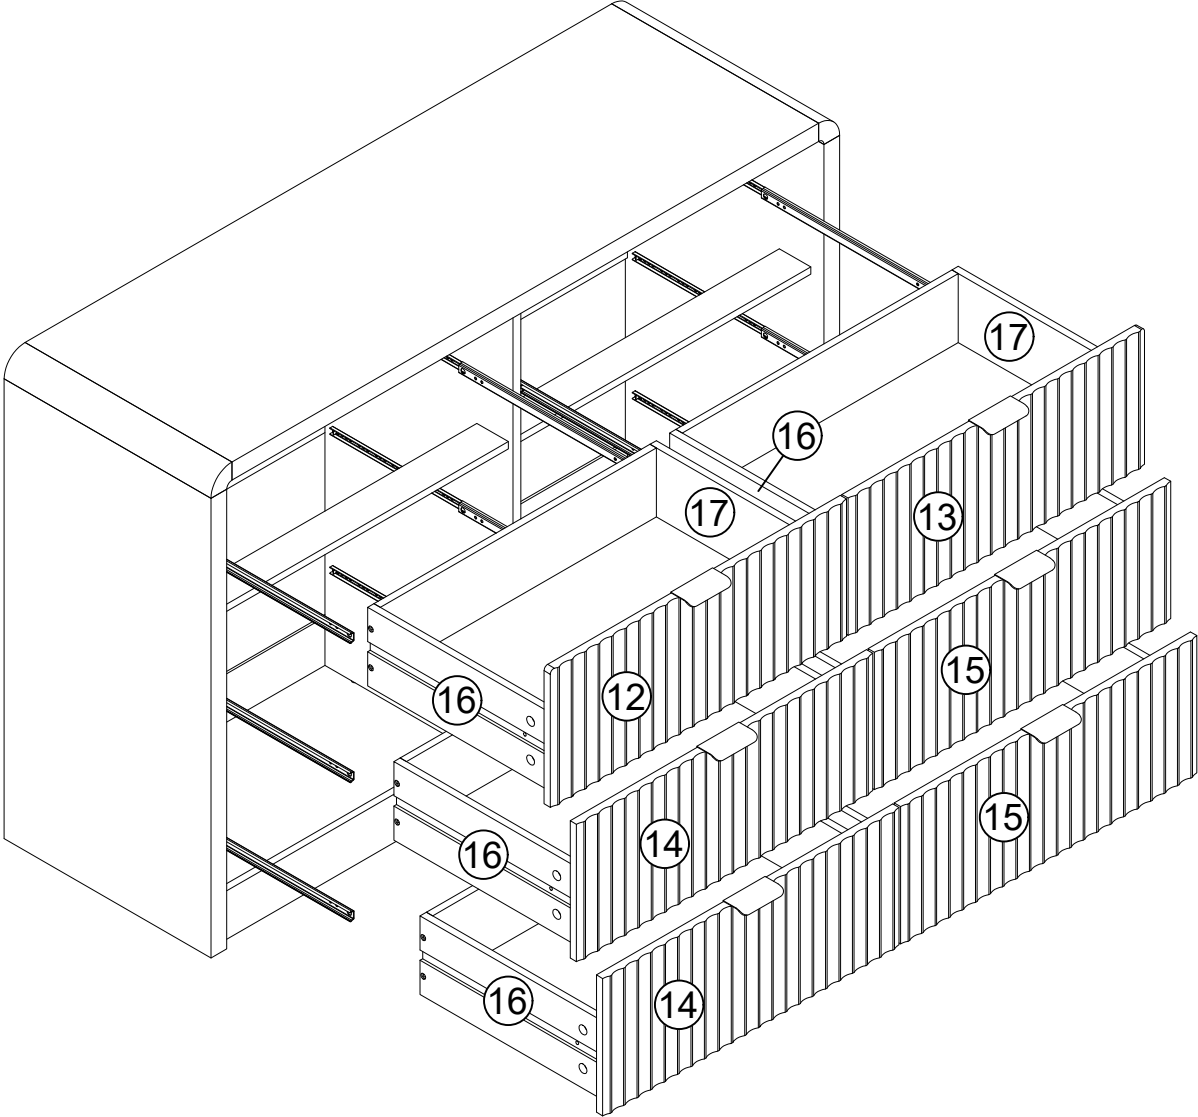


STEP 28

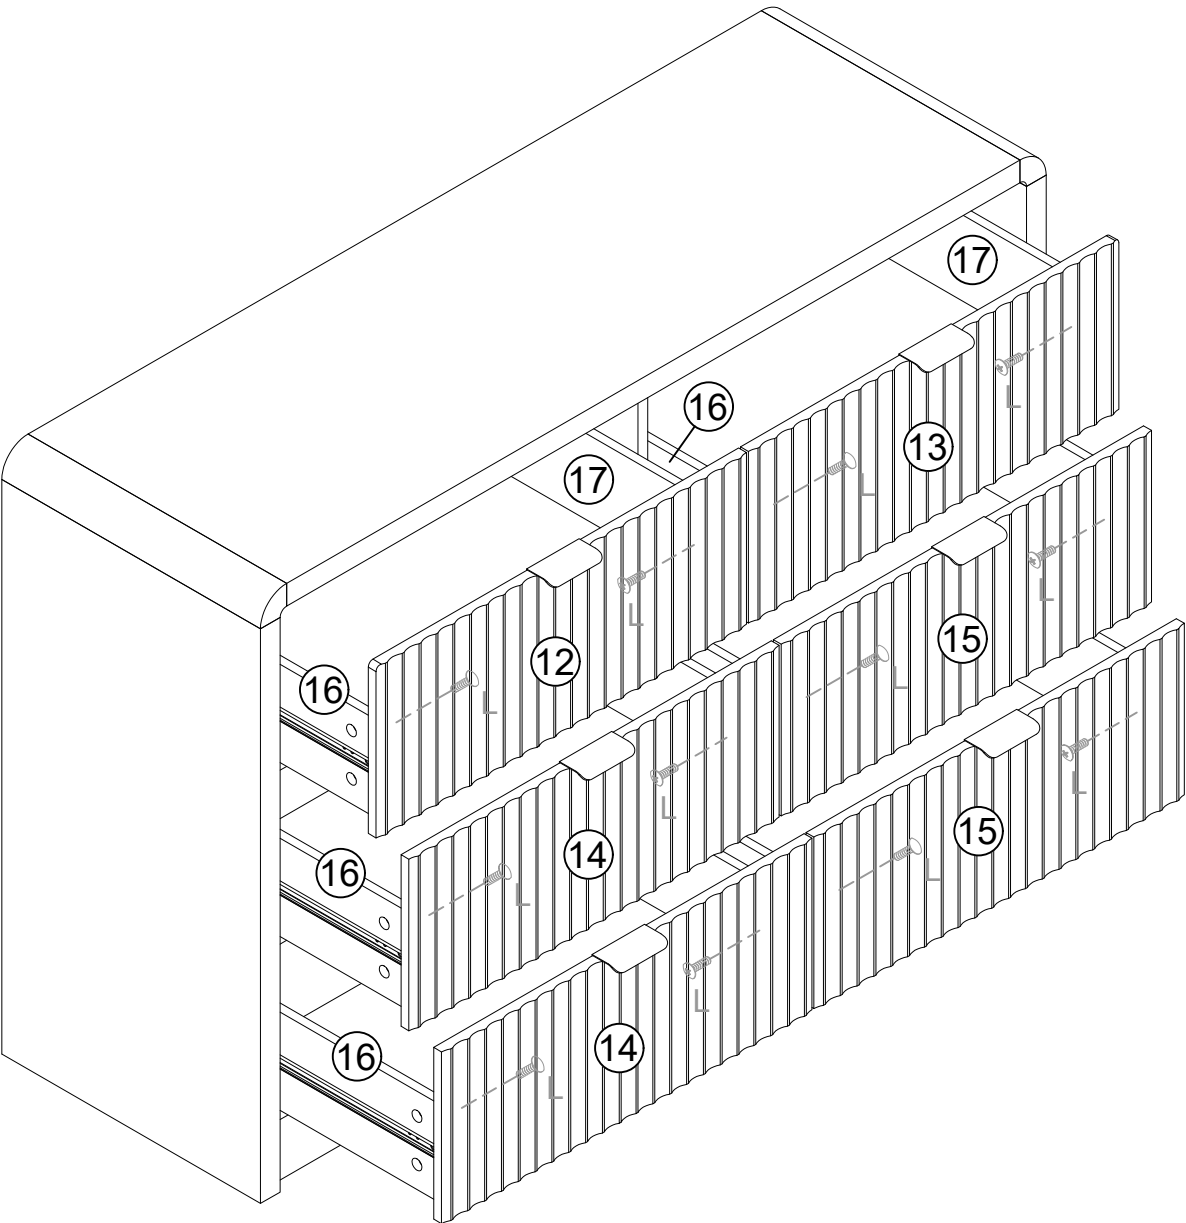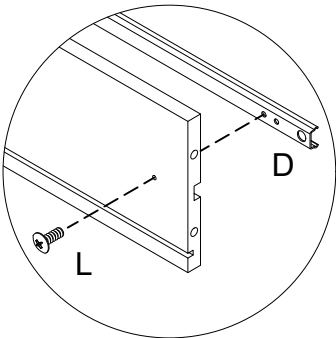


Lx12


You may need patience to get a perfect smooth slide of drawer experience, and we appreciate your patience.
Asking for a second person to assist you will simplify the process.

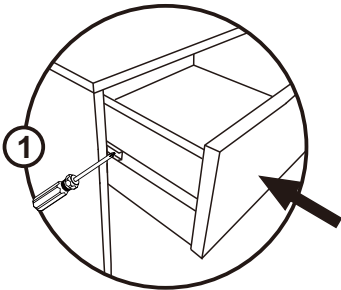


1.Align Components: Position the groove on the drawer side to match the rail profile. Insert a precision tool (e.g., screwdriver tip) into the outermost hole of the slide rail. Ensure both sides are aligned symmetrically.

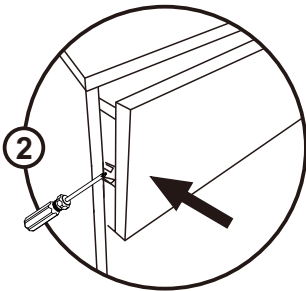

2.Slide Drawer Inward: Gently push the drawer into the cabinet until slide come up against drawer front. This step needs to be done simultaneously for both sides.

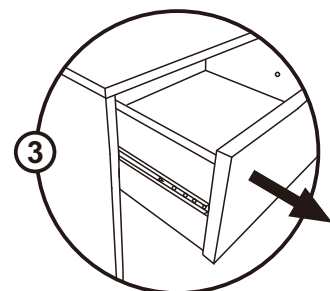

3.Secure & Adjust: While maintaining pressure on the tool, slowly pull the drawer outward until slide can not be moved.

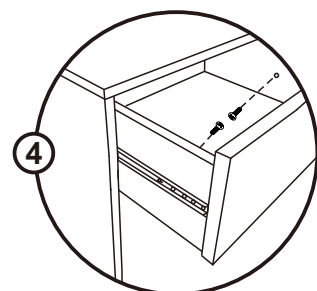

4.Finalize Installation: Locate the pre-drilled mounting holes where the rails meet the drawer sides. Securely tighten all screws on both sides.