

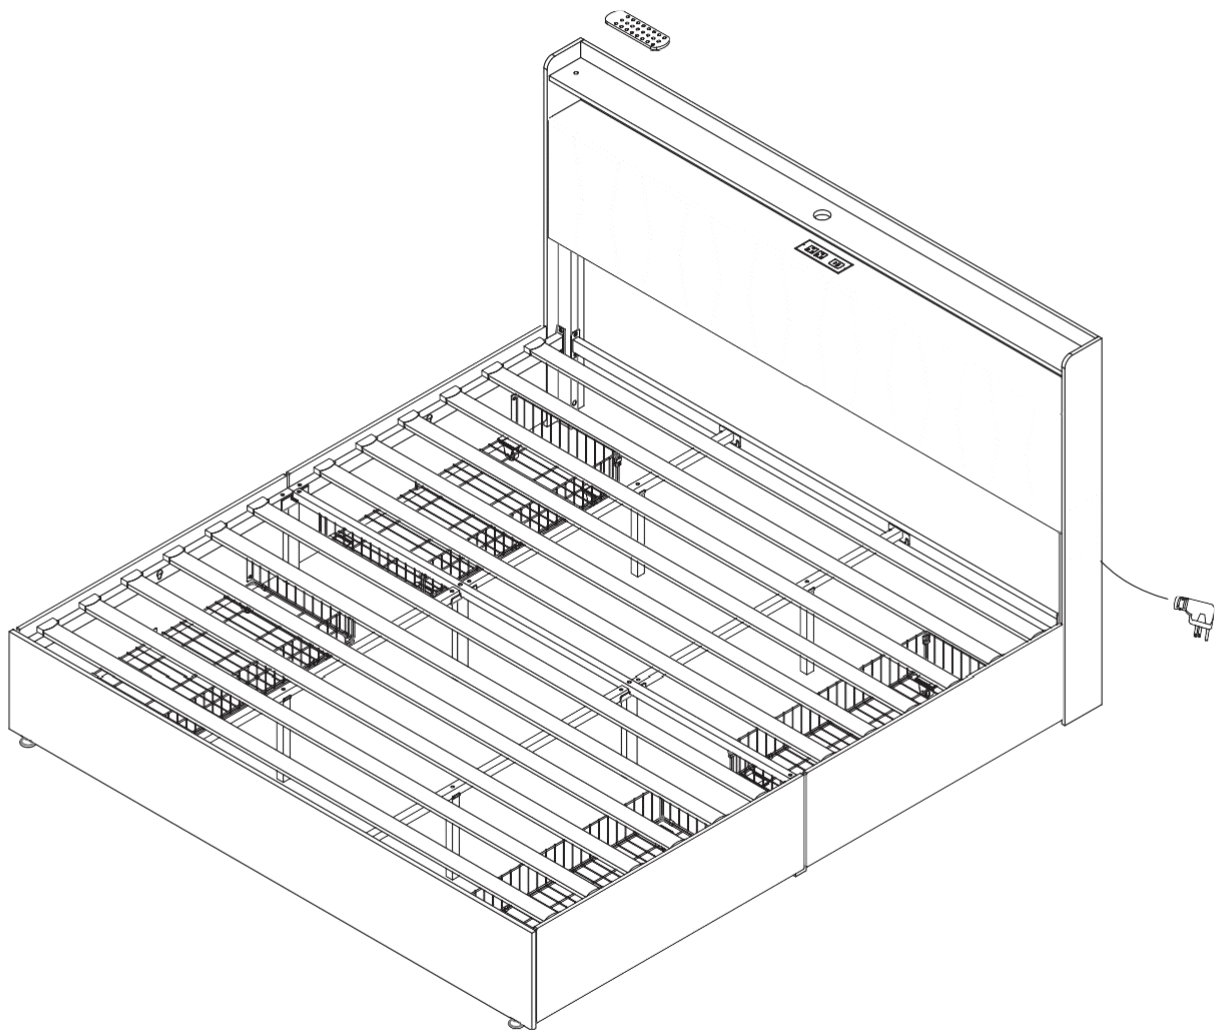



















Assembly Instruction

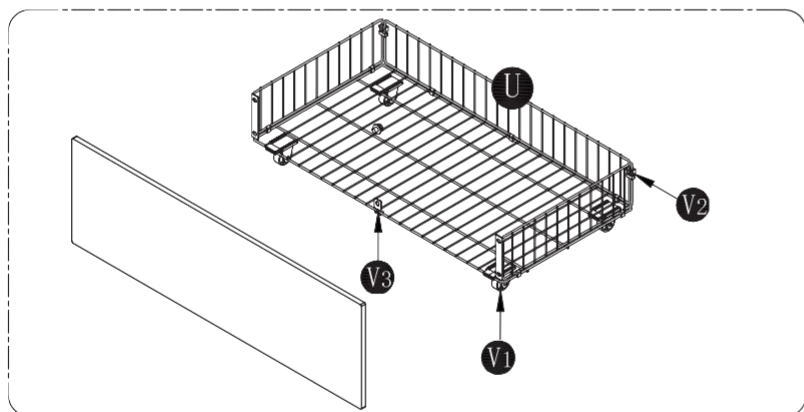


Assembly by
Two Adults






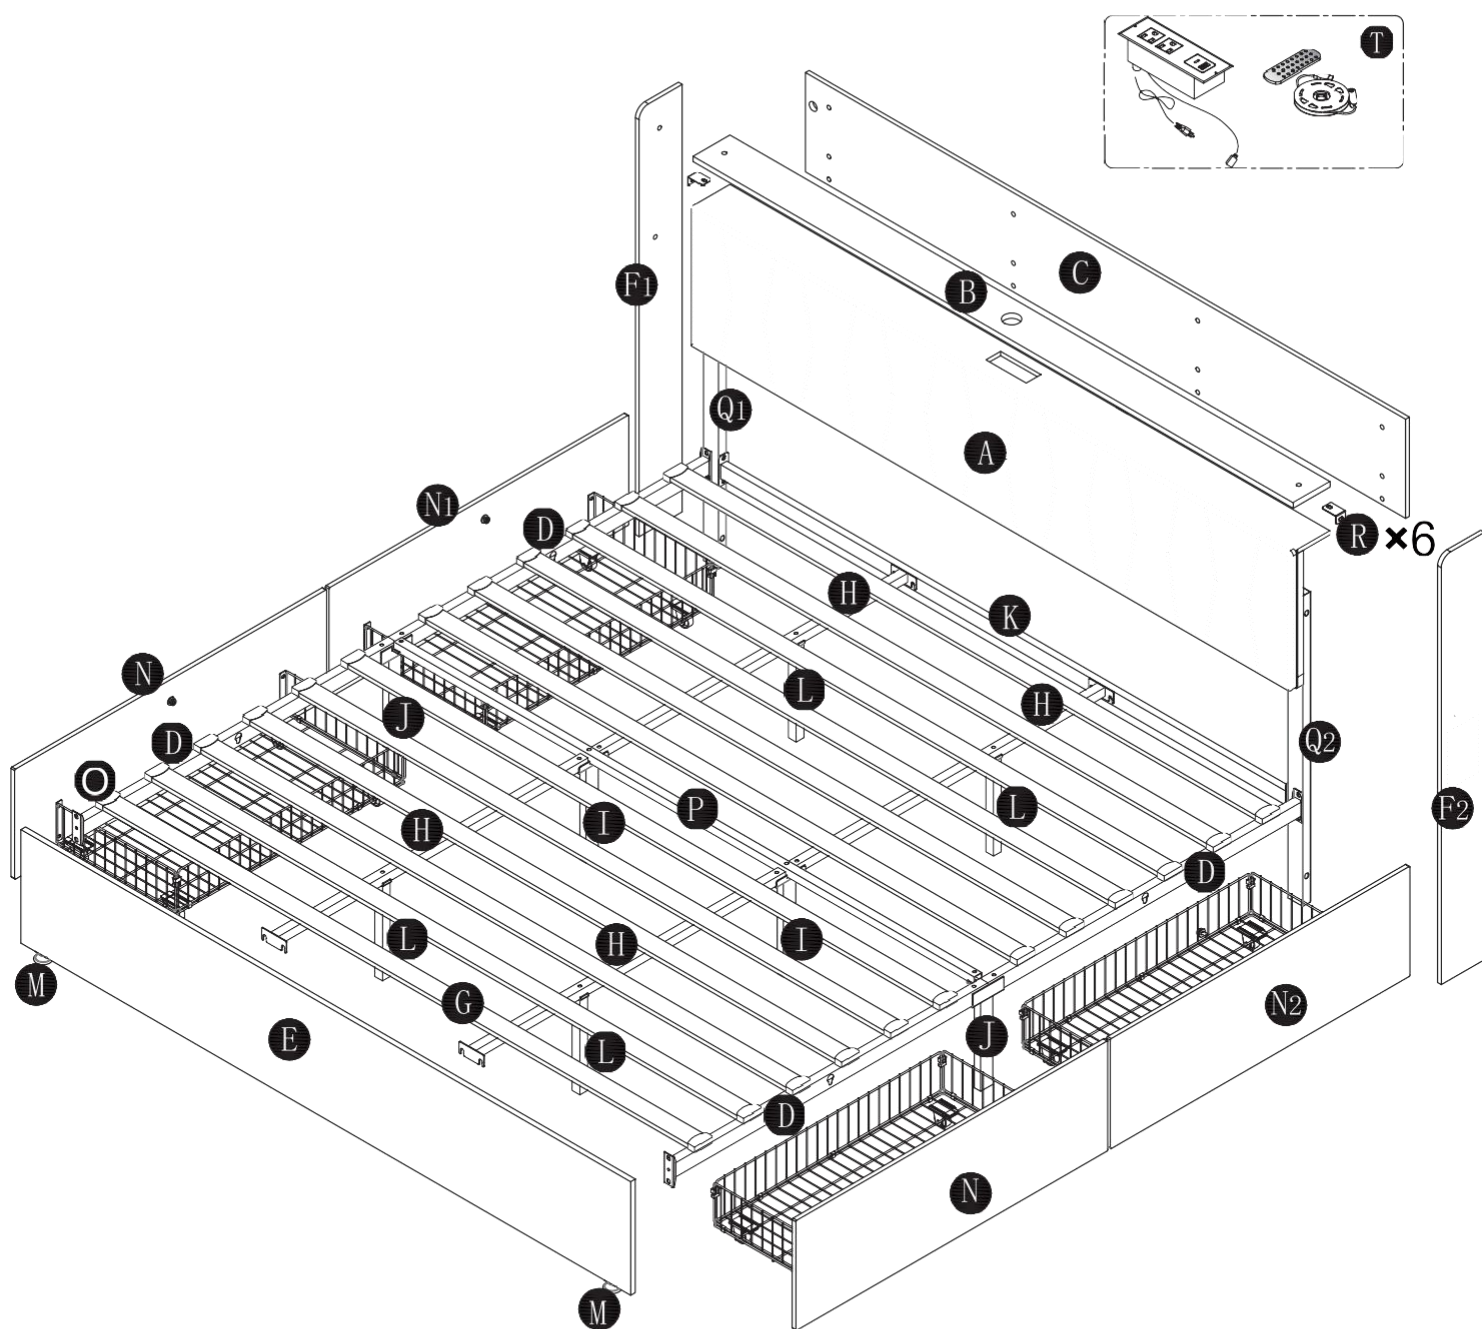


Component

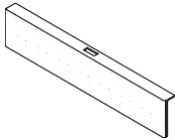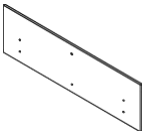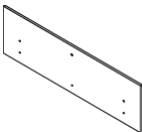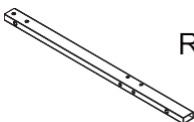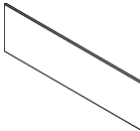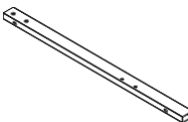A		Backrest Board	× 1
C		Back Board	× 1
E		Footboard	× 1
F2		Right Bedside Board	× 1
H		Center Support Rail	× 4
J		Side Support Leg	× 2
L		Support Leg	× 4
N		Drawer Front Board	× 2
N2		Right Drawer Board	× 1
P		Middle Main Slat	× 1
Q2		Right Headboard Post	× 1
T		Power Accessories	× 1
B		Shelf of Headboard	× 1
D		Side Rail	× 4
F1		Left Bedside Board	× 1
G		Sub Slat	× 12
I		Middle Support Leg	× 2
K		Main Slat for Headboard	× 1
M		Feet of Footboard	× 2
N1		Left Drawer Board	× 1
O		Slat Fasten Kit	× 24
Q1		Left Headboard Post	× 1
R		Shelf Board Securing Bracket	× 6

Component

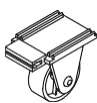U		Drawer Wire Basket	× 4
V2		Plastic Clip for Basket	× 8
V1		Wheel for Drawer	× 16
V3		Basket Locking Bracket	× 4

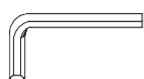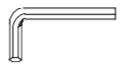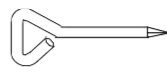X1	 M8*64mm	× 4
X4	 M8*30mm	× 4
X7	 M6*12mm	× 20
Z1	 M8 Wrench	× 1
X2	 M8*50mm	× 6
X5	 M8*15mm	× 32
X8	 M3*16mm	× 2
Z2	 M6 Wrench	× 1
X3	 M8*45mm	× 14
X6	 M8*12mm	× 4
W	 Ø22*Ø8.5	× 4
Z3	 M3 Wrench	× 1

Self equipped tools



Phillips Screwdriver
(Not included)



Slotted Screwdriver
(Not included)




Electric Drill
(Not included)

1



X5 × 4PCS


Back side

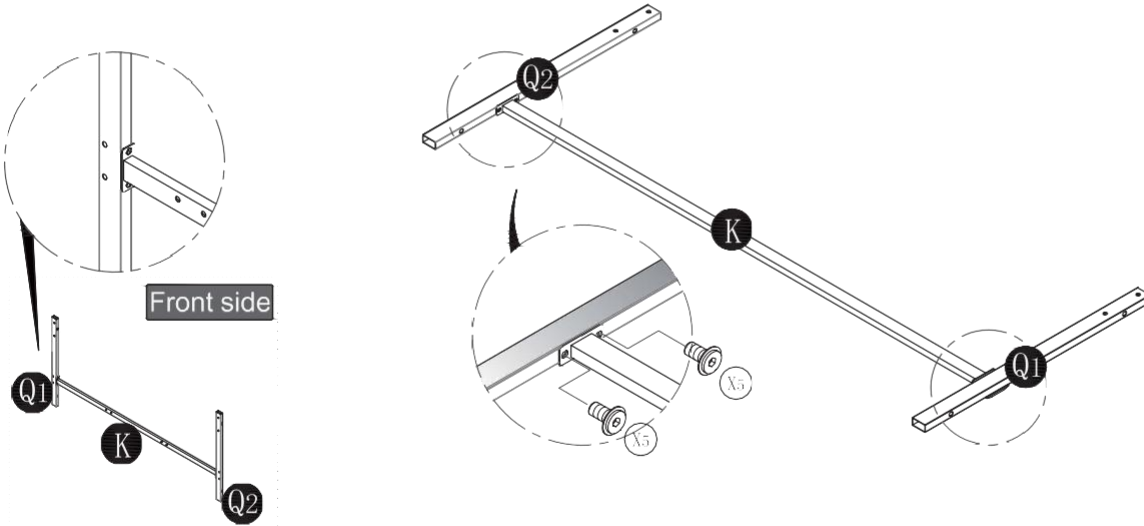

Attention:


Posts Q1/Q2 and metal slat (K) all have a distinguishable front and back side.

2



X3 × 4PCS

Back side

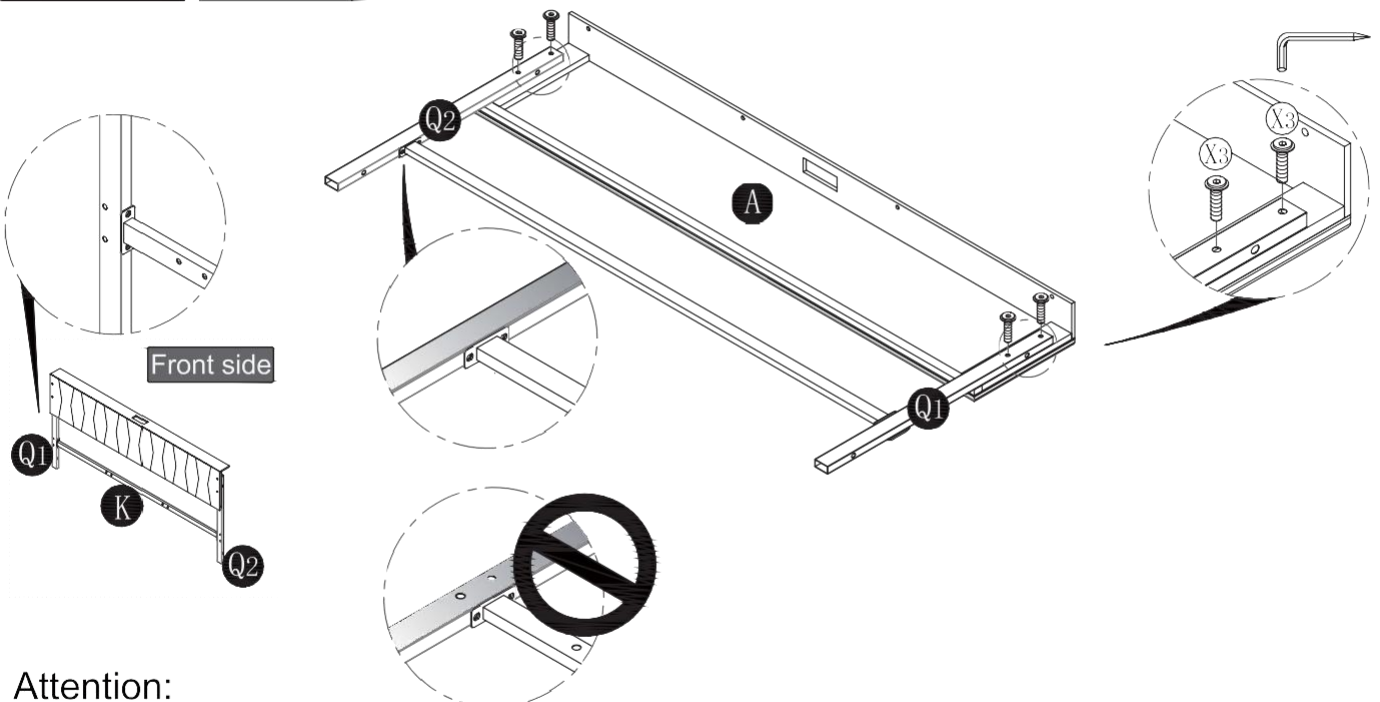


Attention:

Make sure you take the correct front or back side before fastening the screws.

3




X5 × 4PCS

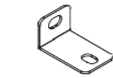

R × 2PCS

Back side

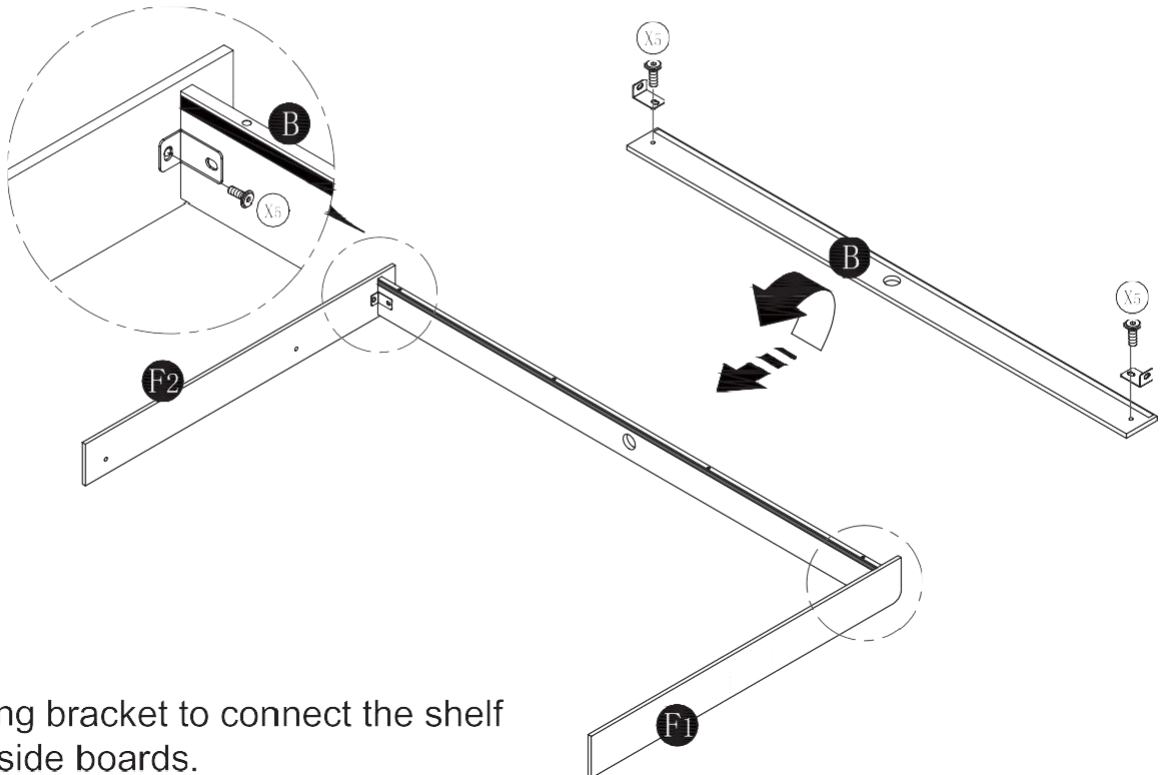


Use securing bracket to connect the shelf board and side boards.

4




X8 × 2PCS

Back side

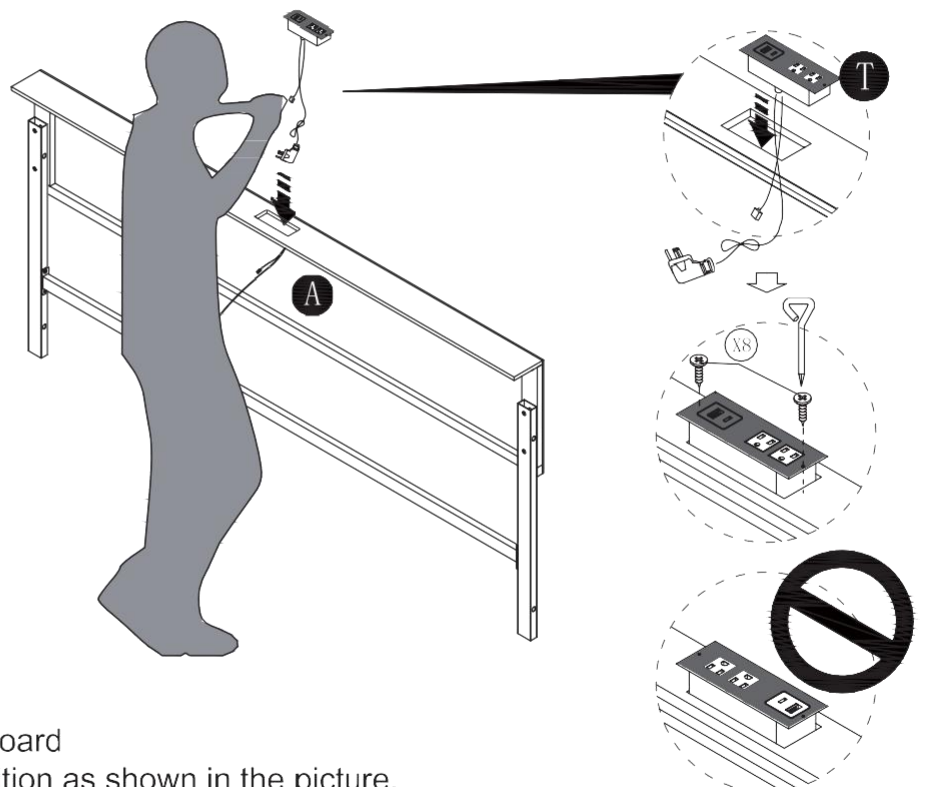


Note:
Please stand behind of the headboard
and align the plug to the right position as shown in the picture.

5



X1 × 4PCS

Back side

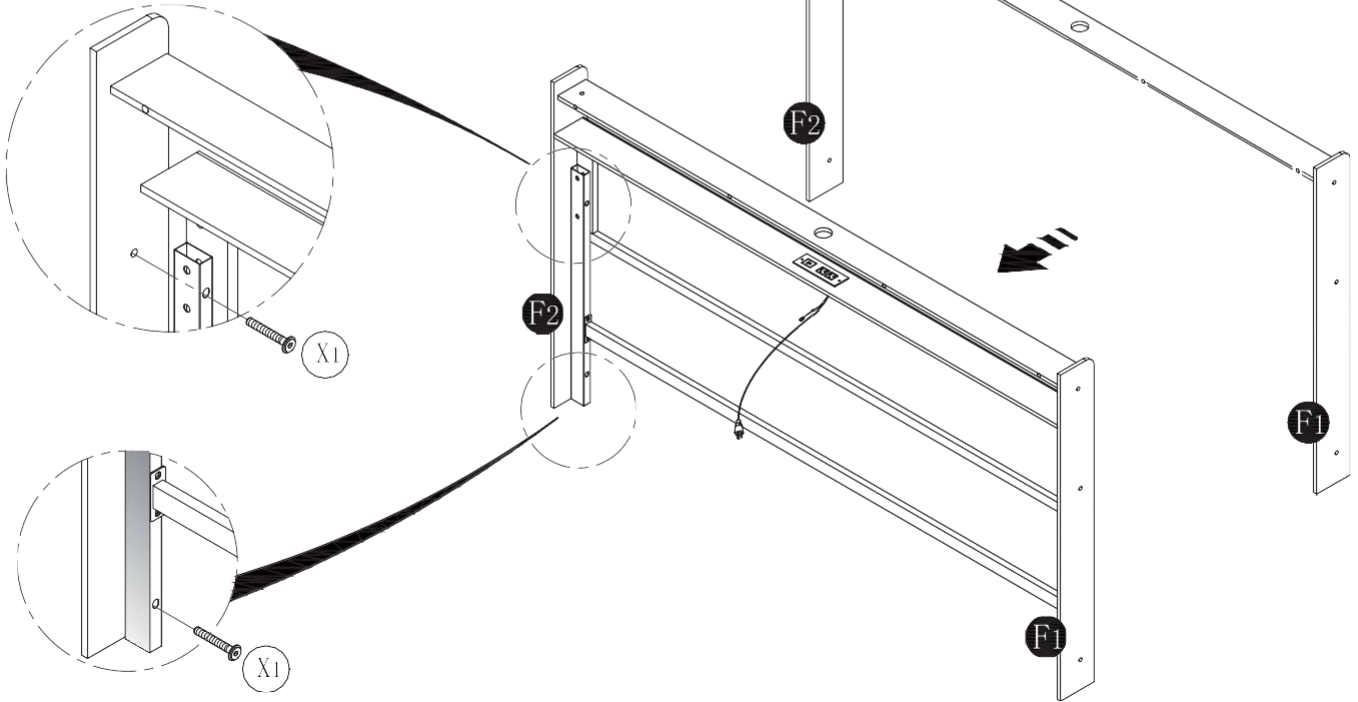

6



X4 × 4PCS




X5 × 8PCS




R × 4PCS

Back side

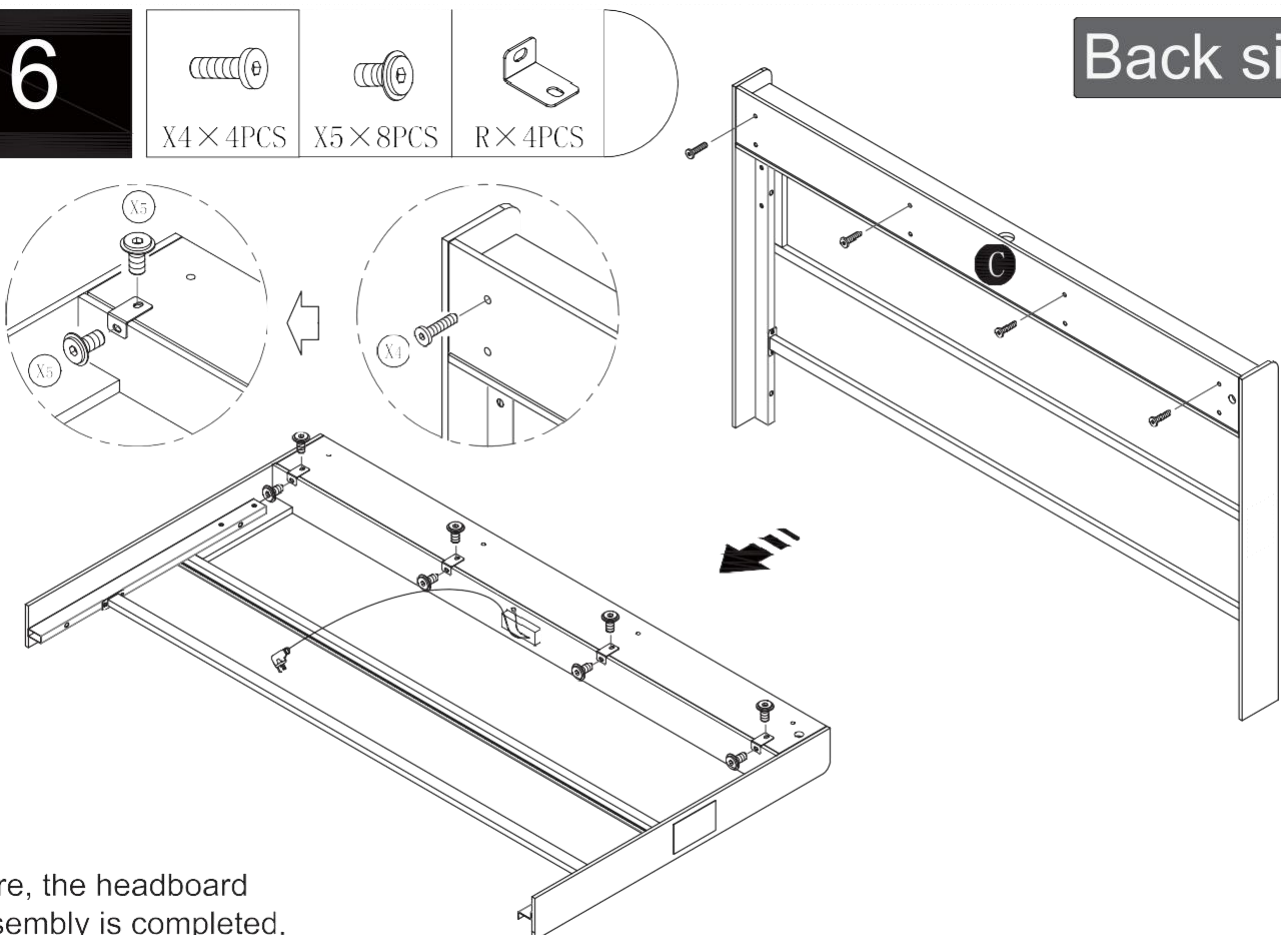


Here, the headboard assembly is completed.

7

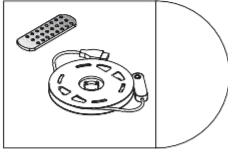


Back side

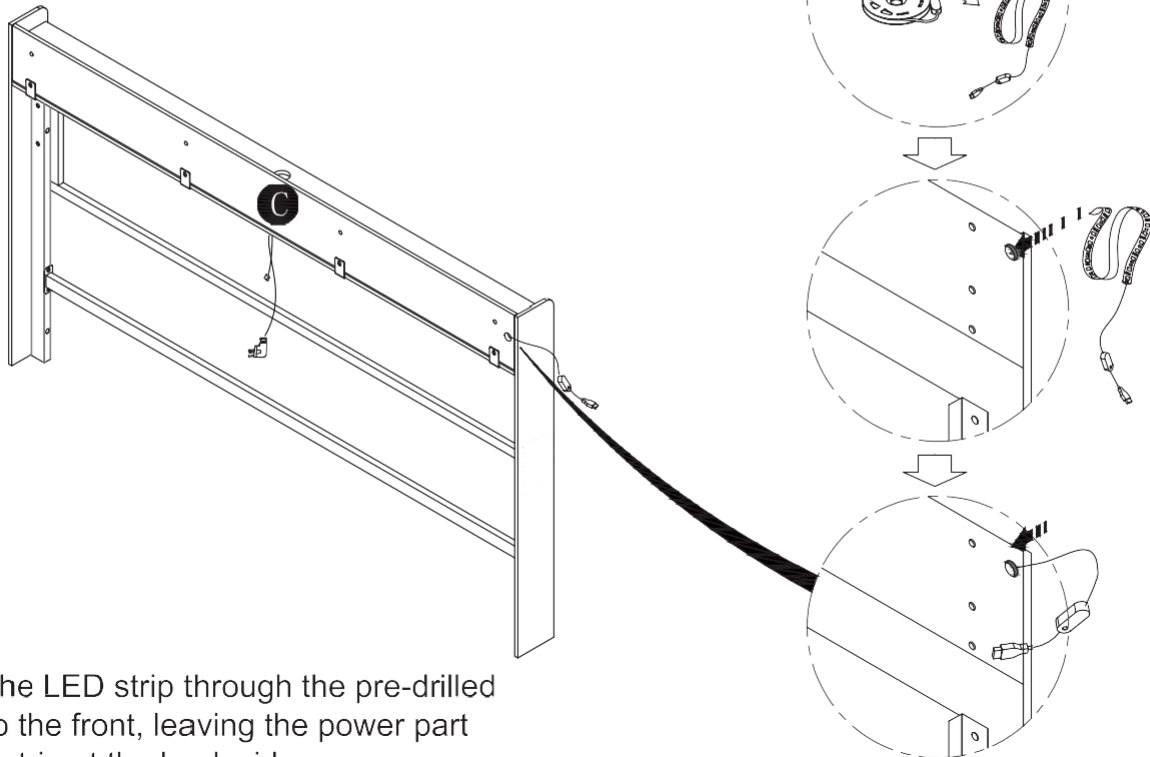

Take the LED strip through the pre-drilled hole to the front, leaving the power part of the strip at the back side.

8


Front side

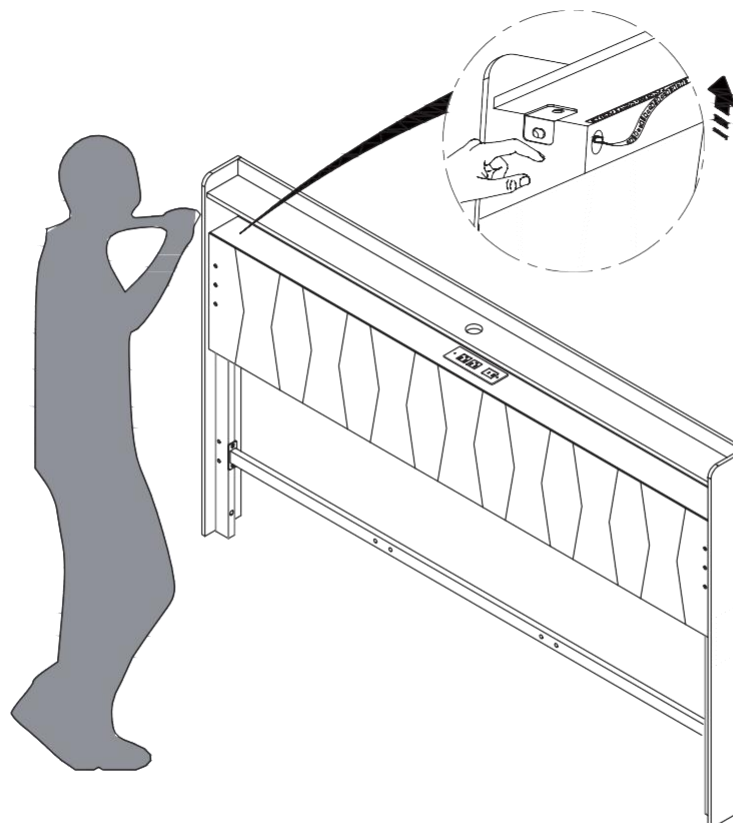

Secure the light strip using the adhesive strip as shown in the picture.

9

X2 × 4PCS

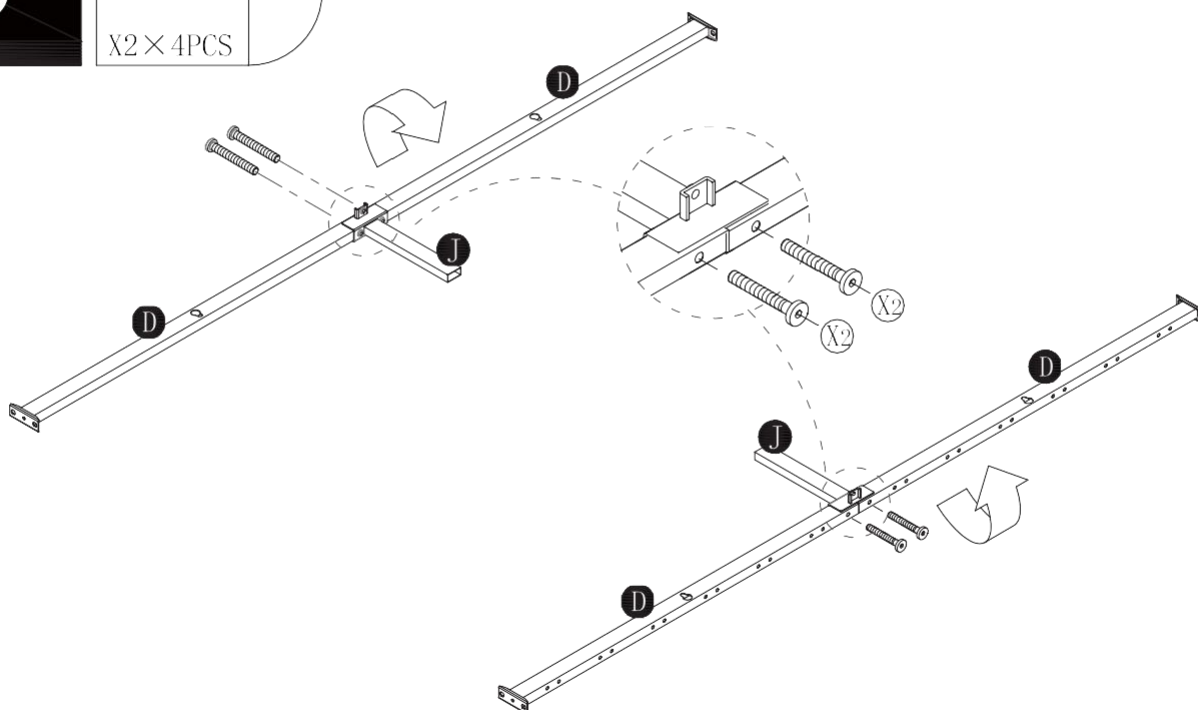


Use side support legs (J) to connect side rails.

10

X5 × 4PCS

M × 2PCS

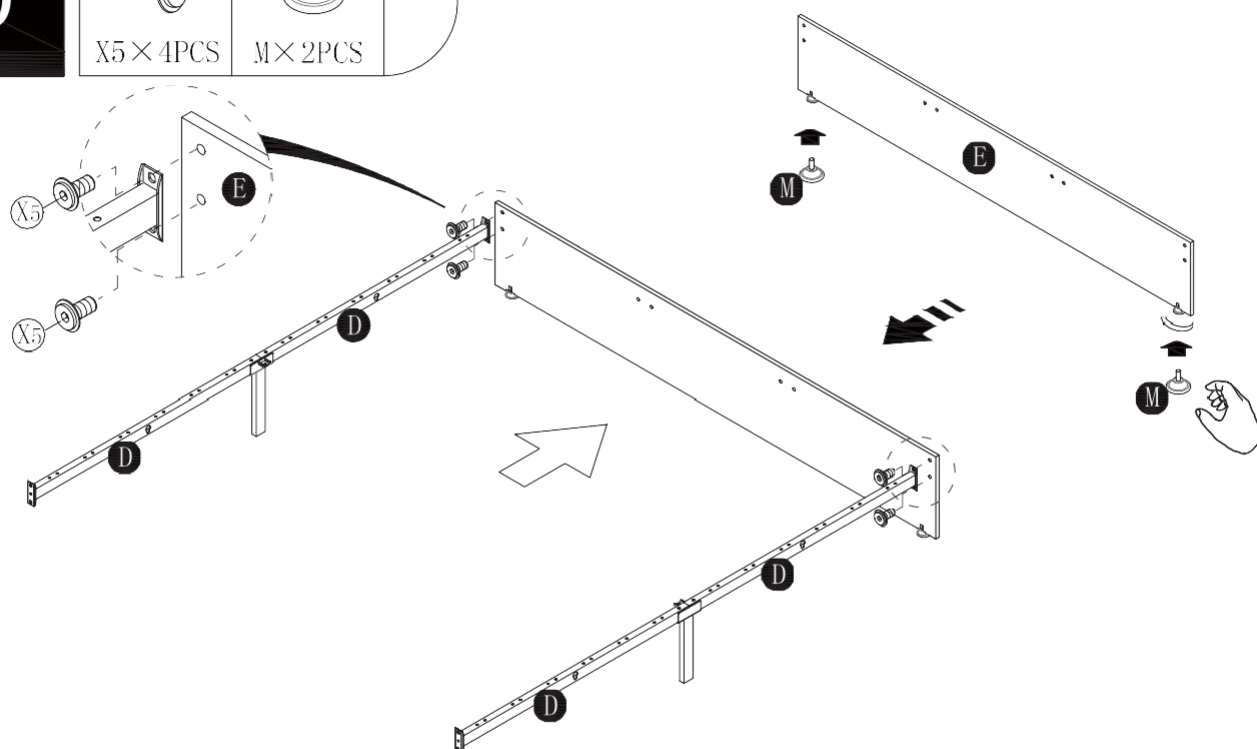


First, assemble the feet of footboard.
Second, connect side rails with footboard.

11



X5 × 4PCS

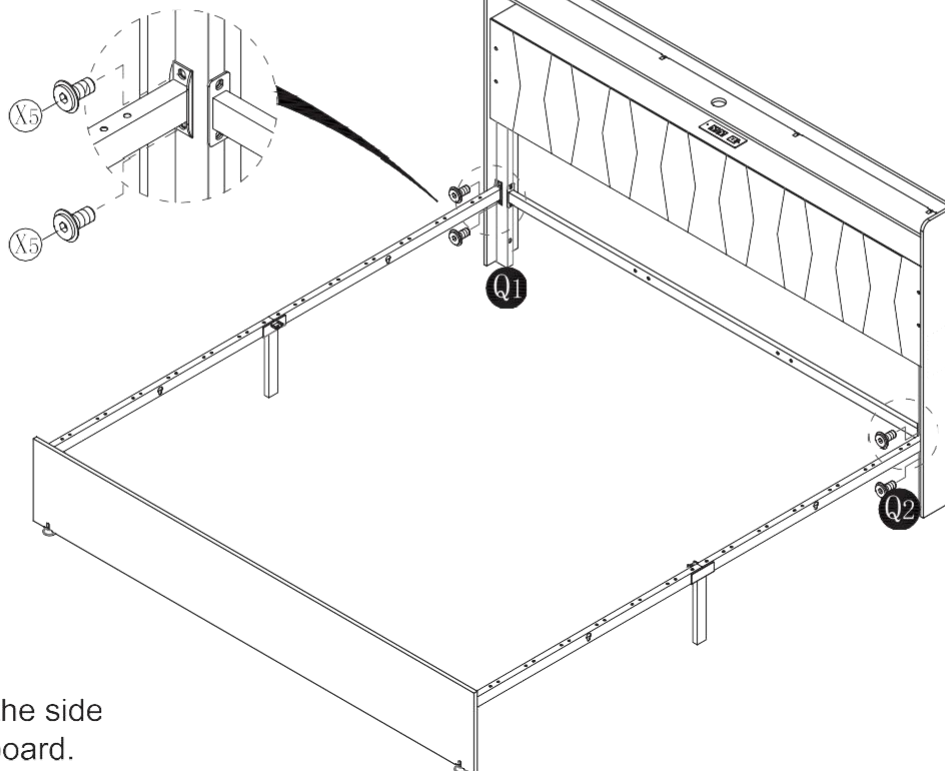


Then, connect the side rails with headboard.

12



X3 × 8PCS

×2

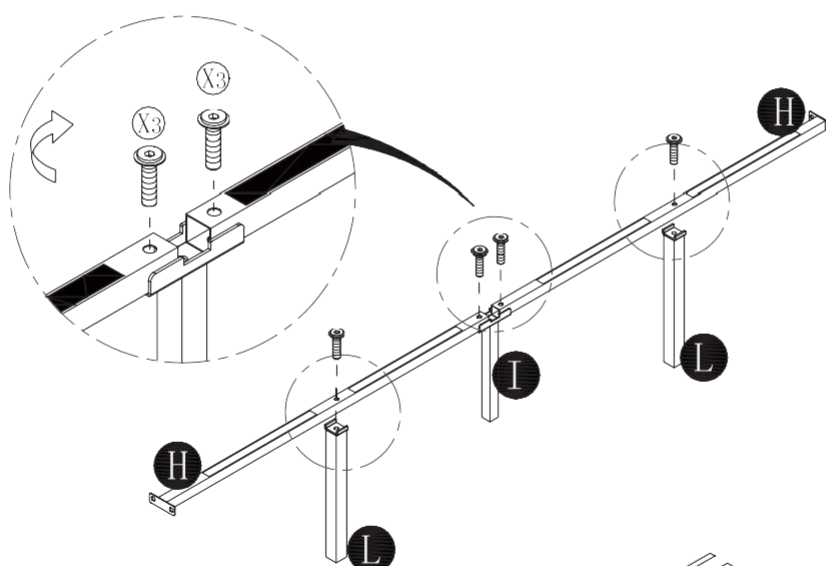


Use screws to connect center support rails (H) and support legs (I and L).

13




X5 × 8PCS

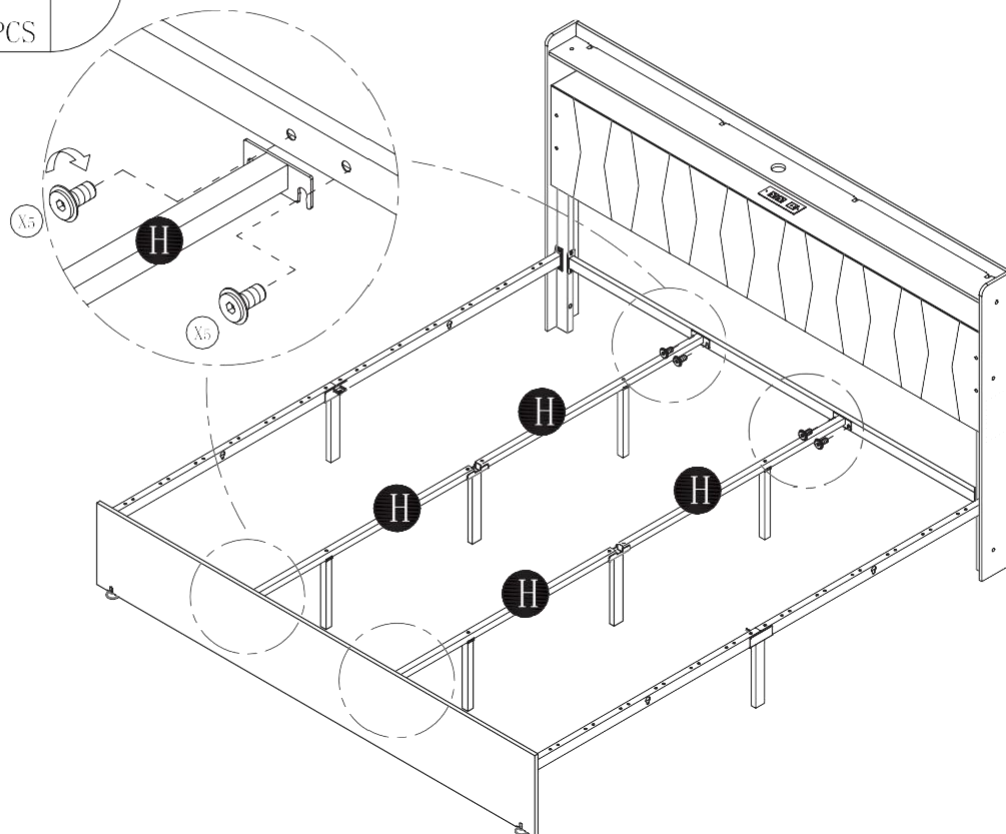

14




X3 × 2PCS

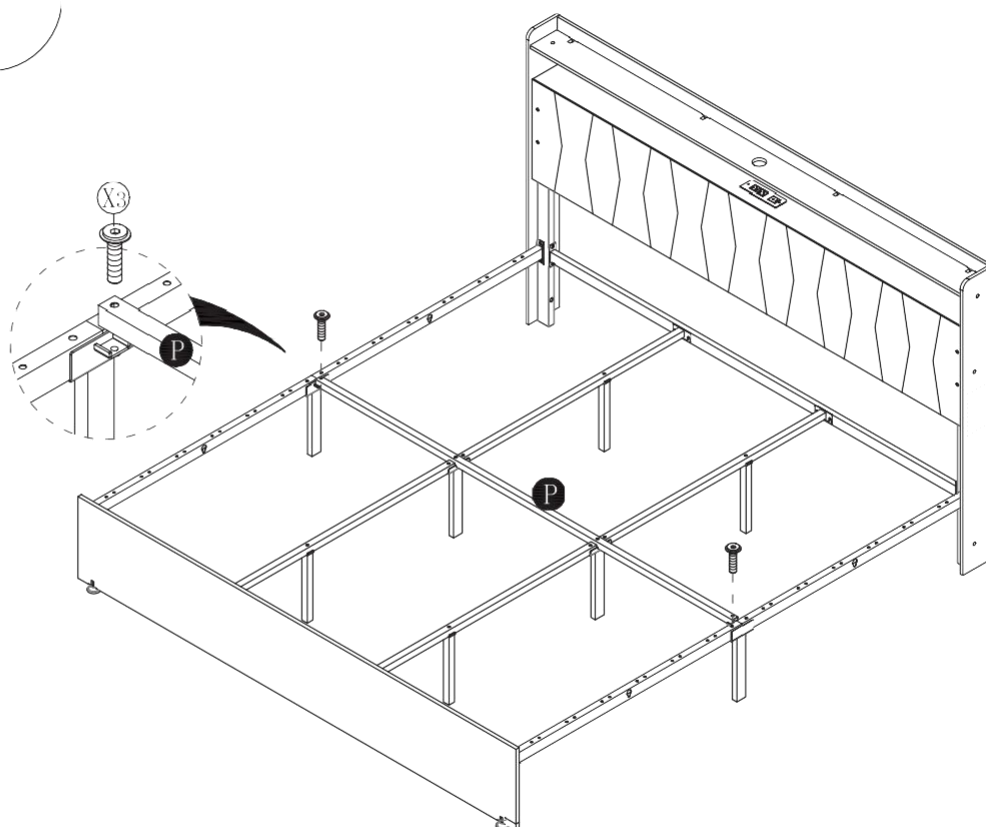



15

X2 × 2PCS

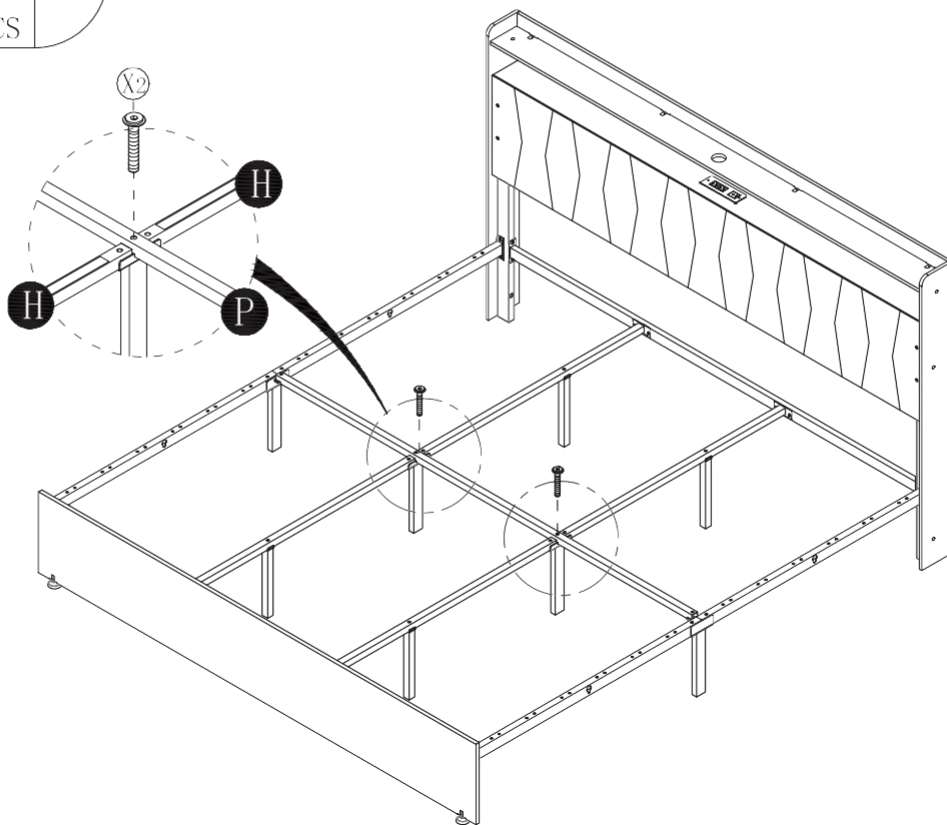

16


O × 24PCS

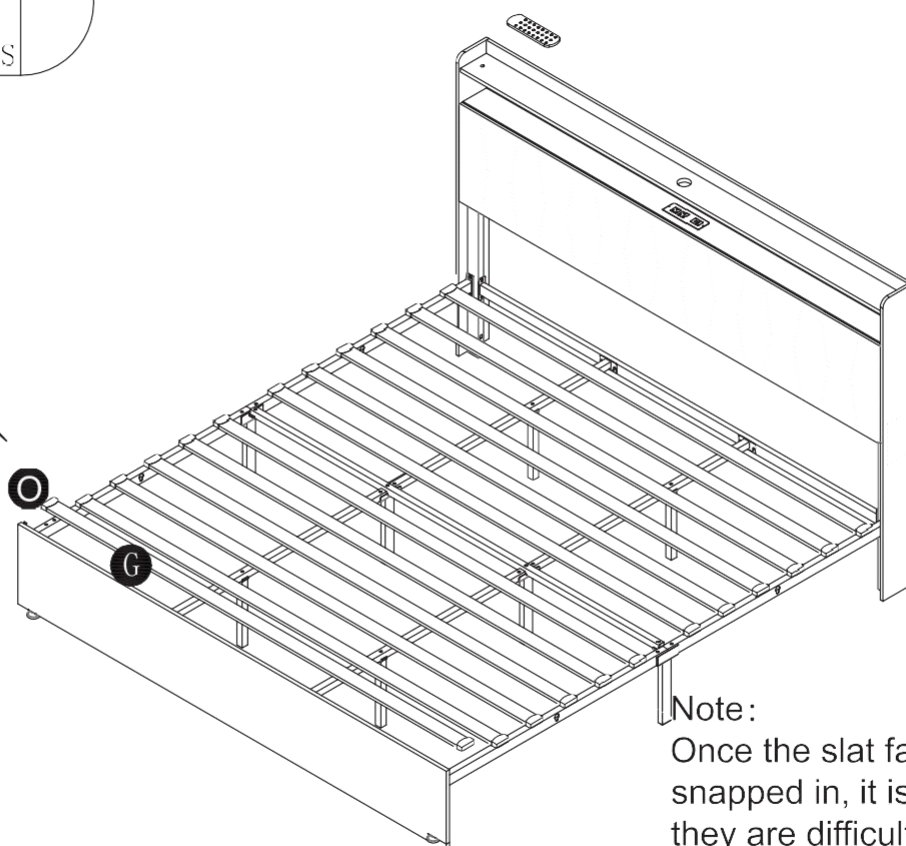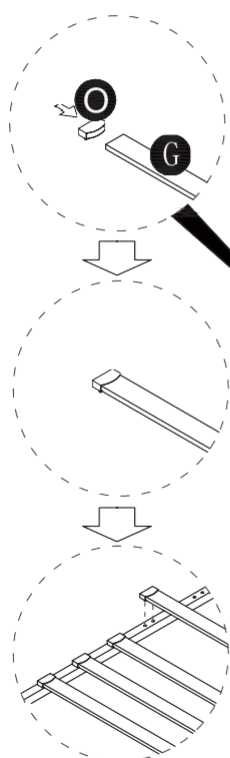

Note:
Once the slat fasten kits are snapped in, it is normal that they are difficult to take off.

17

x4

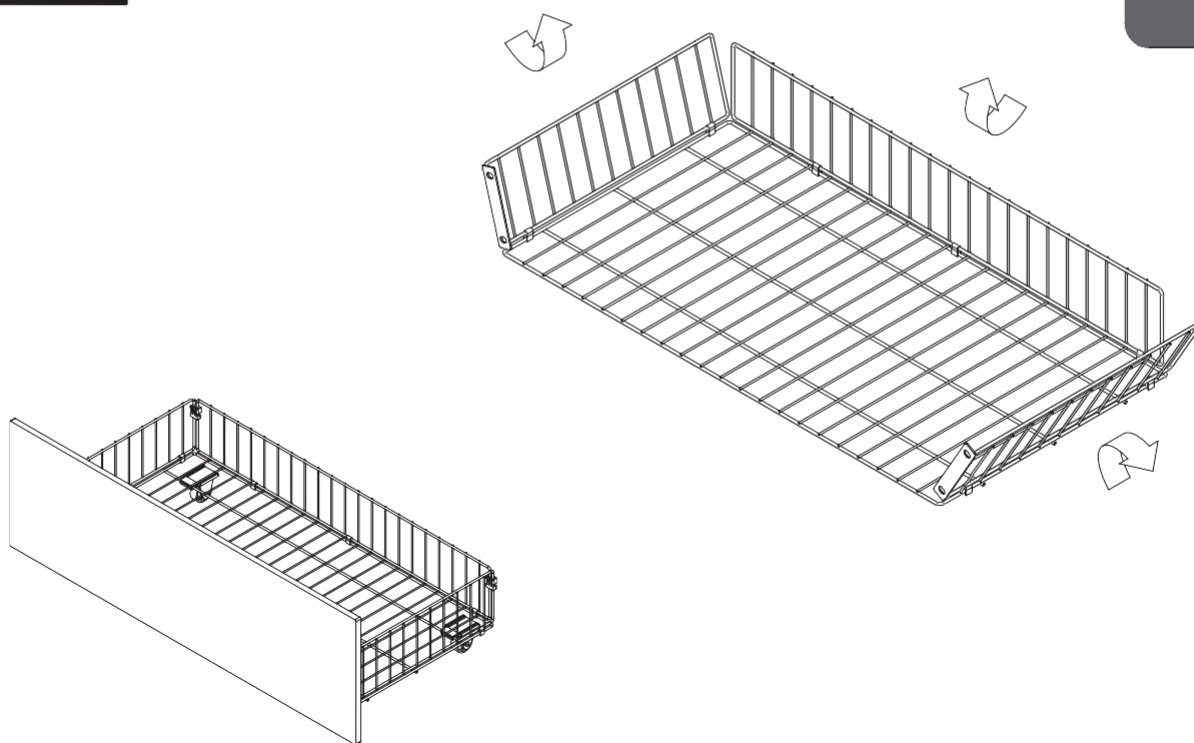


18




V2 × 8PCS

x4

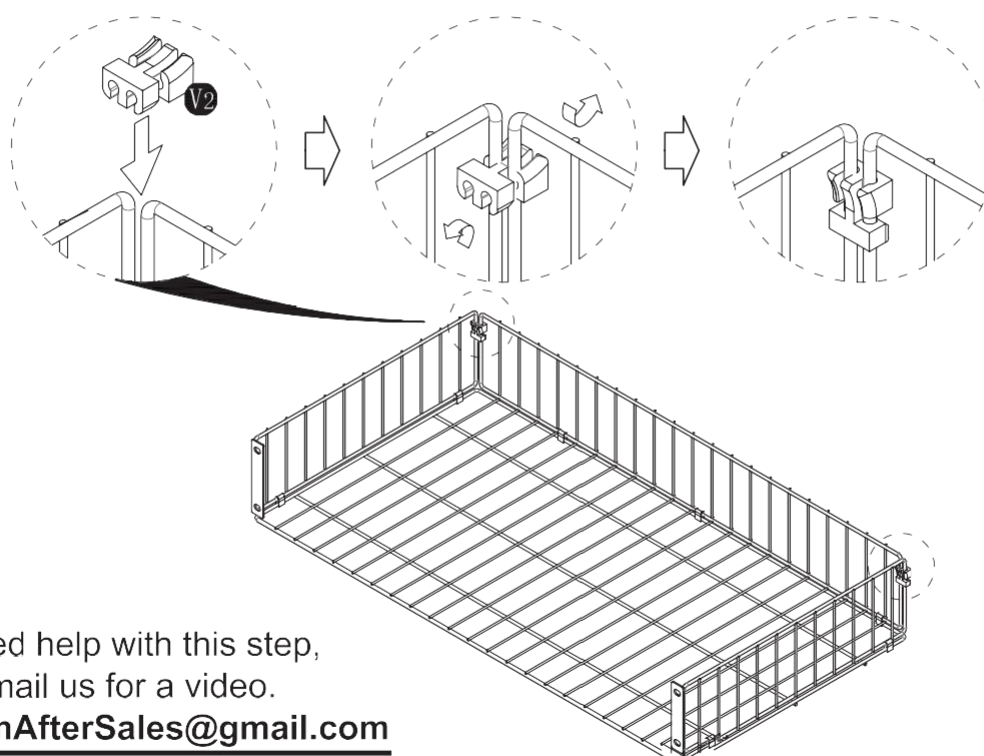


If you need help with this step,
please email us for a video.
EasyComAfterSales@gmail.com

19

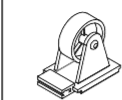

V1 × 16PCS

×4

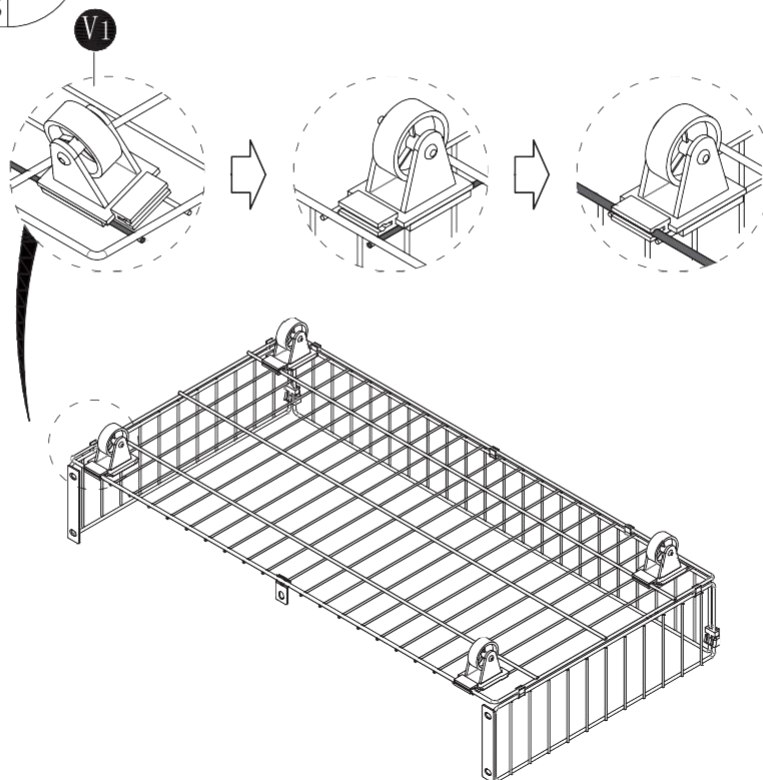

20




X7 × 20PCS



V3 × 4PCS

×4

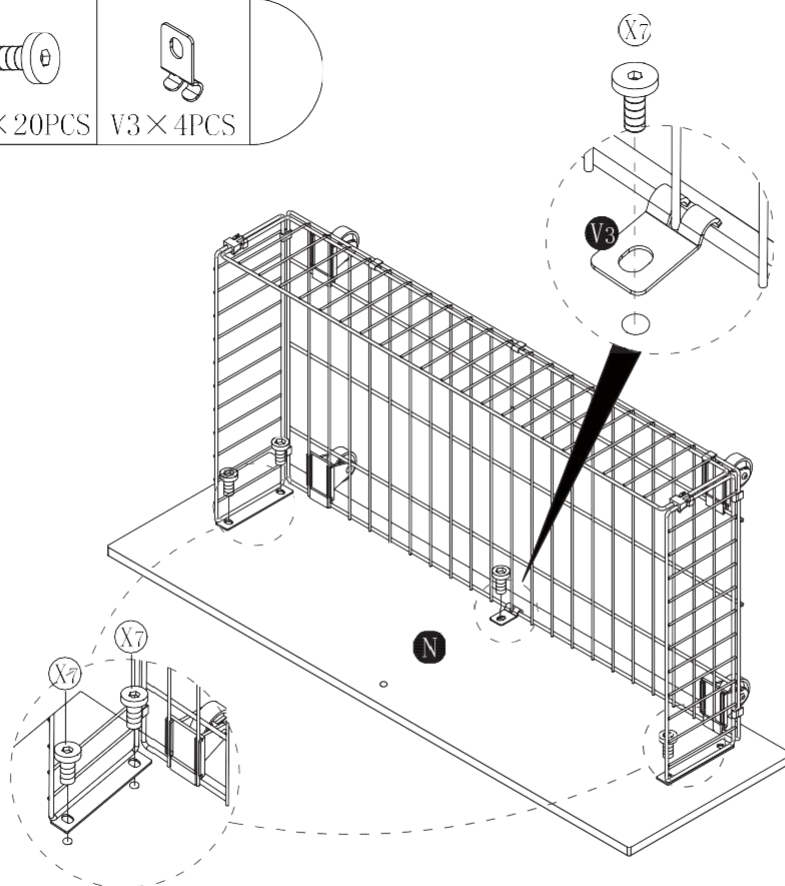

21




X6 × 4PCS





W × 4PCS

×4

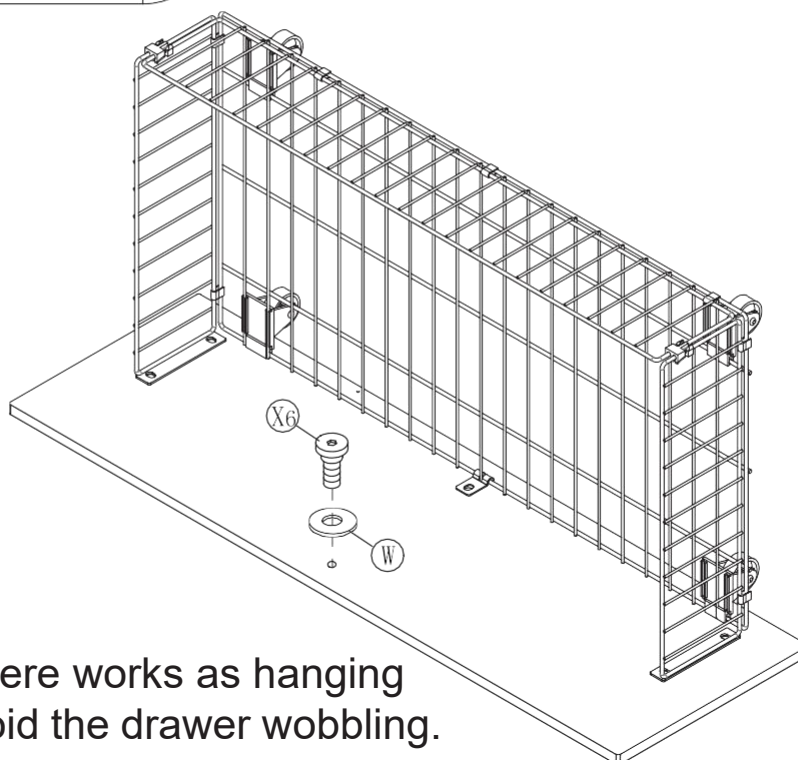


The (X6) screw here works as hanging hardware to avoid the drawer wobbling.

22

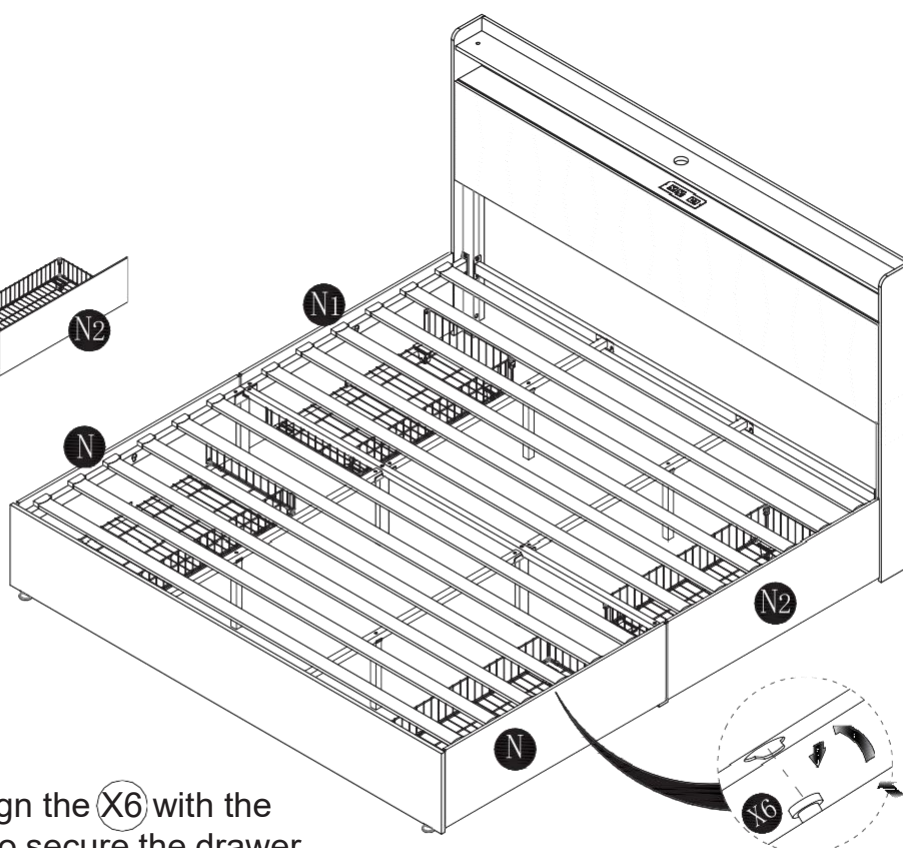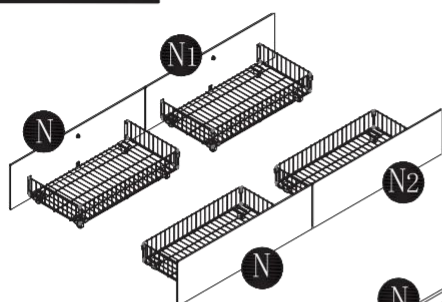


Lift the drawer to align the (X6) with the hole of the side rail to secure the drawer.
Lift the drawer board to pull out the drawer.

23

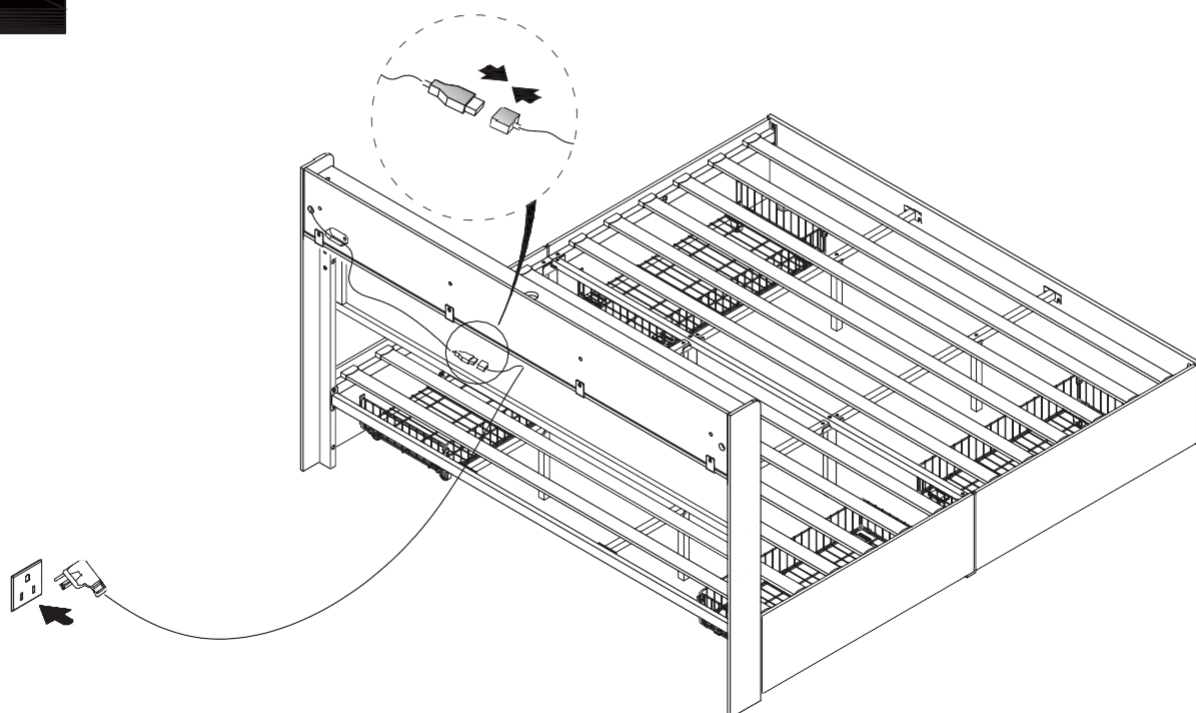

24

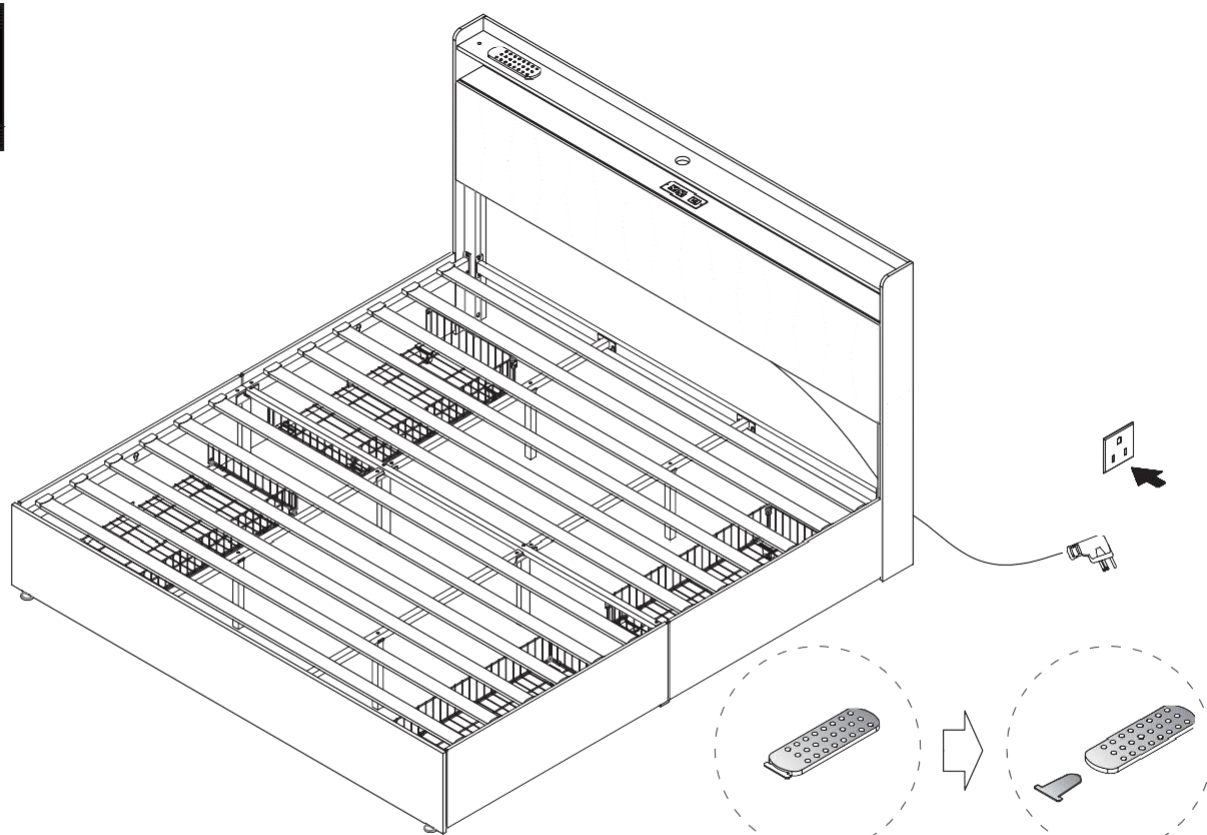

Installation Completed

Remove the insulation film
before using the remote controller