



# ASSEMBLY INSTRUCTIONS

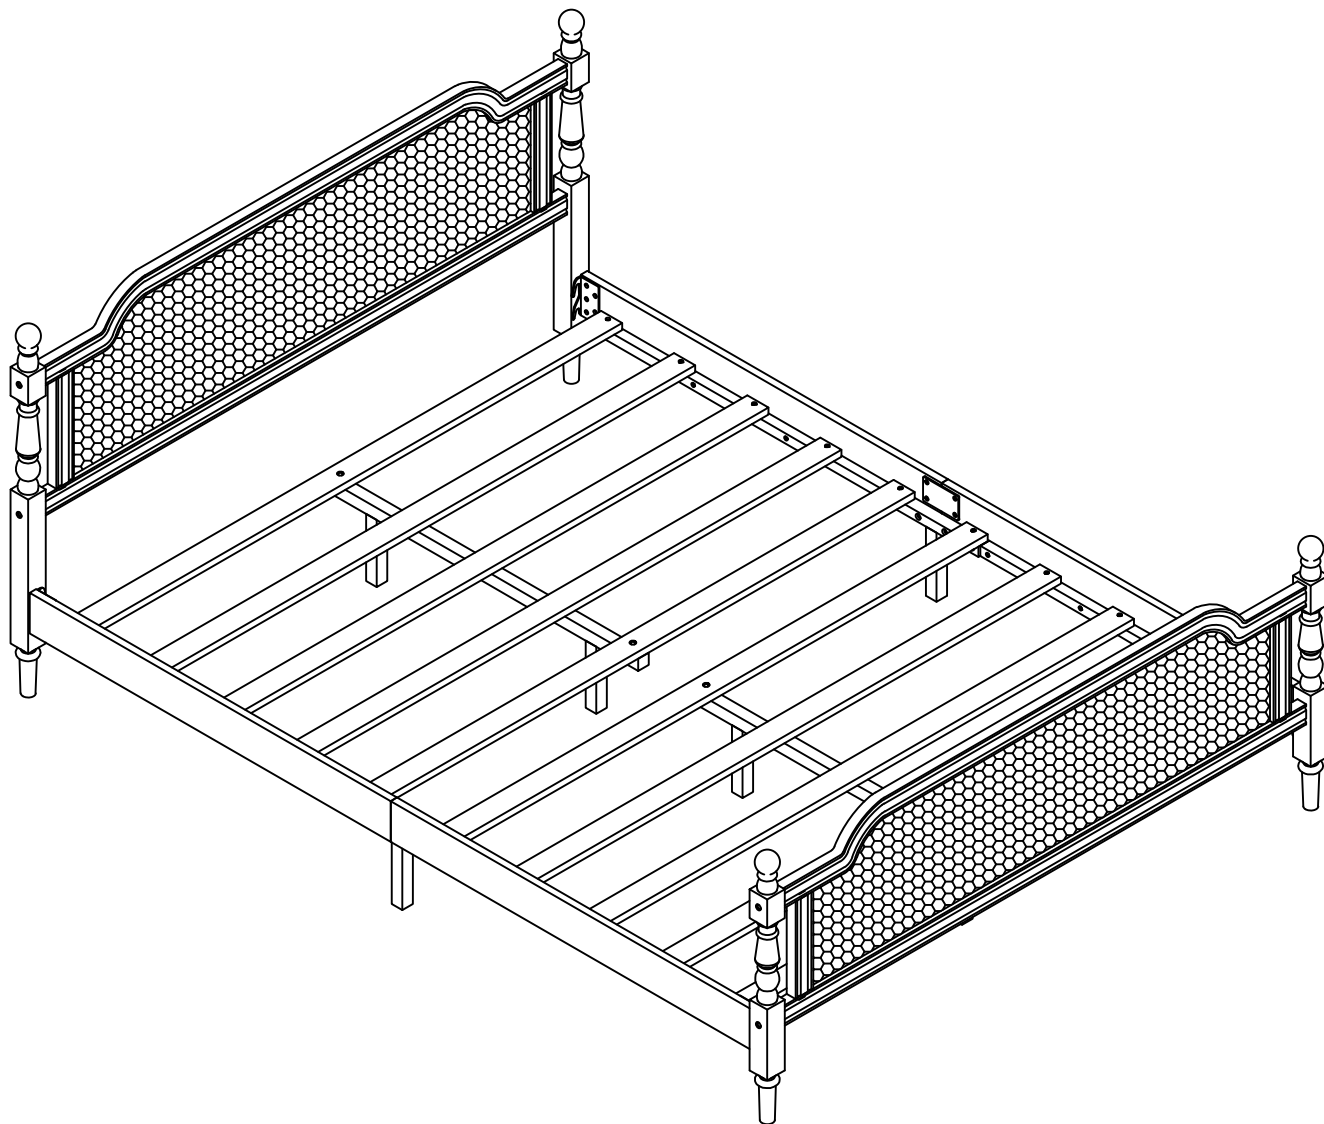








**IMPORTANT NOTE :**

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP.
















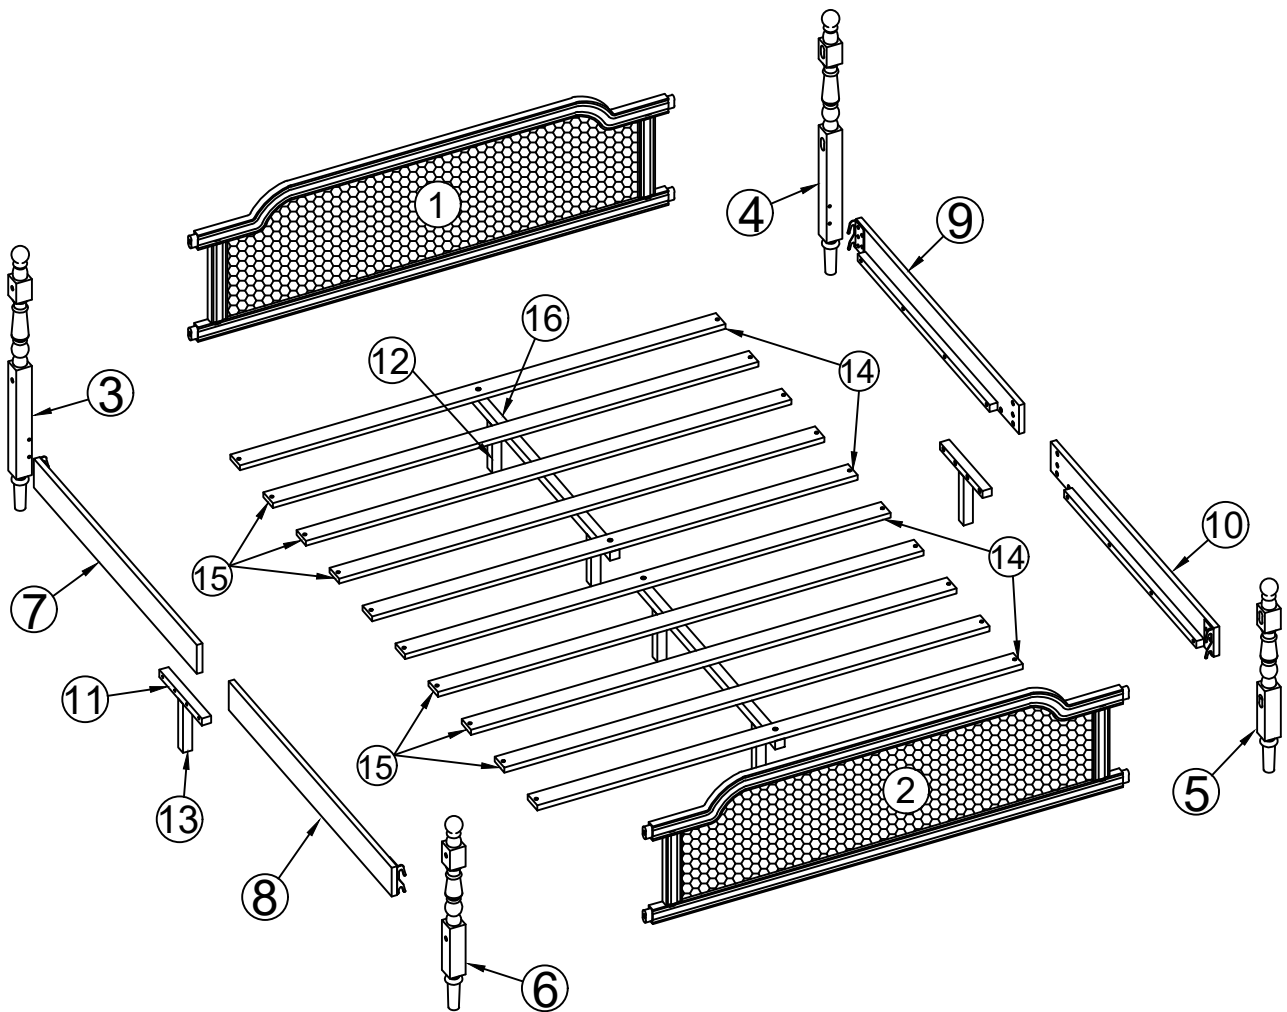
## ASSEMBLY OVERVIEW




## HARDWARE LIST FOR ONE BED



<b>A</b>  M6 x 60mm	<b>B</b>  M6 x 30mm
BOLT (8 PCS)	BOLT (14 PCS)
<b>C</b>  M6 x 15mm	<b>D</b>  Ø4 x30 mm
BOLT (10 PCS)	FLAT HEAD SCREW (24 PCS)
<b>E</b> 	<b>F</b> 
WASHER (8 PCS)	ALLEN KEY
<b>G</b> 	
METAL RECTANG (2 PCS)	

# PART LIST FOR ONE BED

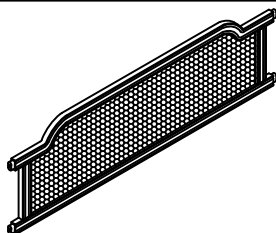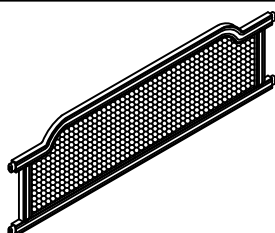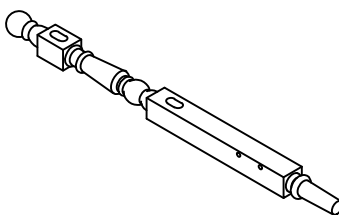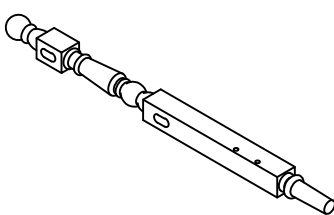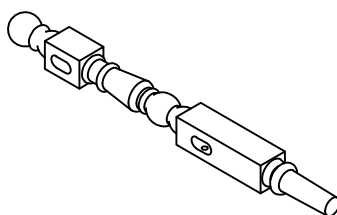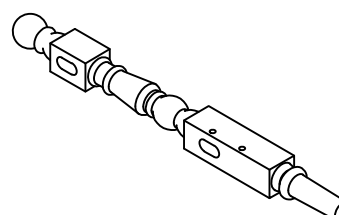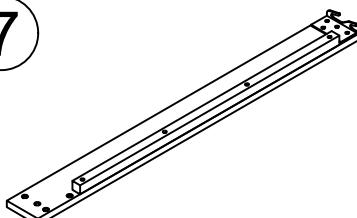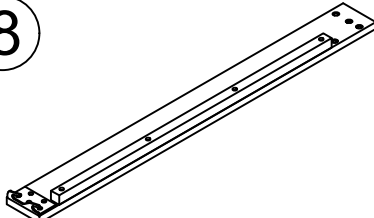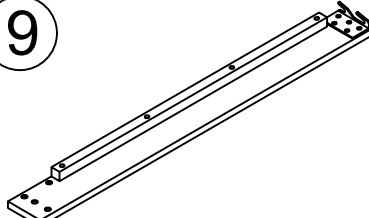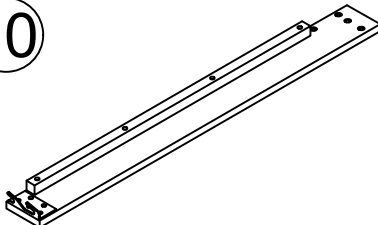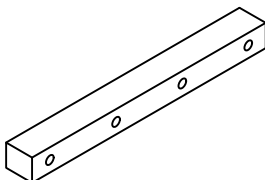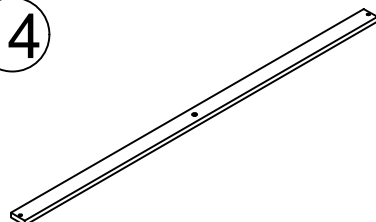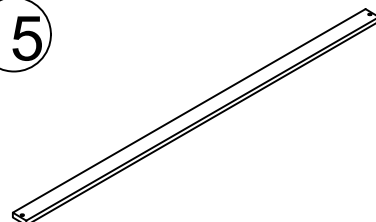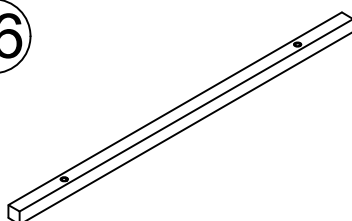
<div>1</div> 	<div>2</div> 	<div>3</div> 
HEAD BOARD (1 PCS)	FOOTBOARD (1 PCS)	LEG 1 (1 PCS)
<div>4</div> 	<div>5</div> 	<div>6</div> 
LEG 2 (1 PCS)	LEG 3 (1 PCS)	LEG 4 (1 PCS)
<div>7</div> 	<div>8</div> 	<div>9</div> 
SIDE RAIL (1PCS)	SIDE RAIL (1PCS)	SIDE RAIL (1PCS)
<div>10</div> 	<div>11</div> 	<div>12</div> 
SIDE RAIL (1PCS)	HIP LINK BAR (2 PCS)	LEG (4PCS)
<div>13</div> 	<div>14</div> 	<div>15</div> 
LEG (2PCS)	SLATS (4 PCS)	SLATS (6 PCS)
<div>16</div> 		
BED SUPPORT BAR (2 PCS)		
4 OF 13		



STEP 1:

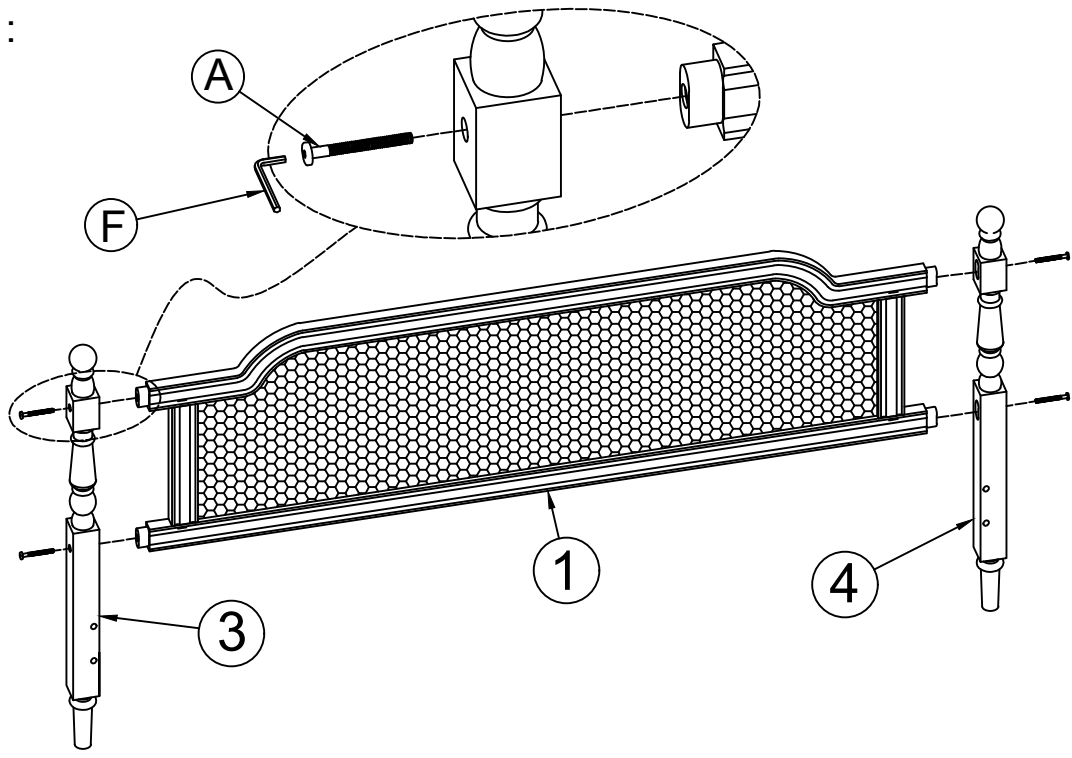


A	M6 x 60mm		4pcs	F	ALLEN KEY	
---	-----------	---	------	---	-----------	---




STEP 2:

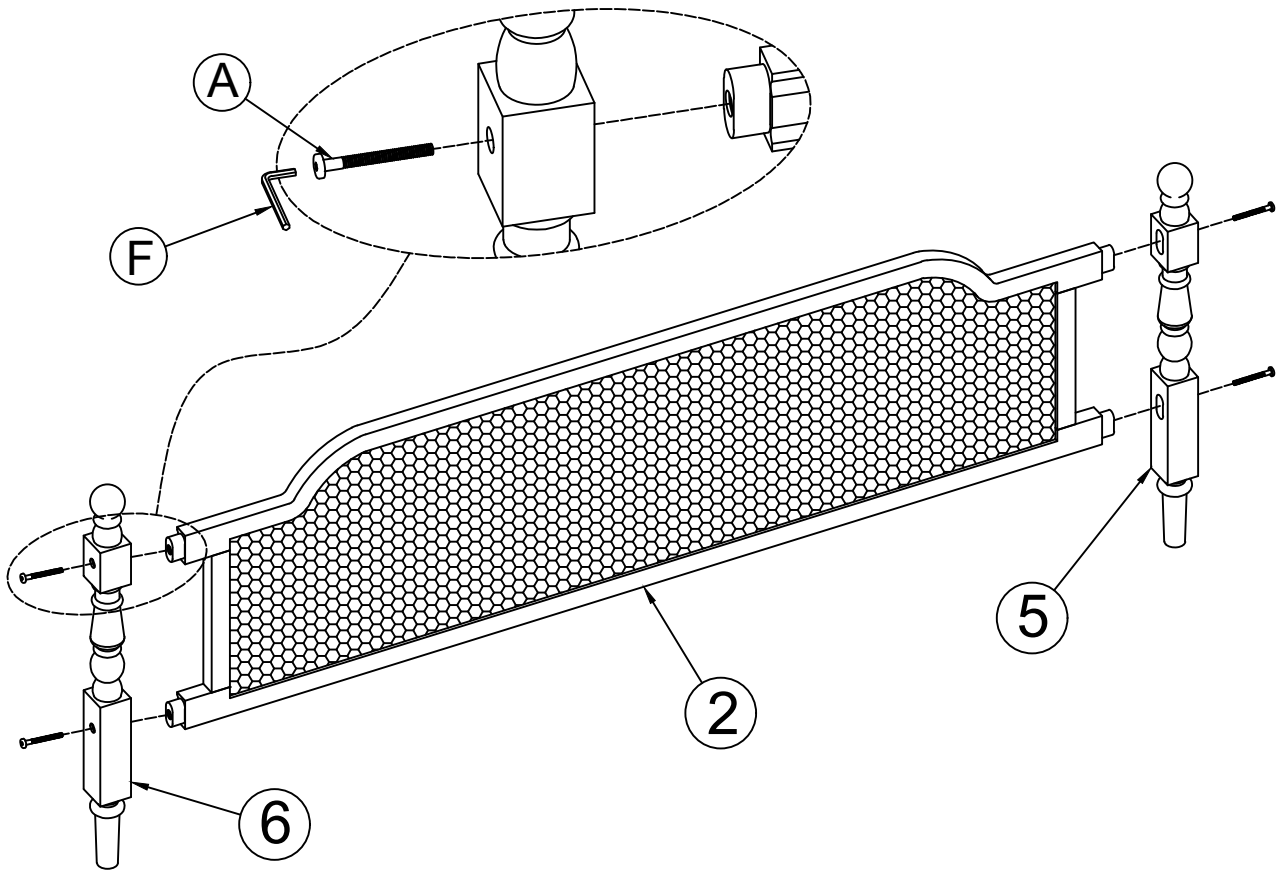


A	M6 x 60mm		4pcs	ALLEN KEY	
---	-----------	---	------	-----------	---

STEP 3:

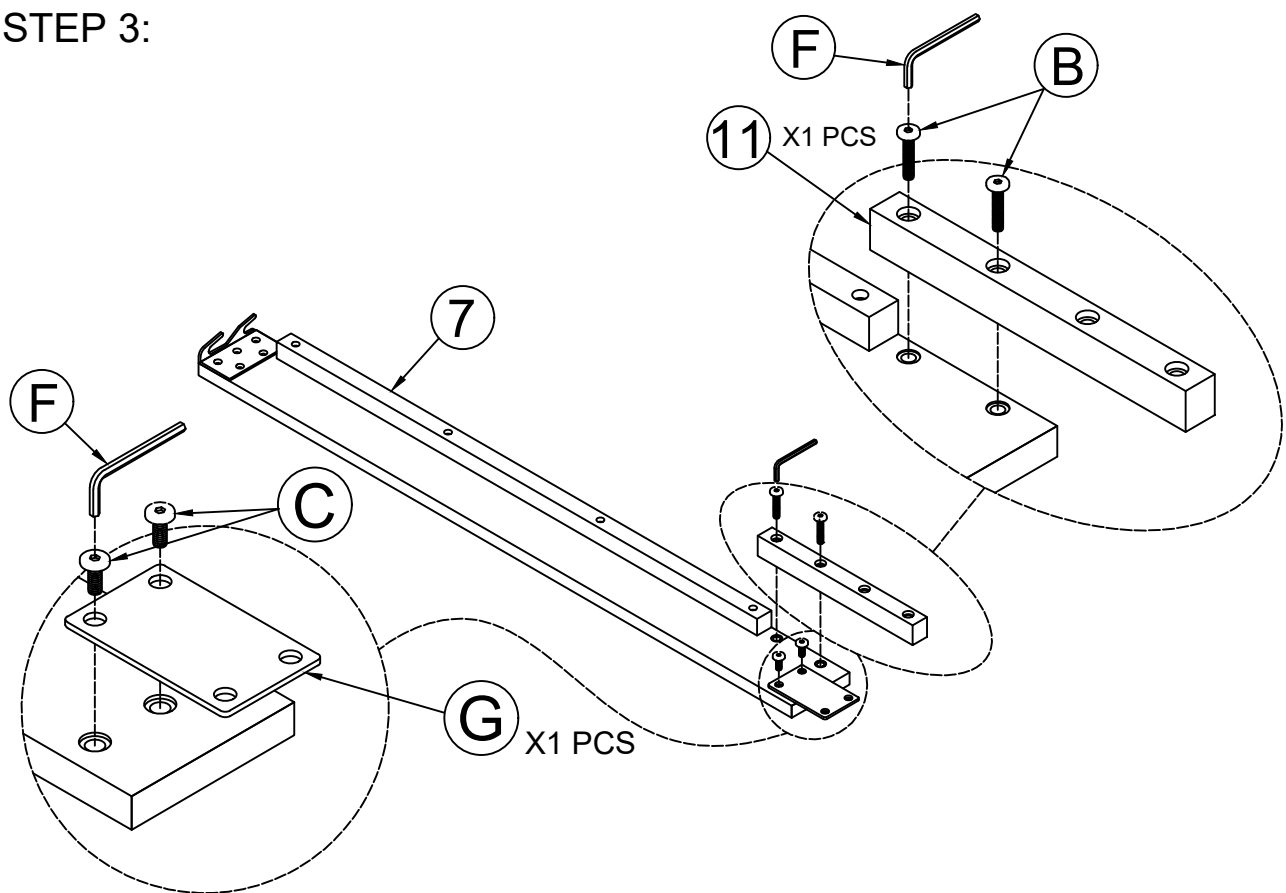





B	M6x30mm		2pcs	F	ALLEN KEY	
C	M6x15mm		2pcs			

STEP 4:

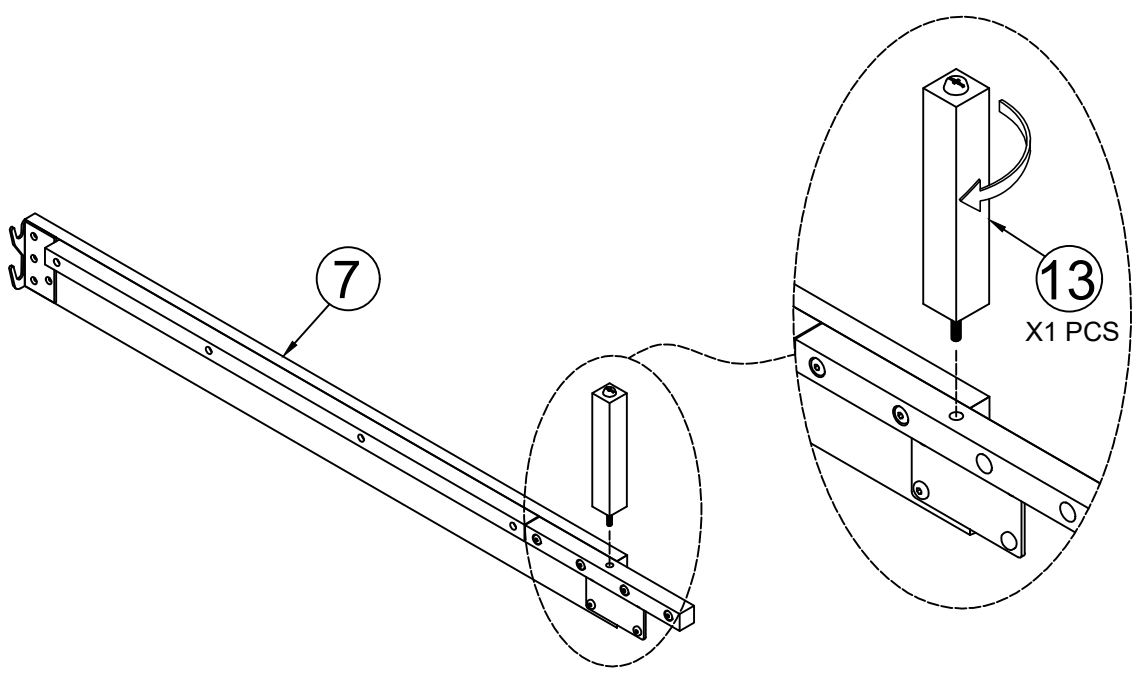


STEP 5:

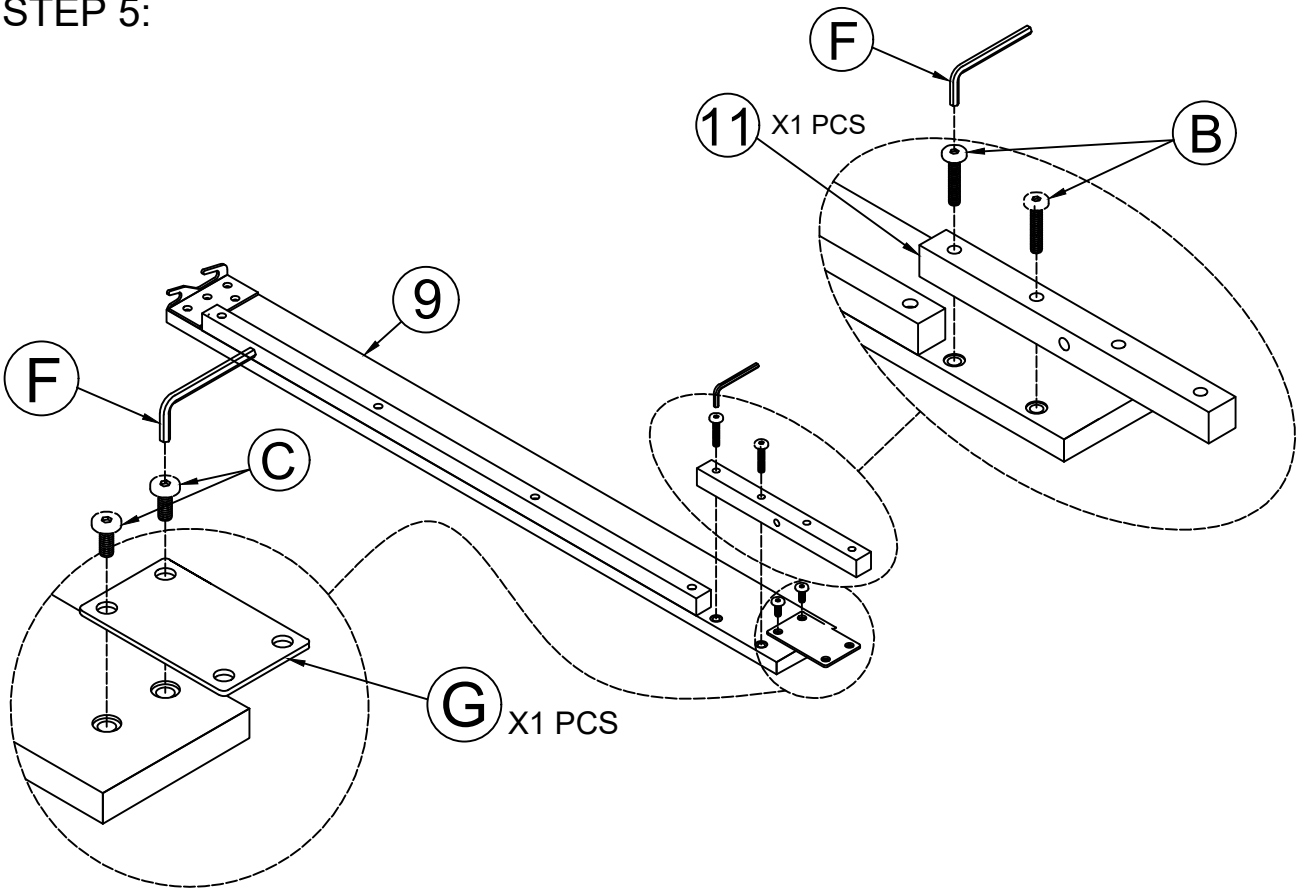





B	M6x30mm		2pcs	F	ALLEN KEY	
C	M6x15mm		2pcs			

STEP 6:

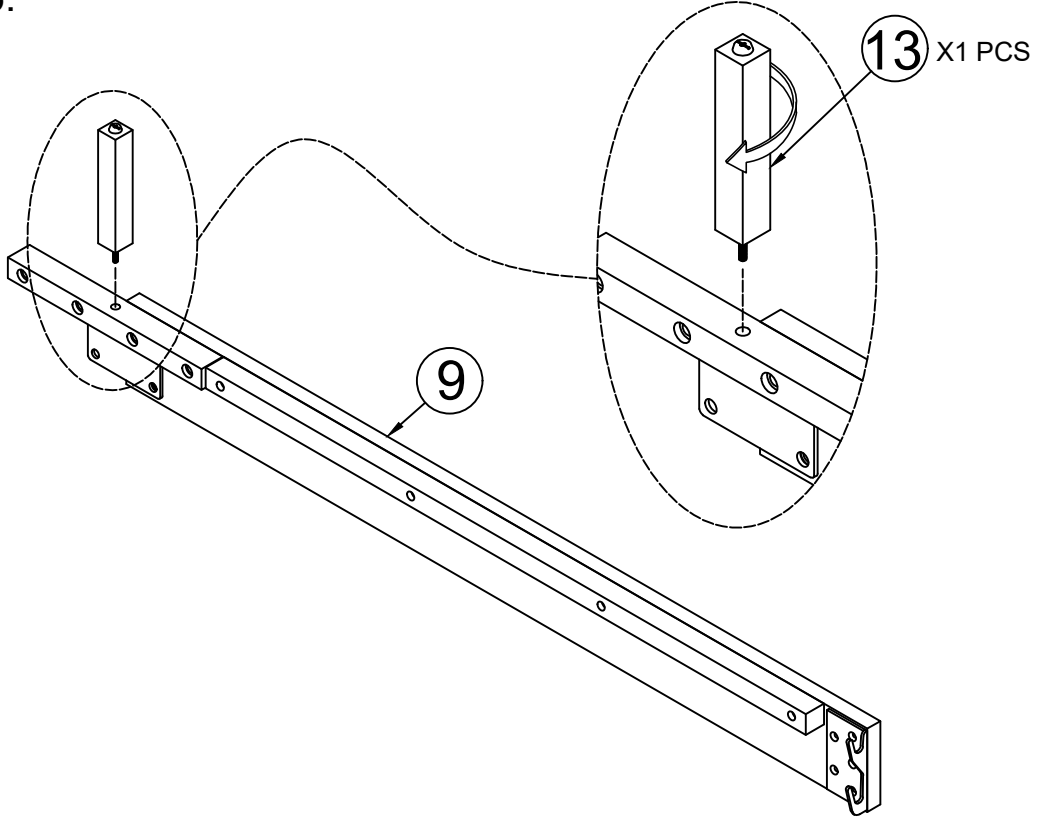


STEP 7:

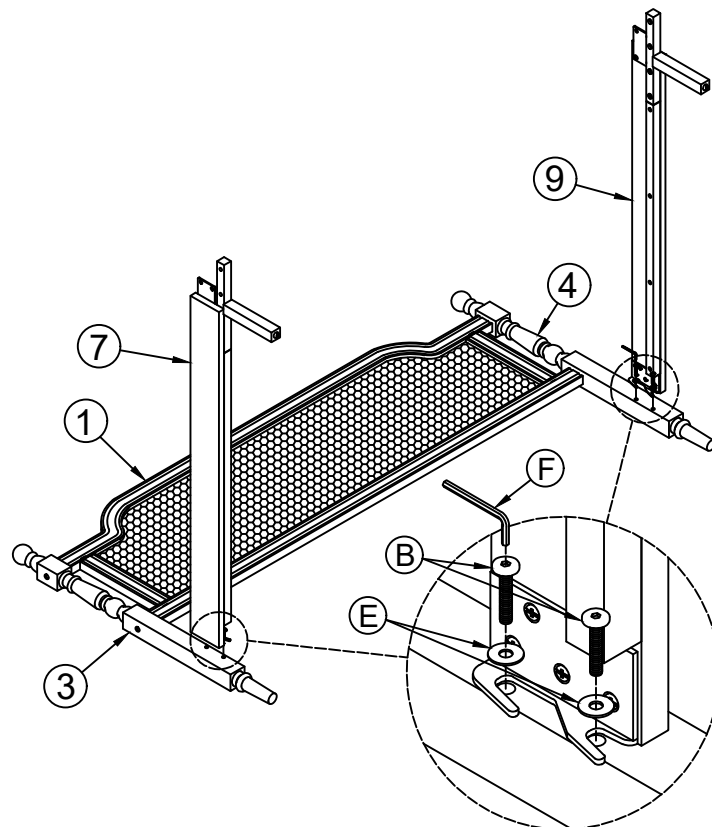


B	M6x30mm		4pcs	F	ALLEN KEY	
E	WASHER		4pcs			

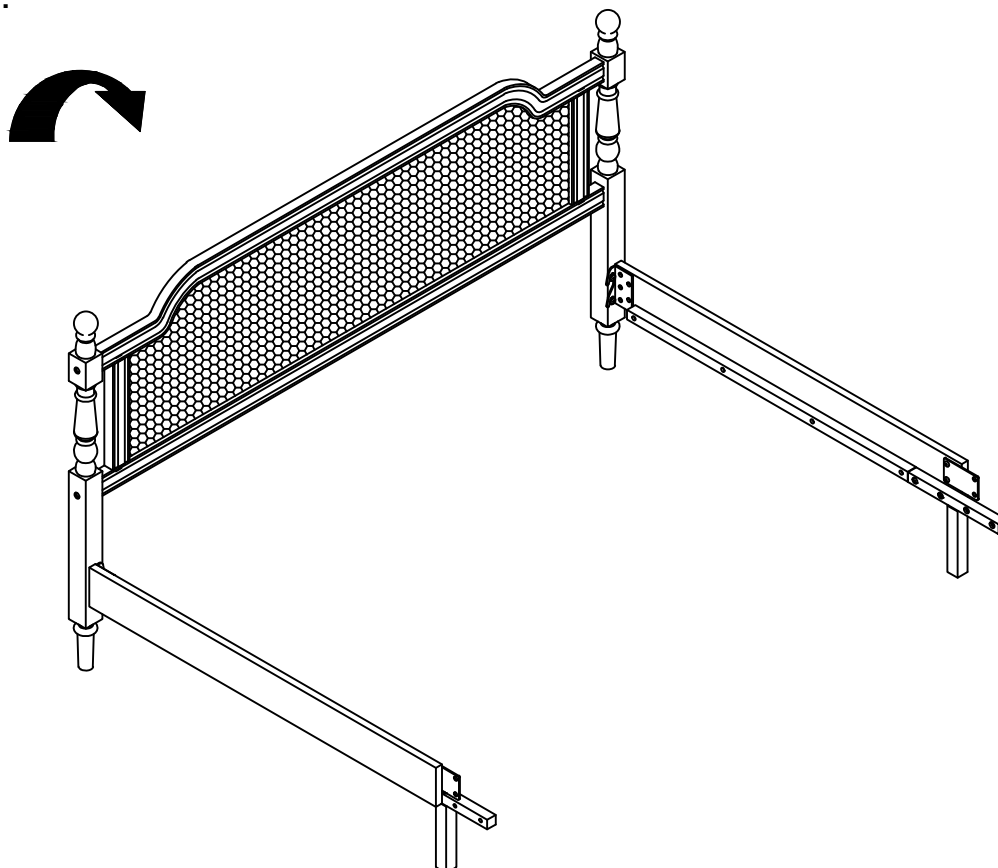



STEP 8:



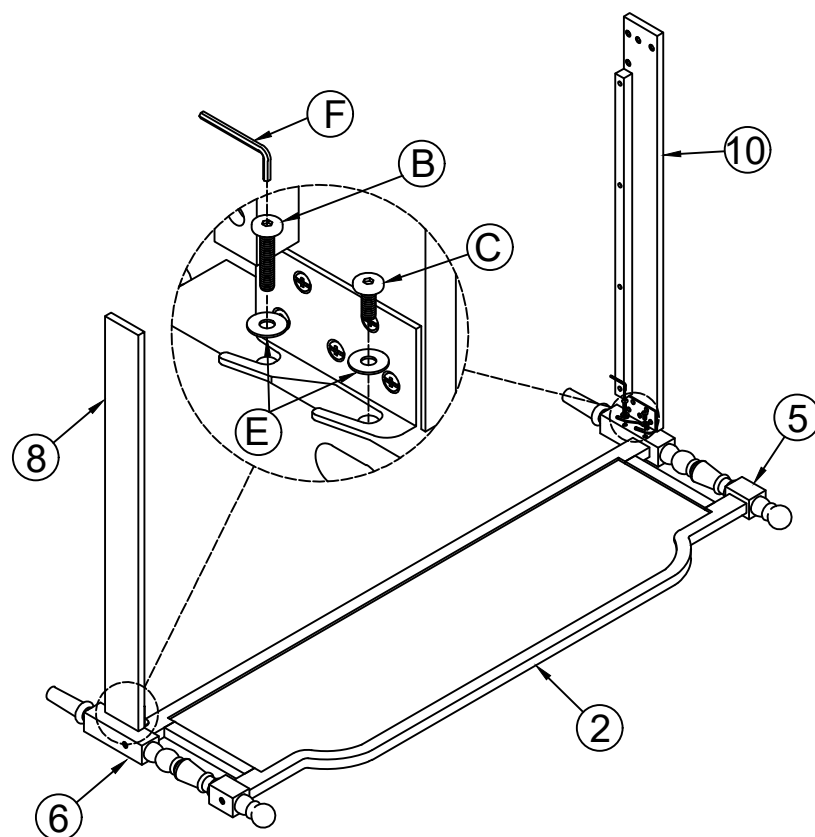


## STEP 9:





<b>B</b>	M6x30mm		2pcs	<b>E</b>	WASHER		4pcs
<b>C</b>	M6x15mm		2pcs	<b>F</b>	ALLEN KEY		


## STEP 10:

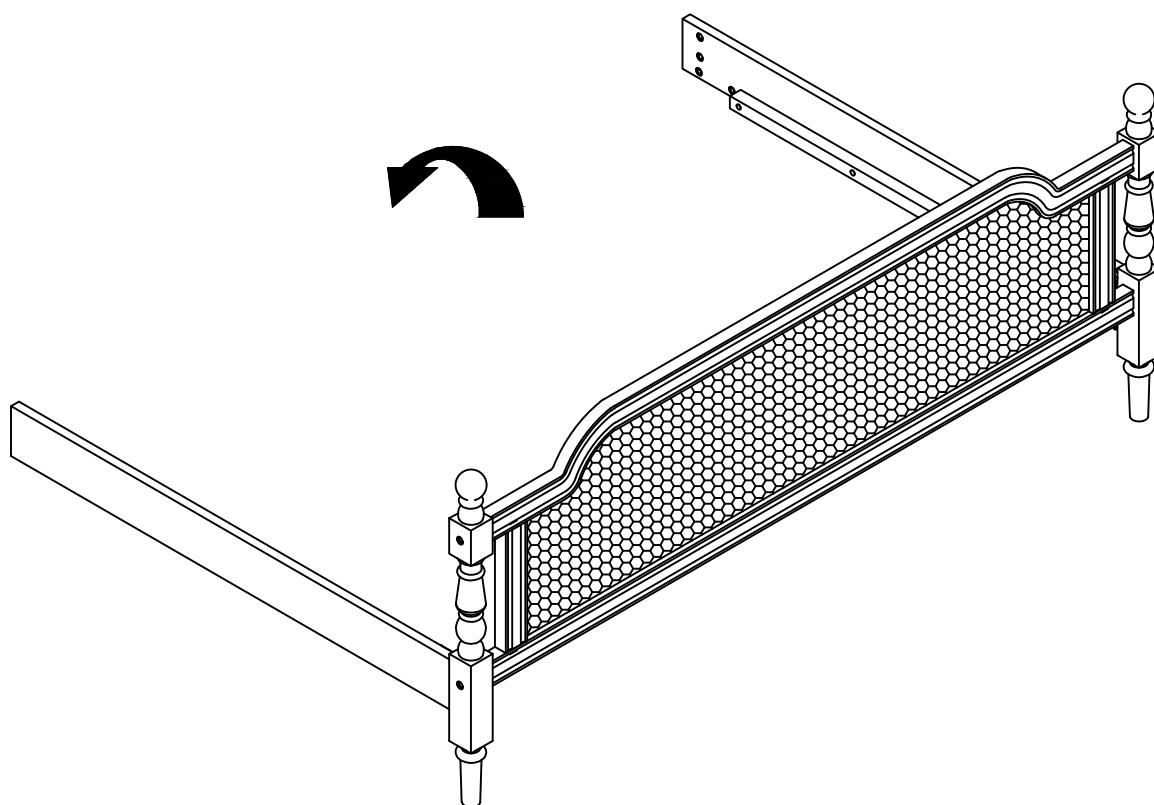

# STEP 11:

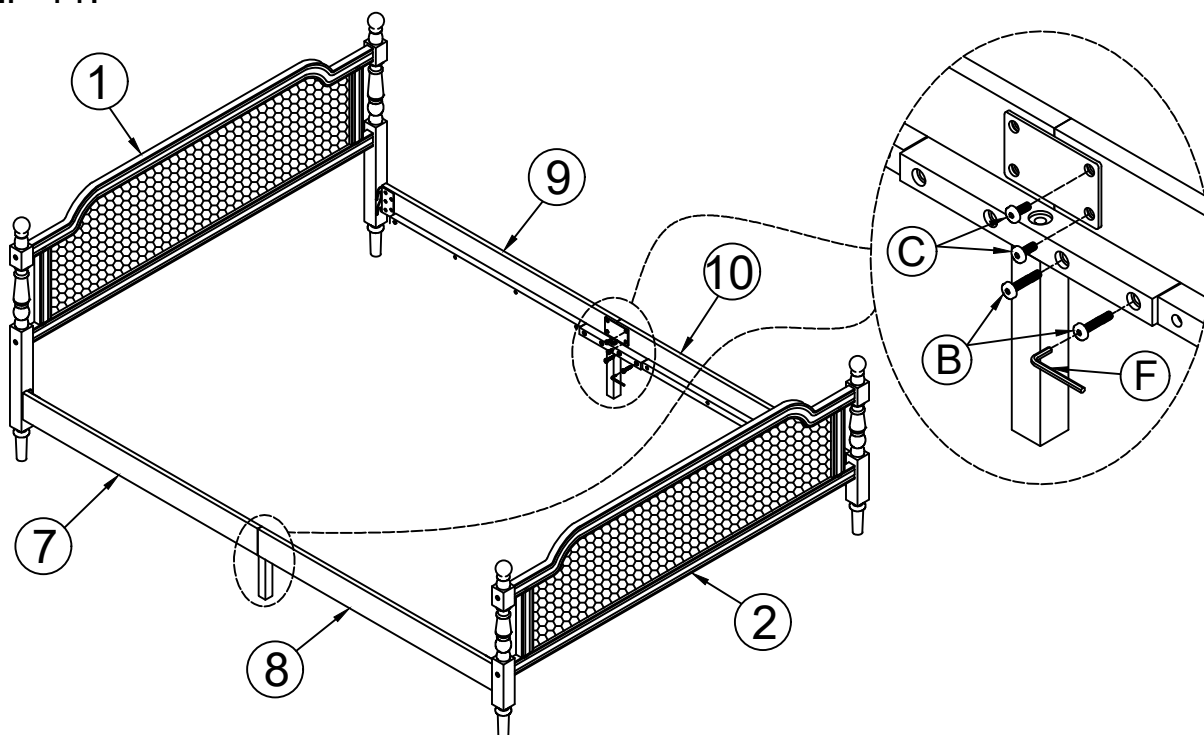


**B** M6x30mm  4pcs

**C** M6x15mm  4pcs

**F** ALLEN KEY 


# STEP 12:

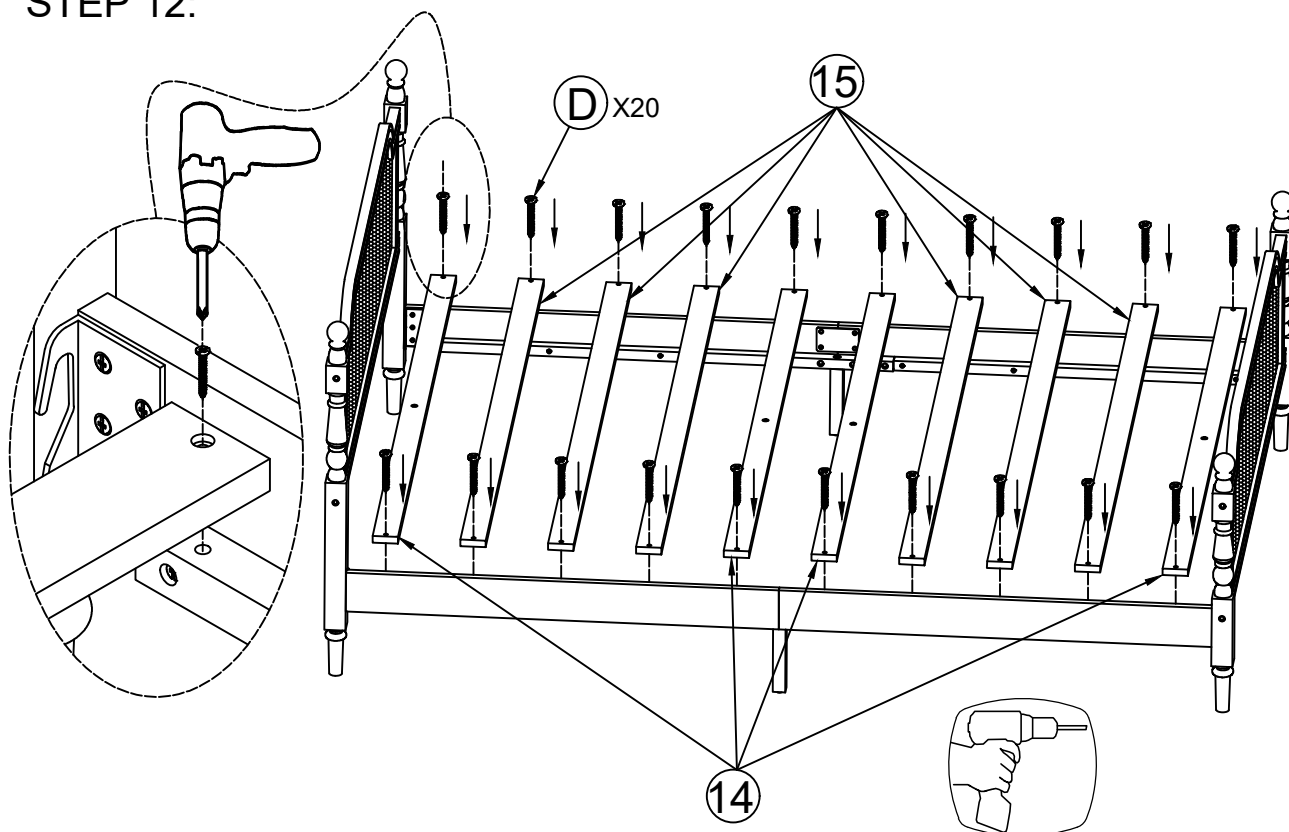


**D** Ø4x30mm  20pcs

SHOULD USE A HAND DRILL FOR FASTER.


STEP 13:

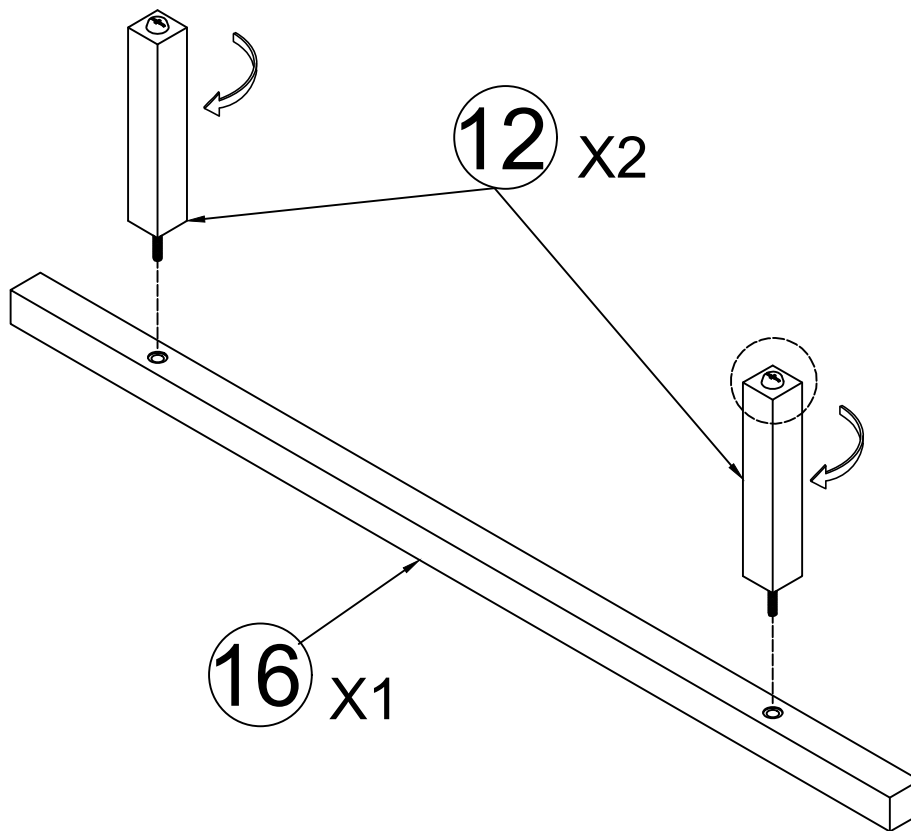

STEP 14:

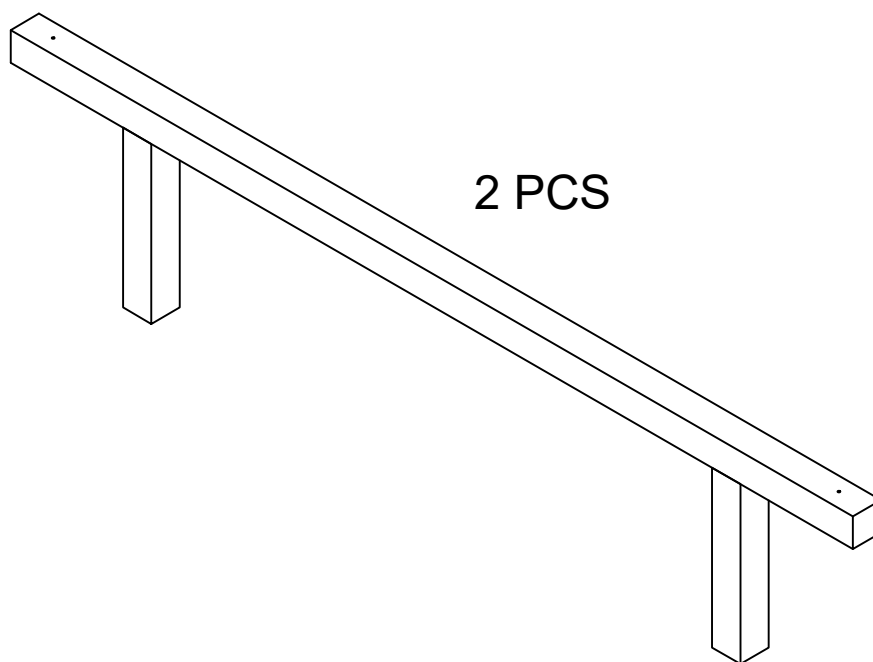

## STEP 15:

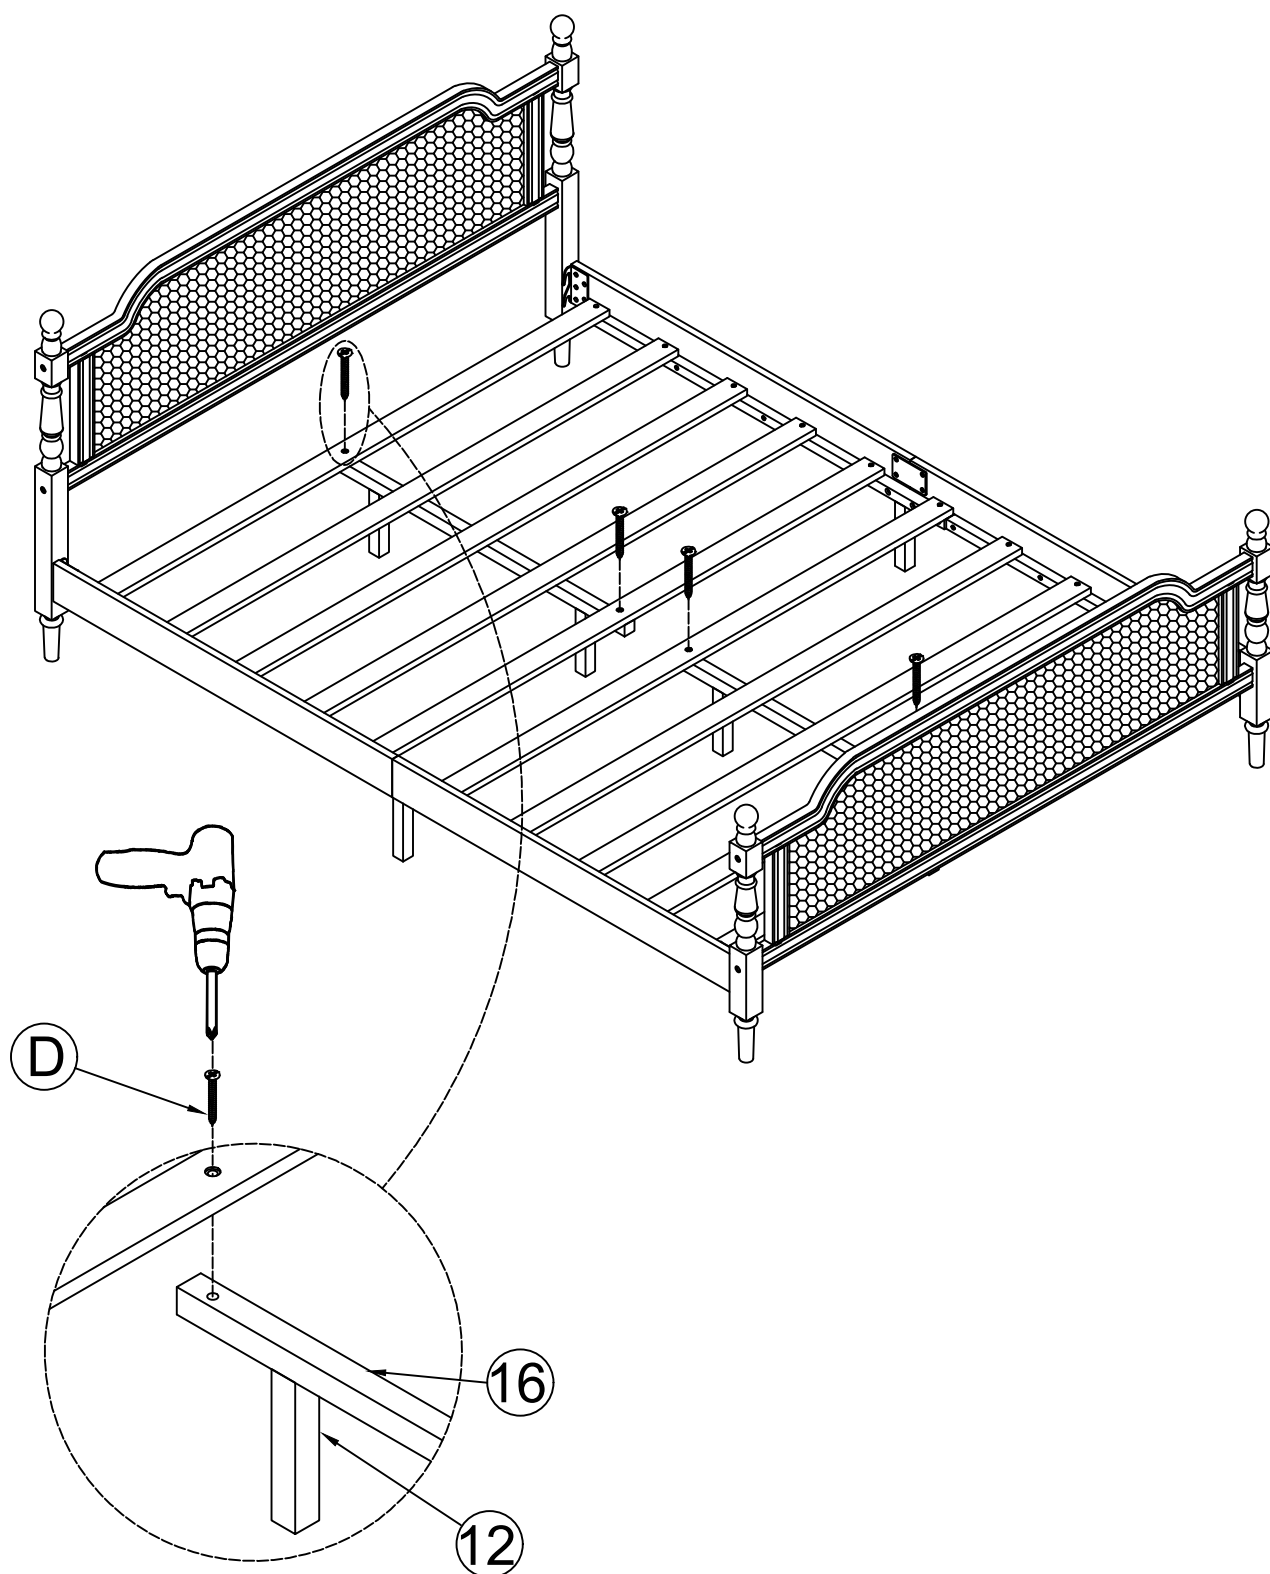

D

Ø4x30mm



4pcs

