
Multi-functional Bed

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

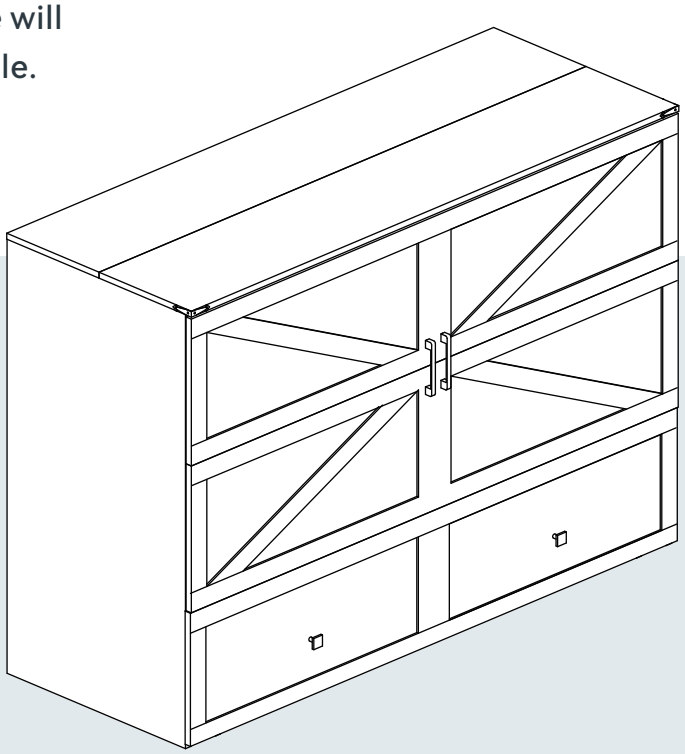

Arrive in 3 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

Dimensions

Width-61.9 inch
Depth-23.5 inch
Height-43.5 inch

EN

CONTACT US

- **Email: service@grandtunnel.com**
  In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:


- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

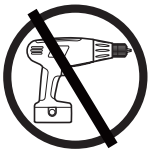

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is comKlete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly .

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

· By Email:
Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:
· A description of the missing parts and a photo of the parts list.
· Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:


· Customer Service Email: service@grandtunnel.com

Helpful Tips


To process your issue efficiently, please prepare the following information:
· Order details (order number, purchase platform, purchase date).
· Clear photos or videos.
· We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Panels(Box 1)


Please check you have all the panels listed below

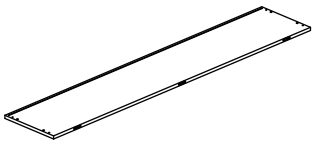


1 (1575x299x15mm x1)

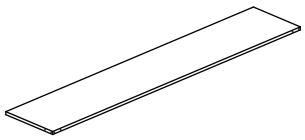


2 (1575x299x15mm x1)

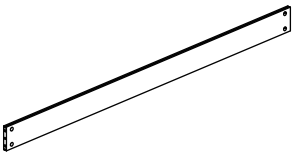


7 (1541x97x15mm x1)

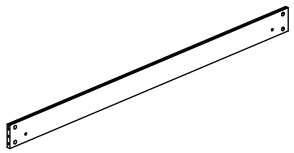


8 (1541x97x15mm x1)

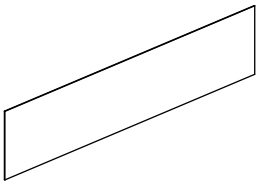


10 (1548x332x4mm x2)

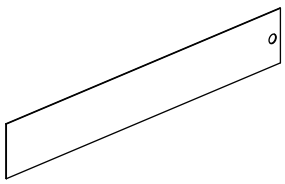


11 (1548x238x4mm x1)

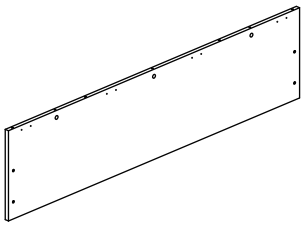


15 (1537x367x17mm x1)

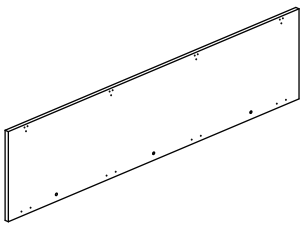


16 (1537x367x17mm x1)

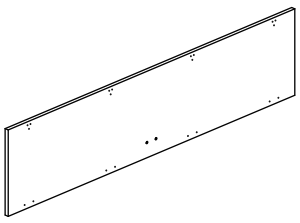


17 (1578x370x17mm x1)

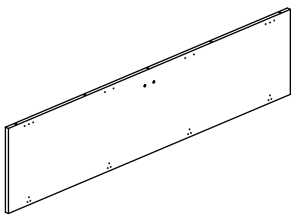


18 (1578x370x17mm x1)

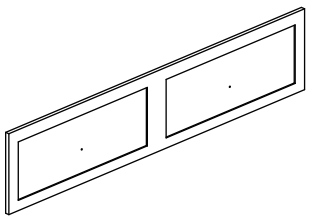

28 (1572x337x17mm x1)

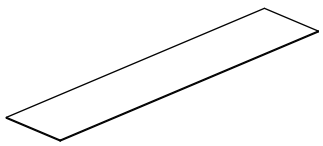


30 (1195x247x3mm x2)

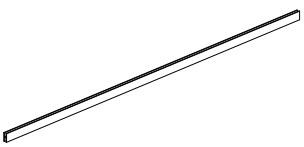


32 (1183x12x6mm x1)

Parts List - Panels(Box 2)


Please check you have all the panels listed below

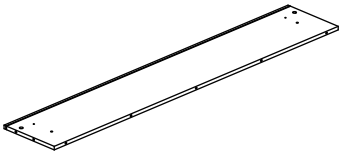


5 (1541x270x15mm x1)

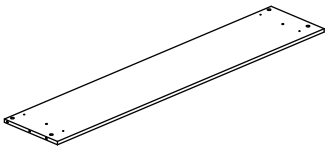


6 (1541x305x15mm x1)

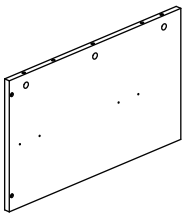


12 (552x330x15mm x1)

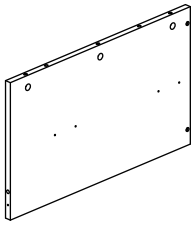


13 (552x330x15mm x1)




14 (330x80x15mm x2)

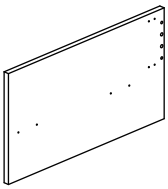


19 (540x300x15mm x1)

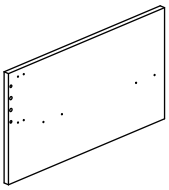


20 (540x300x15mm x1)

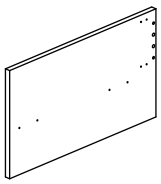


21 (522x298x15mm x1)

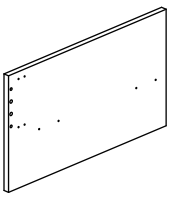


22 (522x298x15mm x1)

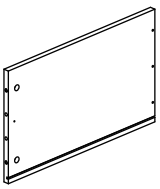


23 (500x298x15mm x1)

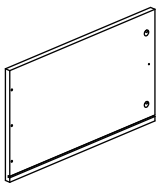


24 (500x298x15mm x1)

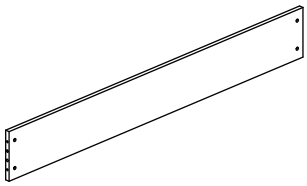


25 (1298x170x15mm x1)

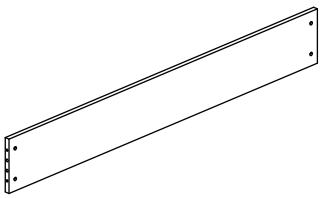


26 (1239x170x15mm x1)

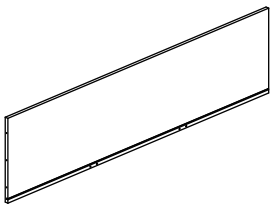

27 (1184x298x12mm x1)

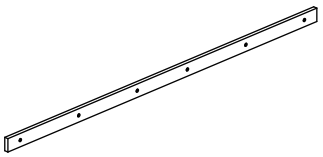


29 (1181x40x12mm x1)




31 (488x50x15mm x2)

Parts List - Panels(Box 3)

Please check you have all the panels listed below

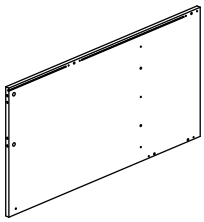

3 (1090x575x15mm x1)






















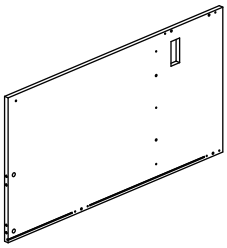


4 (1090x575x15mm x1)

Parts List - Fittings(in Box 2)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 38	B  6*35mm Cam Bolt x 34	C  Cam Lock x 37
D  x 4 4*16mm	E  x 2 4*16mm	F  x 12
G  x 8	H  x 3	I  x 2
J  x 8	K  x 1	L  x 14 3*16mm
M  x 10	N  4*20mm Screw x 6	O  6*50 mm Bolt x 8
P  x 11	Q  4*40mm Screw x 16	R  4*14mm Screw x 24
S  3*25mm Screw x 12	T  x 2  4*14mm	U  4*14mm Screw x 82
V  3*14mm Screw x 2	W  x 1	X  x 4
Y 50mm  x 6 = Y-1  x 6 + Y-2  x 6		Z  x 2 4*12mm 4*40mm
a  4*16mm Screw x 96	b  8*40mm Wooden Dowel x 14	d  6.5*60mm Cam Bolt x 3
e  x 12	f  x 2  4*12mm	


Tools required



Phllips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws


mm

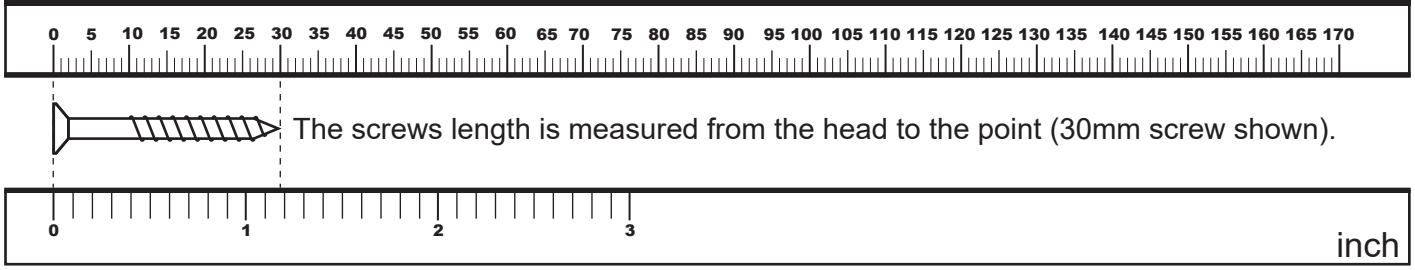

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

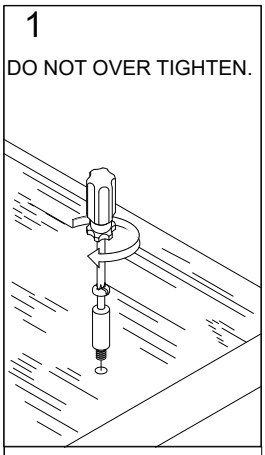

Step 2


Push the male camlock into the entry hole.

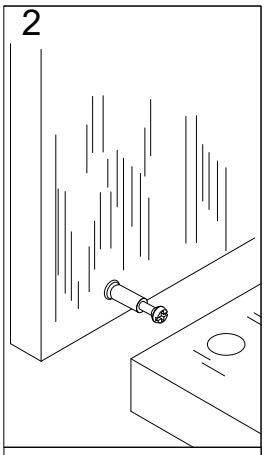

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

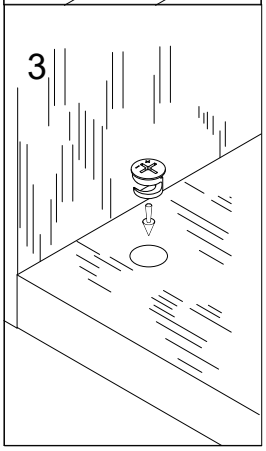


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

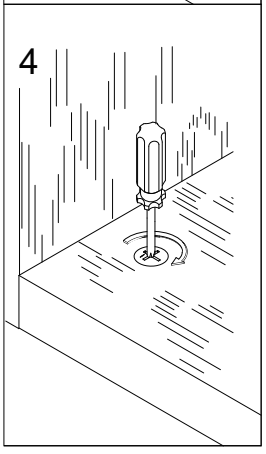


Assembly Instructions

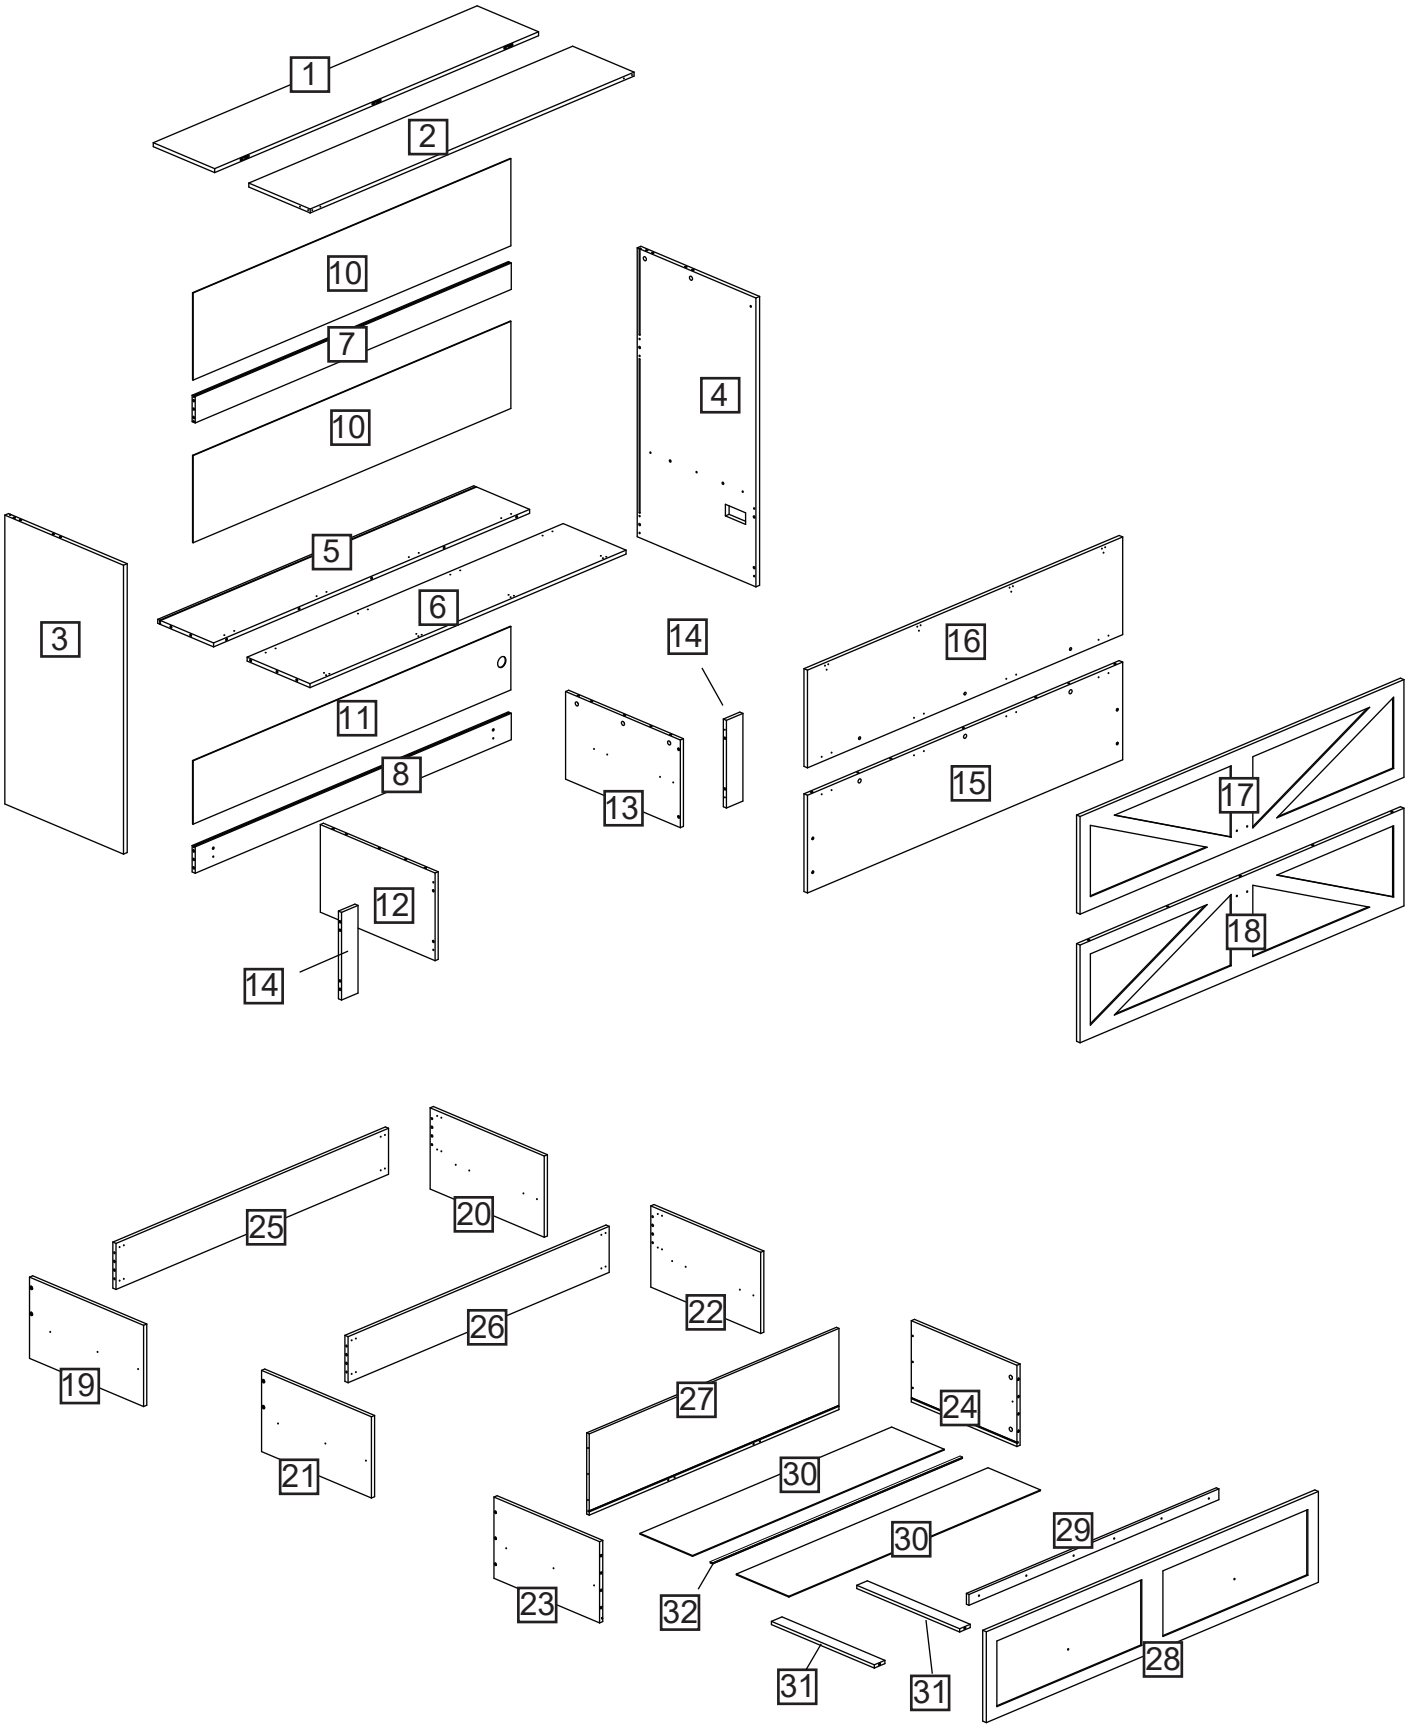



Assembly Instructions


Step 1

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

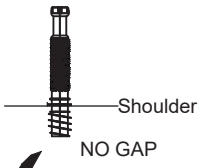


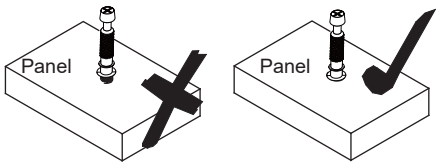

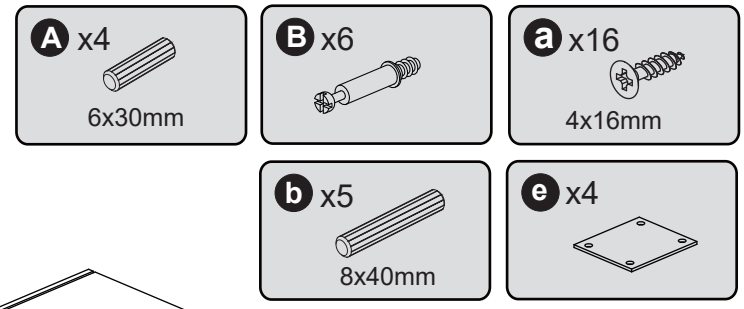

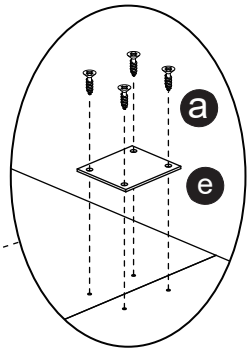

Insert wooden dowel (b) into panel (5), then assemble panel (6) onto panel (5). Secure panels (5) and (6) with part (e) and screw (a).

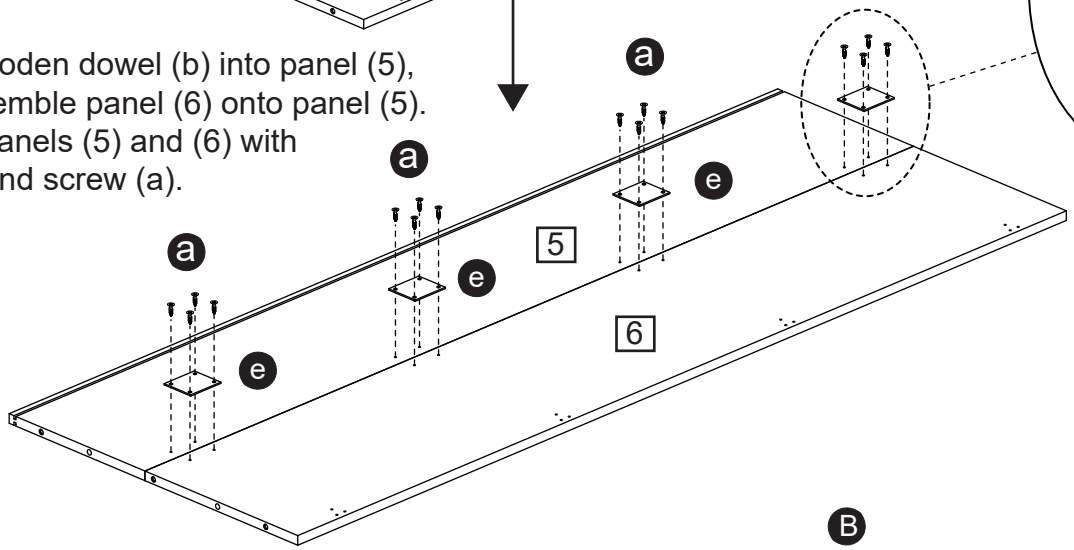




Lock cam bolt (B) onto panels (5) and (6), then insert wooden dowel (A) into panels (5) and (6).


Assembly Instructions

Step 2

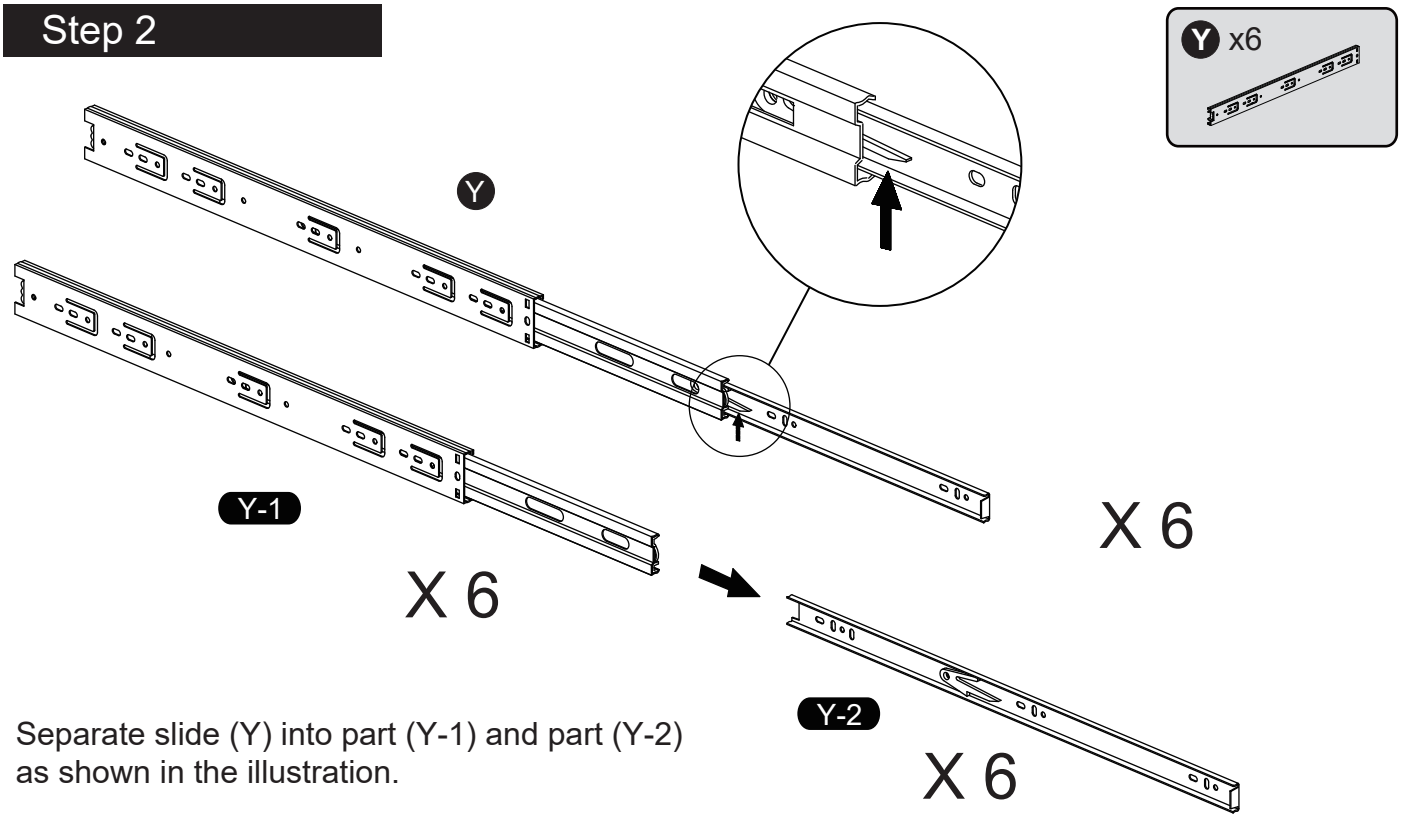


Separate slide (Y) into part (Y-1) and part (Y-2) as shown in the illustration.

Step 3

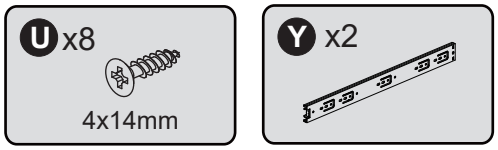

Use screw (U) to assemble part (Y-1) onto panels (12) and (13) respectively.

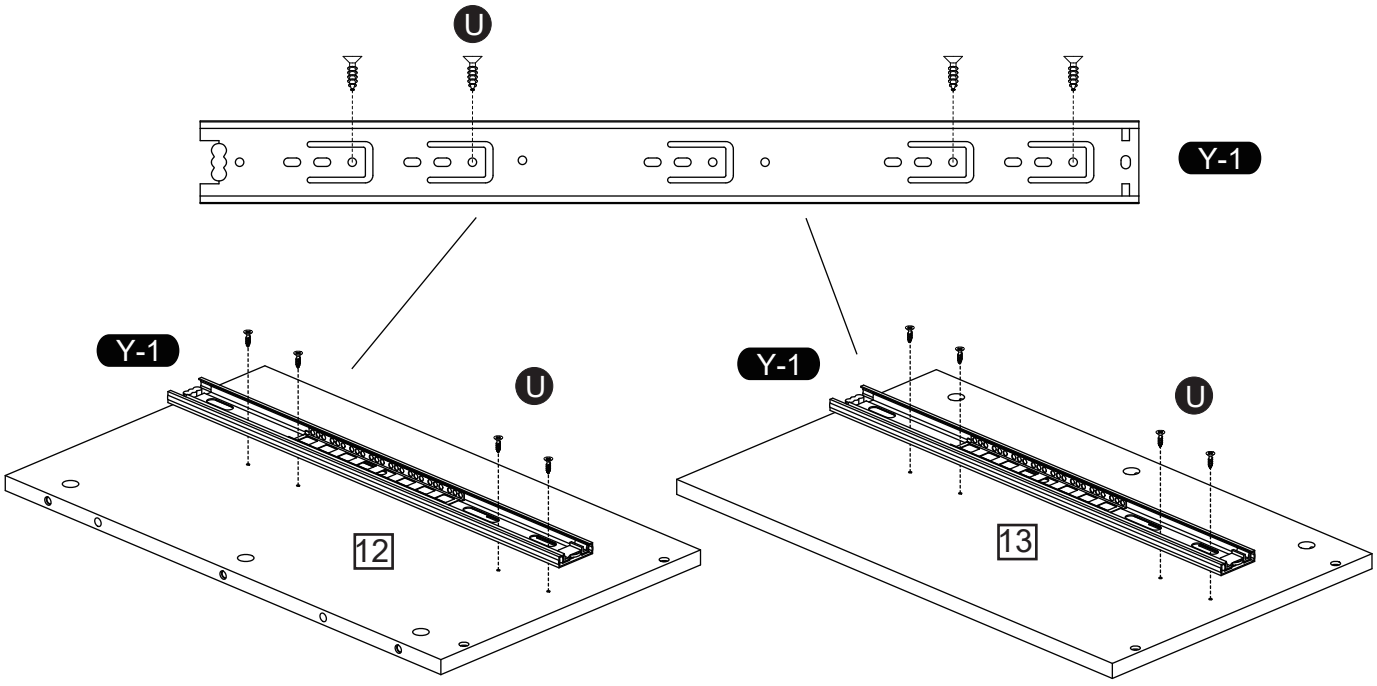


Assembly Instructions

Step 4

A x4
6x30mm


Q x4
4x40mm

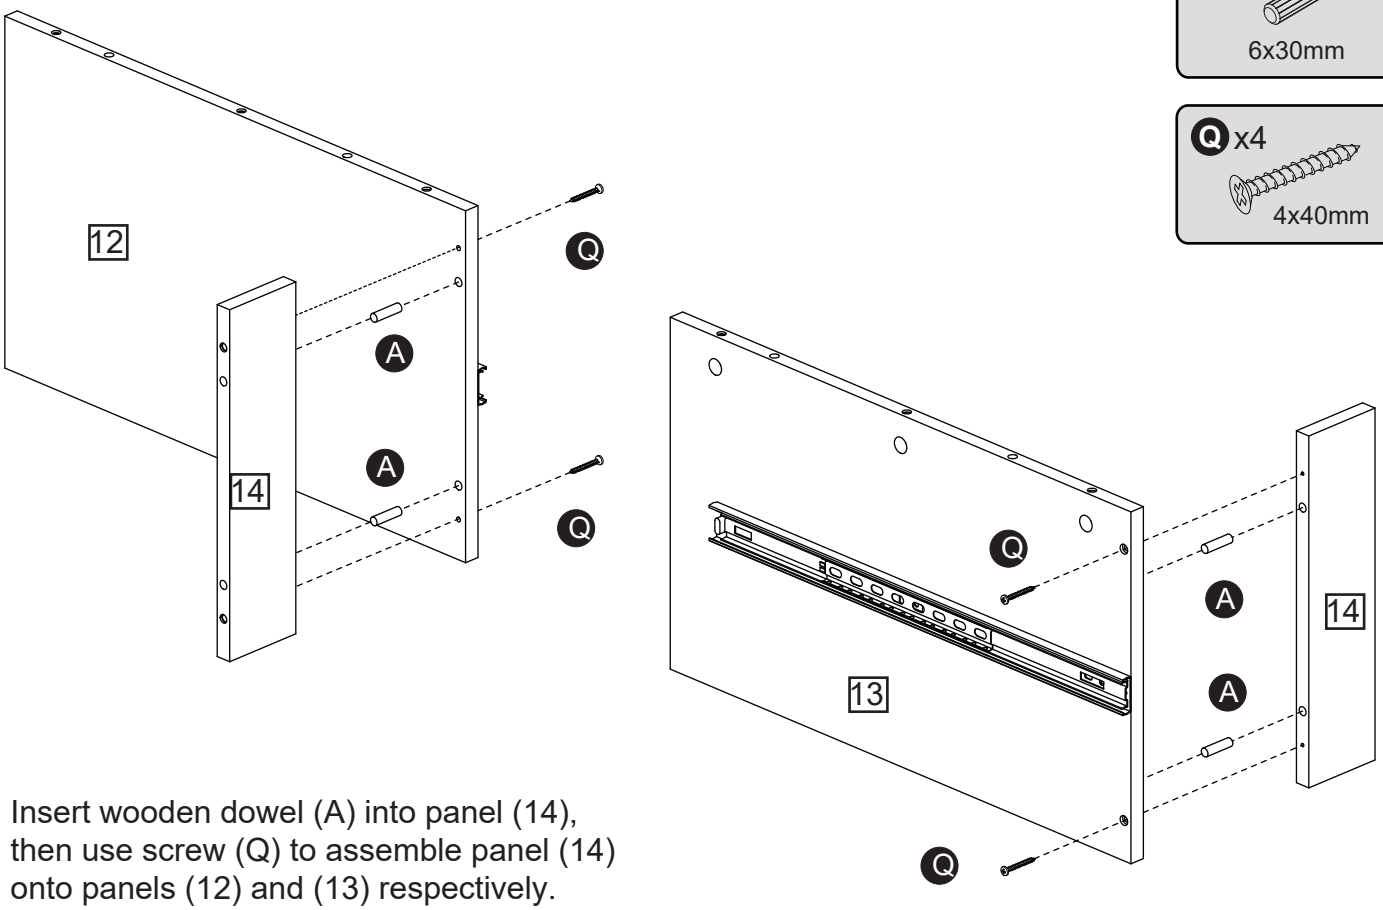

Insert wooden dowel (A) into panel (14), then use screw (Q) to assemble panel (14) onto panels (12) and (13) respectively.

Step 5

C x6

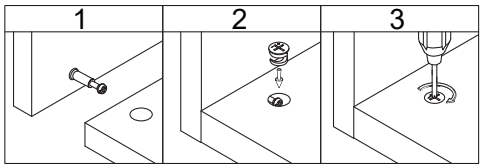


Assemble panels (12) and (13) onto panels (5) and (6) respectively. Insert cam lock (C) and tighten.



Rotate the frame after this step as next step

Assembly Instructions

Step 6

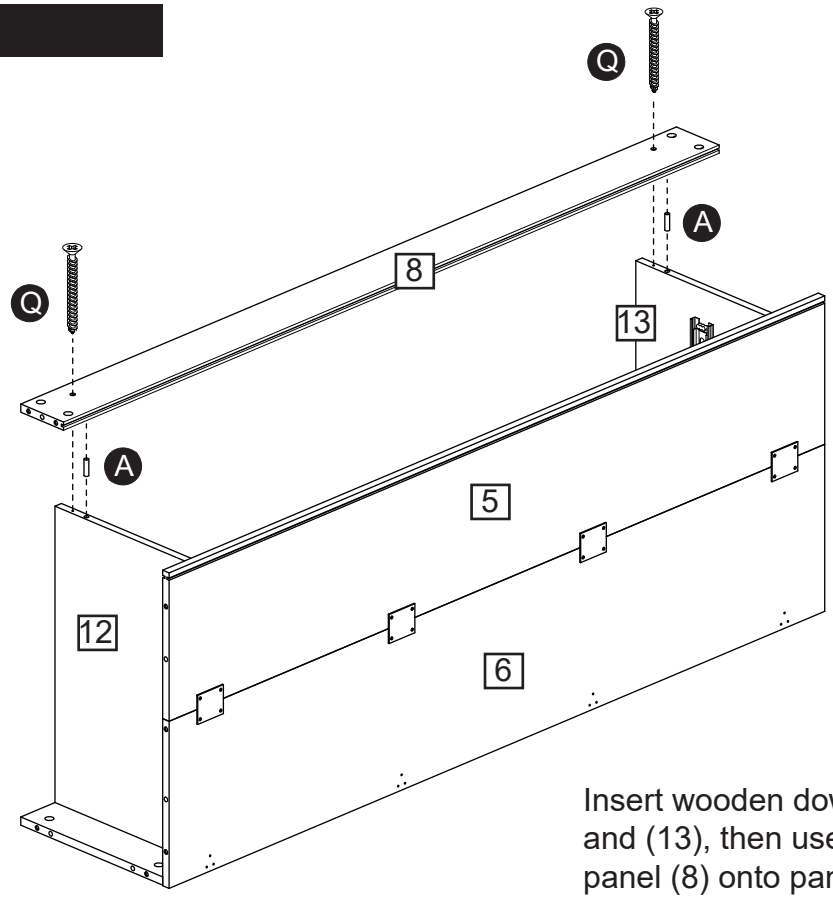


A x2
6x30mm


Q x2
4x40mm

Insert wooden dowel (A) into panels (12) and (13), then use screw (Q) to assemble panel (8) onto panels (12) and (13).


Step 7

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

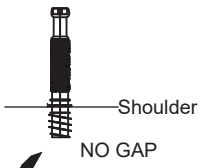

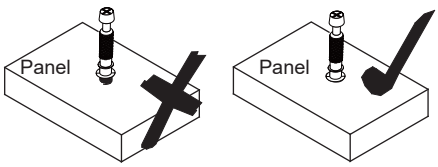


B x9

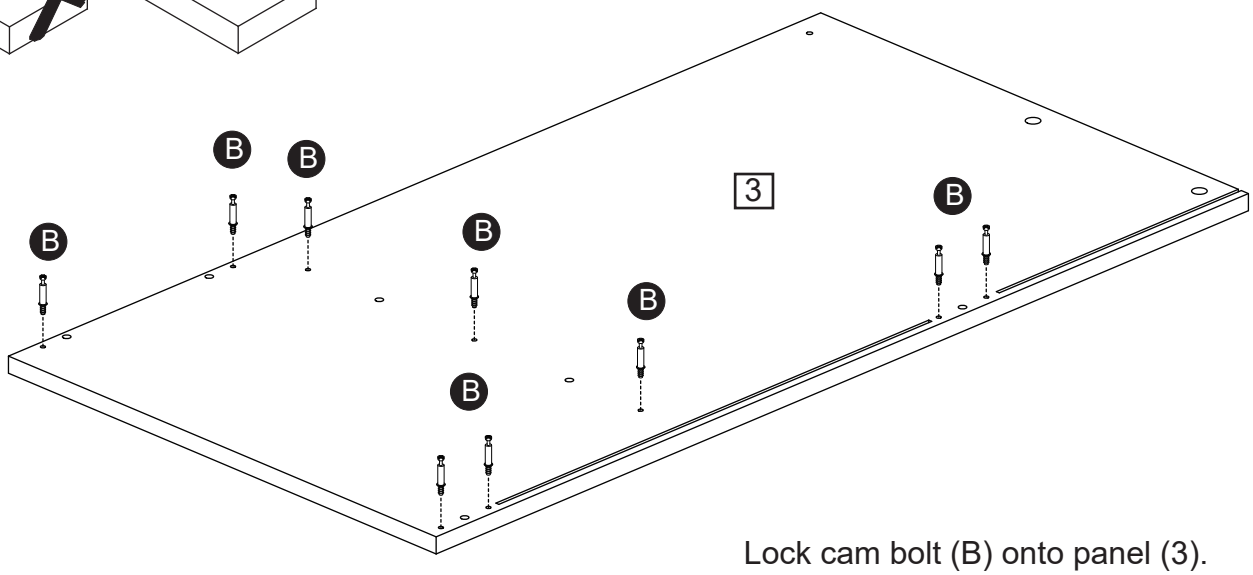



Lock cam bolt (B) onto panel (3).

Assembly Instructions

Step 8

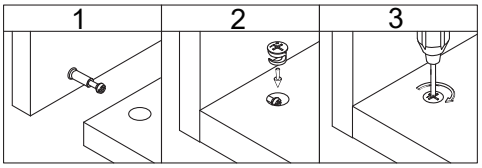

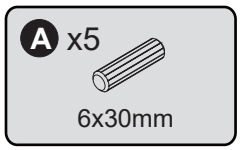

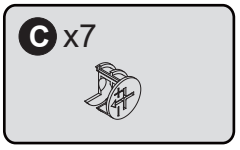


Insert wooden dowel (A) into panels (5), (6), (8), and (14), then assemble panel (3) onto panels (5), (6), (8), and (14).
Insert cam lock (C) and tighten.



Rotate the frame after this step as next step


Step 9

Insert panel (11) into the grooves of panels (3), (5), and (8).
Insert panel (10) into the grooves of panels (3) and (5).

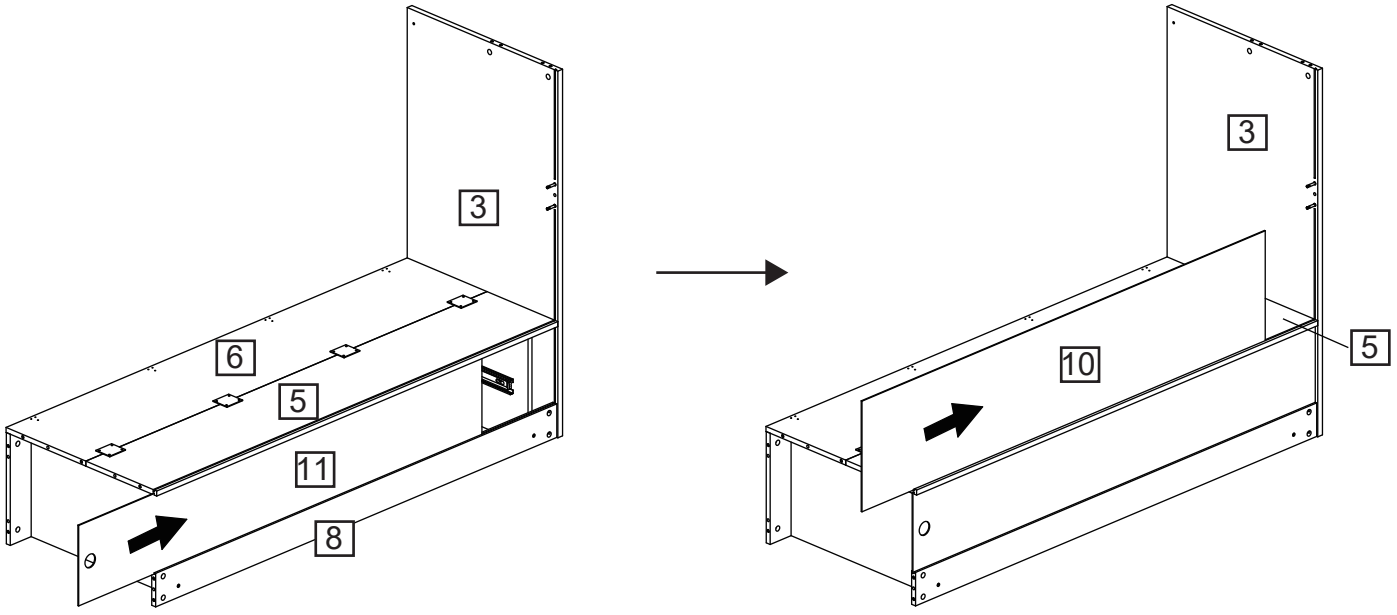

Assembly Instructions

Step 10

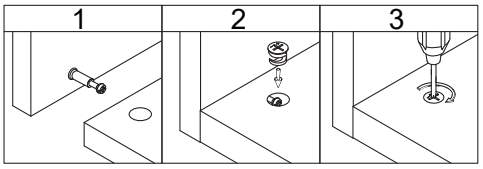

A x1



6x30mm


C x2




First insert wooden dowel (A) into panel (6), then assemble panel (6) onto panel (3). Insert cam lock (C) and tighten.


Step 11

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

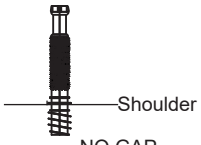

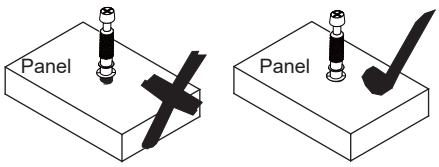


B x9




Lock cam bolt (B) onto panel (4).

Assembly Instructions

Step 12

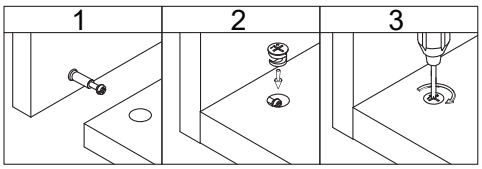

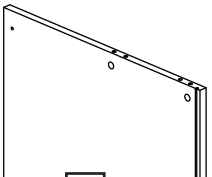



After installing panel(4), you need to put down the product and lock the screw from the bottom.

Please make sure that all side panels are fully stuck in the slot.


First insert wooden dowel (A) into panels (5), (6), (7), (8), and (14), then assemble panel (4) onto panels (5), (6), (7), (8), and (14). Insert cam lock (C) and tighten.



Rotate the frame after this step as next step

Step 13



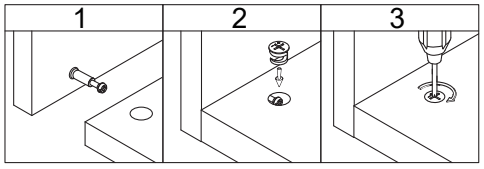


After installing panel(4) , you need to put down the product and lock the screw from the bottom.


Insert cam lock (C) into panels (5), (6), and (14), and tighten.

Assembly Instructions

Step 14

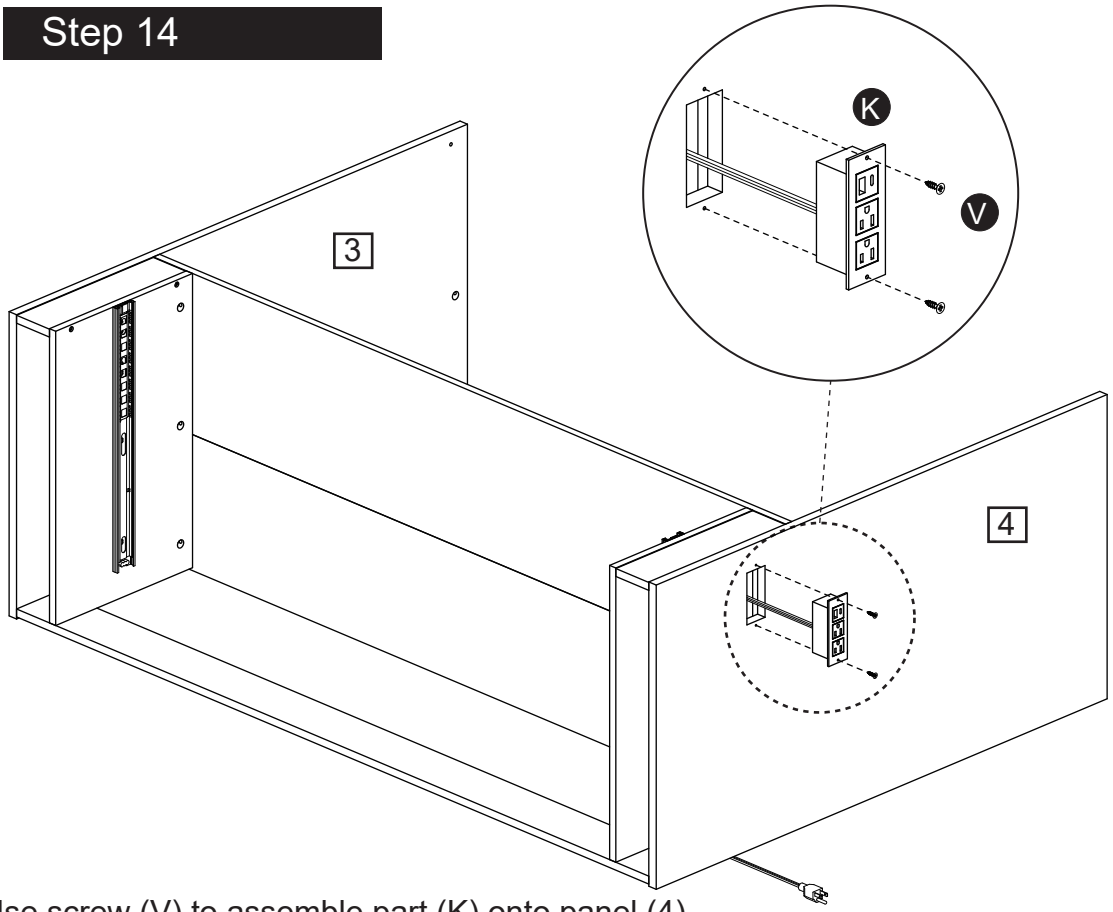

K x1



V x2



3*14mm




90°

Rotate the frame
after this step as next step

Use screw (V) to assemble part (K) onto panel (4).

Step 15

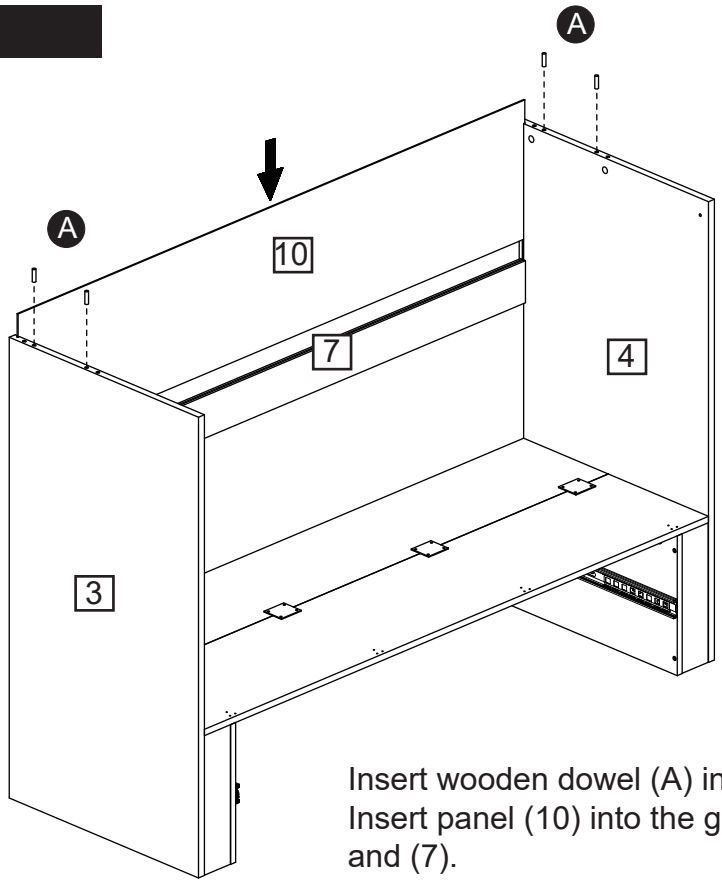

A x4




6x30mm


Insert wooden dowel (A) into panels (3) and (4).
Insert panel (10) into the grooves of panels (3), (4), and (7).

Assembly Instructions


Step 16

CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

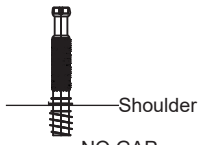

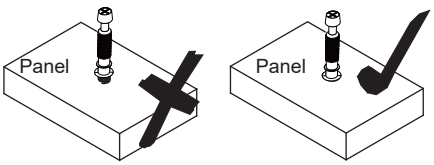

B x4




C x4




Lock cam bolt (B) onto panel (1).
Assemble panel (1) onto panels (3) and (4).
Insert cam lock (C) and tighten.


The groove is here

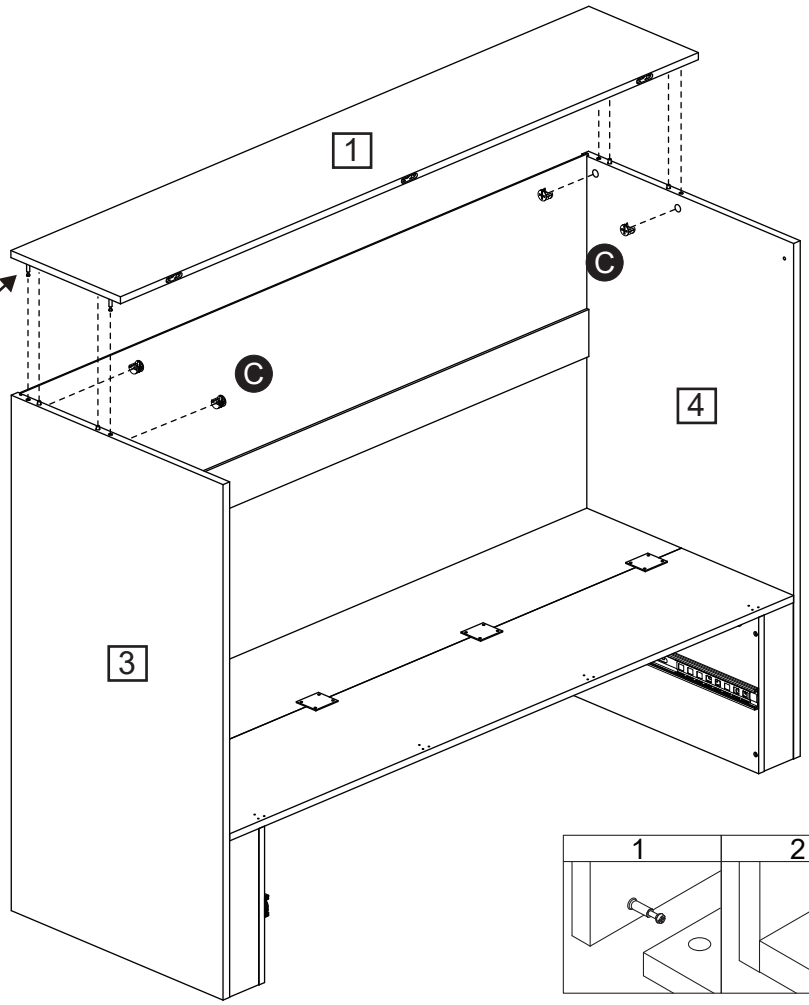

Assembly Instructions

Step 17

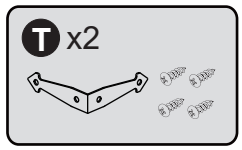


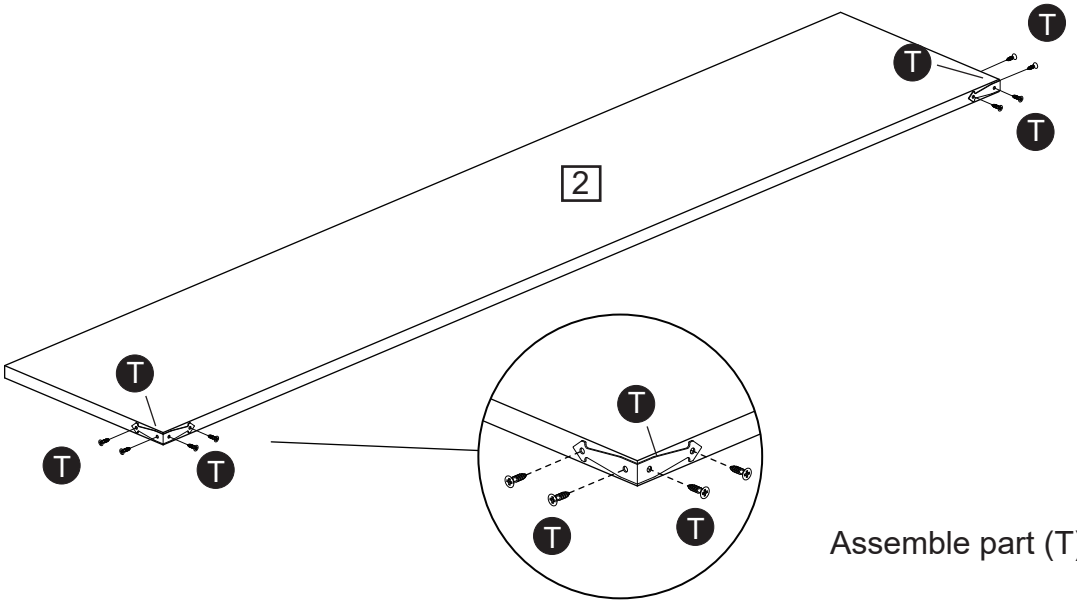



Assemble part (T) onto panel (2).


Step 18

Insert part (H) into panel (1), then place panel (2).

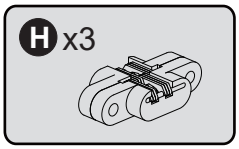

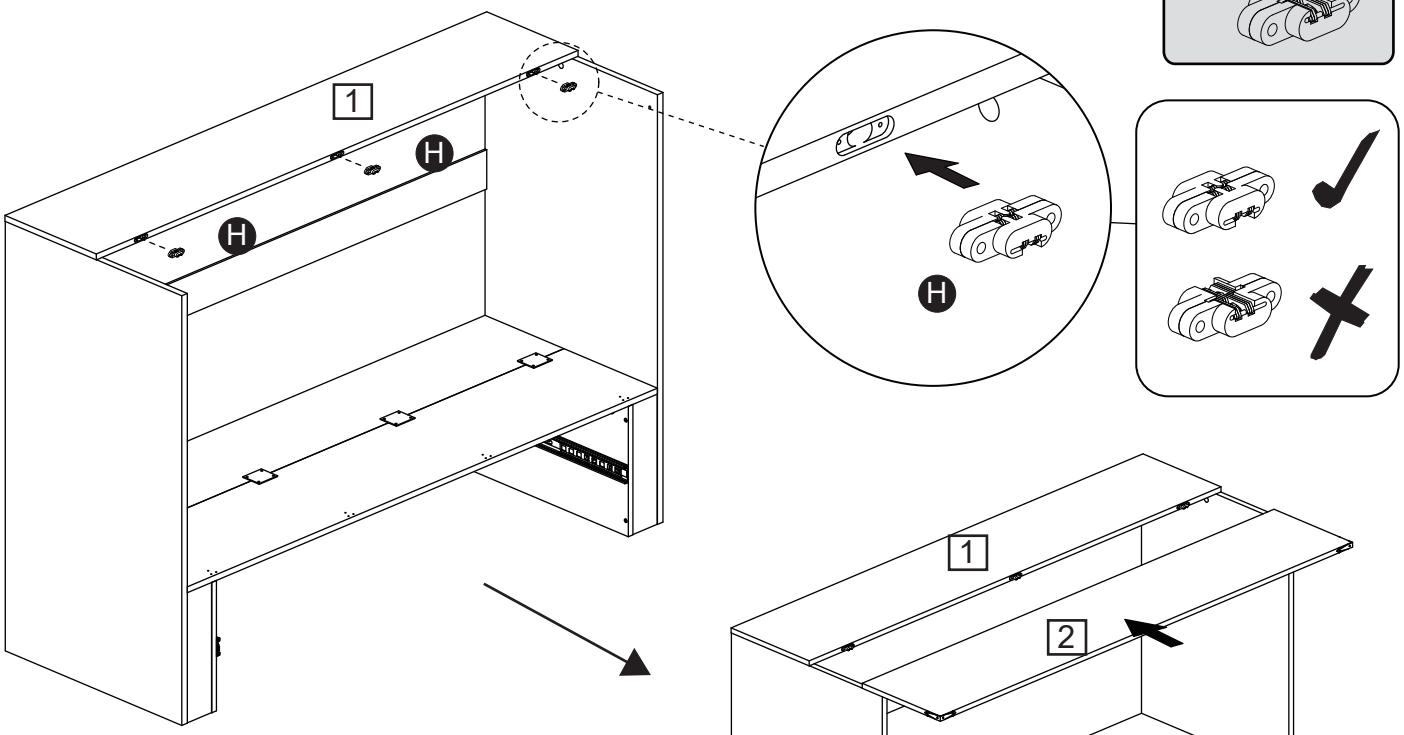


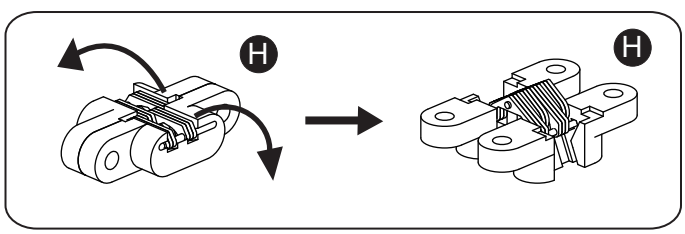

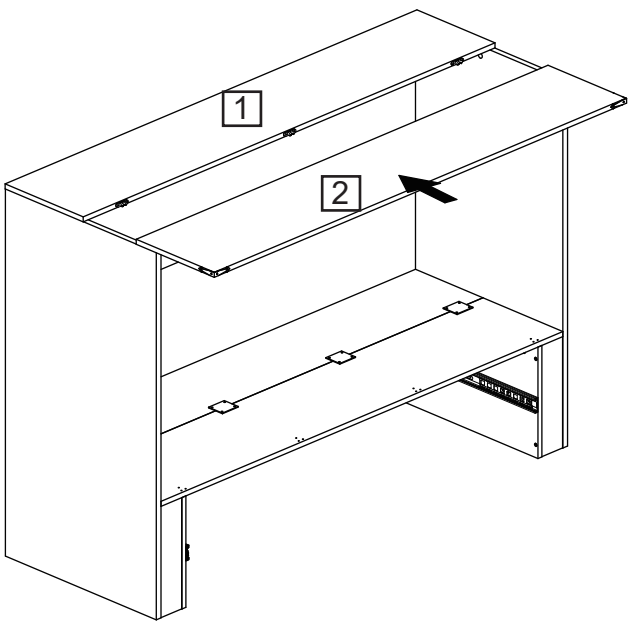


Assembly Instructions

Step 19

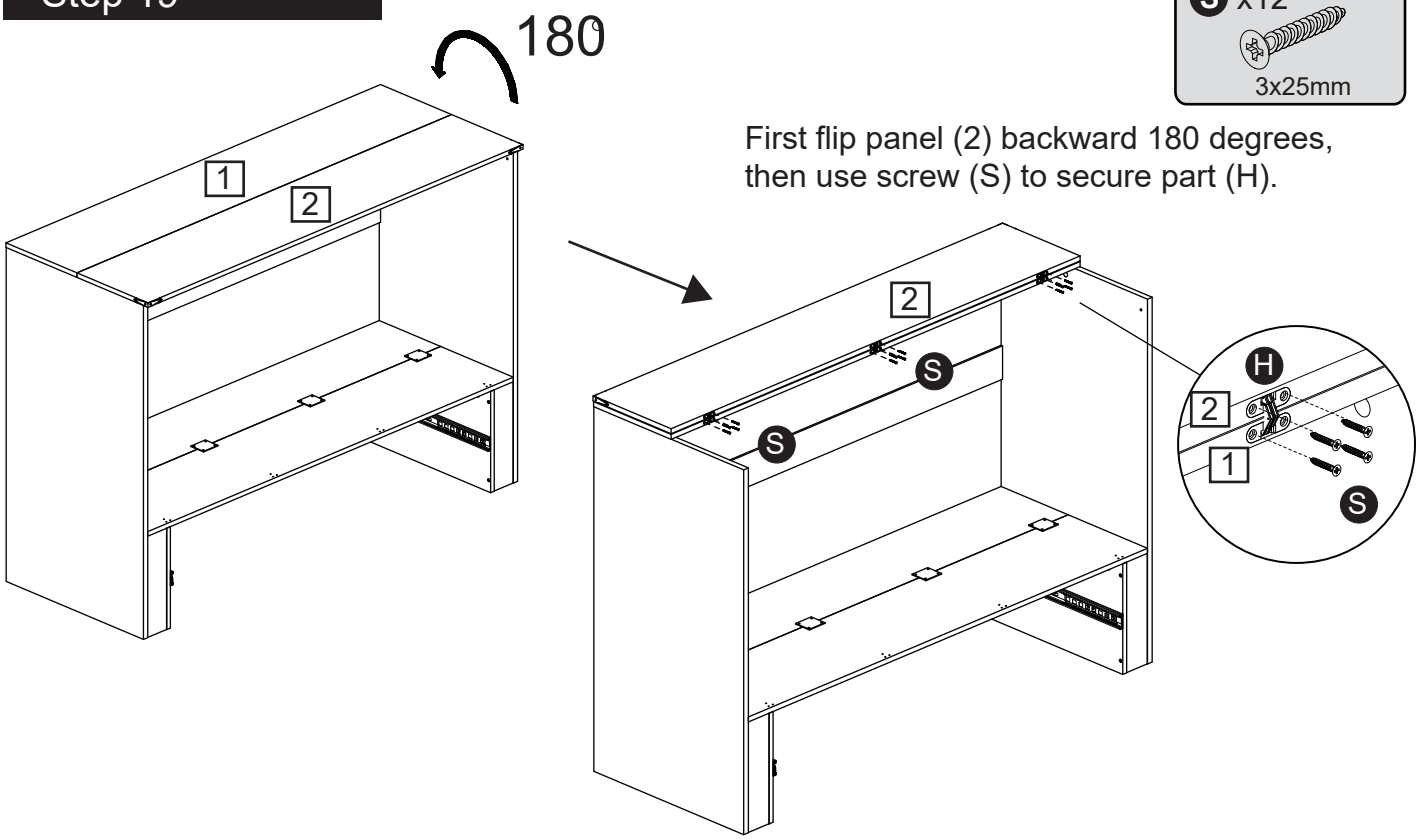

Step 20

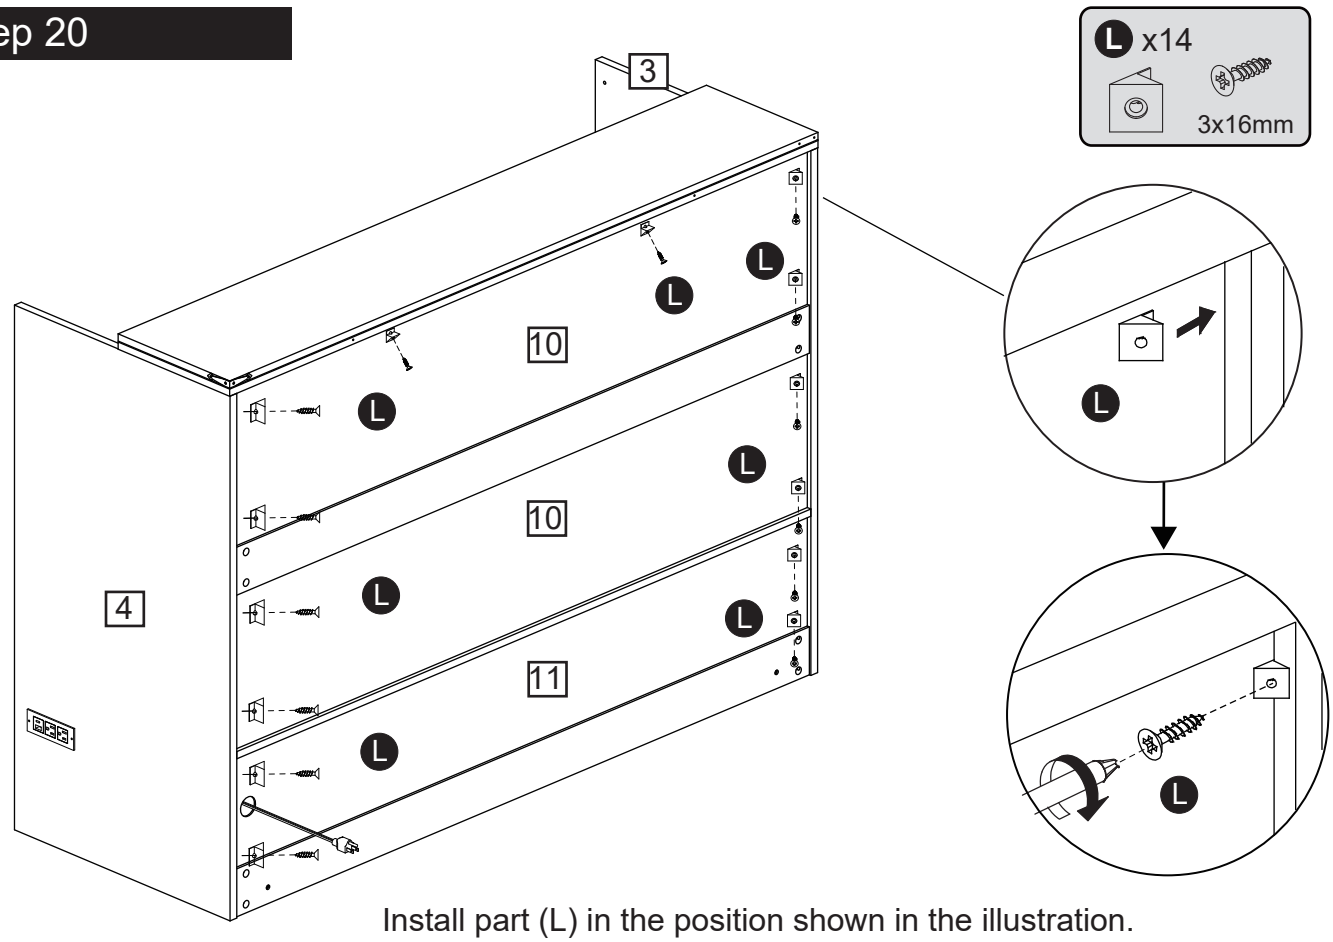



Install part (L) in the position shown in the illustration.

Assembly Instructions


Step 21

As shown in the illustration, use screw (U) to assemble part (Y-1) and part (Y-2) onto panels (19) and (20) respectively.

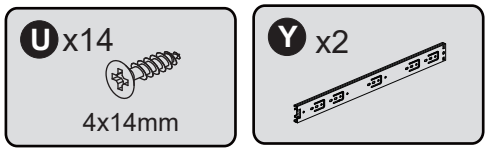

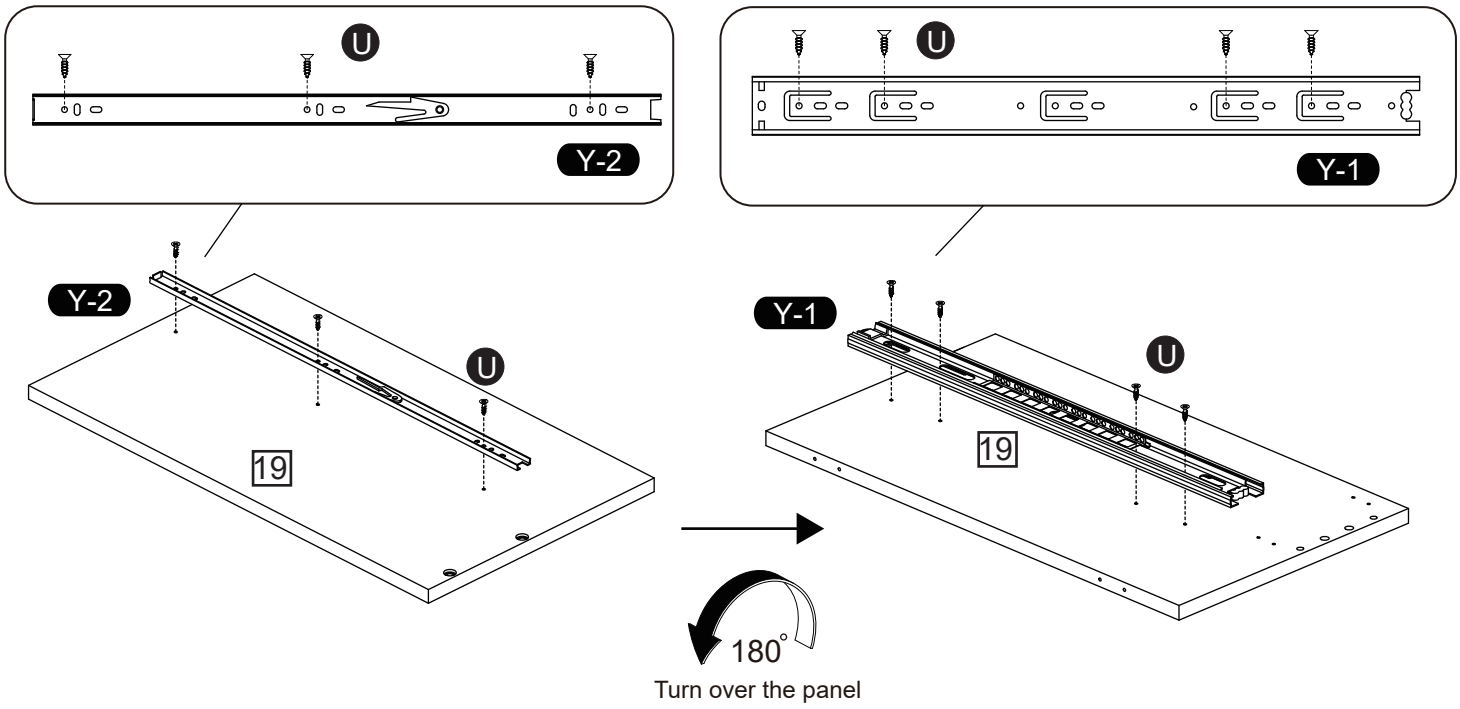

Turn over the panel

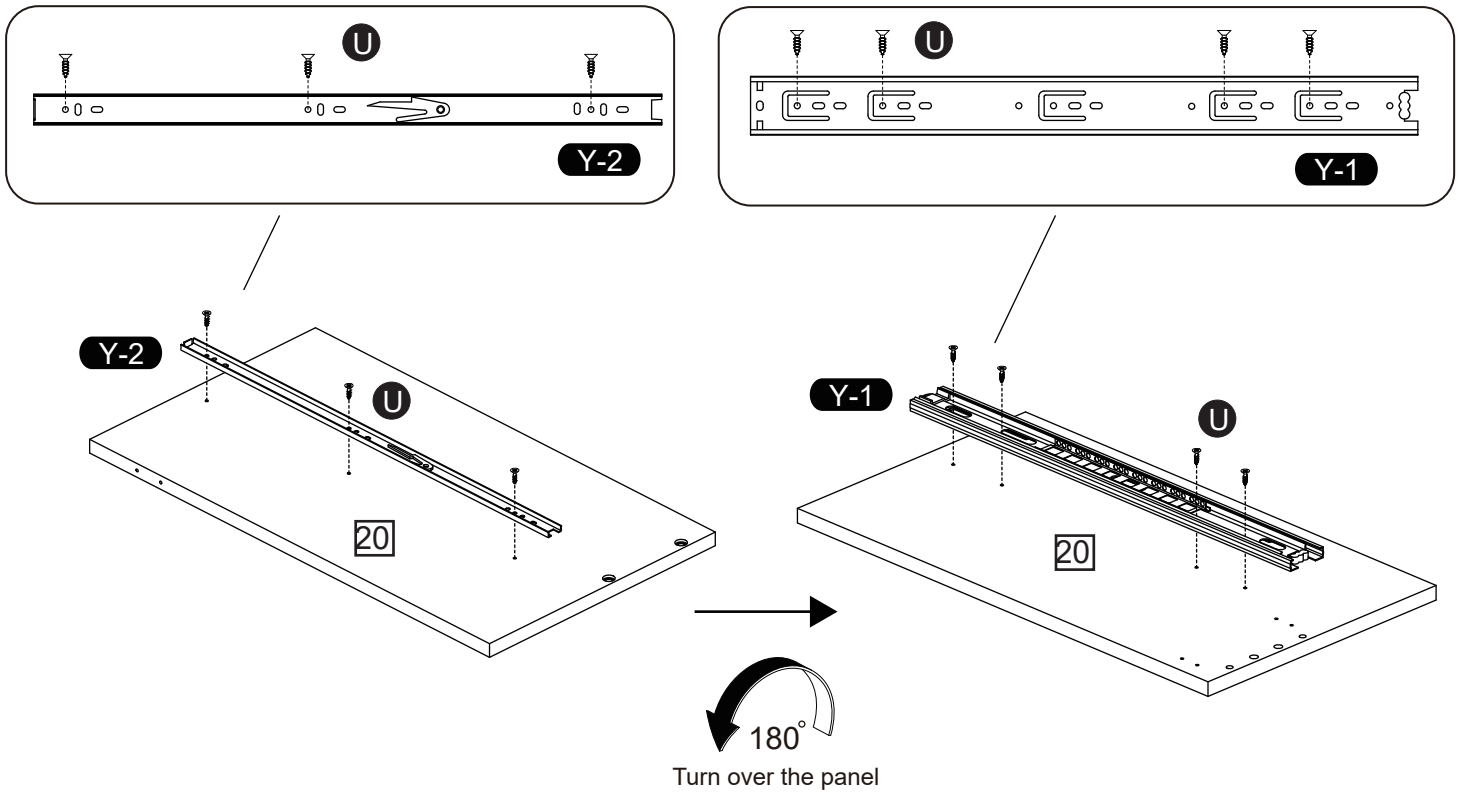


Turn over the panel

Assembly Instructions

Step 22

A x4	O x4	P x4	W x1
6x30mm	6x50mm		


Insert wooden dowel (A) into panel (25), then use part (W), bolt (O), and nut (P) to assemble panels (19) and (20) onto panel (25).

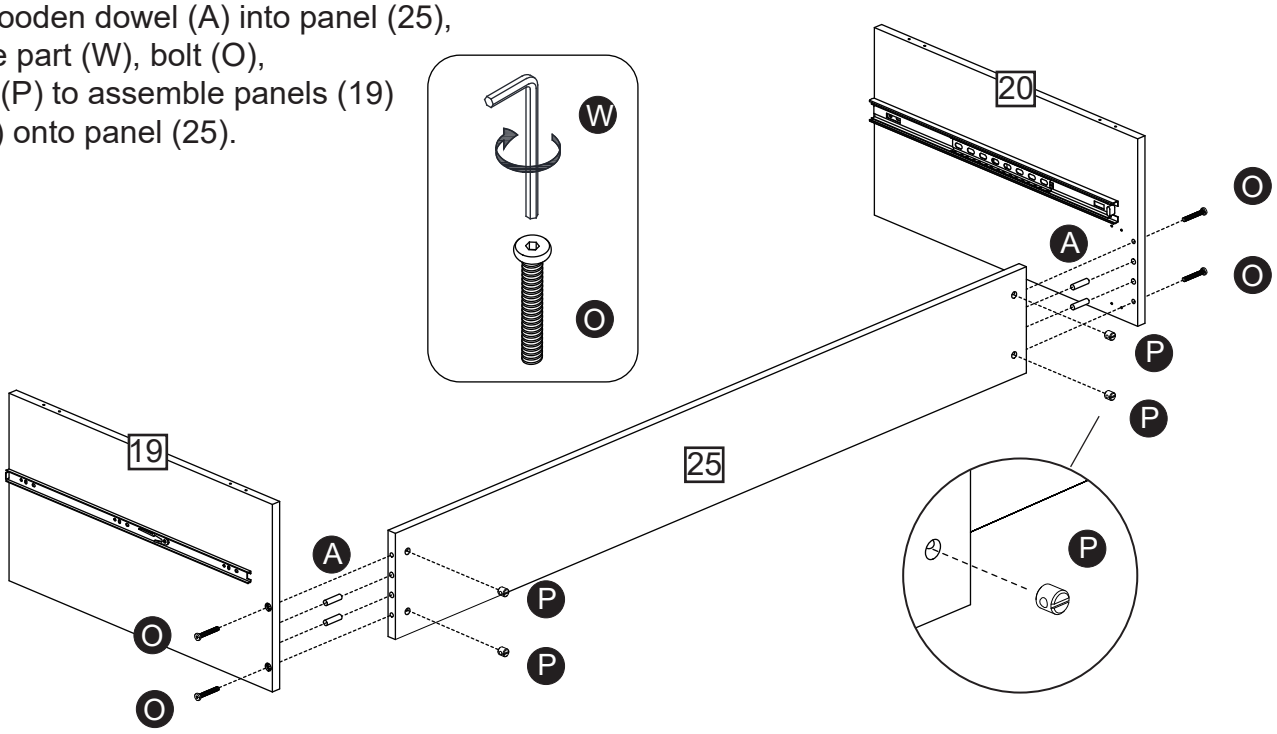

Step 23

F x4	J x4	R x8	U x16
		4x14mm	4x14mm


Use screw (U) to assemble part (J) onto panels (19) and (20). Use screw (R) to assemble part (F) onto panels (19) and (20).

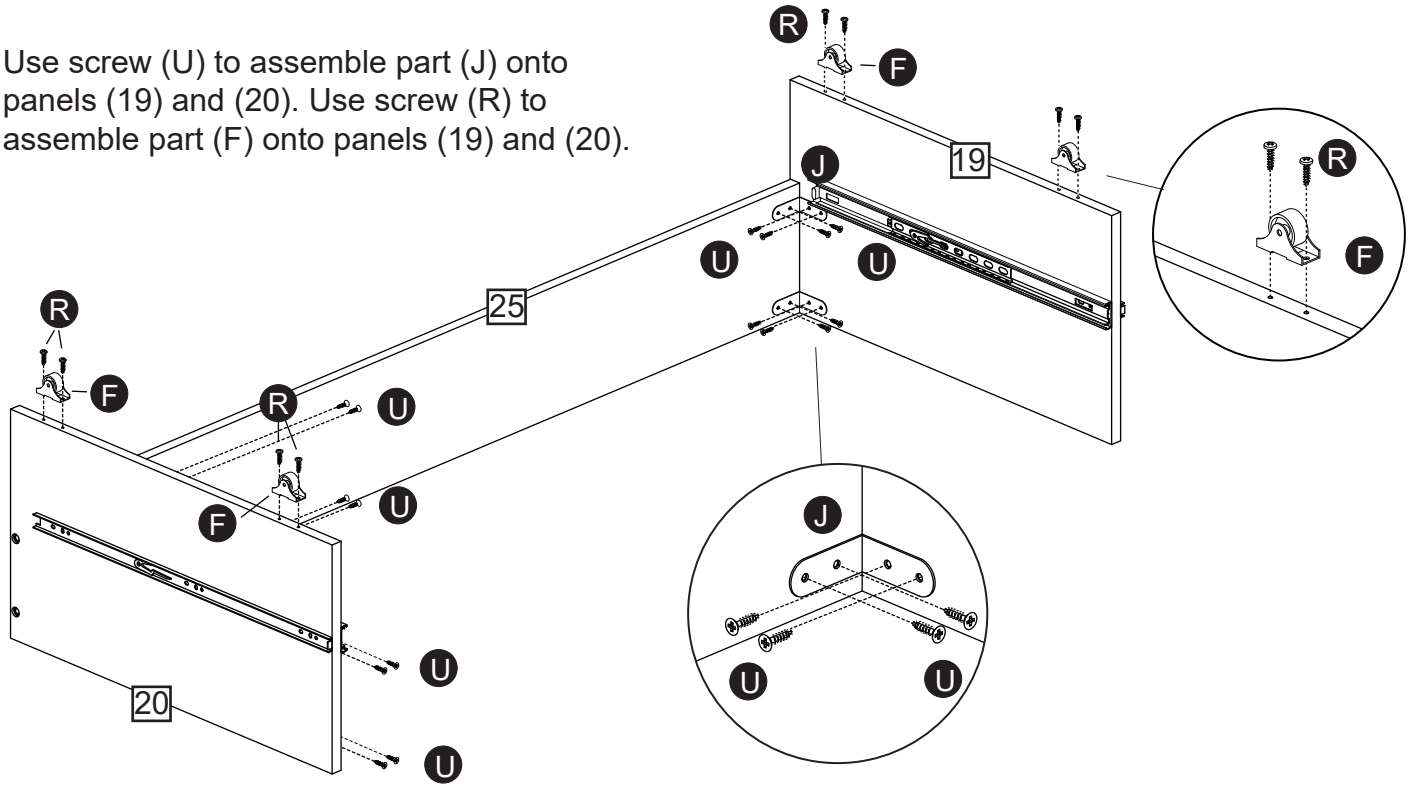


Assembly Instructions


Step 24

Use screw (U) to assemble part (Y-1) and part (Y-2) onto panels (21) and (22) respectively.

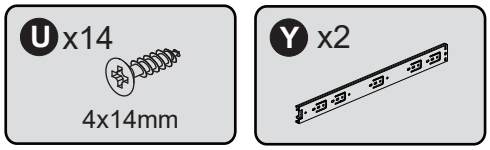

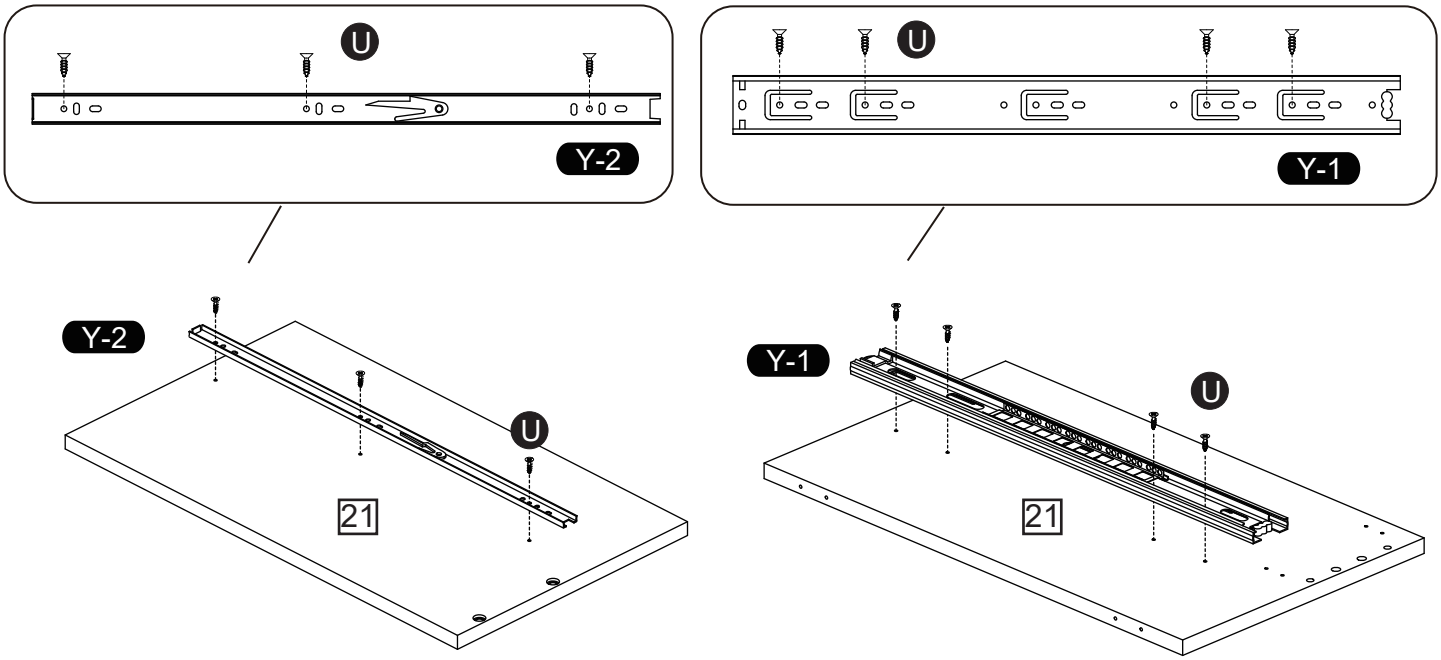


180°
Turn over the panel

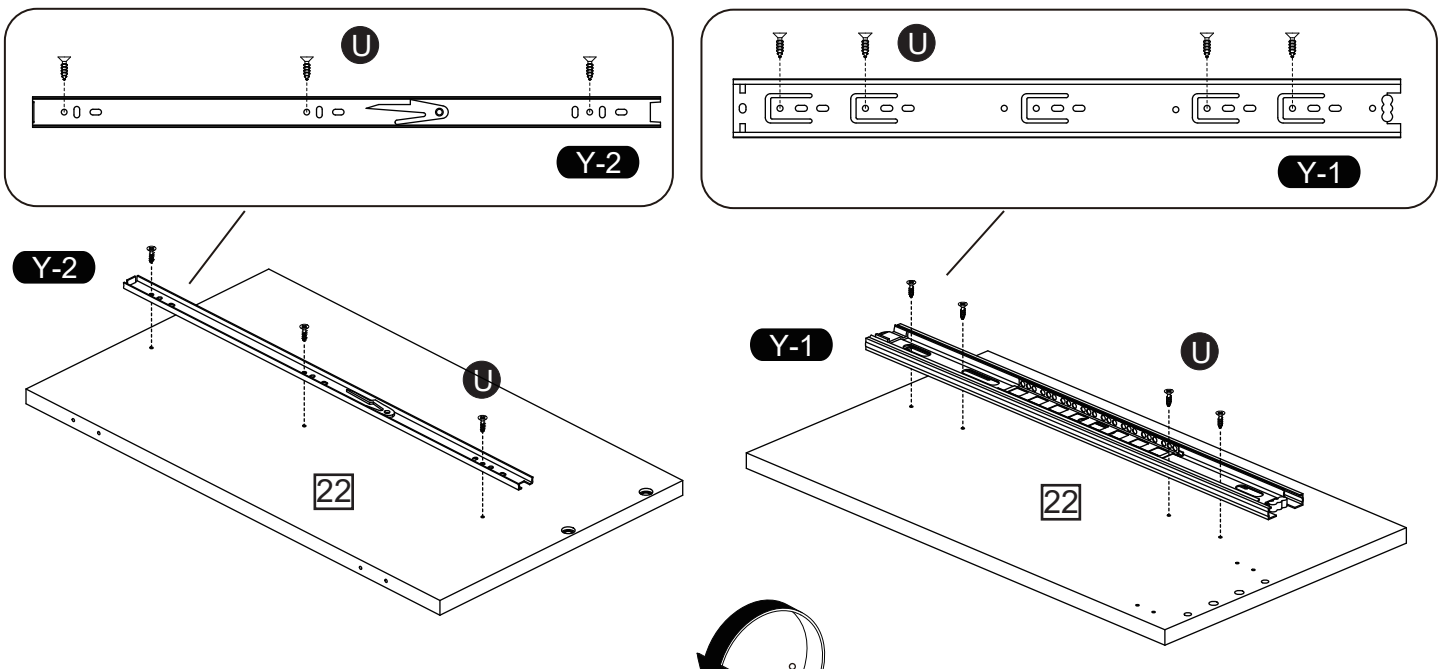


180°
Turn over the panel

Assembly Instructions


Step 25

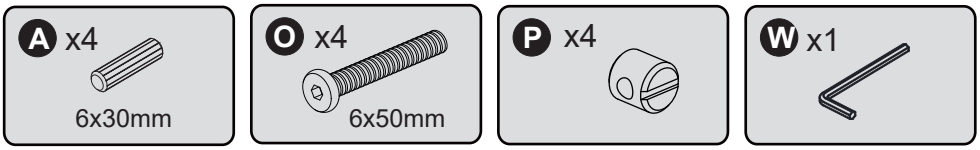


Insert wooden dowel (A) into panel (26), then use part (W), bolt (O), and nut (P) to assemble panels (21) and (22) onto panel (26).

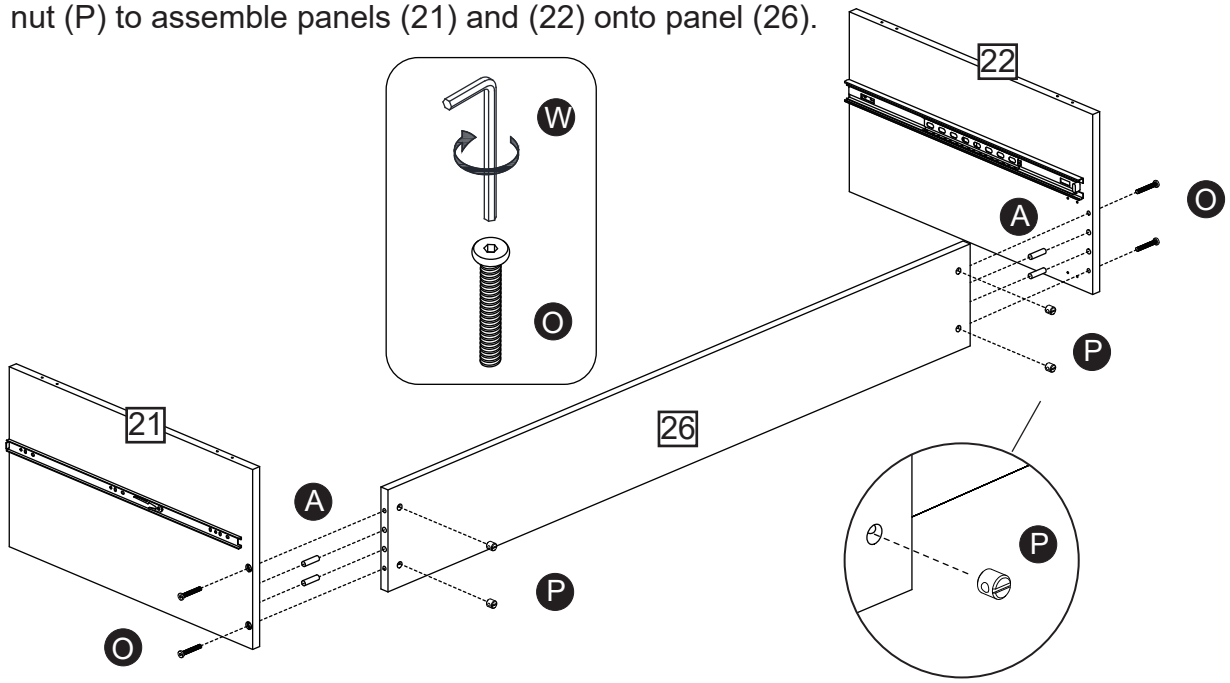

Step 26

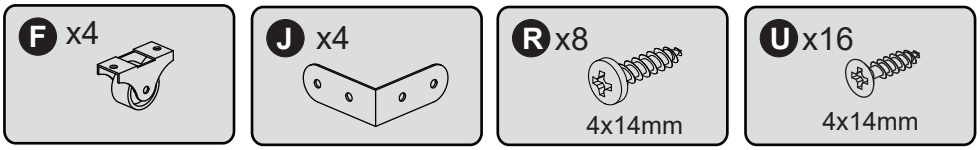



Use screw (U) to assemble part (J) onto panels (21) and (22). Use screw (R) to assemble part (F) onto panels (21) and (22).

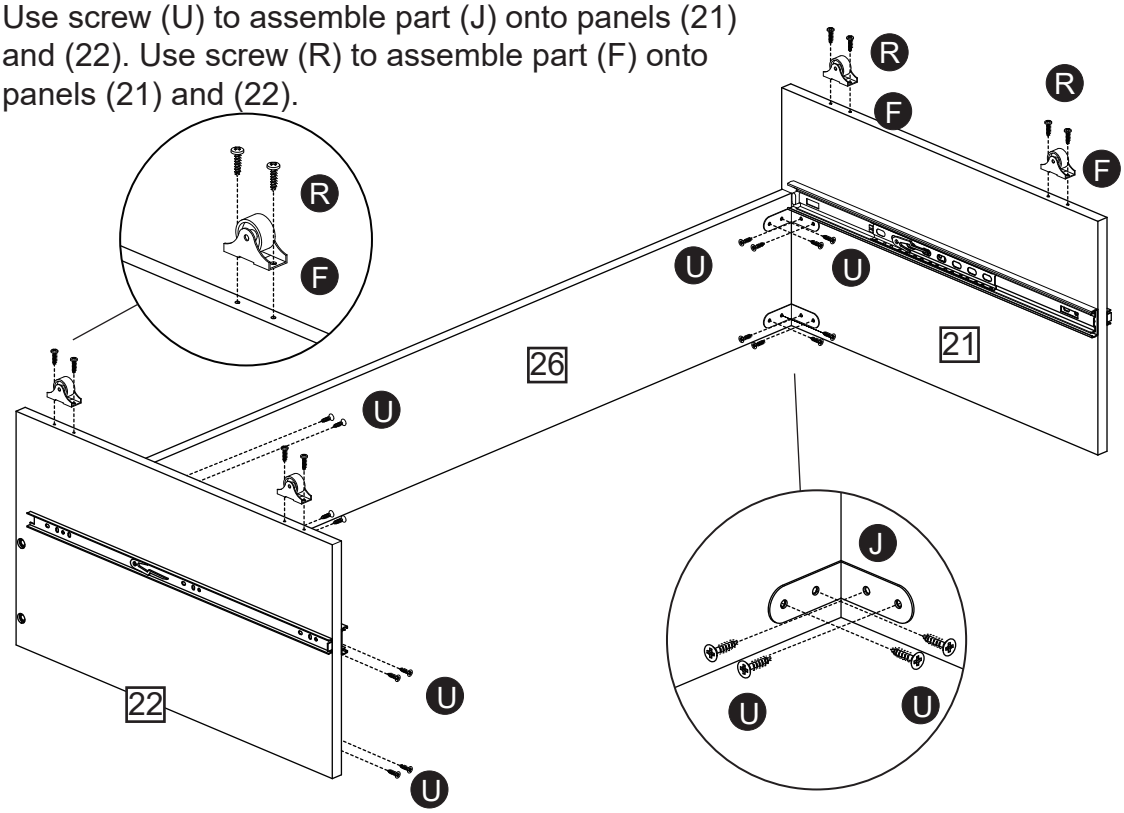


Assembly Instructions


Step 27

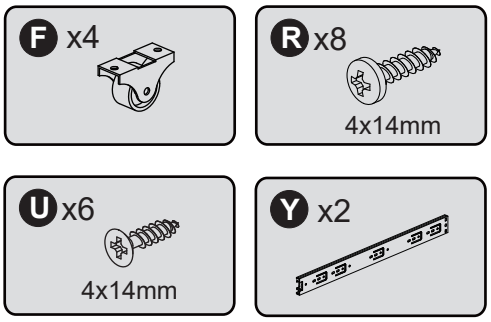


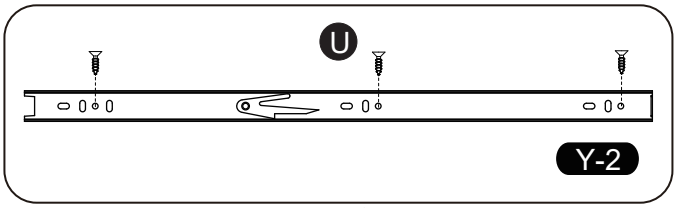

Use screw (U) to assemble part (Y-2) onto panels (23) and (24) respectively.
Use screw (R) to assemble part (F) onto panels (23) and (24).

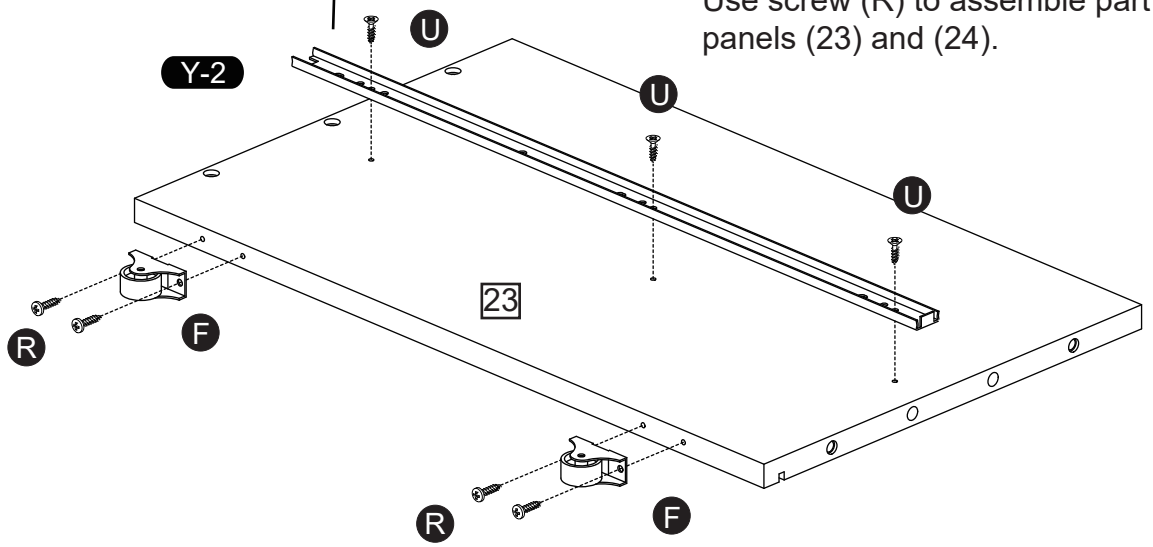

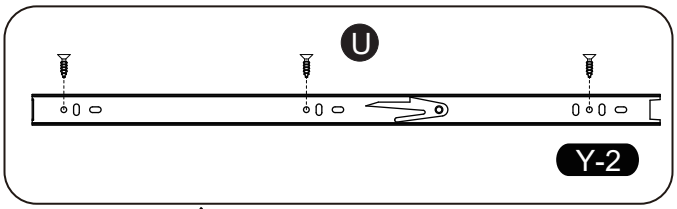

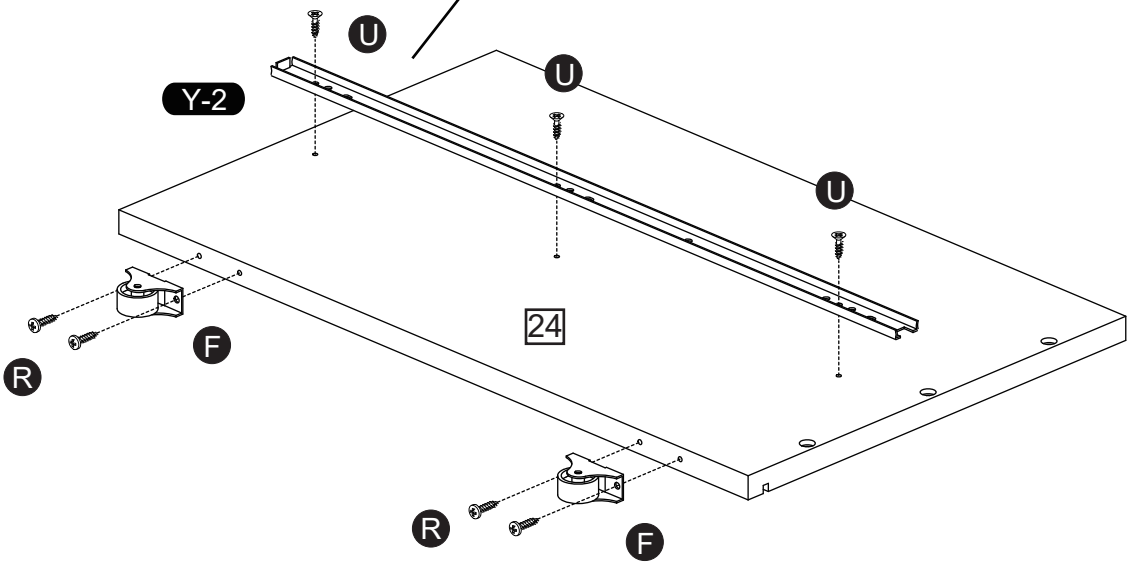

Assembly Instructions


Step 28

Use screw (Q) to assemble panels (23) and (24) onto panel (27).

Q x6



4x40mm

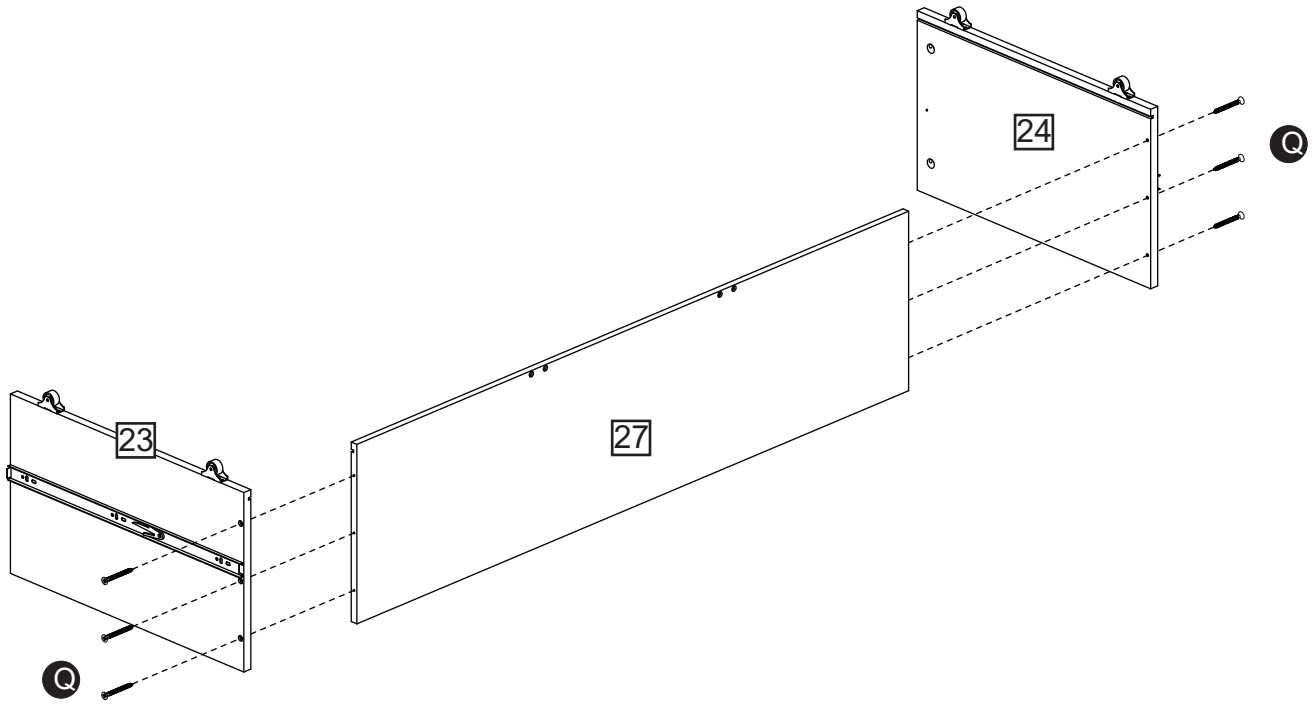


Step 29

Use screw (Q) to assemble panel (31) onto panel (27).

Q x4



4x40mm

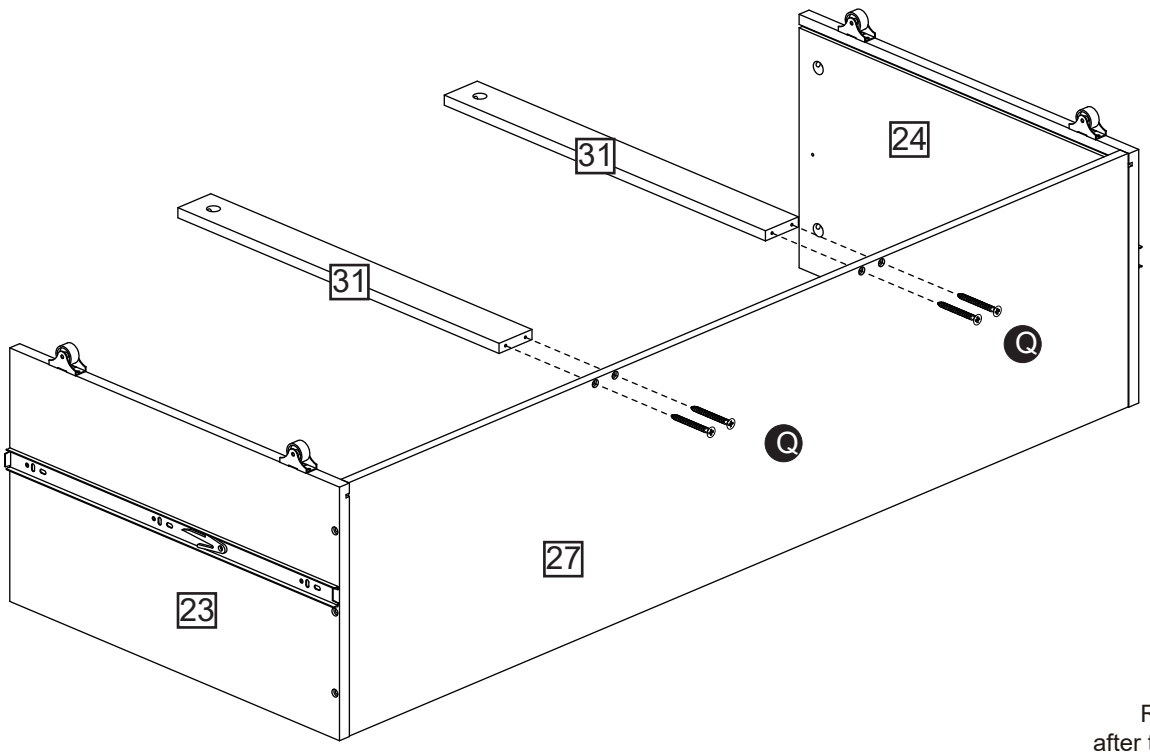



Rotate the frame
after this step as next step


Assembly Instructions

Step 30

Insert panel (30) and part (32) into the grooves of panels (23), (24), and (27).


A x4

6x30mm

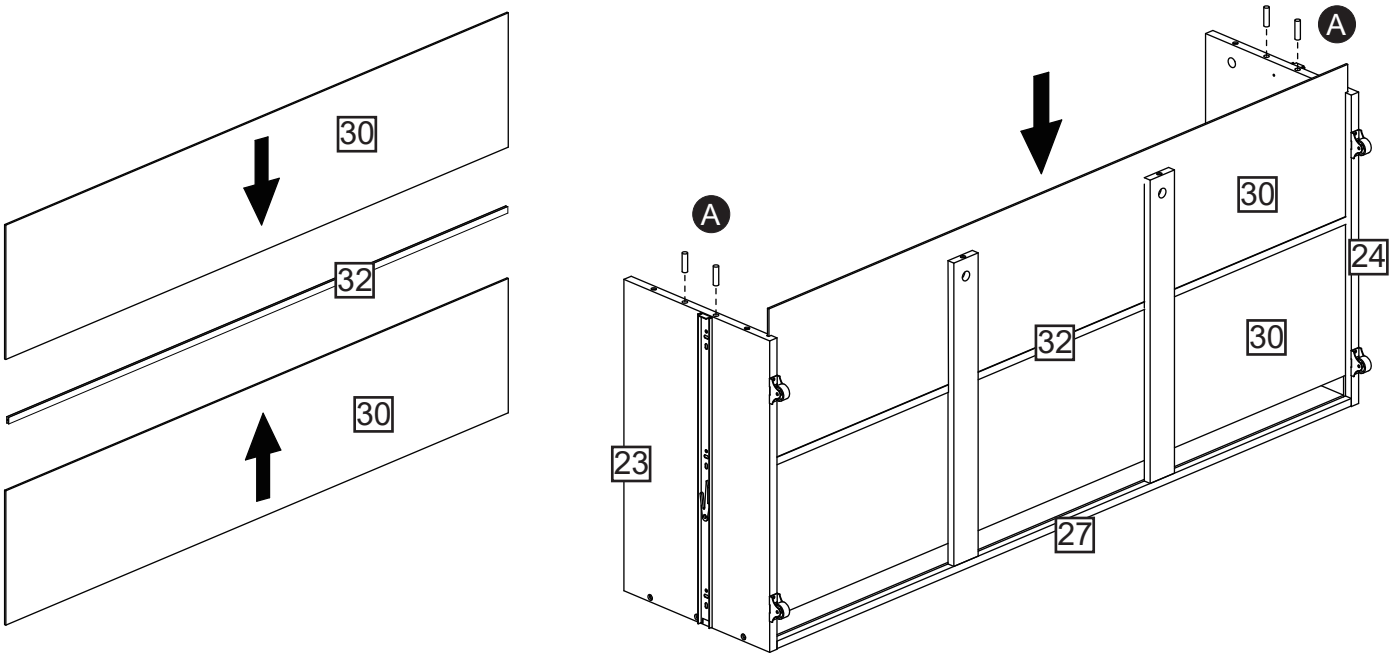

Step 31

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

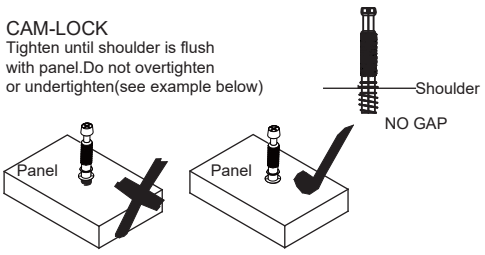

B x6

N x6


4x20mm


Use screw (N) to assemble panel (29) onto panel (28).


Lock cam bolt (B) onto panel (28).


Assembly Instructions

Step 32

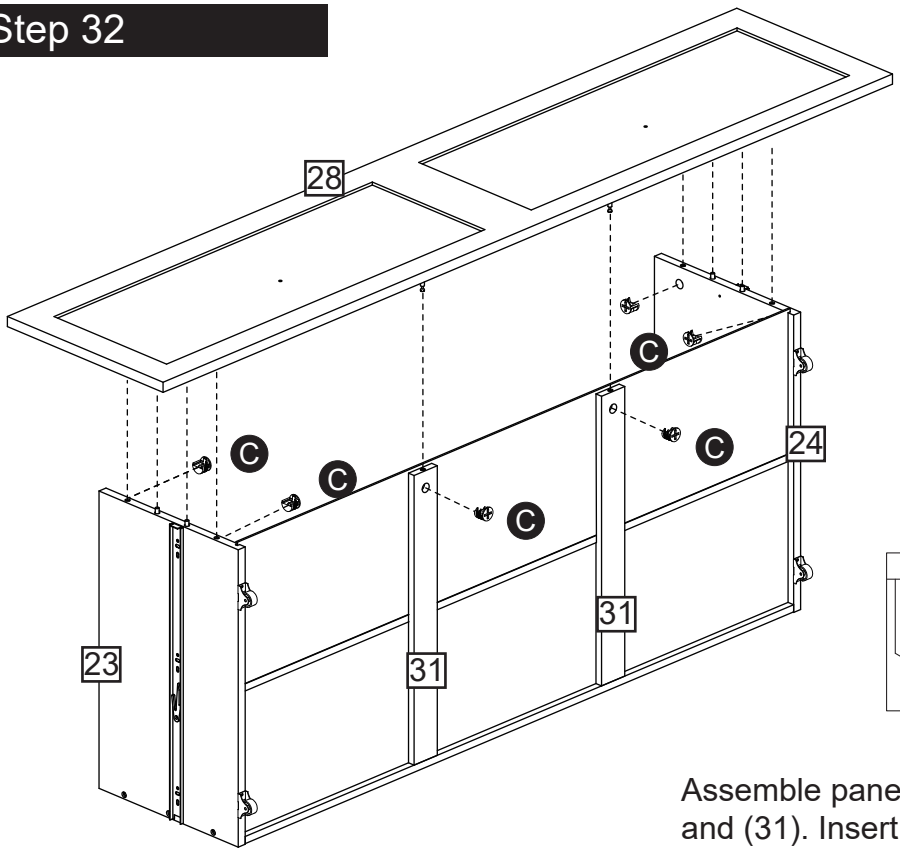

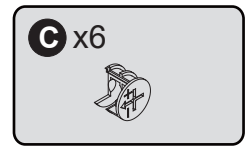


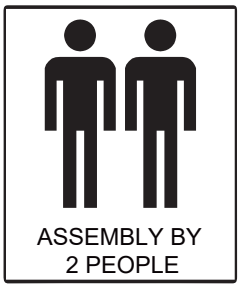


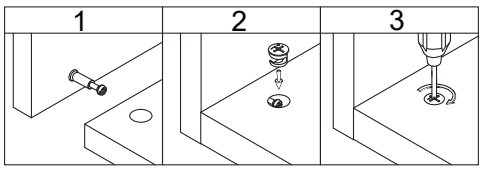


Assemble panel (28) onto panels (23), (24), and (31). Insert cam lock (C) and tighten.

Step 33

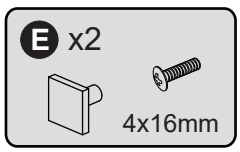

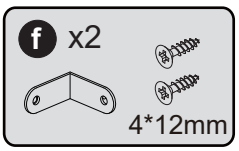

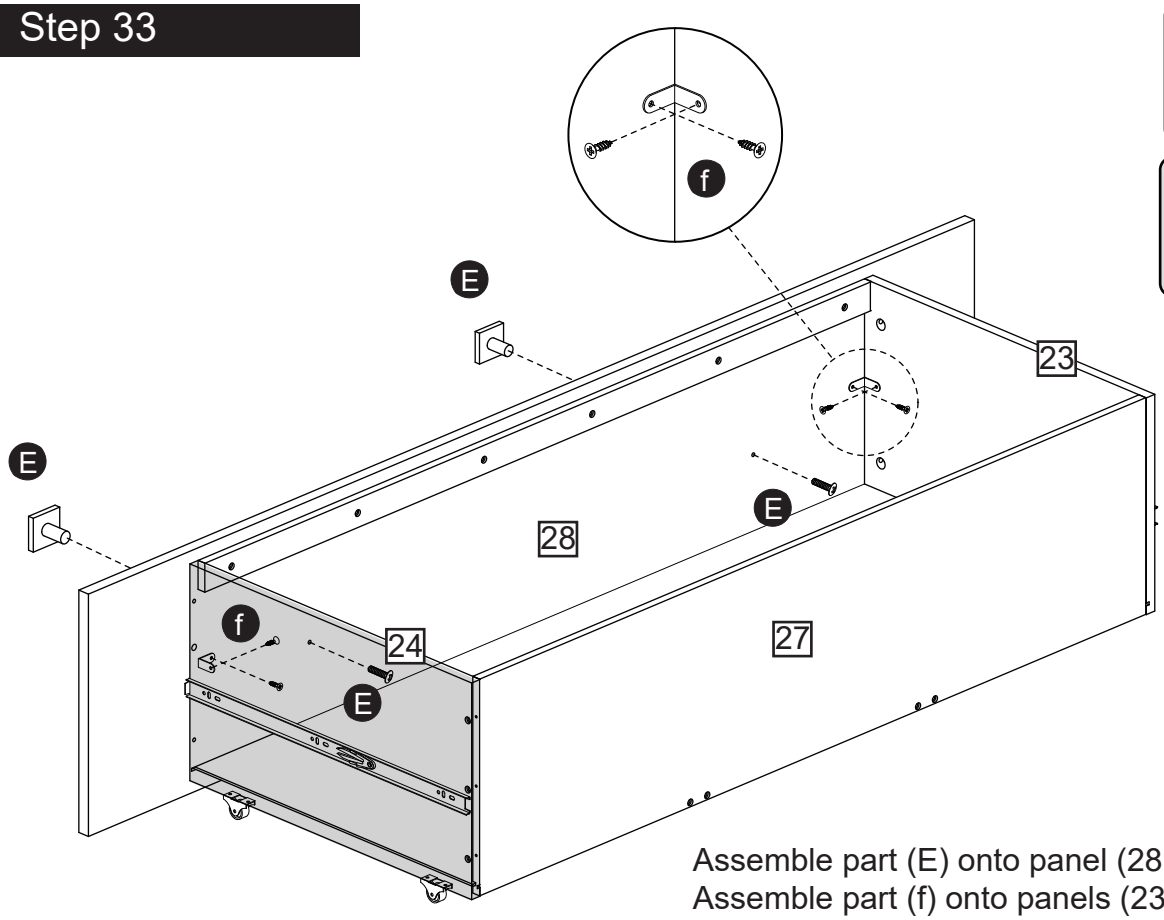


Assemble part (E) onto panel (28).
Assemble part (f) onto panels (23), (24), and (27).


Assembly Instructions


Step 34


Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

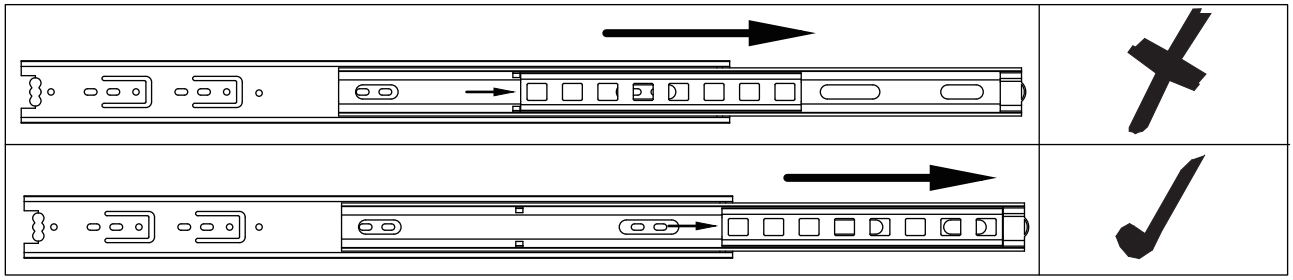

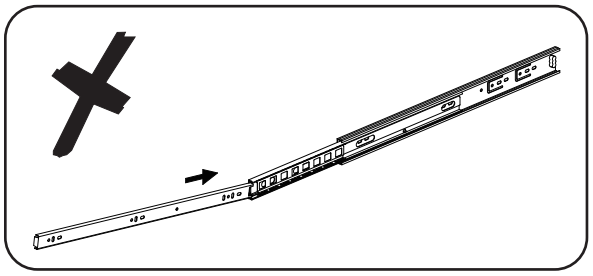


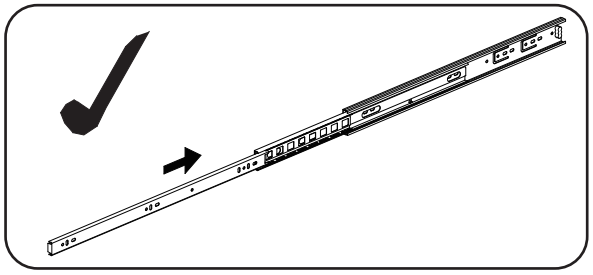

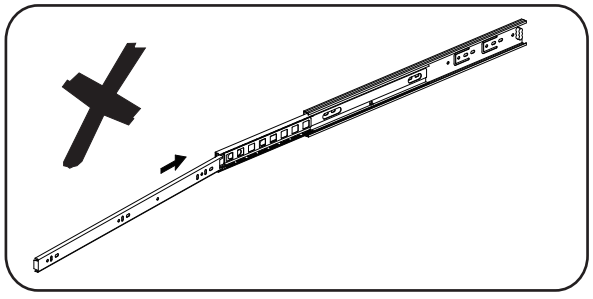

1.Drawers must be horrizontally put into the cabinets.
2.Make sure both sides sliders match well to avoid damage.



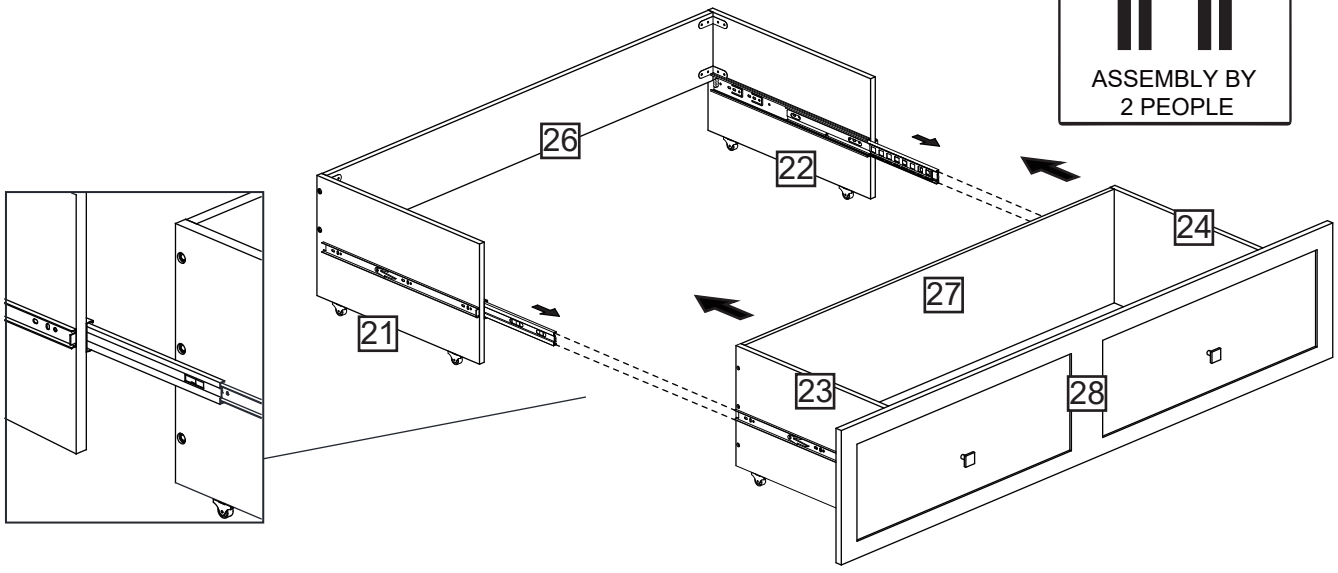


Attention:
1.Pull out the rail installed on the cabinet.
2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
★If the drawer does not go in smoothly please take it out and repeat the steps.


Assembly Instructions


Step 35


Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

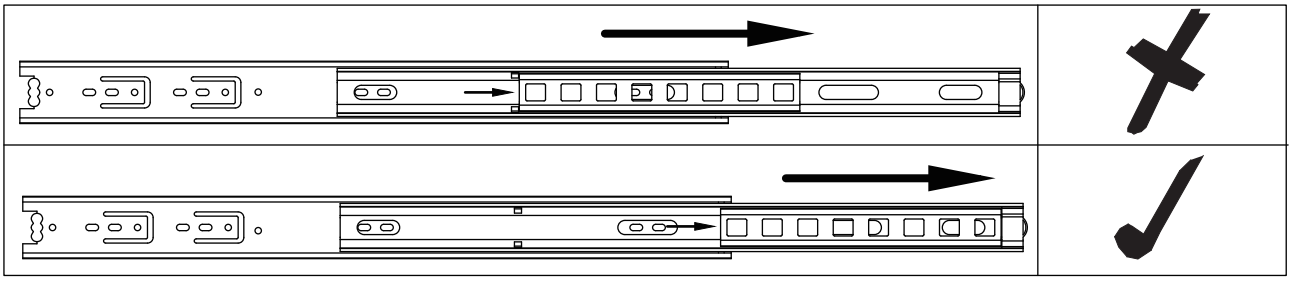


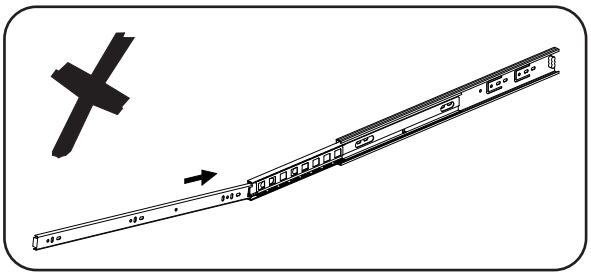


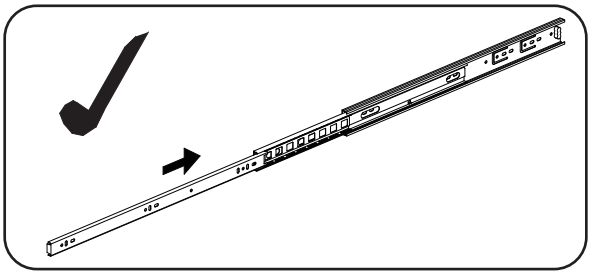

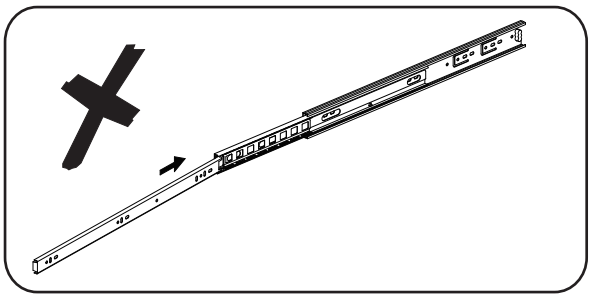

1.Drawers must be horizontally put into the cabinets.
2.Make sure both sides sliders match well to avoid damage.

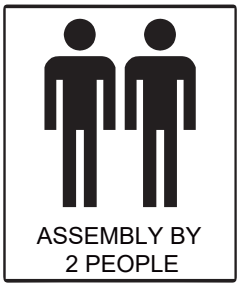

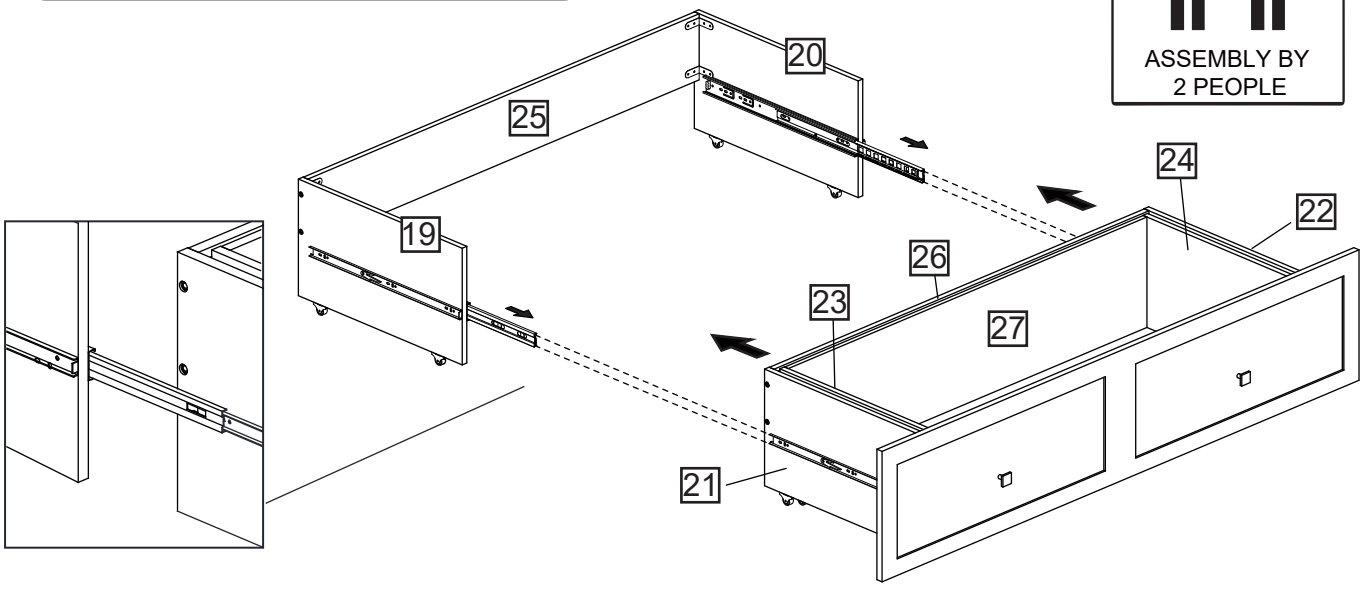


Attention:
1.Pull out the rail installed on the cabinet.
2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
★If the drawer does not go in smoothly please take it out and repeat the steps.


Assembly Instructions


Step 36


Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

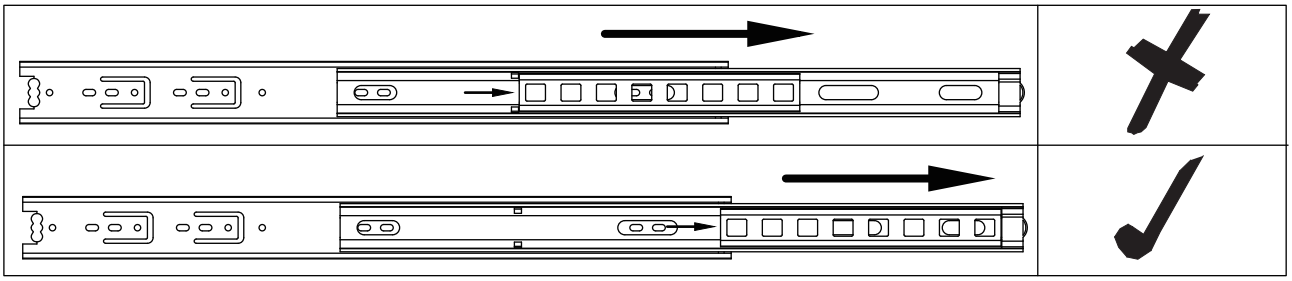


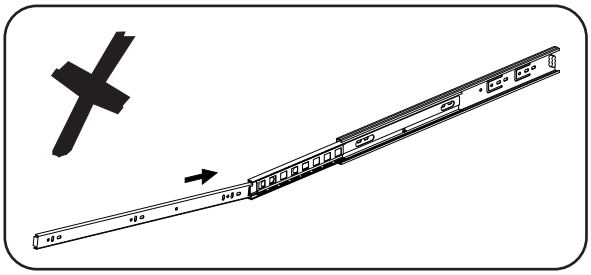

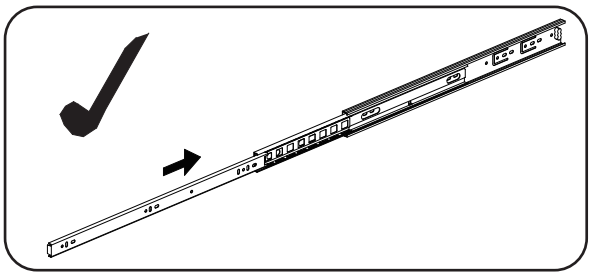

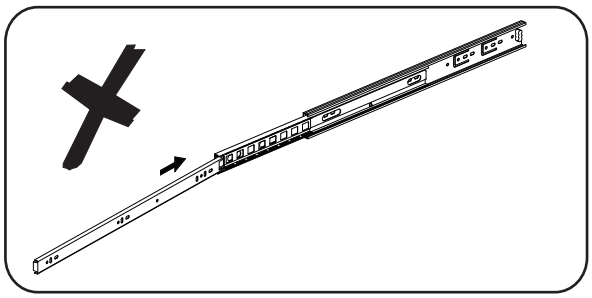


1.Drawers must be horrizontally put into the cabinets.
2.Make sure both sides sliders match well to avoid damage.

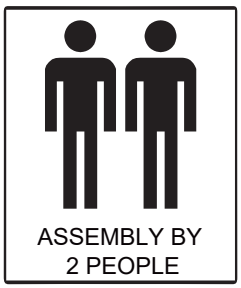

Attention:
1.Pull out the rail installed on the cabinet.
2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
★If the drawer does not go in smoothly please take it out and repeat the steps.


Assembly Instructions


Step 37

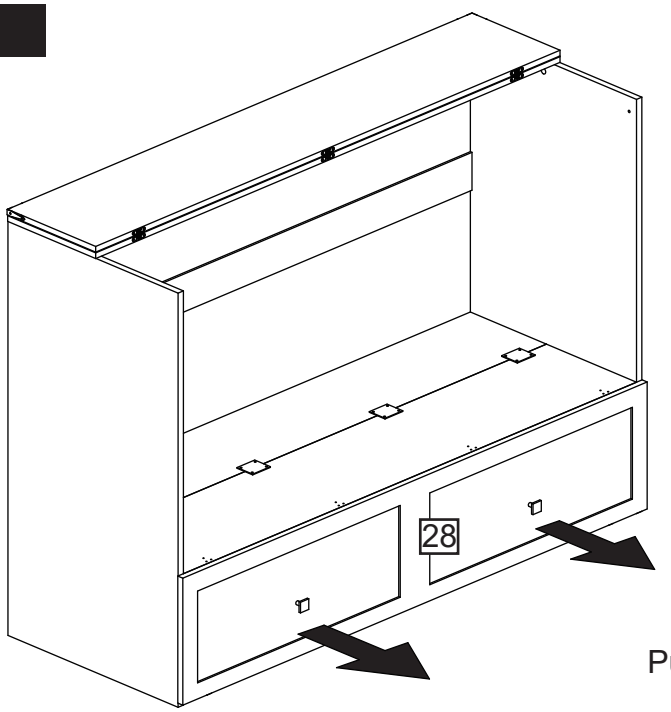



Pull out the drawer.

Step 38

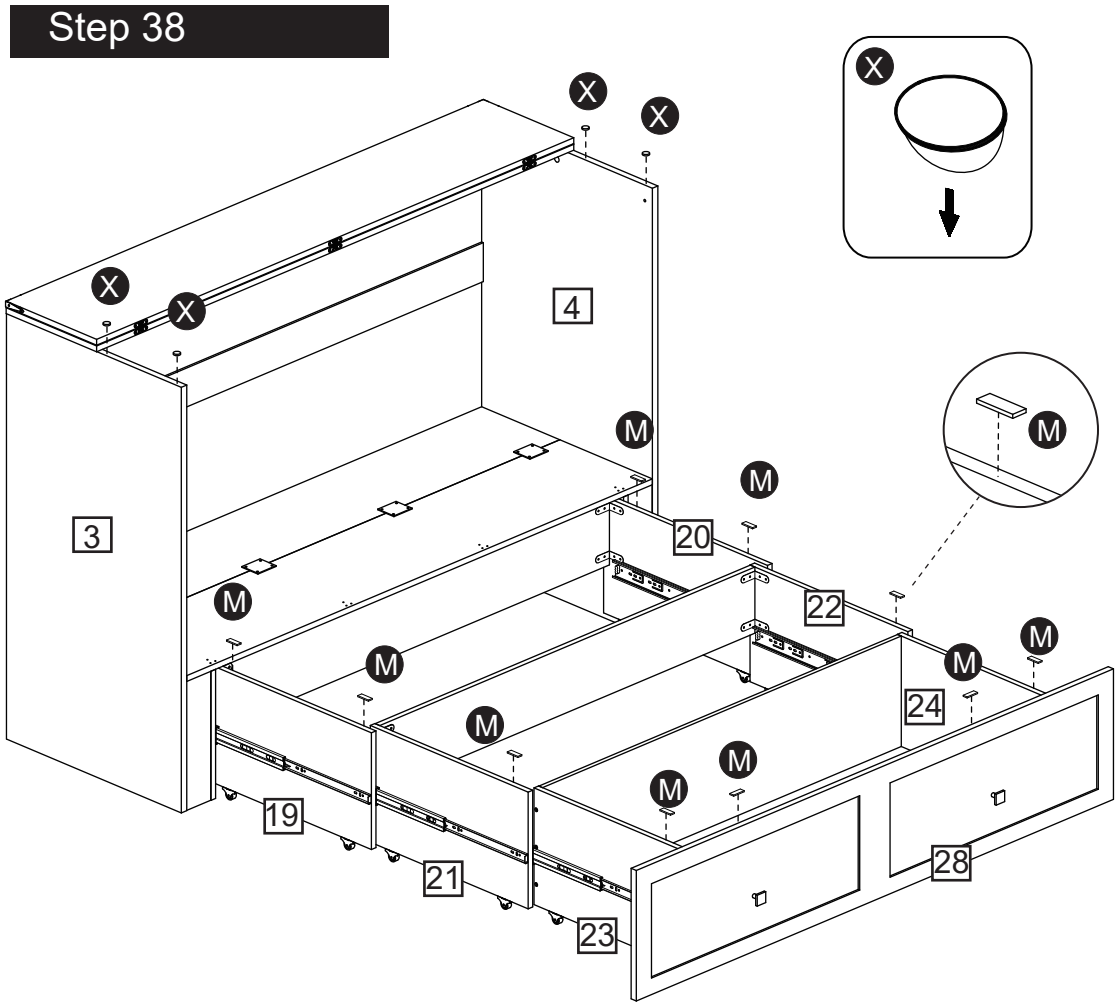

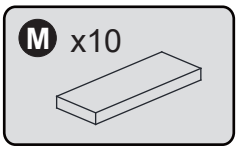

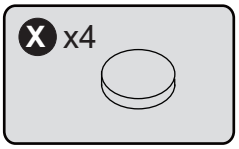


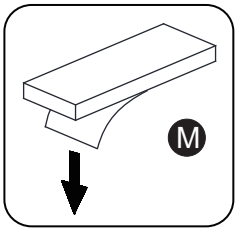



Install part (X) onto panels (3) and (4) respectively.
Install part (M) onto panels (19), (20), (21), (22), (23), (24), and (29) respectively.


Assembly Instructions


Step 39

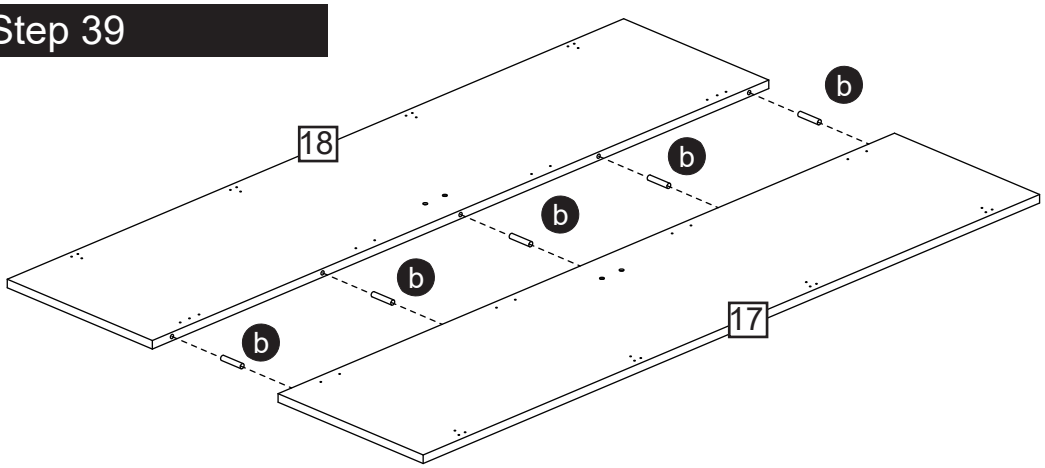

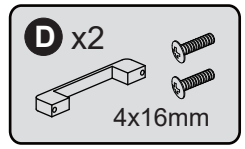


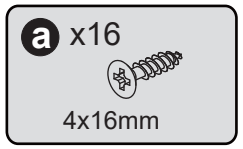

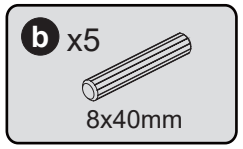

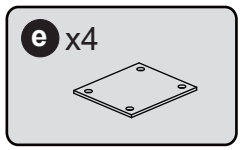


First insert wooden dowel (b) into panel (18), then assemble panel (17) onto panel (18).
Secure panels (17) and (18) with part (e) and screw (a).

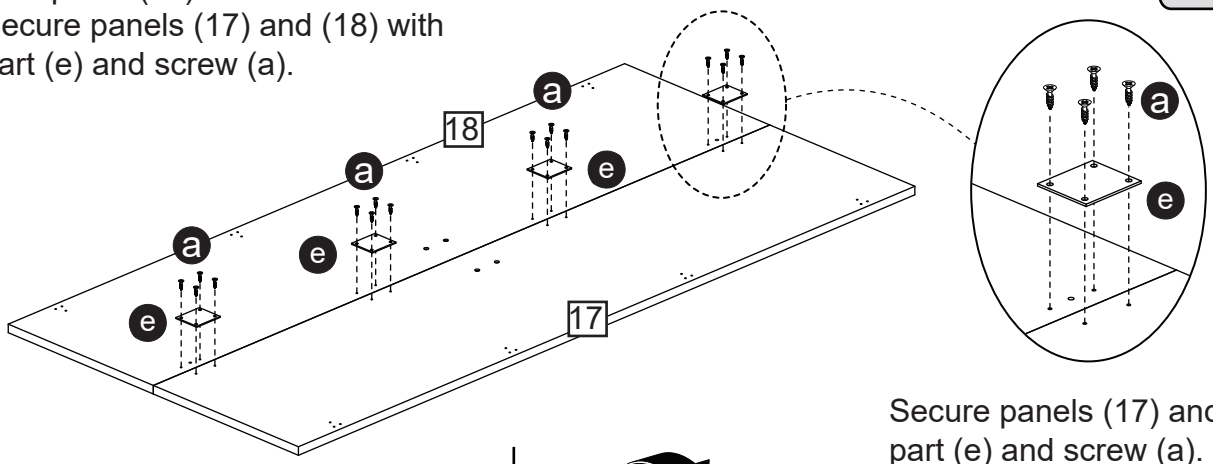

Secure panels (17) and (18) with part (e) and screw (a).



Turn over the panel

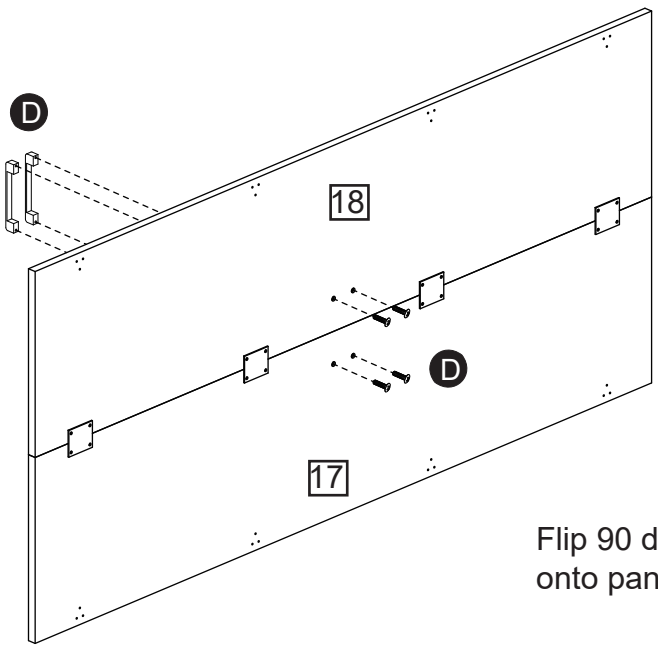


Flip 90 degrees, then assemble part (D) onto panels (17) and (18).

Assembly Instructions

Step 40



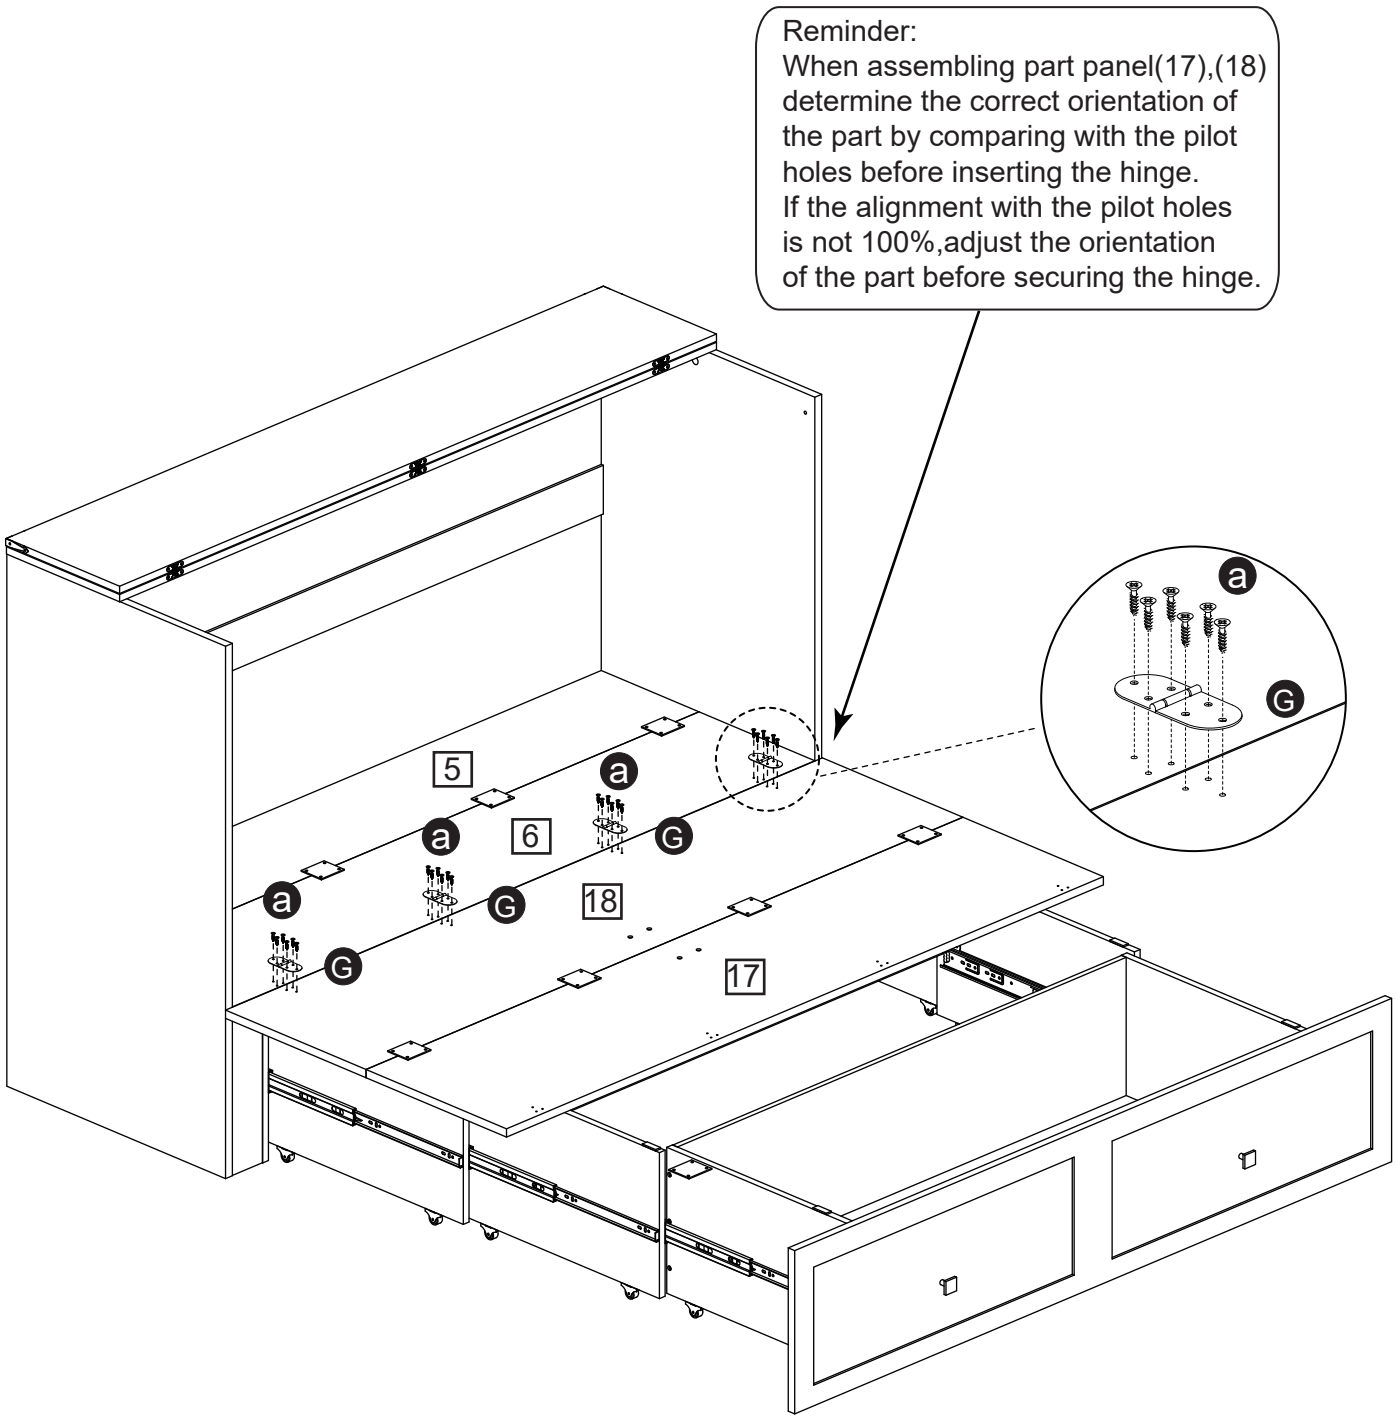


Use screw (a) to assemble part (G) onto panels (6) and (18).


Assembly Instructions


Step 41



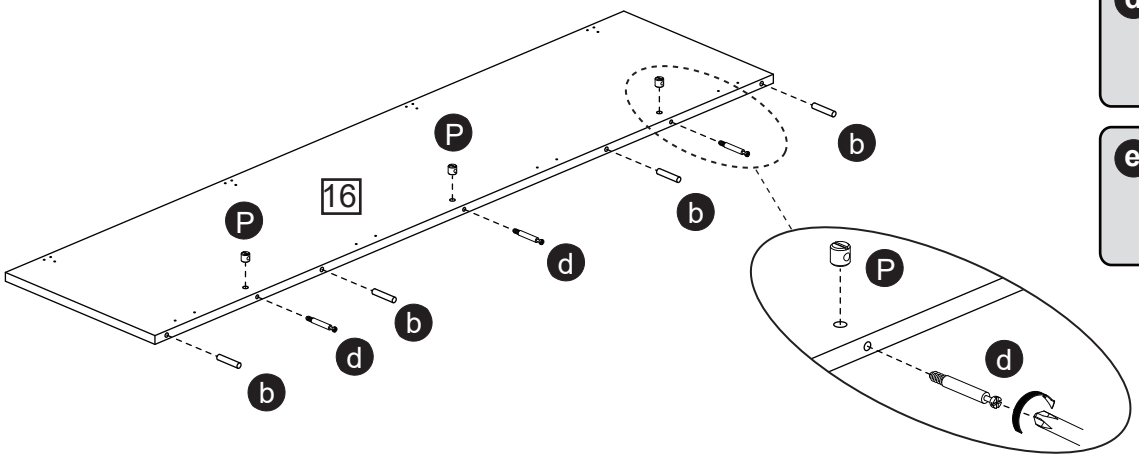

First insert wooden dowel (b) into panel (16),
then assemble part (d) and part (P) onto panel (16).
Assemble panel (15) onto panel (16),
insert cam lock (C), and tighten.

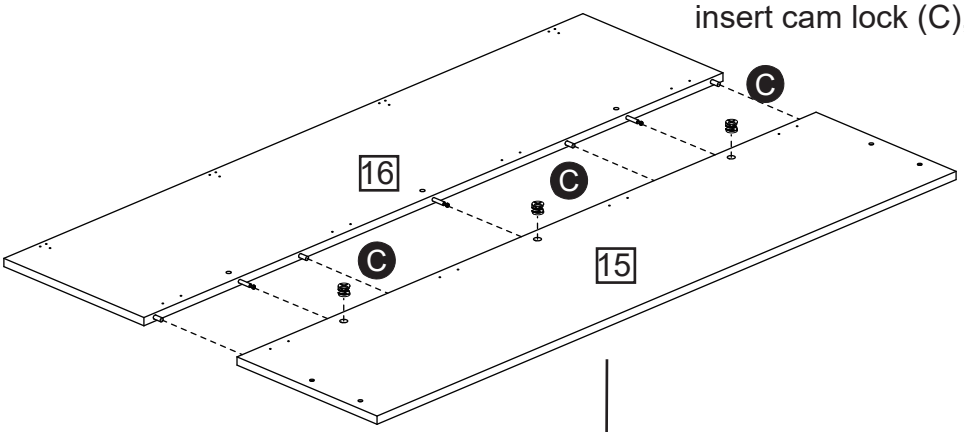

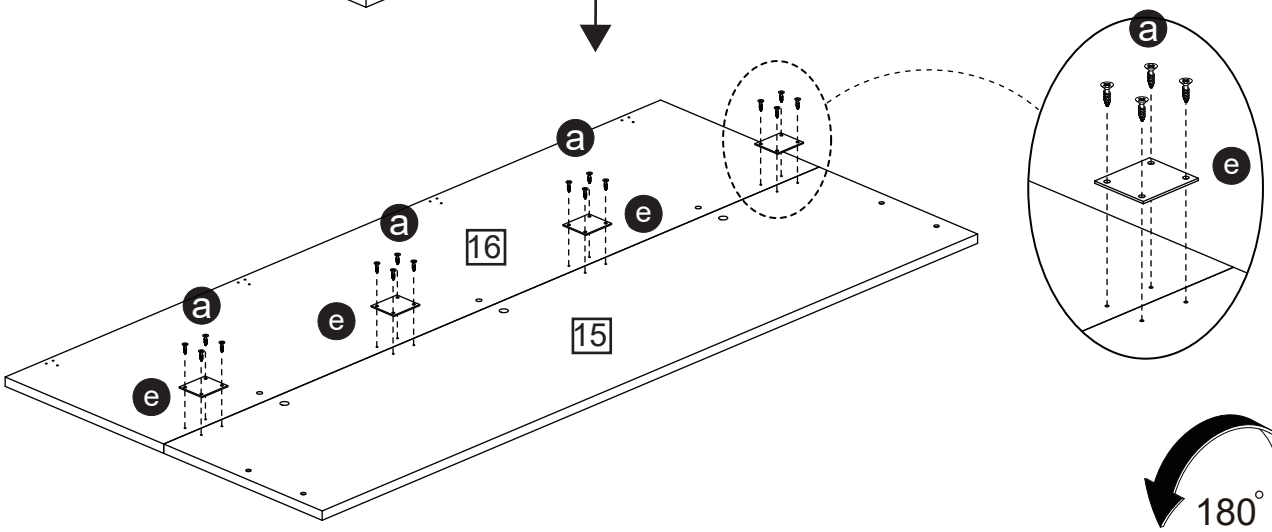


Secure panels (15) and (16) with part (e) and screw (a).


Turn over the frame
after this step as next step

Assembly Instructions

Step 42

Use screw (U) to assemble part (I) onto panel (16).
Assemble part (D) onto panel (15).

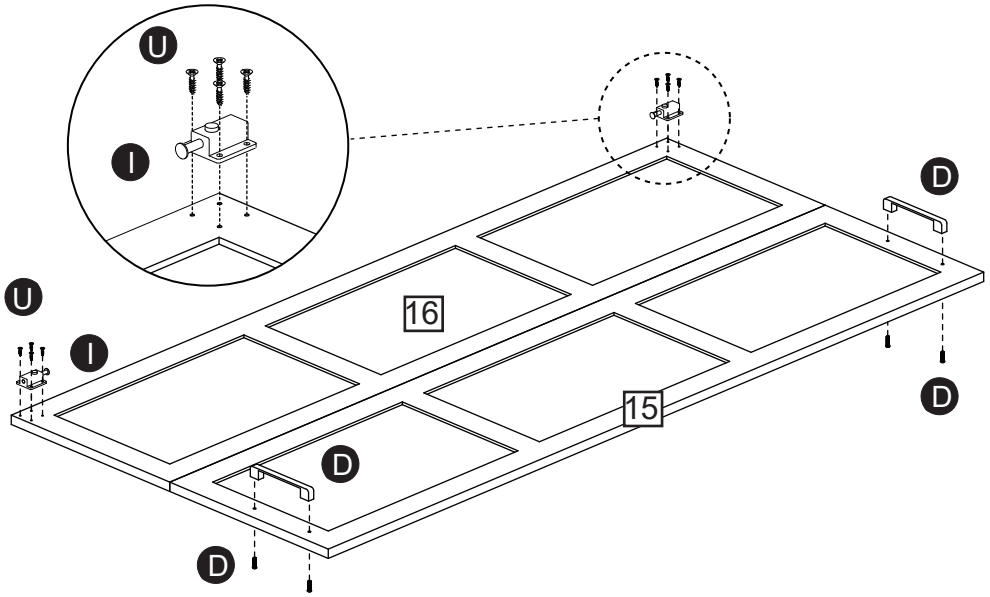


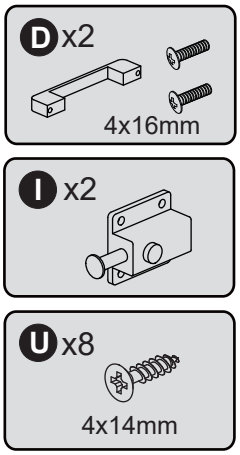

Step 43


Use screw (a) to assemble part (G) onto panels (16) and (18).



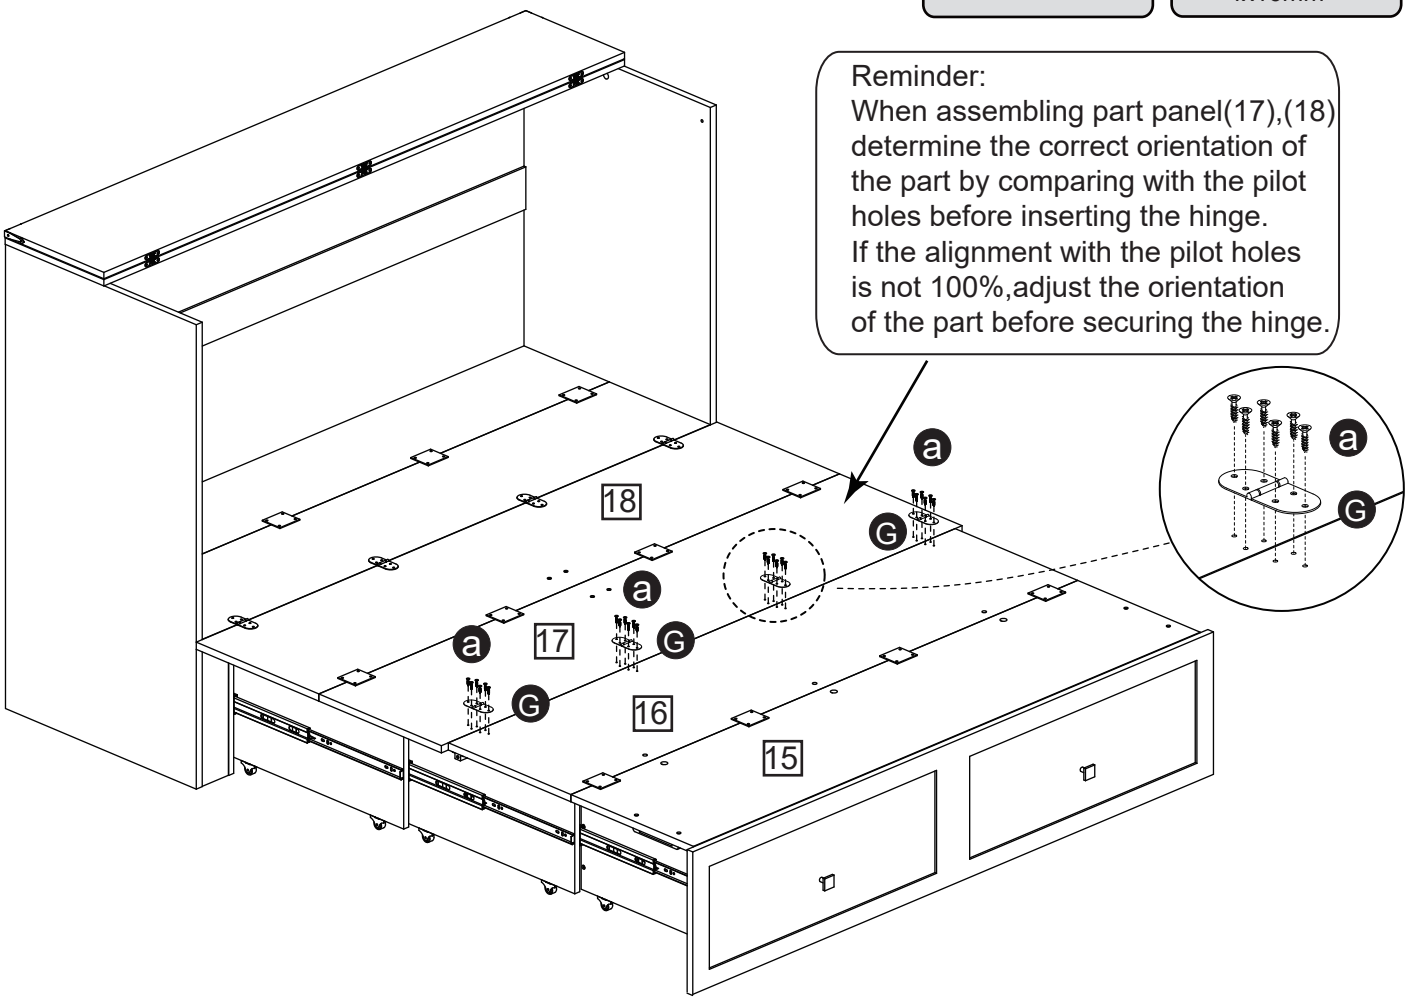


Assembly Instructions

Step 44

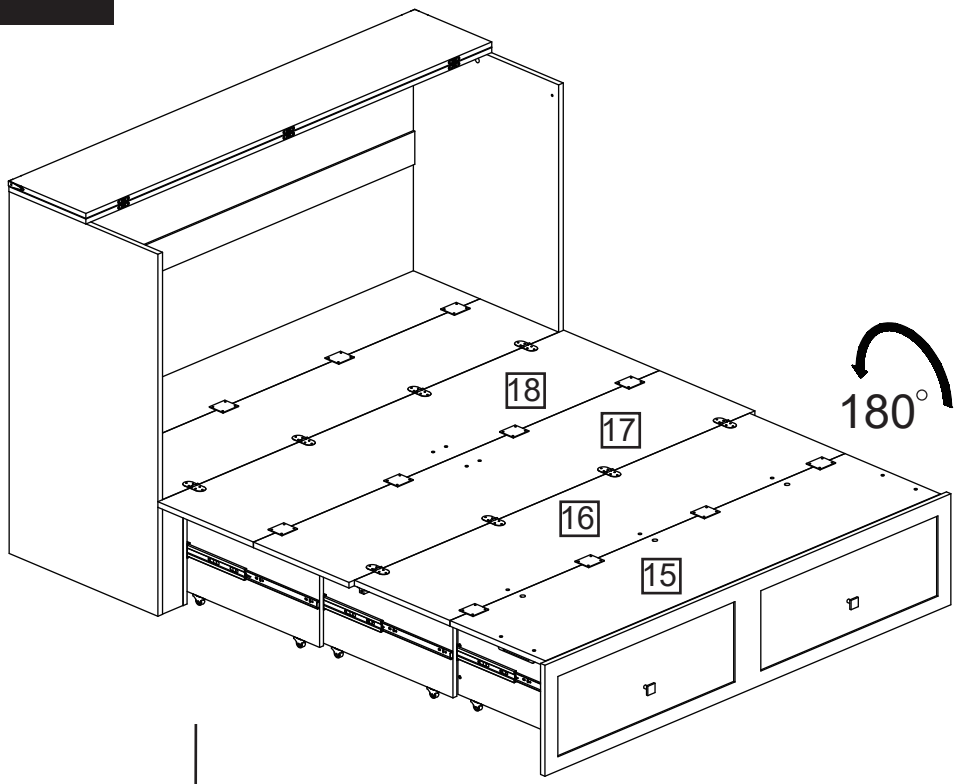


First flip panels (15) and (16) 180 degrees, then flip panels (15), (16), (17), and (18) together 90 degrees.

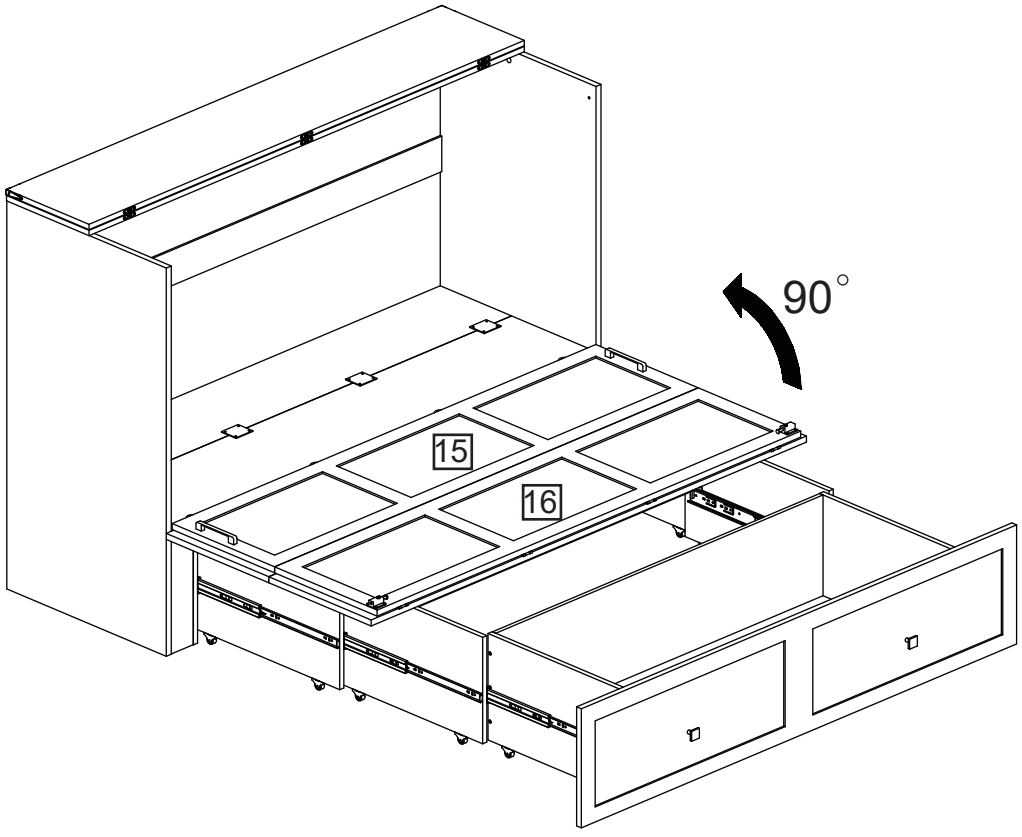

Assembly Instructions

Step 45

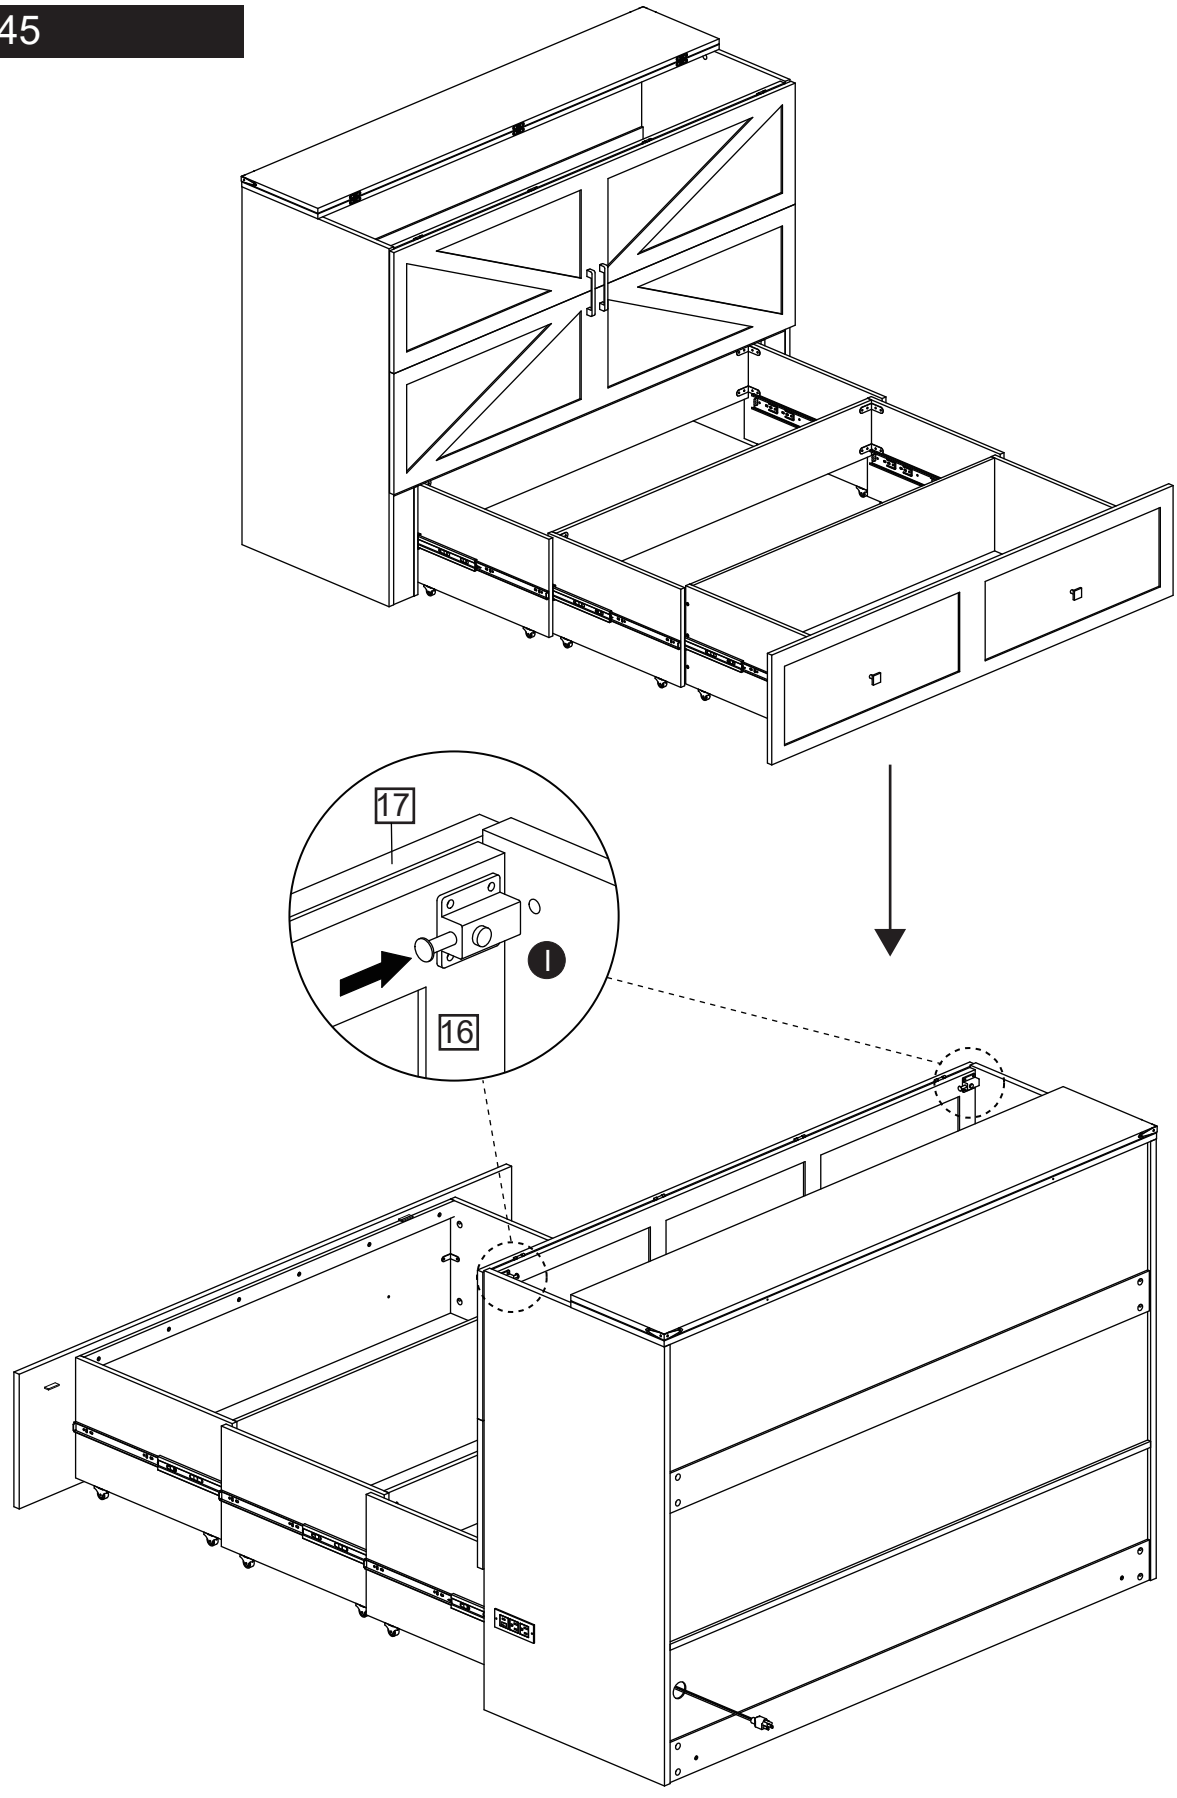



Close the switch of part (I) and secure panel (15).

Assembly Instructions


Step 46

Flip panel (2) forward 180 degrees.

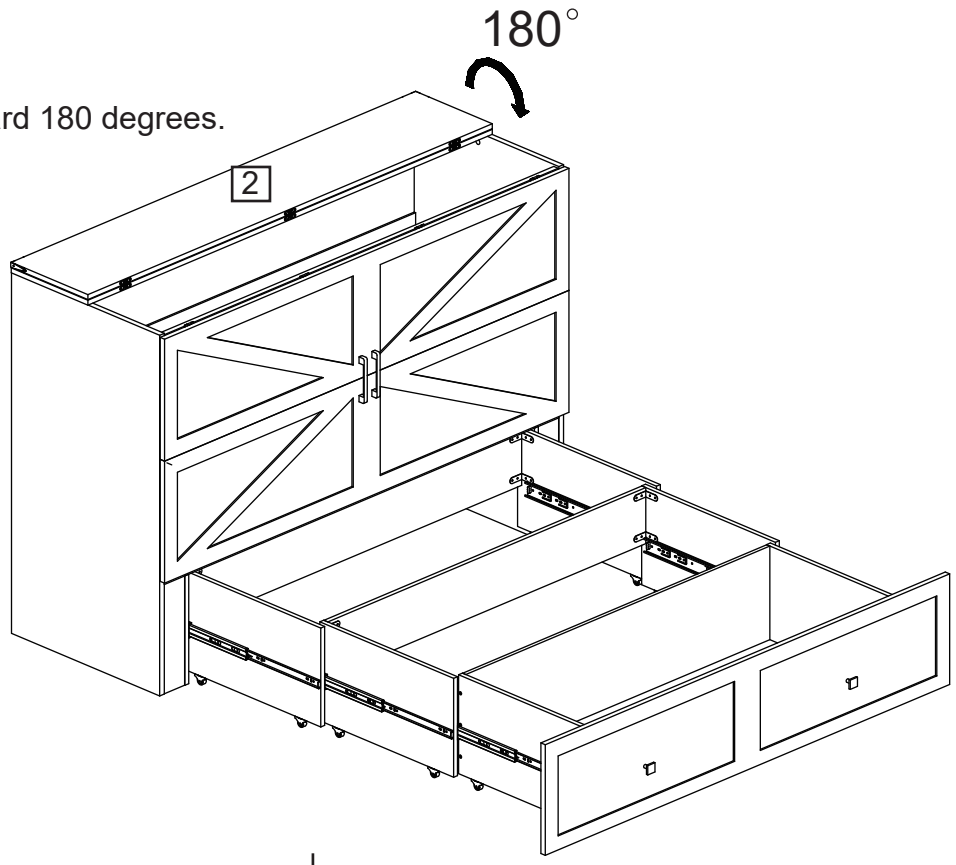

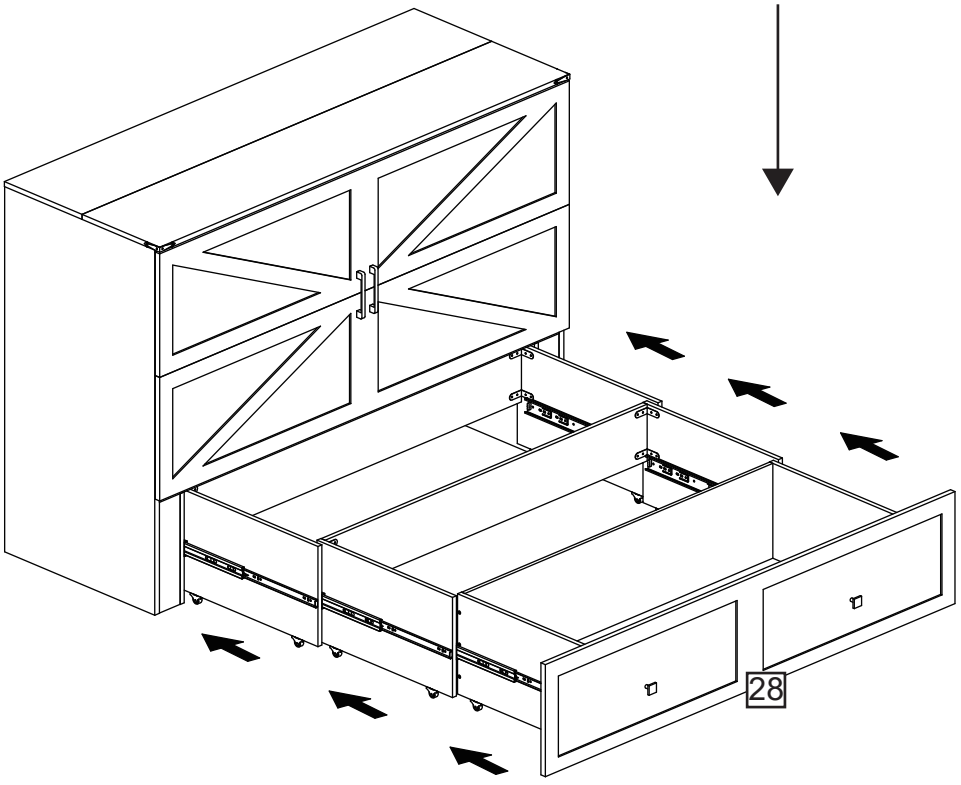



Push the drawer back in.

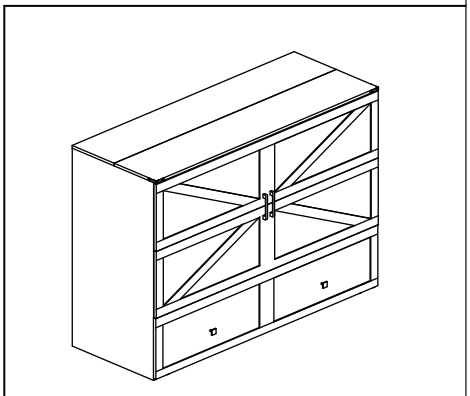


Assembly Instructions

Step 47

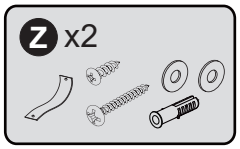

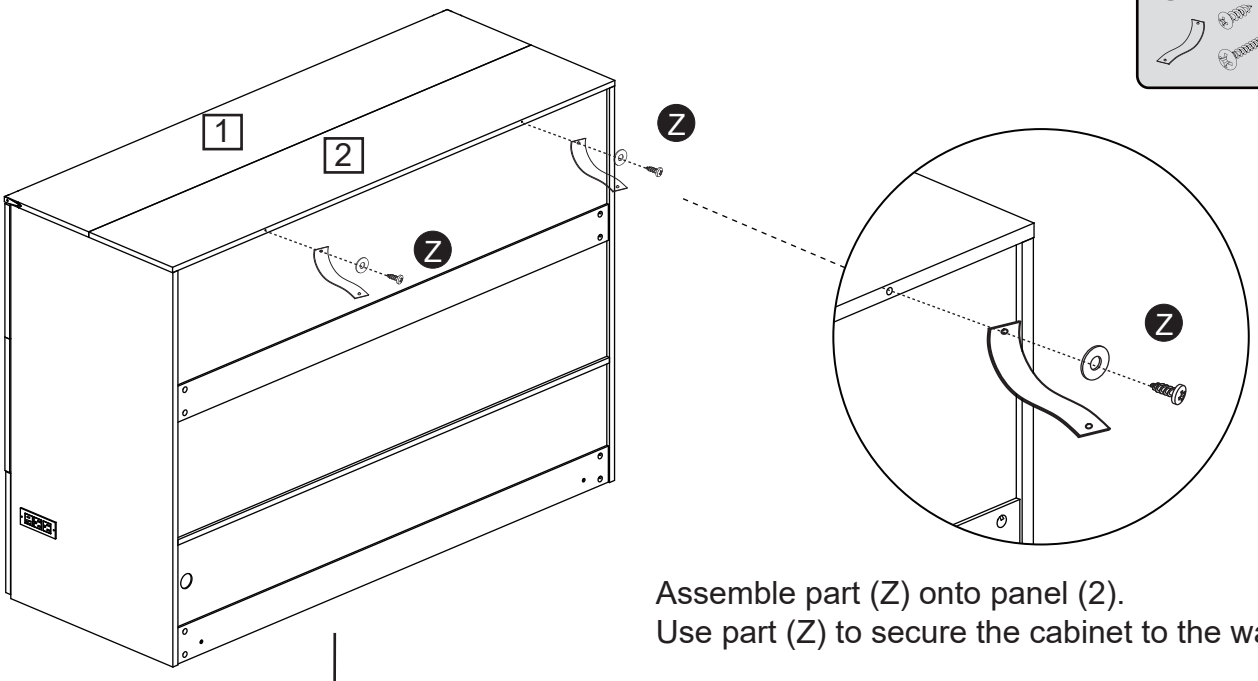


Assemble part (Z) onto panel (2).
Use part (Z) to secure the cabinet to the wall.

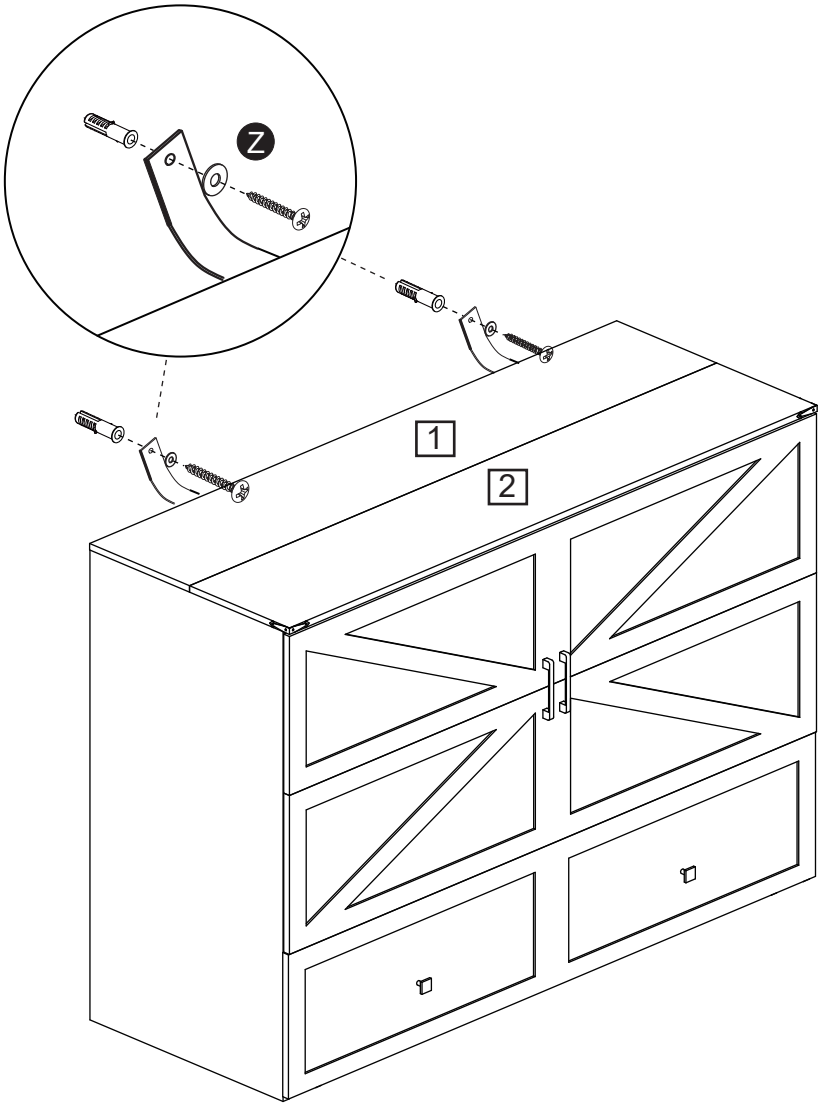


Assembly Instructions

Step 48

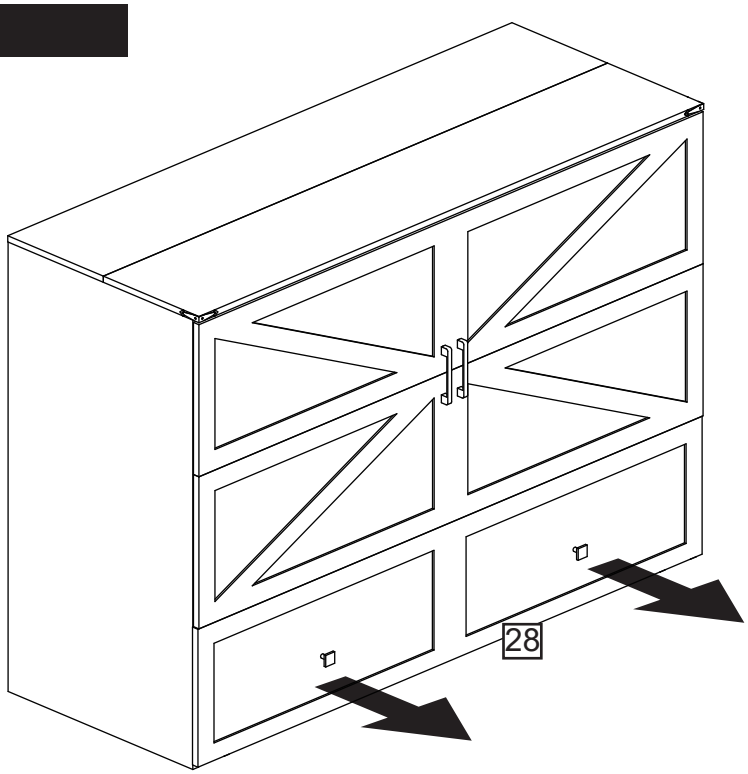


Pull out the drawer.

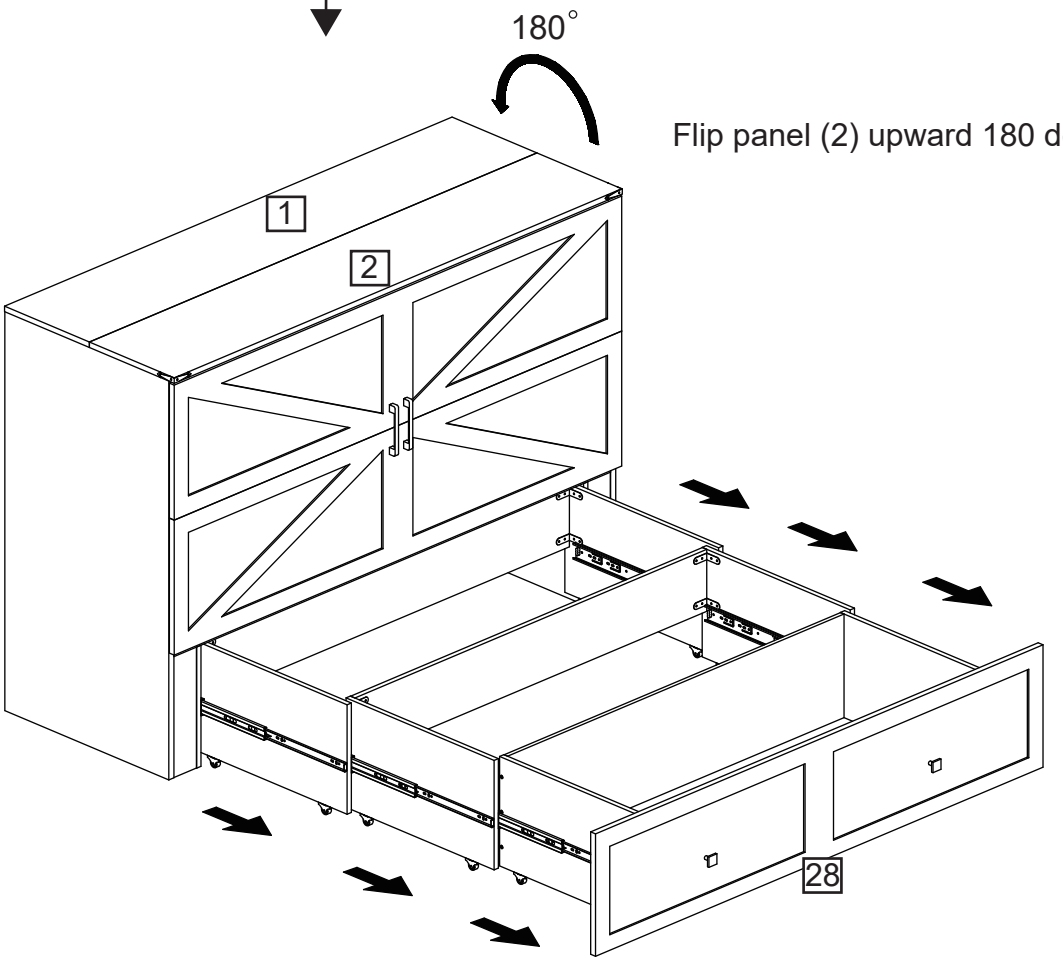


Flip panel (2) upward 180 degrees.

Assembly Instructions

Step 49

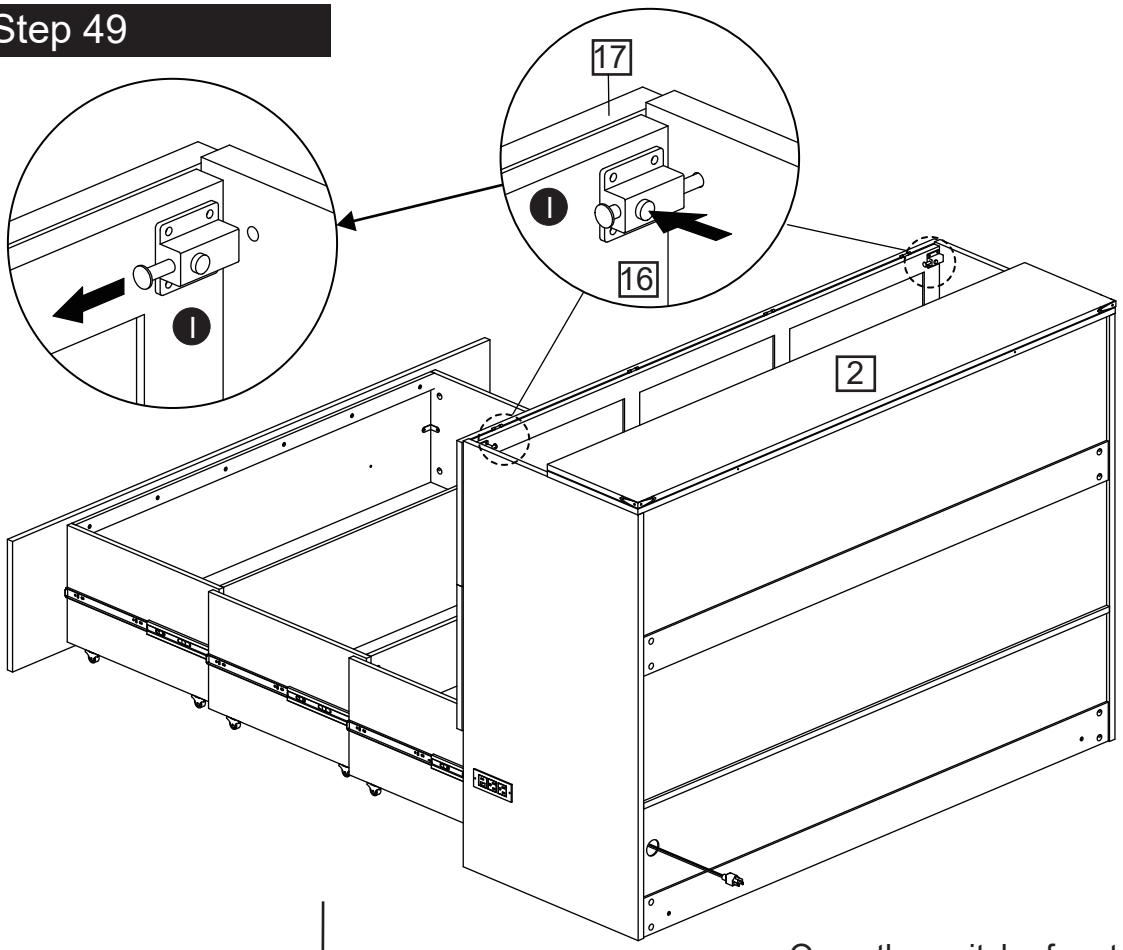


Open the switch of part (I).
Flip panels (15), (16), (17), and (18) downward 90 degrees together.

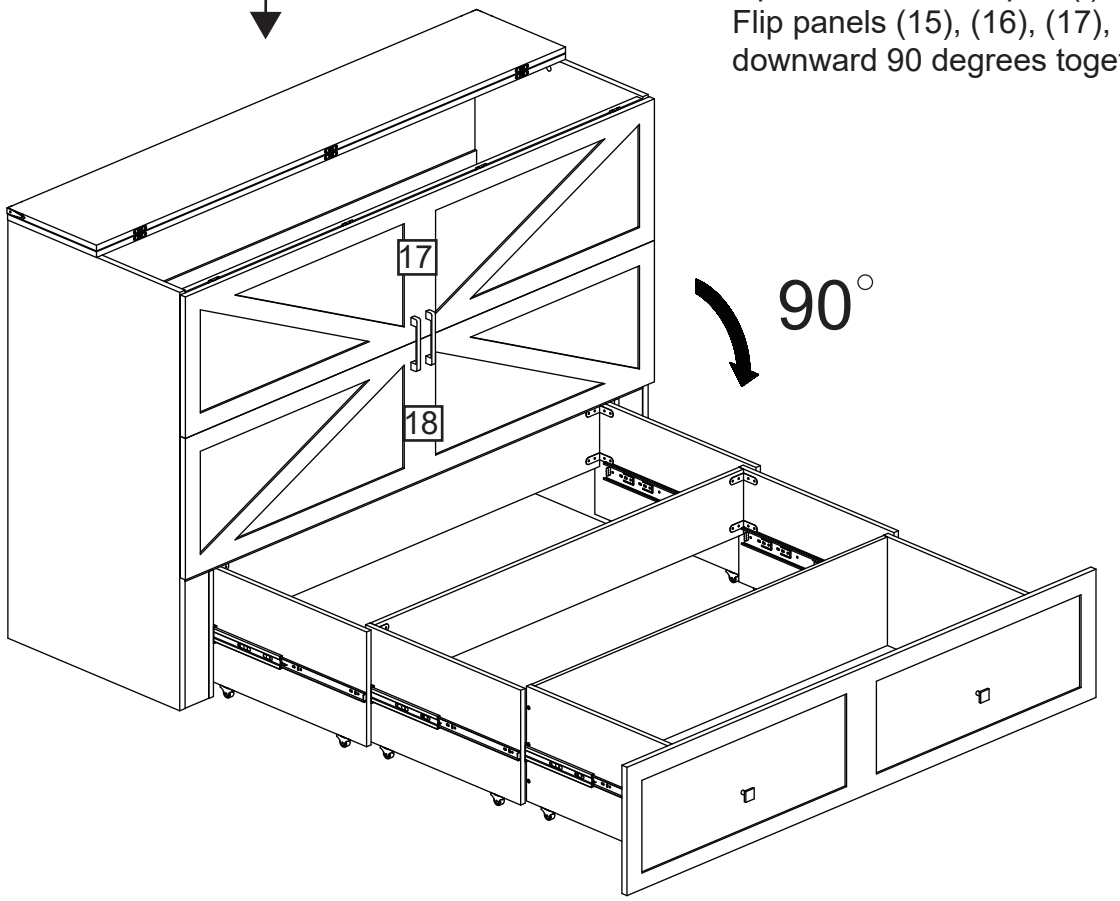


Assembly Instructions

Step 50

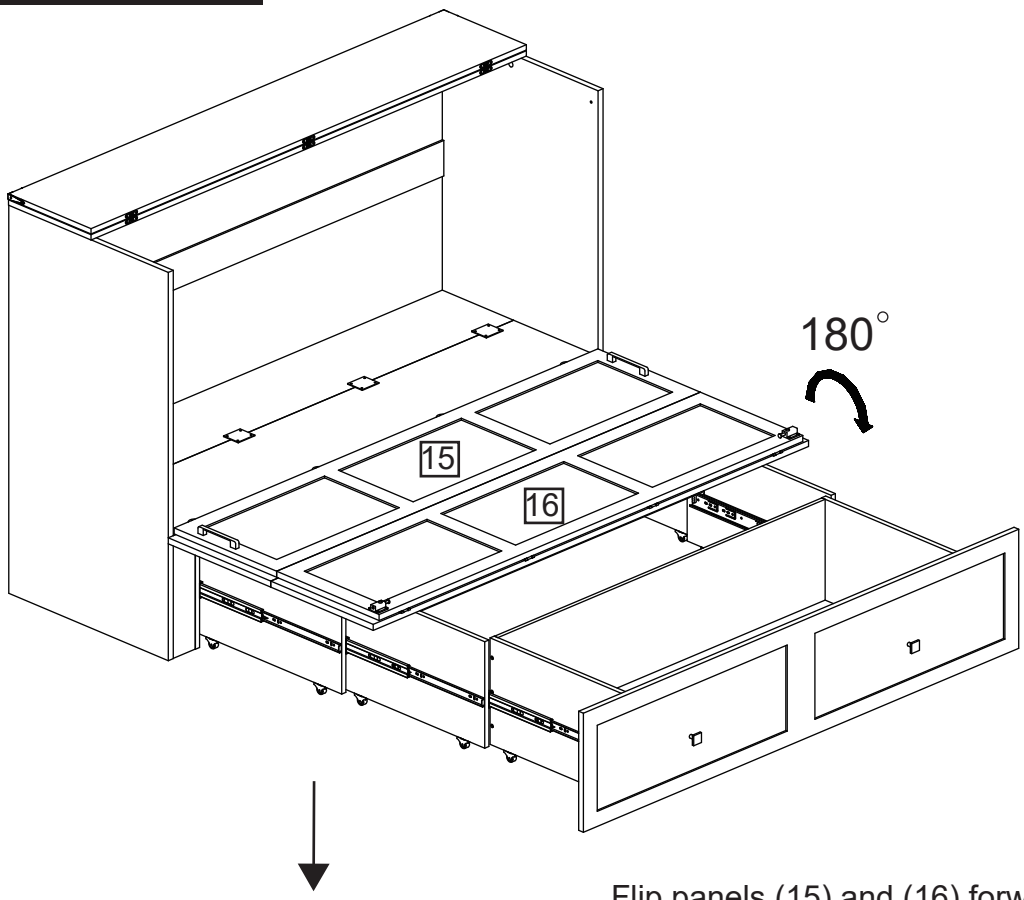

Flip panels (15) and (16) forward 180 degrees.

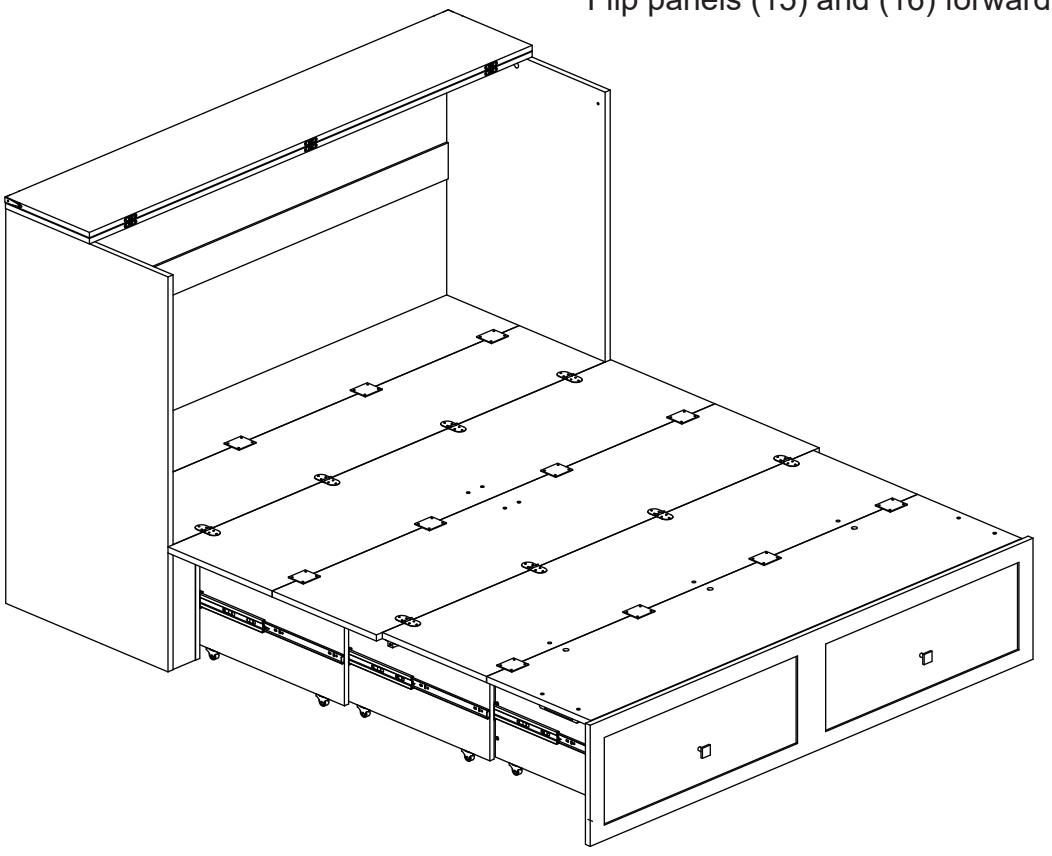

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit. Consult a qualified tradesperson if you** are unsure.


Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

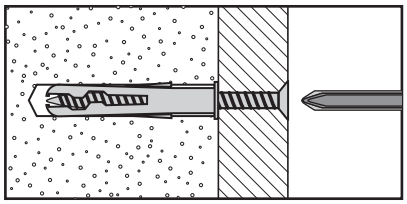


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

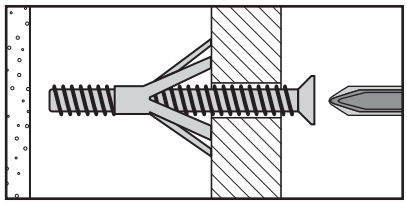


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

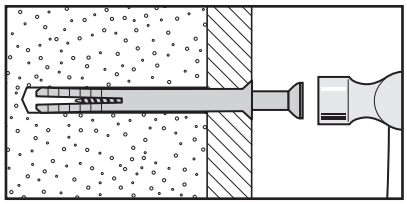


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 " Plasterboard" wall plug

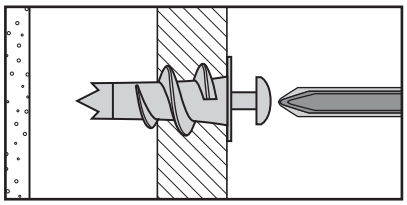


For use when attaching light loads onto plasterboard partitions.

No.4 " Cavity Fixing – Heavy Duty" wall plug

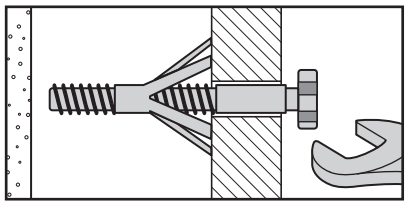

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 " Shield Anchor" wall plug – heavy loads

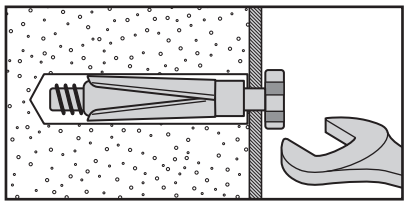

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

Multi-functional Bed

Sku:
C002222011
C002222012
C002222013
C002222021
C002222022
C002222023
C002222031
C002222032
C002222033
C002222041
C002222042
C002222043

V1.0