



# ASSEMBLY INSTRUCTION


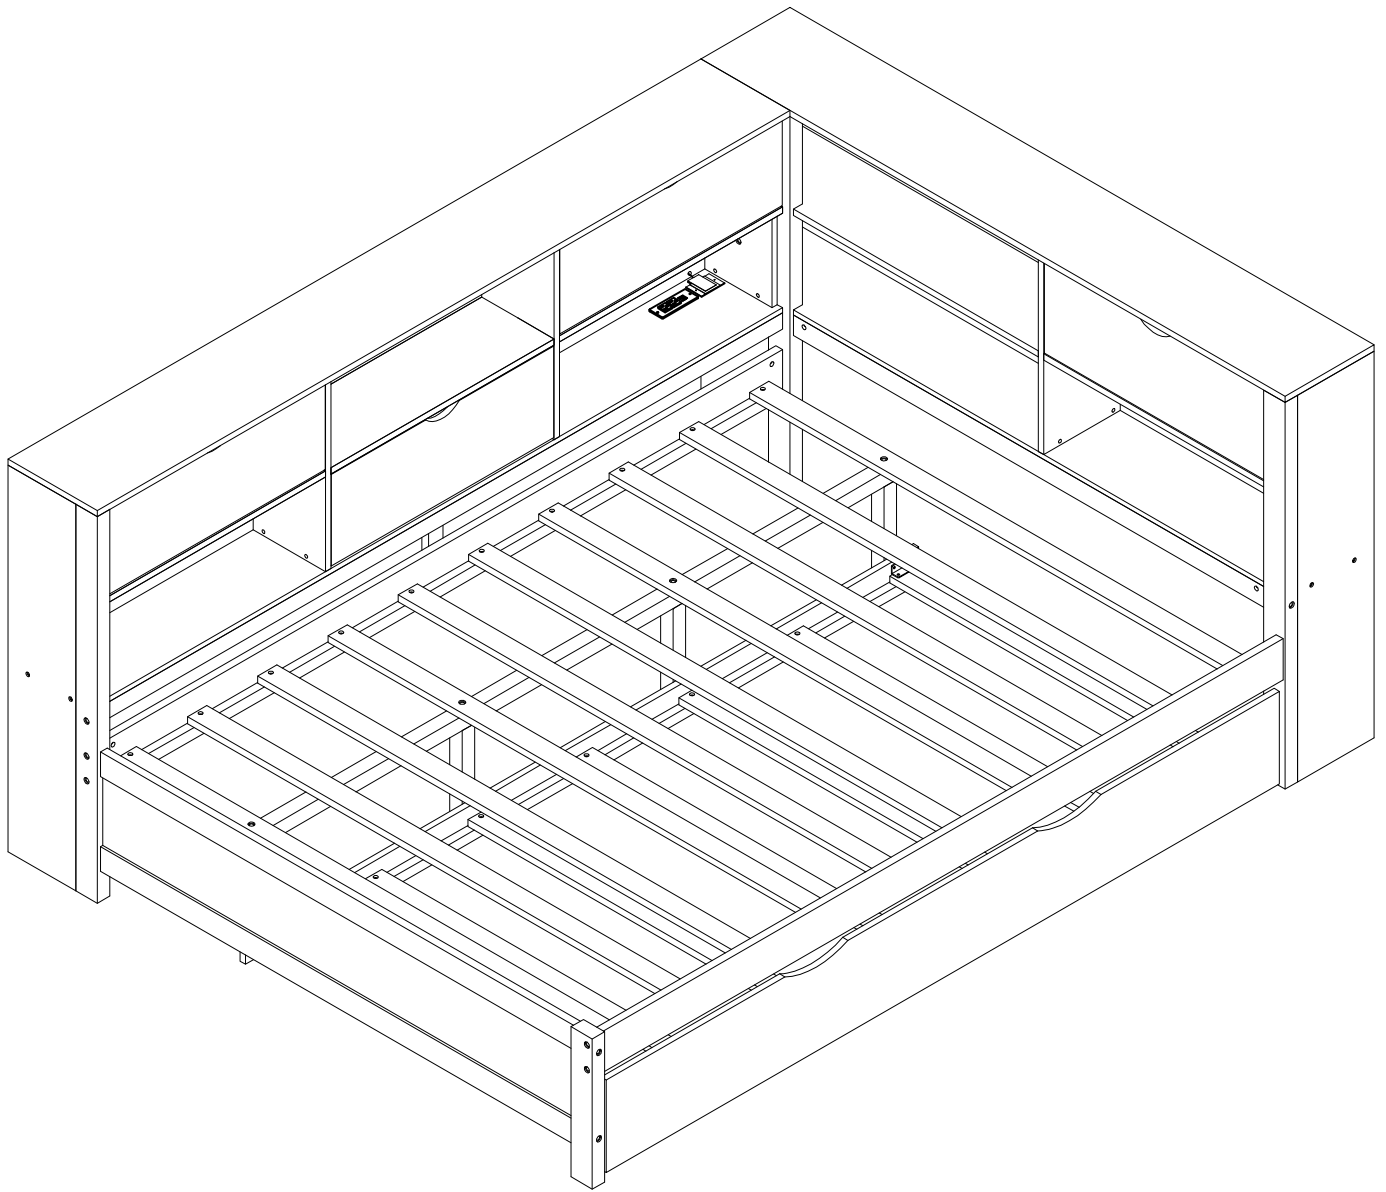










SKU CODE: N701P174979K/N701P174980K

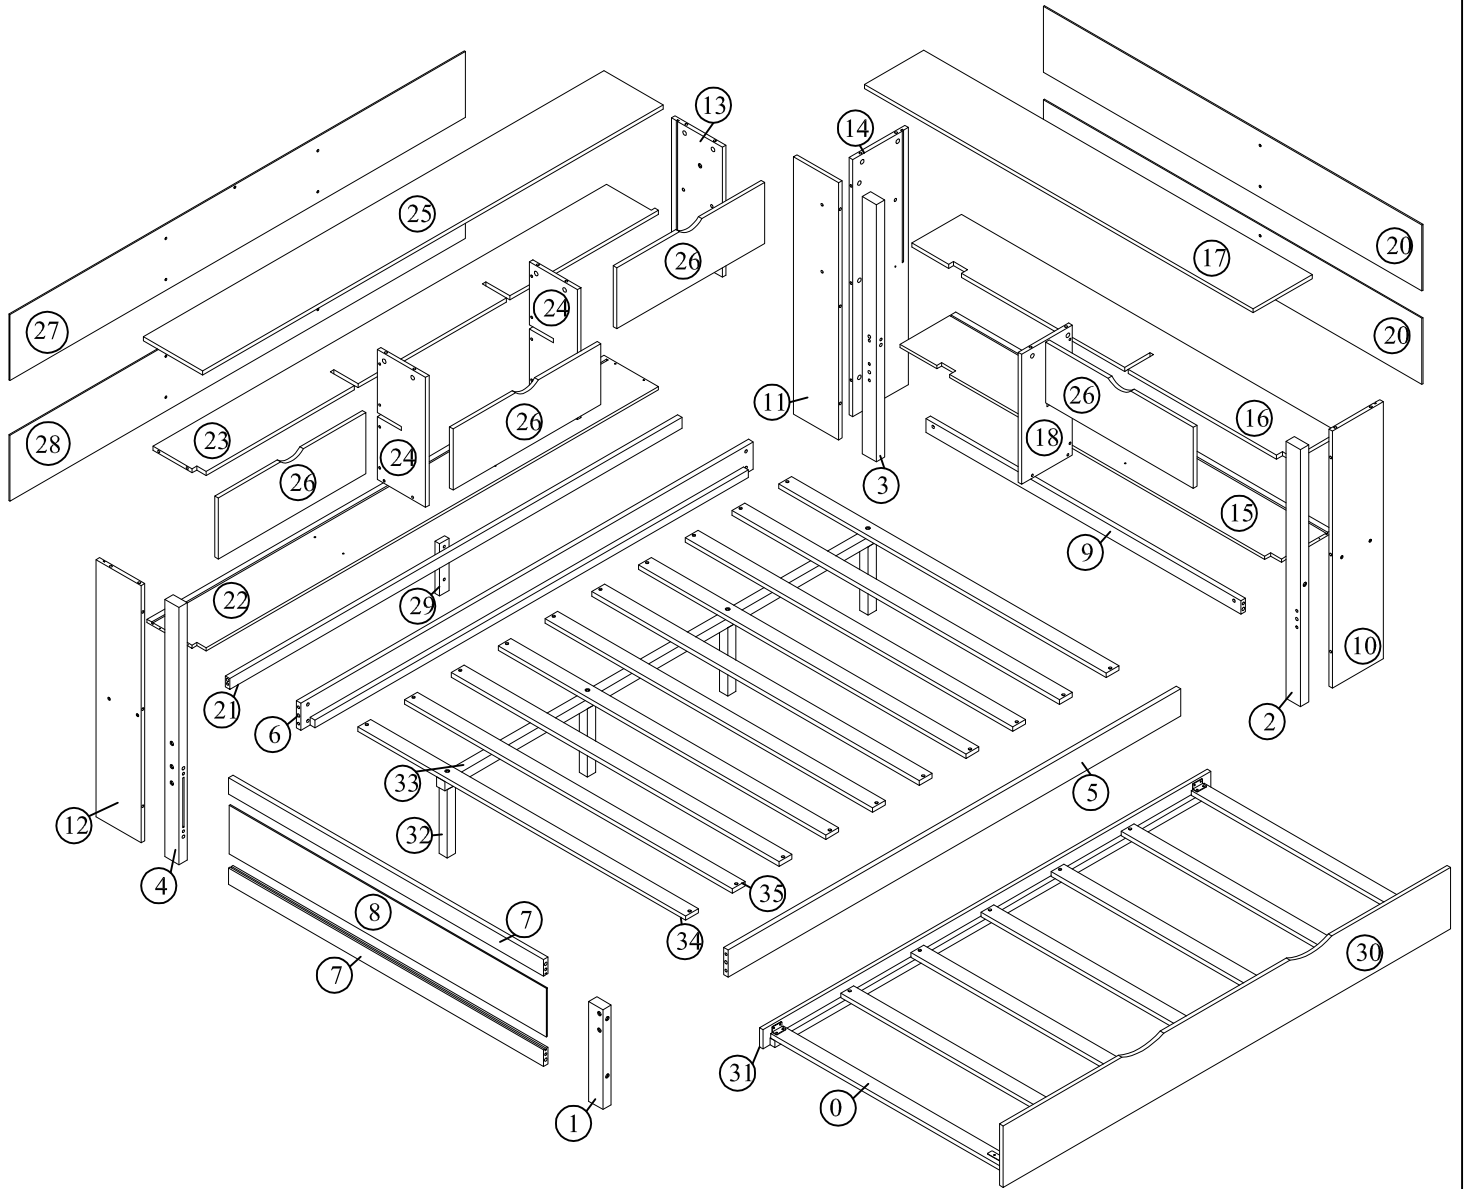








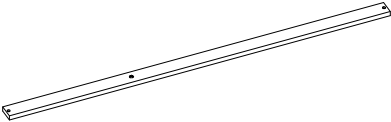
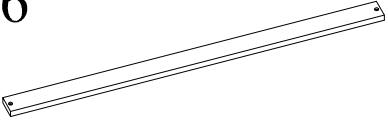
# Detail view

















# Part List (N701P174979K)

<p style="font-size: 24px; margin: 0;">① x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Footboard</p>	<p style="font-size: 24px; margin: 0;">② x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Headboard</p>
<p style="font-size: 24px; margin: 0;">③ x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Headboard</p>	<p style="font-size: 24px; margin: 0;">④ x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Footboard</p>
<p style="font-size: 24px; margin: 0;">⑧ x1</p>  <p style="text-align: center; margin-top: 10px;">Panel Footboard</p>	<p style="font-size: 24px; margin: 0;">⑩ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑪ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>	<p style="font-size: 24px; margin: 0;">⑫ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Footboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑬ x1</p>  <p style="text-align: center; margin-top: 10px;">Side Bookshelf</p>	<p style="font-size: 24px; margin: 0;">⑭ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑮ x1</p>  <p style="text-align: center; margin-top: 10px;">Bookshelf Headboard</p>	<p style="font-size: 24px; margin: 0;">⑯ x1</p>  <p style="text-align: center; margin-top: 10px;">Bookshelf</p>




















# Part List (N701P174979K)

<p><b>17</b> x1</p>  <p style="text-align: center;">Top Bookshelf</p>	<p><b>18</b> x1</p>  <p style="text-align: center;">Mid Bookshelf</p>
<p><b>20</b> x2</p>  <p style="text-align: center;">Panel Bookshelf</p>	<p><b>24</b> x2</p>  <p style="text-align: center;">Mid Bookshelf</p>
<p><b>26</b> x4</p>  <p style="text-align: center;">Door Bookshelf</p>	<p><b>29</b> x1</p>  <p style="text-align: center;">Support Shelf</p>
<p><b>32</b> x4</p>  <p style="text-align: center;">Leg Supports</p>	<p><b>34</b> x4</p>  <p style="text-align: center;">Slats</p>
<p><b>35</b> x6</p>  <p style="text-align: center;">Slats</p>	

# Part List (N701P174980K)

<p>① x7</p>  <p style="text-align: center;">Slats</p>	<p>② x1</p>  <p style="text-align: center;">Side rail</p>
<p>③ x1</p>  <p style="text-align: center;">Side rail</p>	<p>④ x2</p>  <p style="text-align: center;">Crossbar Footboard</p>
<p>⑤ x1</p>  <p style="text-align: center;">Crossbar - Headboard</p>	<p>⑥ x1</p>  <p style="text-align: center;">Crossbar</p>
<p>⑦ x1</p>  <p style="text-align: center;">Bookshelf</p>	<p>⑧ x1</p>  <p style="text-align: center;">Bookshelf</p>
<p>⑨ x1</p>  <p style="text-align: center;">Top Bookshelf</p>	<p>⑩ x1</p>  <p style="text-align: center;">Panel Bookshelf</p>
<p>⑪ x1</p>  <p style="text-align: center;">Panel Bookshelf</p>	<p>⑫ x1</p>  <p style="text-align: center;">Front Trundle</p>
<p>⑬ x1</p>  <p style="text-align: center;">Back Trundle</p>	<p>⑭ x1</p>  <p style="text-align: center;">Slat supports</p>





# Hardware List (N7017174979K)

No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø10*40mm	12
(B)		Bolts 1/4"*30mm	04
(C)		Bolts 1/4"*80mm	10
(D)		Bolts 1/4"*110mm	06
(E)		Cross dowel 1/4"*13mm	16
(F)		Screws #6*12mm	76
(G)		Screws #7*12mm	32
(H)		Screws #8*30mm	38
(I)		Screws #8*35mm	14
(J)		Round head screw #8*25mm	12
(K)		Connecting Bolt	34
(L)		Connector Housing	34
(M)		Base L long	02
(N)		Base L small	02
(O)		Wheels	04
(P)		Power outlet	01
(Q)		Led light	01
(R)		Base L	03
(S)		Inhaler Magnet	08

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







## Hardware List (N7017174979K)


No.	OUTLOOK	DESC	QTY
(T)		Door Hinge	08
(U)		Wood stops	02
(V)		Allen key 60*22*4mm	01
(W)		Bolts 1/4"*70mm	04

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







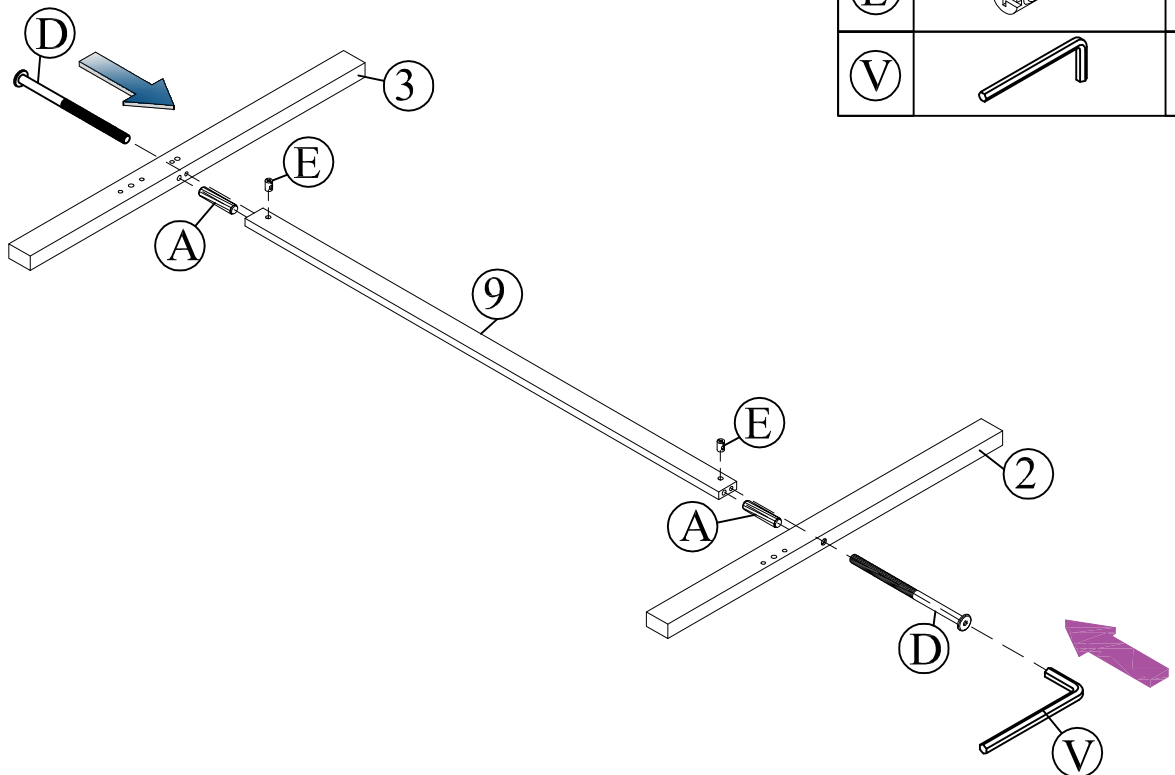
STEP 1:

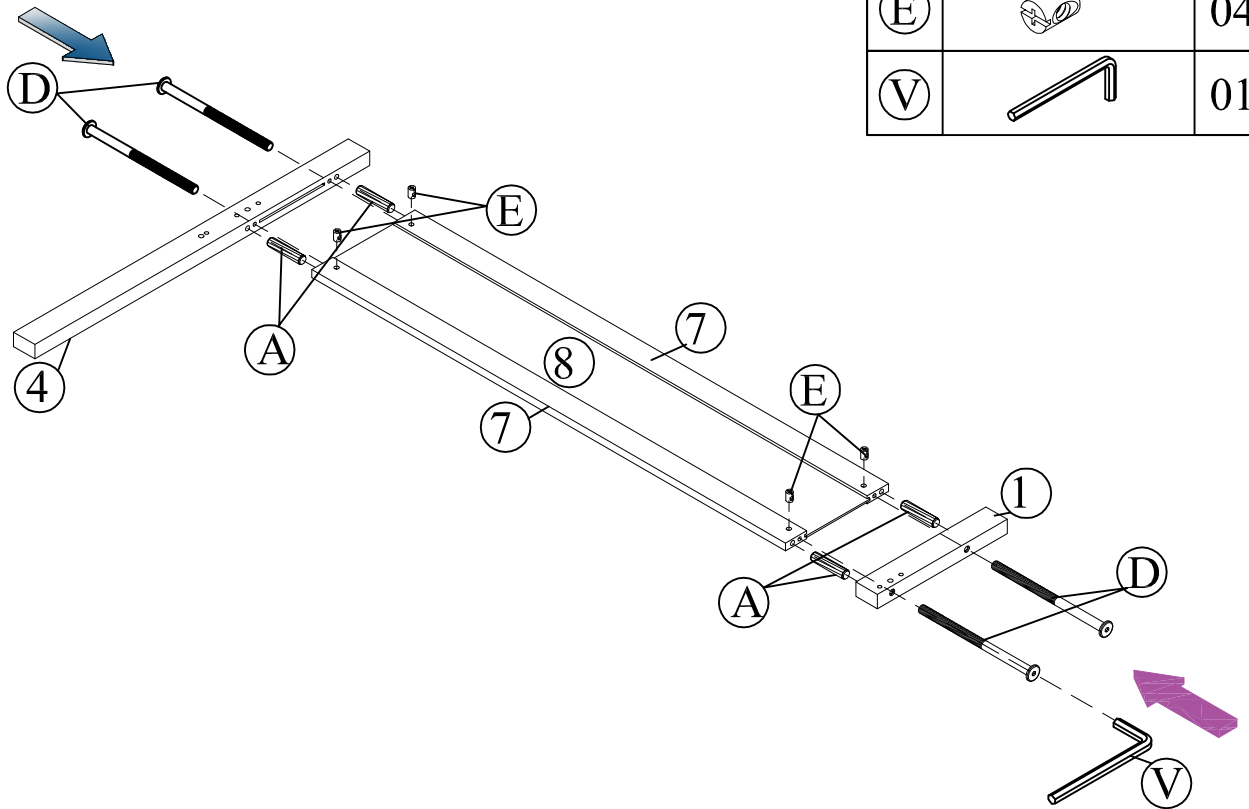(A)		04
(D)		04
(E)		04
(V)		01








STEP 2:

(A)		02
(D)		02
(E)		02
(V)		01

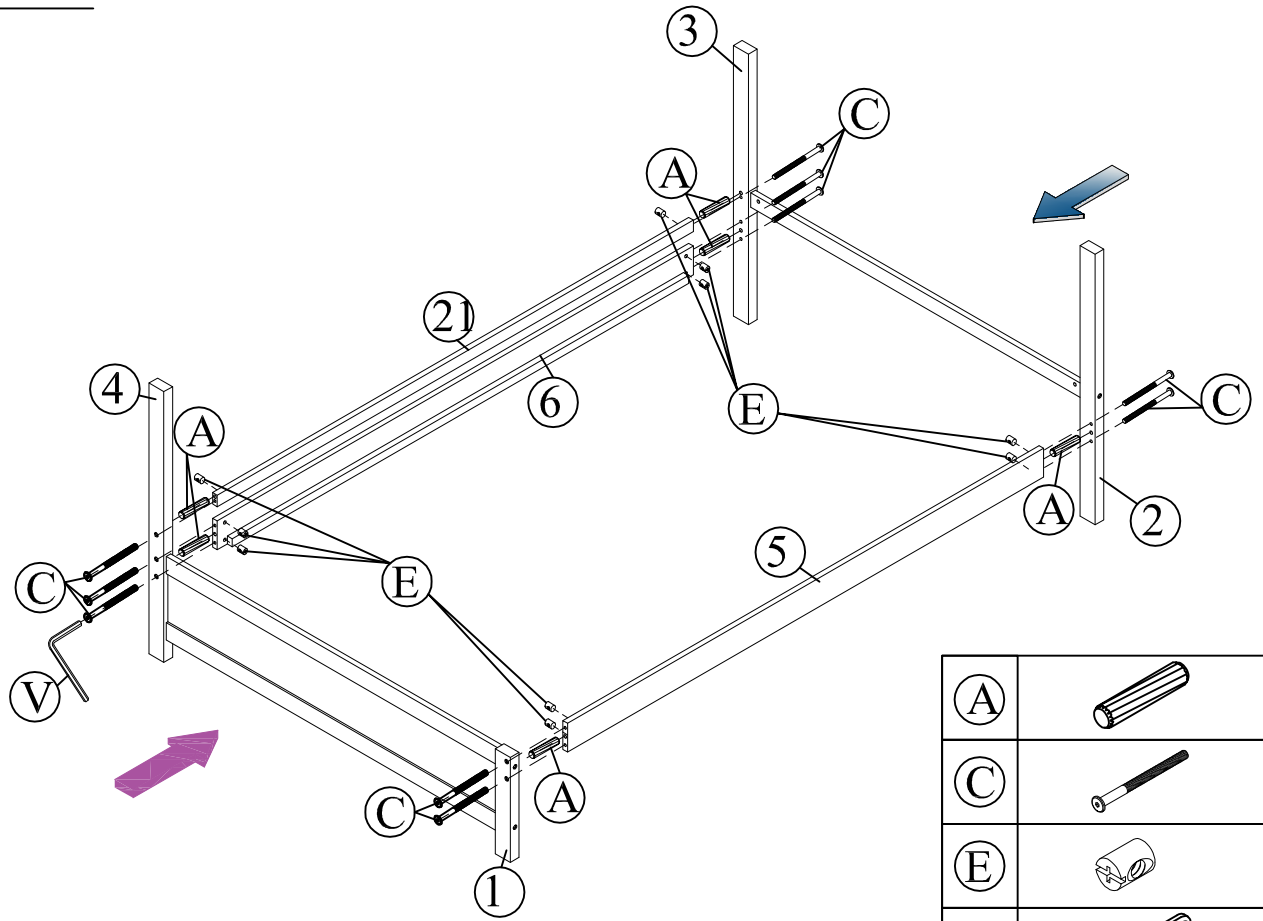


STEP 3:





(A)		06
(C)		10
(E)		10
(V)		01

STEP 4:

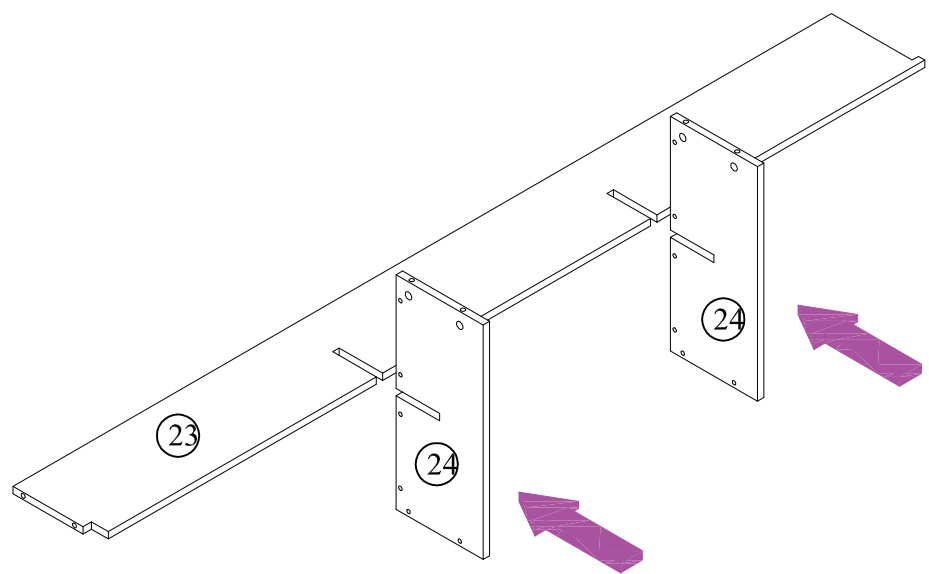



STEP 5:

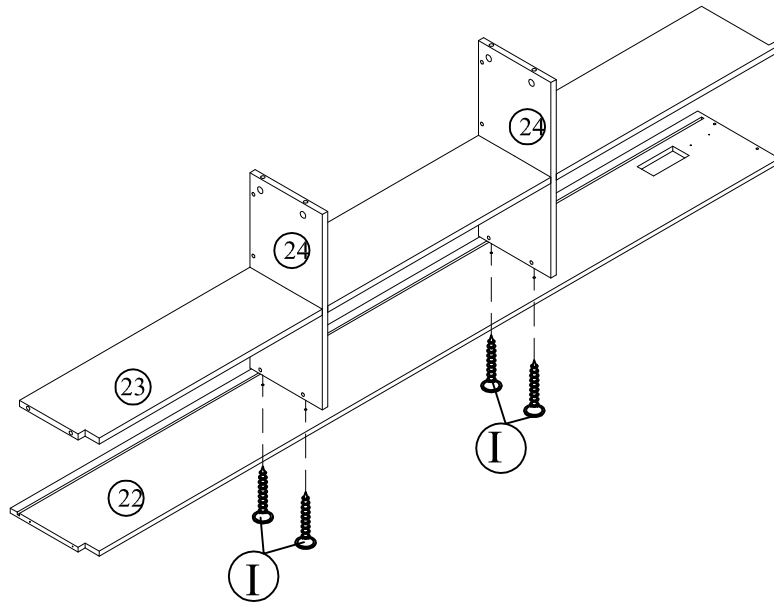


I		04
---	---	----

STEP 6:

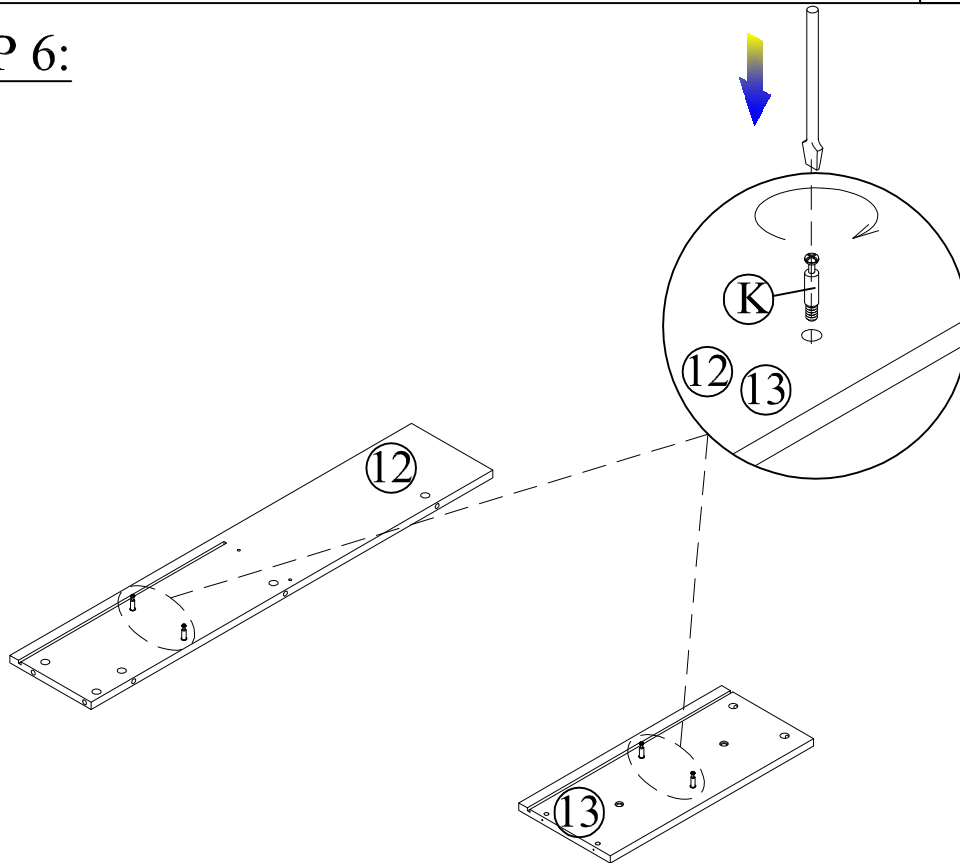


K		04
---	---	----

# STEP 7:

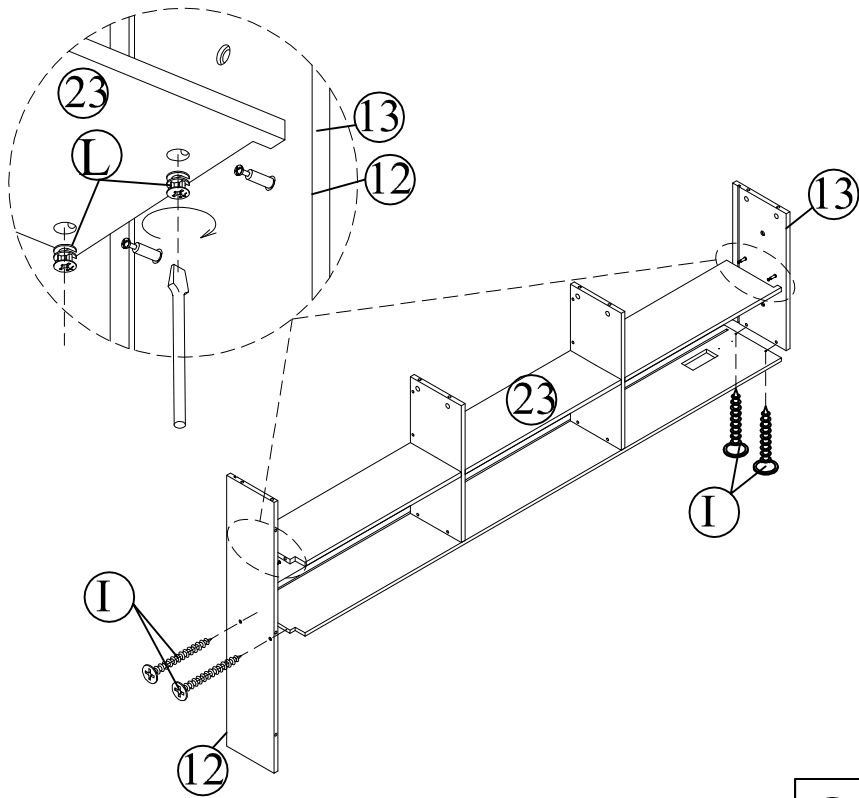




(I)		04
(L)		04

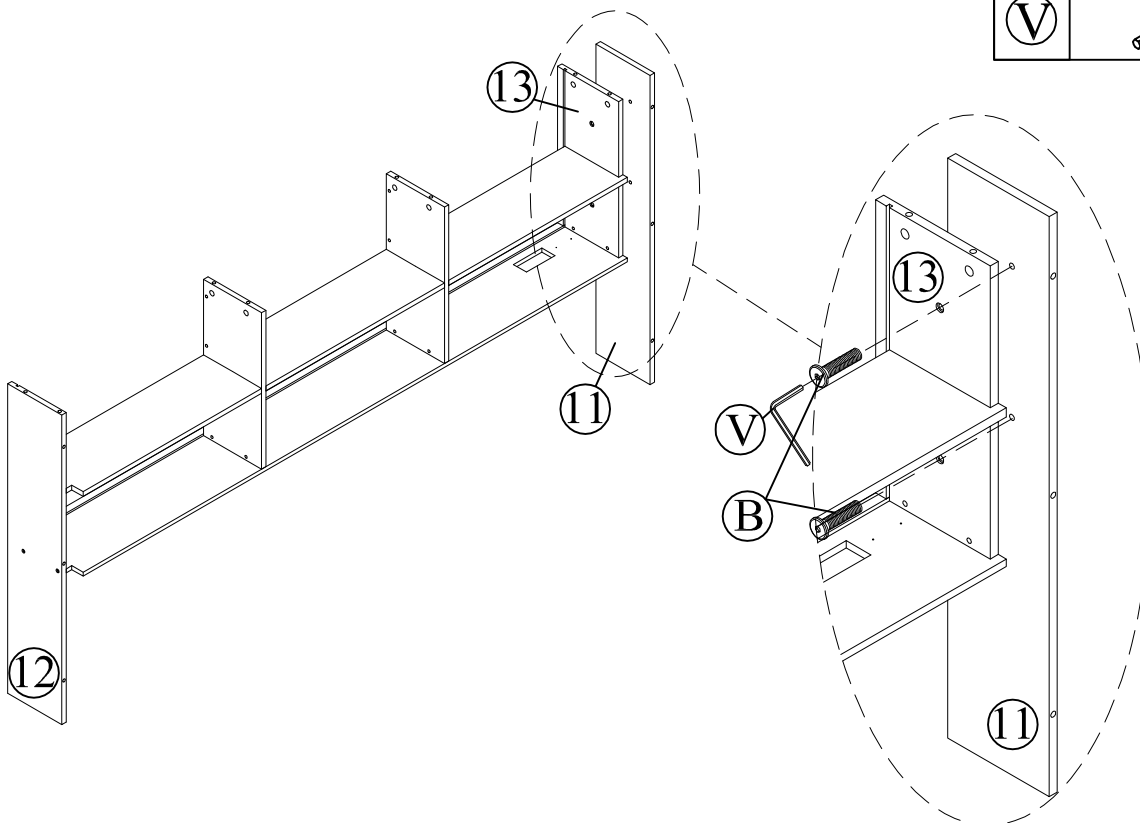
# STEP 8:



(B)		02
(V)		01


**STEP 9:**

(B)		02
(K)		06
(V)		01

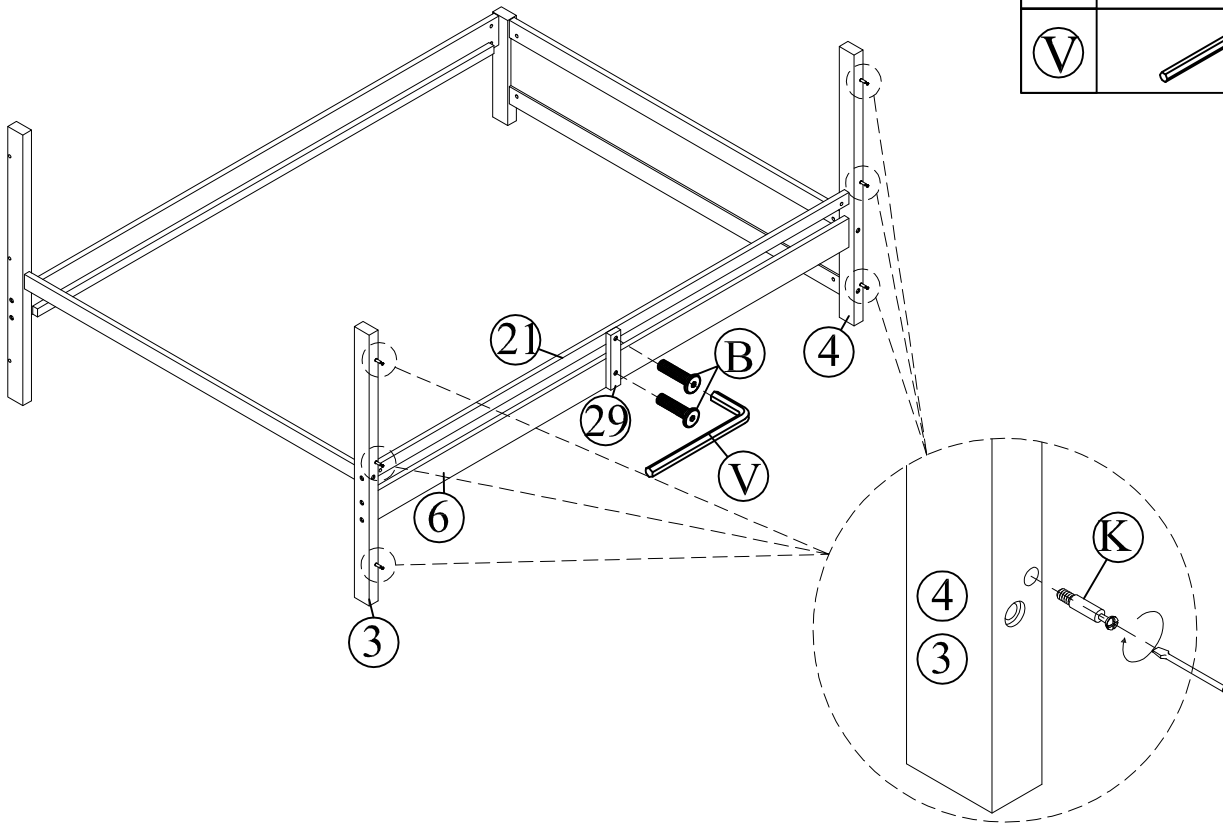


**STEP 10**



(L)		06
-----	---	----

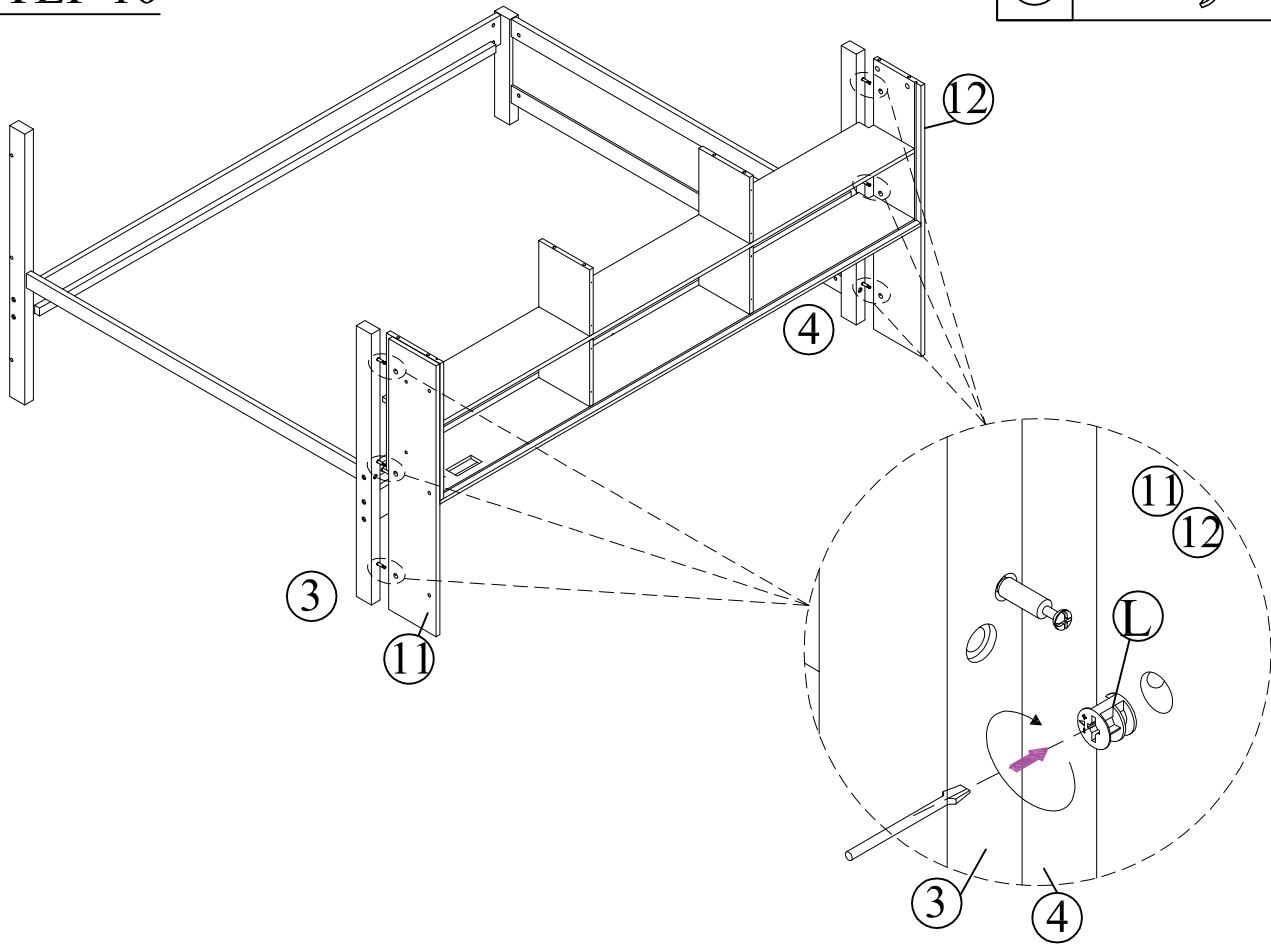


## STEP 11:

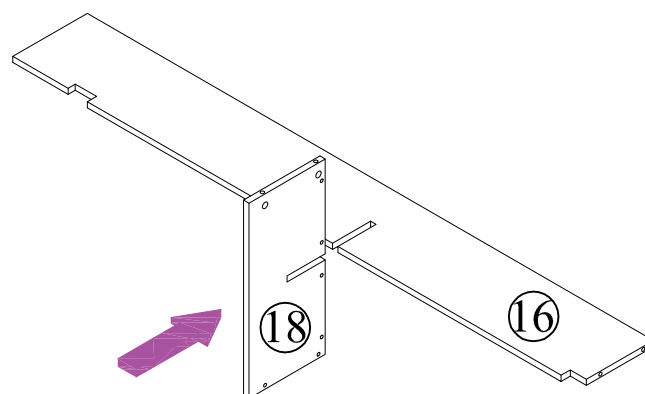


## STEP 12:

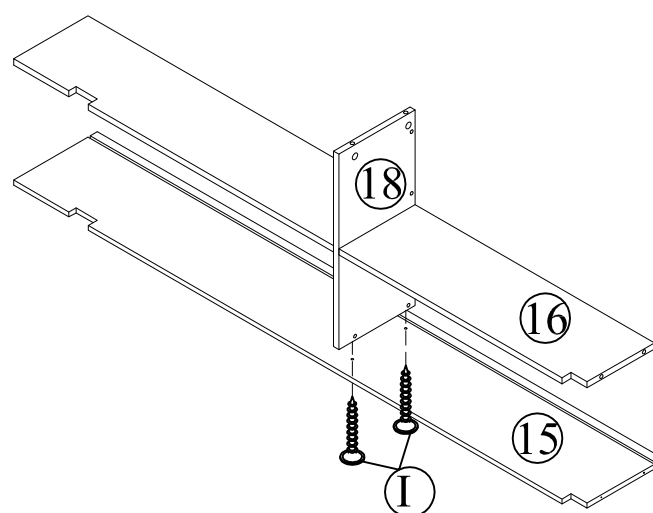


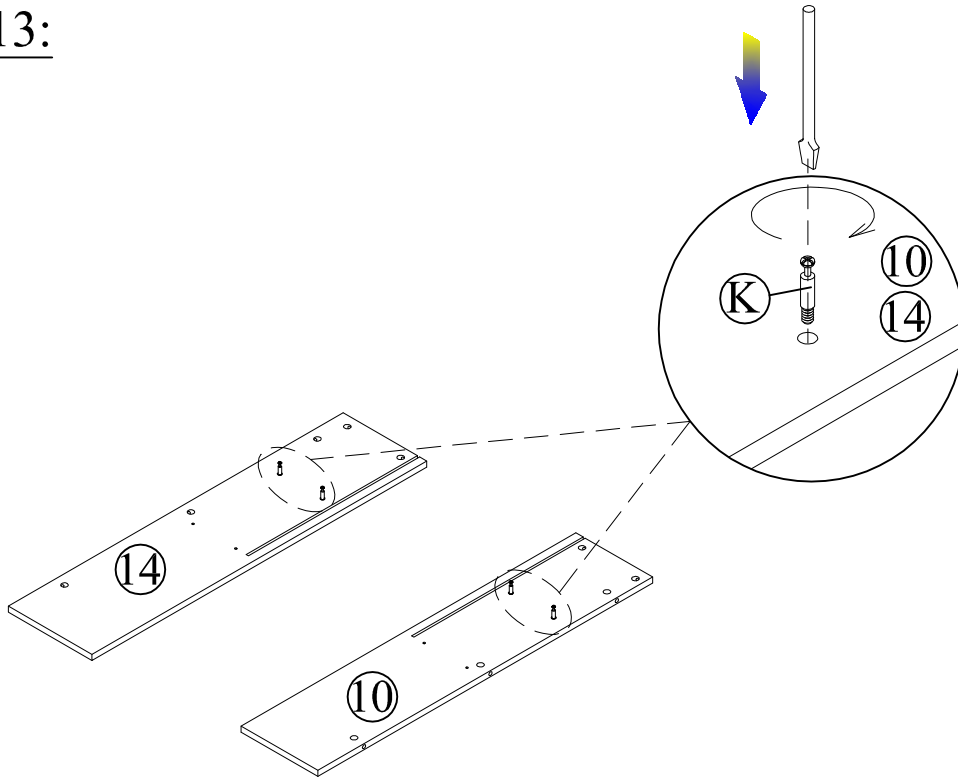

STEP 13:




(K)		04
-----	---	----

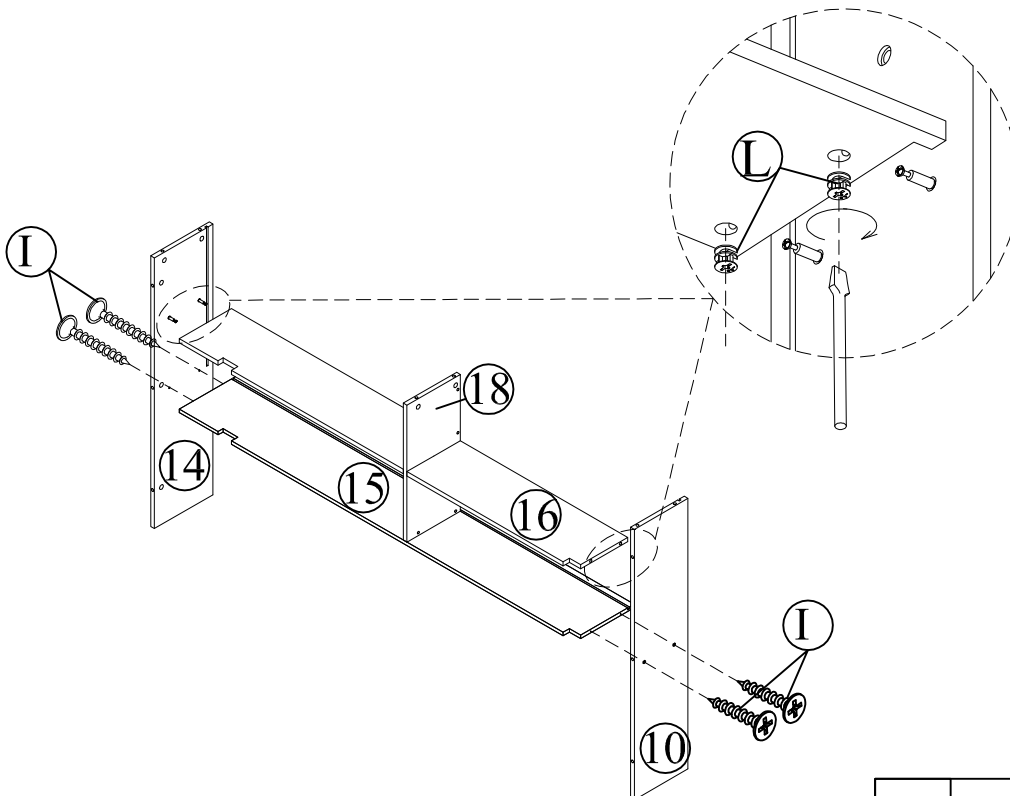
STEP 14:




(I)		04
(L)		04

**STEP 15:**

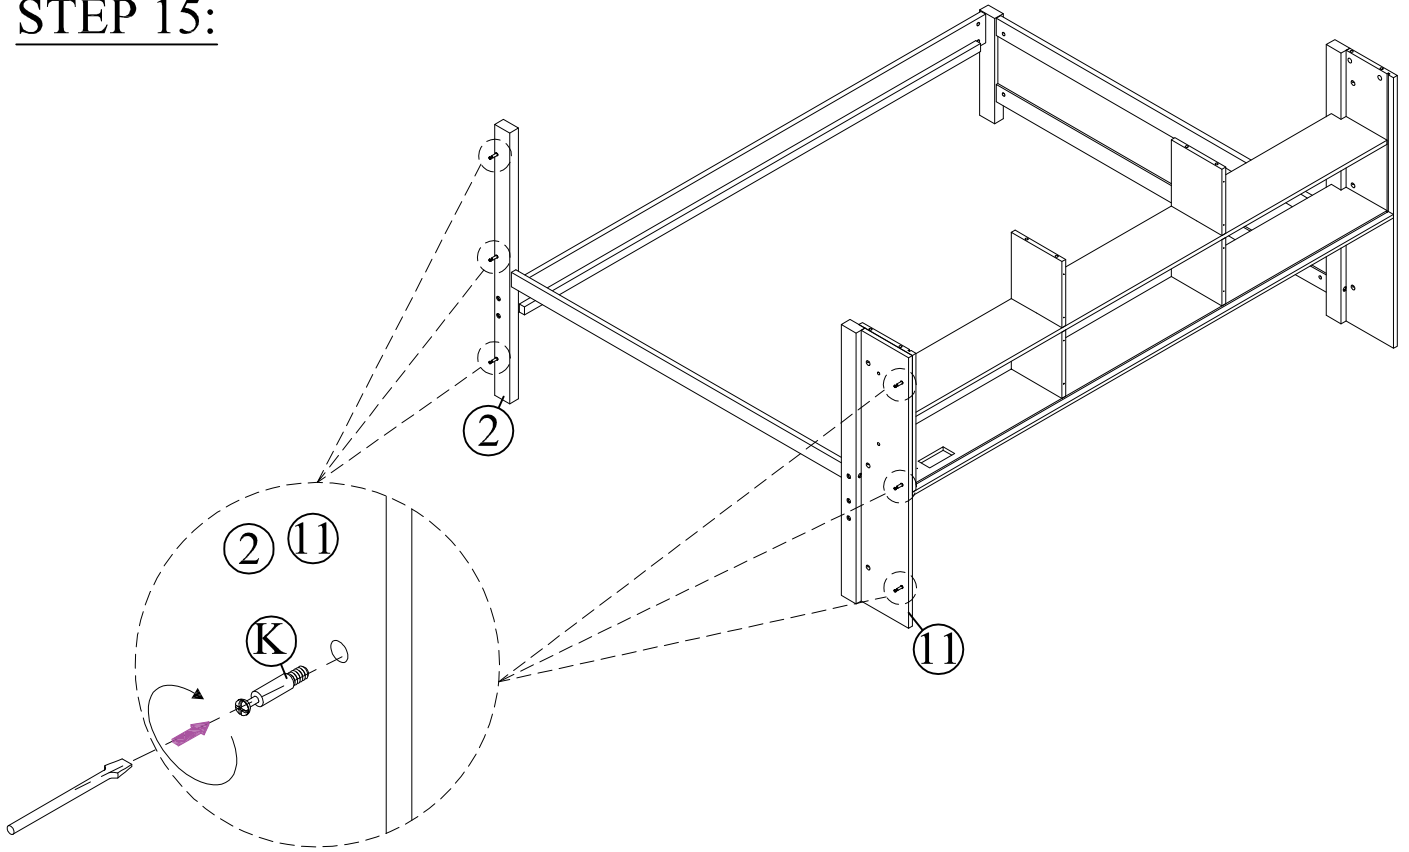


(K)		06
-----	---	----



**STEP 16:**

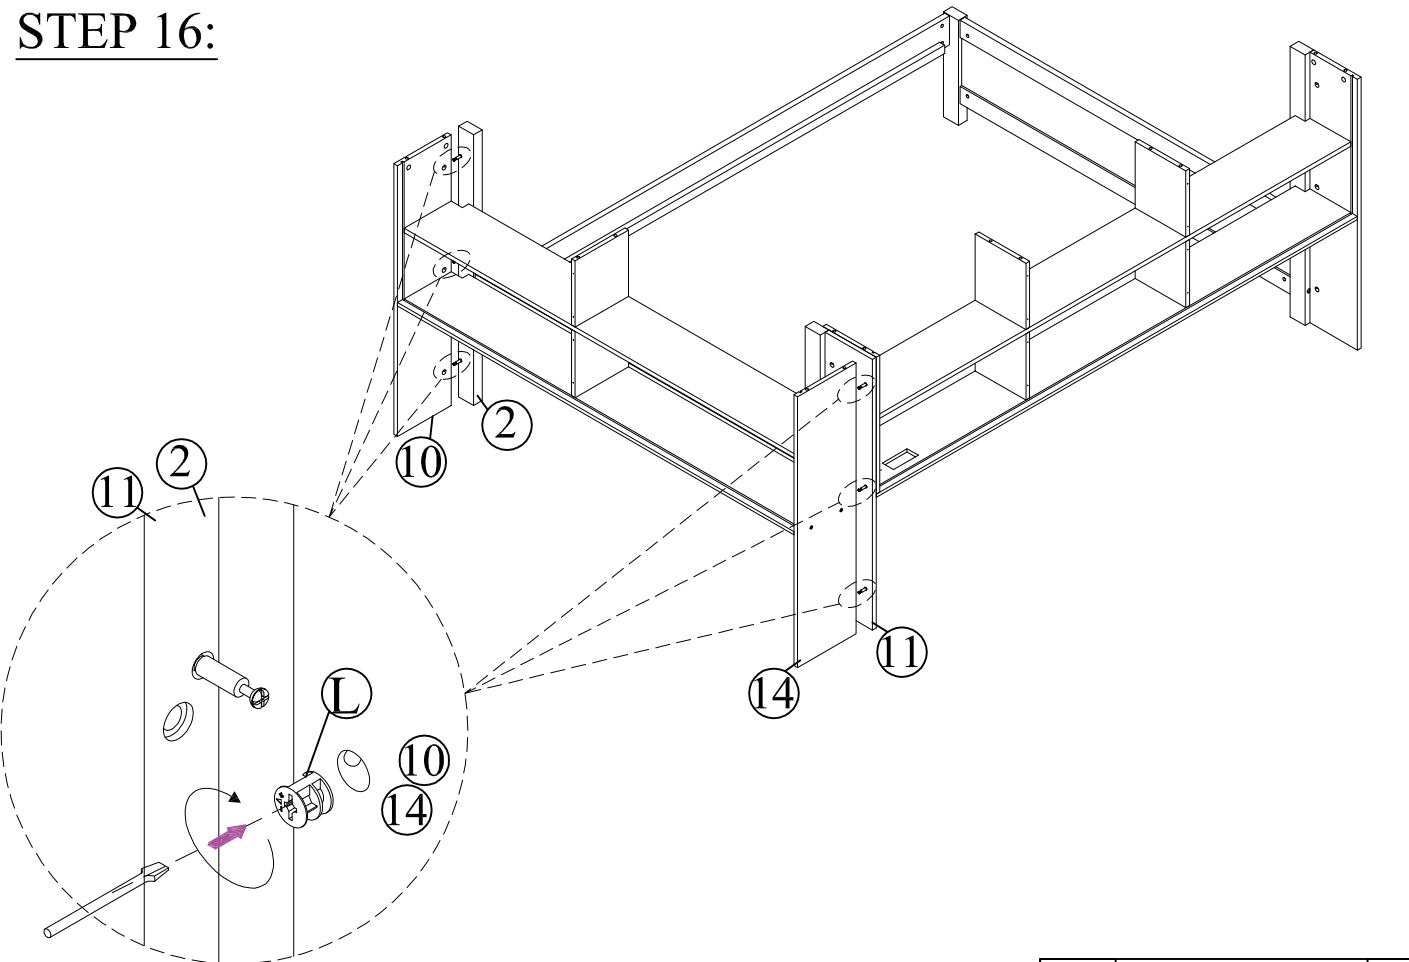


(L)		06
-----	---	----


**STEP 17:**

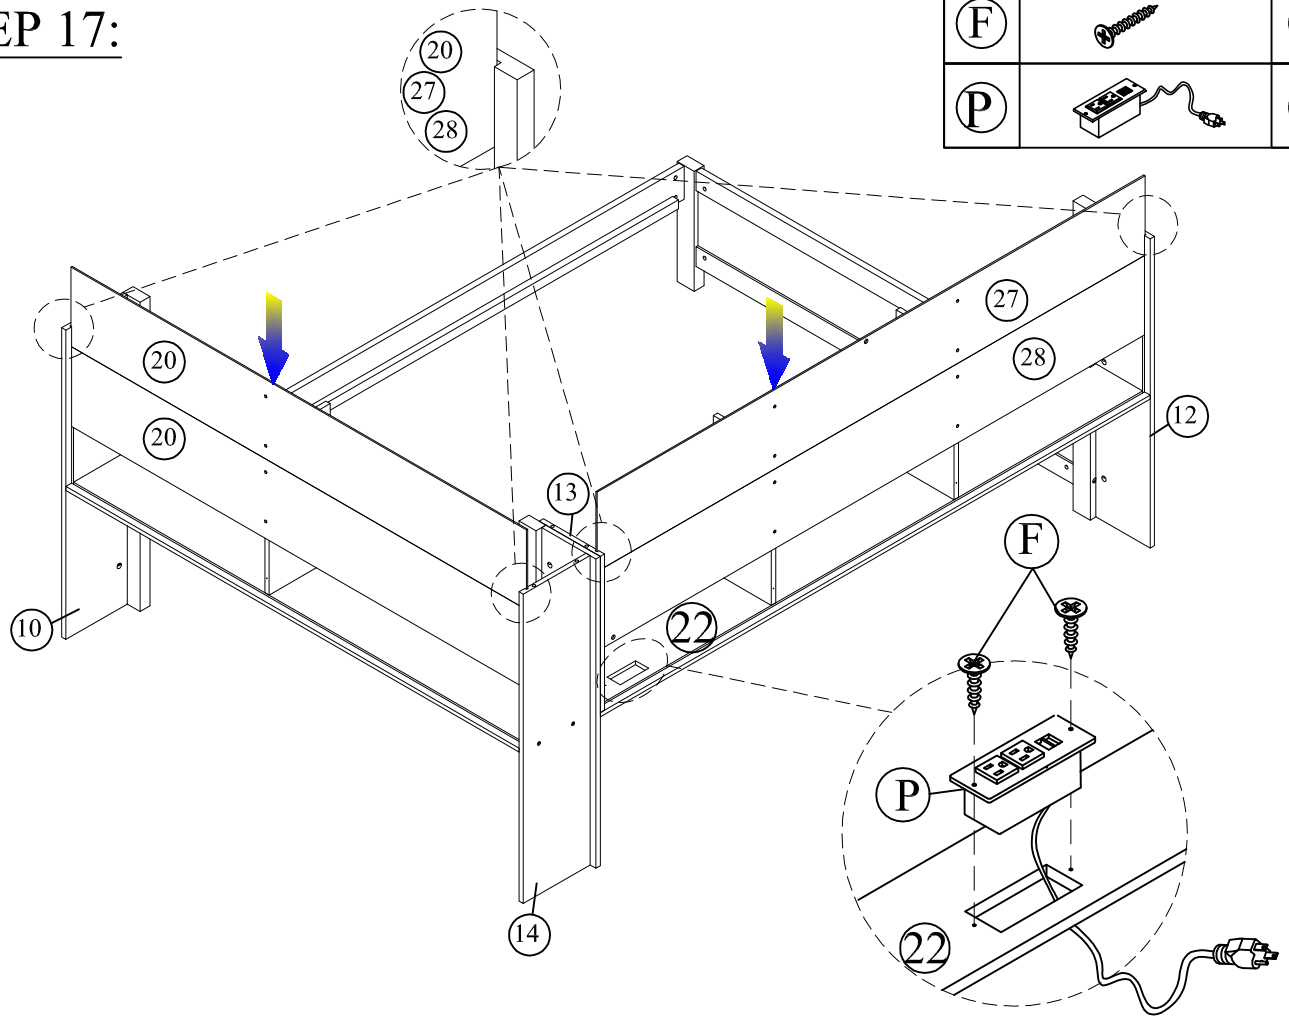

(F)		02
(P)		01

**STEP 18:**

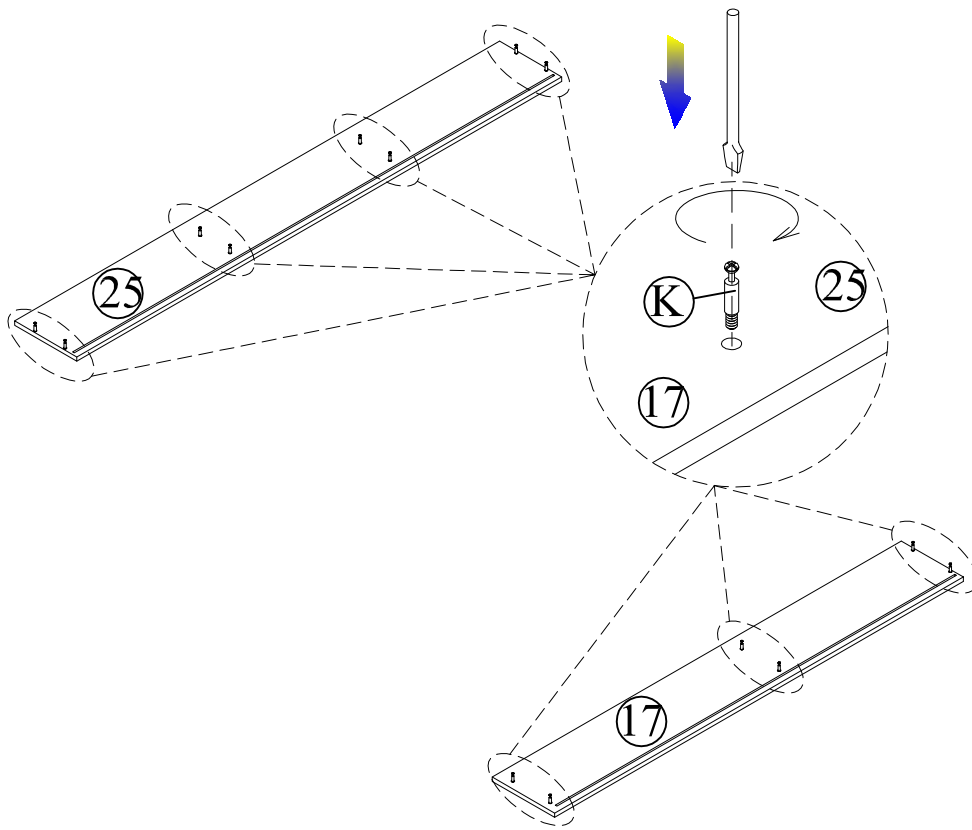


(K)		14
-----	---	----

STEP 19:


L



14

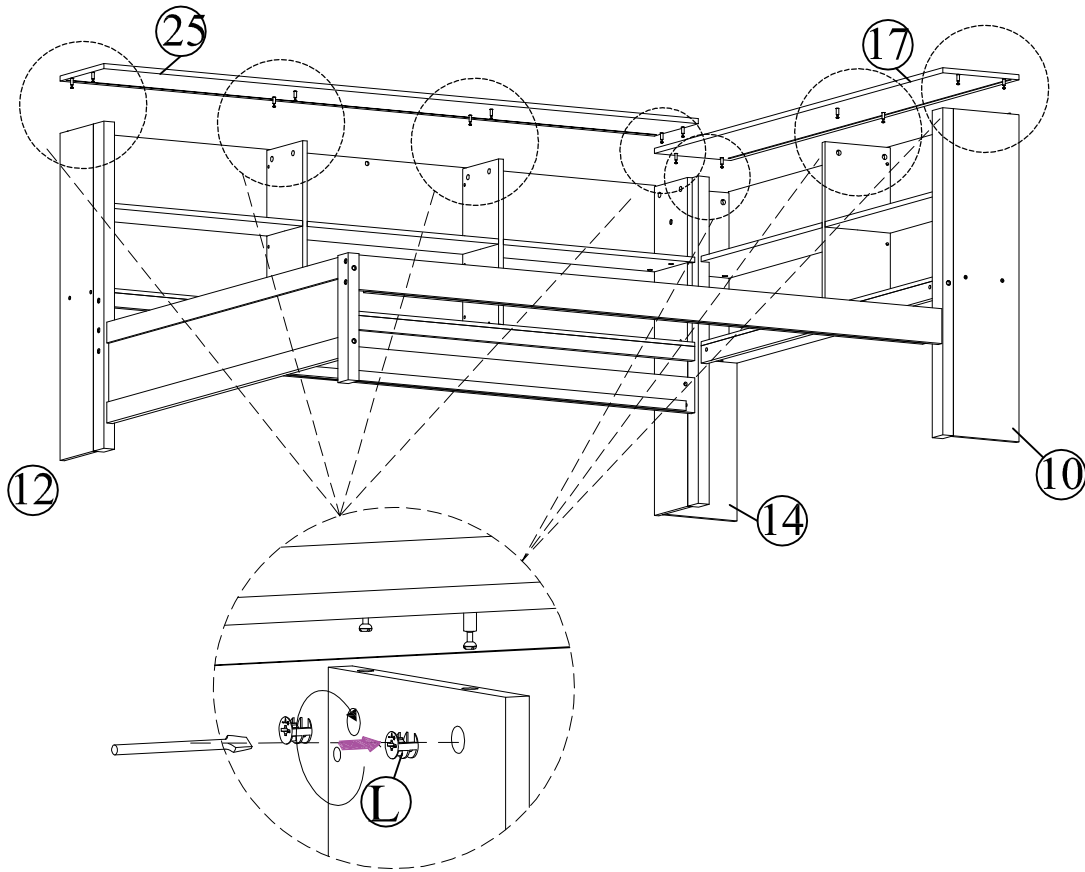

STEP 20:

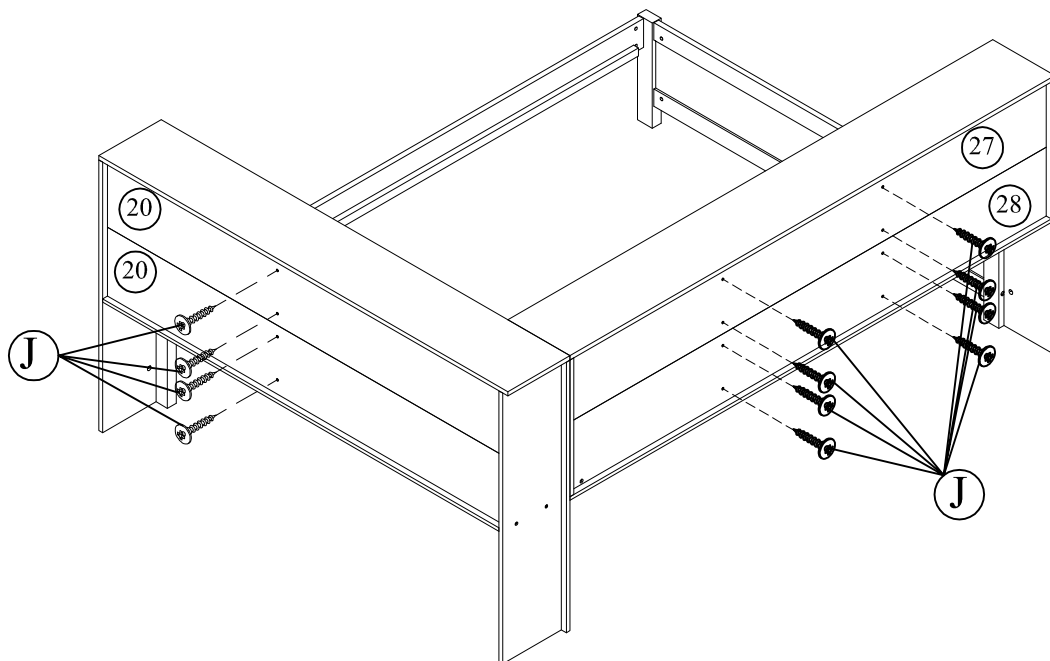





J




12

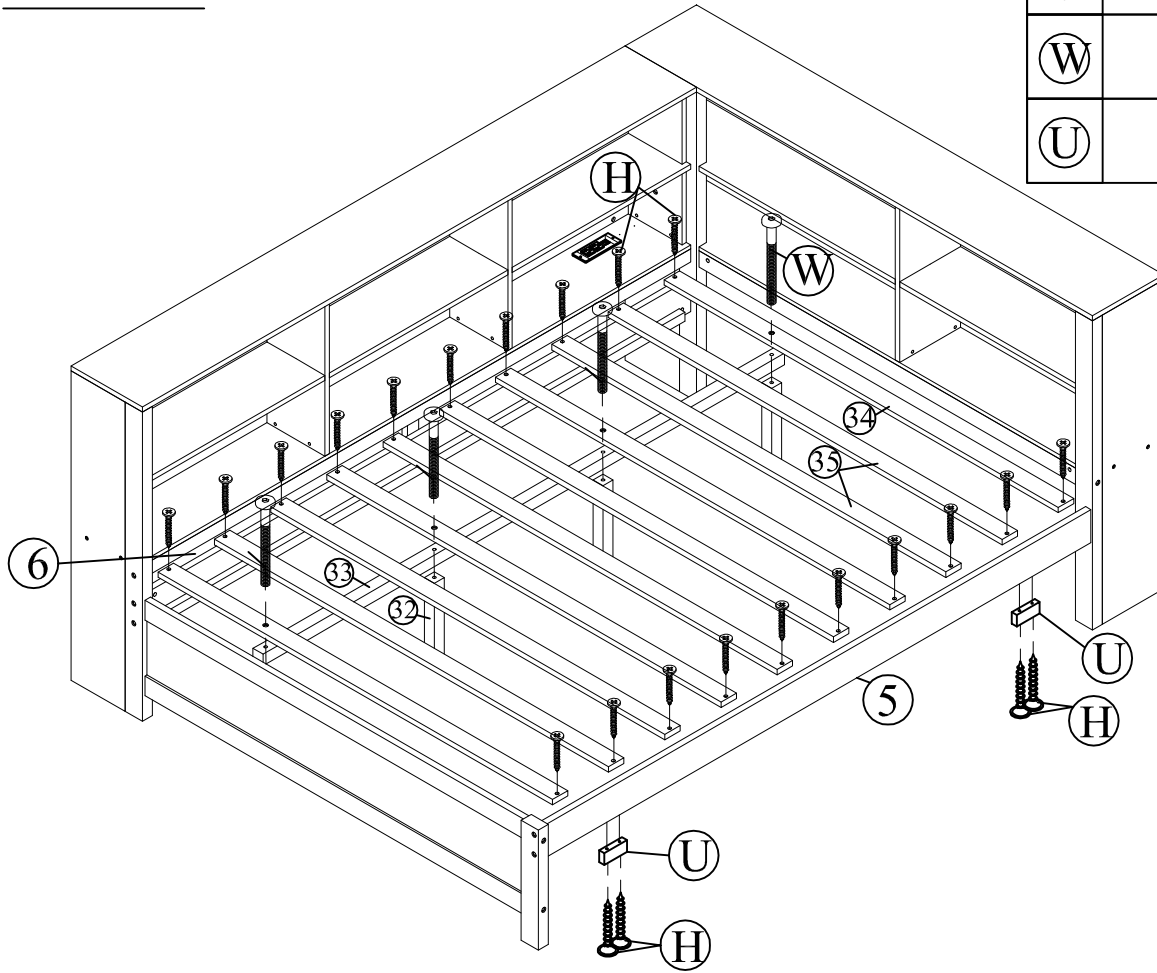

STEP 21:



(H)		24
(W)		04
(U)		02

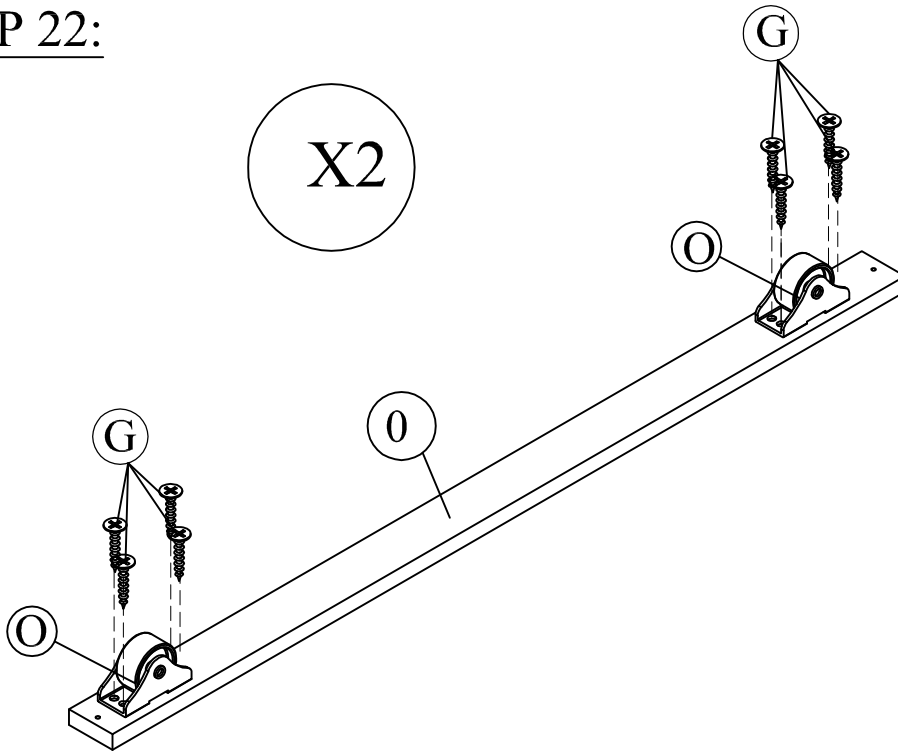
STEP 22:






(G)		16
(O)		04


STEP 23:

(H)		14
-----	--	----

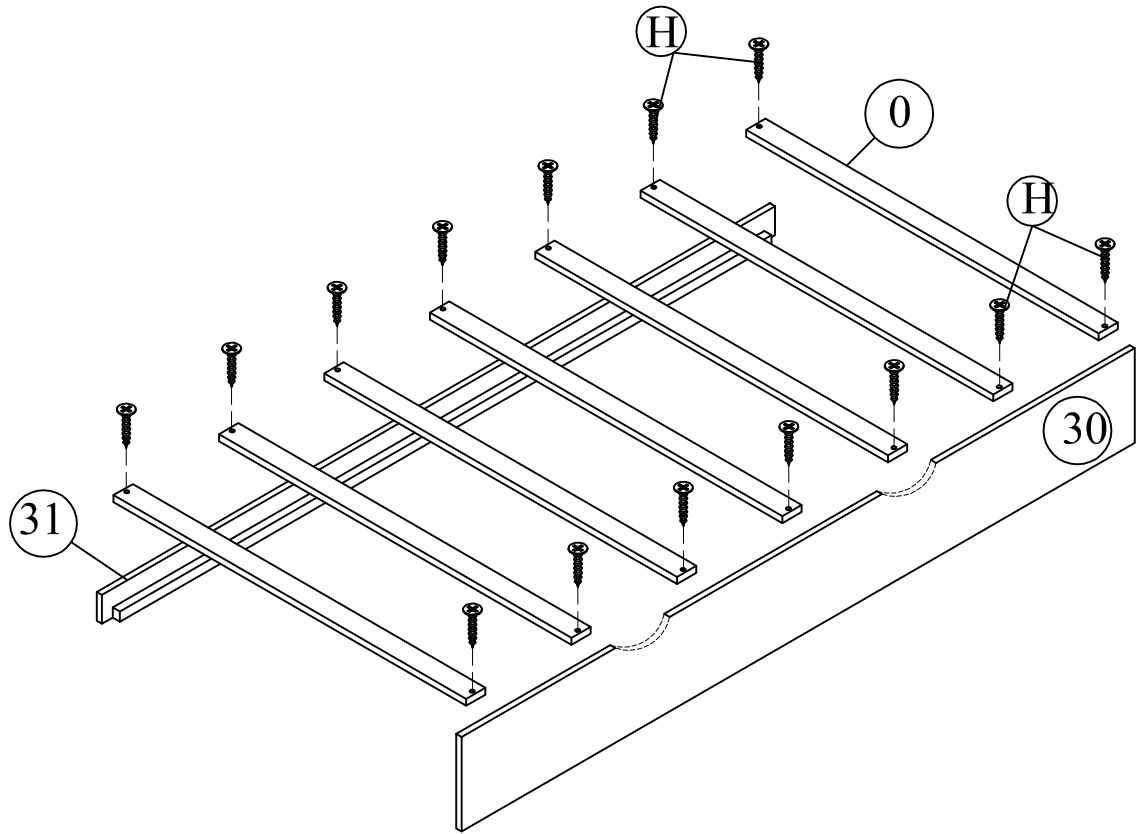




STEP 24:

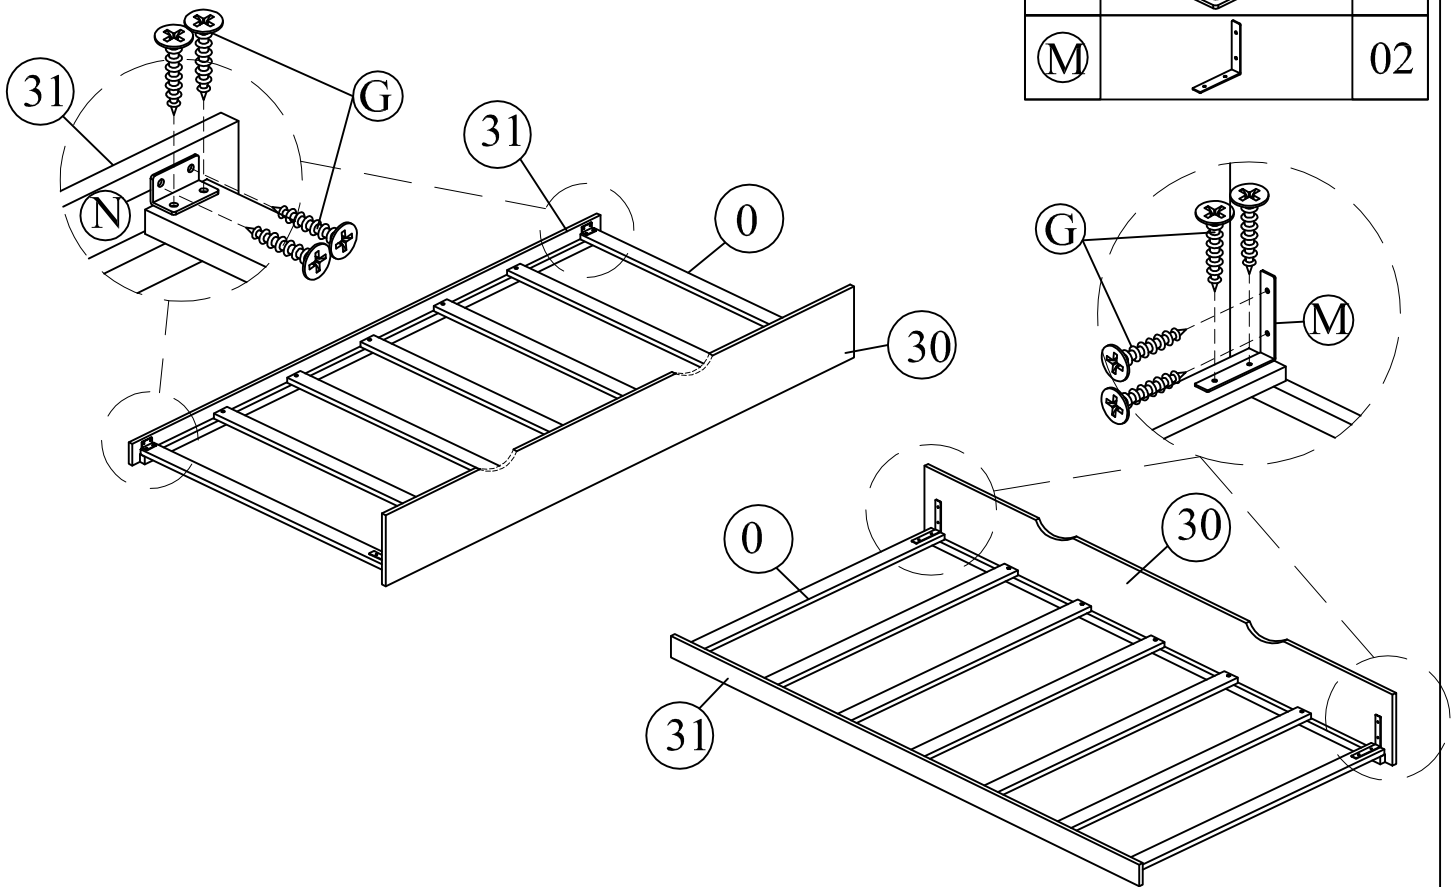(G)		16
(N)		02
(M)		02






# STEP 25

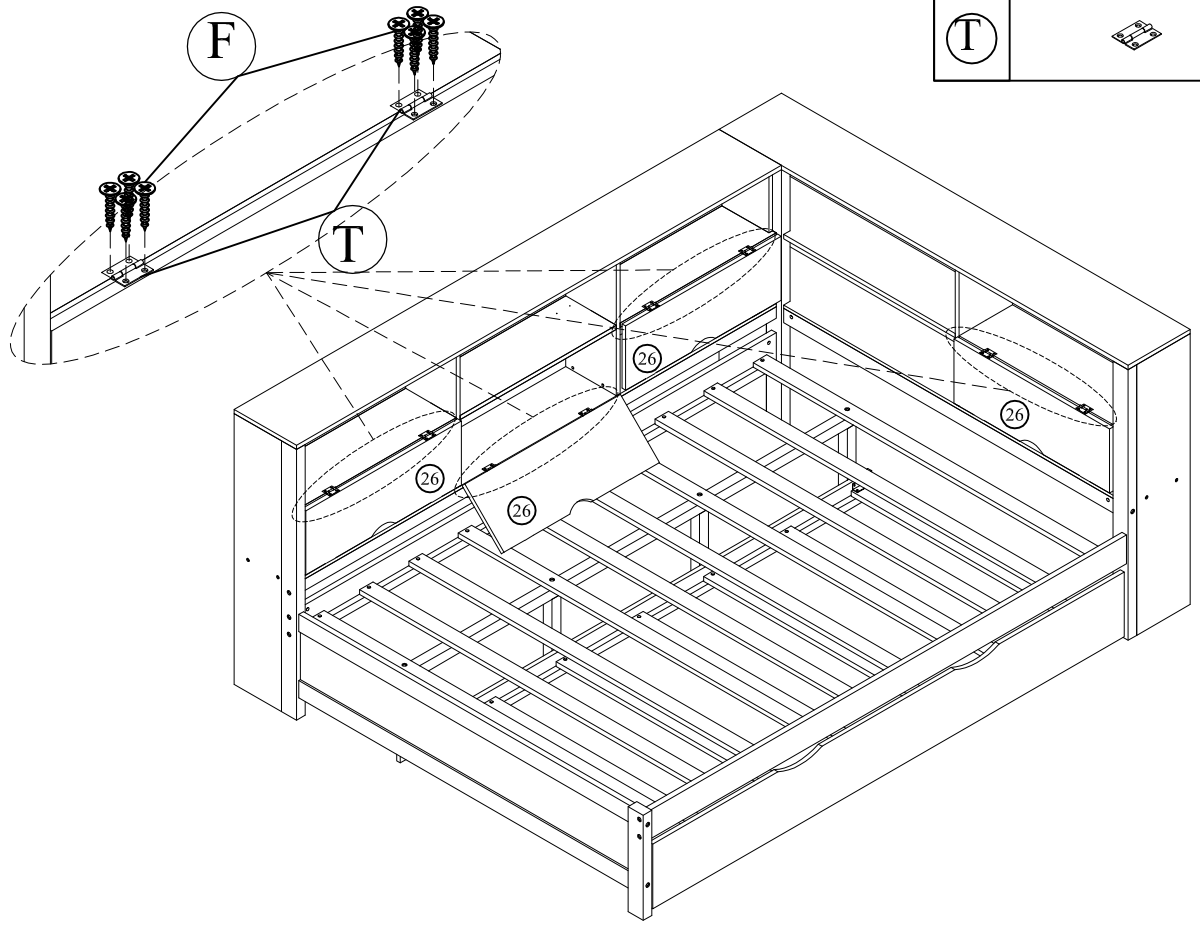(F)		32
(T)		08




# STEP 26

(F)		32
(S)		08


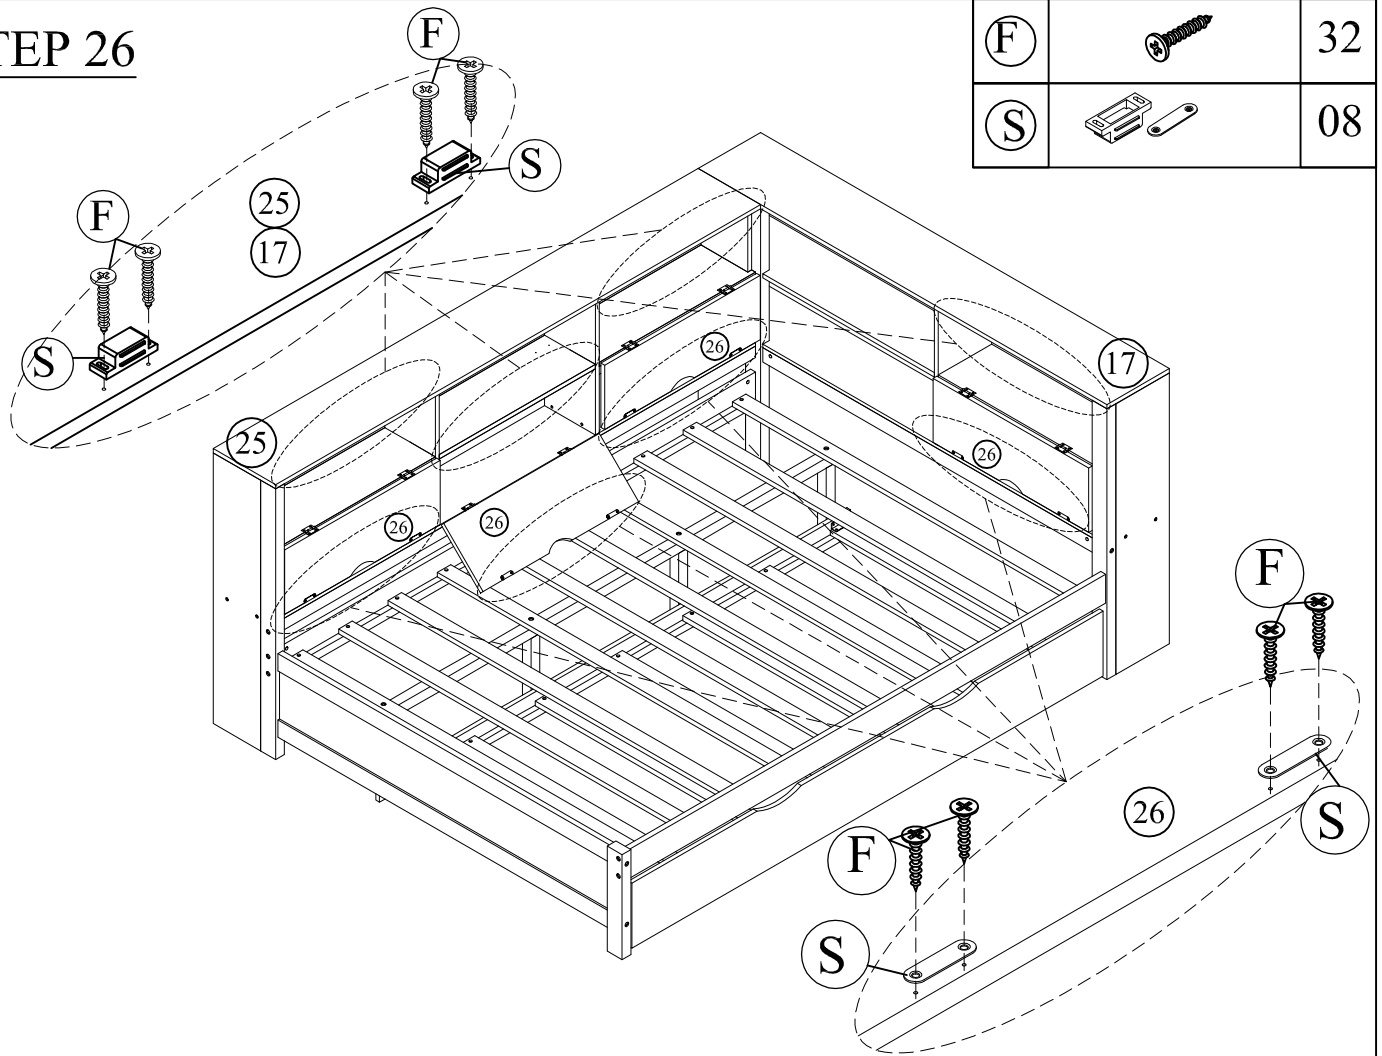




# STEP 27:

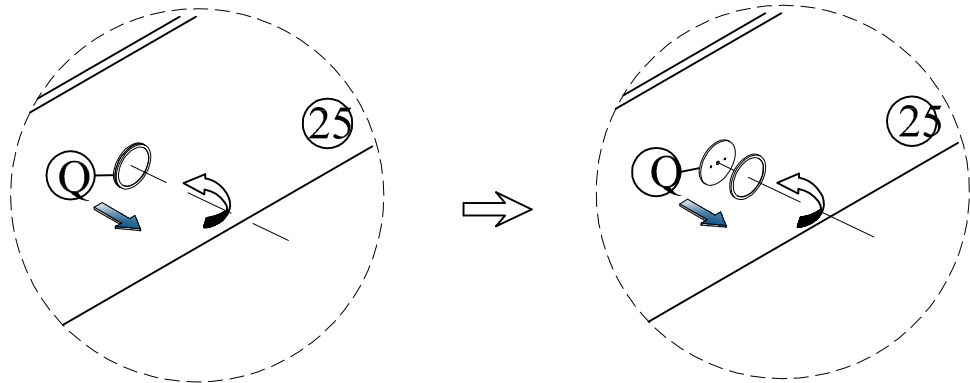I. Twist to open the front Led light





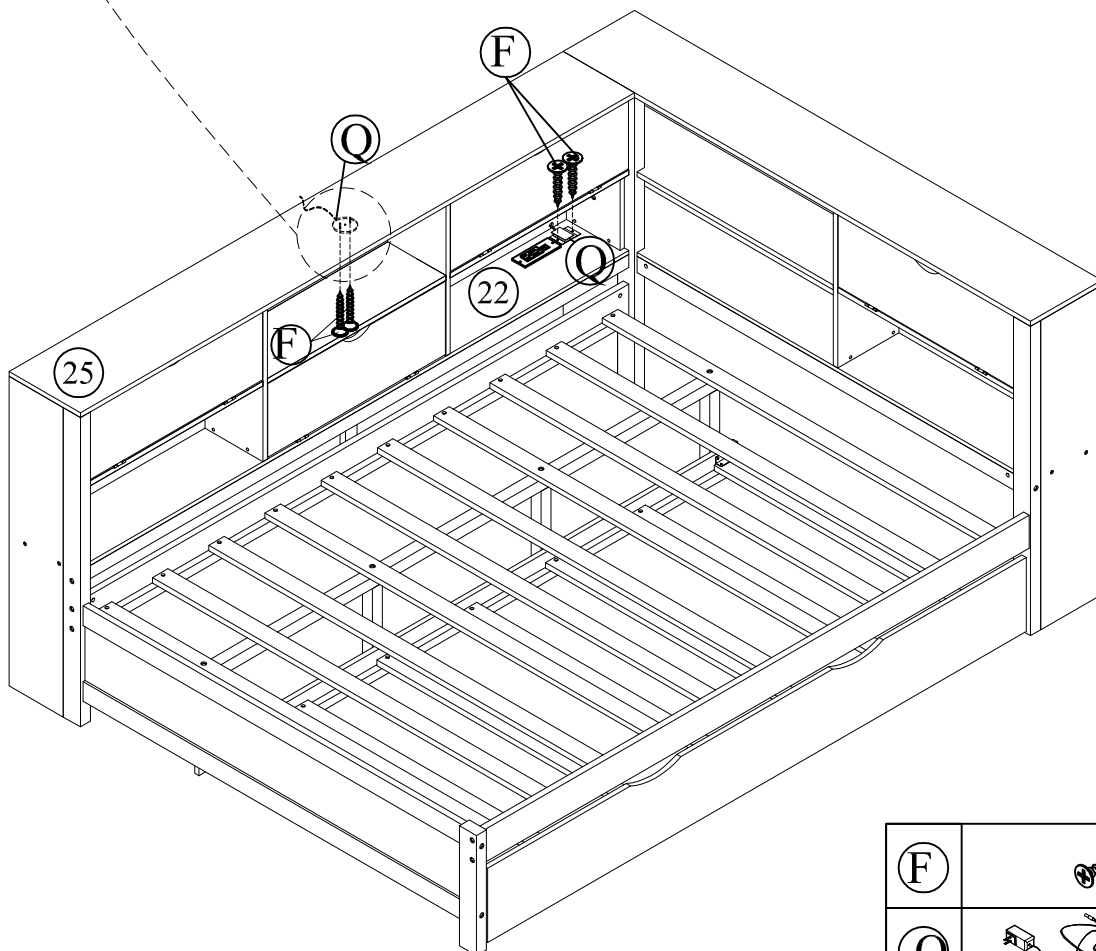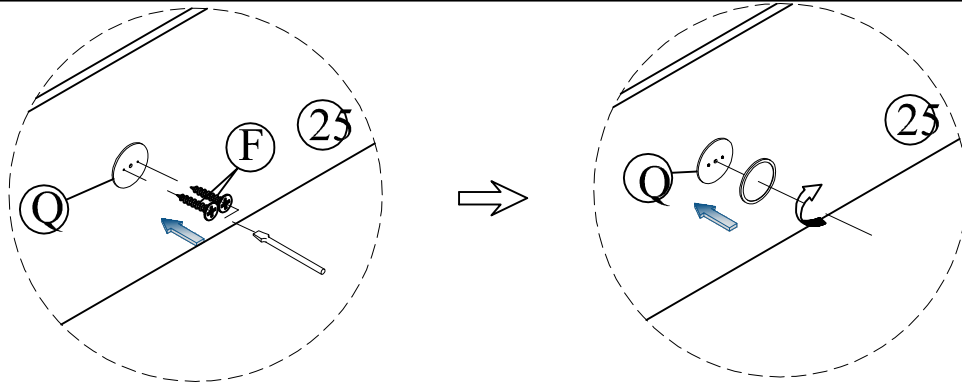

II. Attack screws #6\*12mm to back side and twist to close



(F)		04
(Q)		01

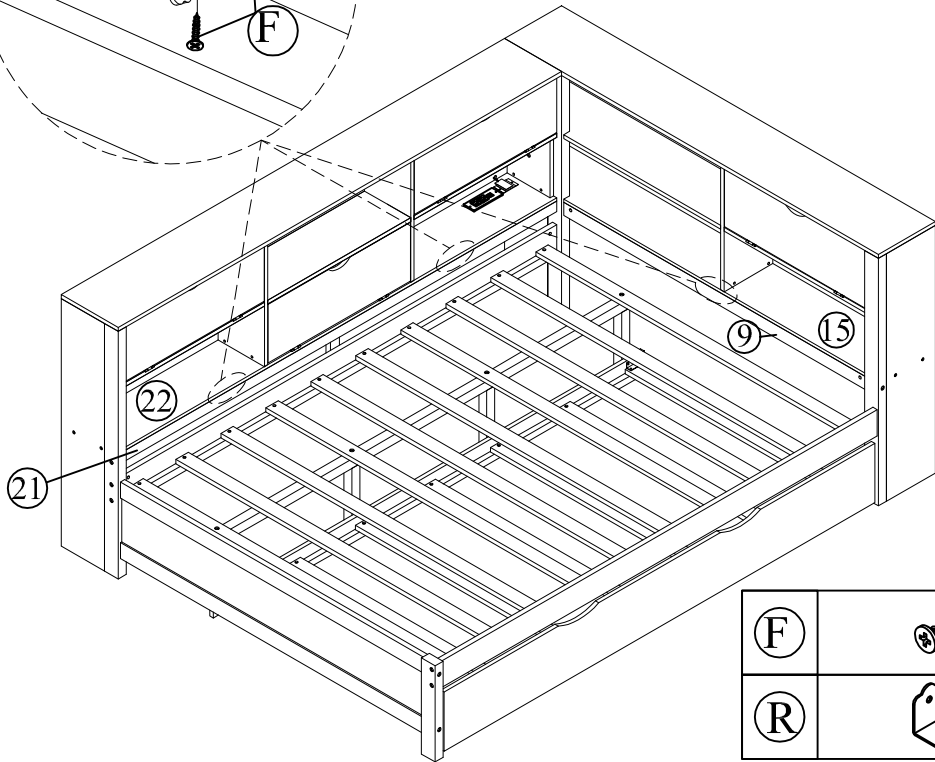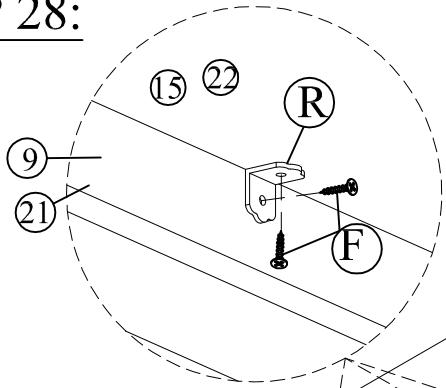**STEP 28:**



(F)		06
(R)		03

**FINAL:**

