
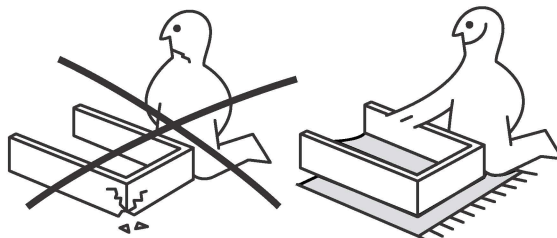
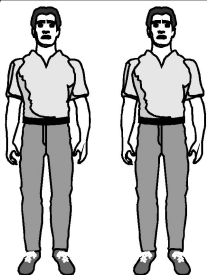



ASSEMBLY GUIDE

4-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

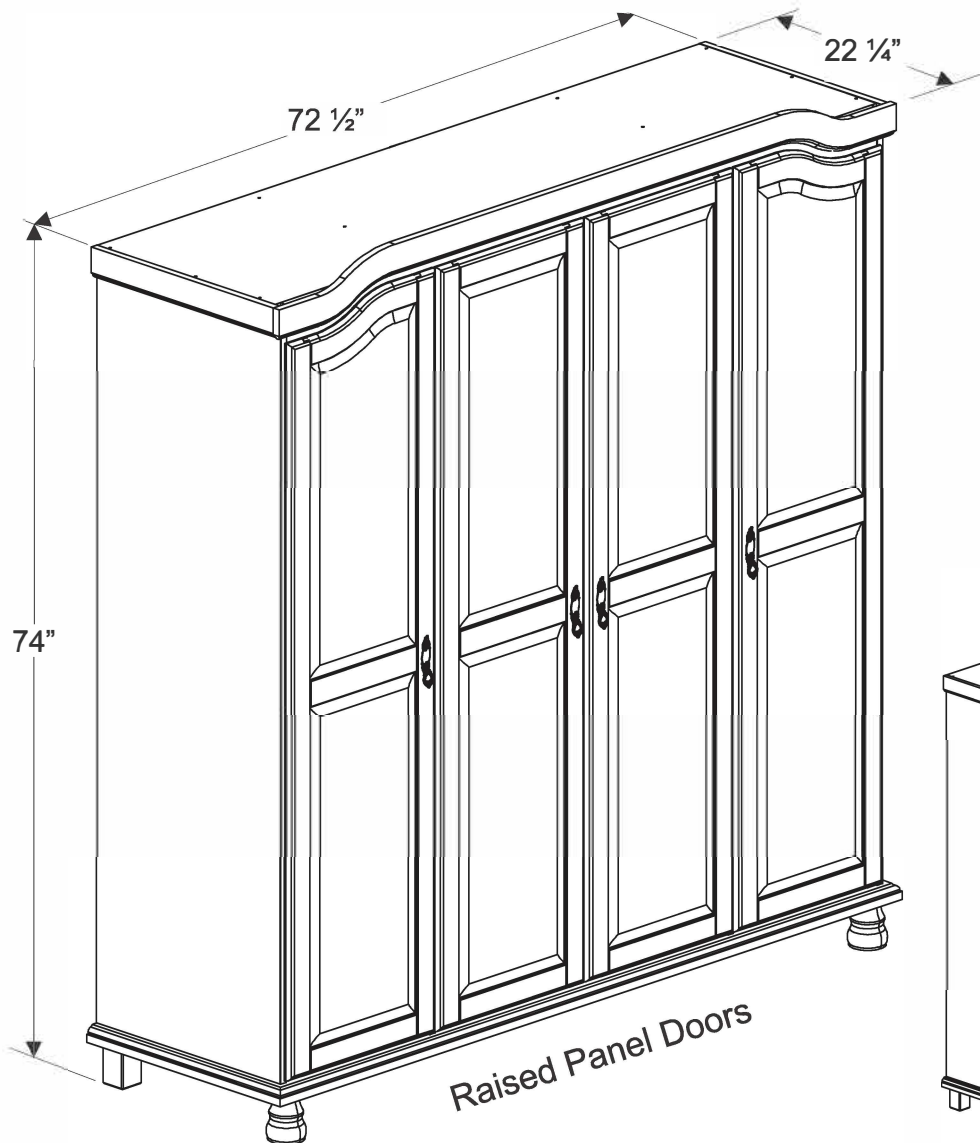

REV - 06/2025

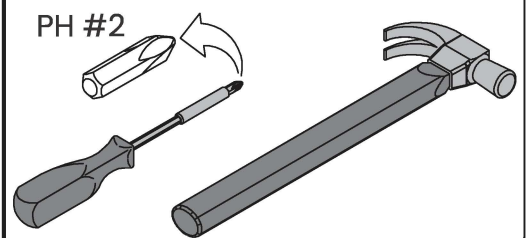

page 2/21


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us for assistance.










Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

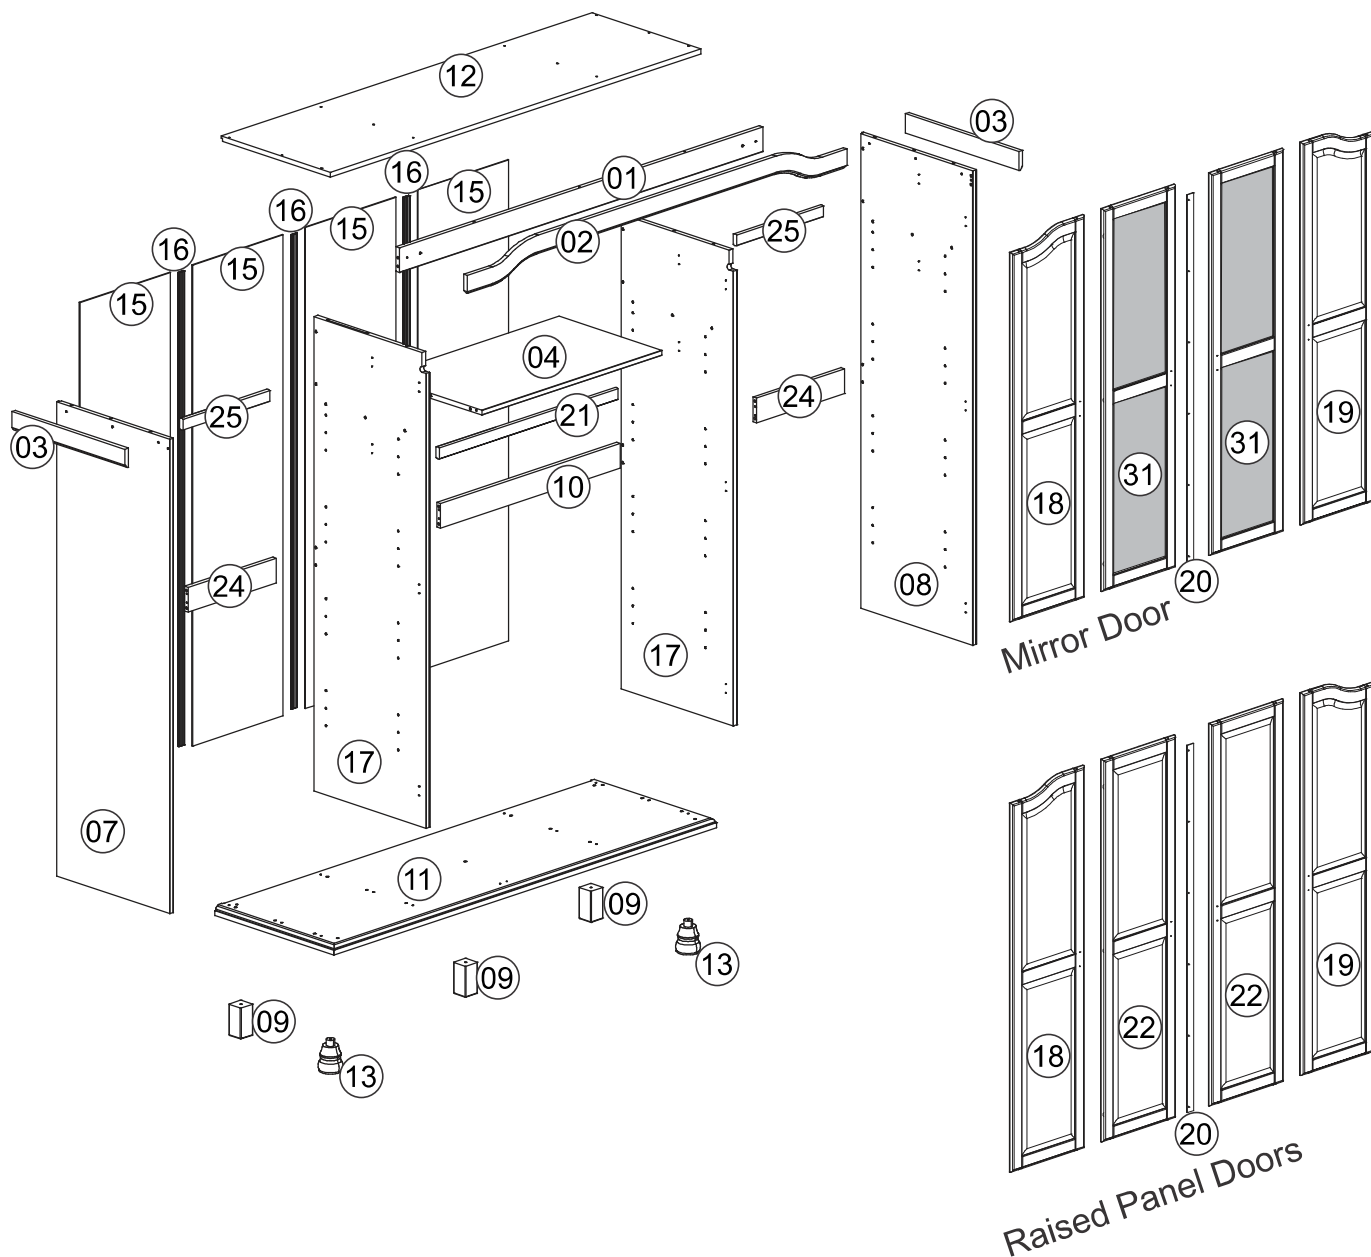

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	26+1
A7	 3,0x16	08+1
A16	 4,0x40	26+1
A42	 4,0x14	12+1
A44	 3,5x14	74+2
B19	 7,0x70	05
C2	 8,0x25	48+2
D3	 45x27x12	01
D10	 	06
D16	 17,5x17,5x13	03
F10	 	12
G1	 10x10	62
G8	 	01
H18	 	04

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



WARNING:
CHOKING HAZARD

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:


Important Safety Notice:

This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.

01)

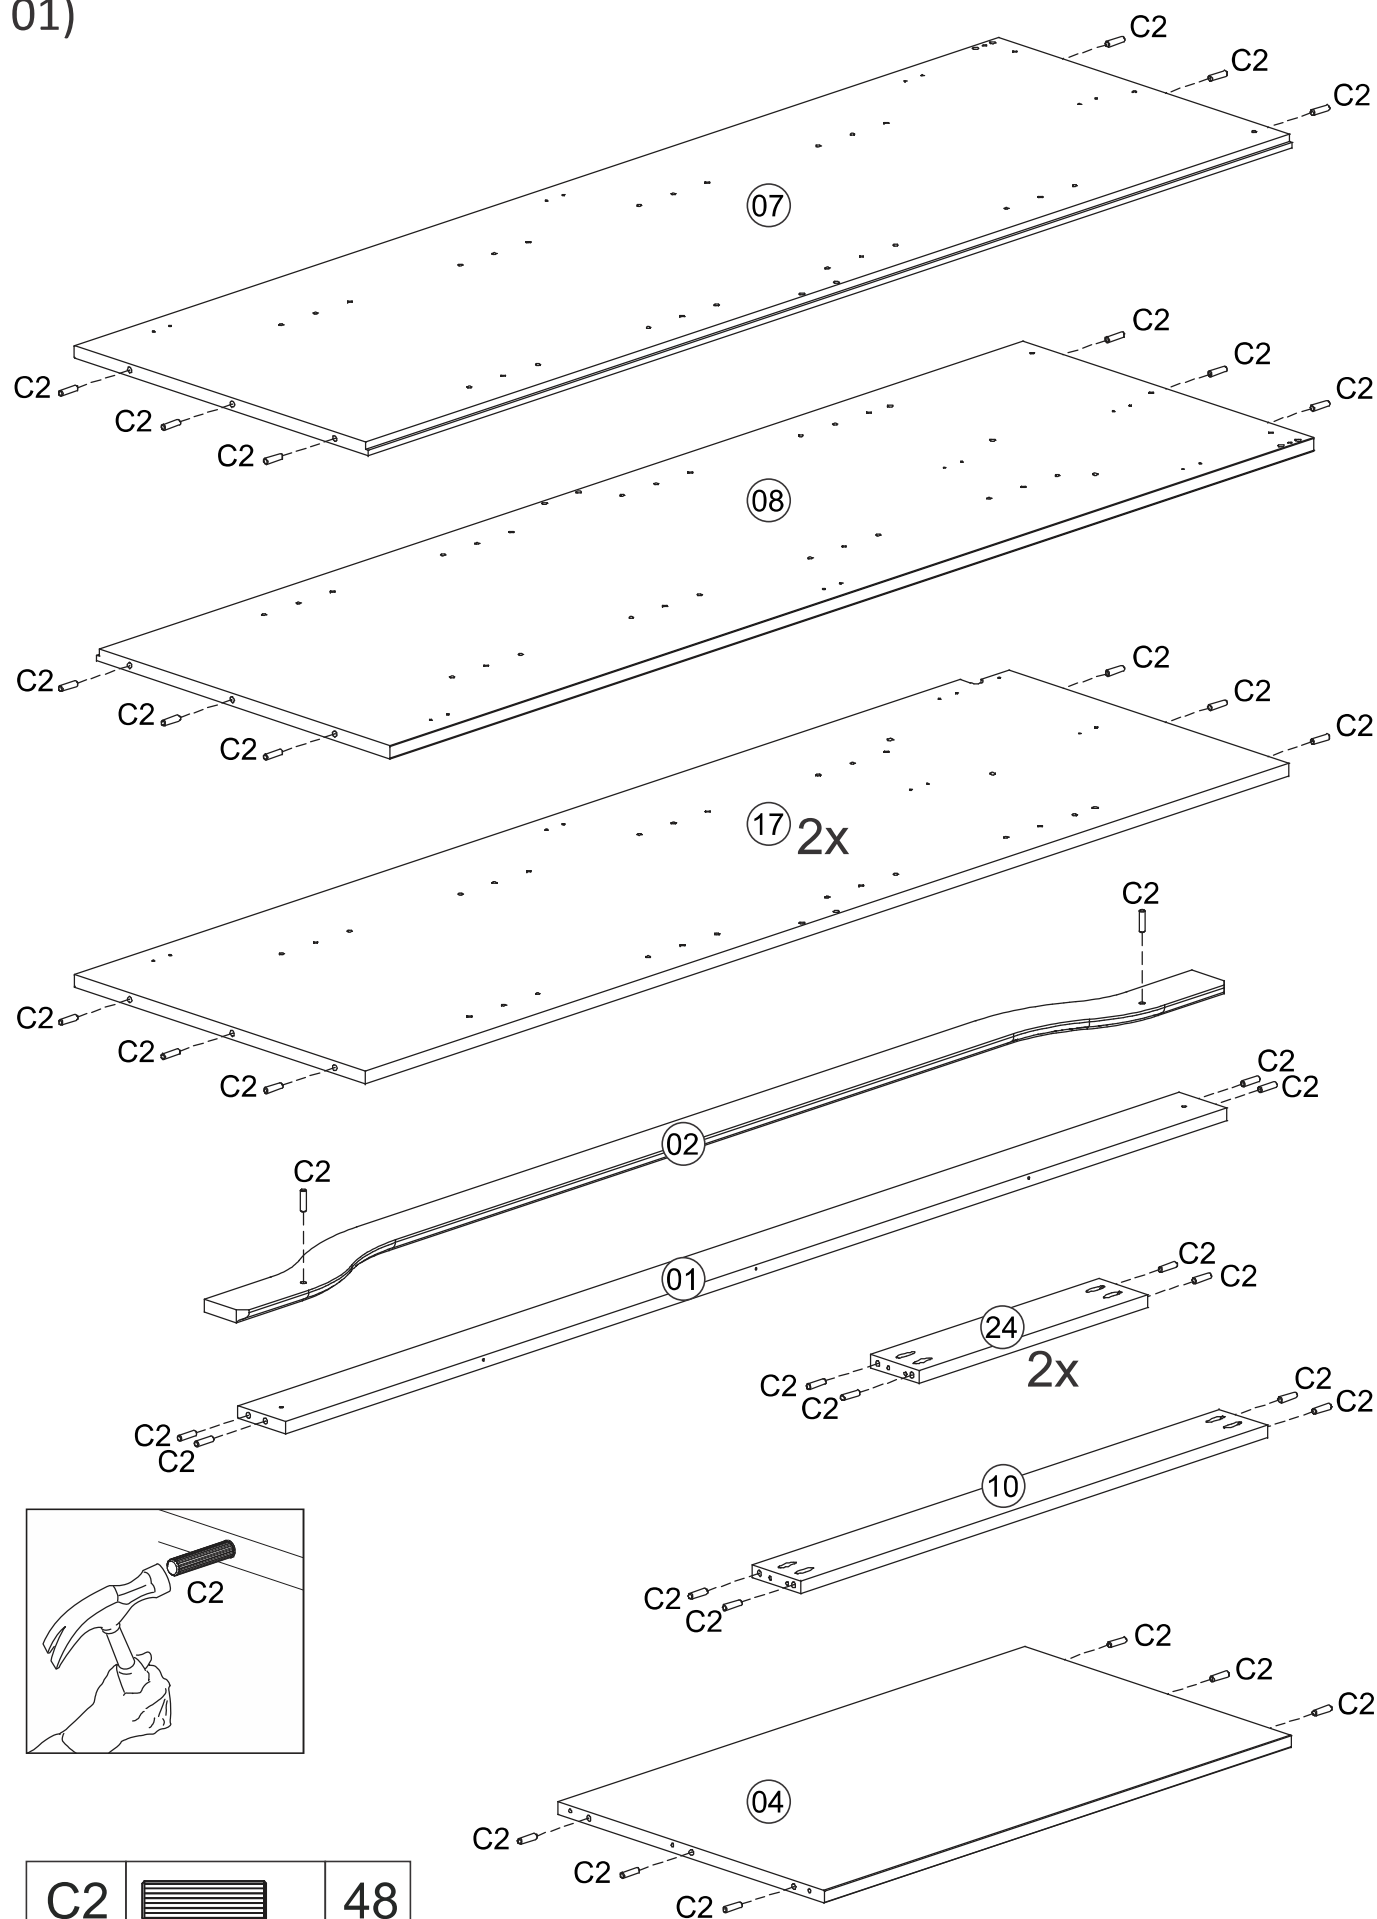



02)

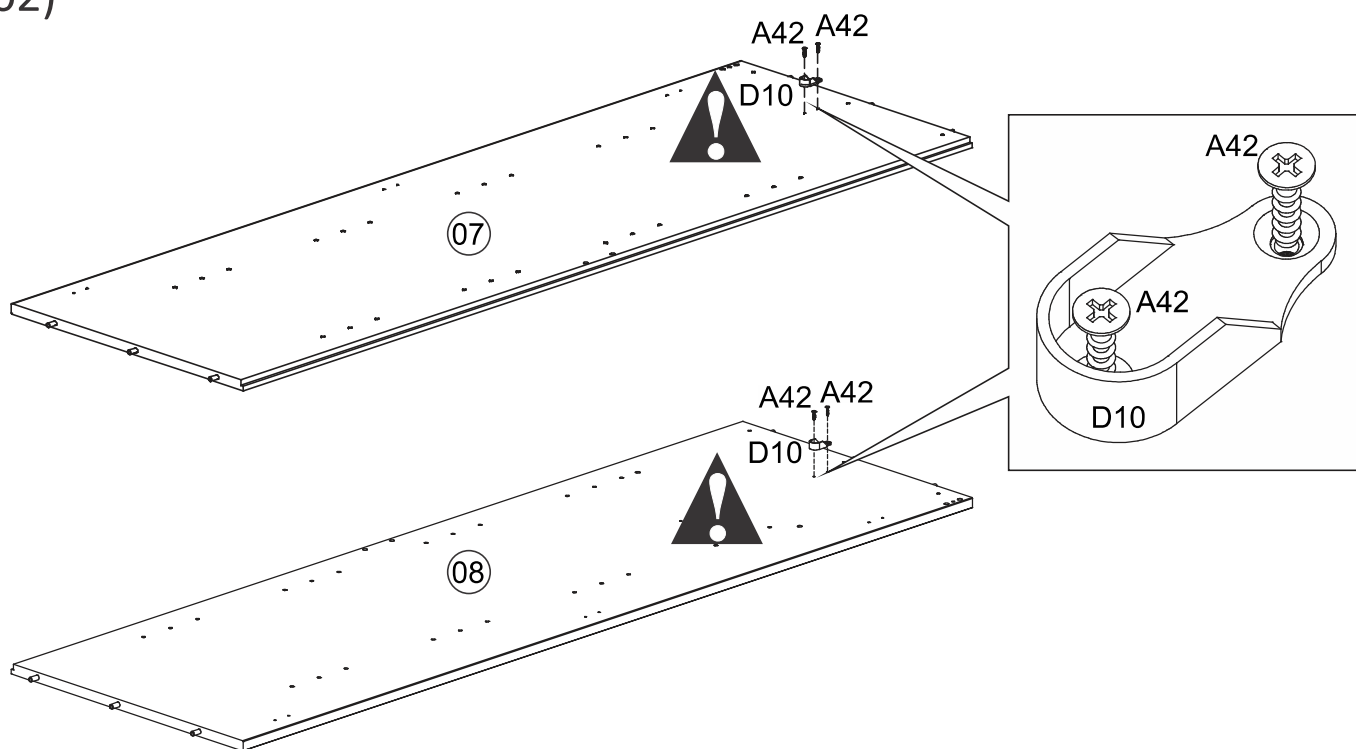


A42		04	D10		02
4,0x14					

03) 2x

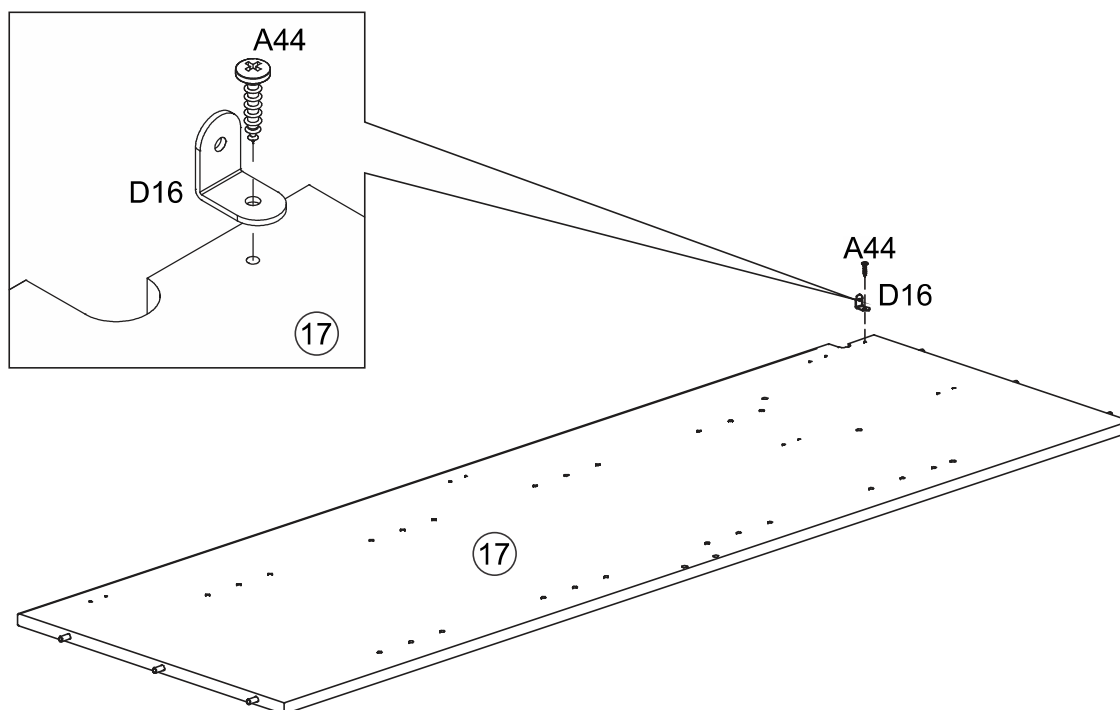


A44		02	D16		02
3,5x14					


04)

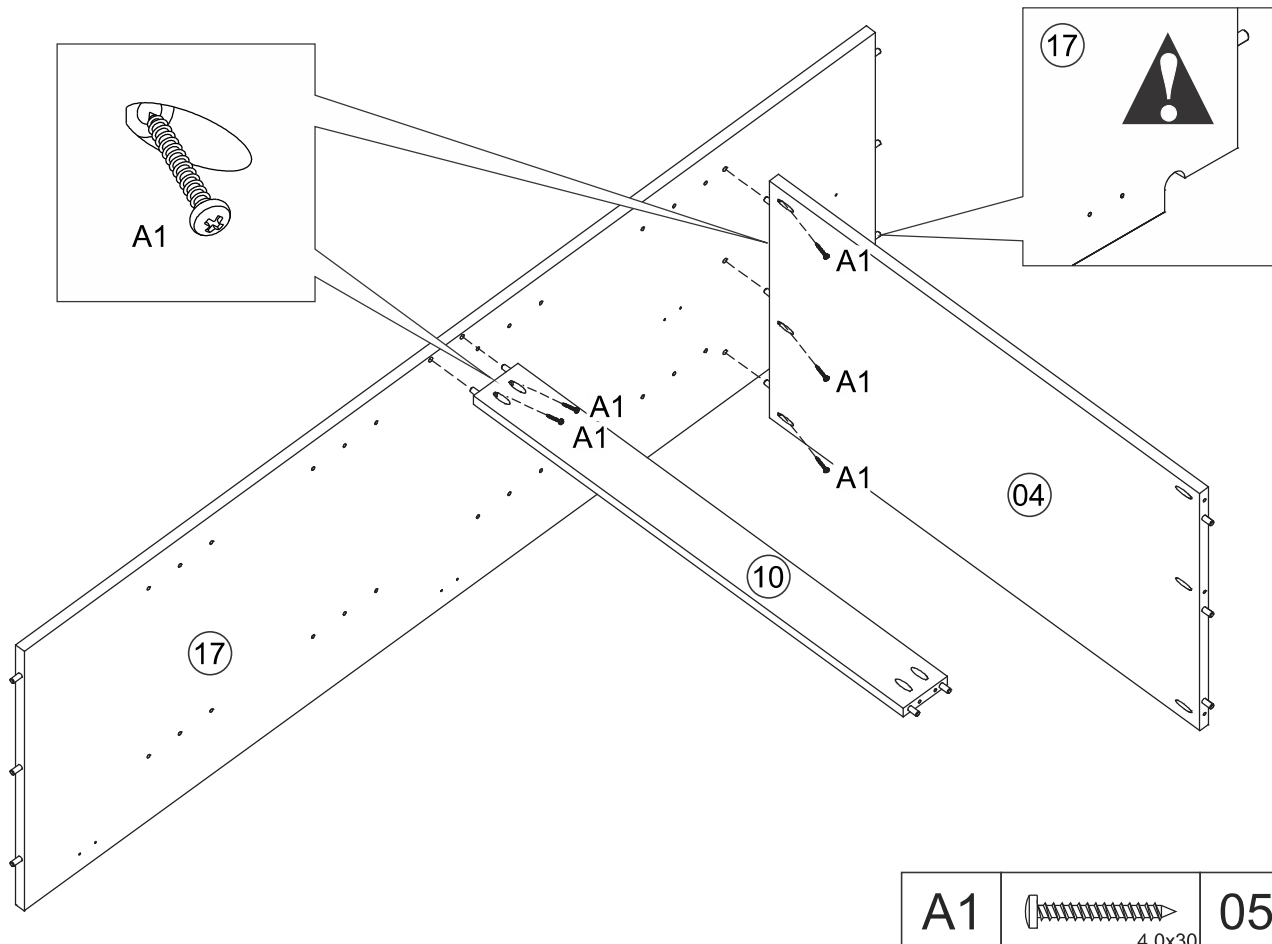


05)

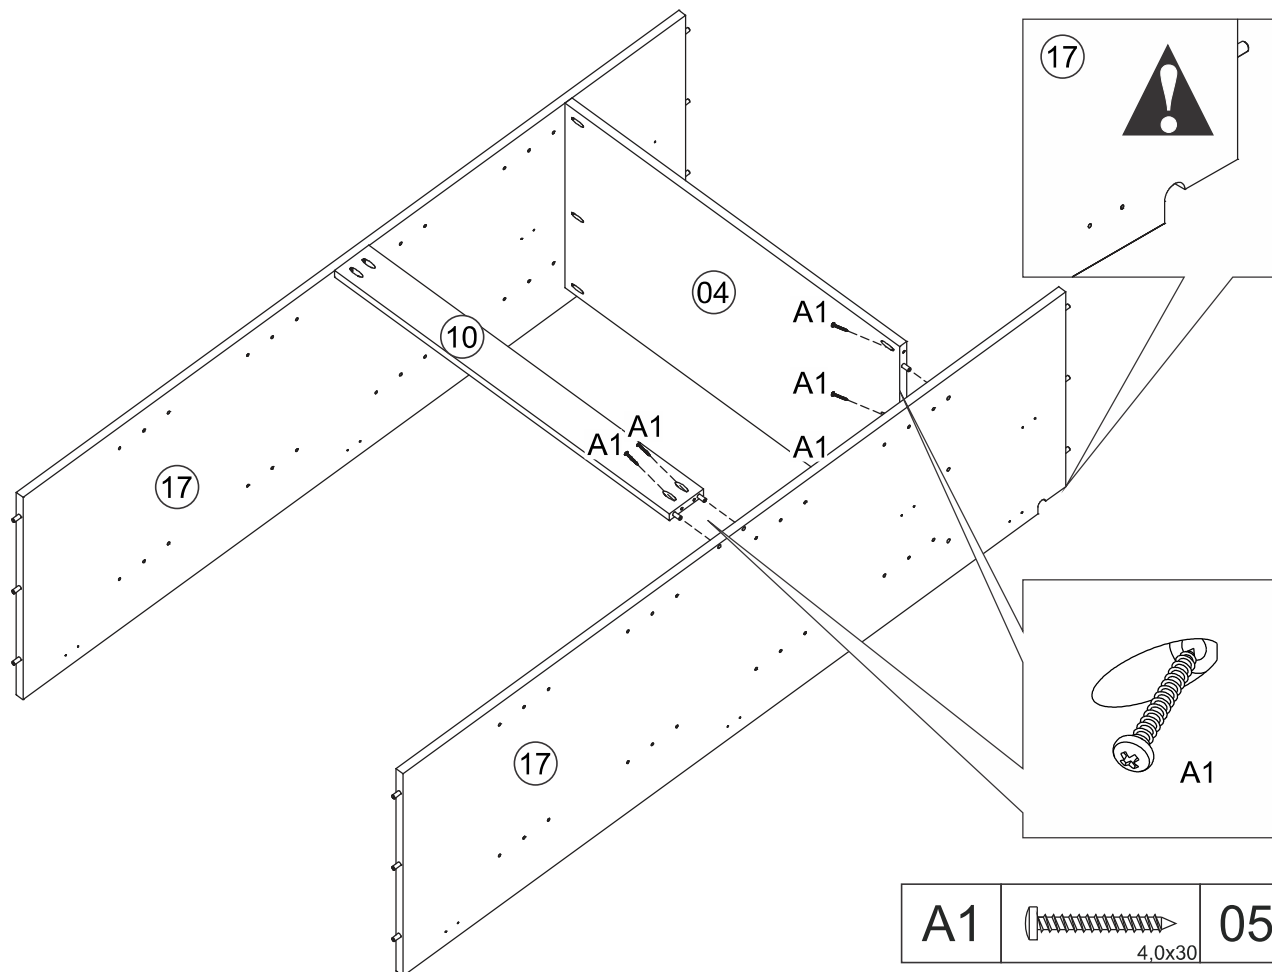


06)

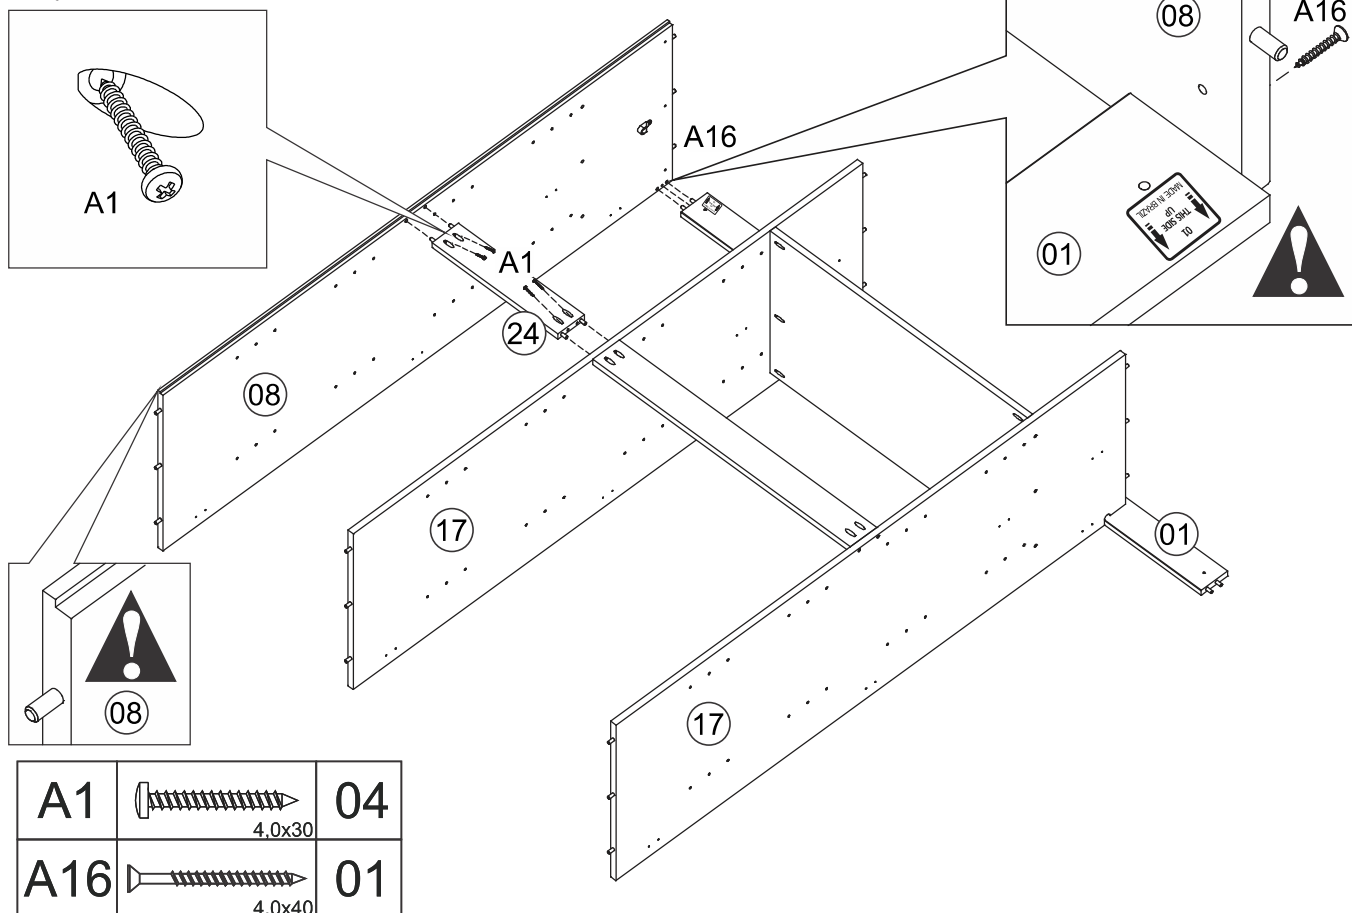


07)

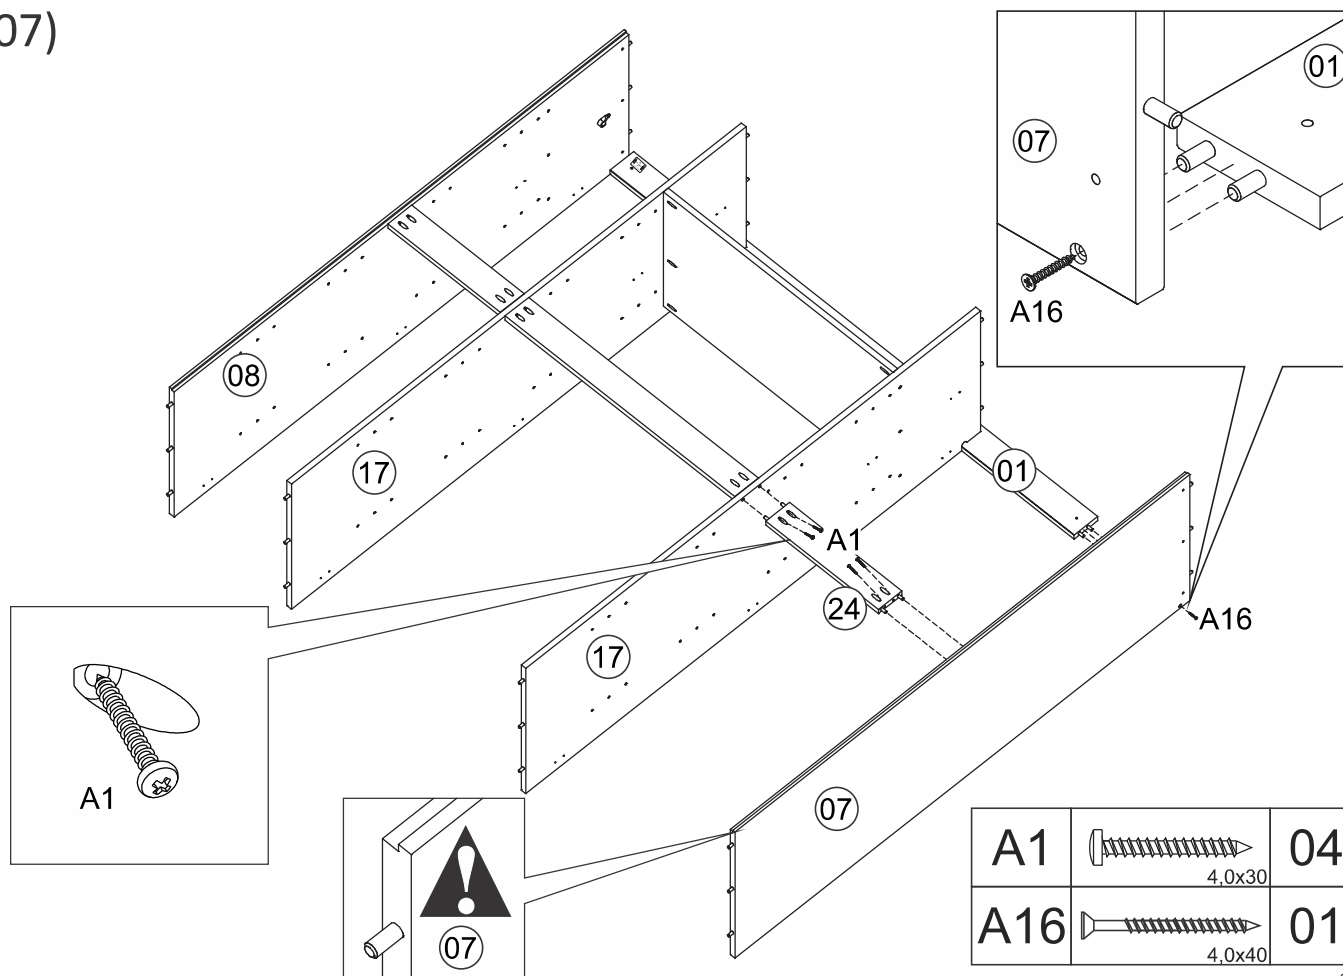


08)

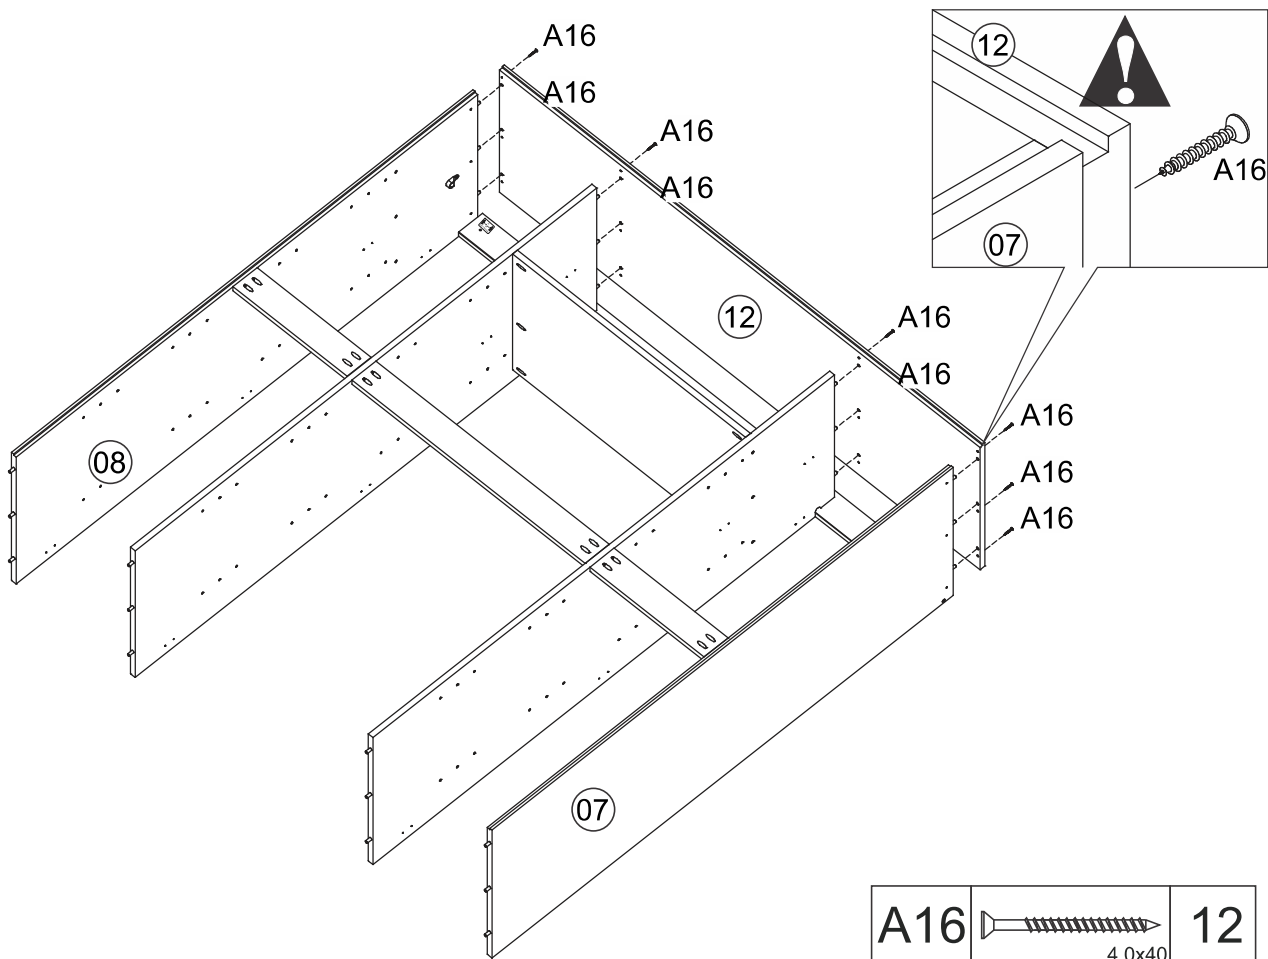

09)




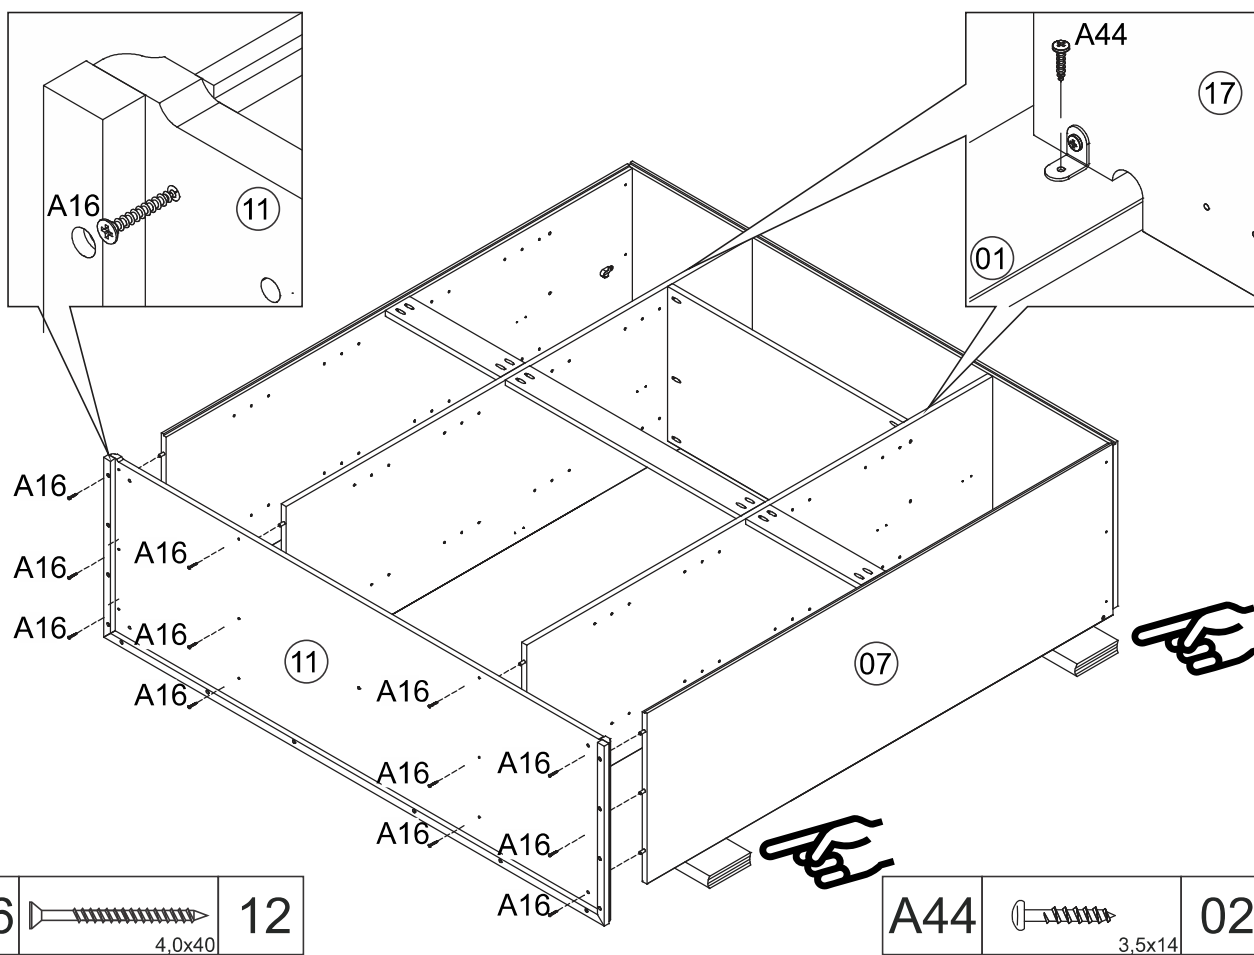




10)

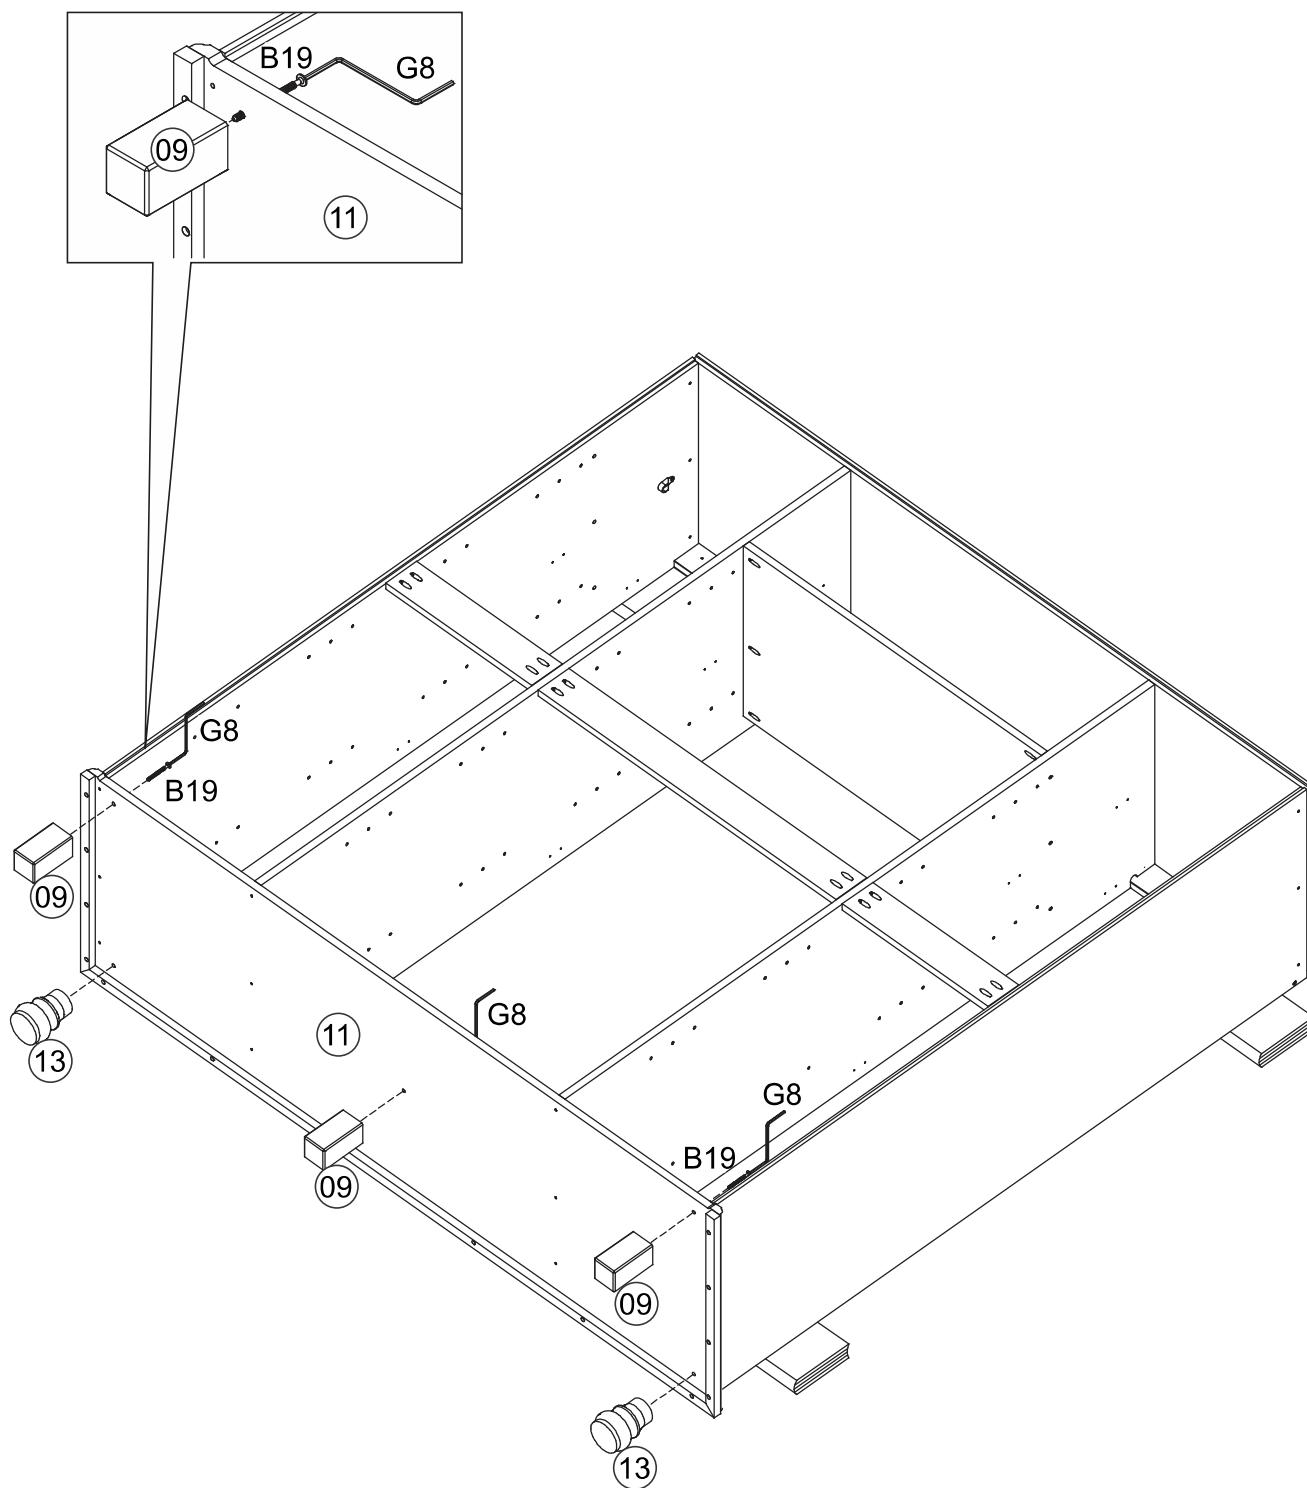




B19	 7.0x70	05
G8		01

11)

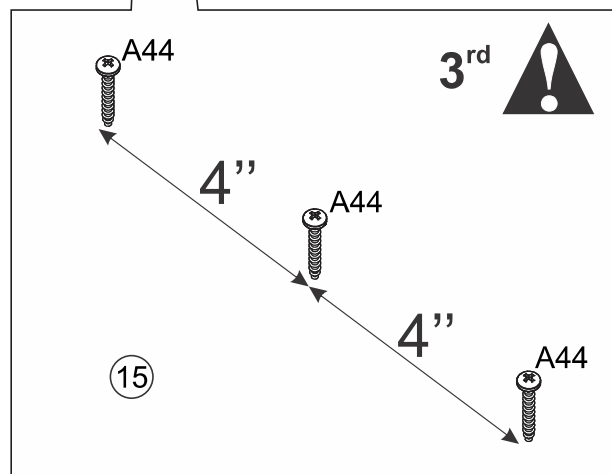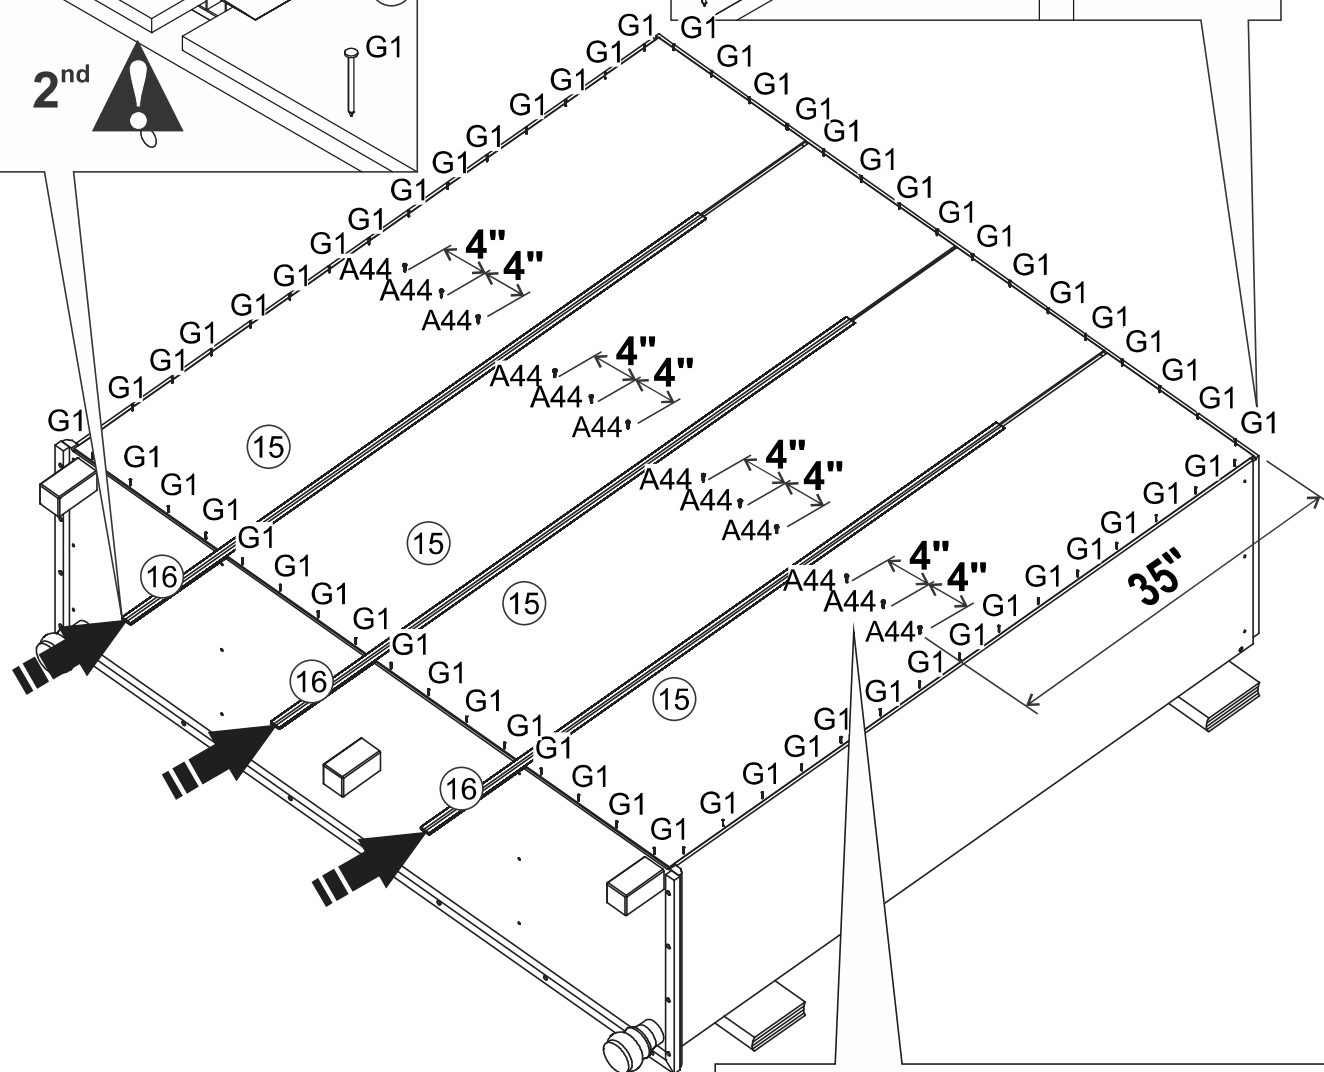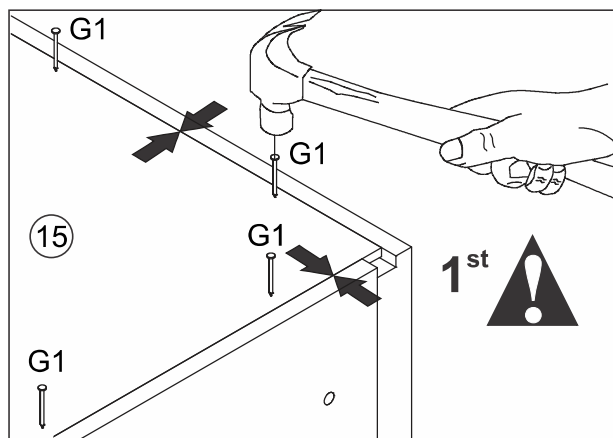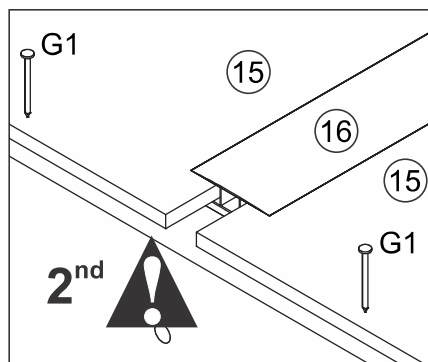


A44	 3.5x14	12
G1	 10x10	62

12)

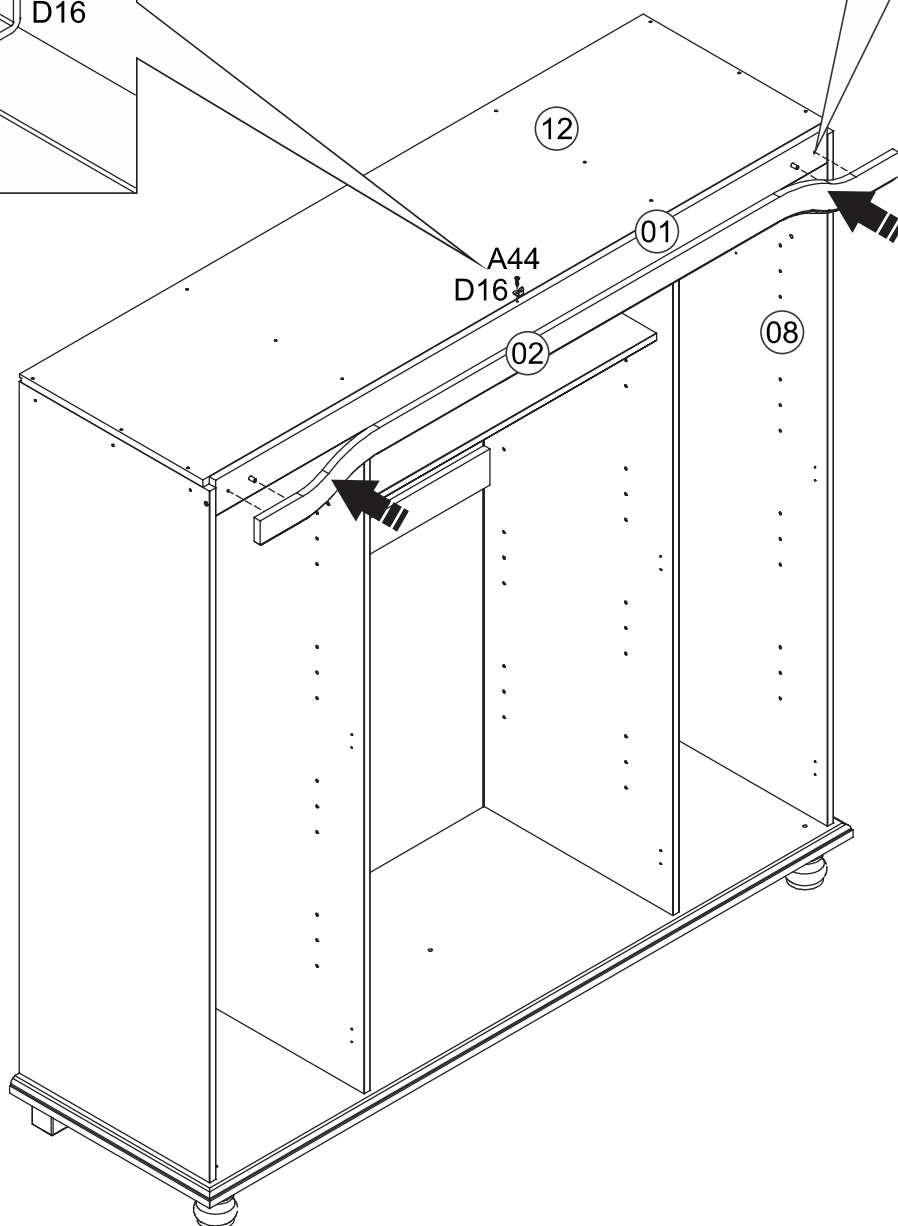
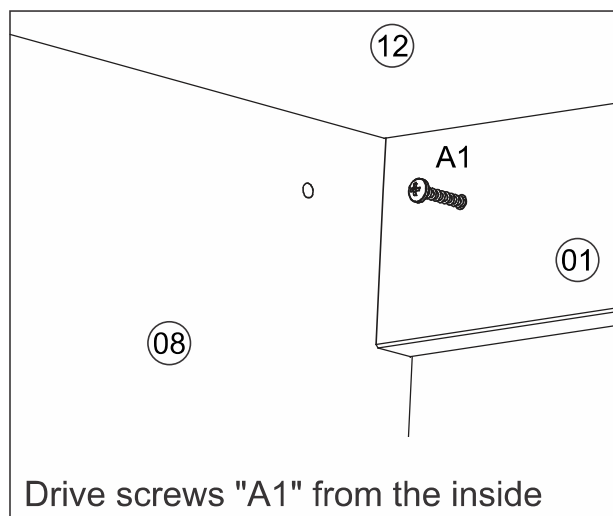
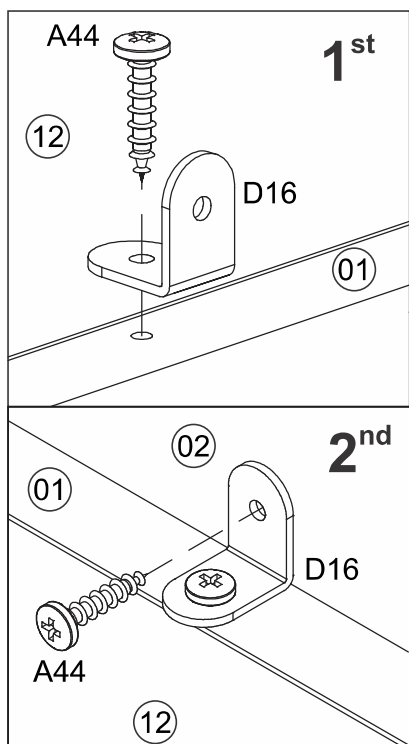


A1		02	A44		02	D16		01
	4.0x30			3.5x14				


13)

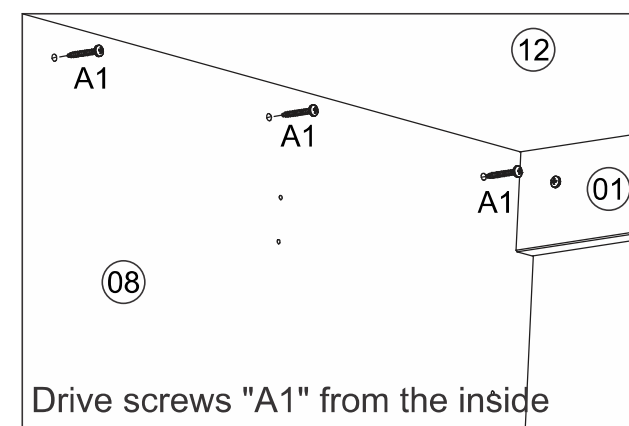

Drive screws "A1" from the inside

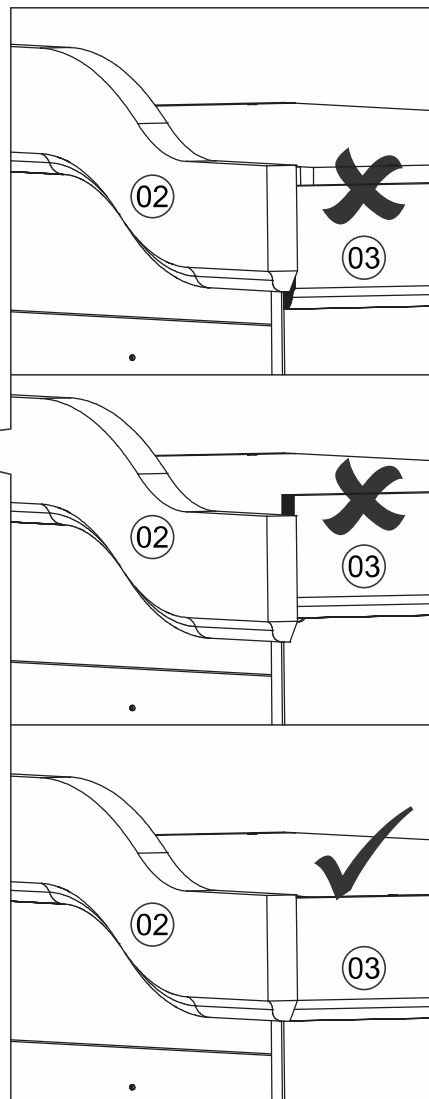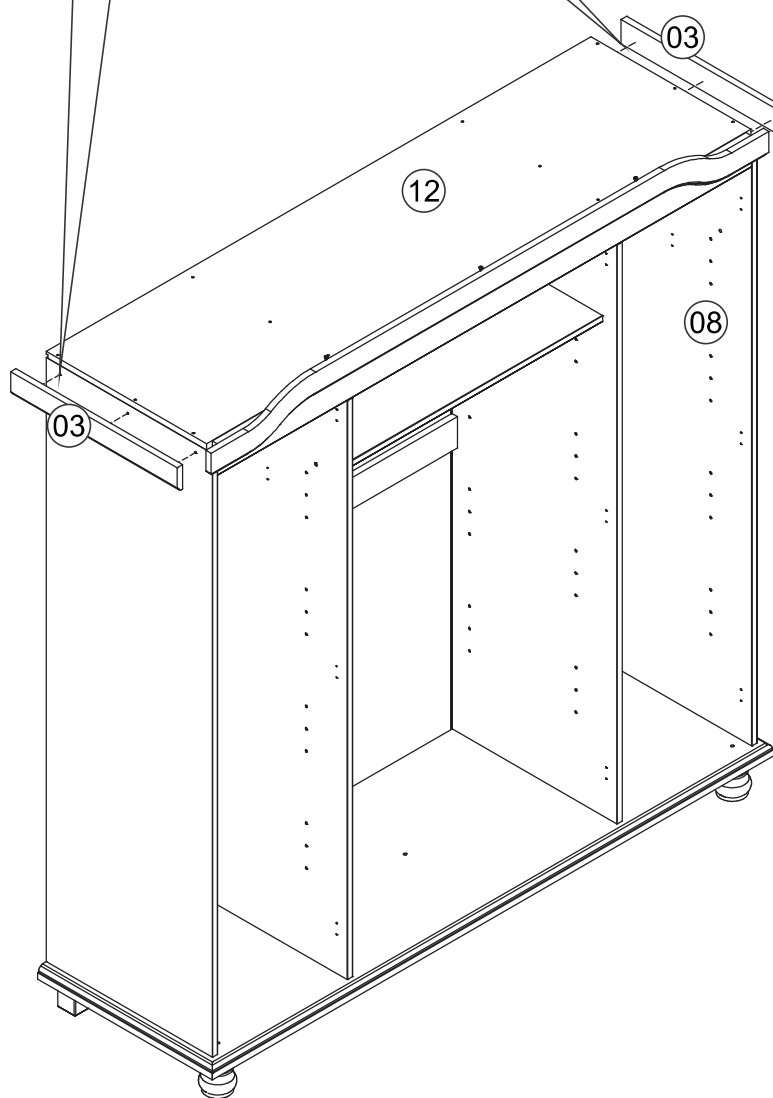


14)

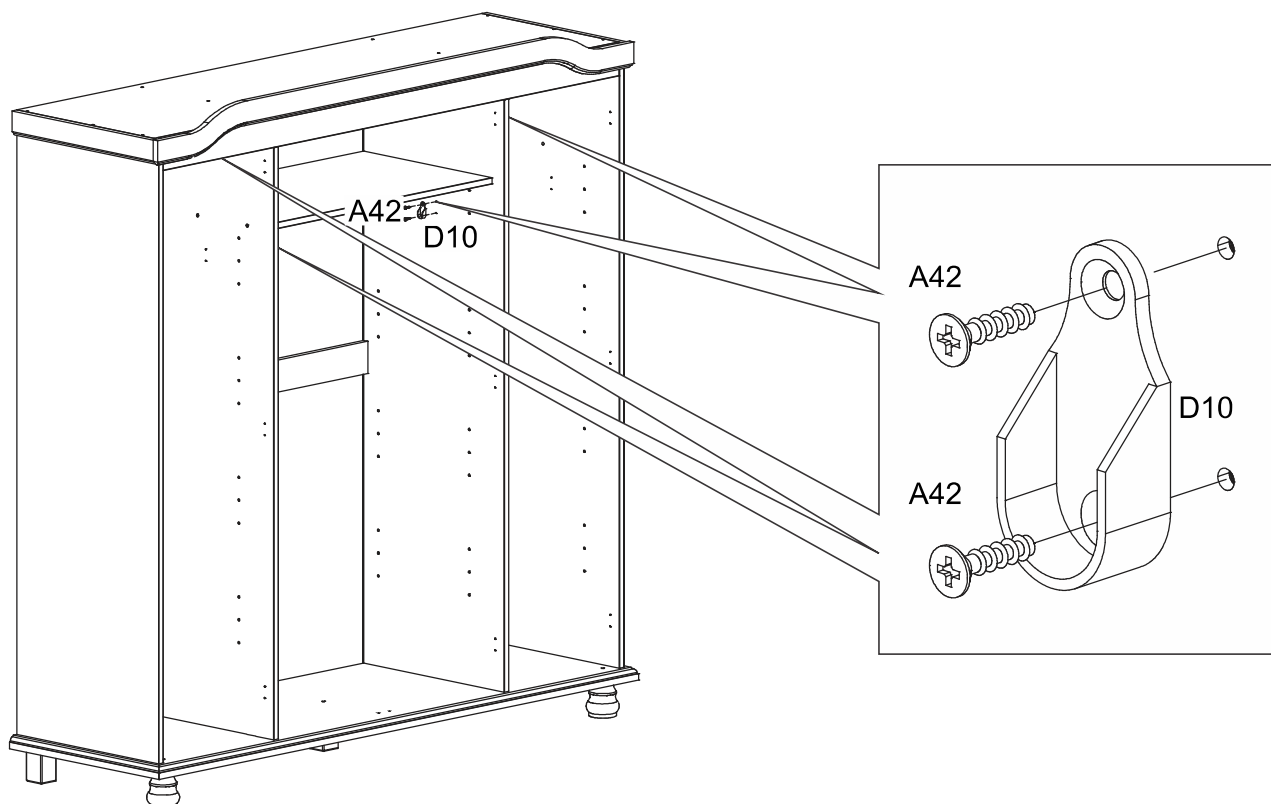

A42		08	D10		04
4,0x14					


15)

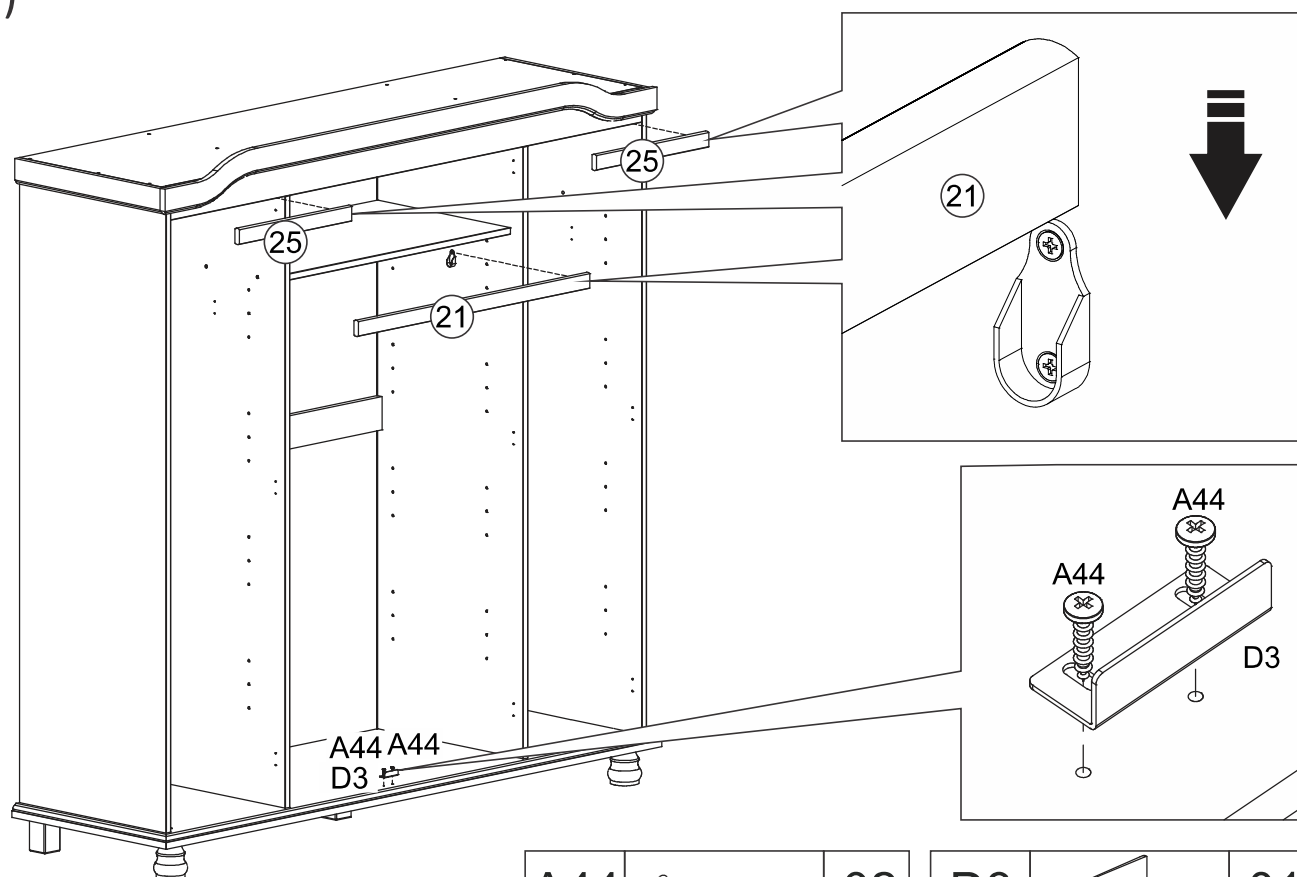



A44		02	D3		01
3,5x14					


16)

If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.




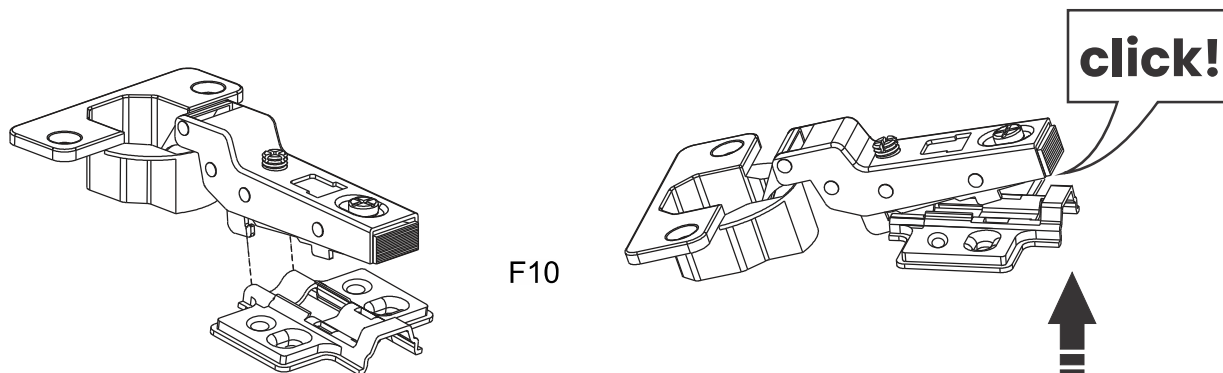


17)



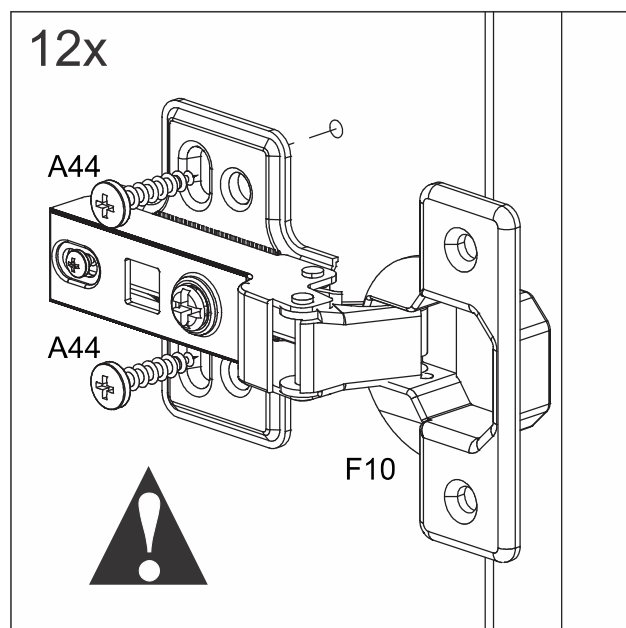
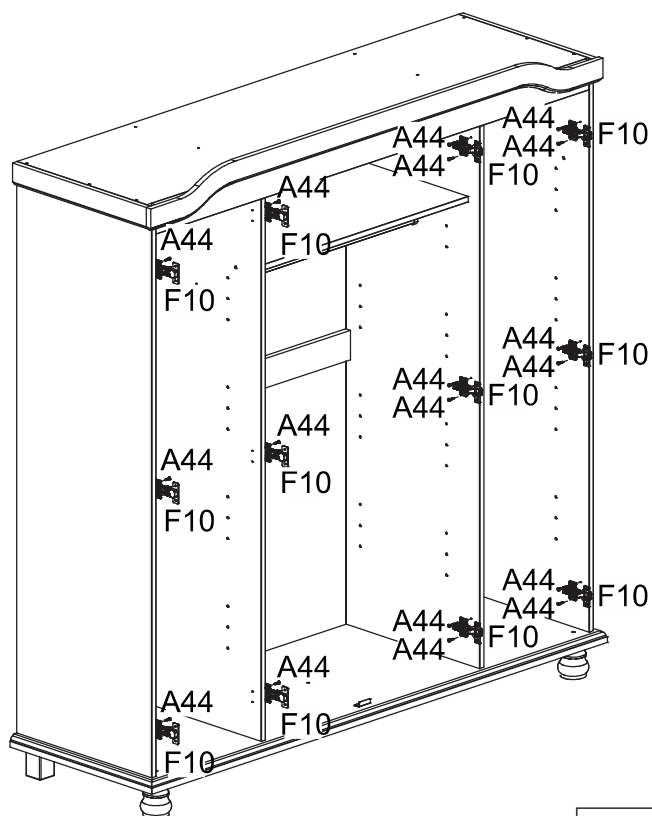


A44	 3,5x14	24	F10		12
-----	--	----	-----	---	----





18)

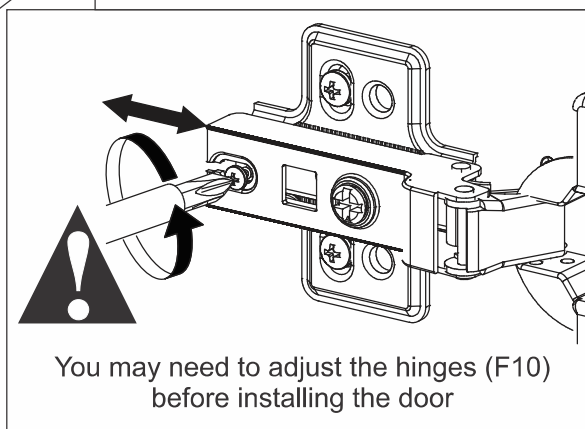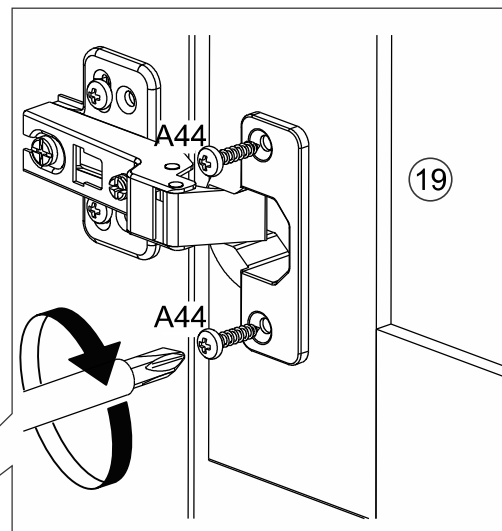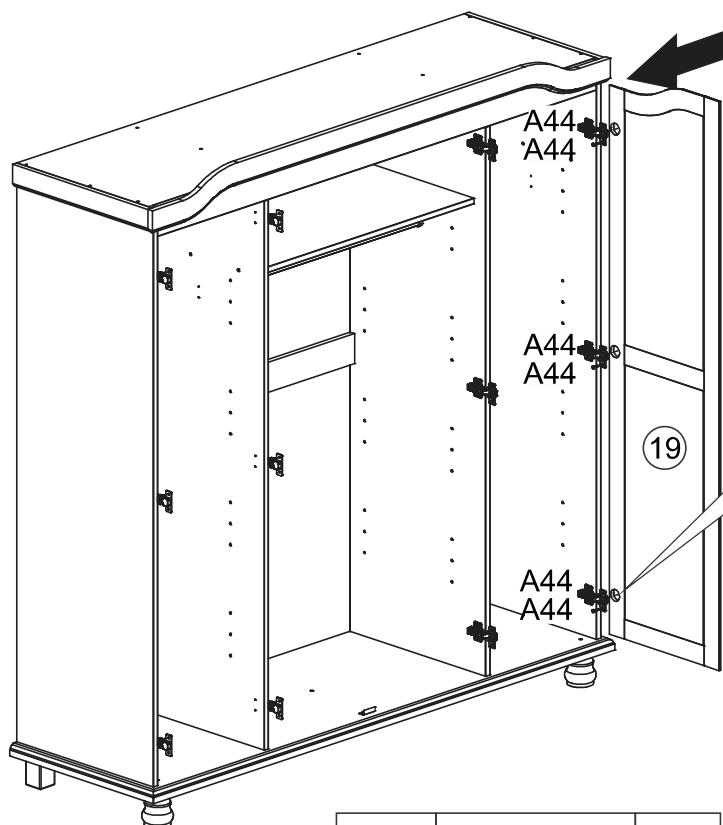





19)

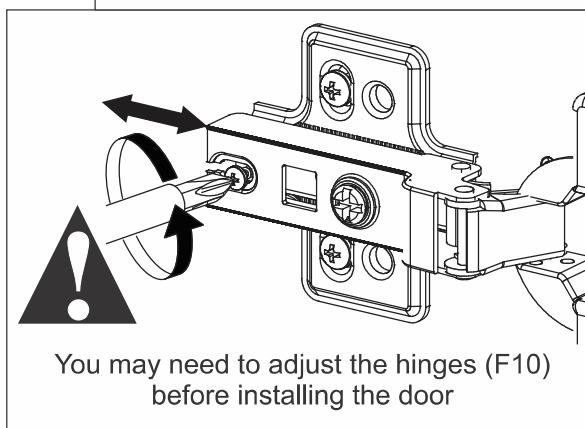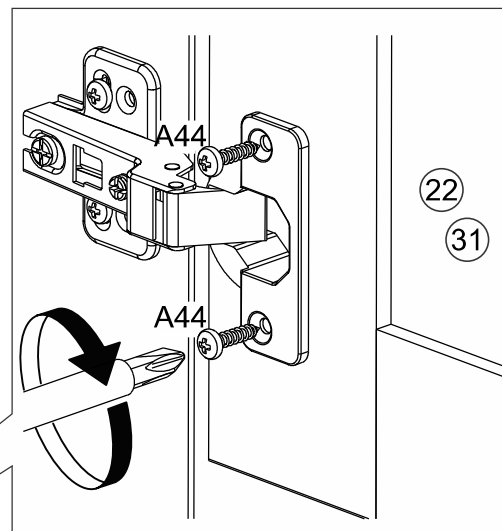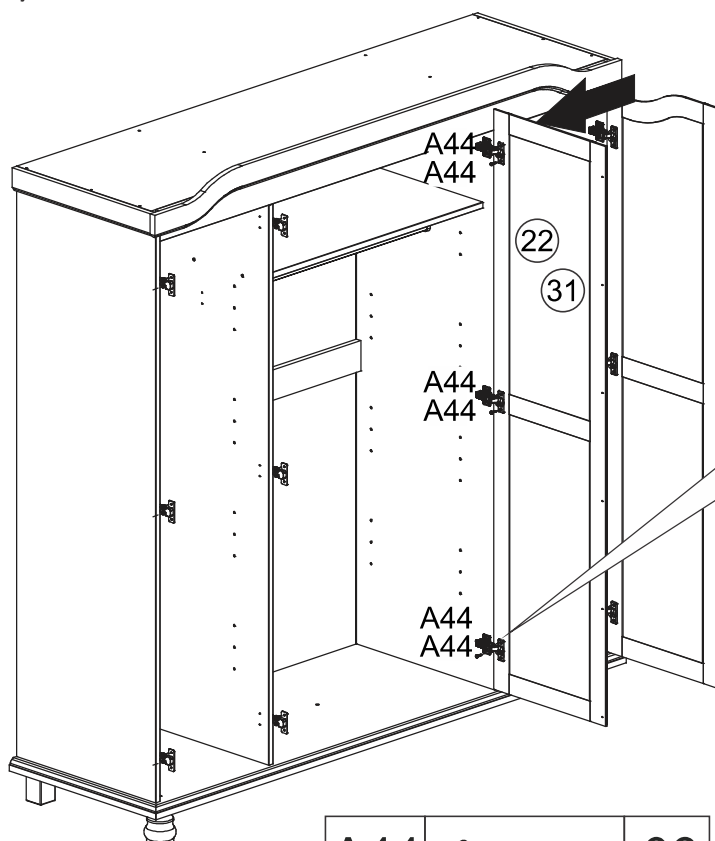



20)

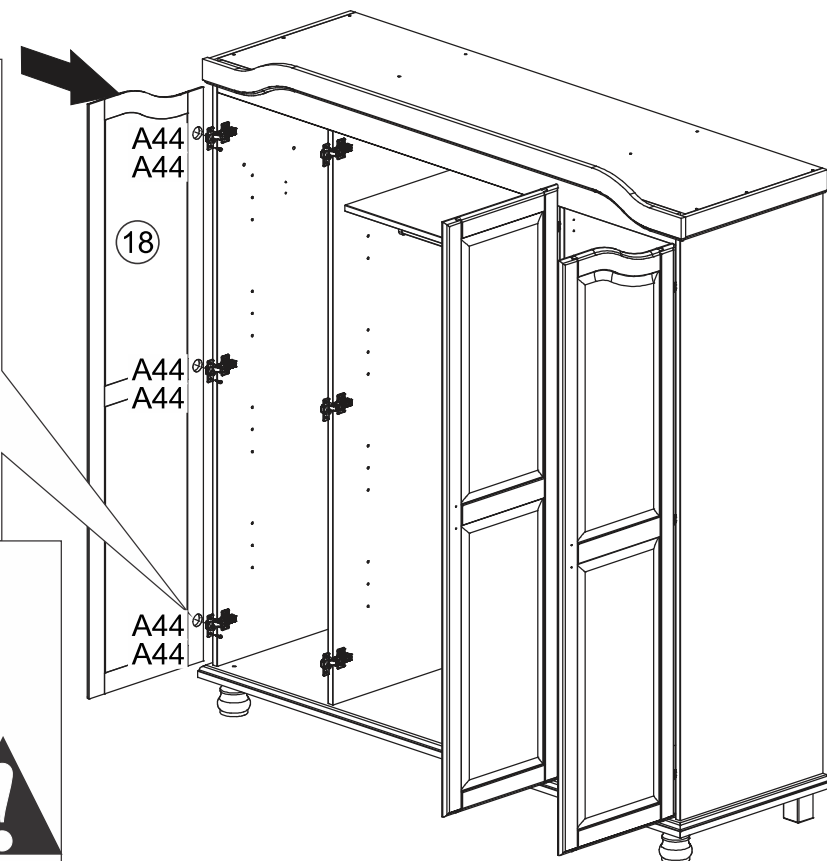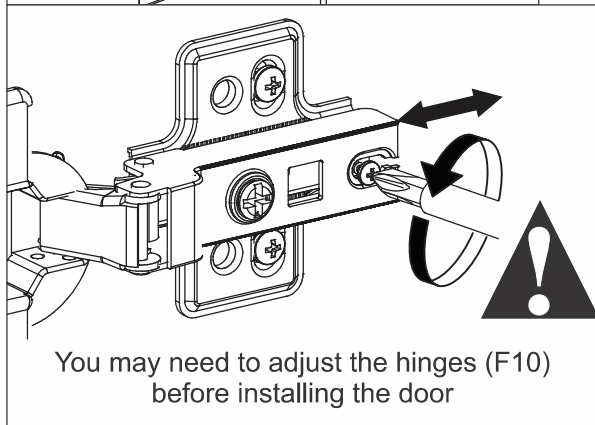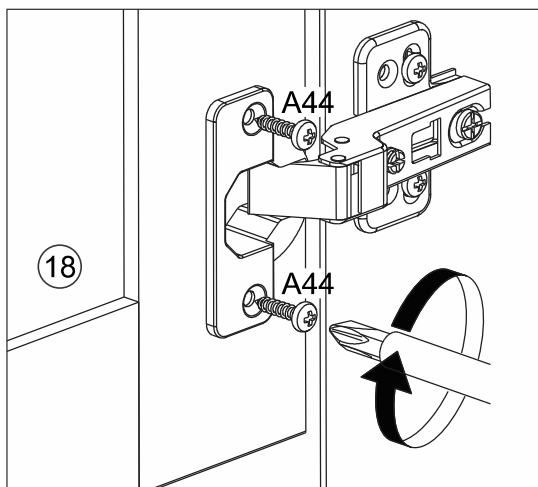


21)

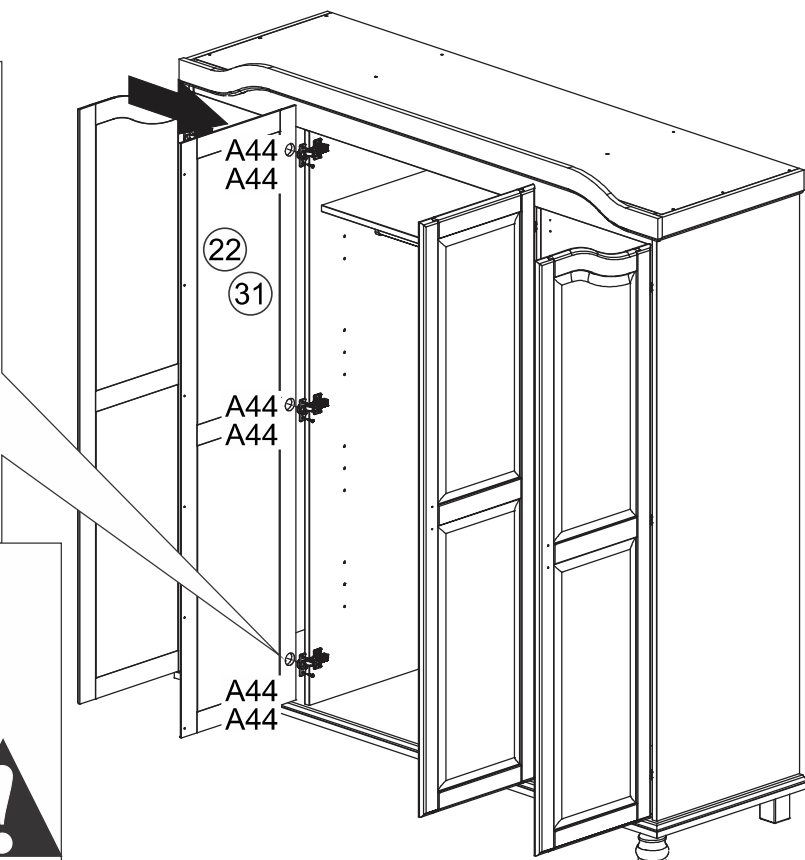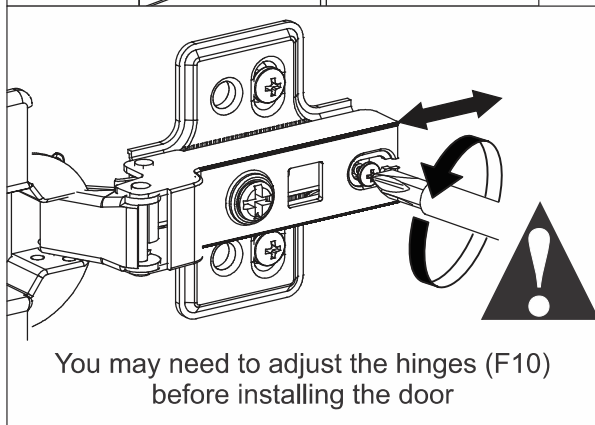
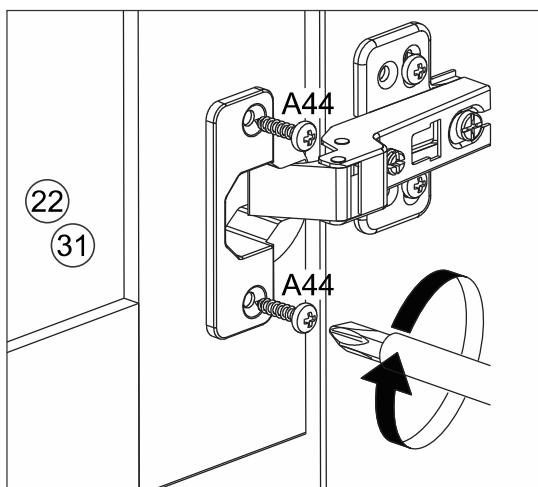



22)

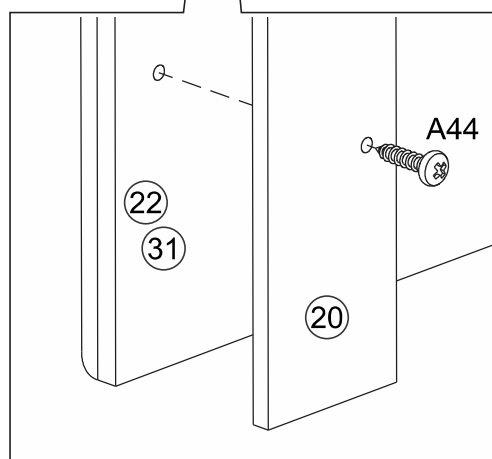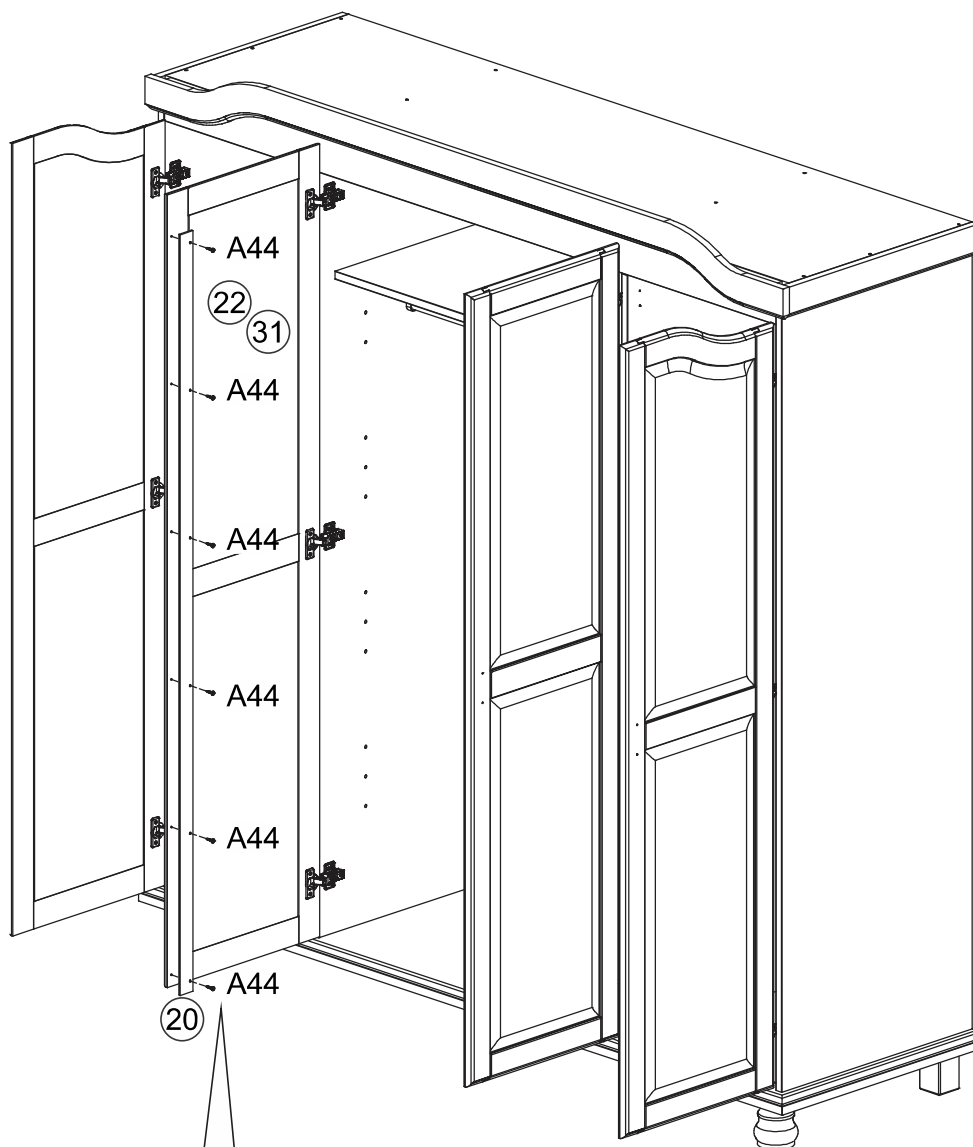













A44	 3,5x14	06
-----	---	----

23)




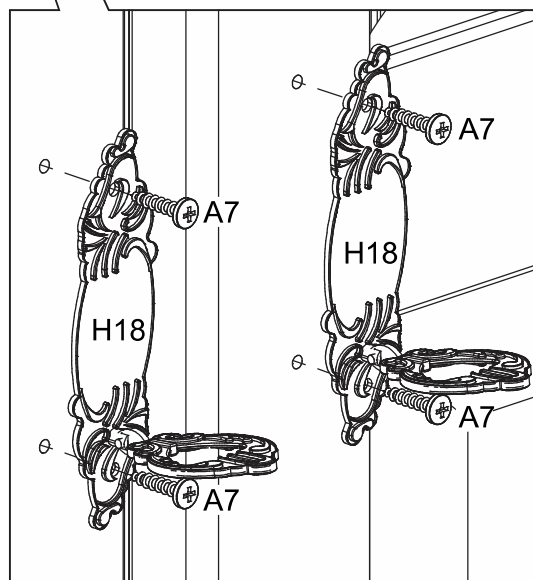
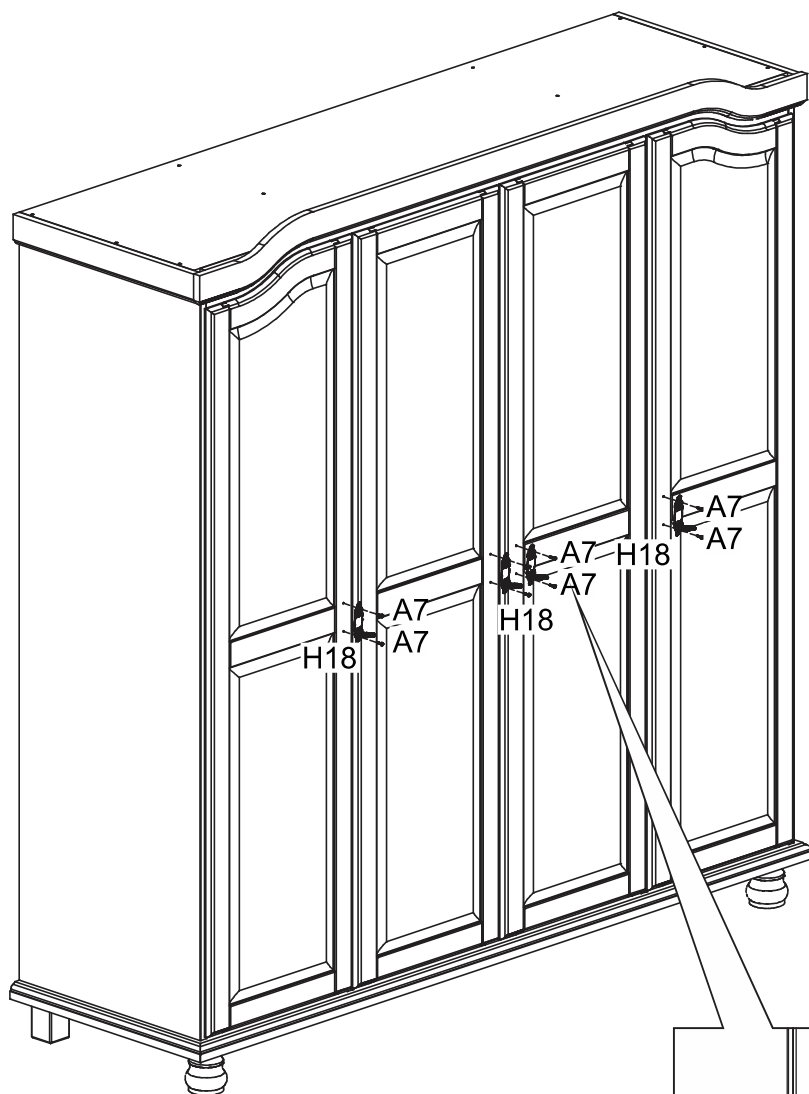



A7	 3.0x16	08
H18		04

24) HINGE ADJUSTMENT GUIDE.

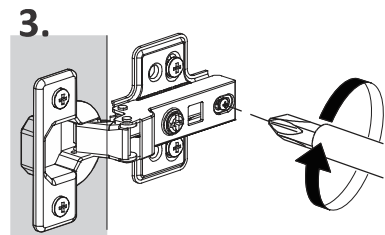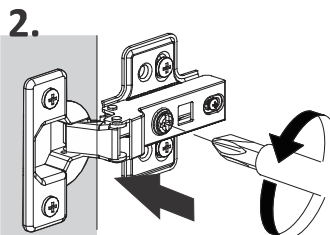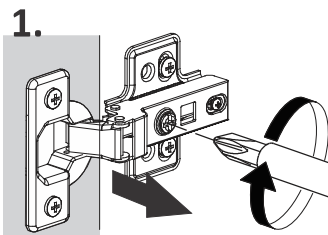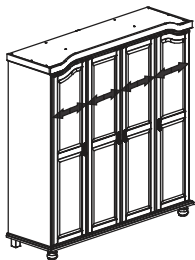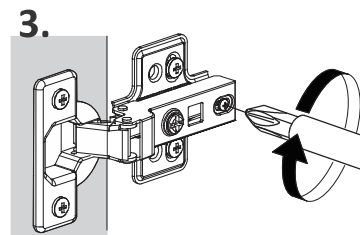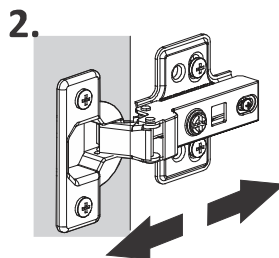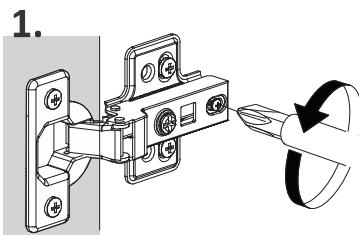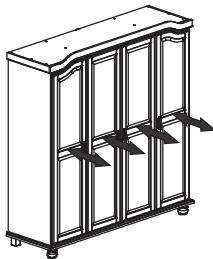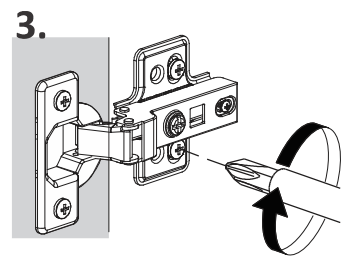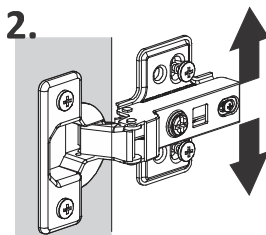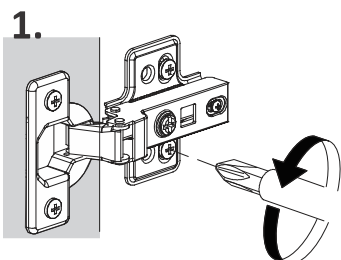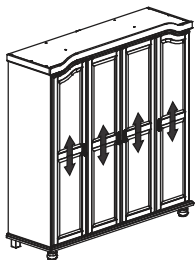

25) Tip-over Restraint Kit Installation

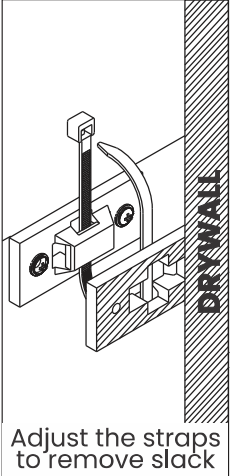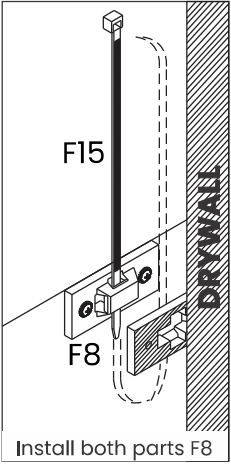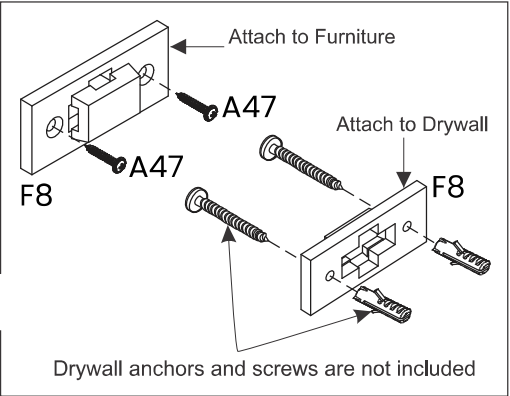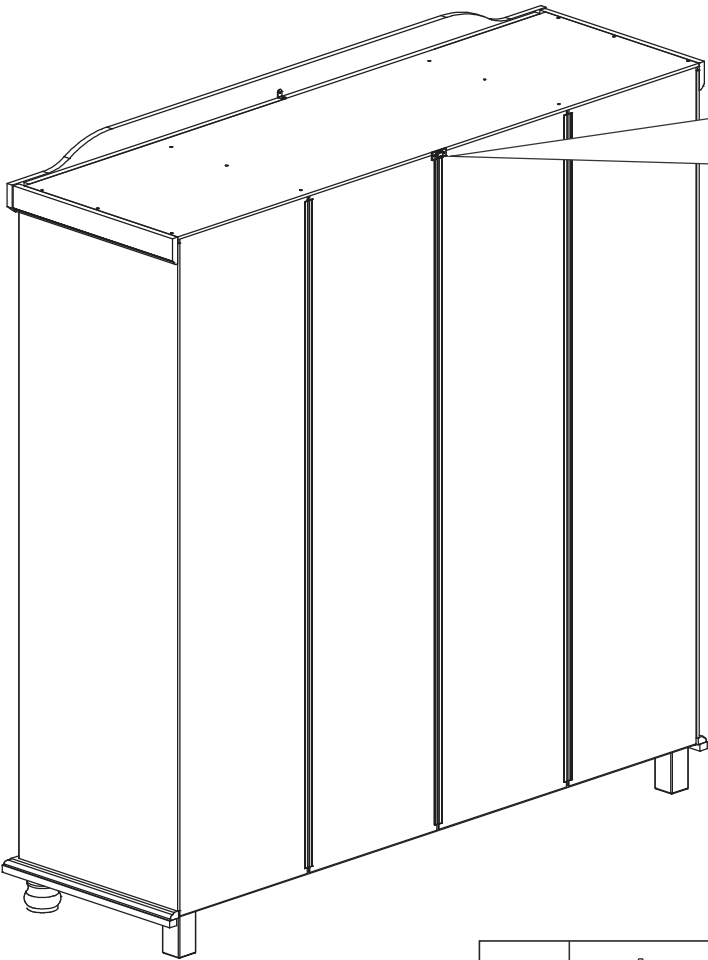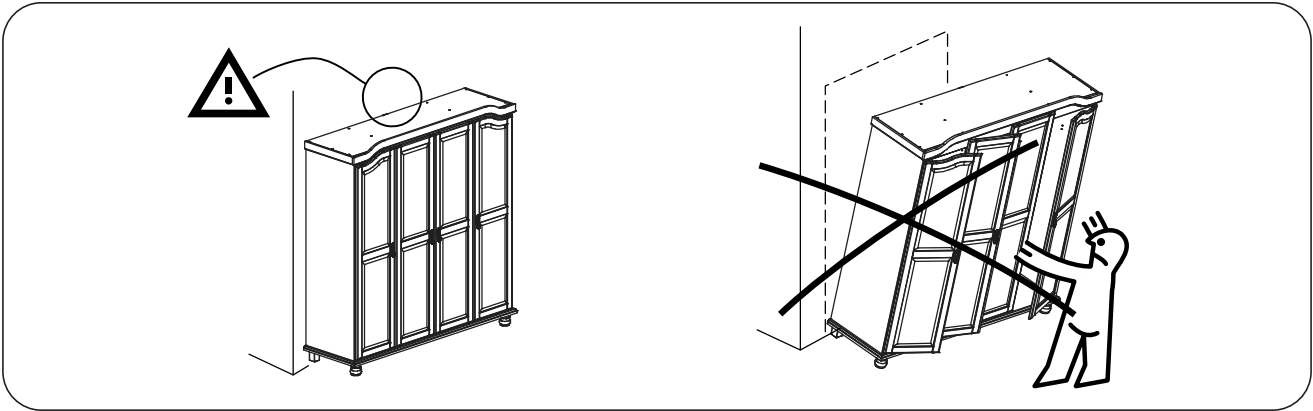

A47		2
F8		2
F15		1