



## ASSEMBLE STEP NO.1:

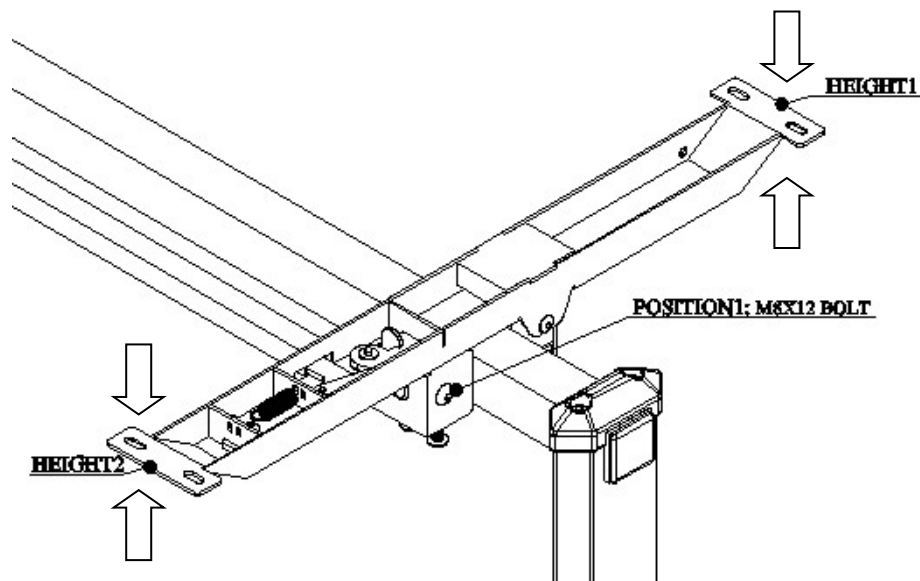

- ① LOOSE POSITION1: M8X12 BOLT,
  - ② USE RUBBER HAMMER TO MAKE SURE THAT HERGHT1 AND HERGHT2 ARE IN THE SAME HEIGHT / LEVEL, WITHIN 5MM DIFFERNC E COULD BE ACCEPTABLE.
  - ③ THEN TIGHTEN THE SCREWS IN POSITION 1.
- 

## ASSEMBLE STEP NO.2:

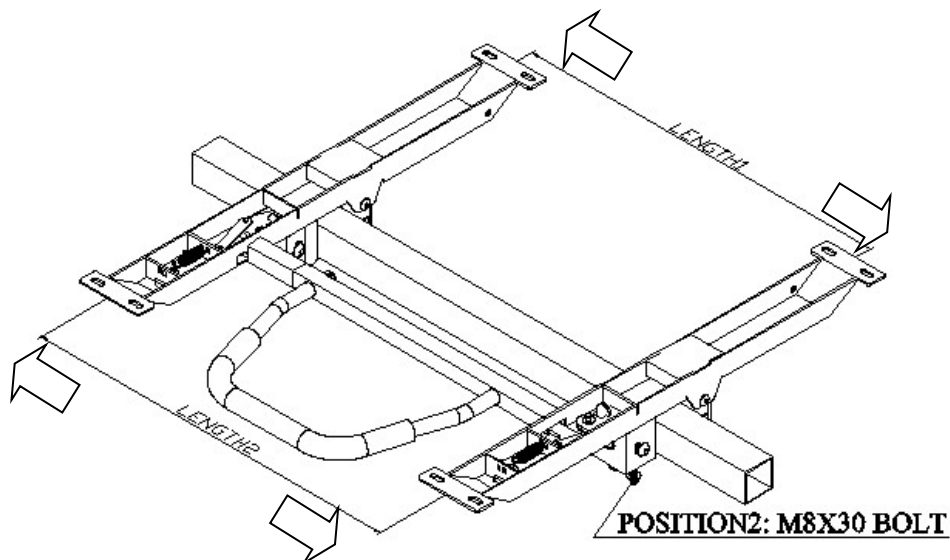

- ① LOOSE POSITION2: M8X30BOLT,
- ② MAKE SURE LENGTH1 AND LENGTH2 HAS SAME DISTANCE , DIFFERENCE WITHIN 5 MM COULD BE ACCEPTABLE.
- ③ AFTER THAT TIGHTEN SCREWS IN POSITION 2.