


Strobel Organic Flat Headboard Assembly Instructions

Find the width you need for your headboard brackets attached to your metal bed frame, and find the height you need for the headboard in relation to the mattress. Place your headboard sticks as needed.



It is easiest to use a power drill driver to set the screws to the headboard. If needed, you can partially set the screws with a hammer and then drive them in with a hand screwdriver.

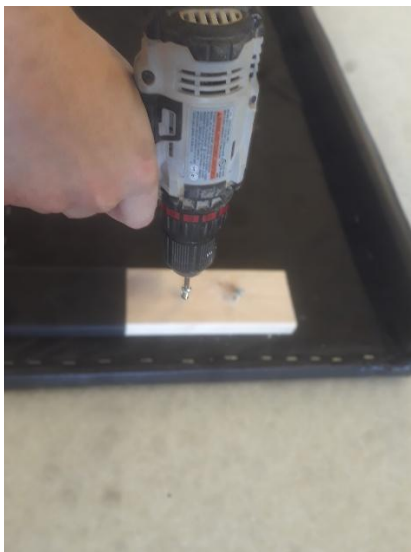

Then attach the headboard sticks to your brackets on your metal bed frame with the bolts, washers, and nuts provided.

Strobel Organic, 812-280-6000, leads@strobel.com