


ADIRONDACK CHAIR

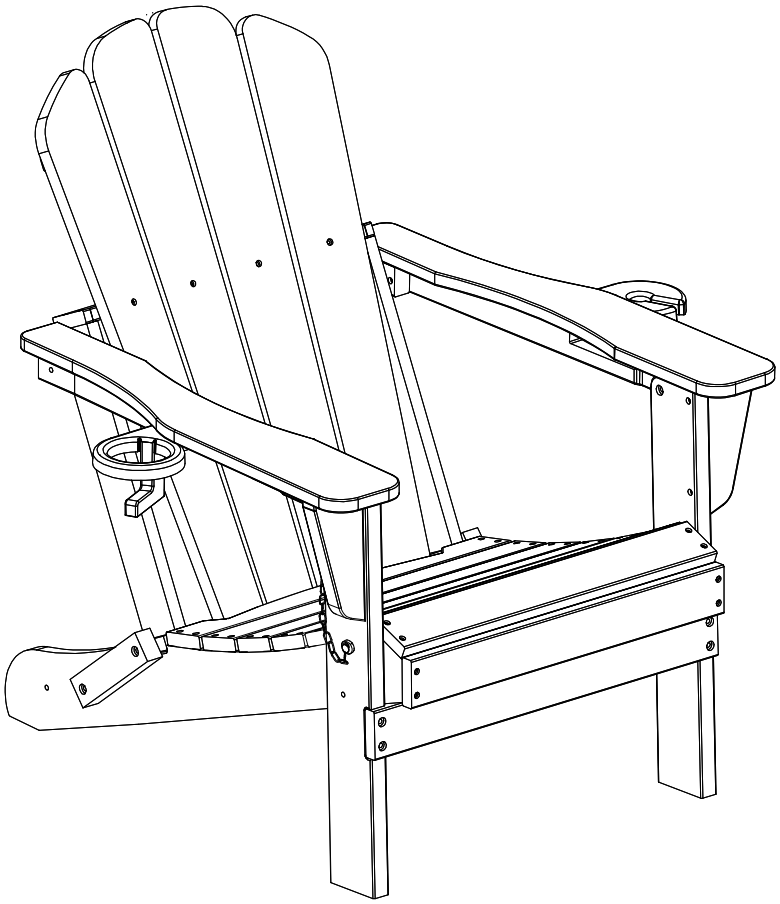


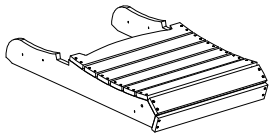


① 1X Seat Panel

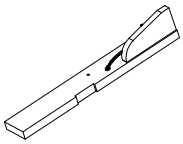


② 1X Right Leg

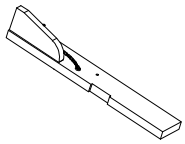


③ 1X Left Leg




④ 1X Right Arm

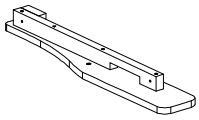


⑤ 1X Left Arm




⑥ 1X Back Panel




⑦ 1X Rear Bar

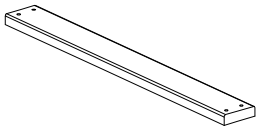

⑧ 1X Fore Bar




⑨ 2X Bracket




Phone Stand

⑩ 1X




Cup Holder

⑪ 1X




M6*30mm Bolt

⑫ 2X




ST6*40mm Screw

⑬ 6X



ST6*50mm Screw

⑭ 2X



M6*50mm Bolt

⑮ 2X



M6*60mm Bolt

⑯ 4X




M6*80mm Bolt

⑰ 2X



M6 Washer

⑱ 10X

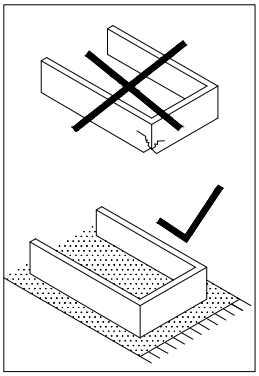




⑲ 8X M6 Nut



⑳ 1X Allen Key






㉑ 1X Spanner


Adirondack Chair should include the following parts.

Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact our Customer Service.

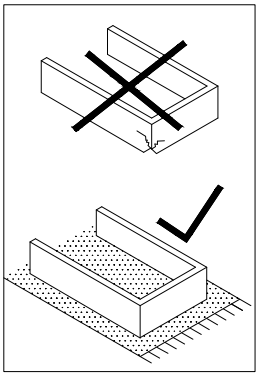

①		1X
②		1X
③		1X
⑯		2X M6*60
⑱		2X
⑲		2X
⑳		1X
㉑		1X

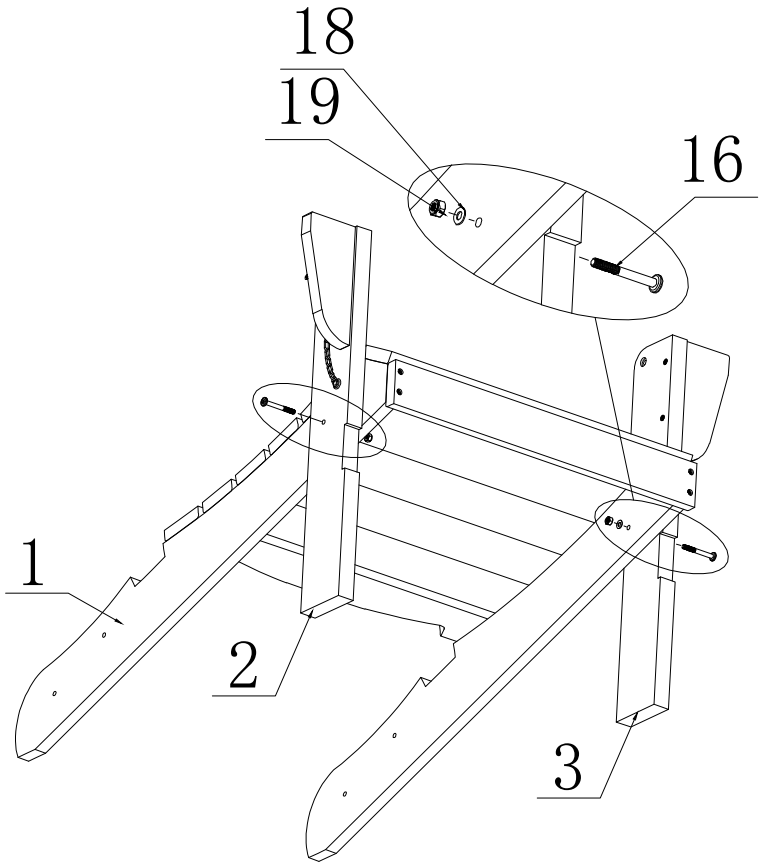

Align the mounting holes on the Seat Panel ① with the corresponding holes on the Right Leg ② and Left Leg ③, insert M6×60 bolts ⑯, secure with washers ⑱ and nuts ⑲, then tighten using the Allen key ⑳ and wrench ㉑ until stable.




⑧ 1X




⑬ 4X ST6*40




⑳ 1X

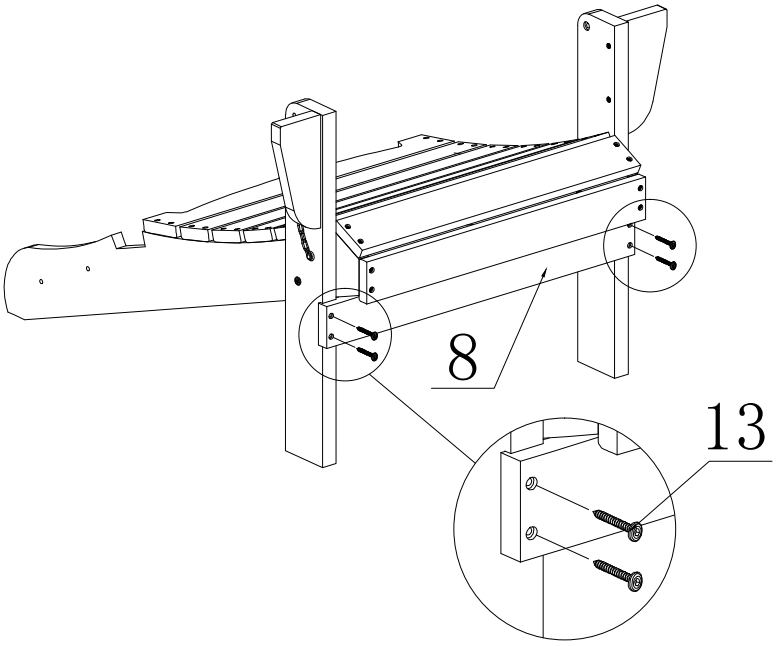

Attach the Fore Bar ⑧ to the chair frame using ST6×40 screws ⑬ .



④ 1X



⑤ 1X



⑩ 1X




⑪ 1X




⑫ 2X

⑱ 2X

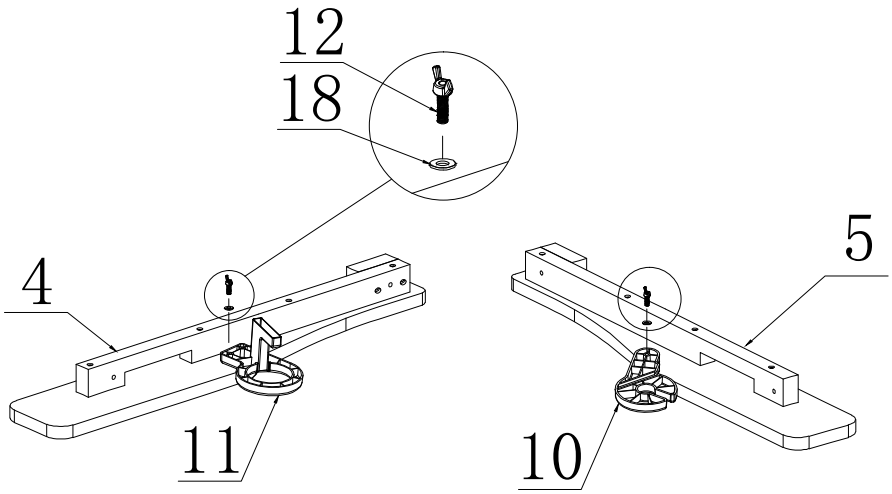


Align the mounting holes on the Right Arm ④ with the corresponding holes on the Cup Holder ⑪, and the mounting holes on the Left Arm ⑤ with the corresponding holes on the Phone Stand ⑩, insert M6×30mm bolts ⑫with M6 washers ⑱, then tighten until stable.

⑯	2X	M6*60
⑱	2X	
⑲	2X	
⑳	1X	

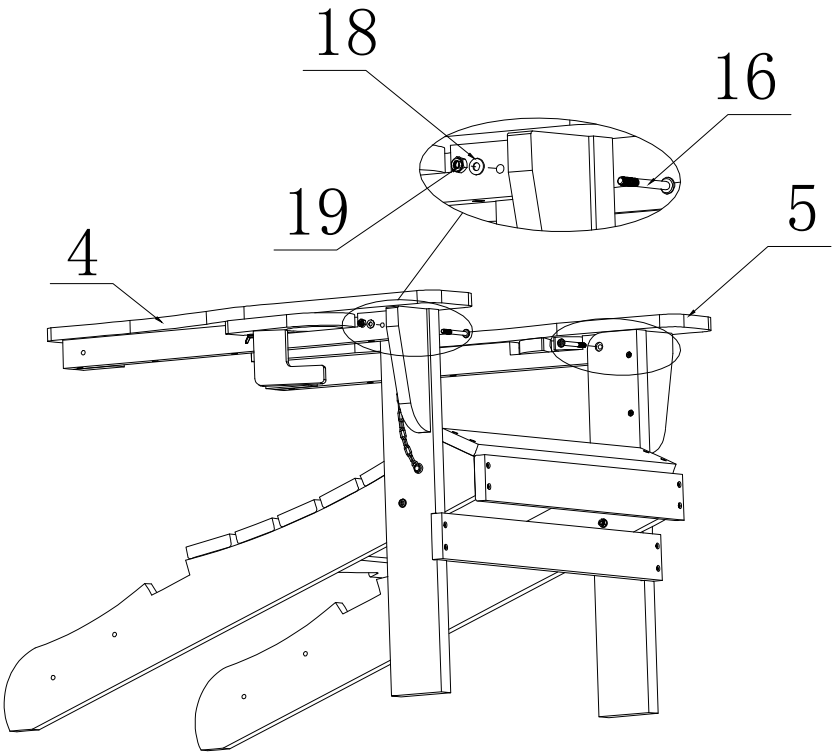


Align the mounting holes on the Right Arm ④ with the corresponding holes on the Right Leg ②, insert M6×60 bolts ⑯, secure with washers ⑱ and nuts ⑲, then tighten using the Allen key ⑳ until stable.
Repeat the above steps to secure the Left Arm.

⑥ 1X	
⑦ 1X	
⑬ 2X ST6*40	
⑰ 2X M6*80	
⑱ 2X	
⑲ 2X	
⑳ 1X	

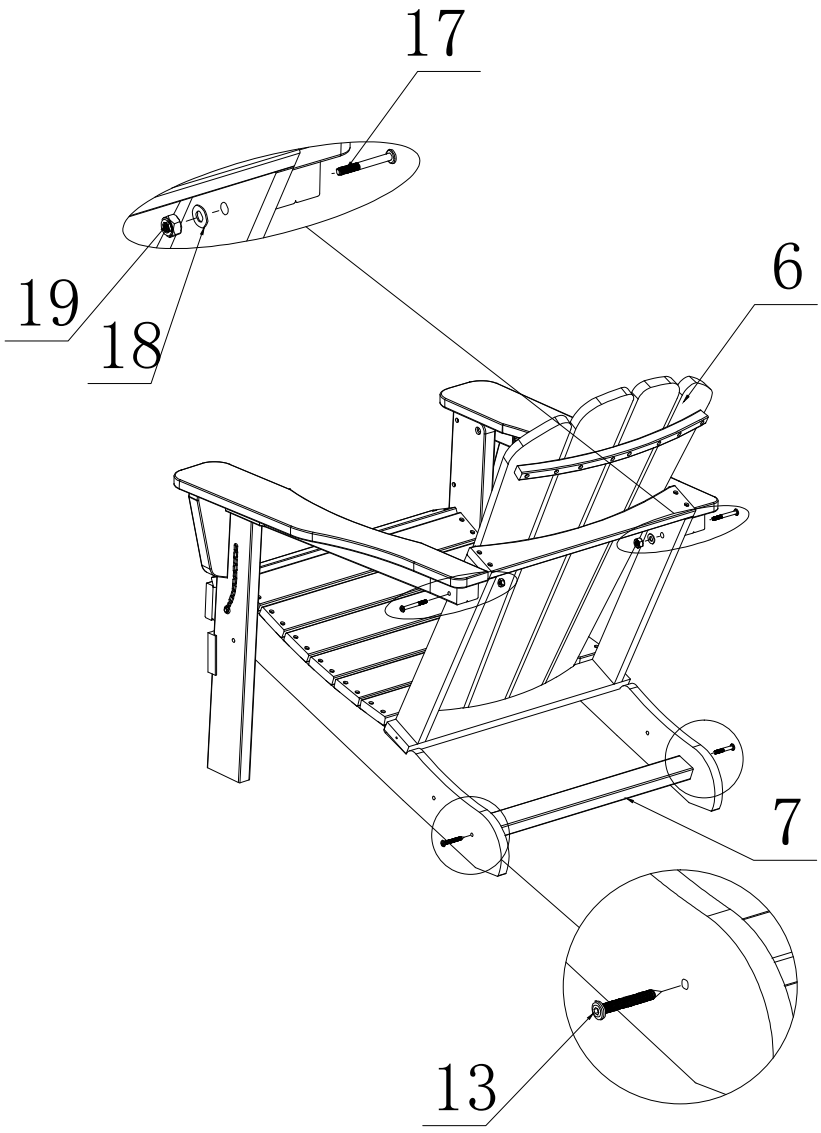

Use ST6×40 screws to secure the Rear Bar ⑦.
Align the holes of the Back Panel ⑥ with the holes on both Side Arms, insert M6×80 bolts ⑰, secure with washers ⑱ and nuts ⑲.
Please note: do not fully tighten the screws at this stage to allow for position adjustment in the next step.

⑨	2X	
⑭	2X	ST6*50
⑮	2X	M6*50
⑱	2X	
⑲	2X	
⑳	1X	

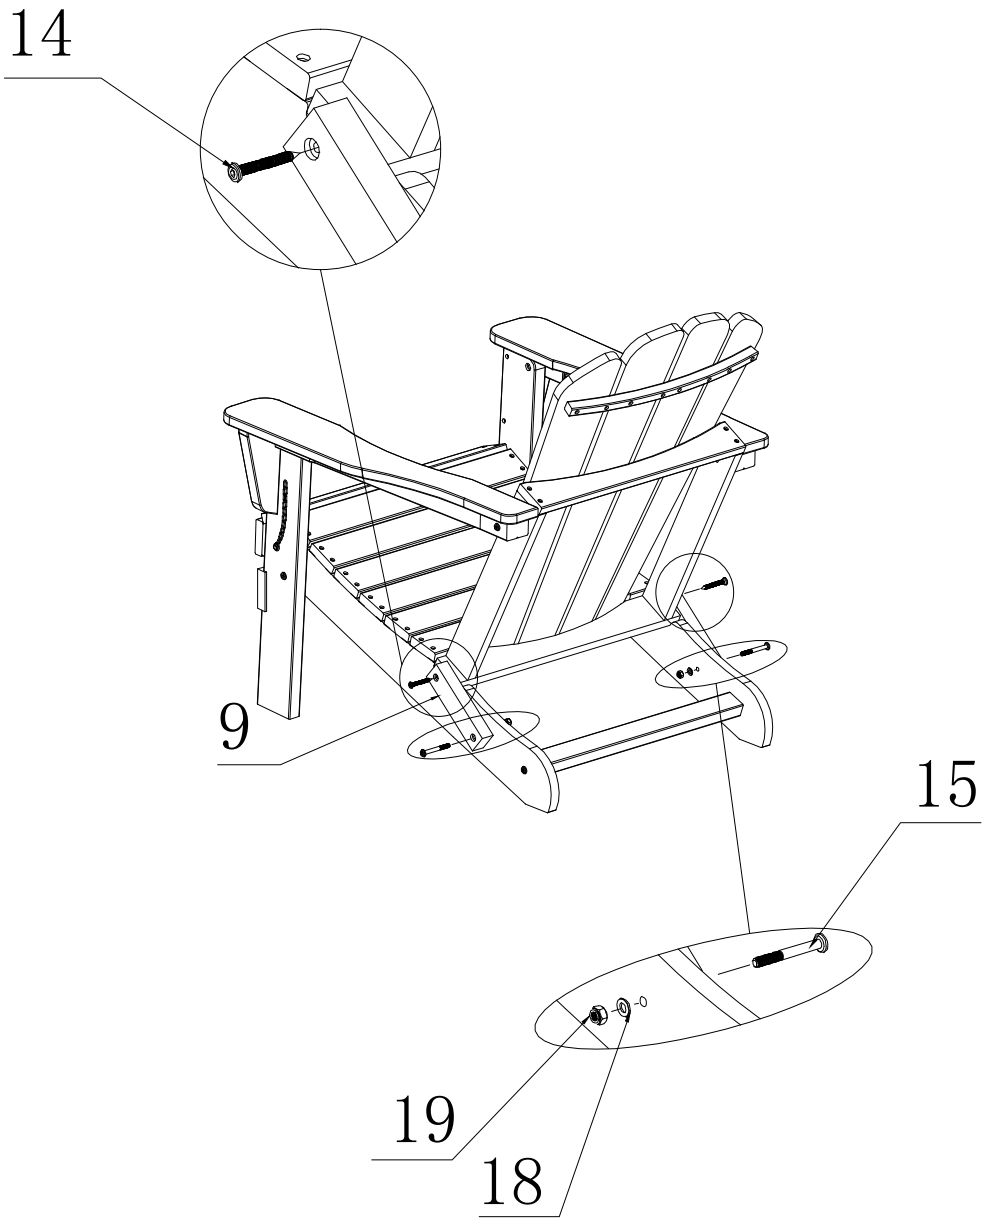

As shown in the image, align the holes of Bracket ⑨, insert the M6×50 bolts ⑮, secure with washers ⑱ and nuts ⑲. Then use the St6×50 screws ⑭ to fix Bracket ⑨ at the Back Panel ⑥.
Ensure all bolts are in position before tightening them.

Folding Chair

Pull the stick out of both legs to fold this chair as below

