



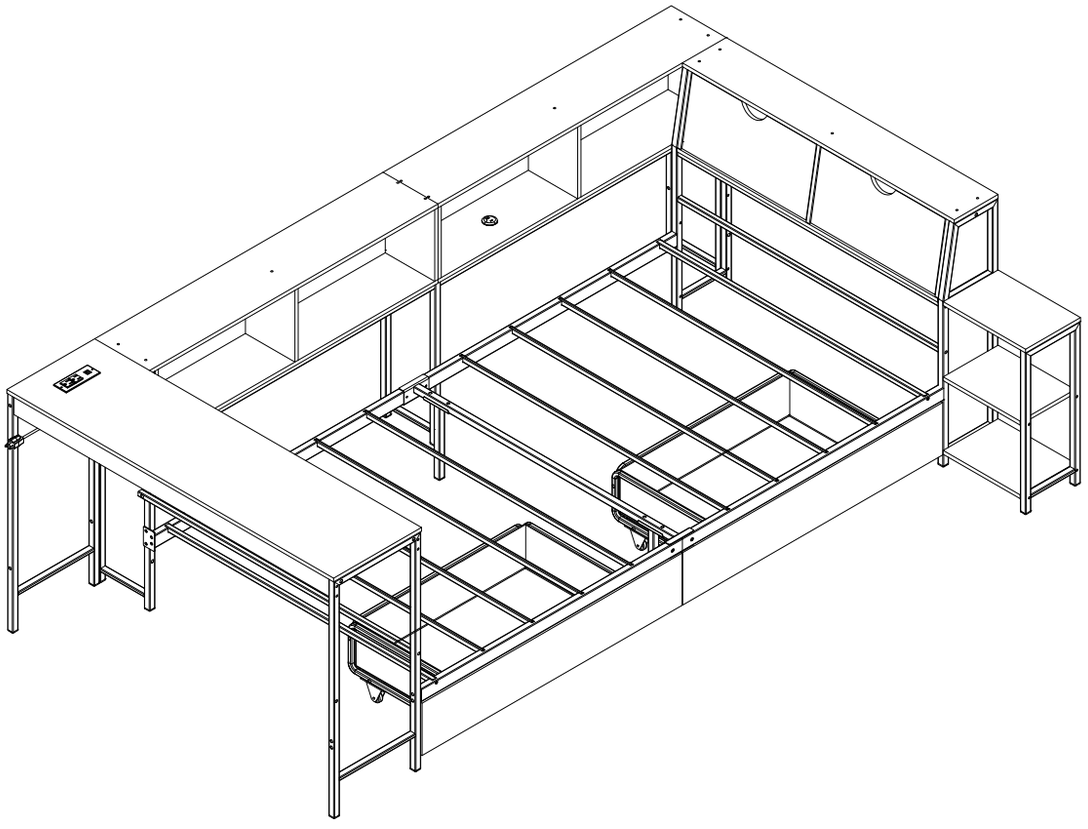











A	 M5*40mm	51	B	 M6*15mm	4	C	 M6*25mm	18
D	 M6*28mm	35	E	 M6*60mm	2	F	 M6	9
G	 M6*40mm	13	H	 M6	2	I	 M6*50mm	3
J	 M4*14mm	4	K	 M4*18mm	8	L		2
M	 M4*10mm	13	N	 M6*40mm	8	O	 15cm	2
P	 1.0	8	Q	 φ6*M4*20mm	4	R	23cm 	2
S		4	T		1	U		1
V		1	W	 M6	1	X	 M4	1
Y	 M6	1	Z		1	a	 M4	32
b		1	c	 M4	1	d	 M4*28mm	32
e		1						

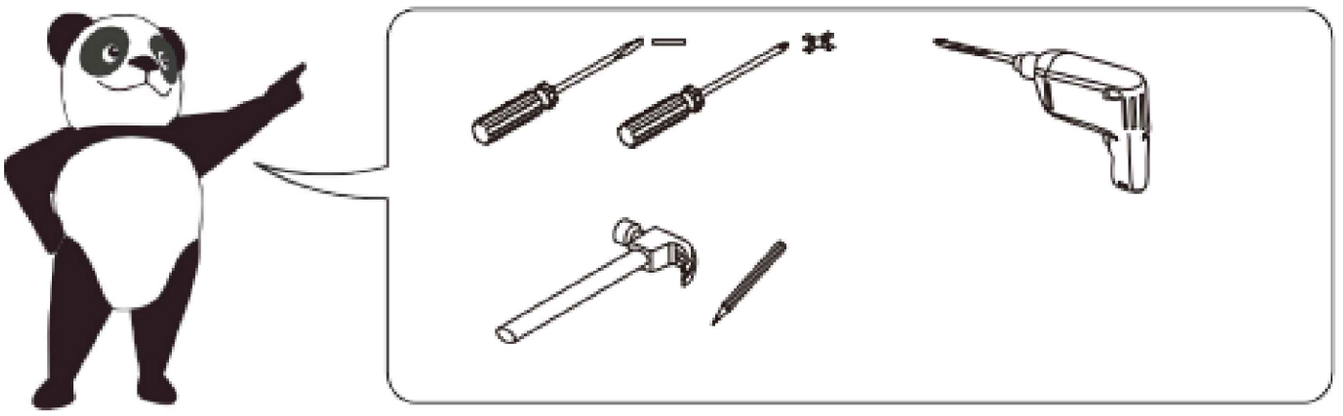

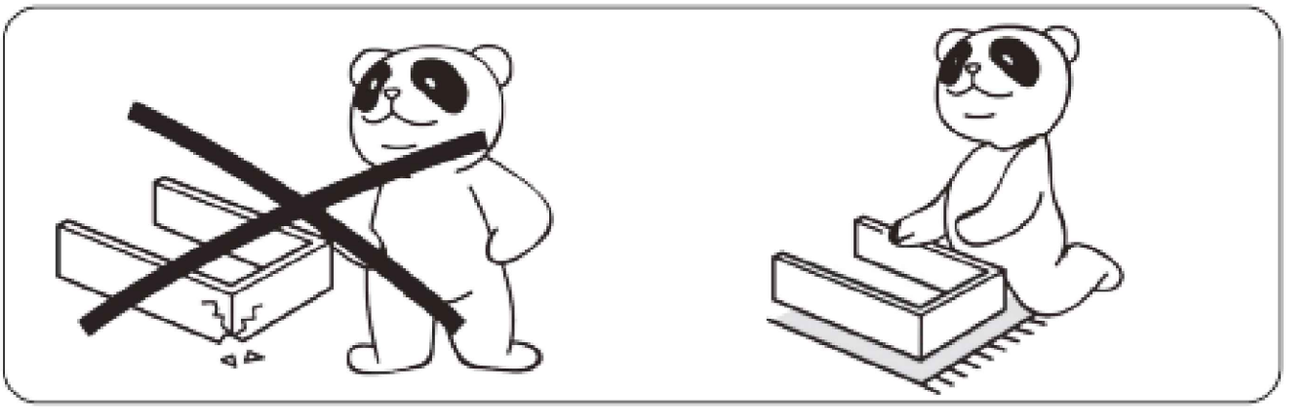

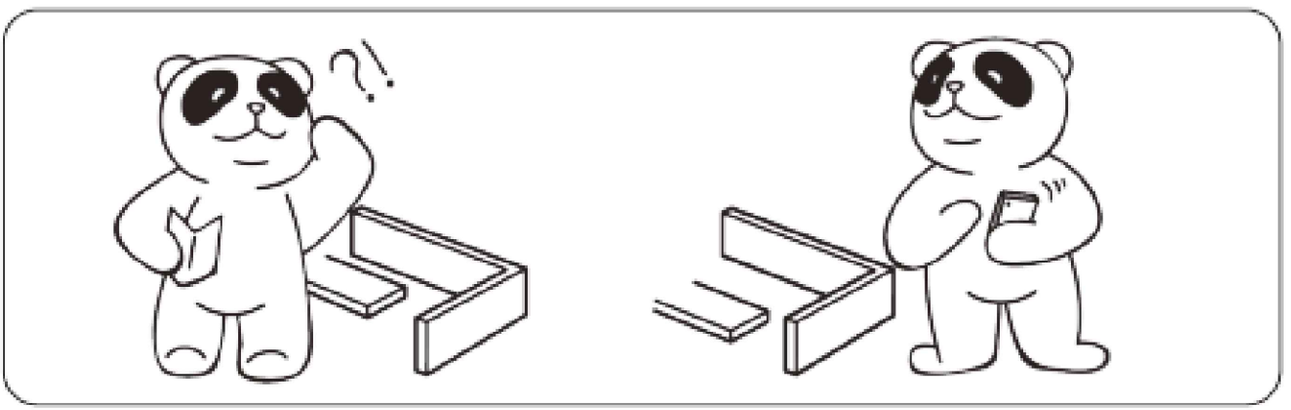


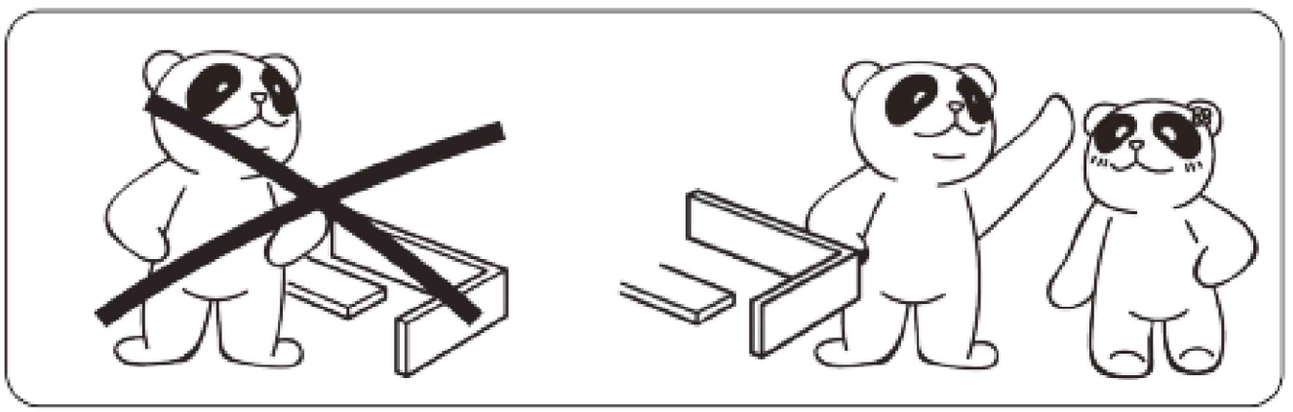

Note:

1.Should be assembled on flat ground to keep balance.


2.Before completing the installation, do not tighten the screws.

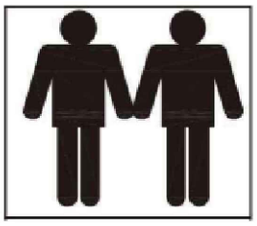

It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

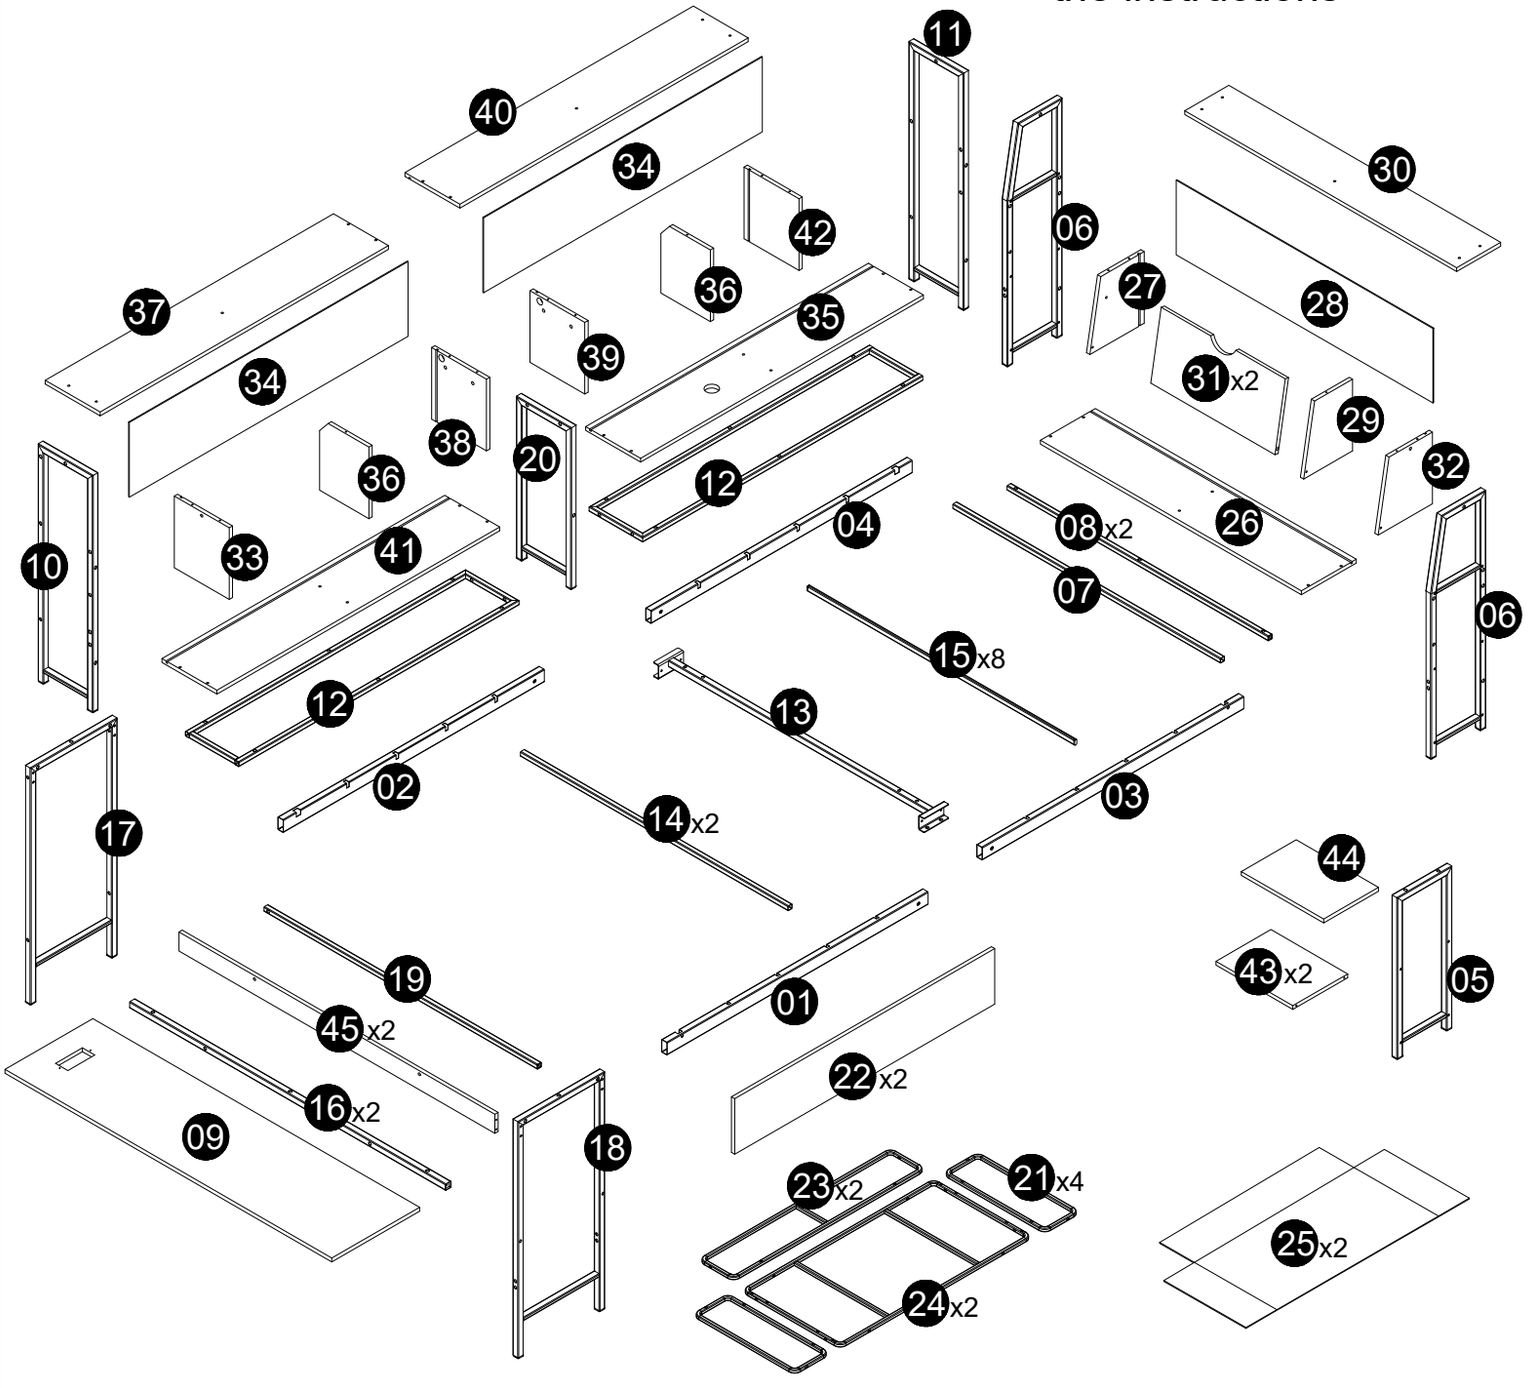


1

L		2pcs
M	M4*10mm	4pcs

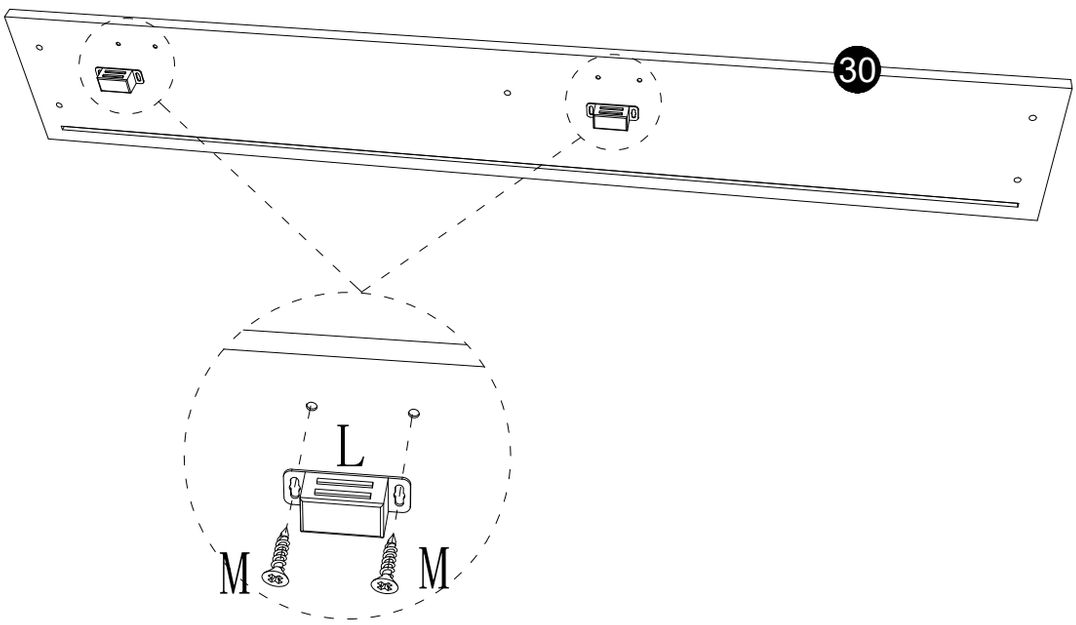


2

L		2pcs
M	M4*10mm	4pcs

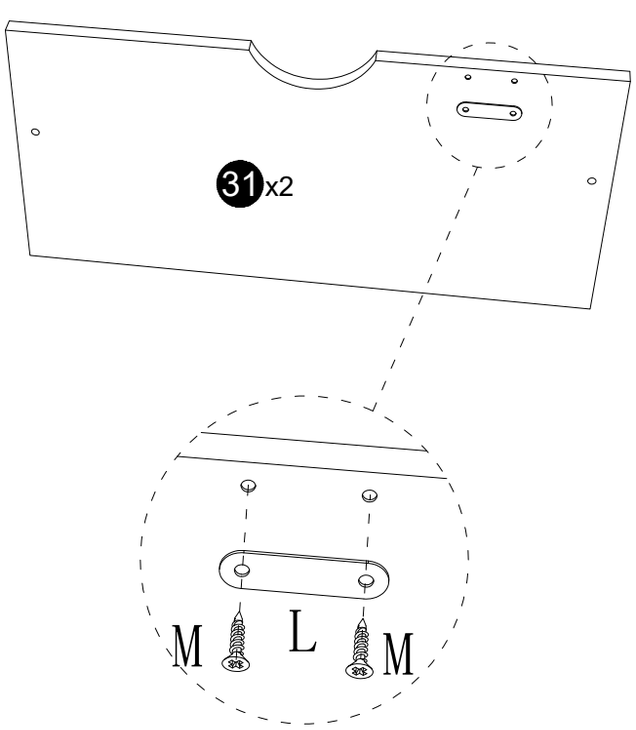


3

A	M5*40mm 6pcs

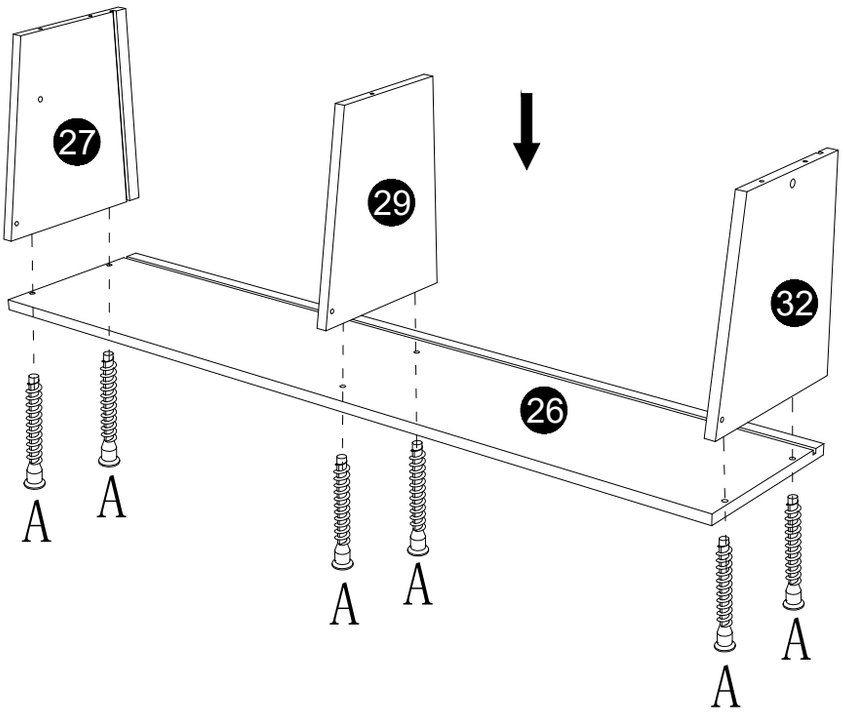


4

A	M5*40mm 5pcs

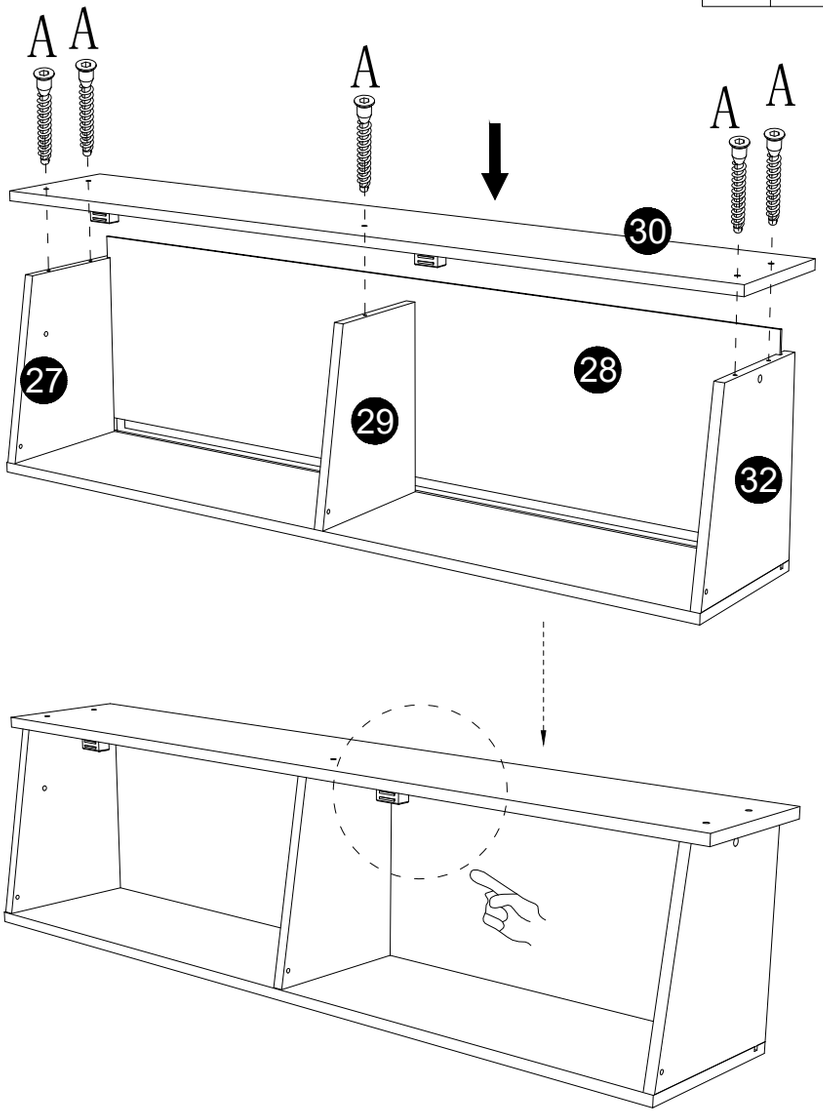


5

A	M5*40mm 10pcs

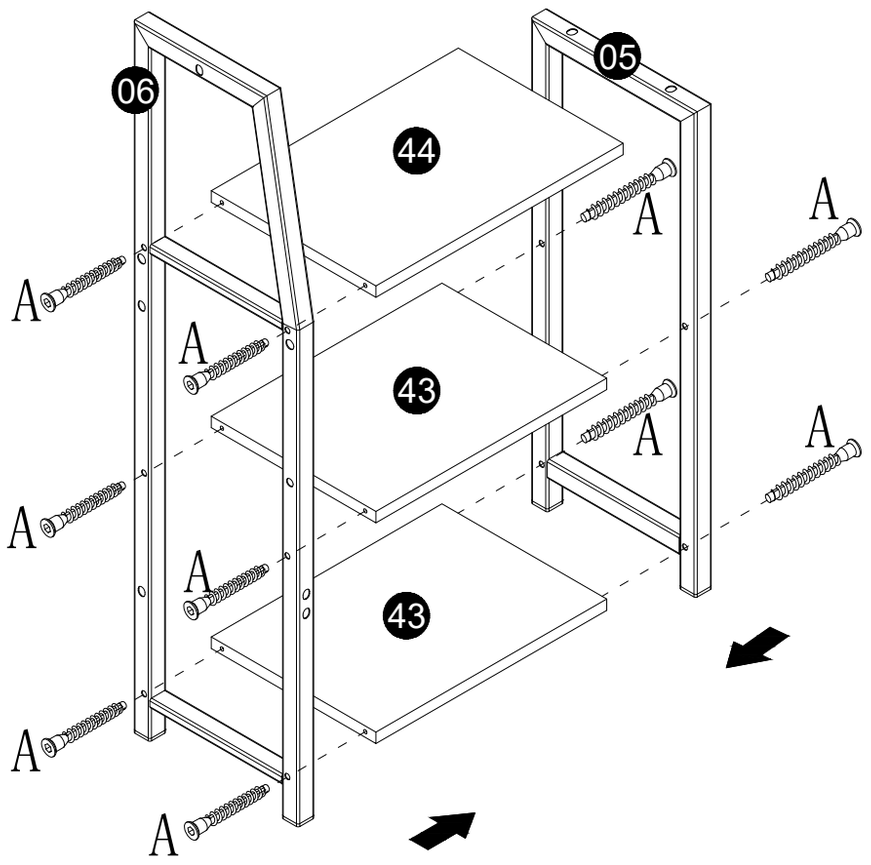


6

D	M6*28mm 2pcs

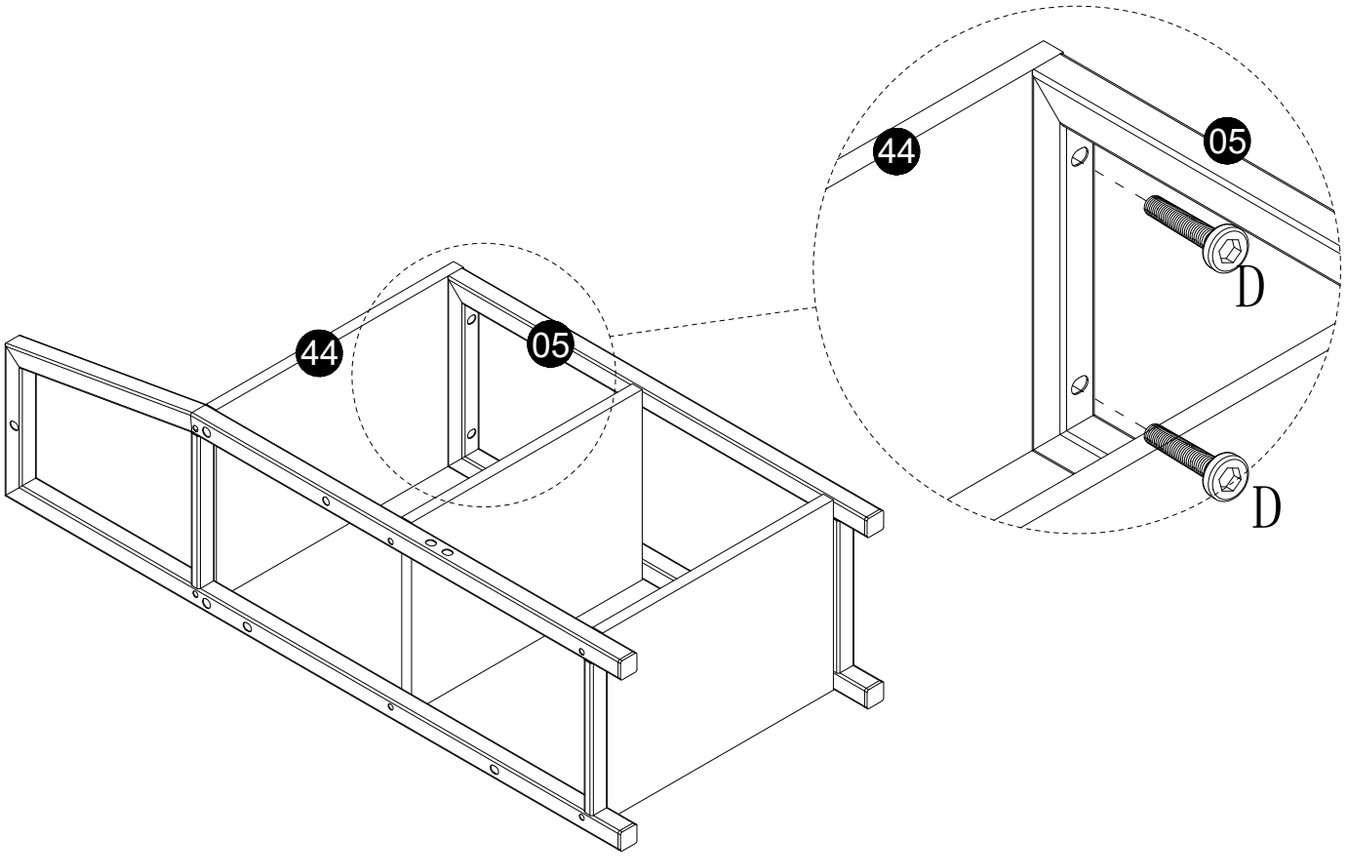


7

N	M6*40mm 4pcs

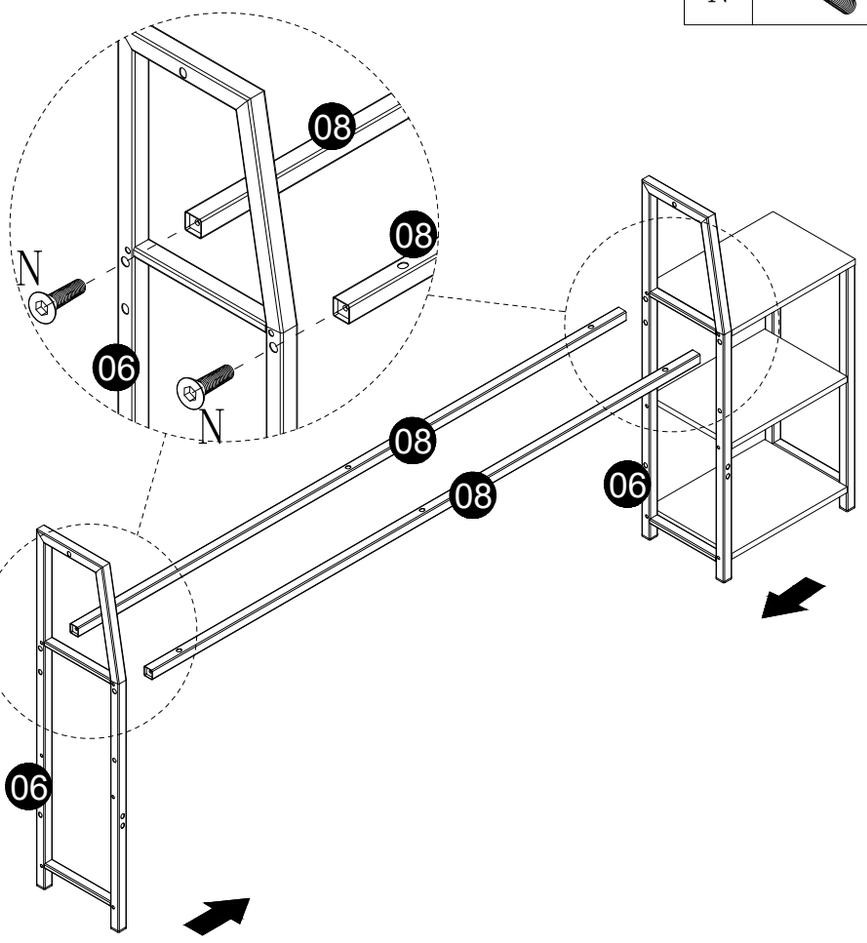


8

C	M6*25mm 6pcs

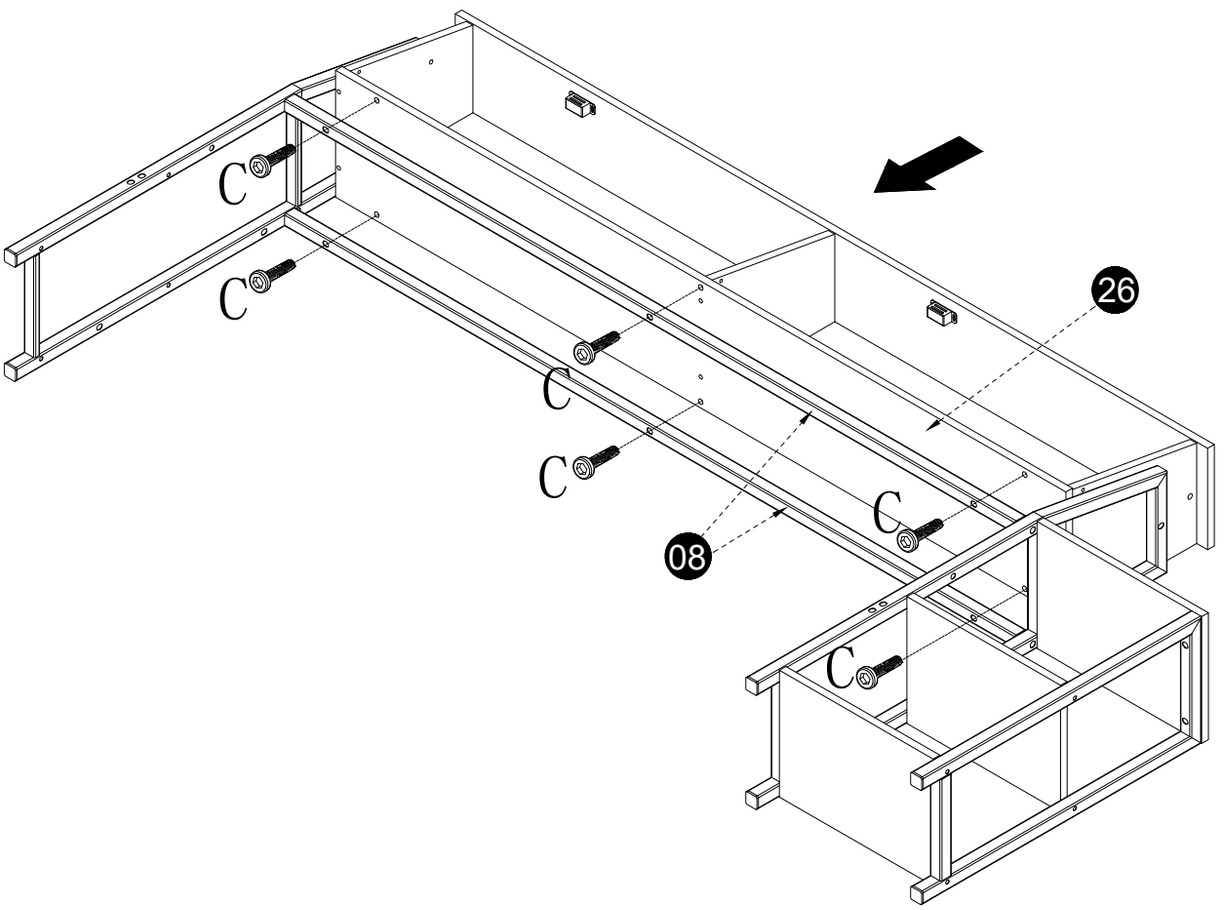


9

D	M6*28mm	2pcs
G	M6*40mm	2pcs

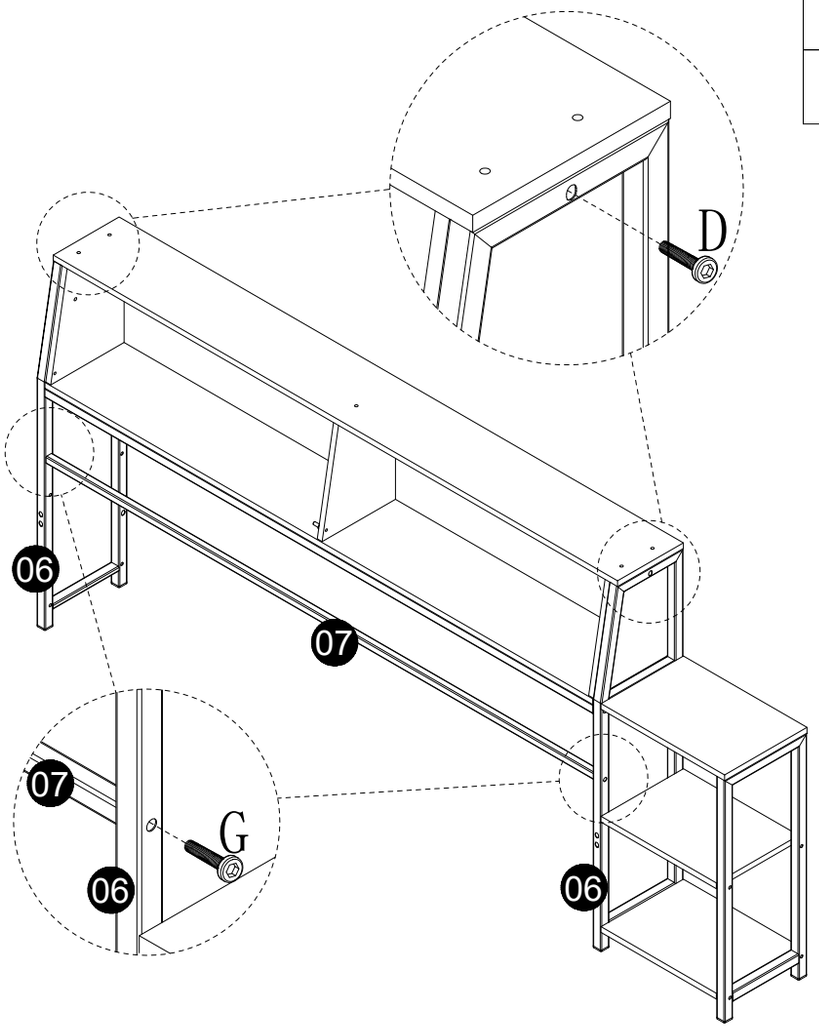


10

S		4pcs

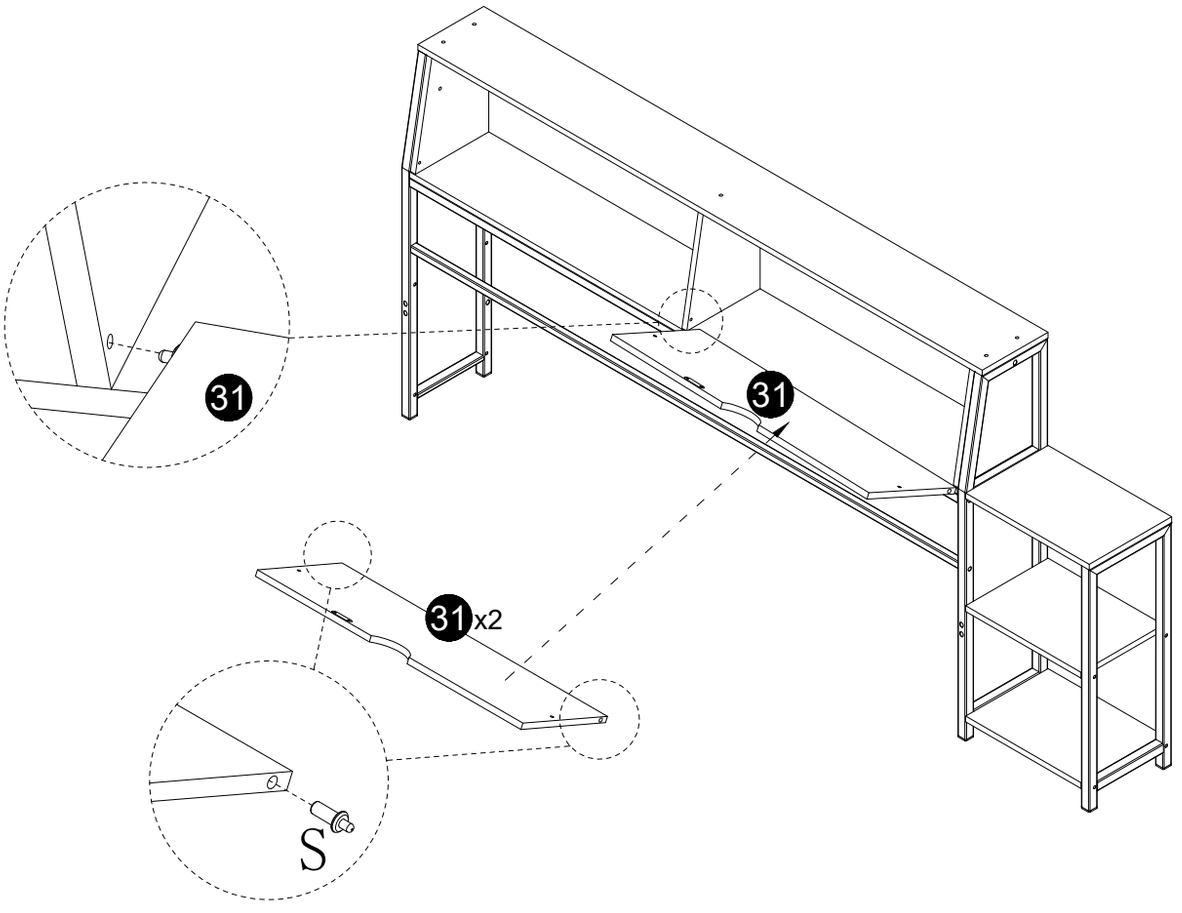


11

J	M4*14mm	4pcs
O		2pcs

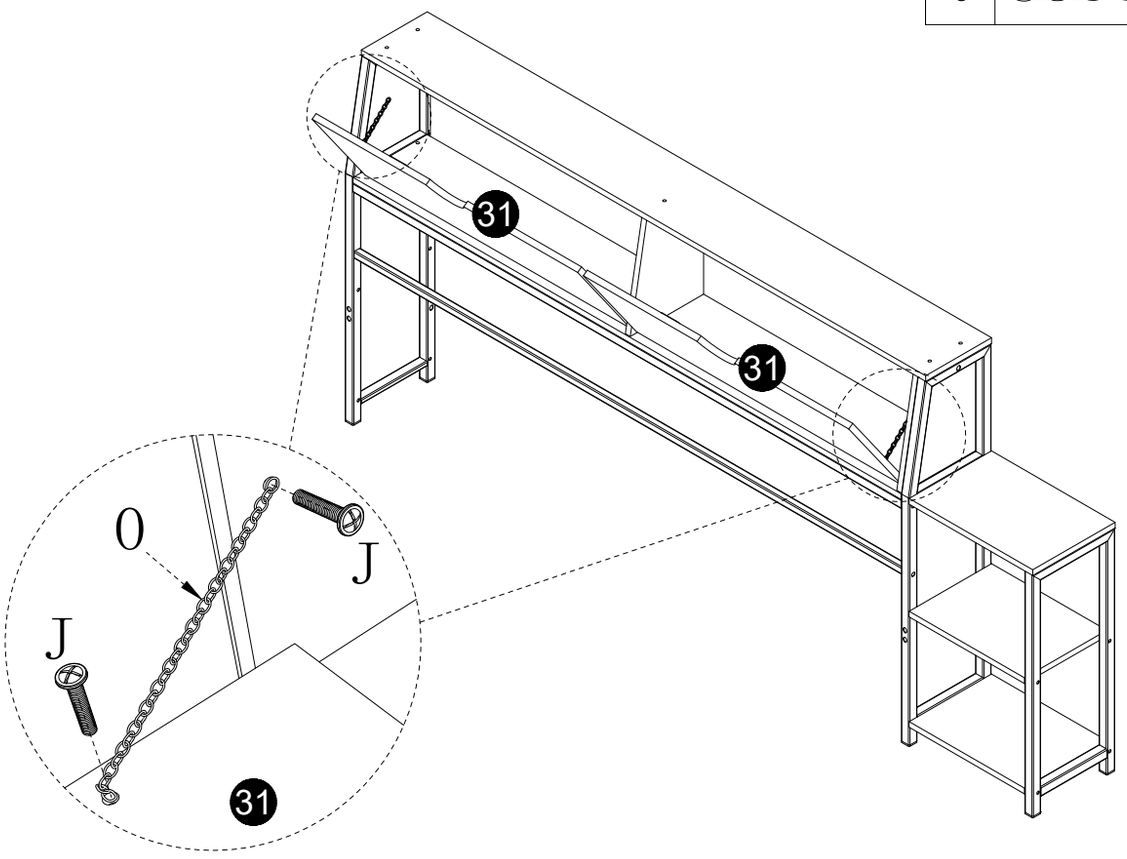


12

D	M6*28mm	4pcs
F	M6	4pcs
R	23cm	2pcs

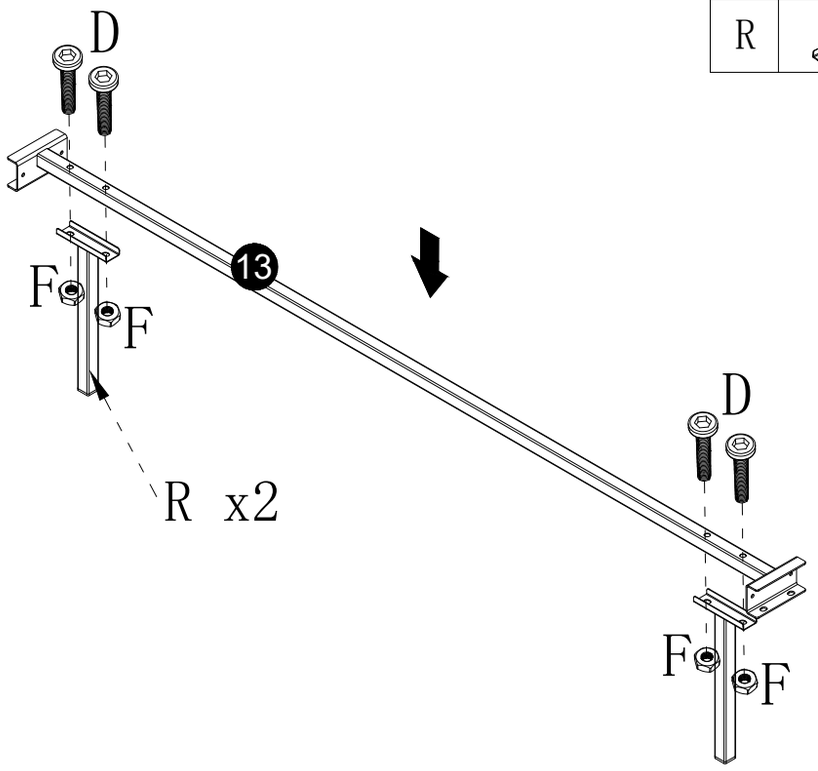


13

Q	φ6*M4*20mm 4pcs

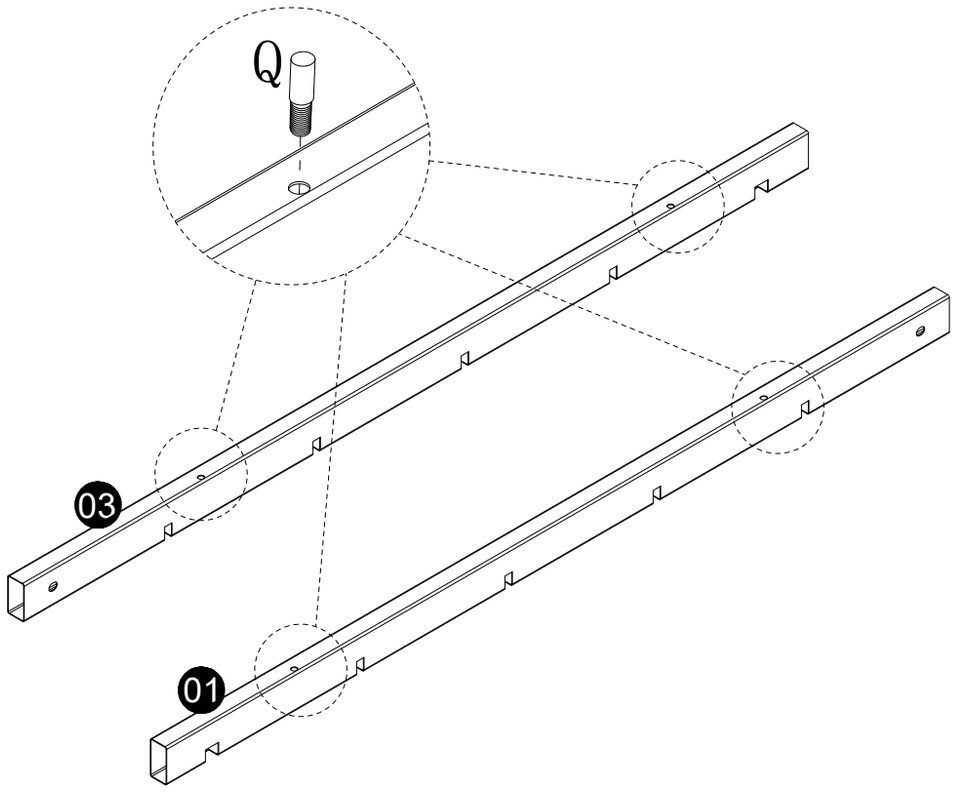


14

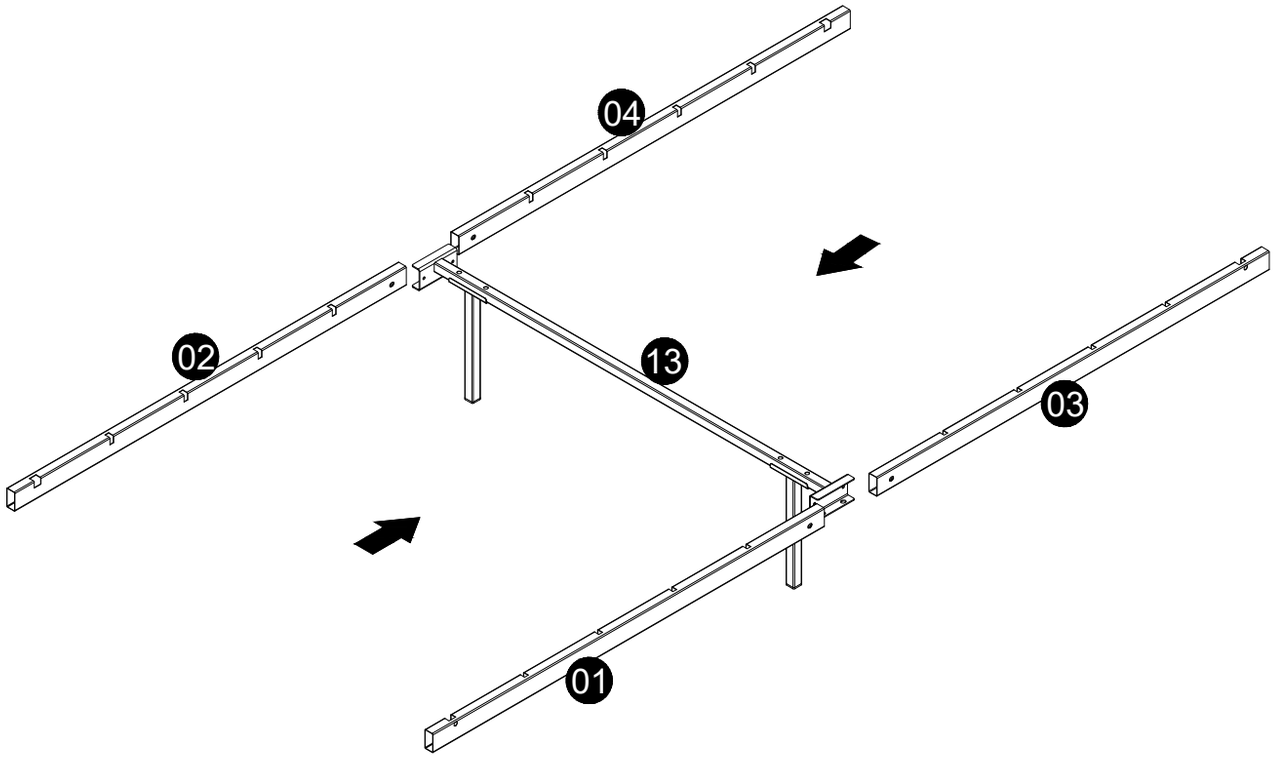


15

D	M6*28mm 4pcs

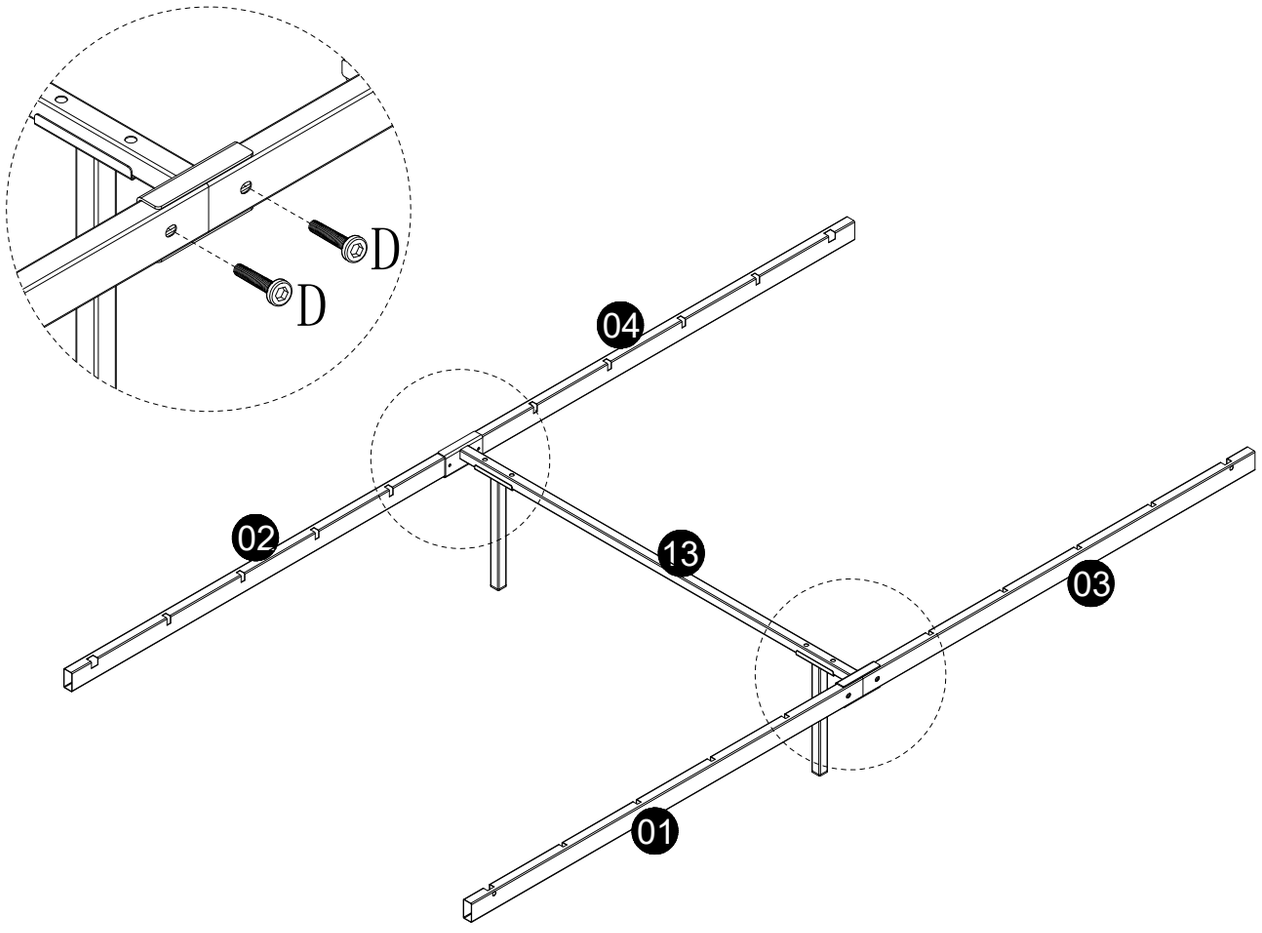


16

A	M5*40mm 6pcs

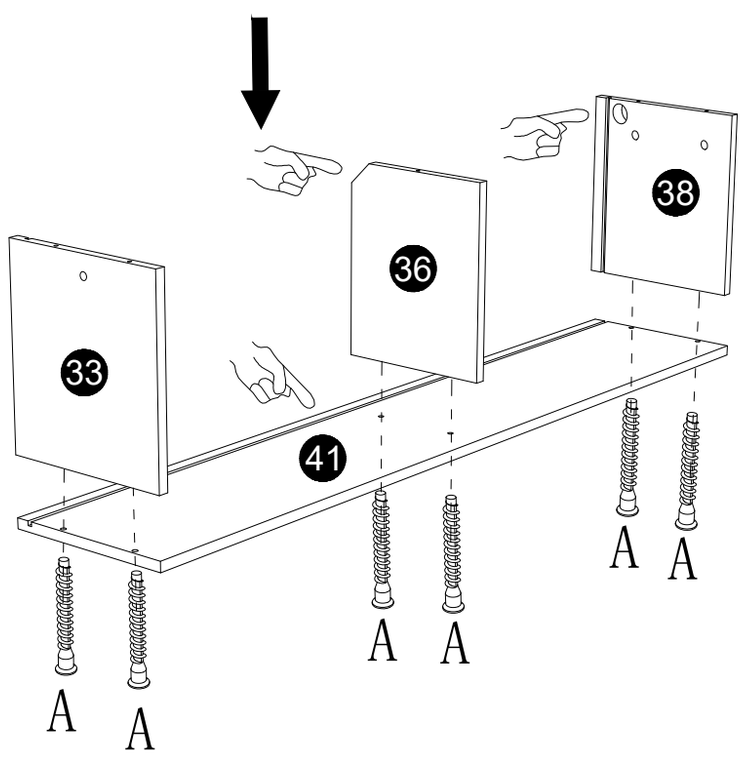


17

A	M5*40mm 5pcs

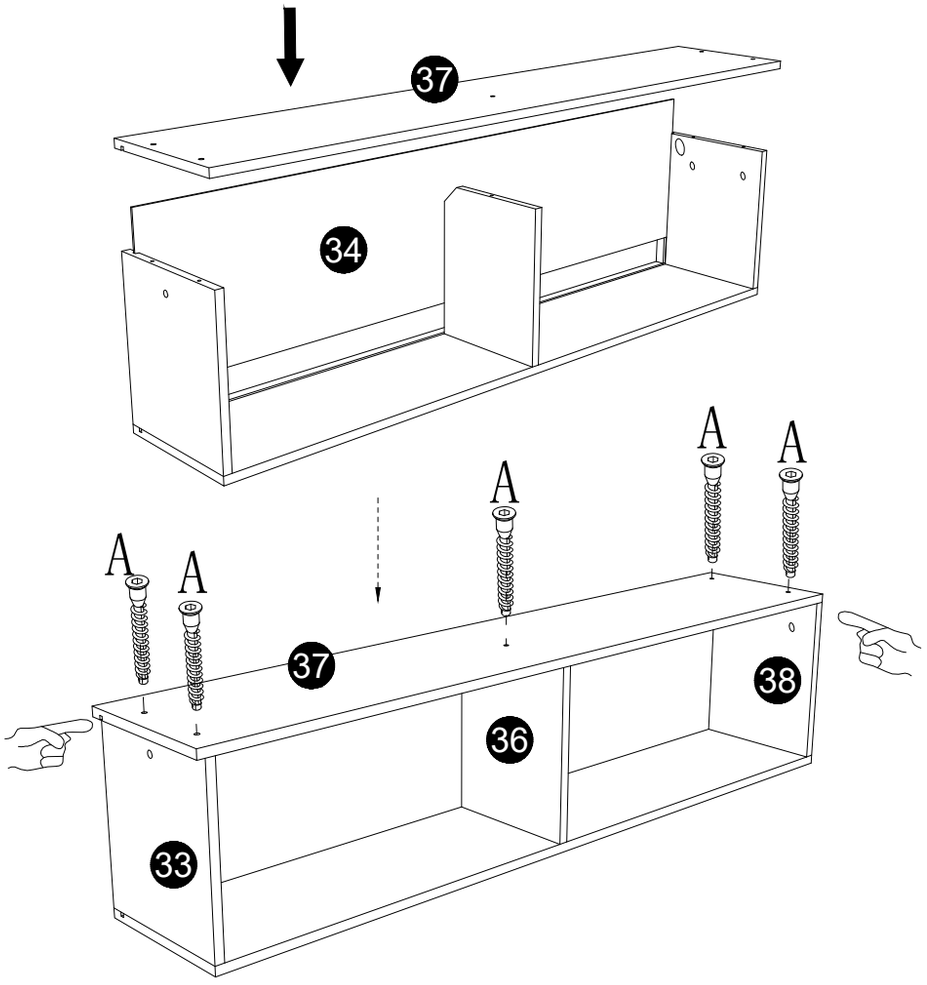


18

A	M5*40mm 6pcs

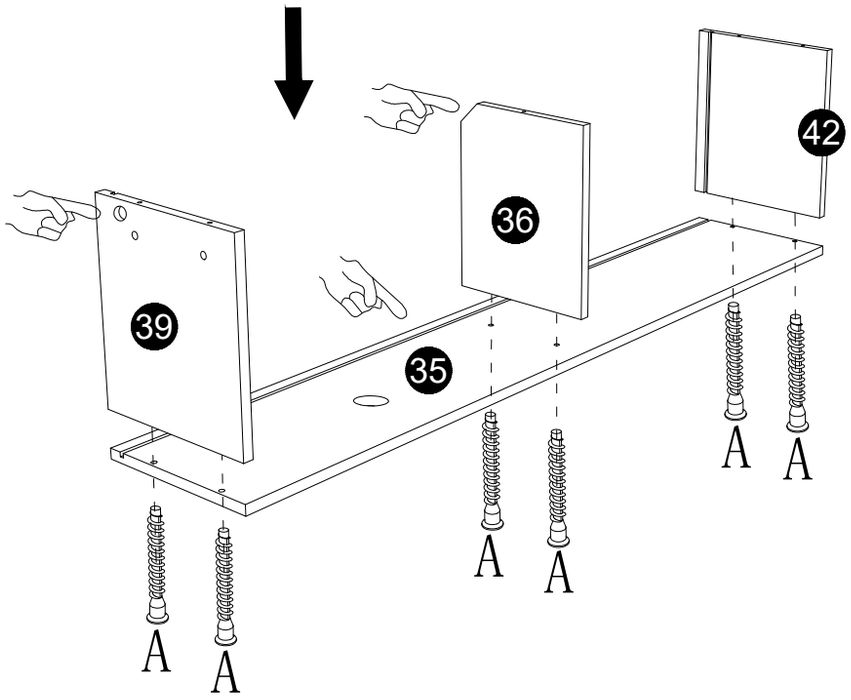


19

A	M5*40mm	5pcs

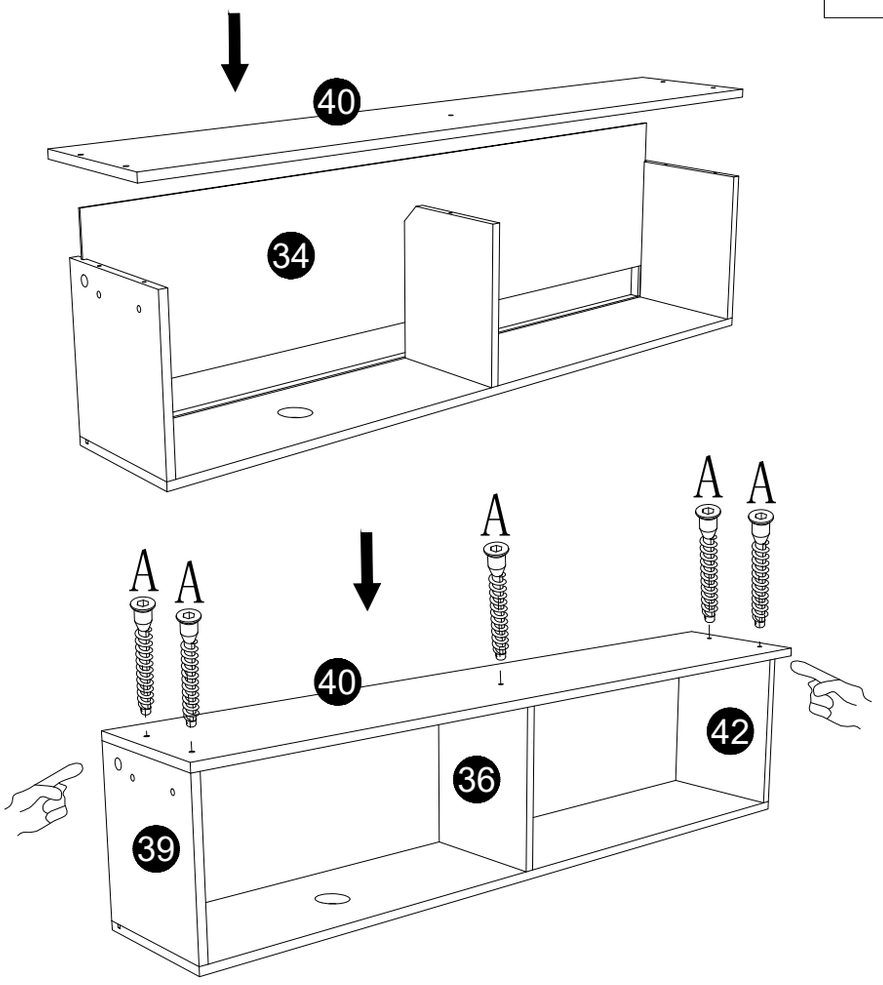


20

E	M6*60mm	2pcs
F	M6	2pcs
N	M6*40mm	4pcs

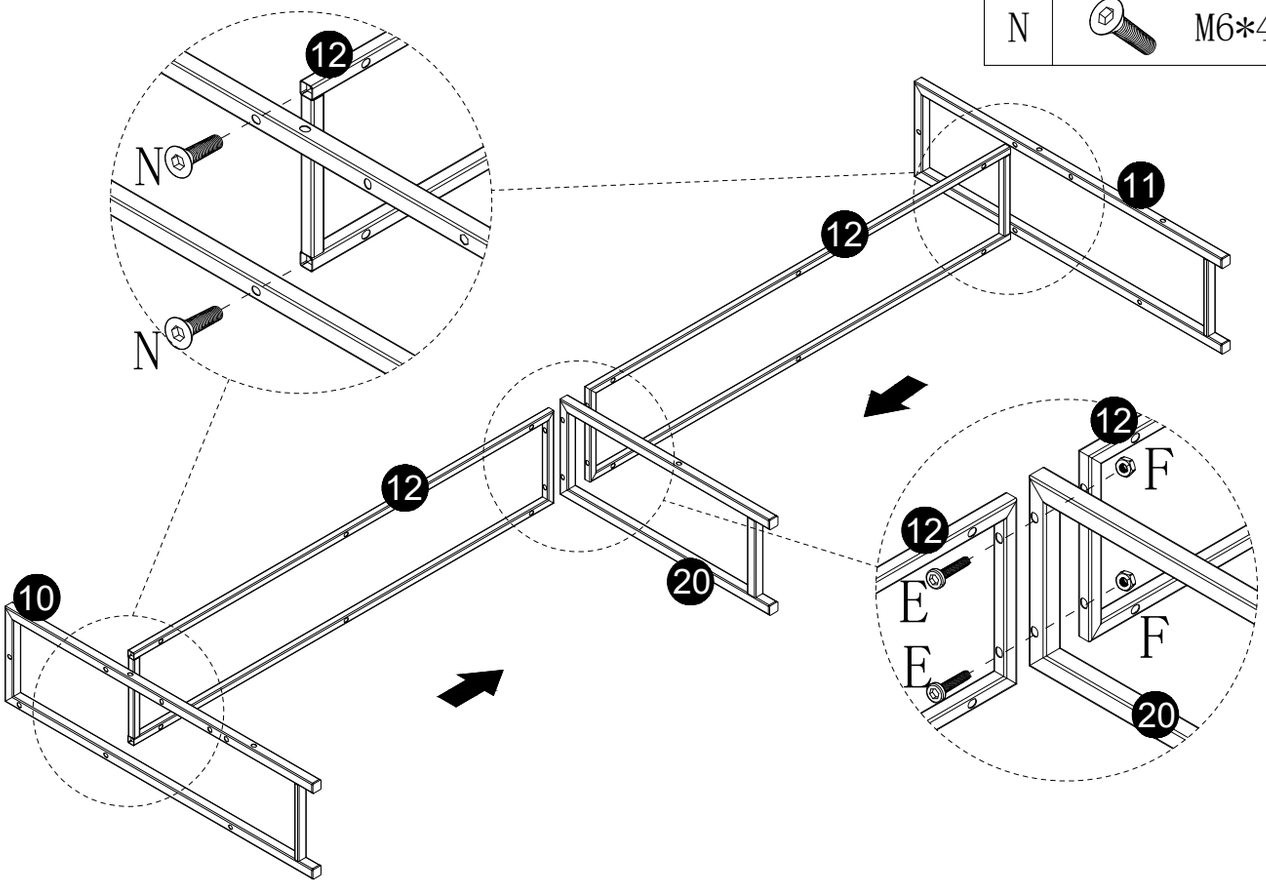


21

B	M6*15mm	2pcs
H	M6*15mm	2pcs

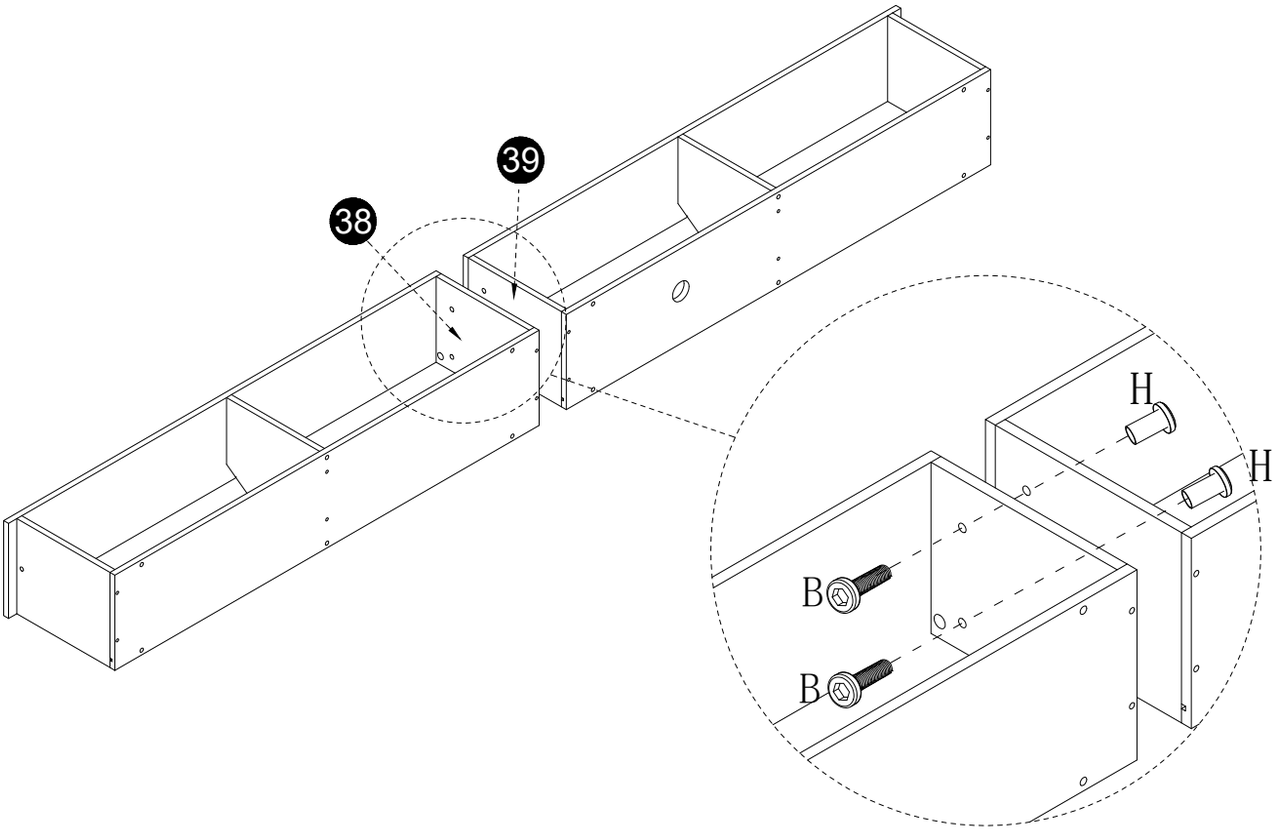


22

C	M6*25mm	12pcs

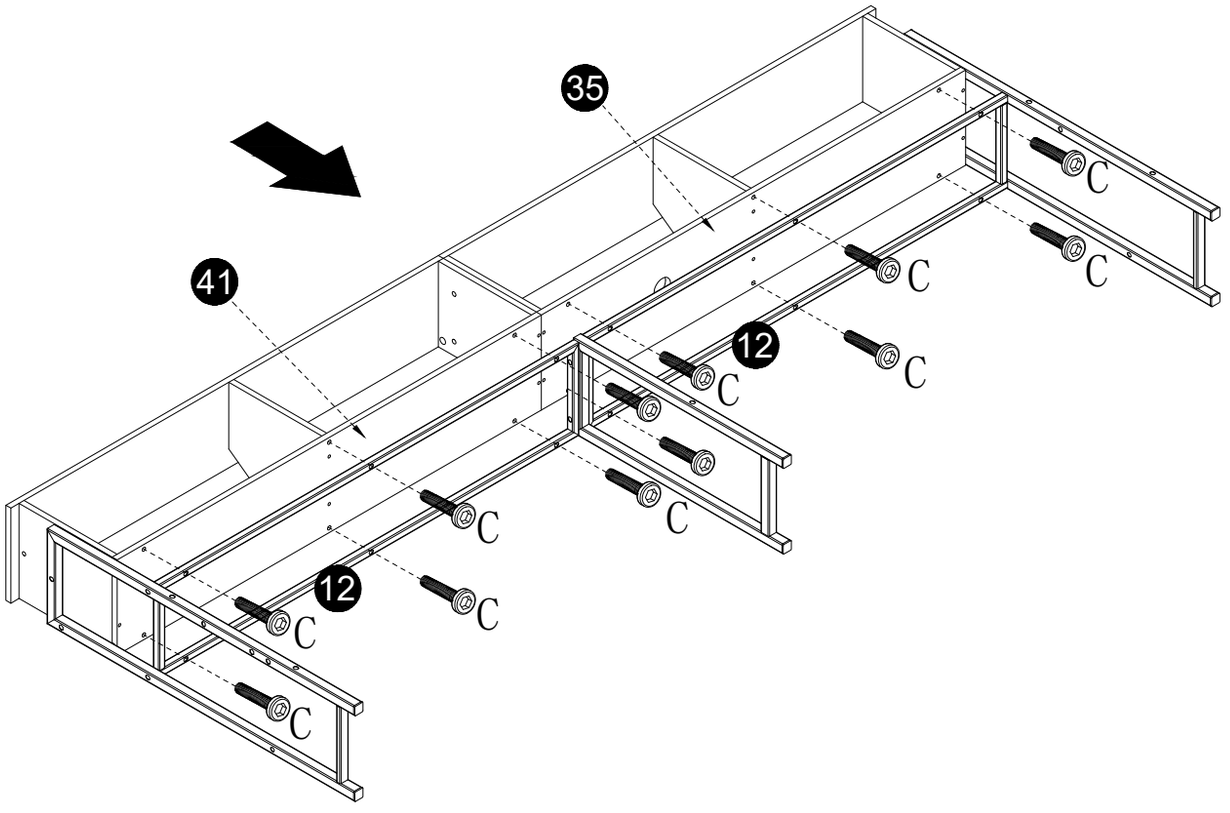


23

T		1pc
D		M6*28mm 2pcs

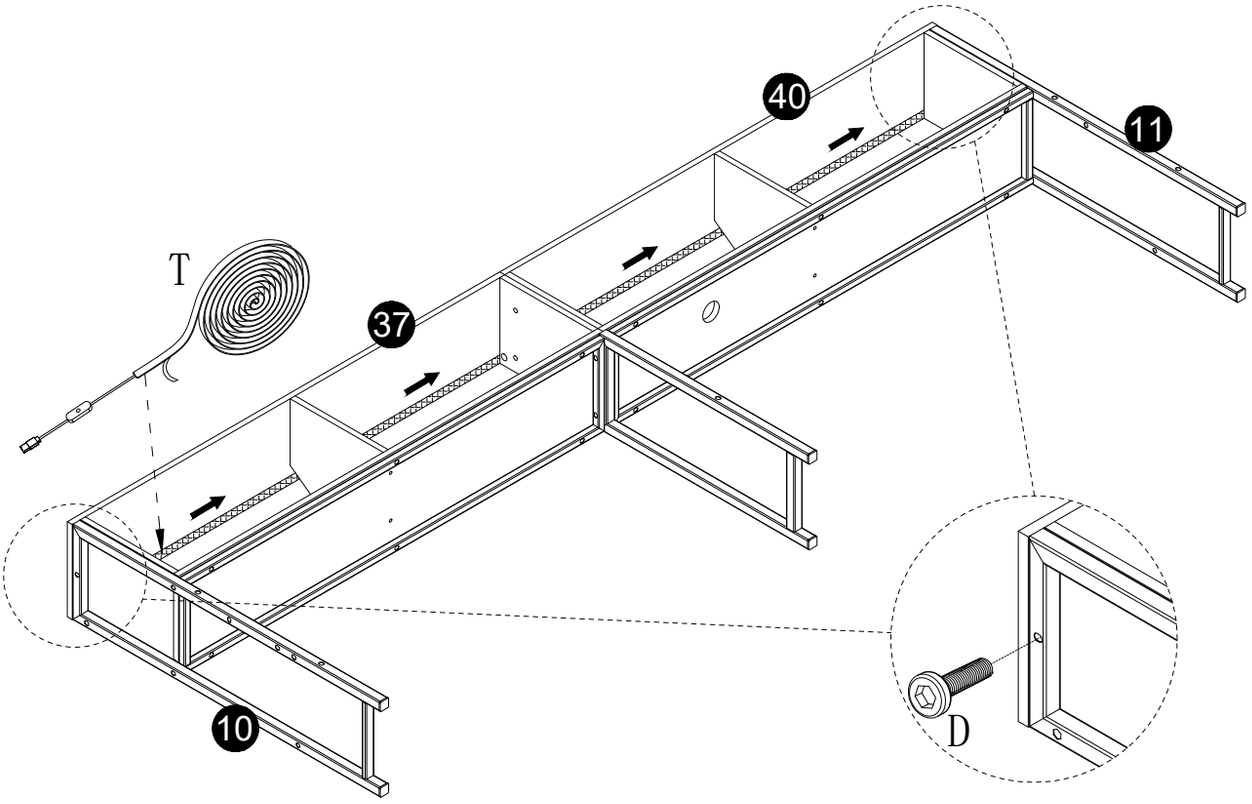


24

G		M6*40mm 4pcs

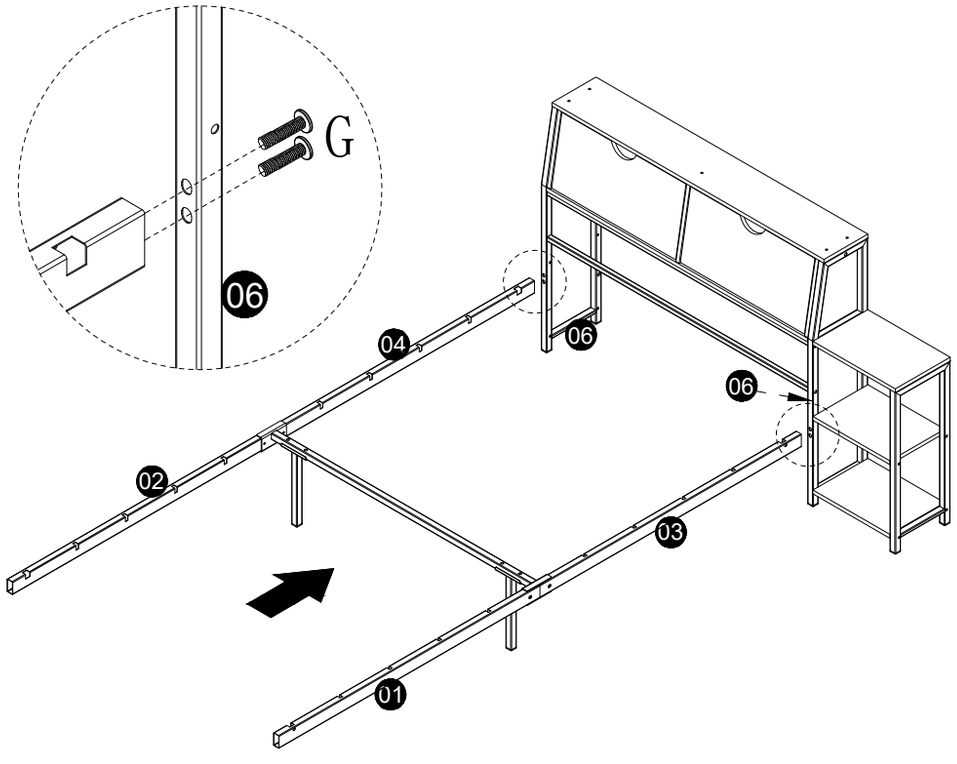


25

D	M6*28mm	1pc
I	M6*50mm	2pcs
F	M6	2pcs

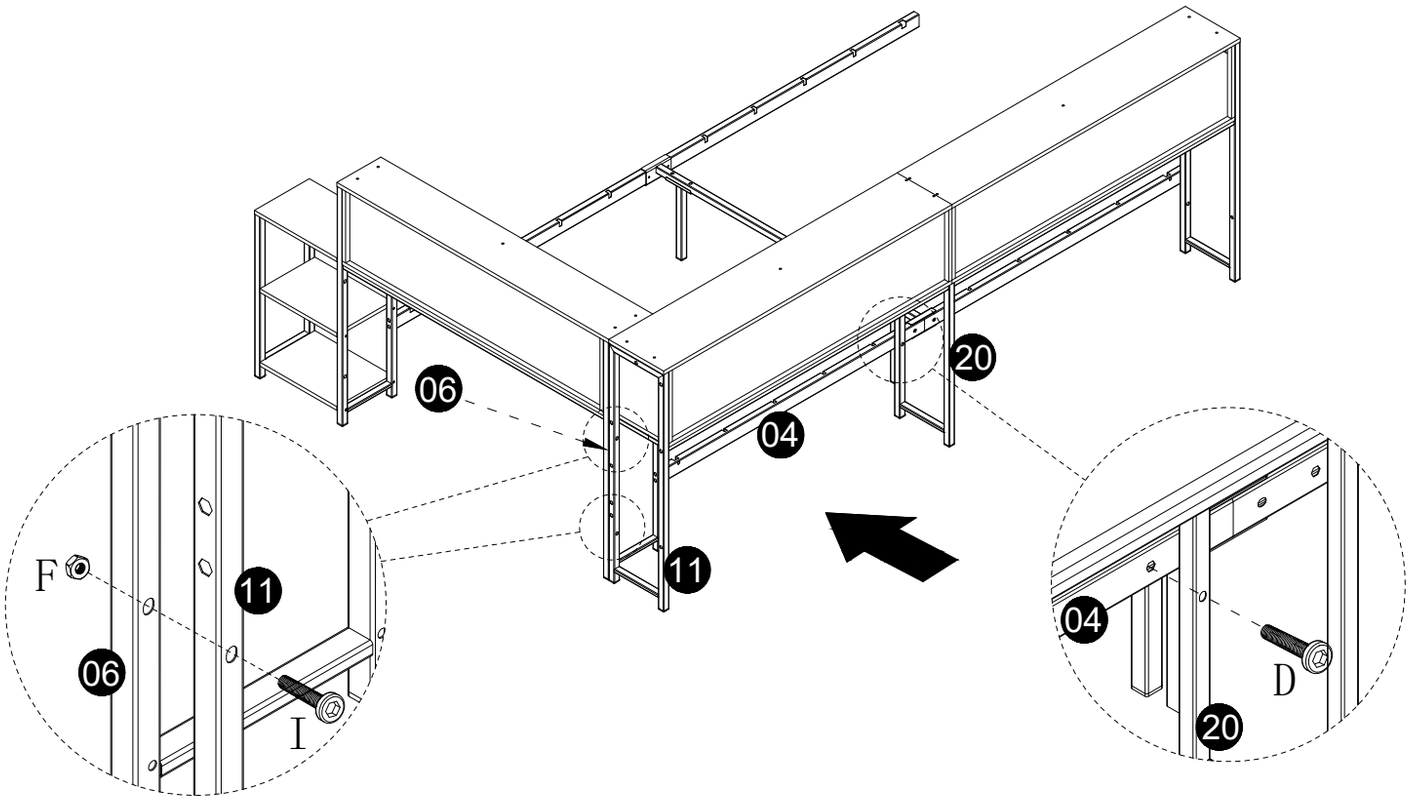


26

B	M6*15mm	2pcs
D	M6*28mm	2pcs
b		1pc

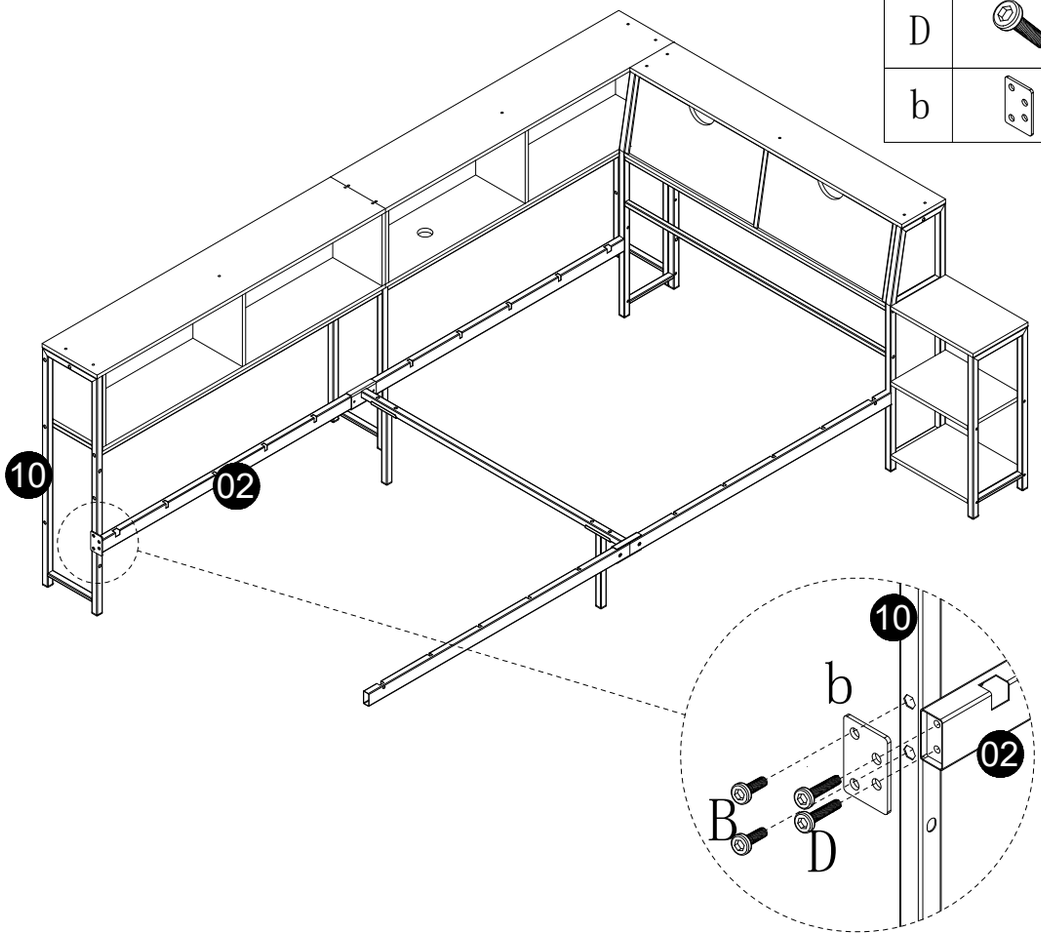


27

F		M6	1pc	D	M6*28mm 1pc
				G	M6*40mm 2pcs
				I	M6*50mm 1pc

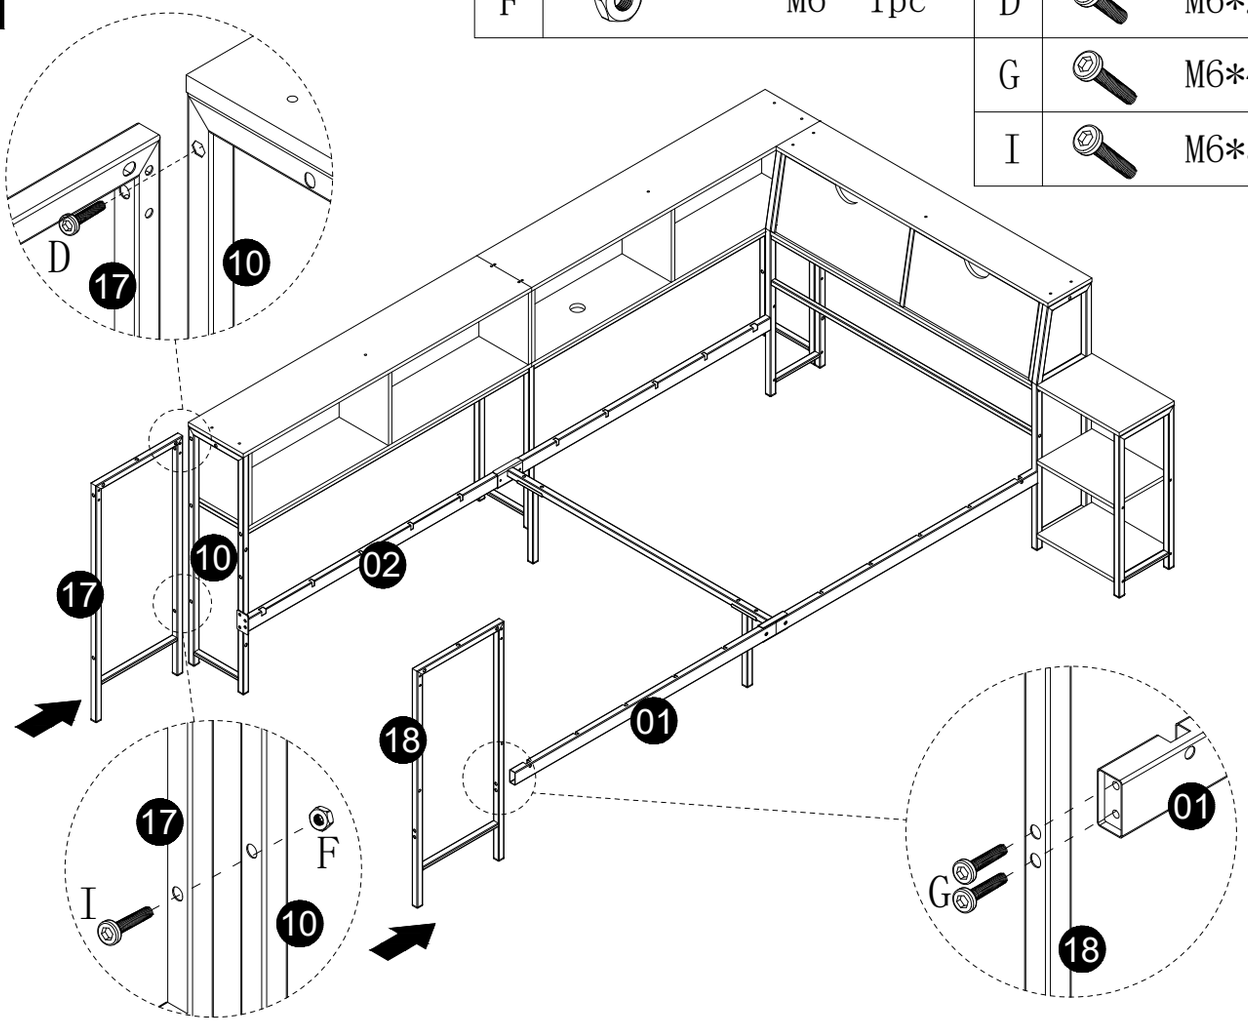


28

D		M6*28mm	1pc
G		M6*40mm	1pc

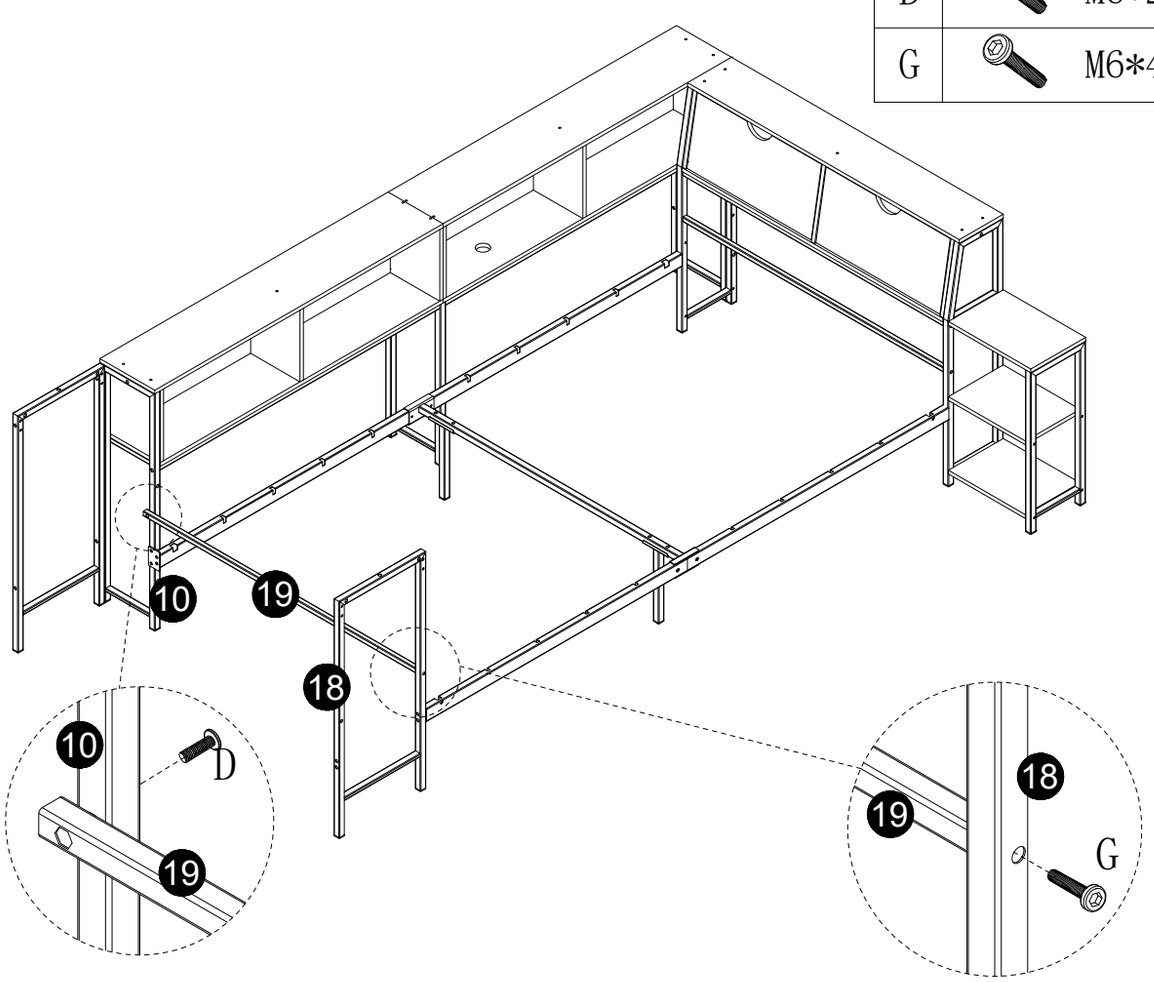

29


D	M6*28mm 4pcs

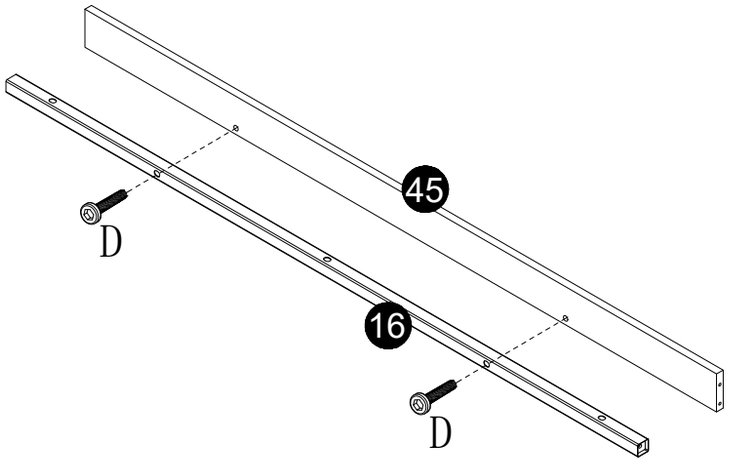

x2


30

D	M6*28mm 6pcs

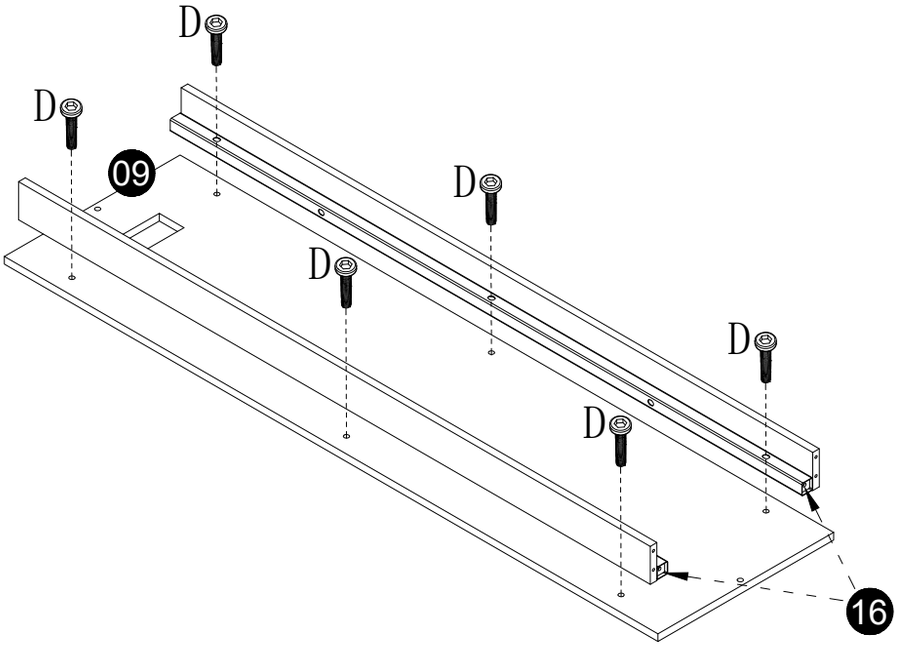


31

D	M6*28mm	2pcs

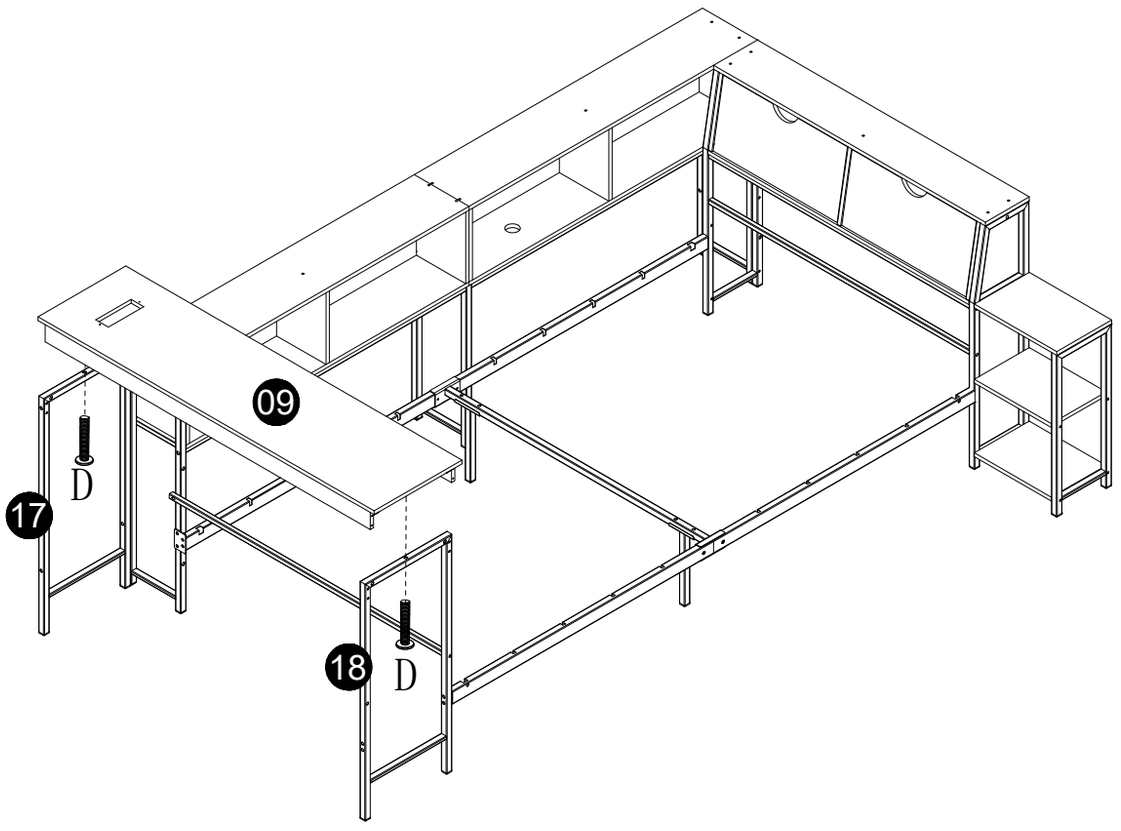


32


A	M5*40mm	8pcs
G	M6*40mm	4pcs

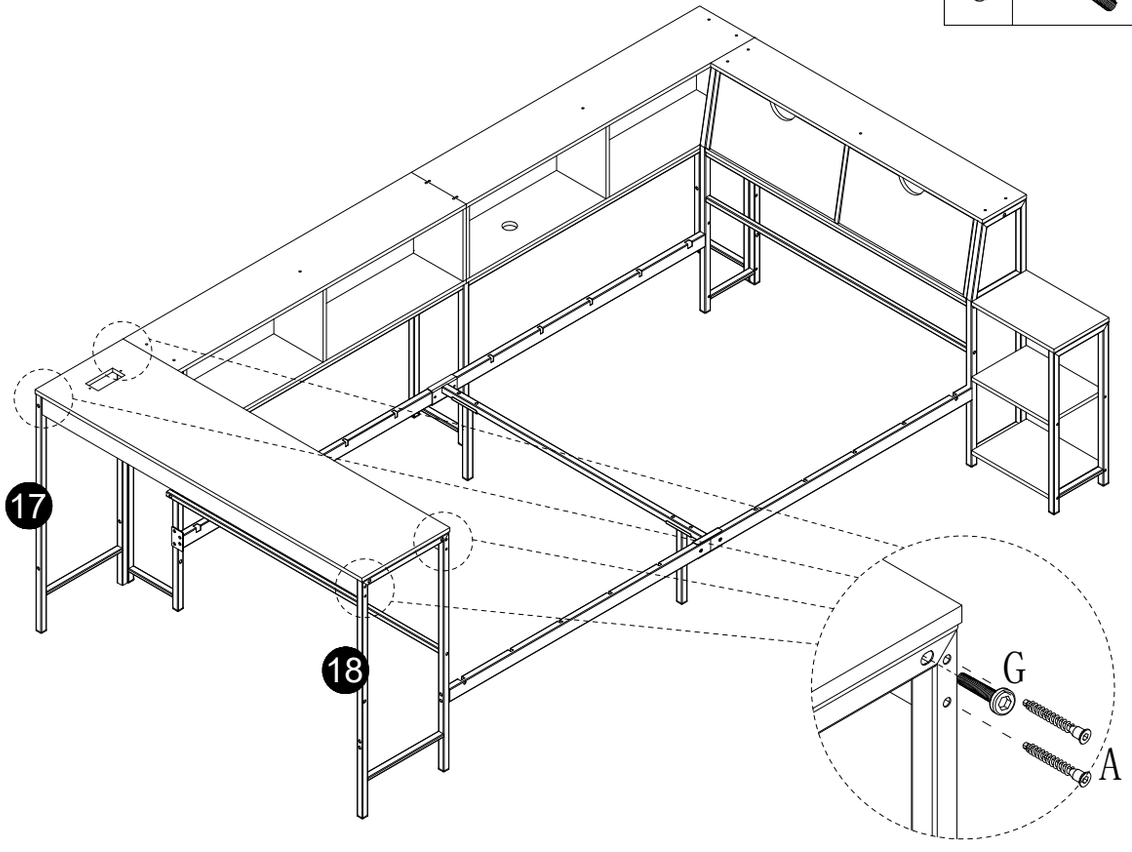


33

M	M4*10mm	3pcs
V		1pc

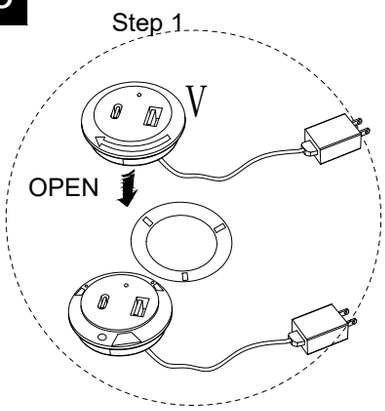


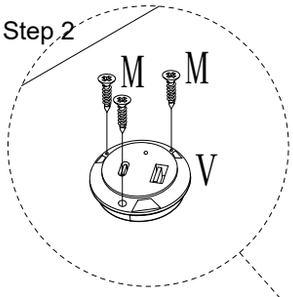


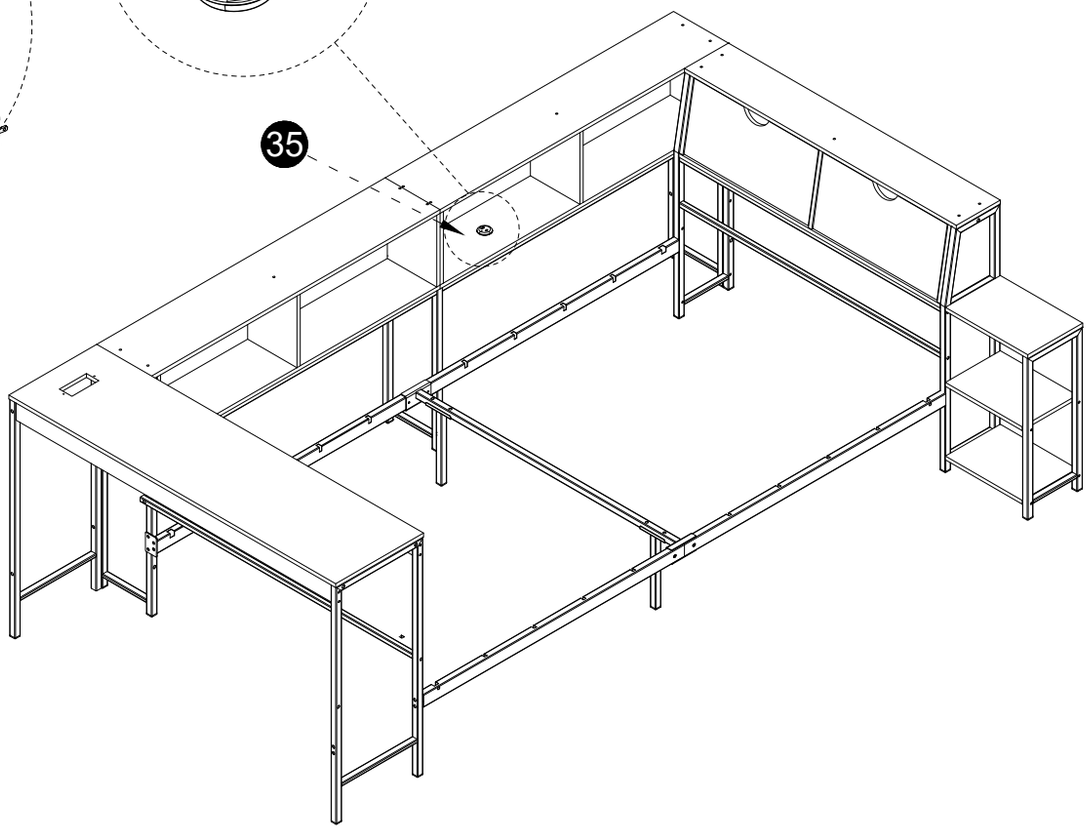

34


M	M4*10mm	2pcs
U		1pc

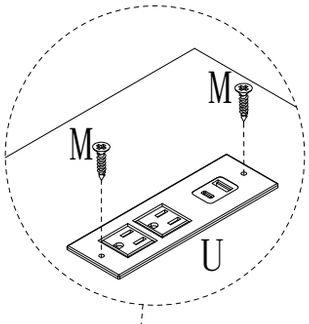

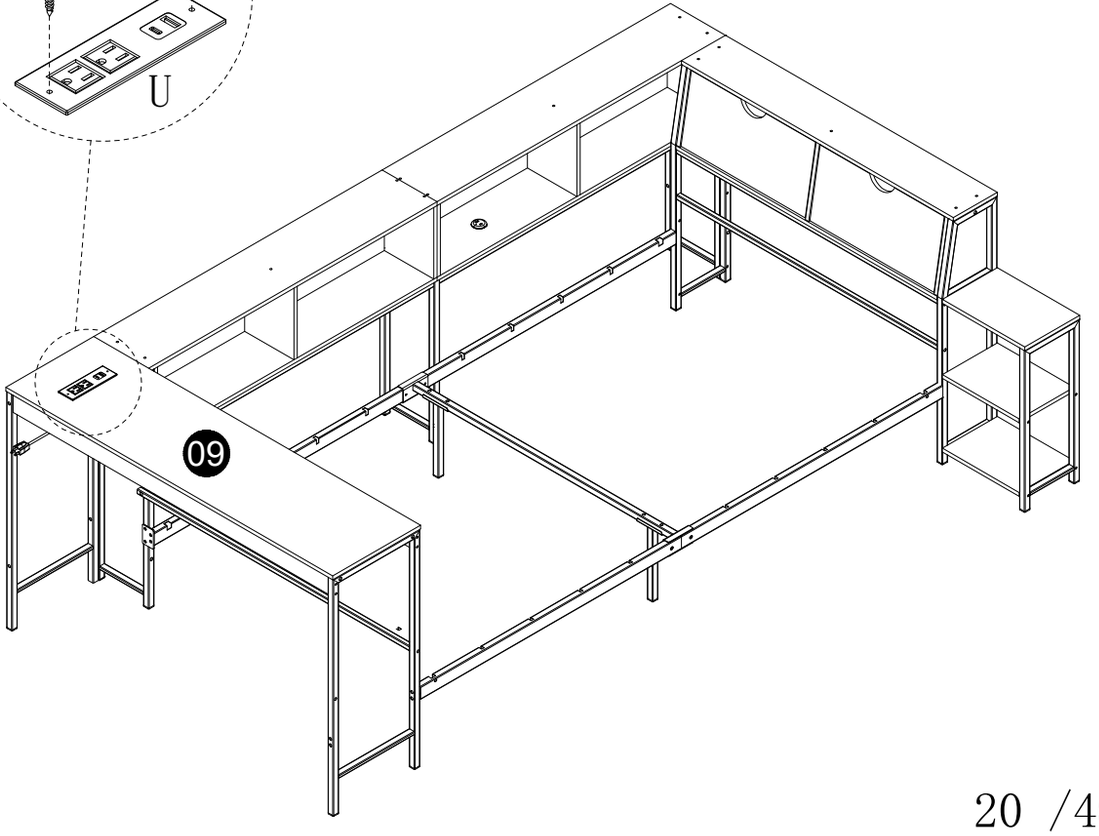


35

D	M6*28mm 4pcs

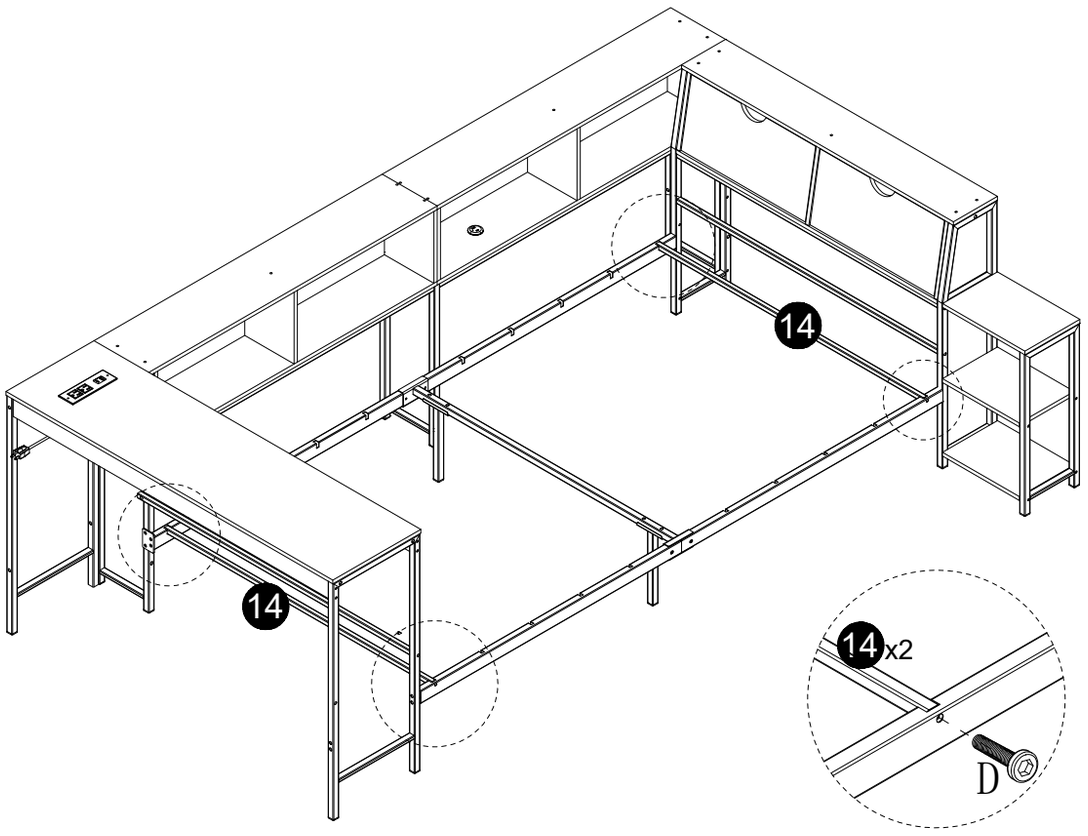


36

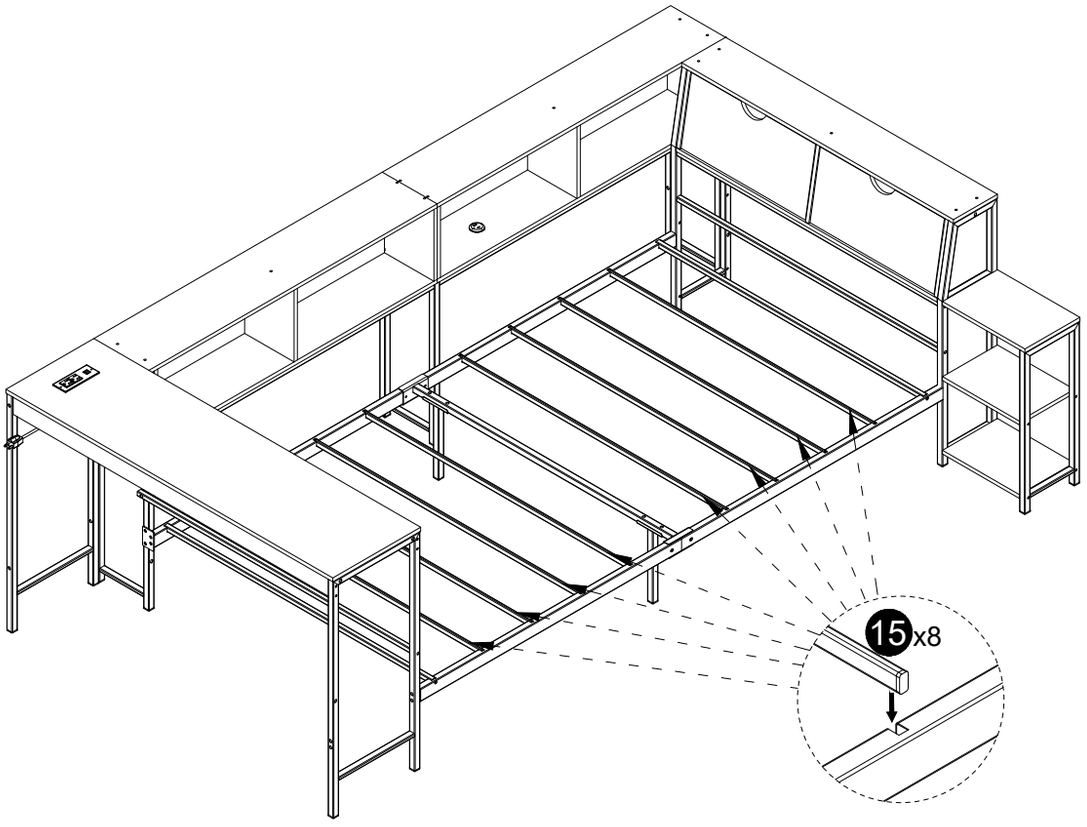

37


a		M4	16pcs
d		M4*28mm	16pcs

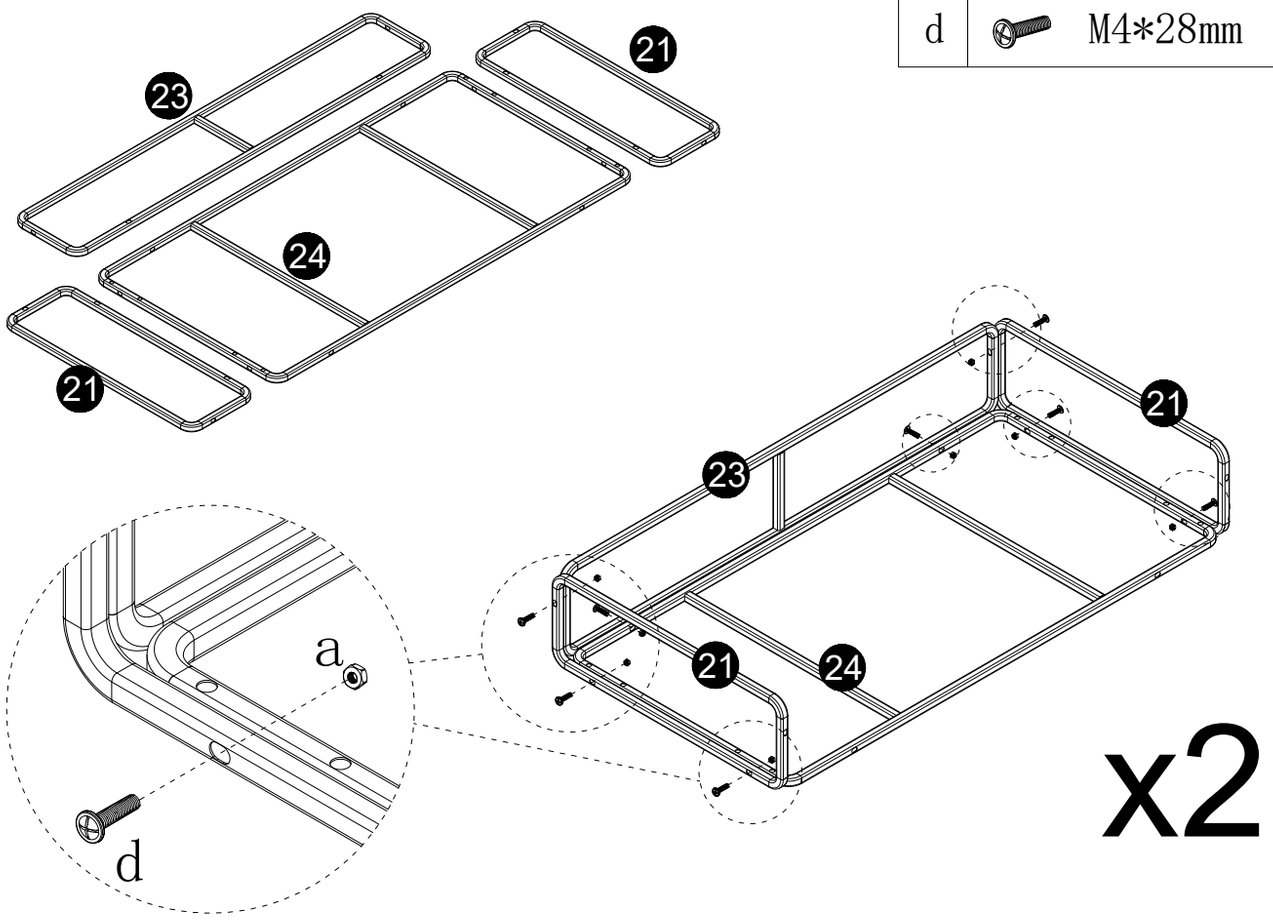

x2

38


P		1.0	8pcs
a		M4	16pcs
d		M4*28mm	16pcs

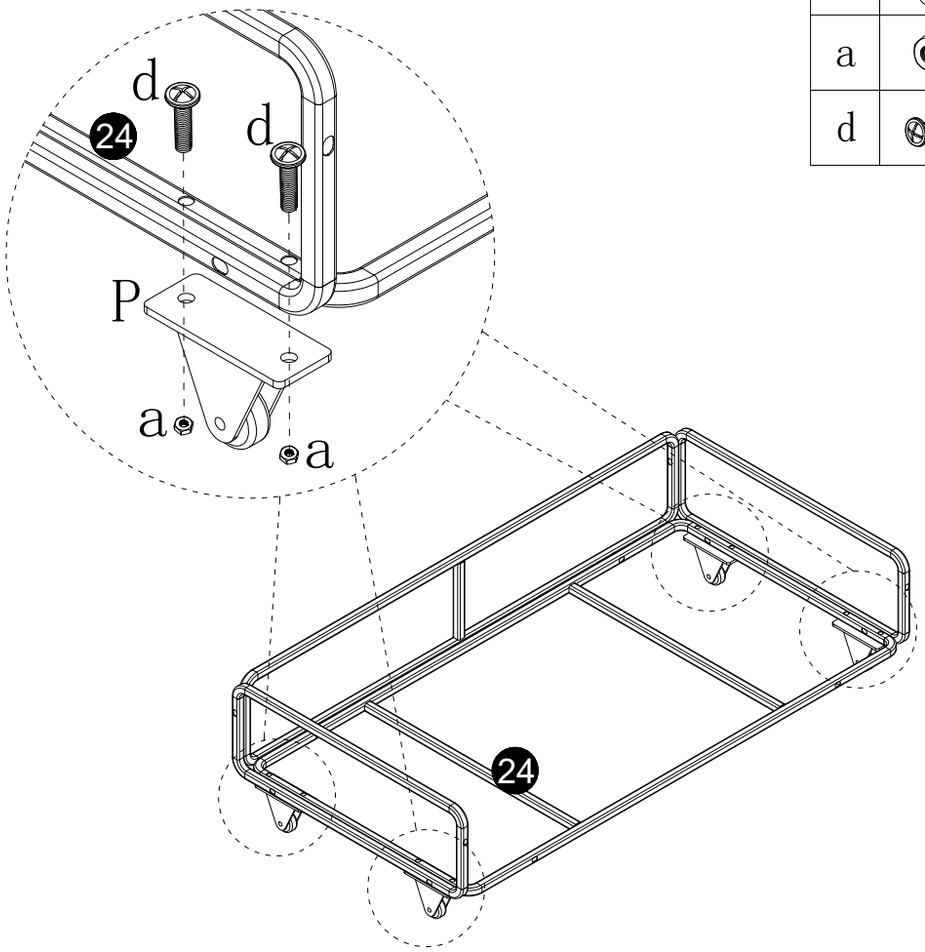

x2


39

K	M4*18mm 8pcs

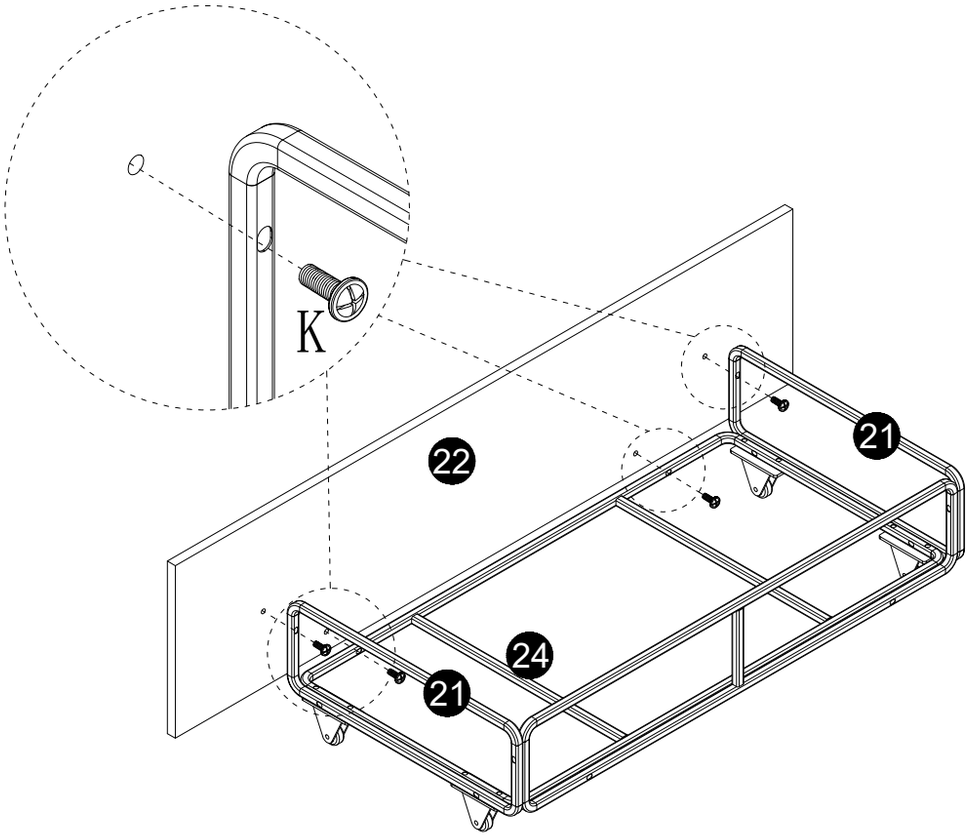


x2

40

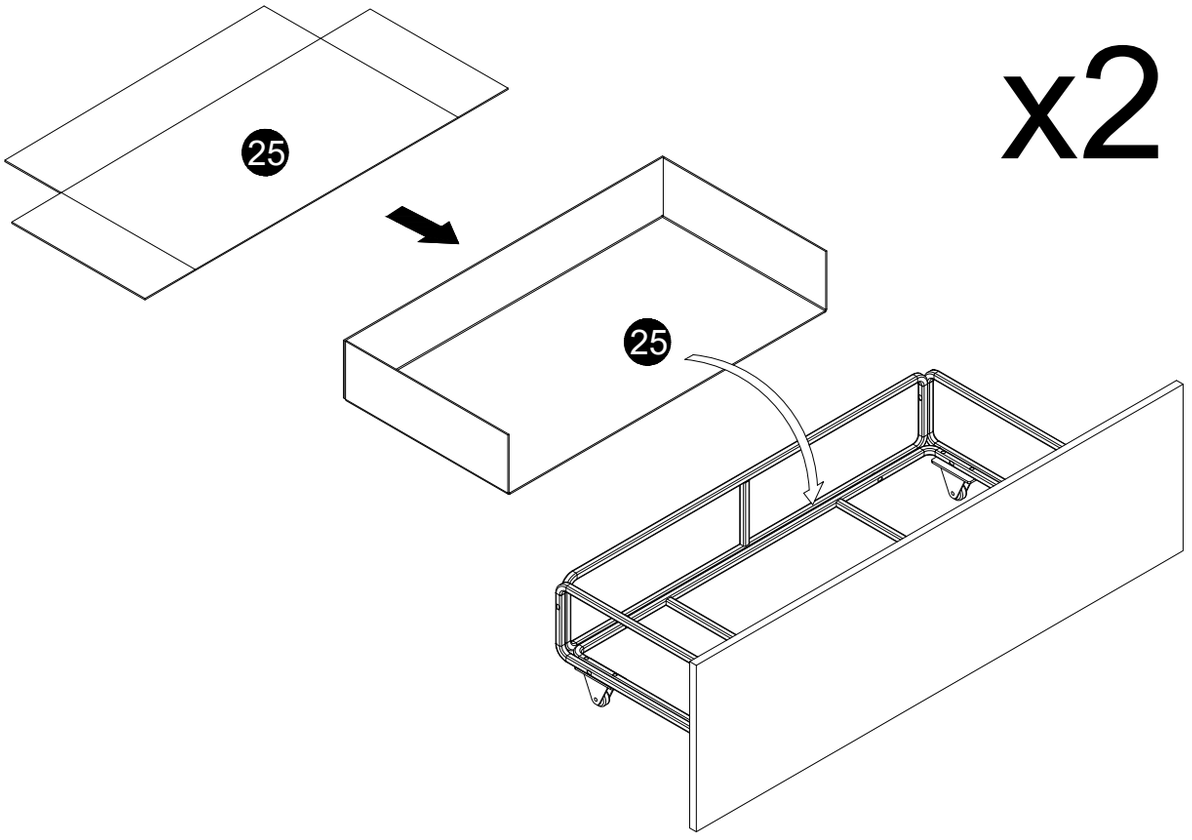


x2

41

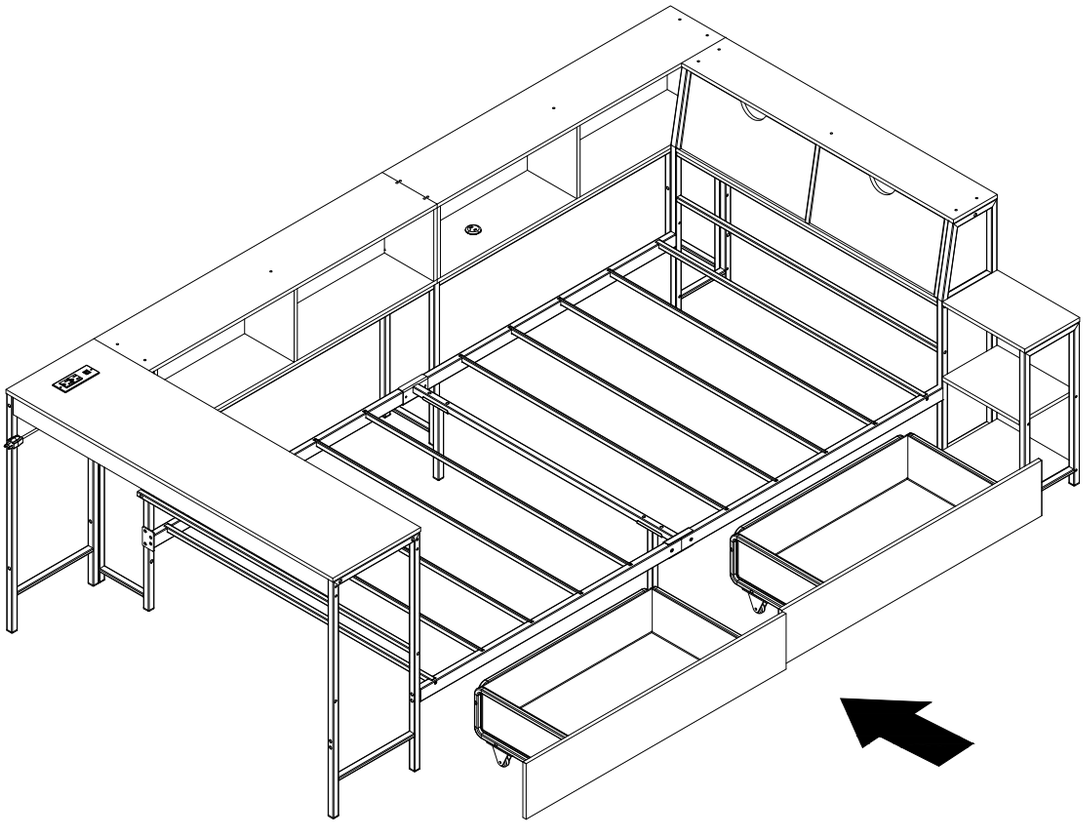


42

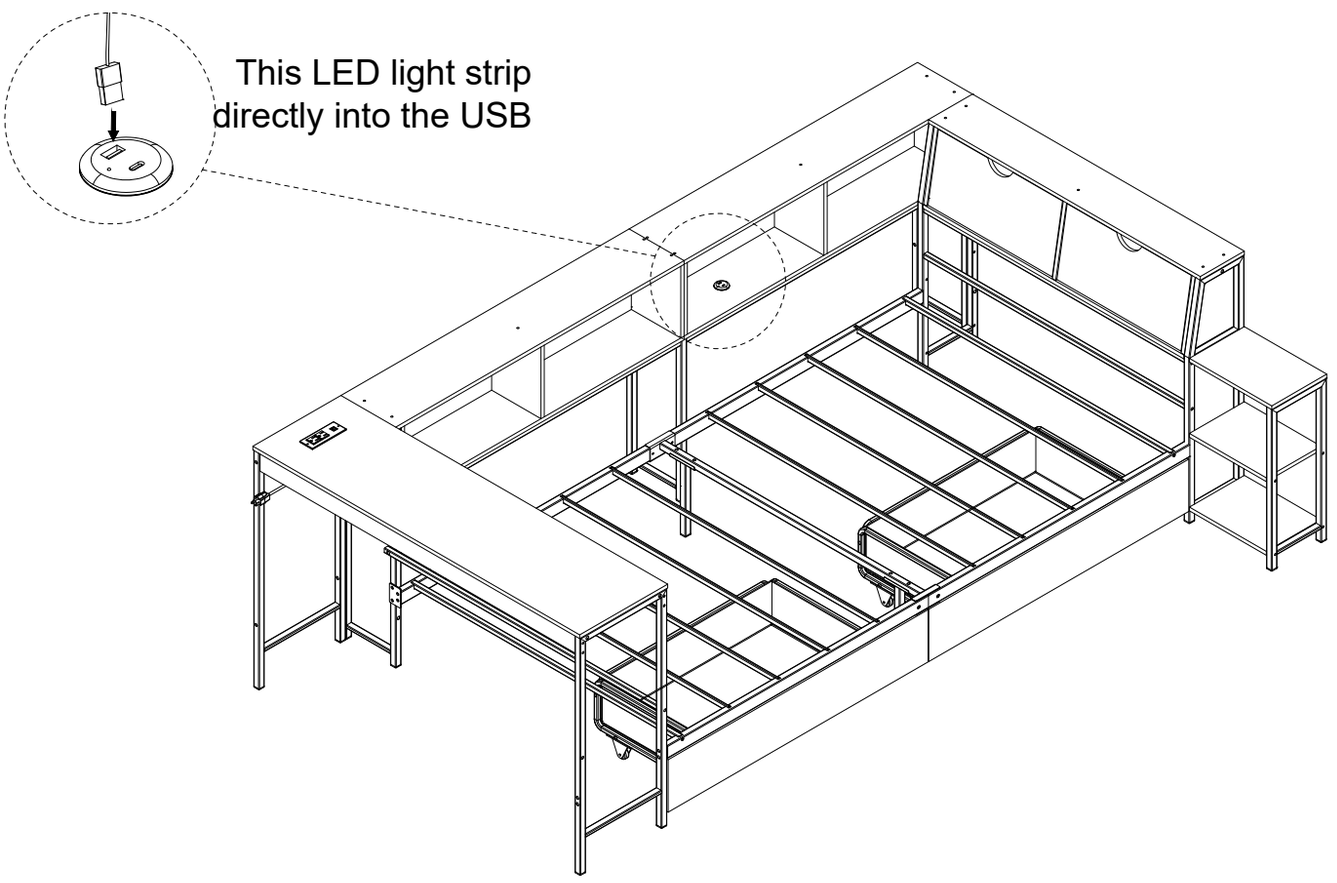

Note:

1.Should be assembled on flat ground to keep balance.


2.Before completing the installation, do not tighten the screws.

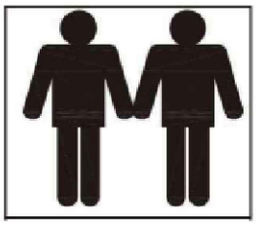

It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

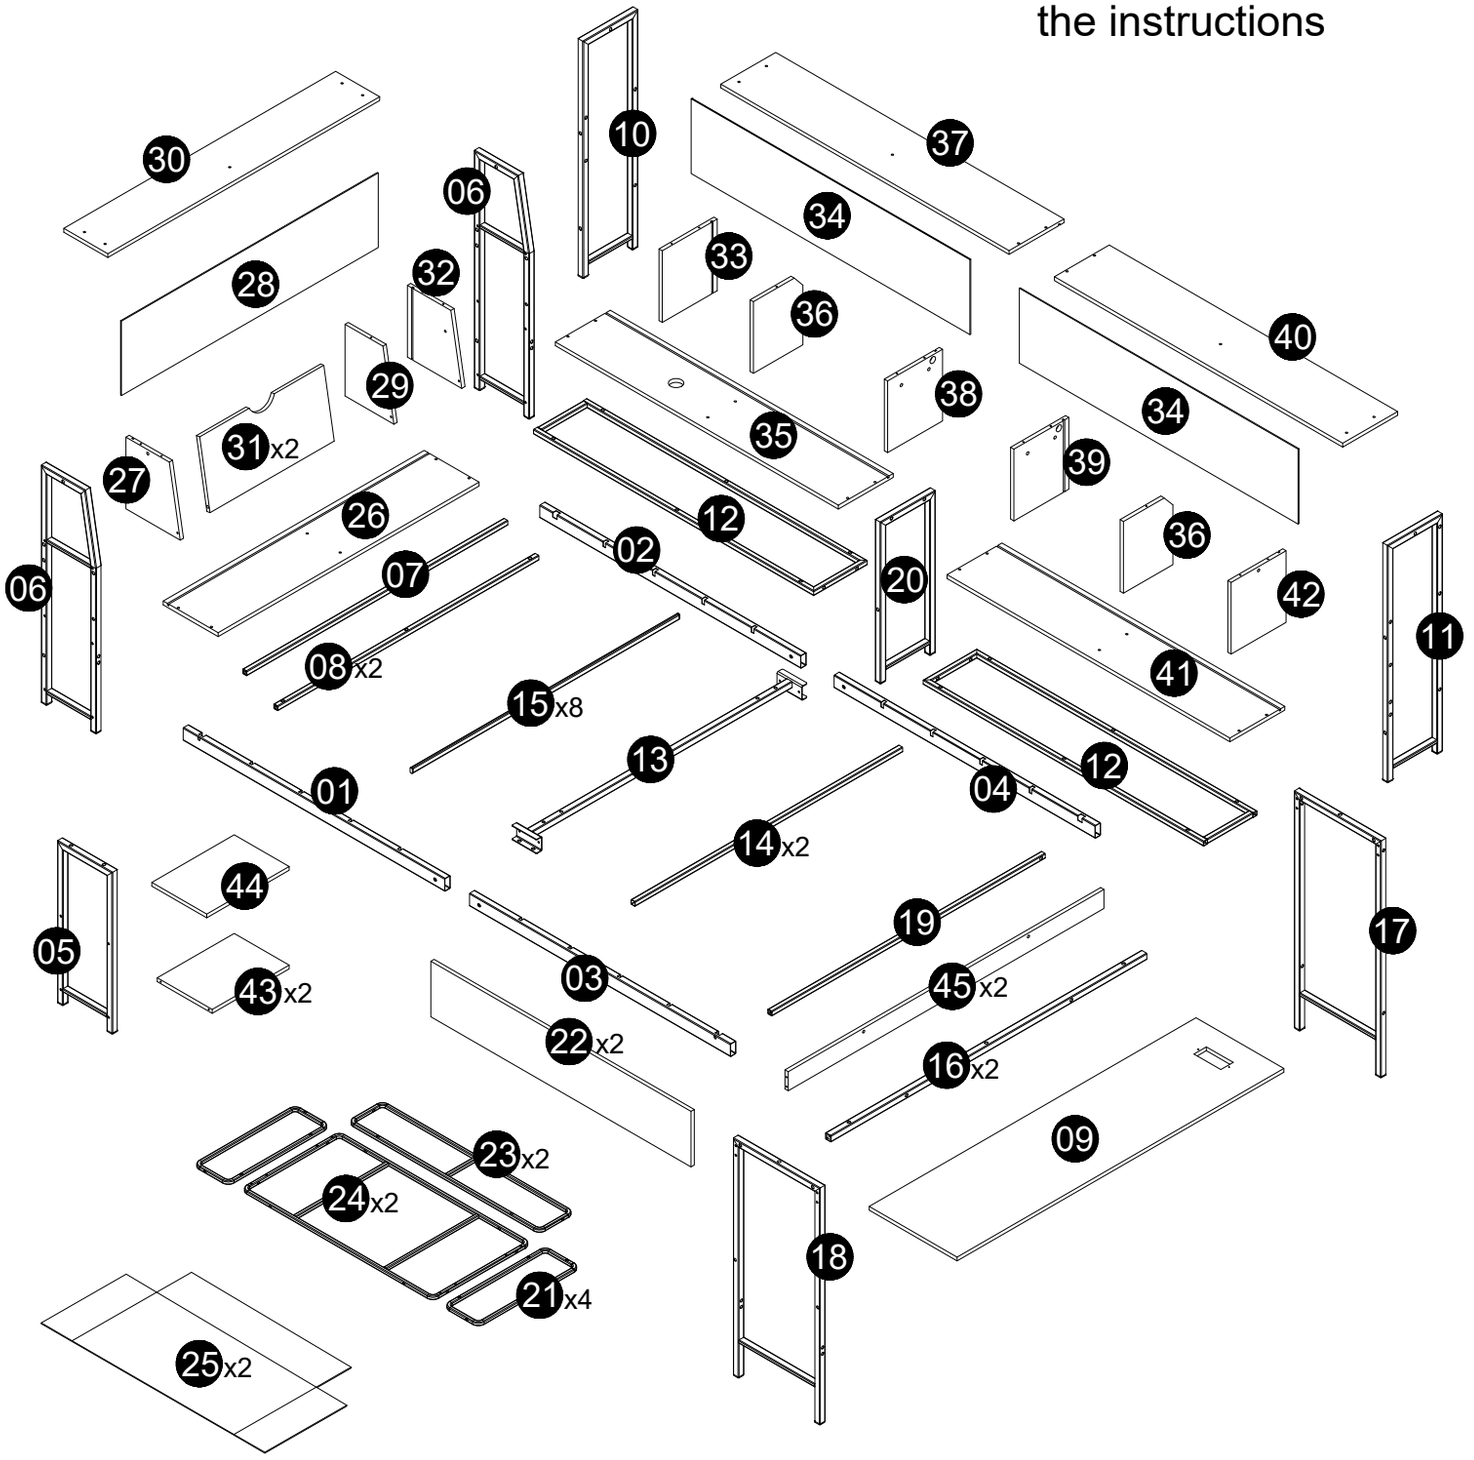


1

L		2pcs
M	M4*10mm	4pcs

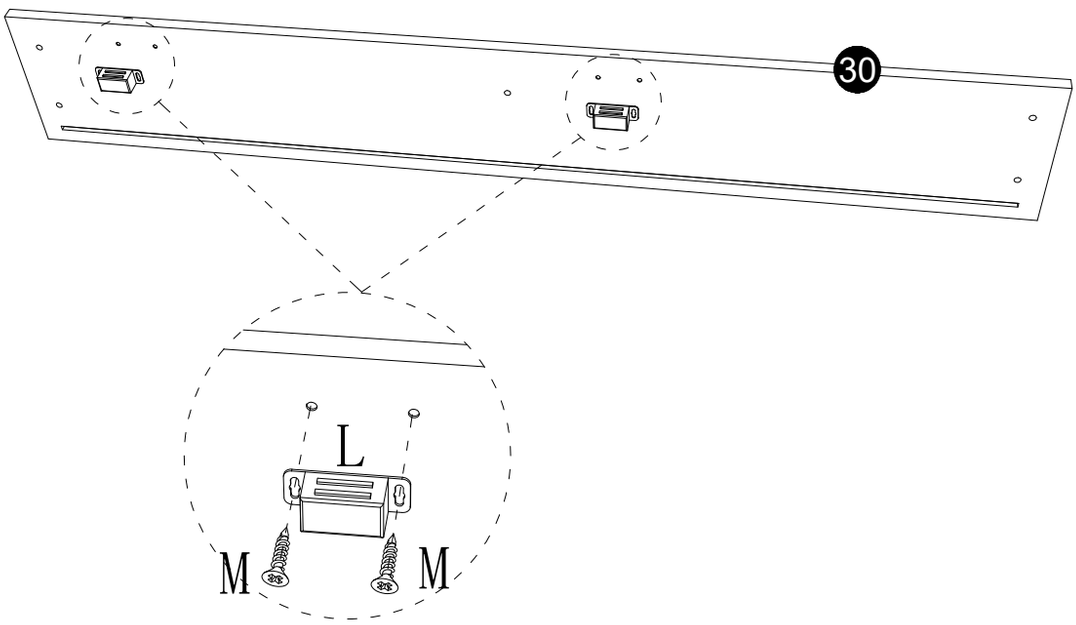


2

L		2pcs
M	M4*10mm	4pcs

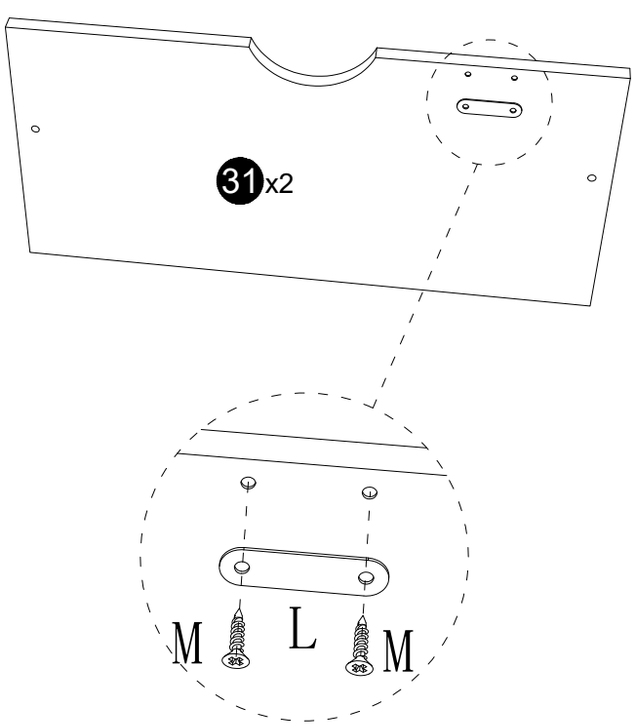


3

A	M5*40mm 6pcs

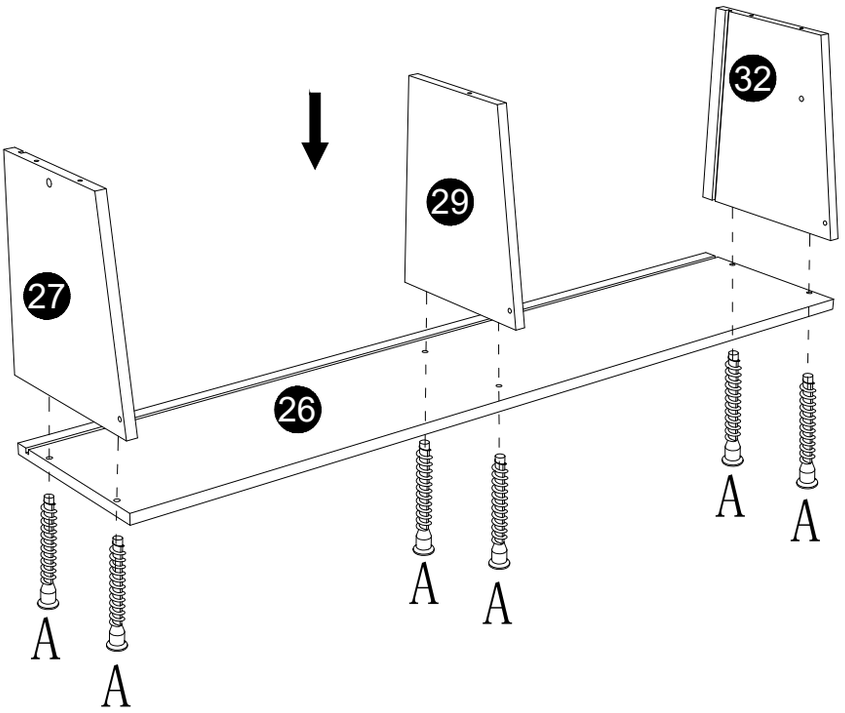


4

A	M5*40mm 5pcs

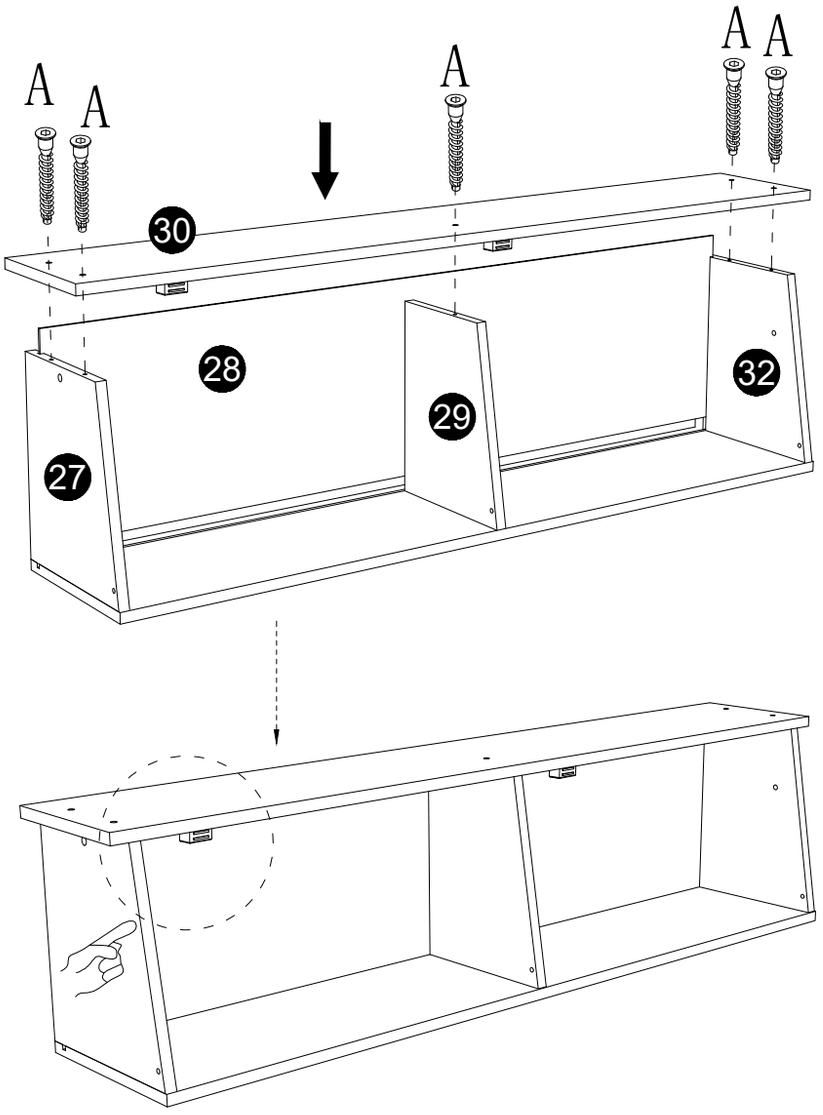


5

A	M5*40mm 10pcs

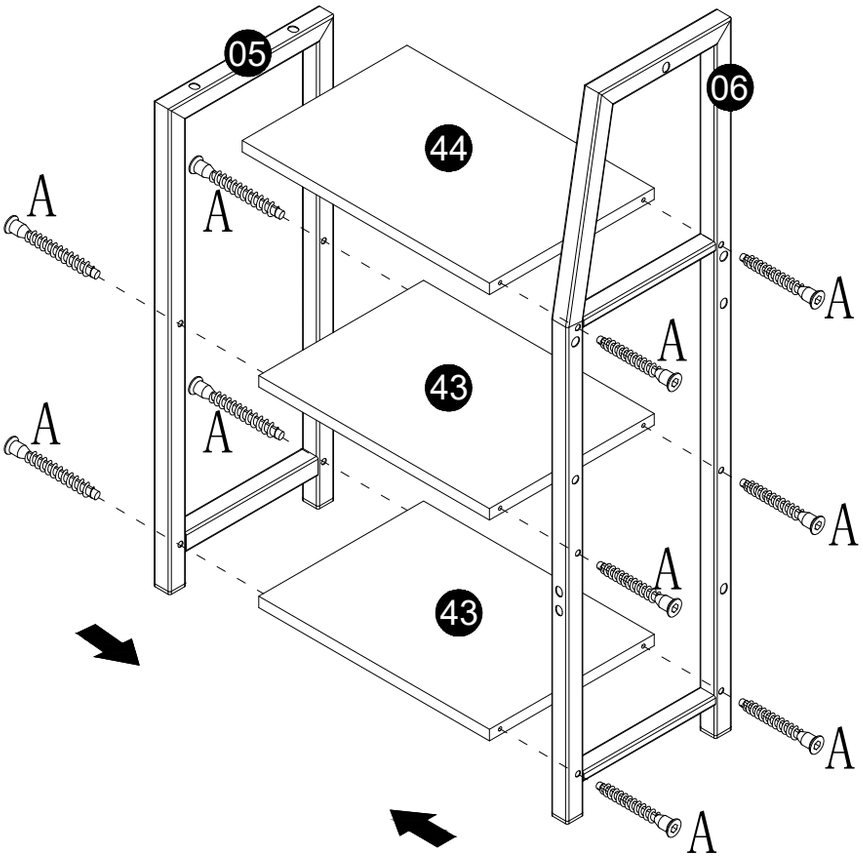


6

D	M6*28mm 2pcs

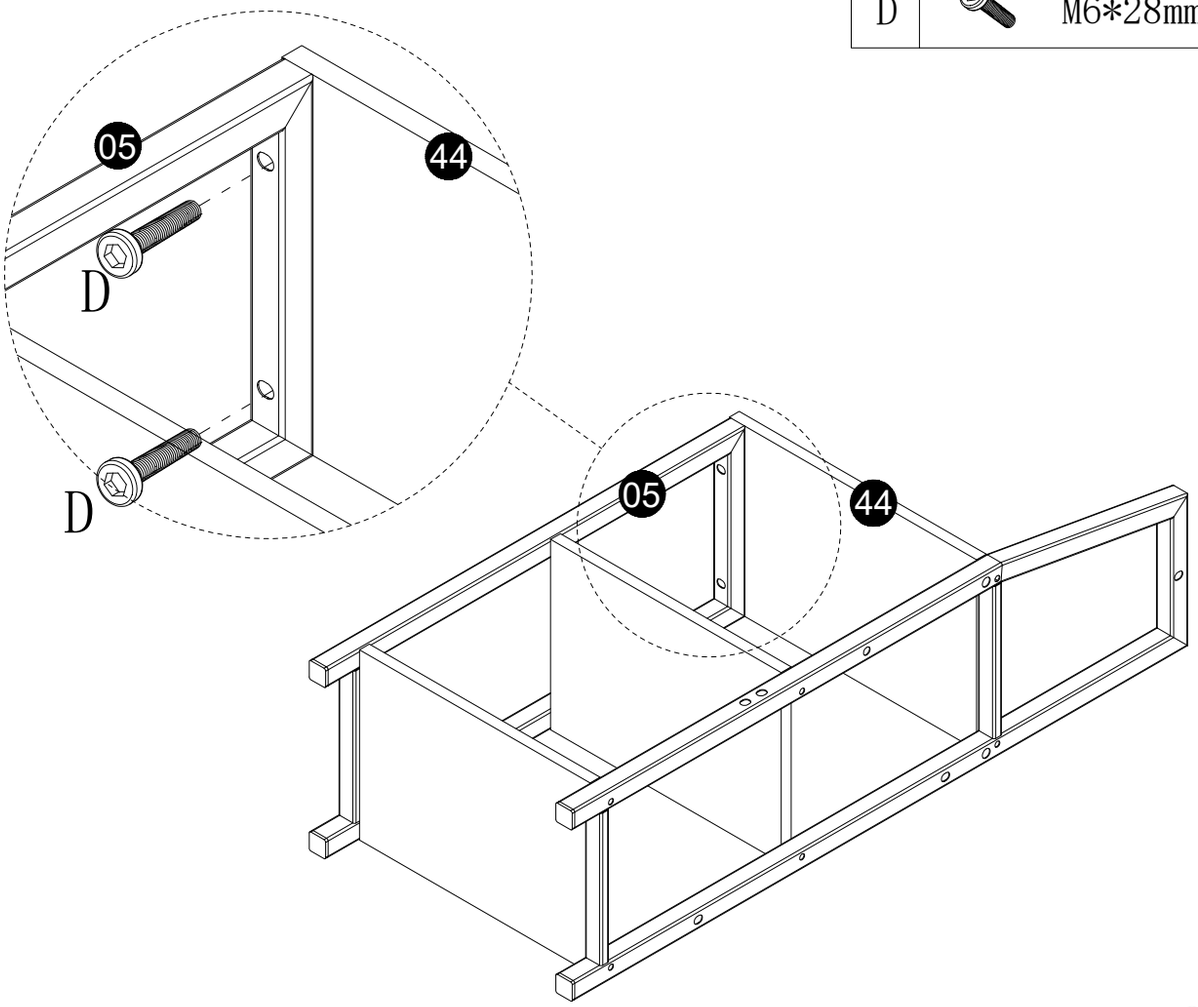


7

N	M6*40mm 4pcs

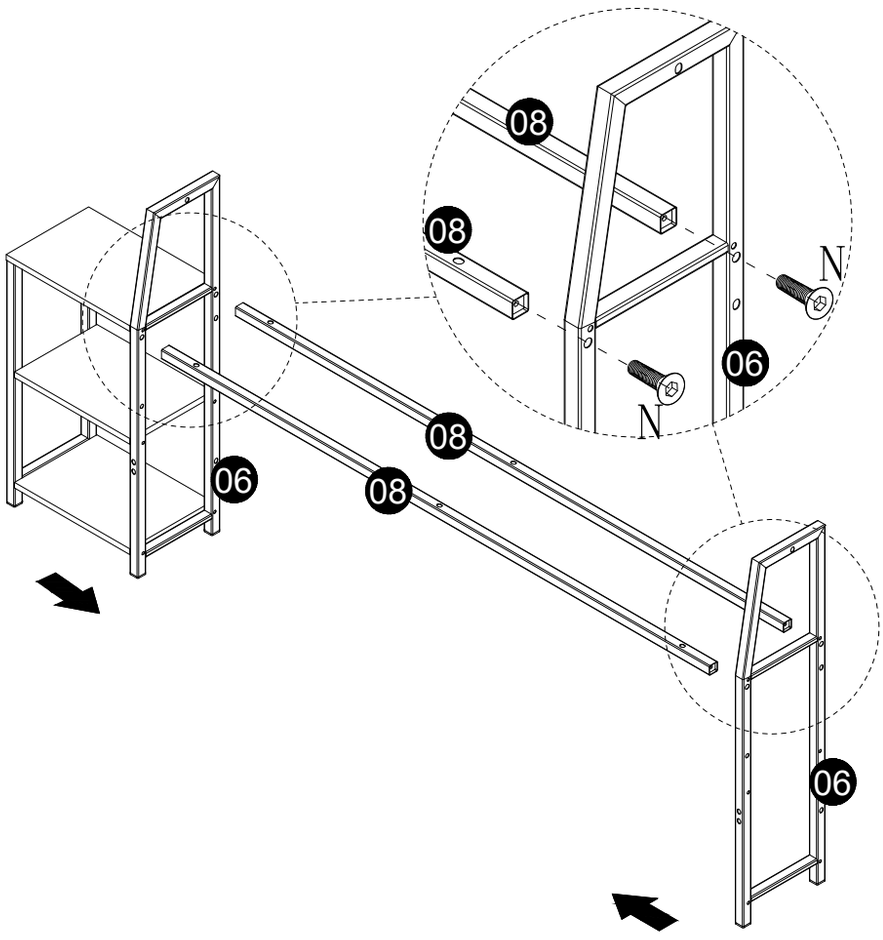


8

C	M6*25mm 6pcs

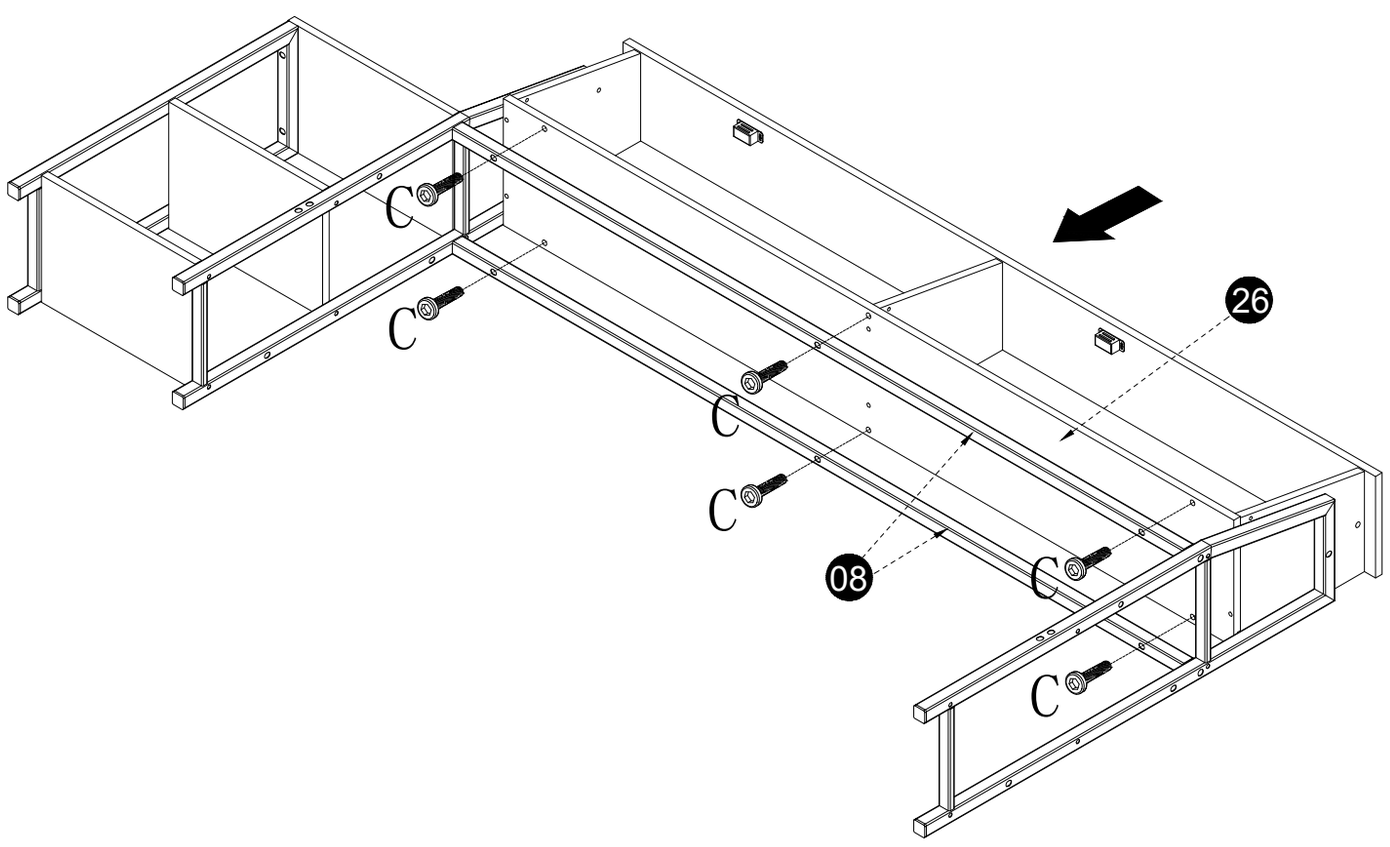


9

D	M6*28mm	2pcs
G	M6*40mm	2pcs

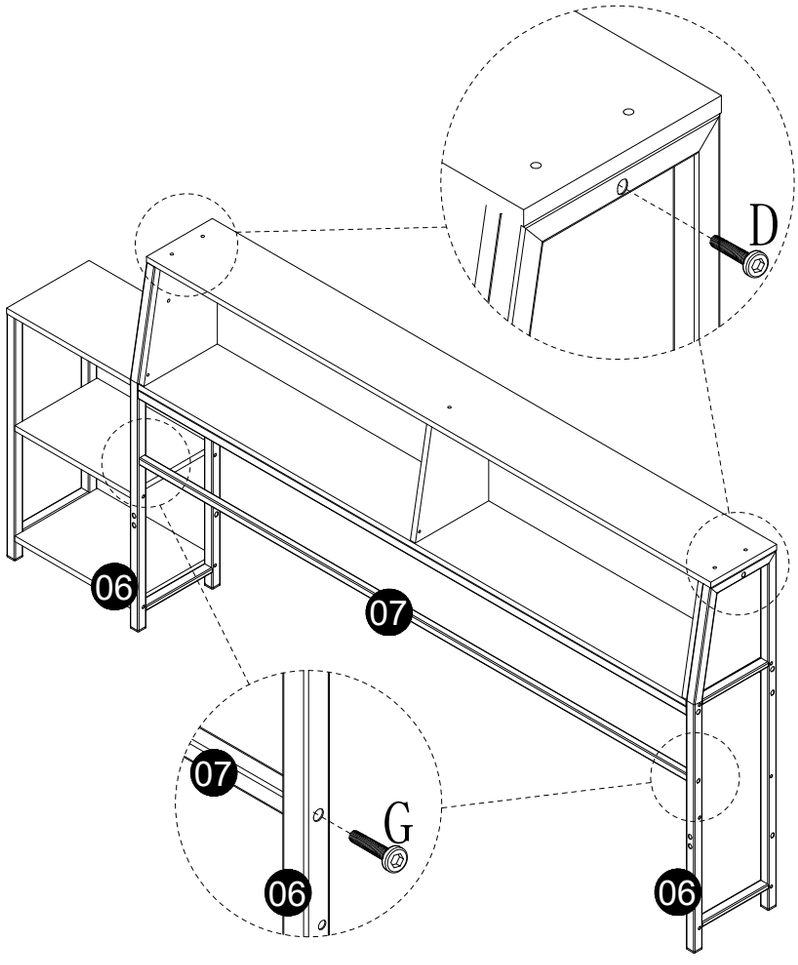


10

S		4pcs

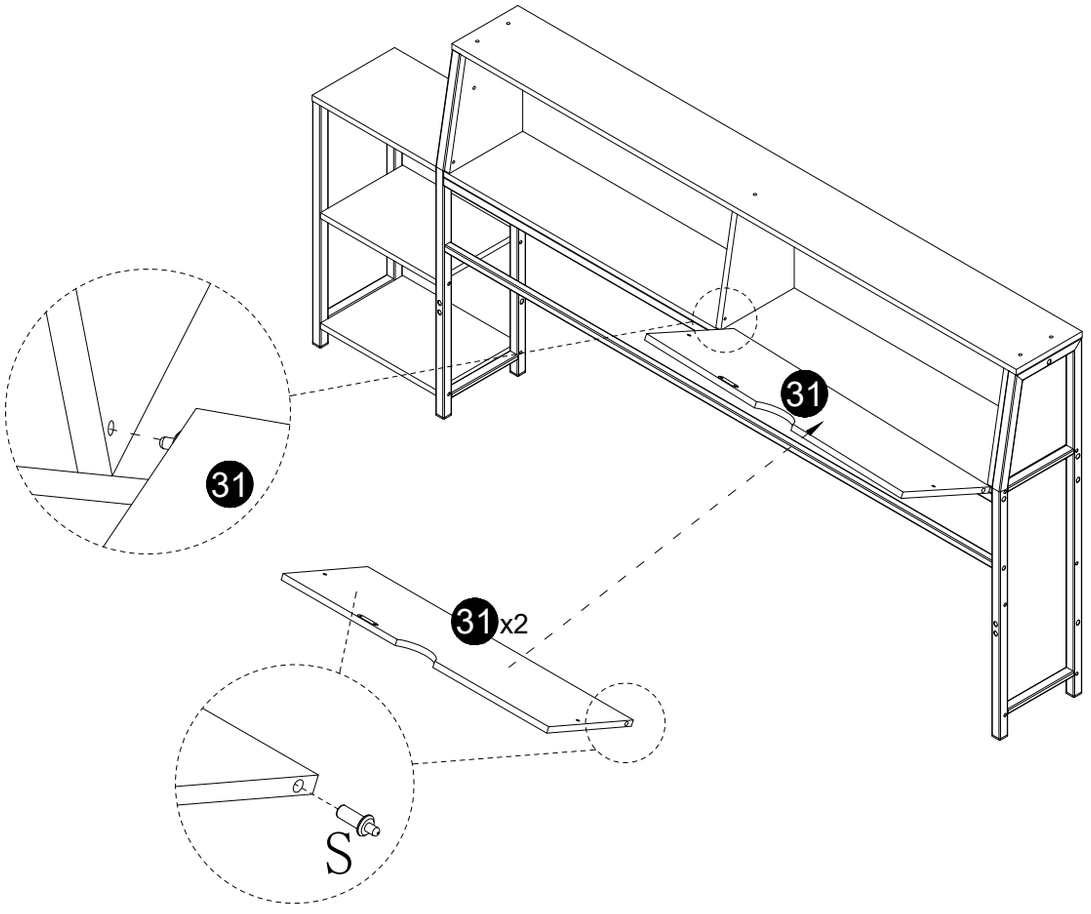


11

J	M4*14mm	4pcs
0		2pcs

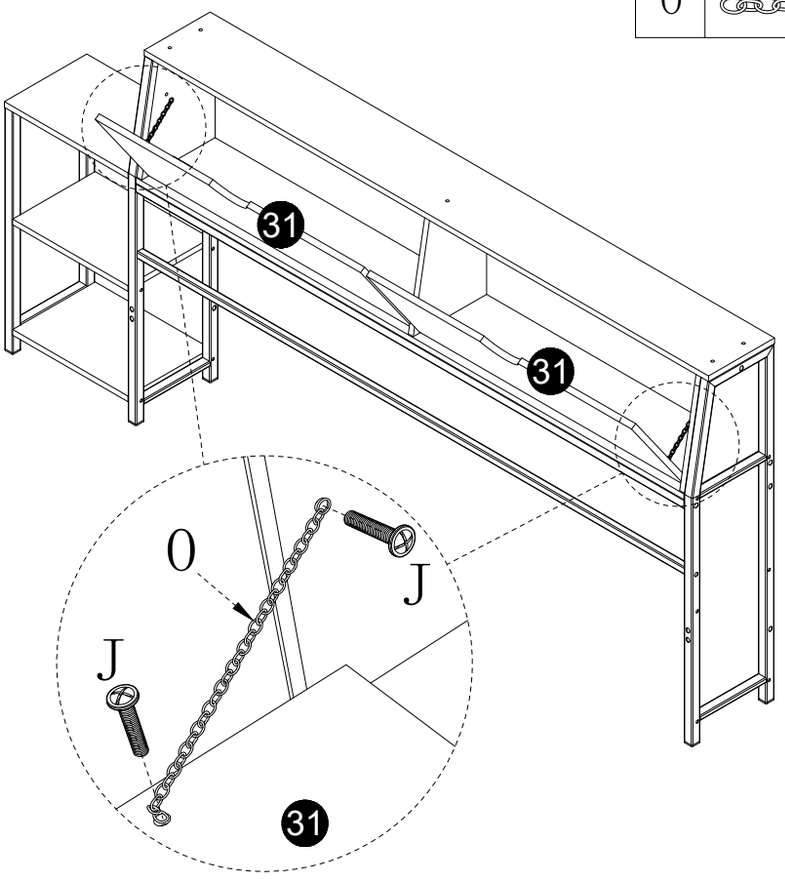


12

D	M6*28mm	4pcs
F	M6	4pcs
R	23cm	2pcs

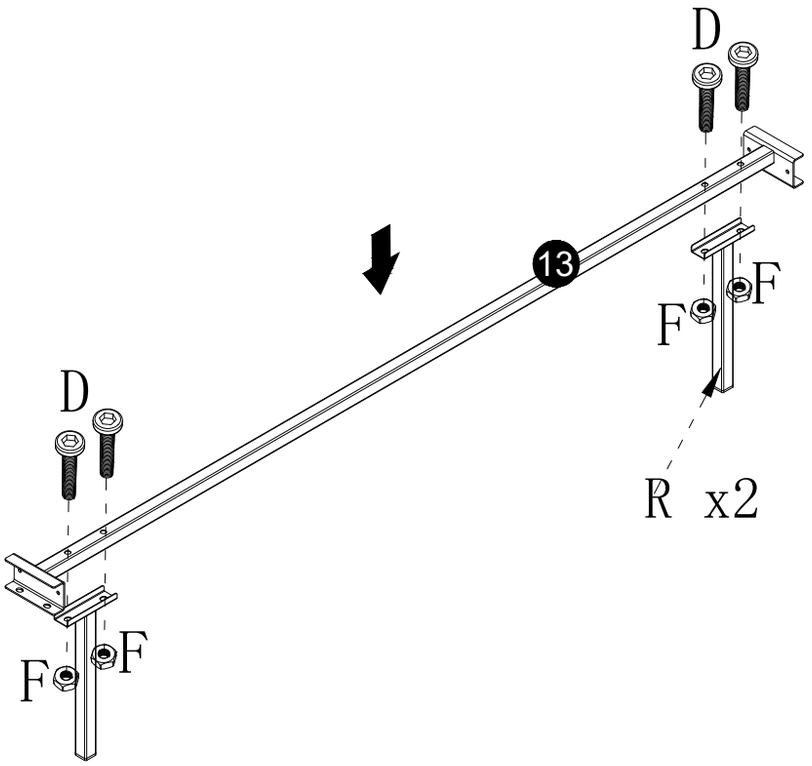


13

Q	ϕ6*M4*20mm 4pcs

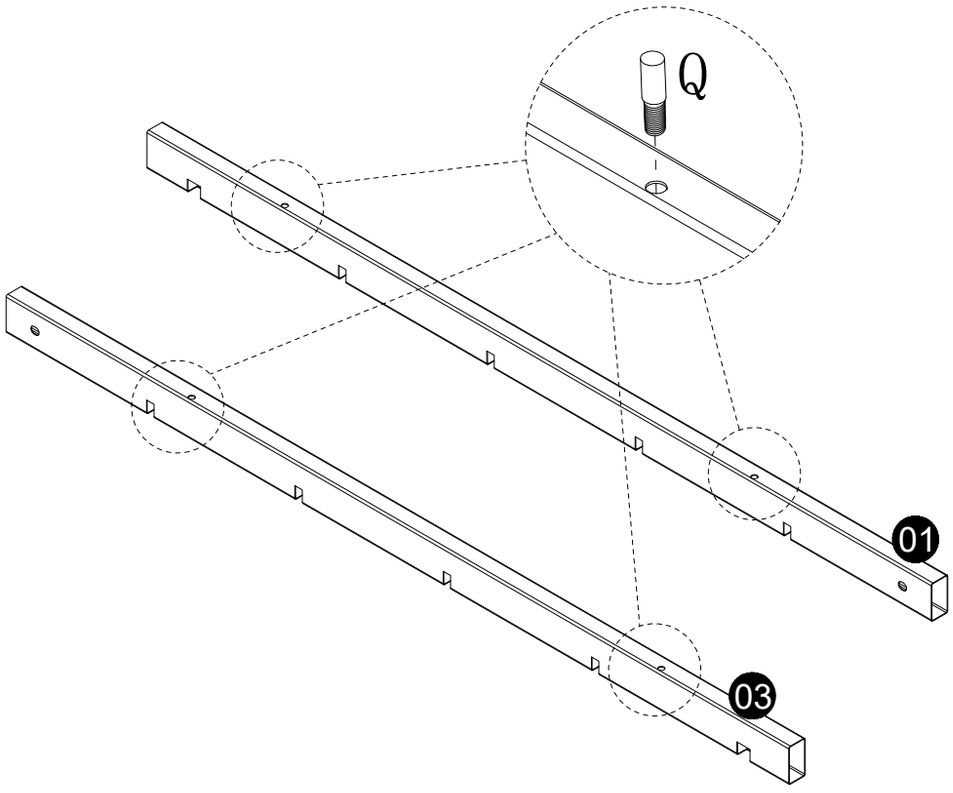


14

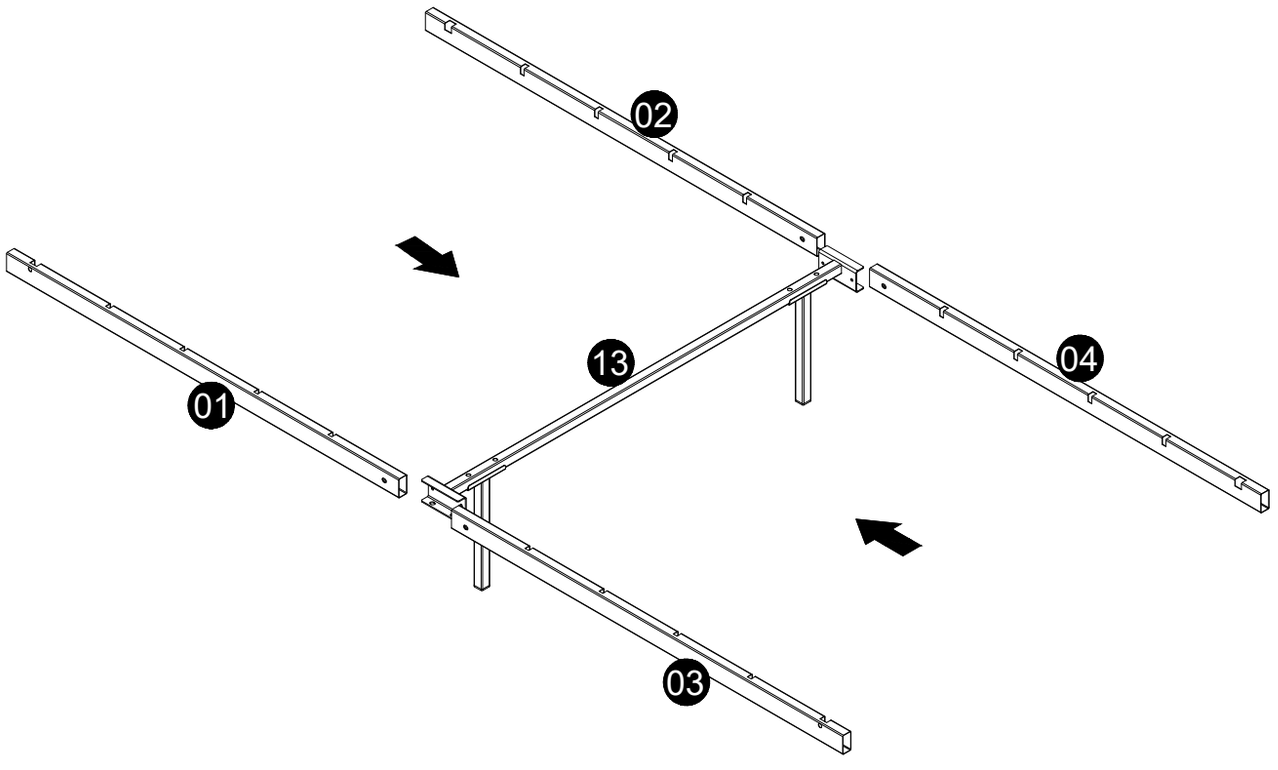


15

D	M6*28mm 4pcs

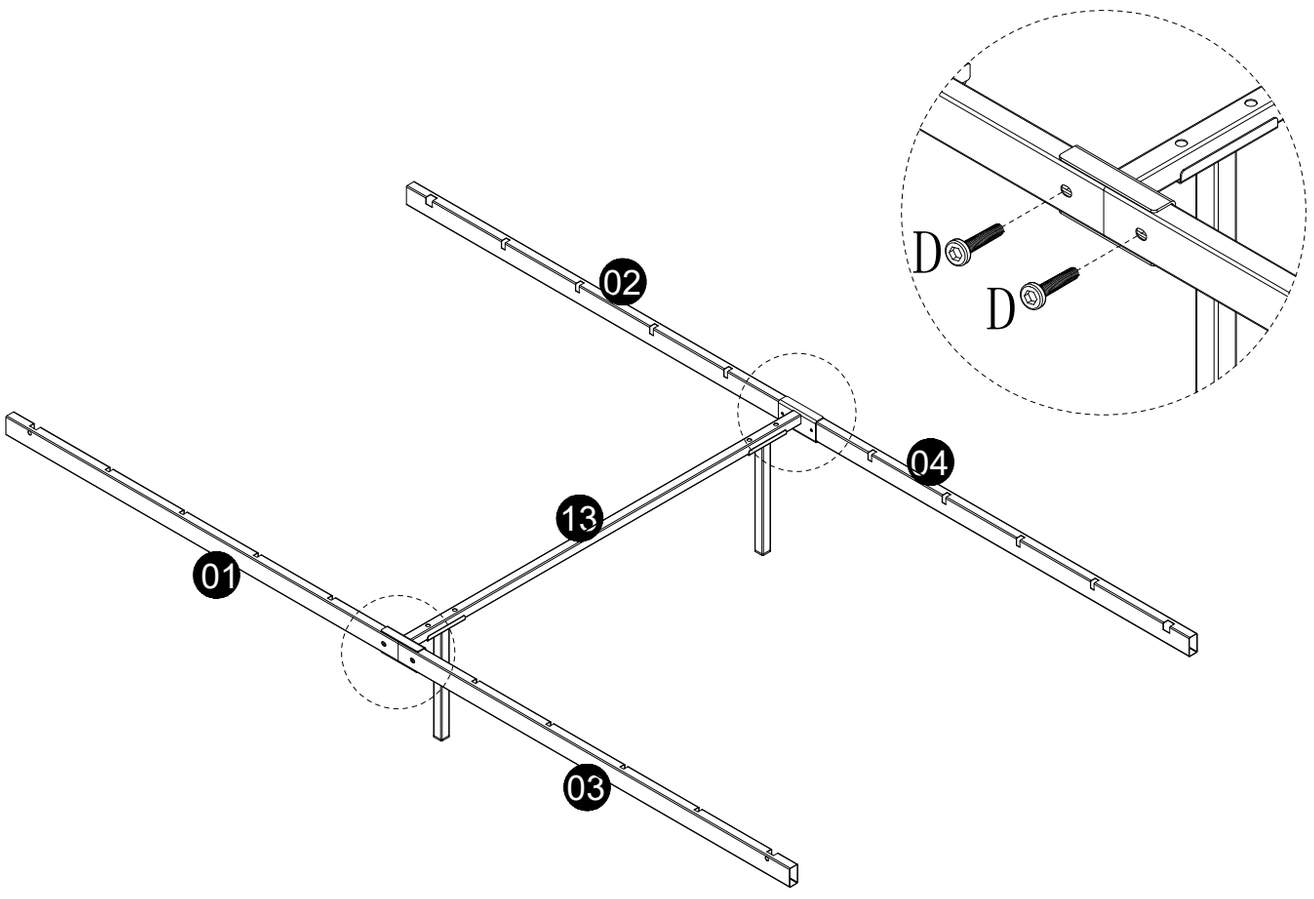


16

A	M5*40mm 6pcs

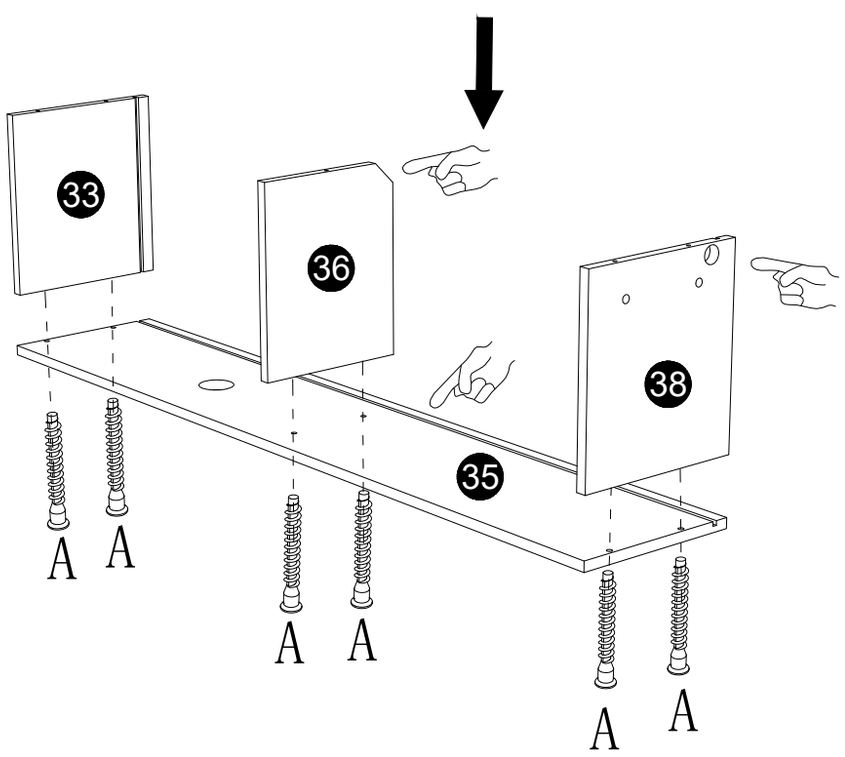


17

A	M5*40mm 5pcs

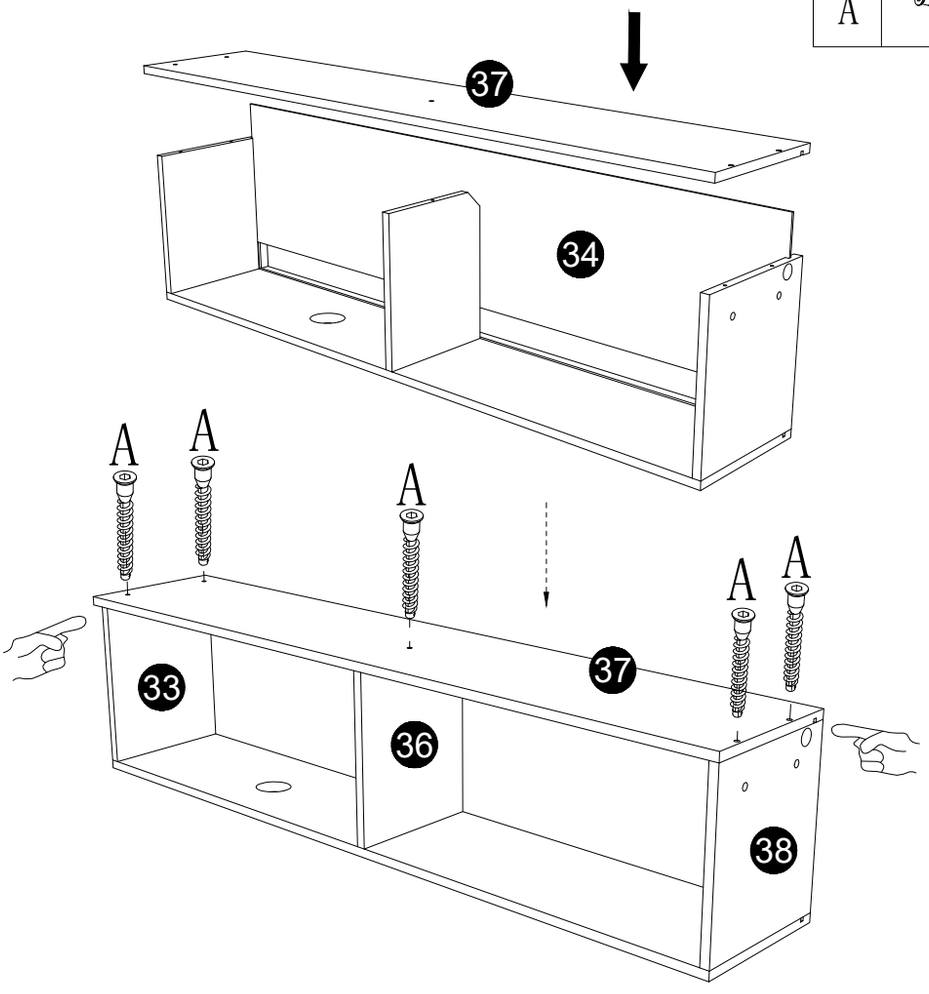


18

A	M5*40mm 6pcs

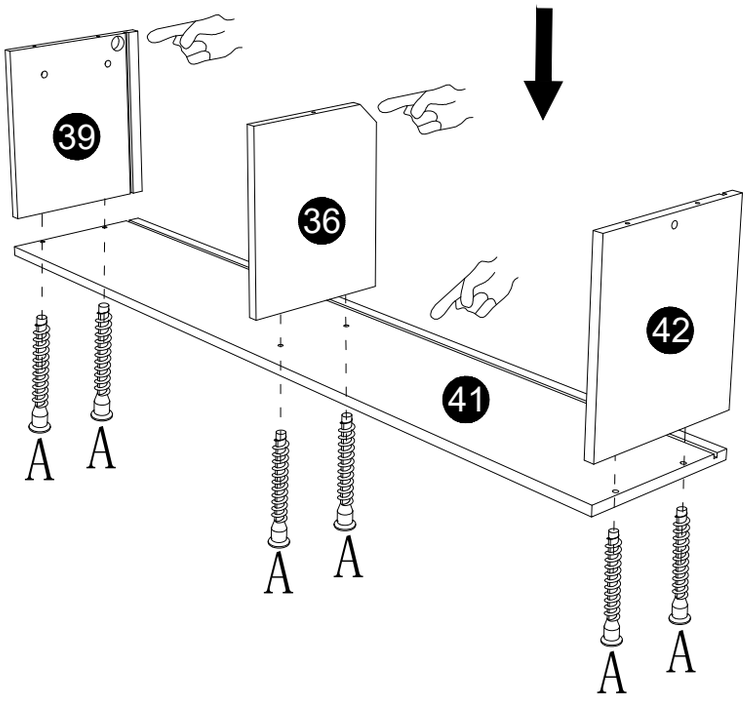


19

A	M5*40mm	5pcs

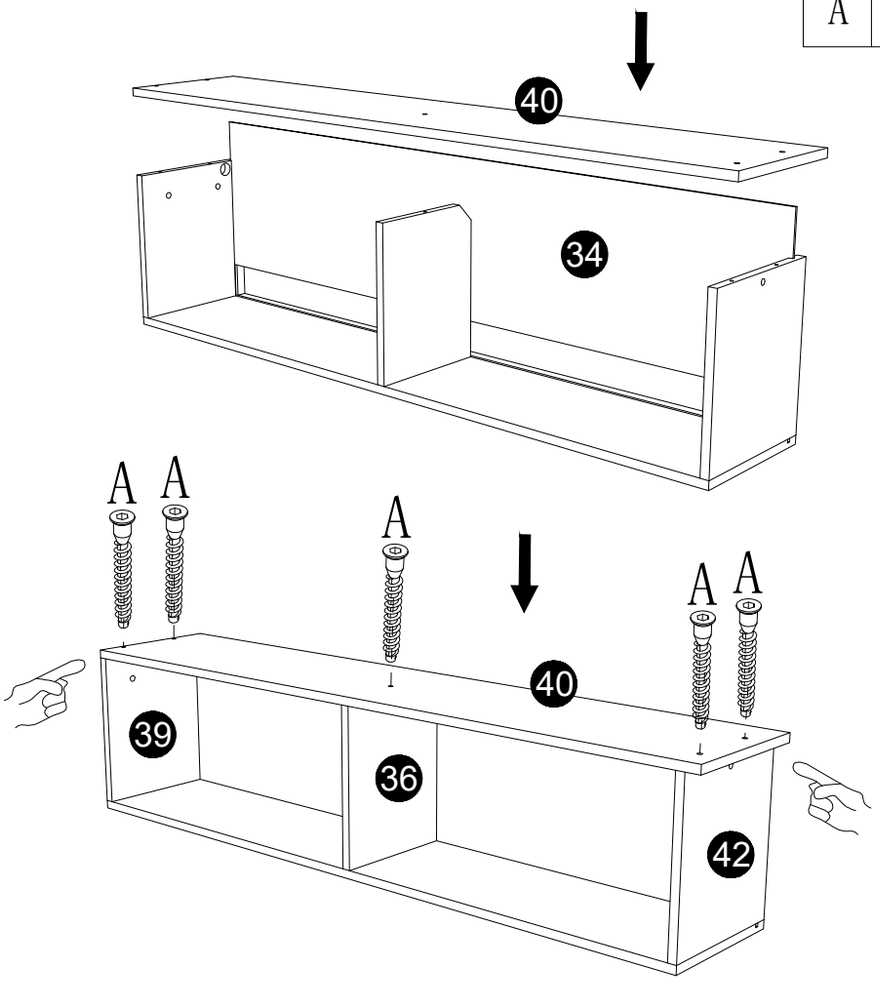


20

E	M6*60mm	2pcs
F	M6	2pcs
N	M6*40mm	4pcs

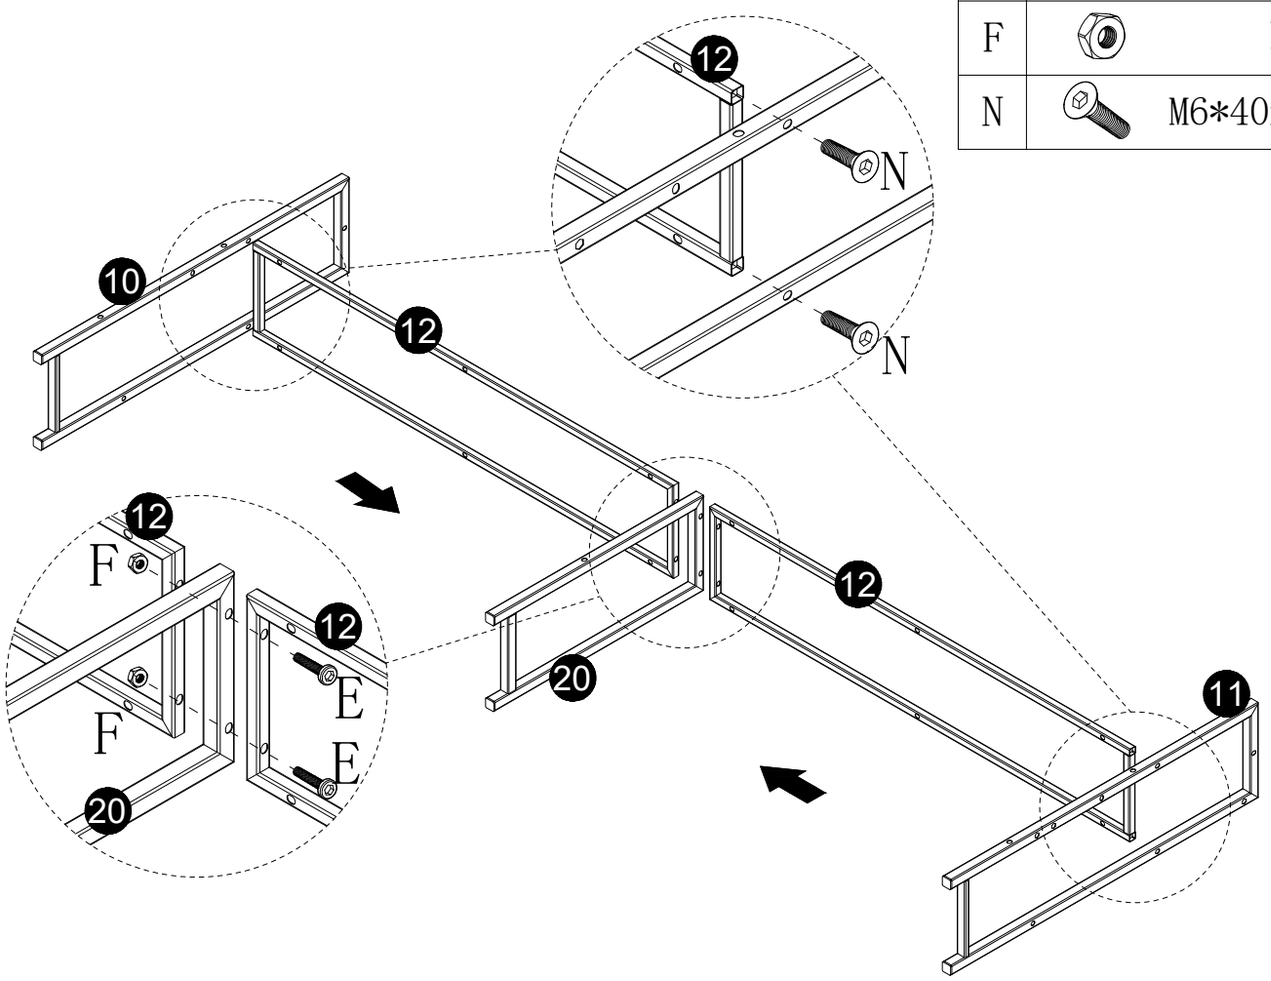


21

B	M6*15mm	2pcs
H	M6*15mm	2pcs

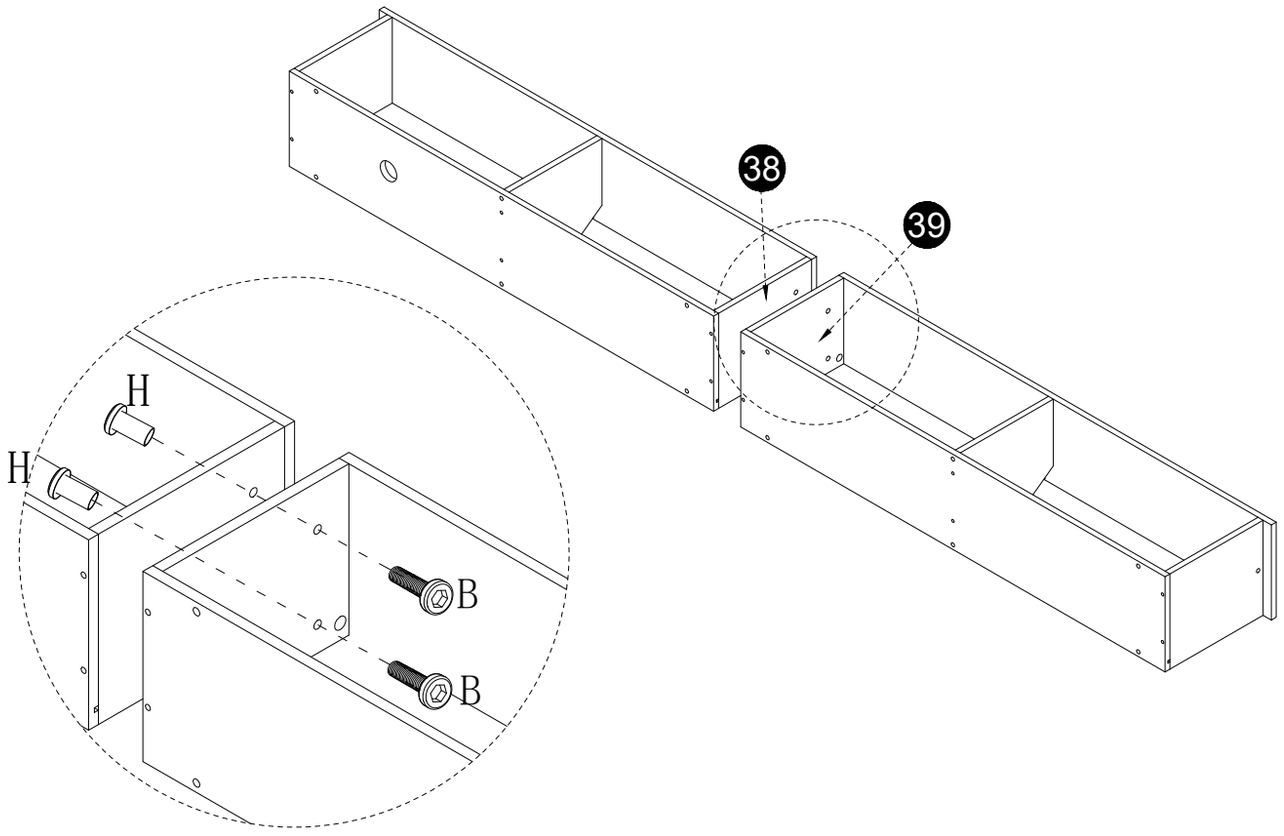


22

C	M6*25mm	12pcs

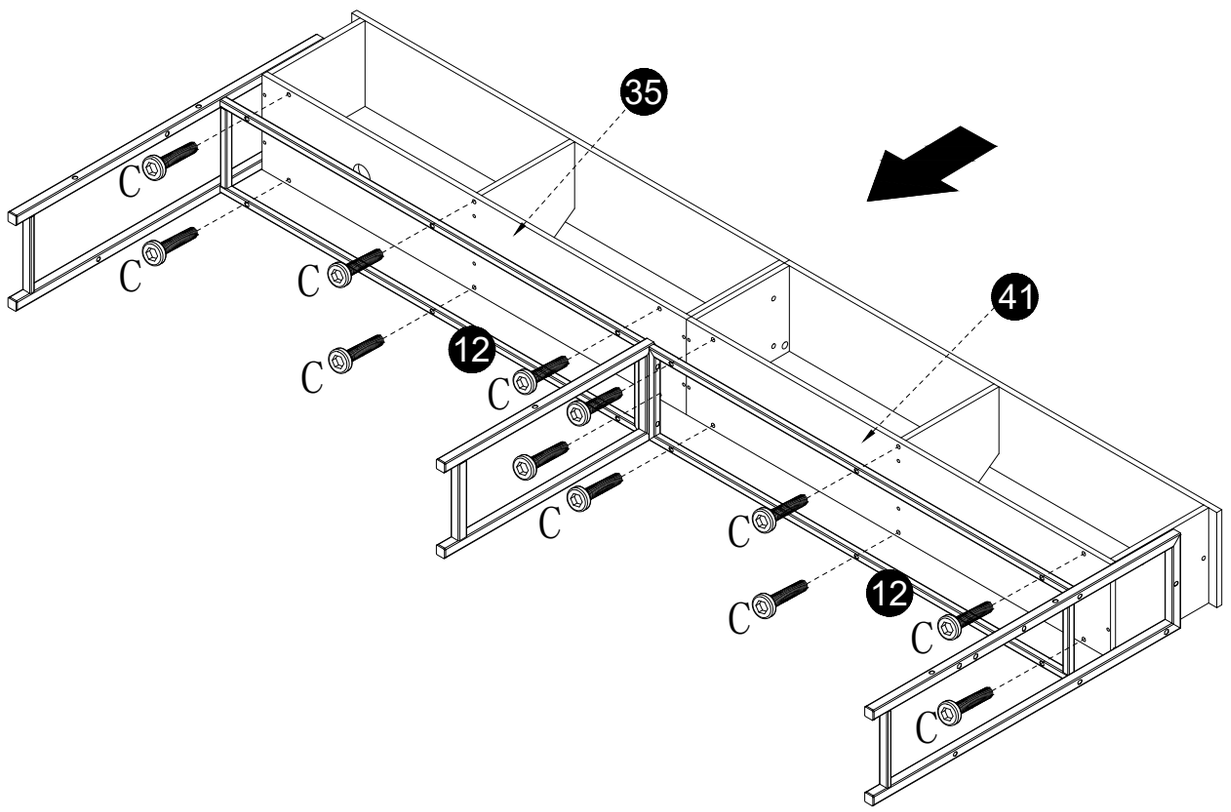


23

T		1pc
D	M6*28mm	2pcs

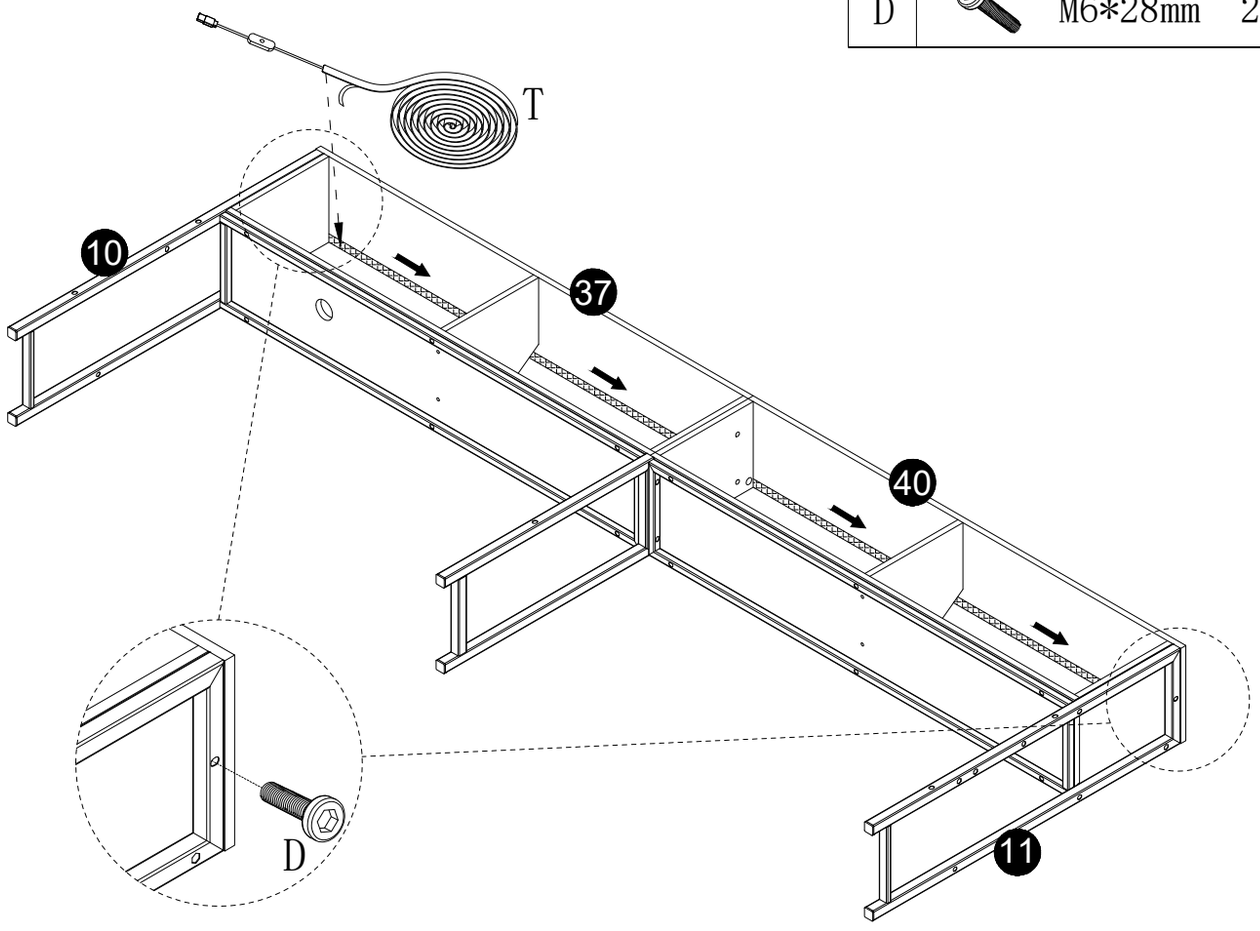


24

G	M6*40mm	4pcs

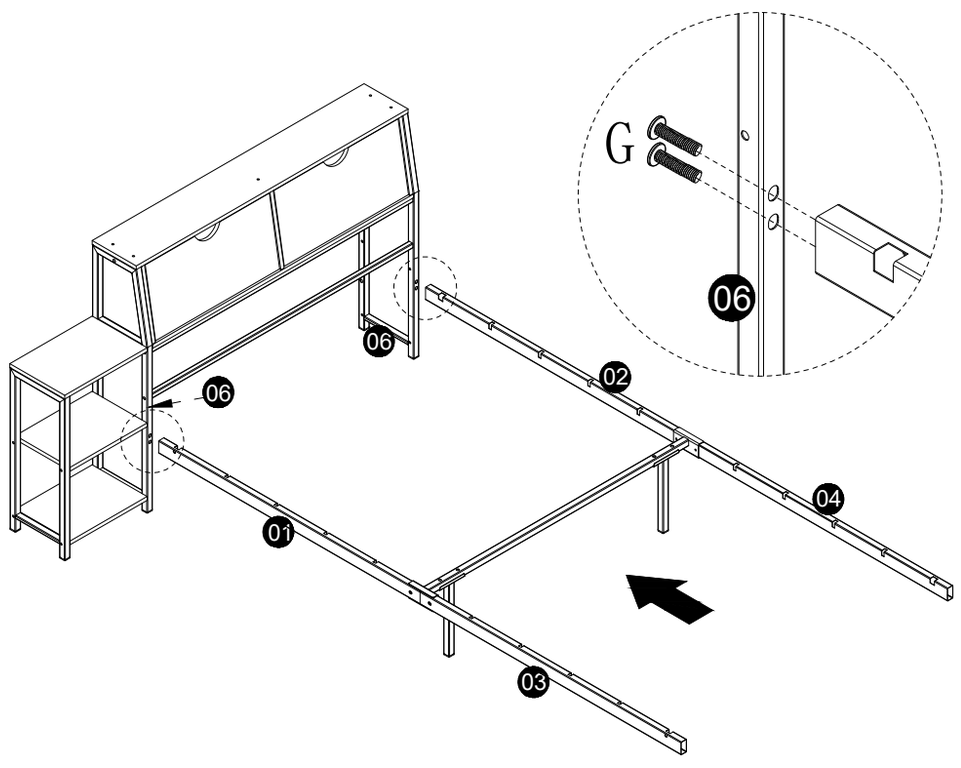


25

D	M6*28mm	1pc
I	M6*50mm	2pcs
F	M6	2pcs

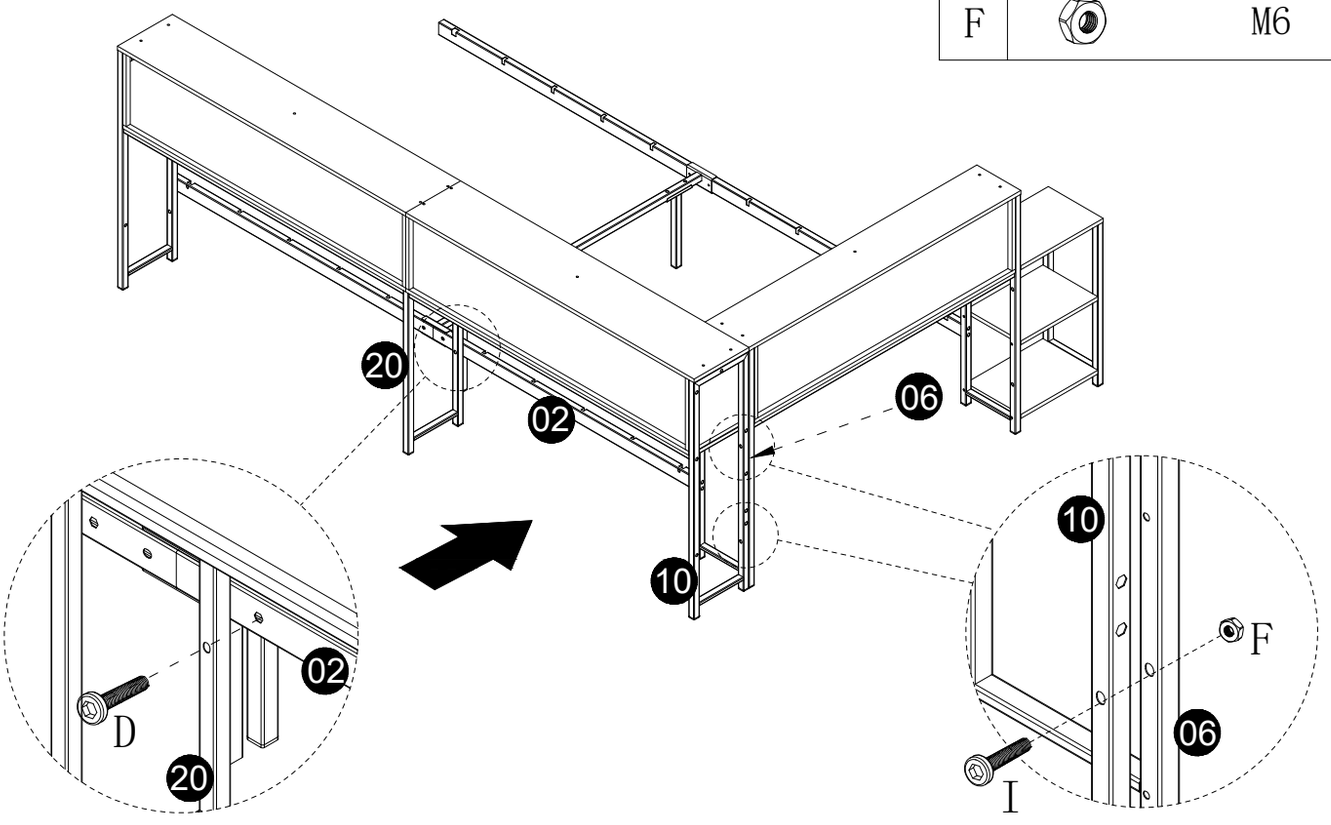


26

B	M6*15mm	2pcs
D	M6*28mm	2pcs
b		1pc

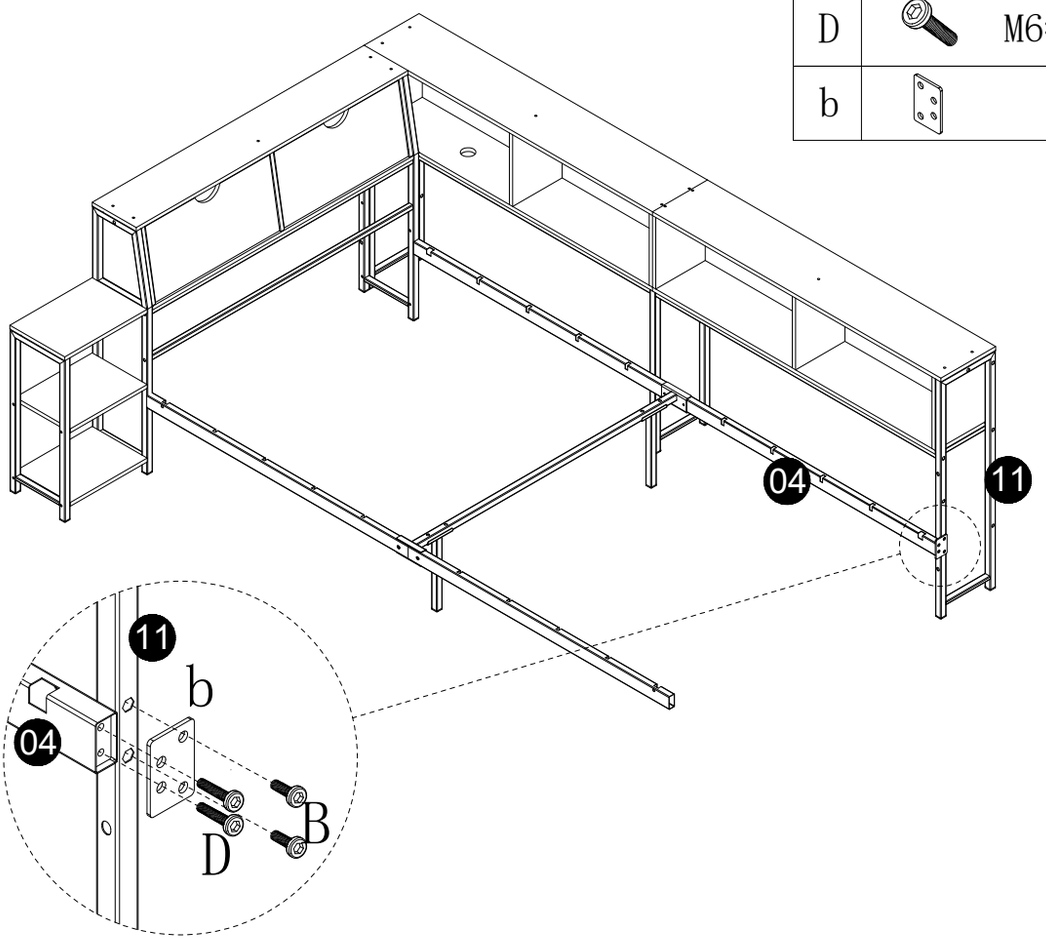


27

F		M6	1pc	D	M6*28mm 1pc
				G	M6*40mm 2pcs
				I	M6*50mm 1pc

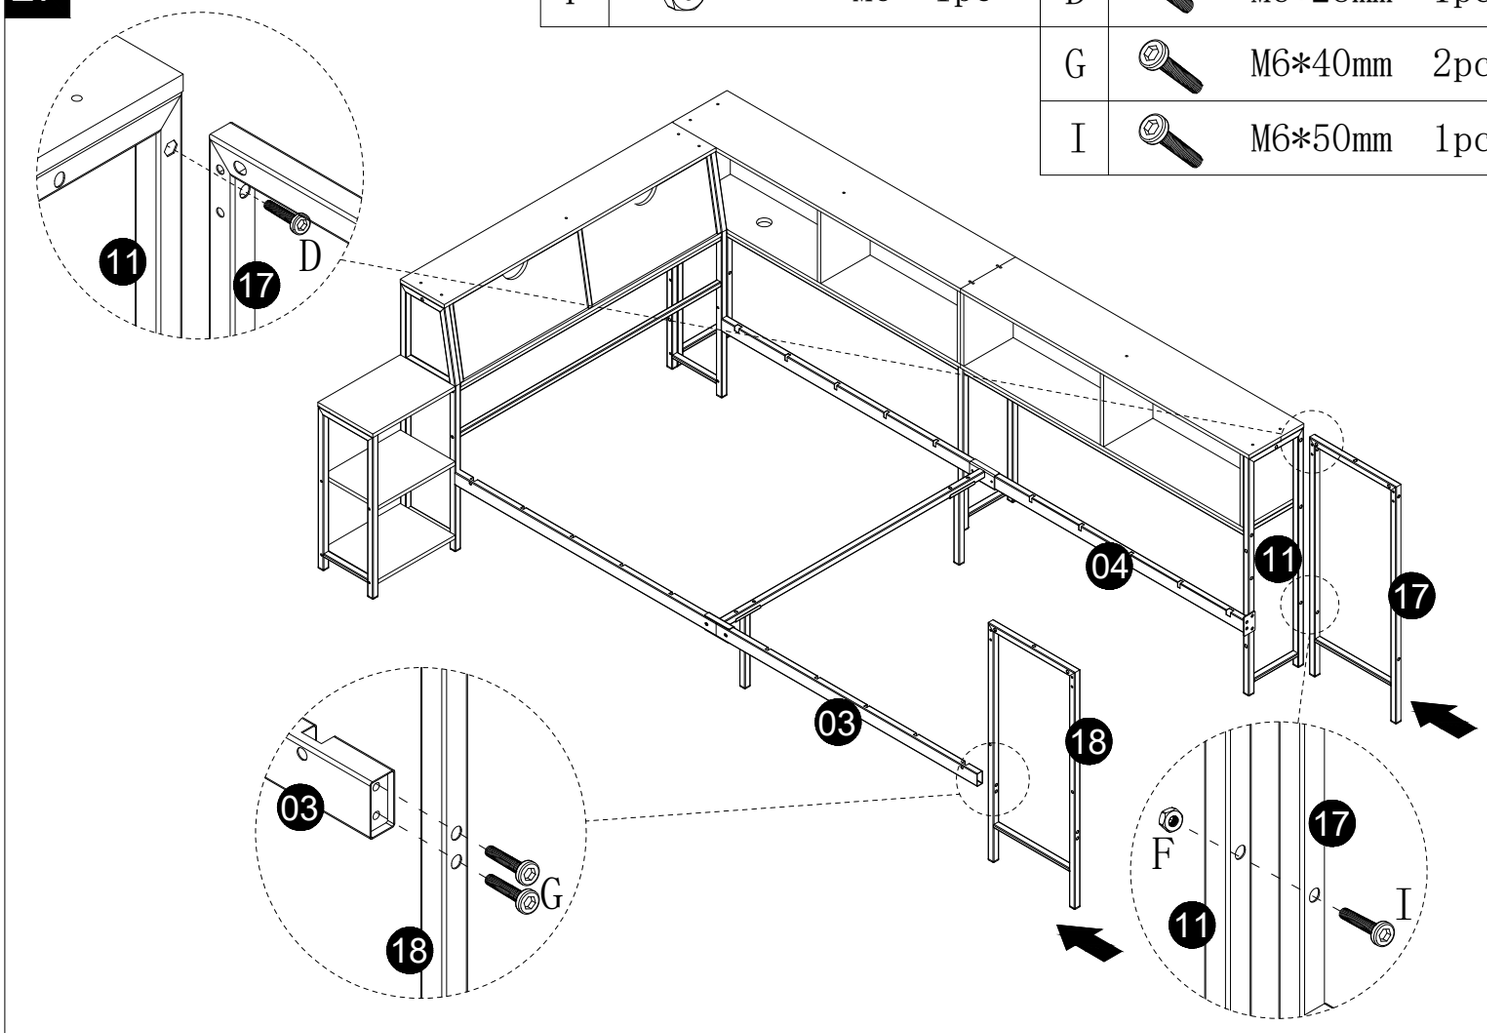


28

D		M6*28mm	1pc
G		M6*40mm	1pc

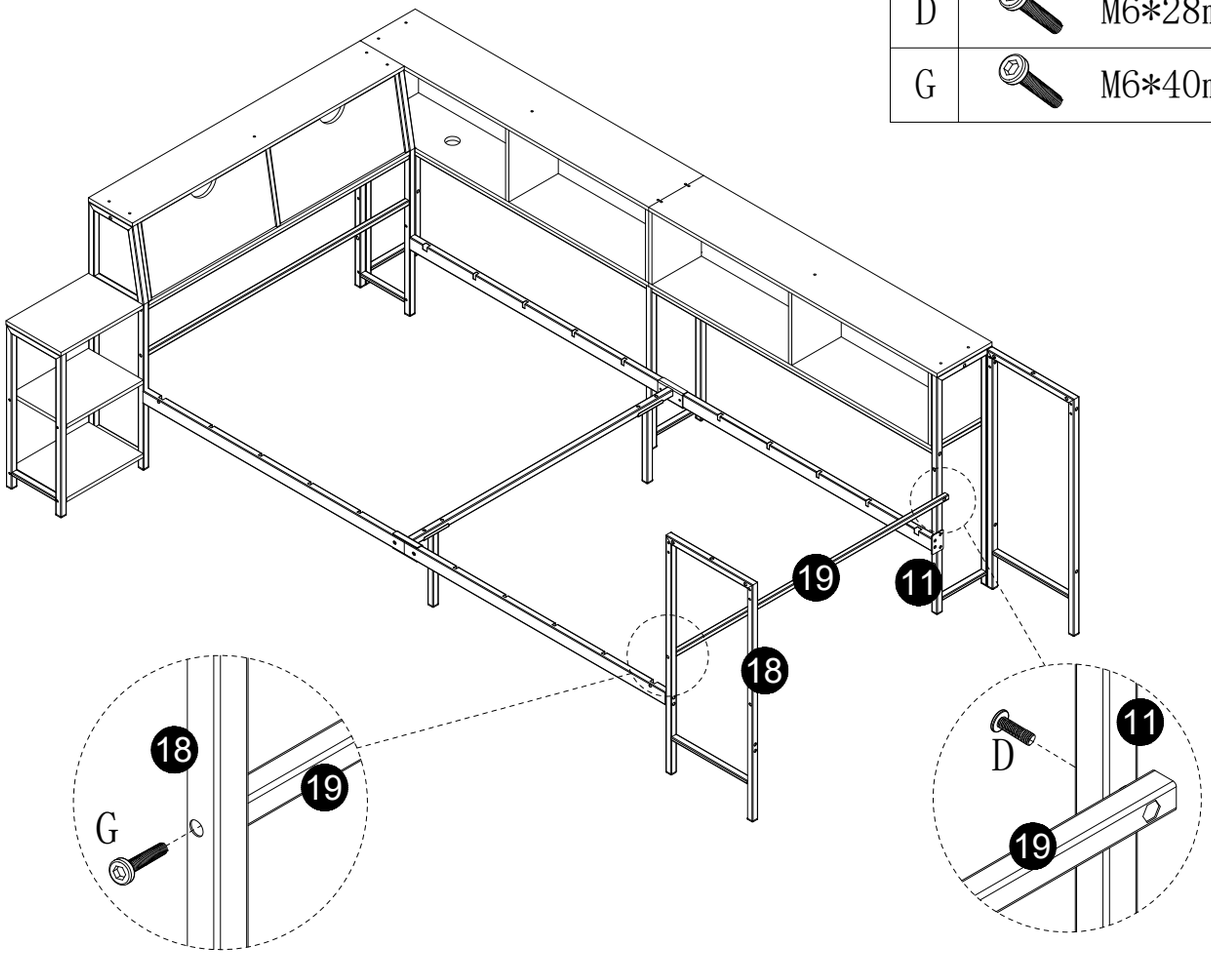

29


D	M6*28mm 4pcs

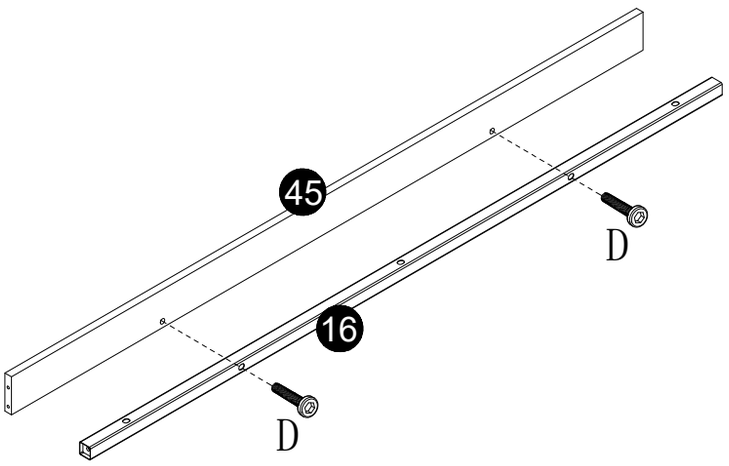

x2


30

D	M6*28mm 6pcs

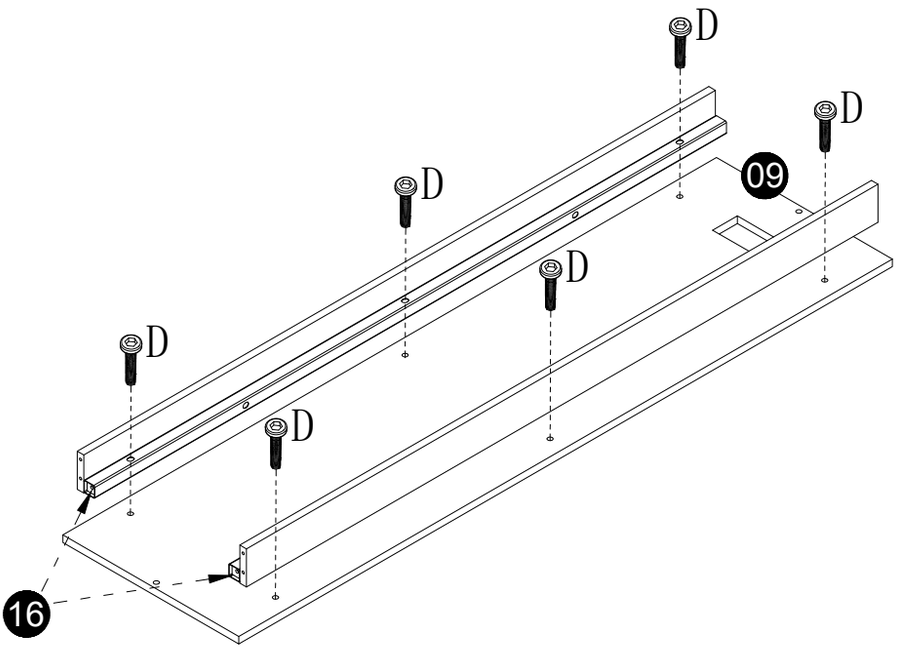


31

D	M6*28mm	2pcs

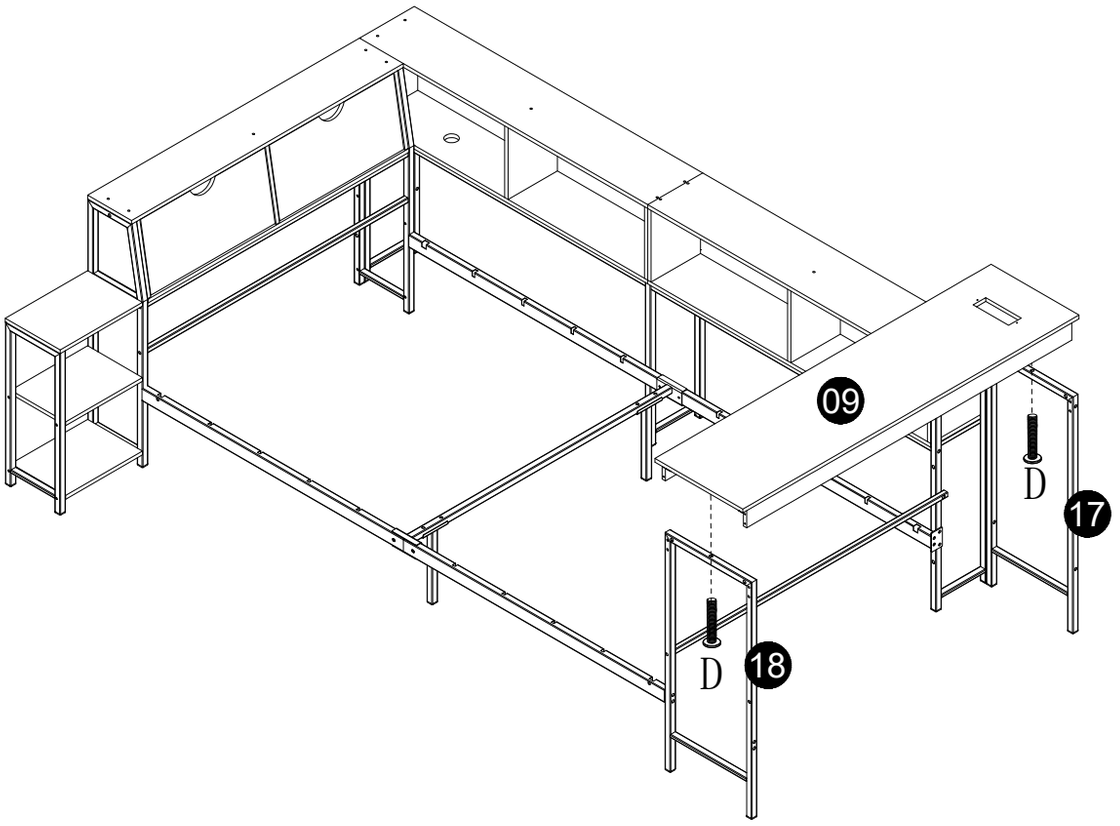


32


A	M5*40mm	8pcs
G	M6*40mm	4pcs

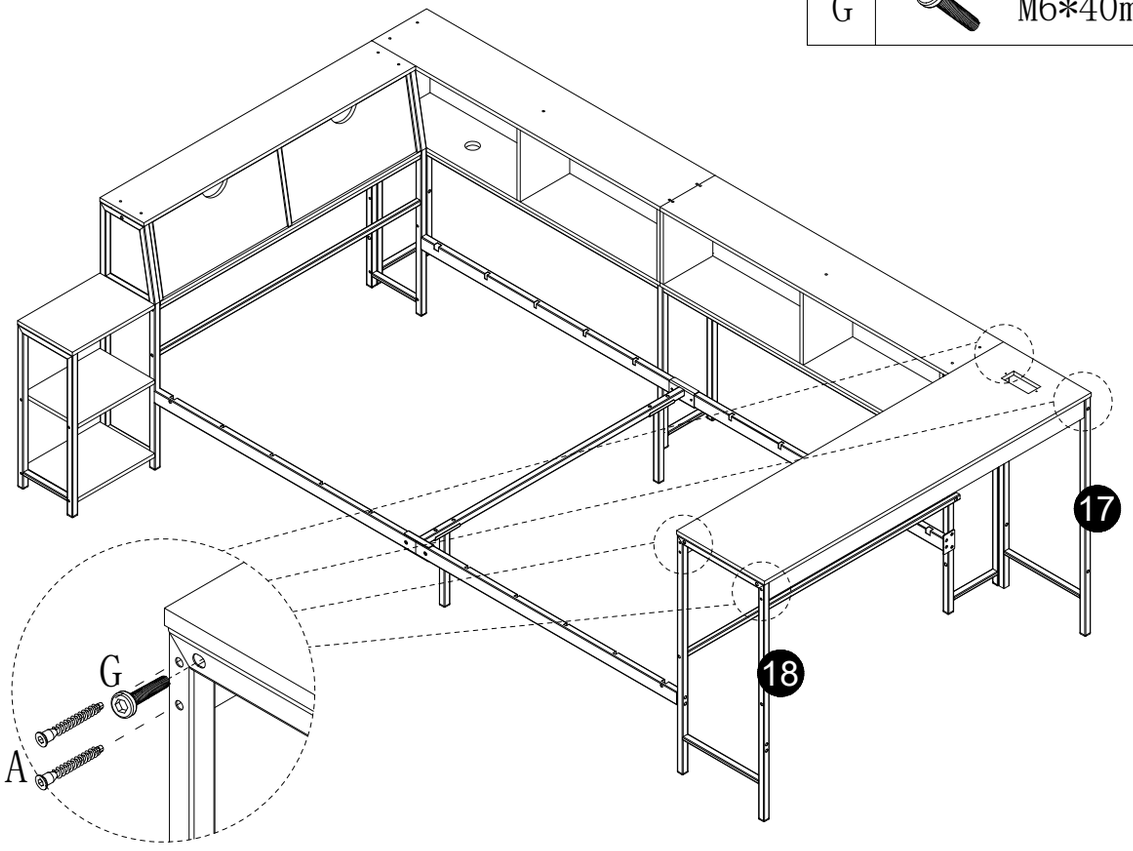


33

M	M4*10mm	3pcs
V		1pc

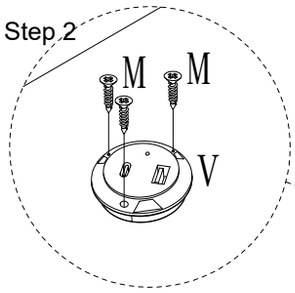


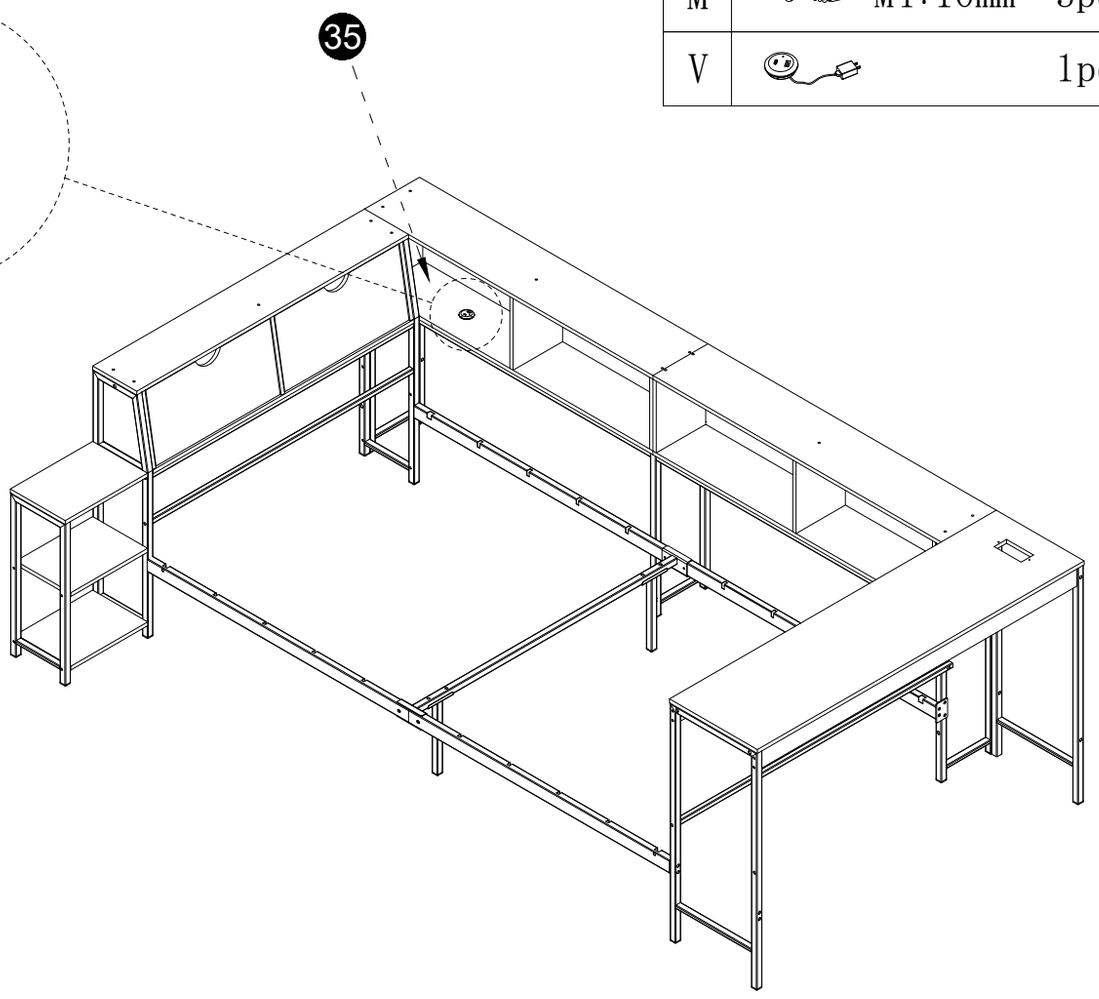


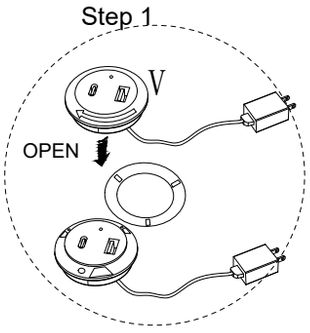

34


M	M4*10mm	2pcs
U		1pc

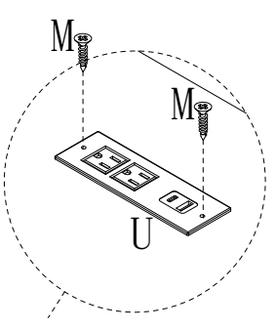

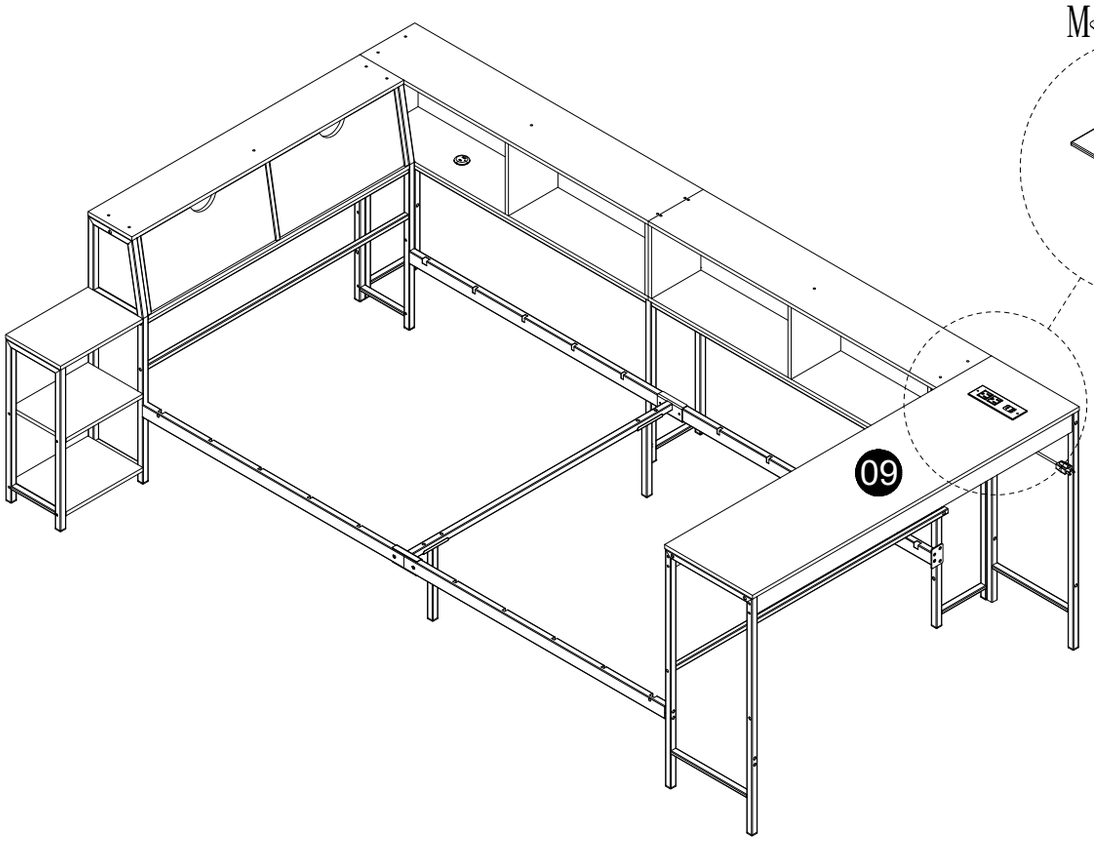


35

D	M6*28mm 4pcs

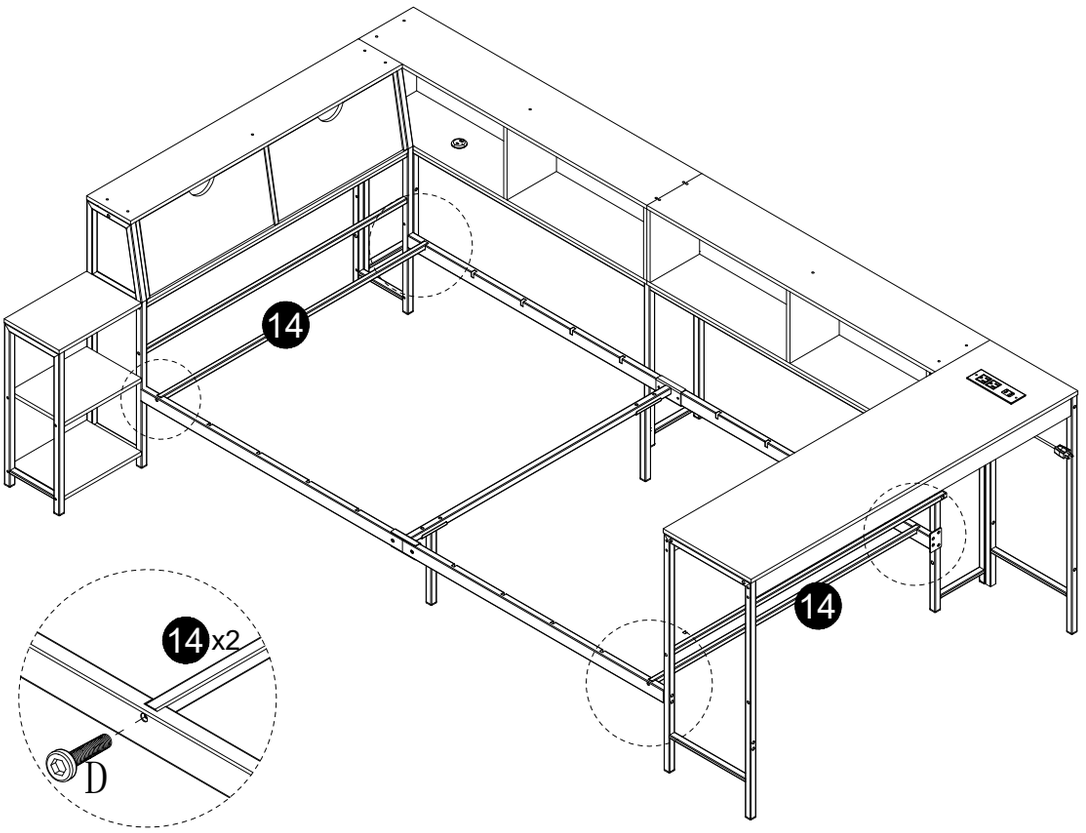


36

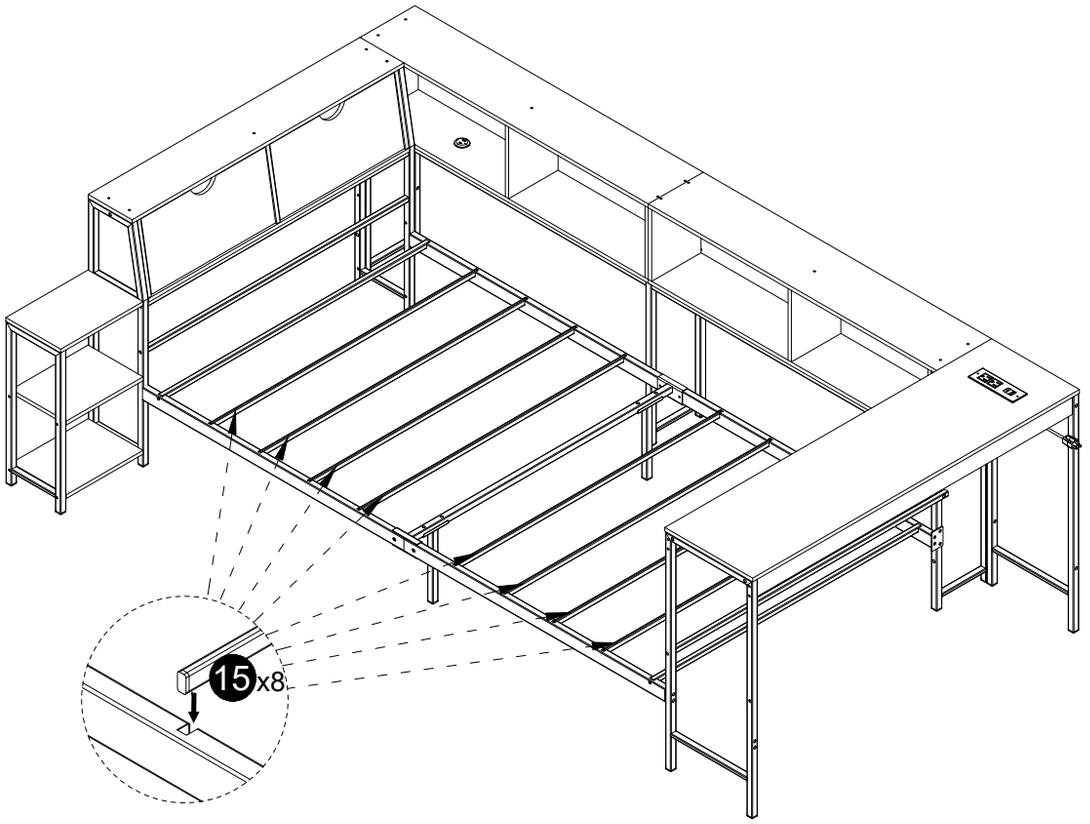


37

a		M4	16pcs
d		M4*28mm	16pcs

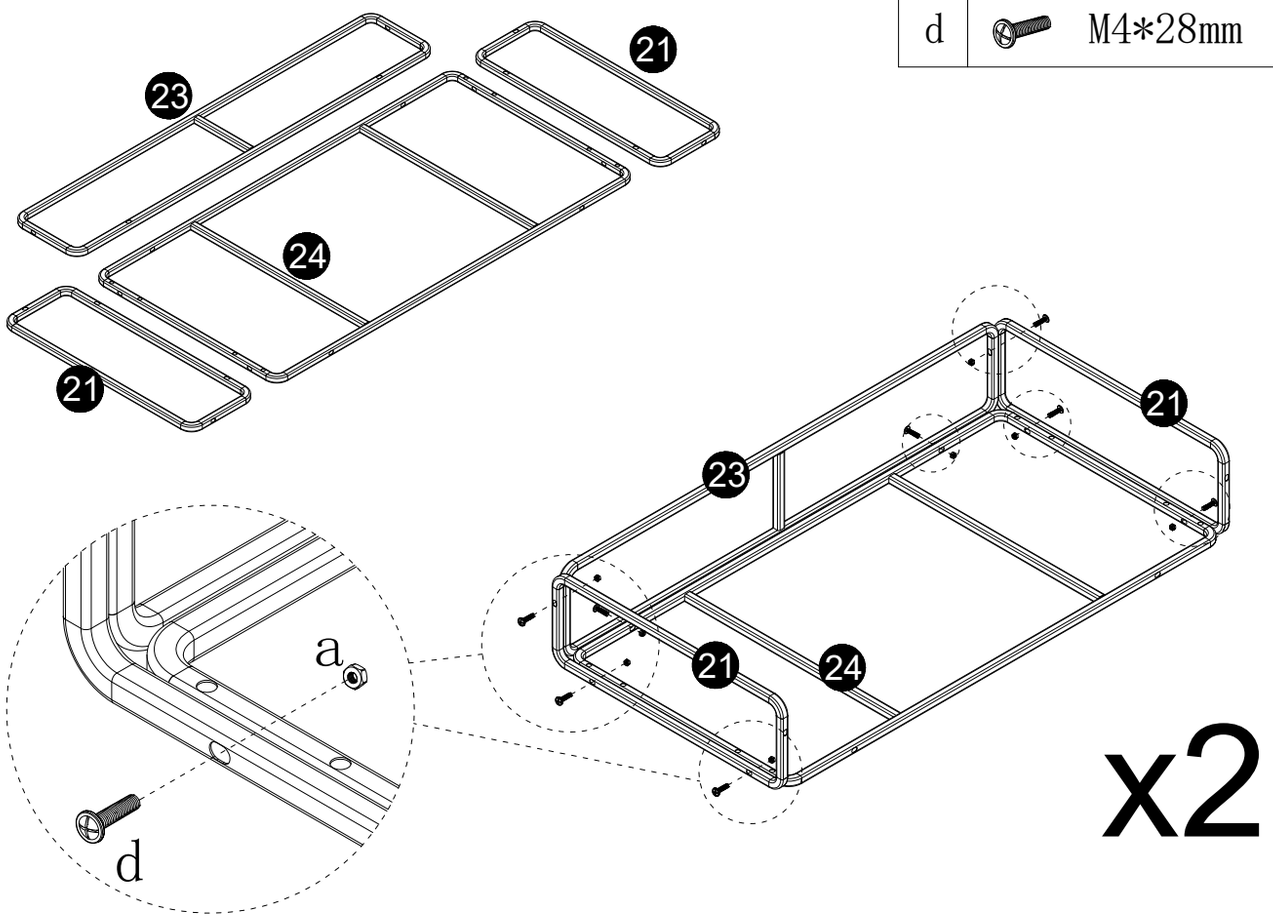


38

P		1.0	8pcs
a		M4	16pcs
d		M4*28mm	16pcs

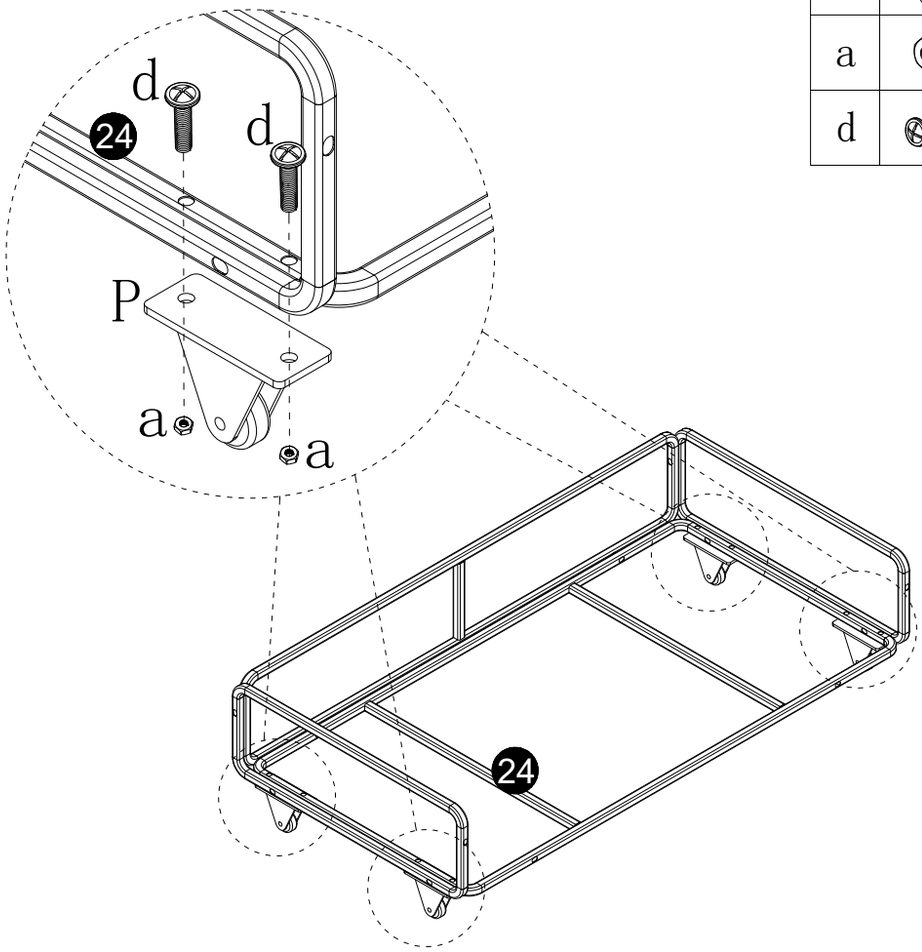


39

K	M4*18mm 8pcs

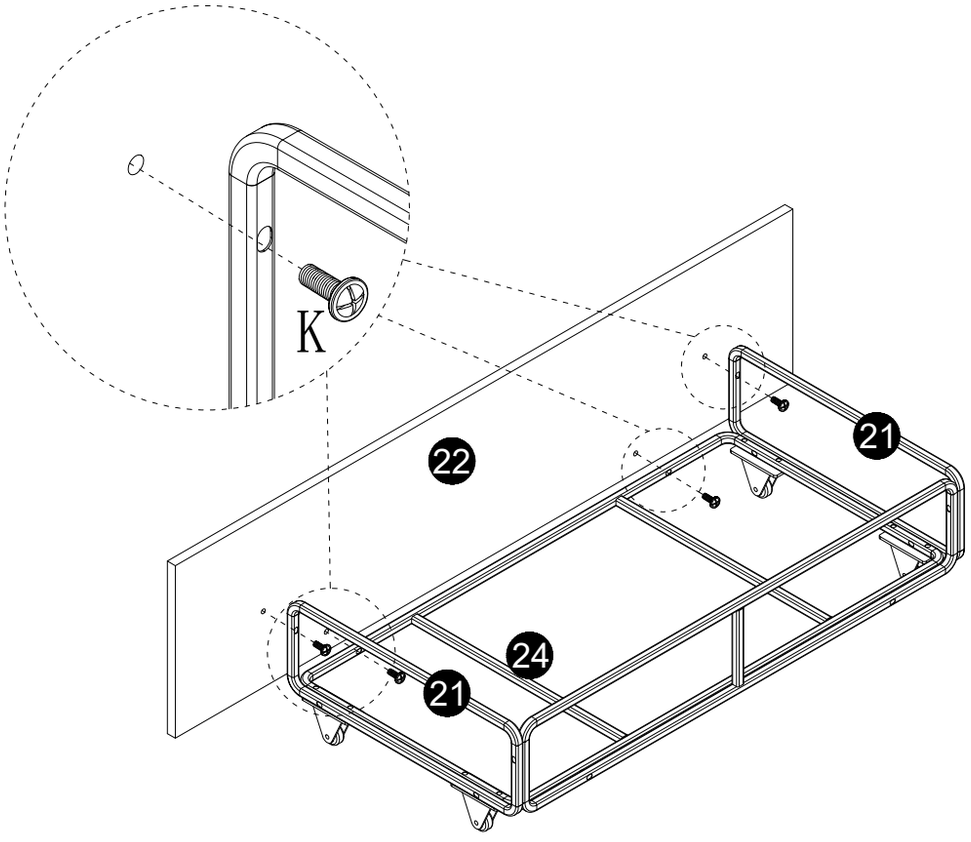


x2

40

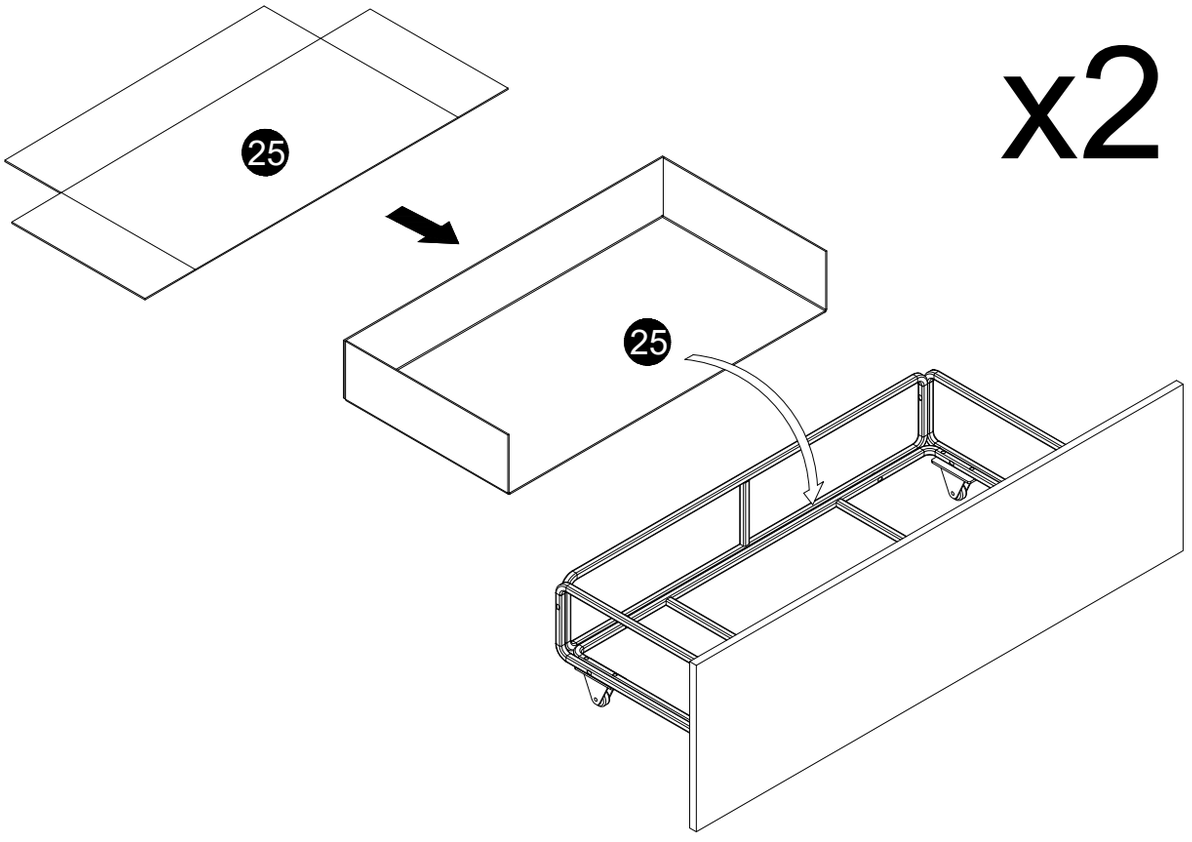

x2

41

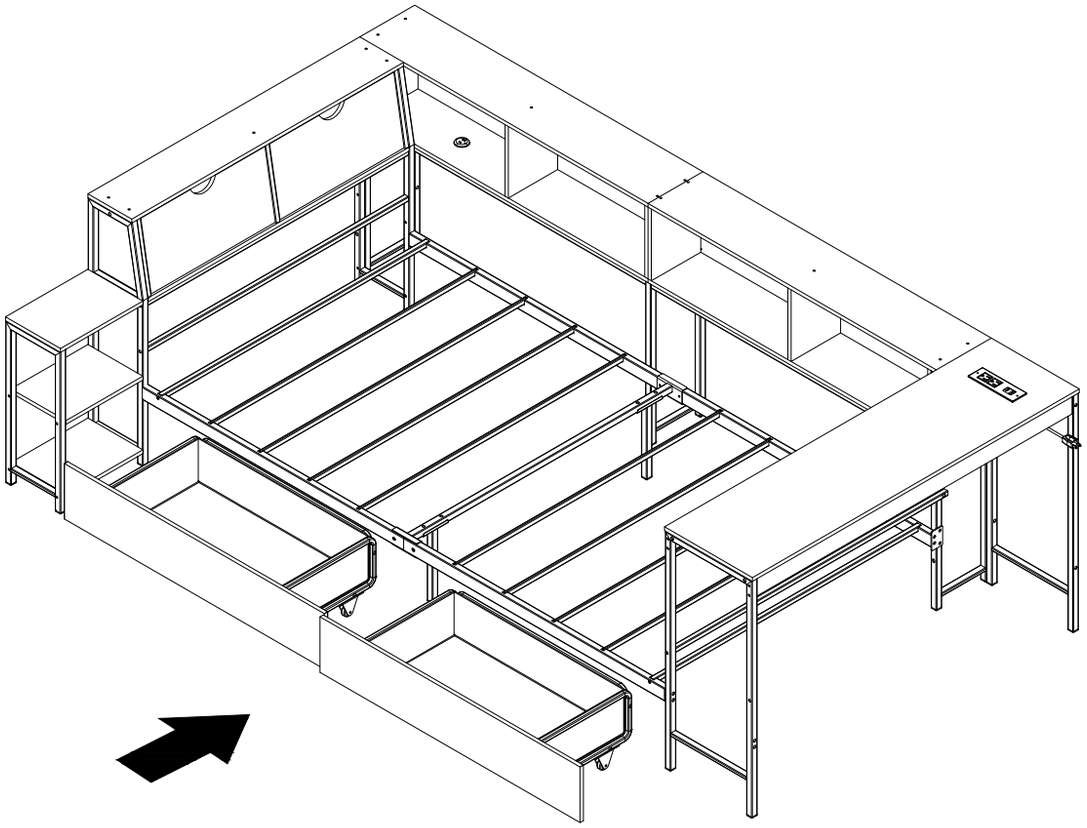

42

