



ASSEMBLY INSTRUCTIONS

2621F₁

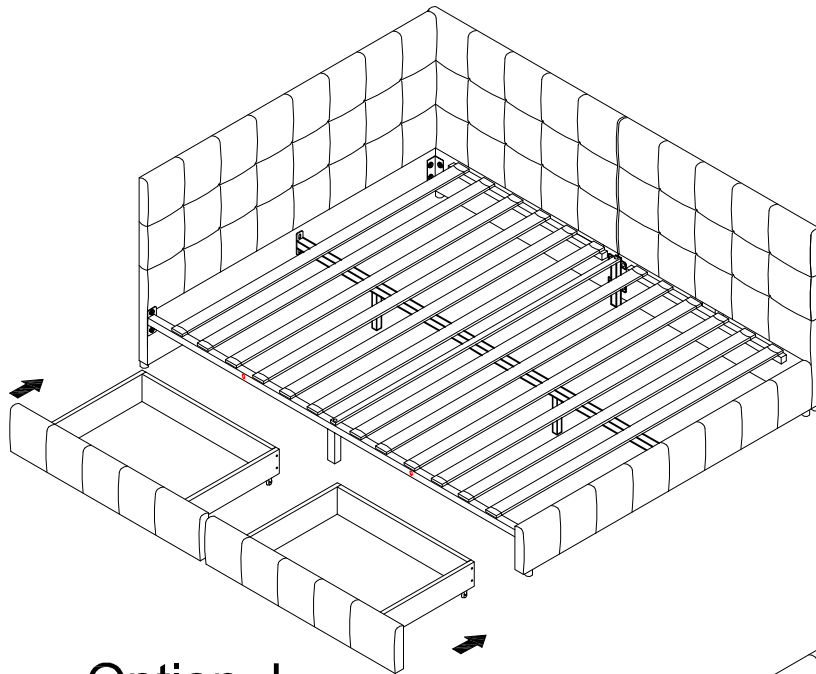

Option L

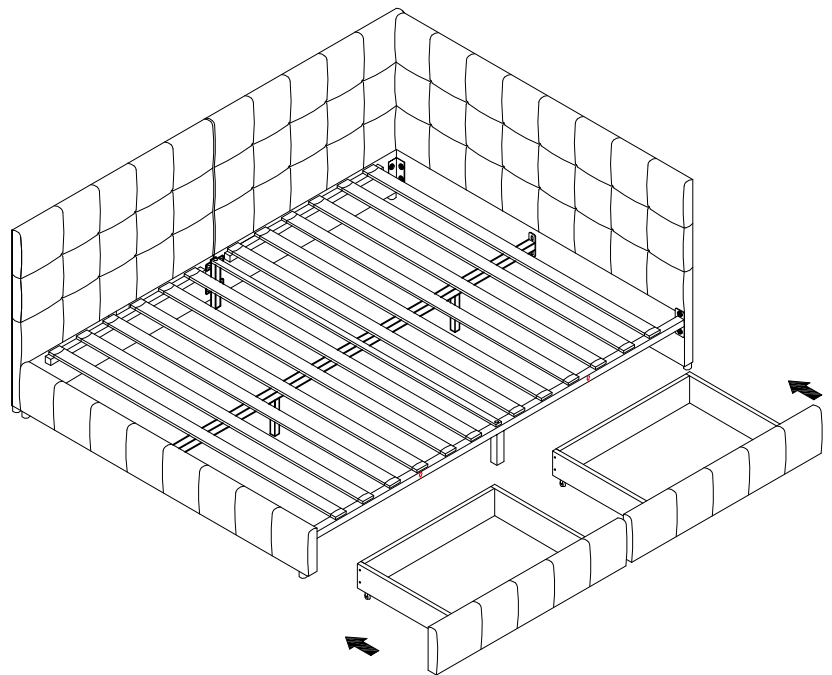


Option R

Set up the bed according to the needs of the room to choose the direction. Option L & Option R


PARTS AND HARDWARE

① Headboard

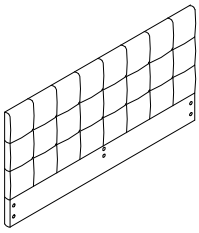


1PC

② Footboard

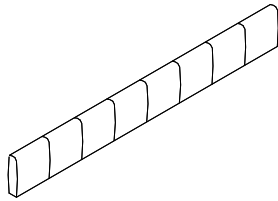


1PC

③ Side rail -1

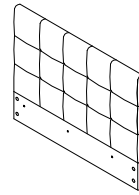


1PC

④ Side rail -2

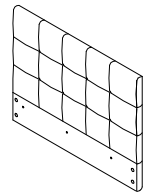


1PC

⑤ SR Support Rail

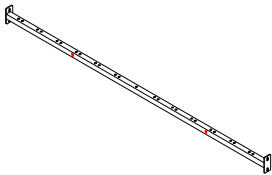


1PC

⑥ SR Support Rail

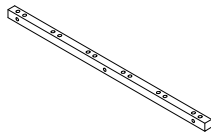


2PCS

⑦ Center support rail

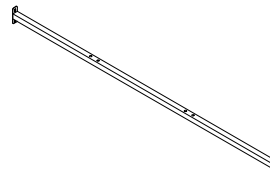


1PC

⑧ Support Leg




3PCS

⑨ Leg




6PCS

⑩ Single Sided Plastic cap




24PCS

⑪




1PC

⑫




2PCS

⑬

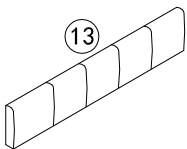

2PCS

⑭




2PCS

⑮




2PCS

⑯




2PCS

⑰



2PCS

⑱

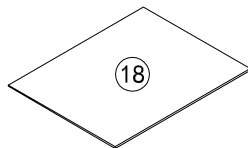


2PCS

⑲




8PCS

⑳ Slat

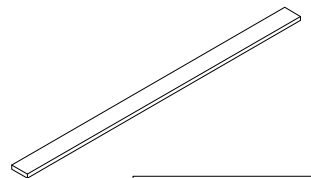


12PCS

㉑ Side Rail Feet




1PC

㉒ Iron Plate



1PC










㉓ Center cross bar

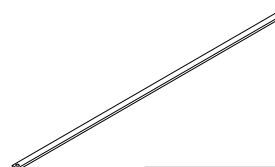


1PC

PARTS AND HARDWARE


HARDWARE LIST:

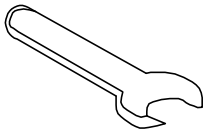
A  m8*30mm 35PCS	B  m6*50mm 10PCS	C  M6 4PCS	D  m6*19mm 14PCS
E  m8 35PCS	F  m8*19mm 35PCS	G  m8 1PC	H  m6 1PC
I  M6 1PC	J  12PCS	K  12+1PCS	L  8*30mm 12PCS
M  8*15mm 32PCS	N  1PC	O  m6*30mm 2PCS	

STEP 1 Side Rail -1&-2

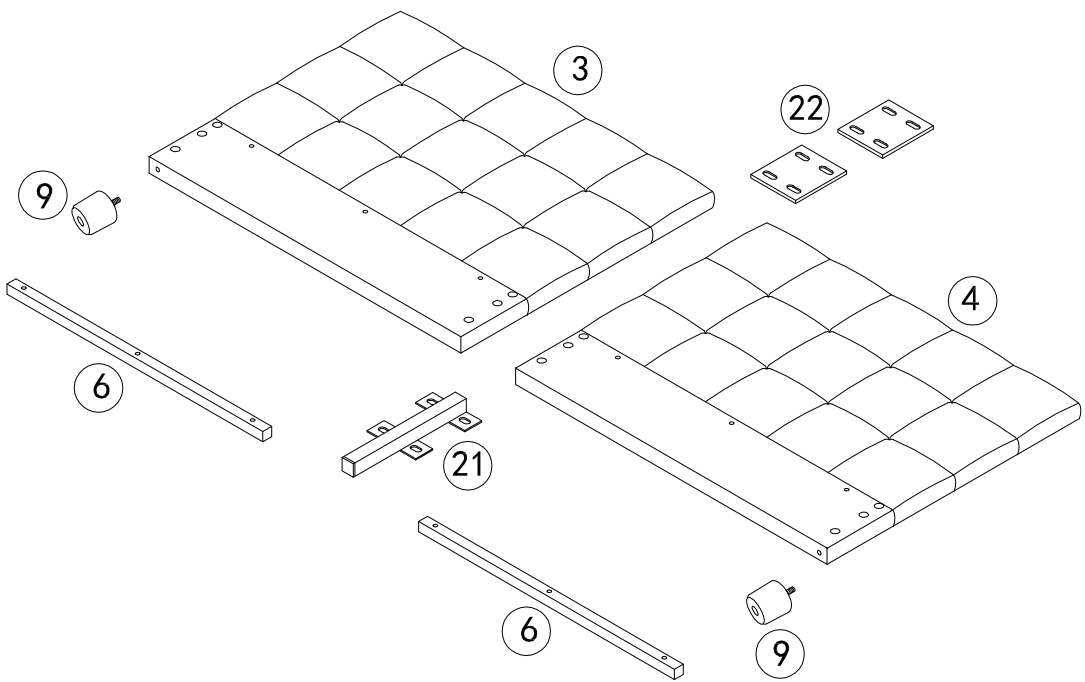


STEP 2 Side Rail -1&-2


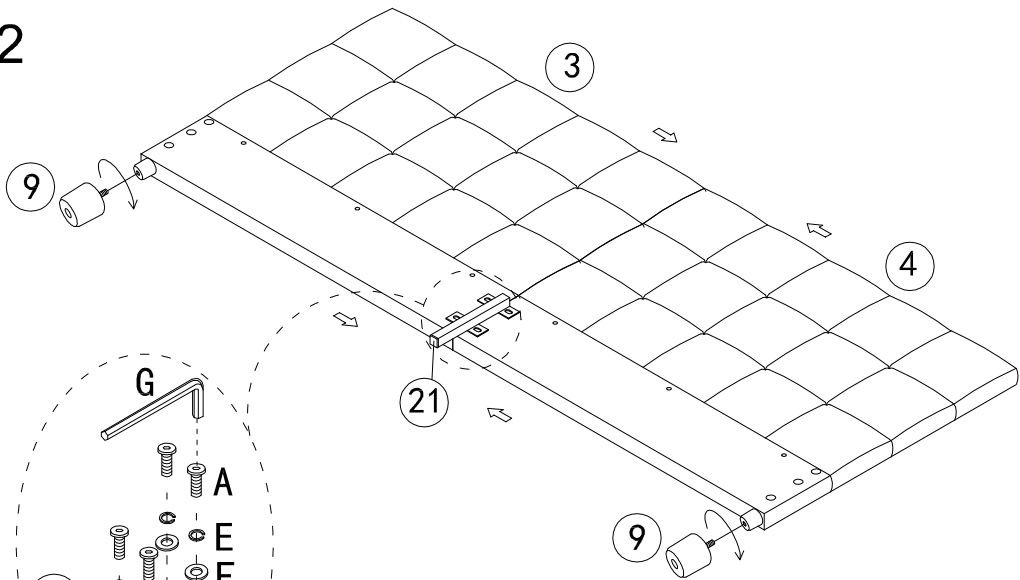



m8*19mm

	A x4PCS
	F x4PCS
	E x4PCS
	G x1PC




9 x2PCS

STEP 3
Side Rail -1&-2

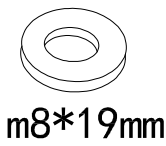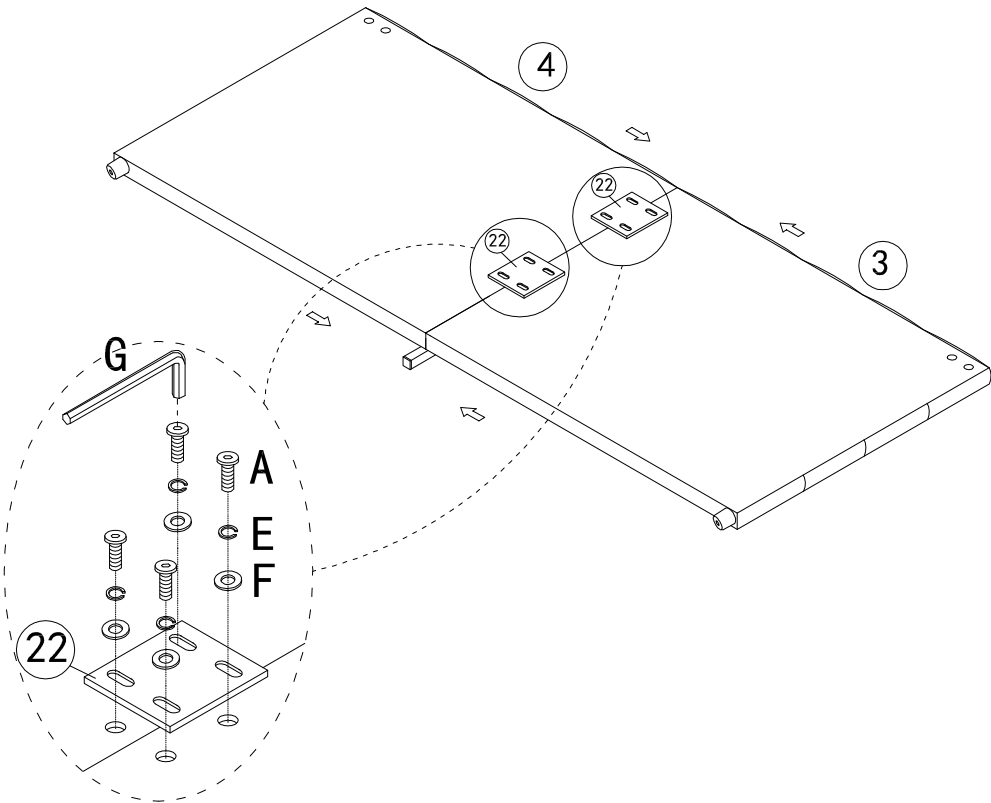


	A x8PCS
	F x8PCS
	E x8PCS
	G x1PC

STEP 4

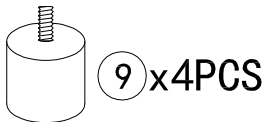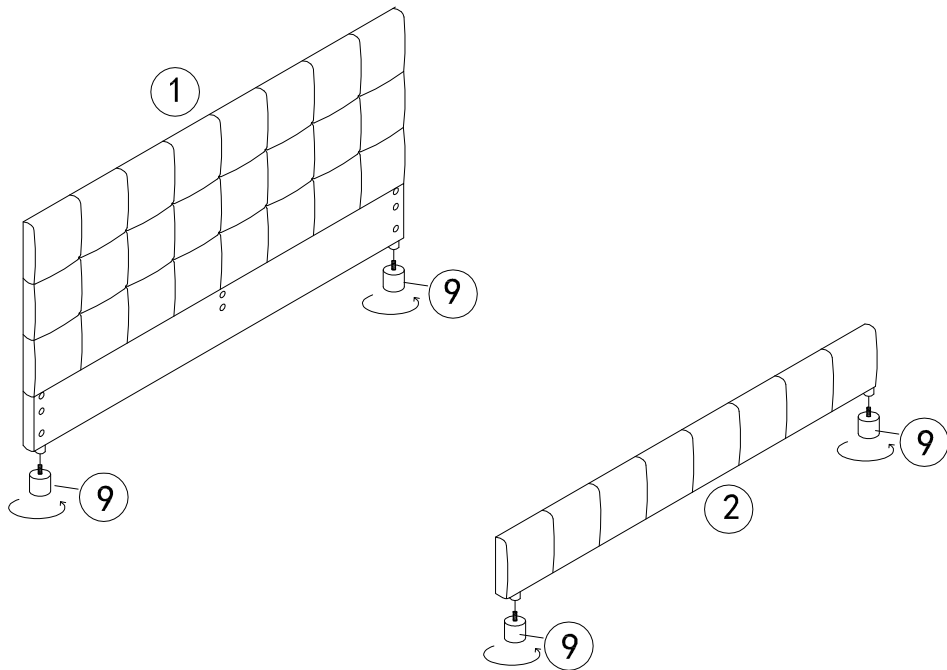




STEP 5

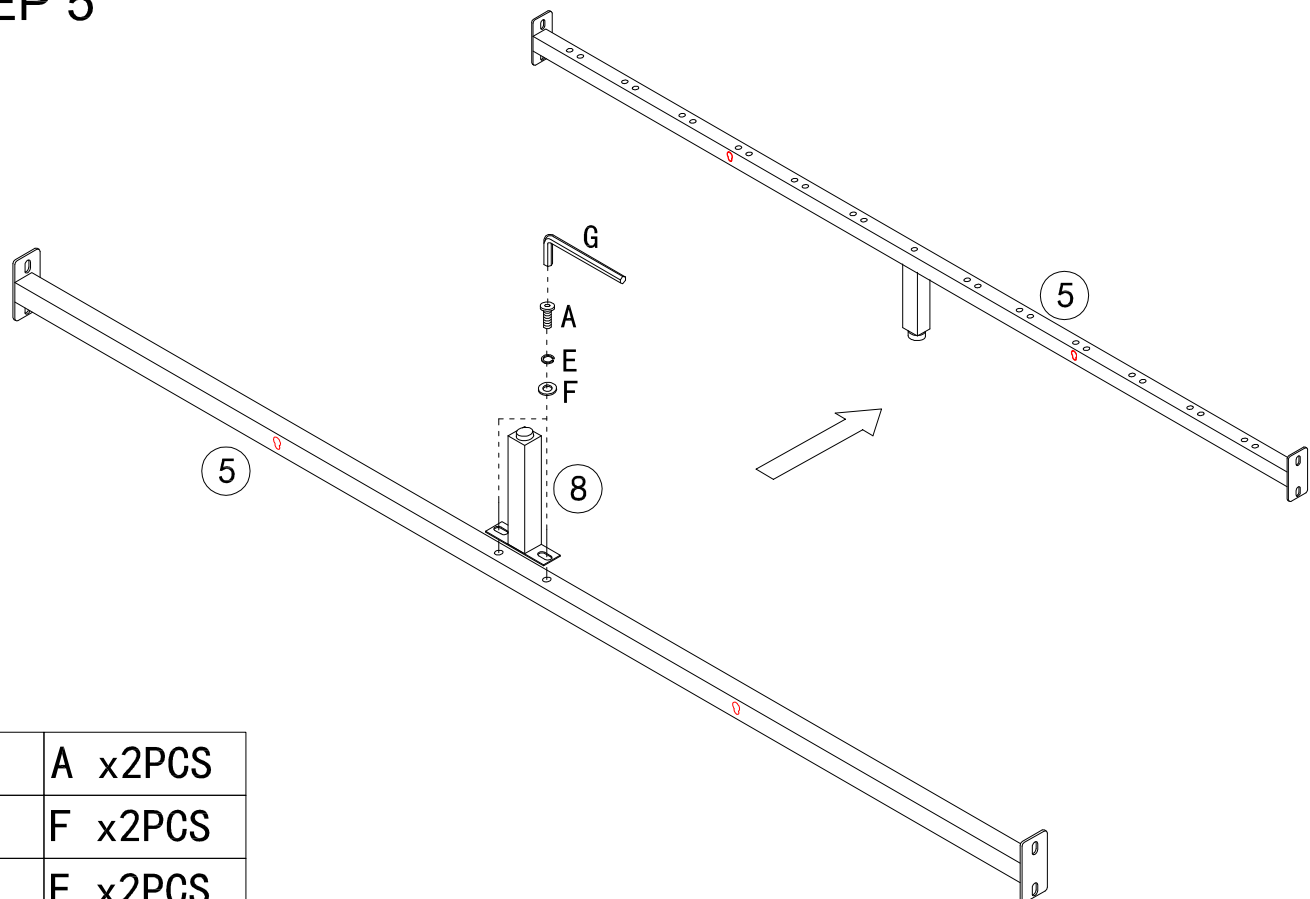



	A x2PCS
	F x2PCS
	E x2PCS
	G x1PC

STEP 6

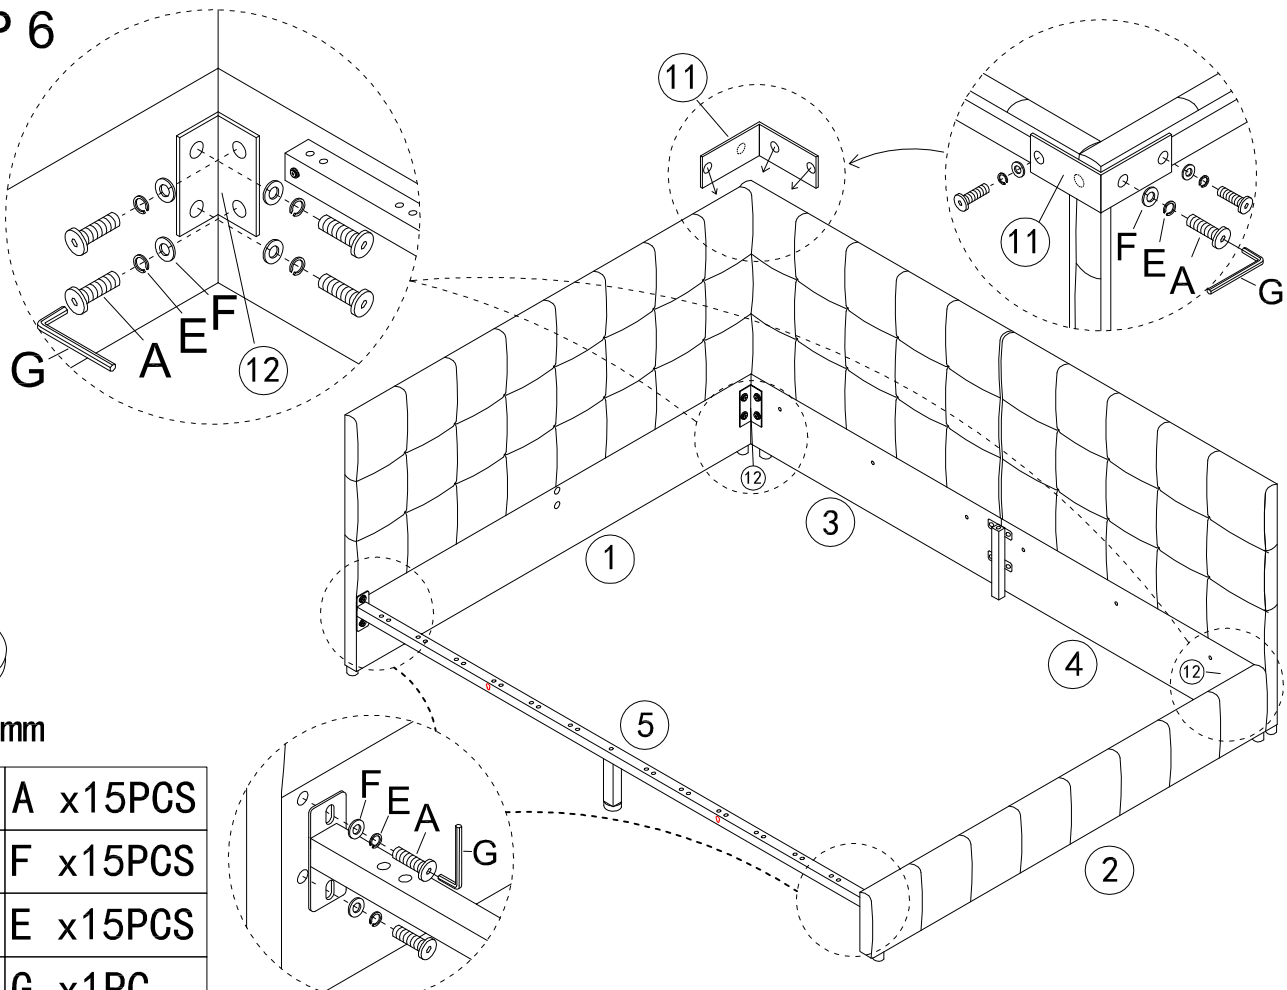

	
m8*19mm	
	A x15PCS
	F x15PCS
	E x15PCS
	G x1PC


STEP 7

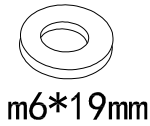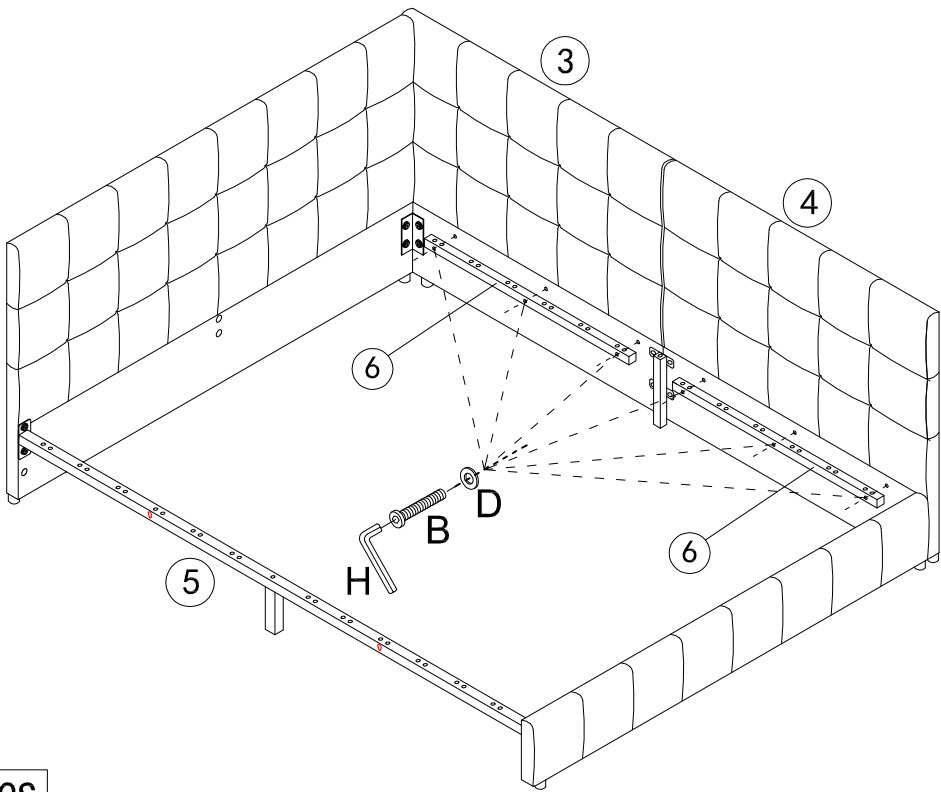


m6*19mm

	B x 6PCS
	D x 6PCS
	H x 1PC

STEP 8

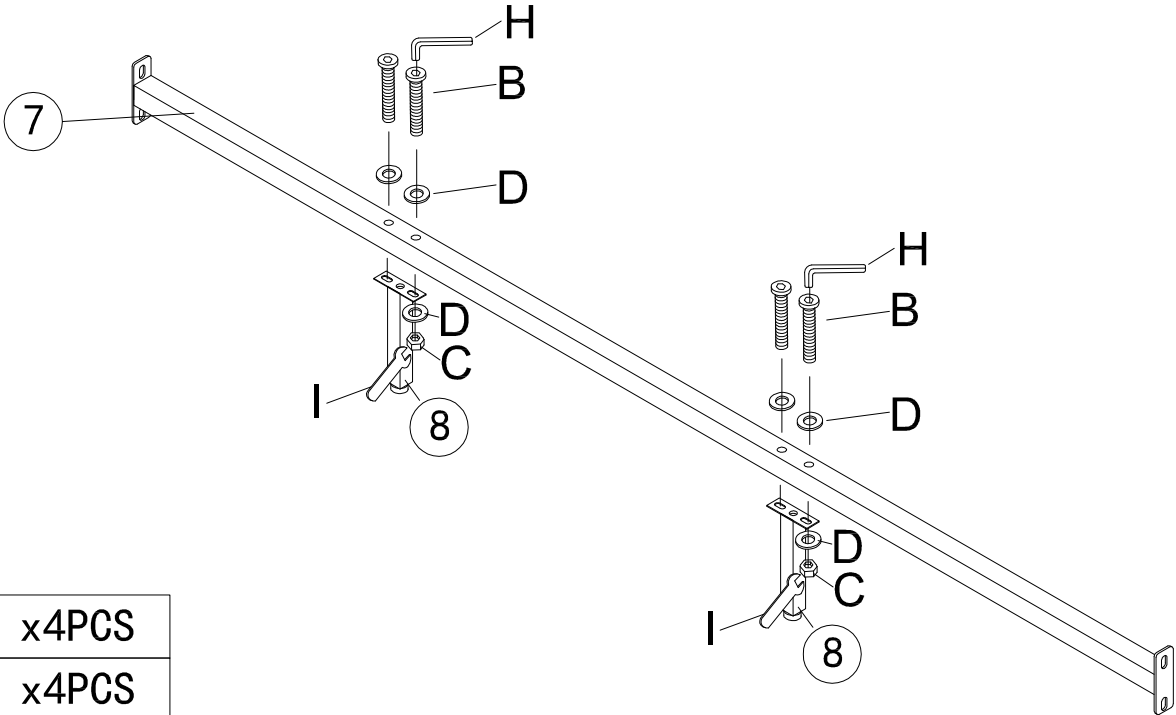


	B x4PCS
	C x4PCS
	D x8PCS
	H x1PC
	I x1PC

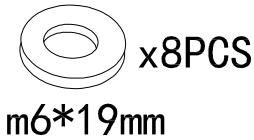



x8PCS

m6*19mm

STEP 9

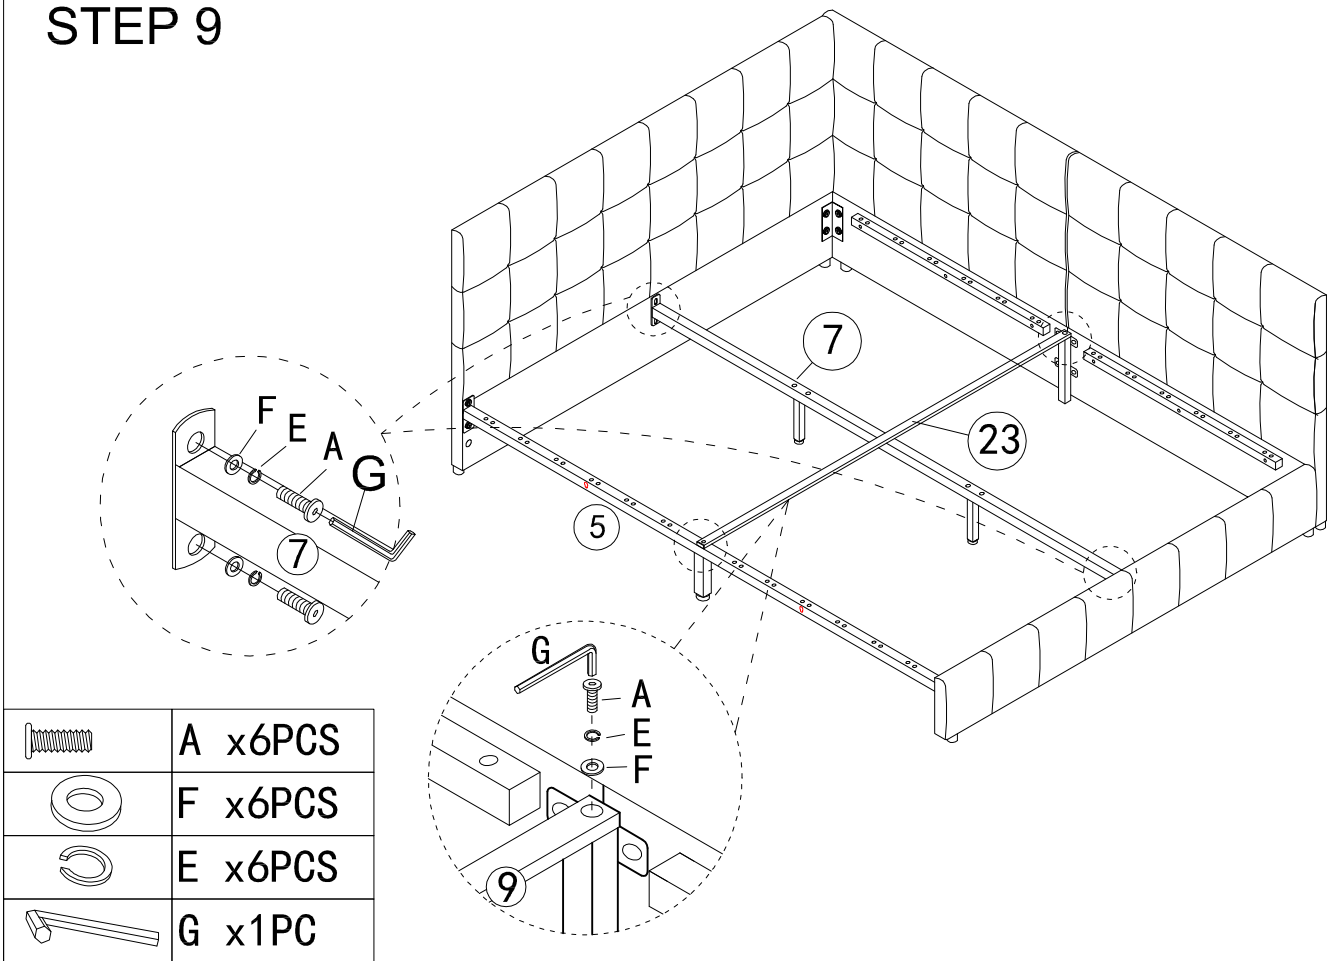



STEP 10

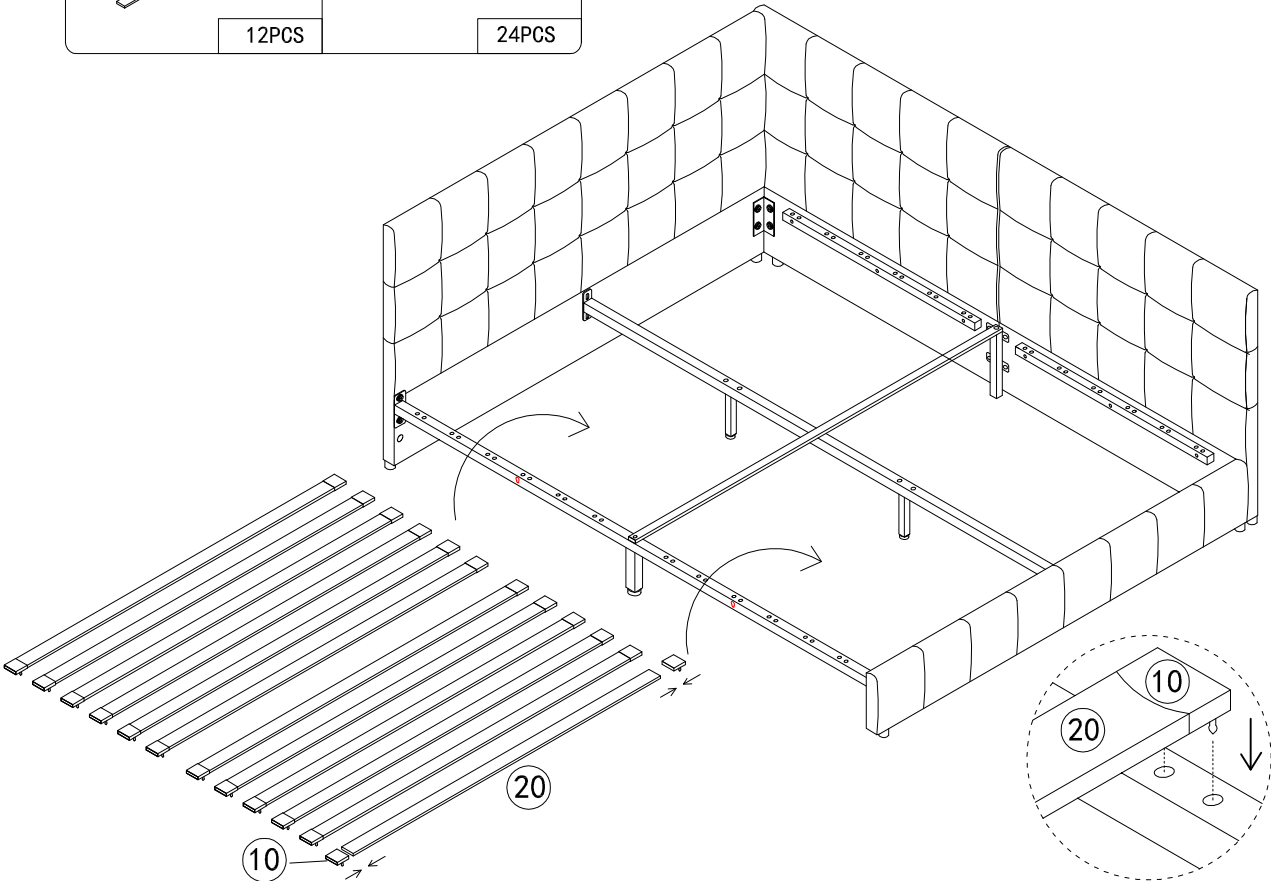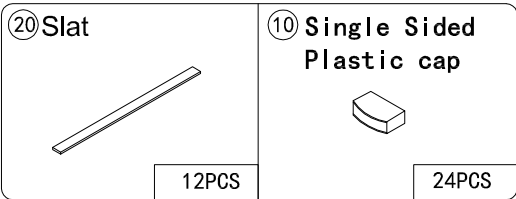



STEP 11

THIS IS HOW A CAM NUT WORKS...

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




THE HEAD OF BOLT GOES INTO THE WIDE MOUTH OF THE CAM NUT. YOU THEN TURN THE NUT SO THE NARROW PART CLOSES OVER THE BOLT.

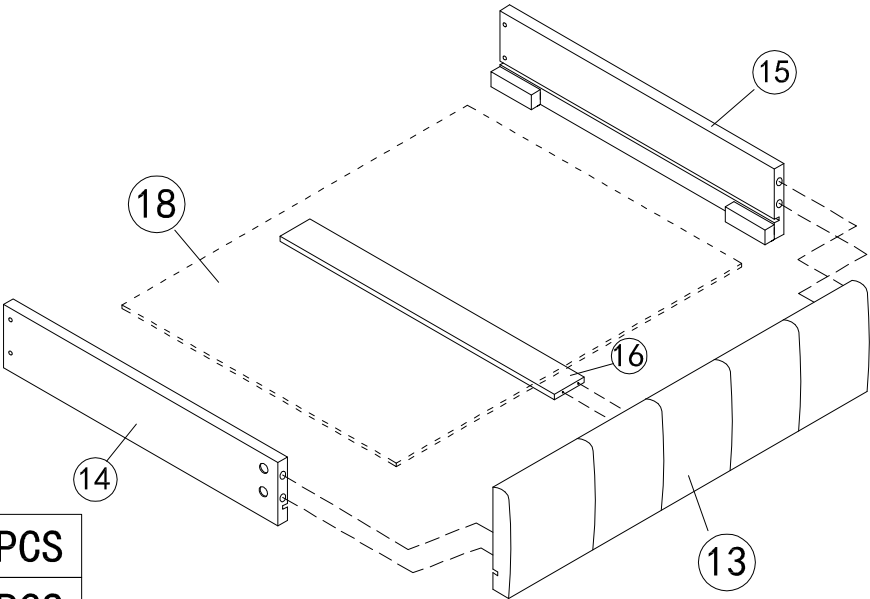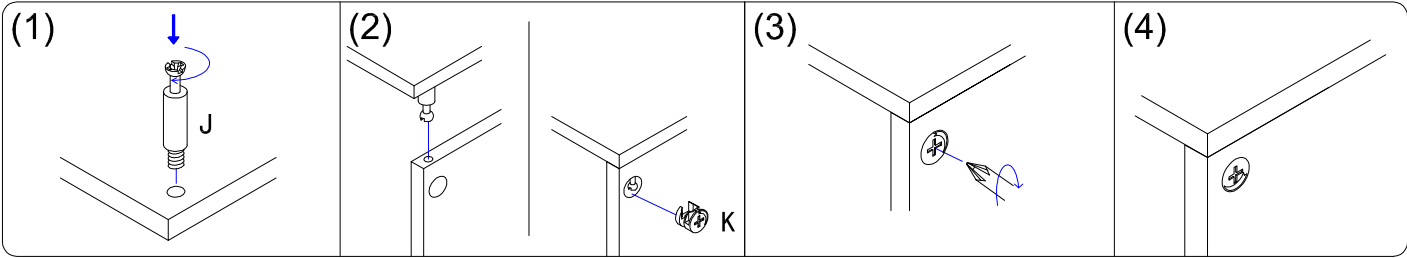

x2

	Jx12PCS
	Kx12PCS


STEP 12

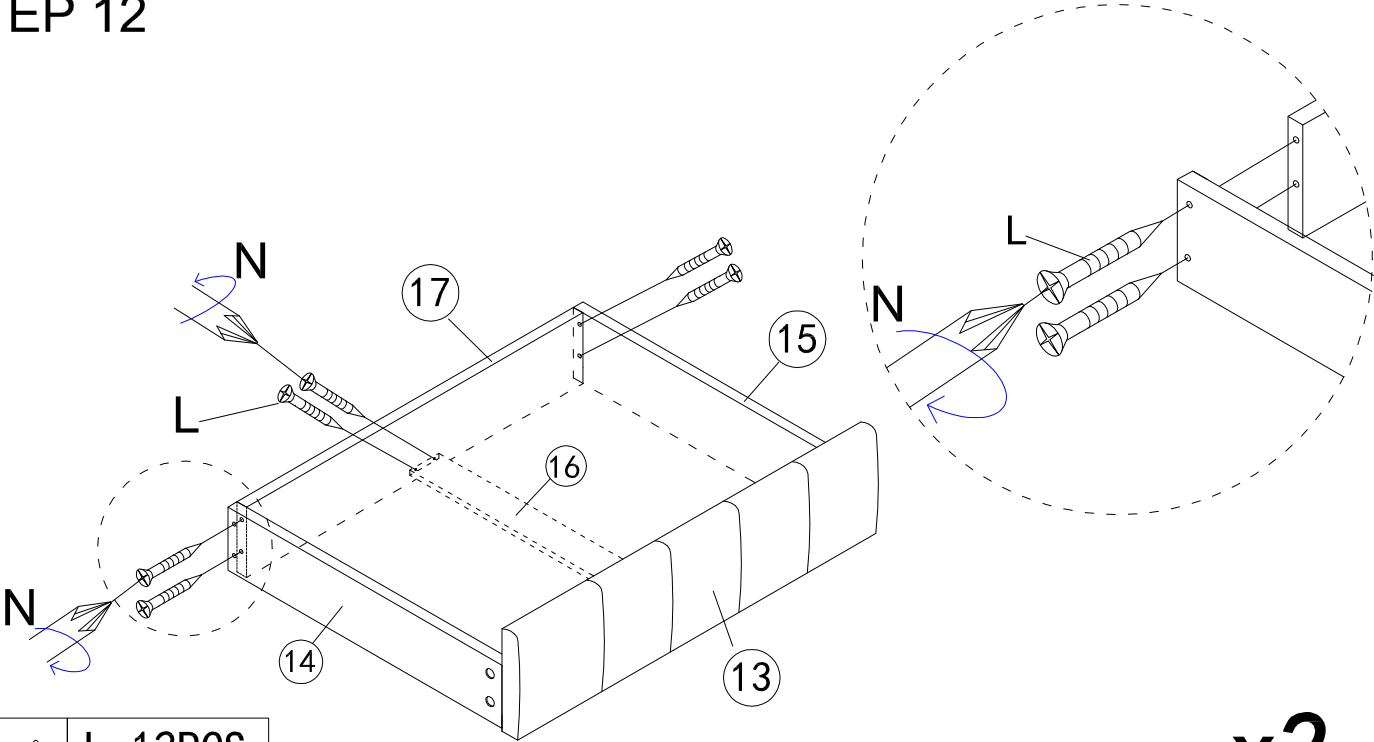

x2


	Lx12PCS
	Nx1PC

STEP 13

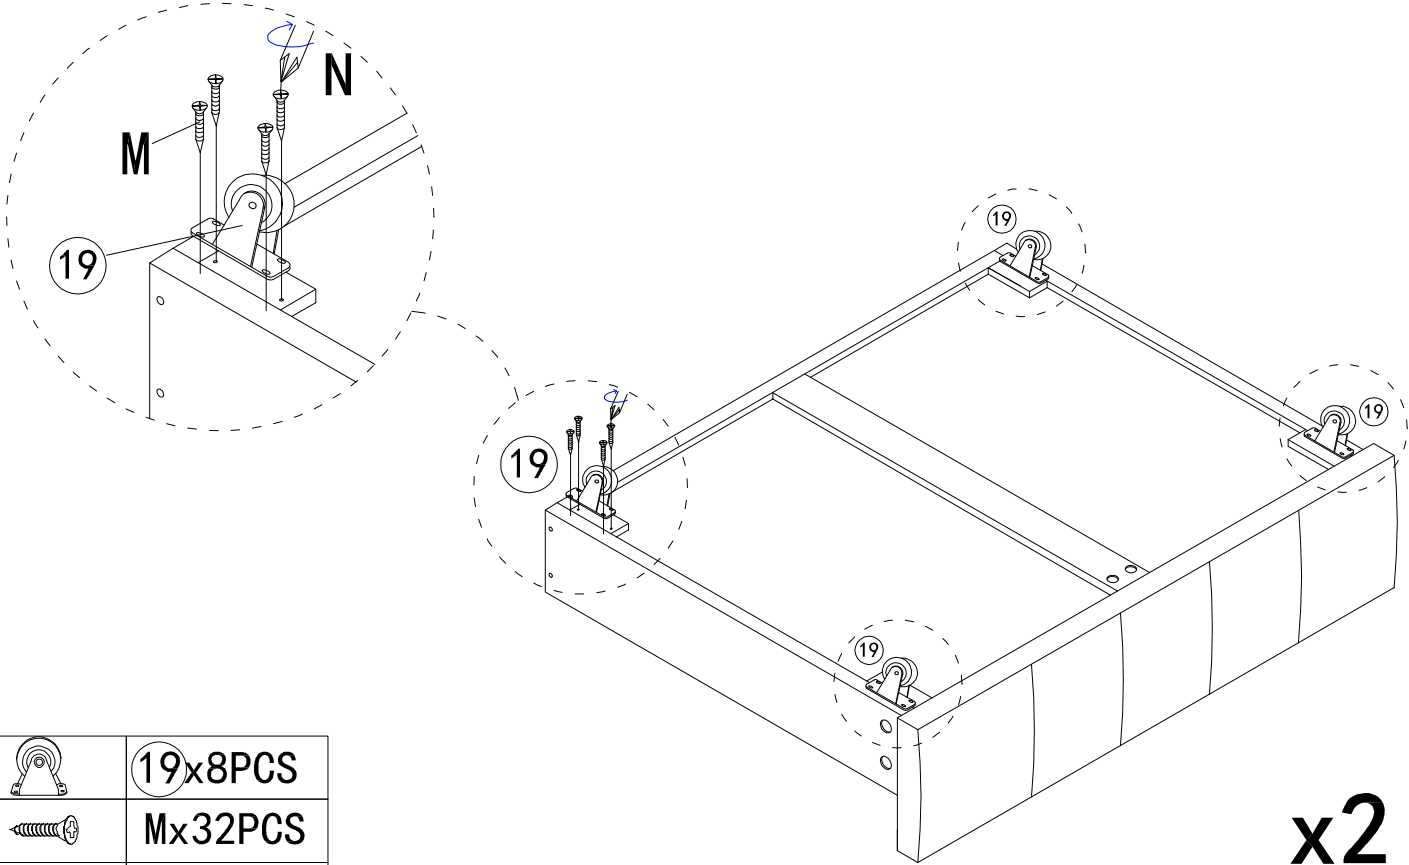

	19x8PCS
	Mx32PCS
	Nx1PC


STEP 14

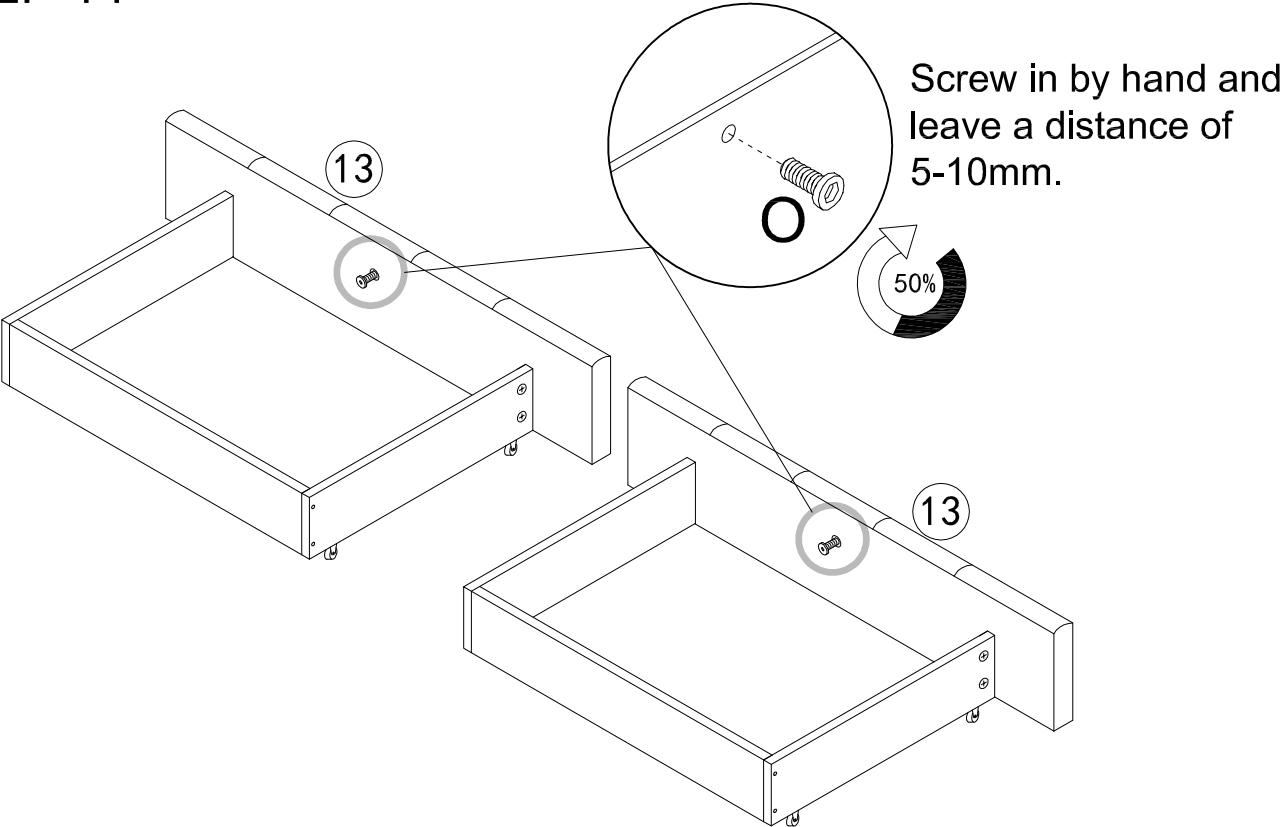

	0 x2PCS
--	---------

STEP 15

Drawer panel screw hang into side cross beam hole.

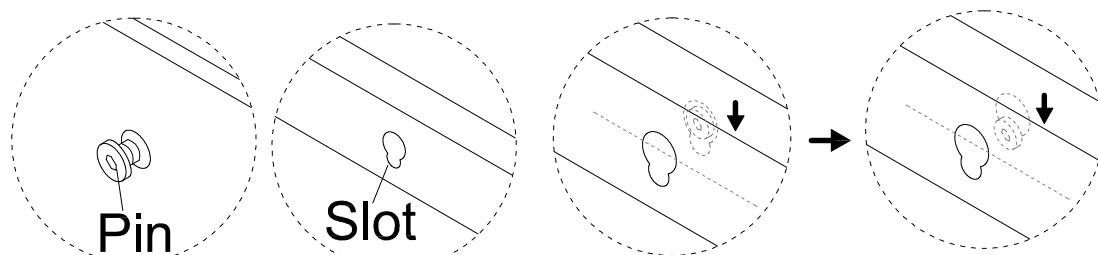

There is a screw head on the drawer board. Hang them in the hole as shown in the figure.

