


STORAGE CABINET

Assembly Instructions - Please keep for future reference

N707P254905

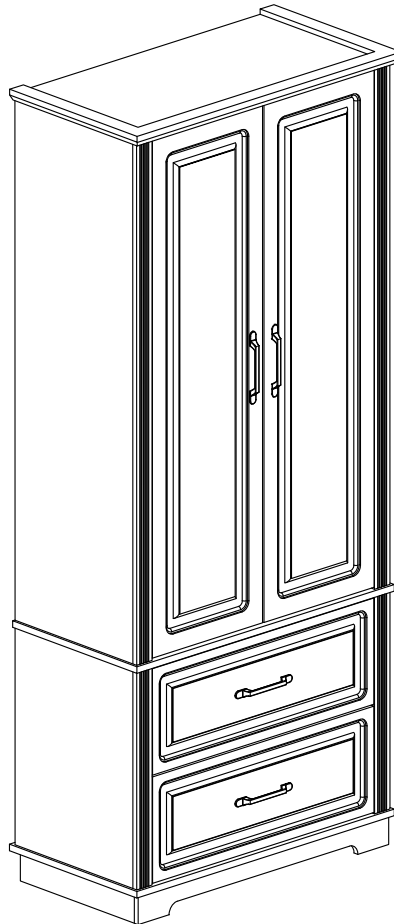

Dimensions

Width-30.3inch

Depth-15.7inch+11inch

Height-70.8inch

Important – Please read these instructions fully before starting assembly

Issue 1 - 16/12/24




Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

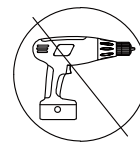

- . To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- . From time to time check that there are no loose screws on this unit.
- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- . Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose



















Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

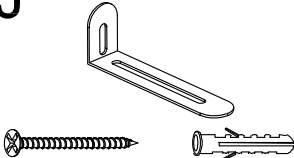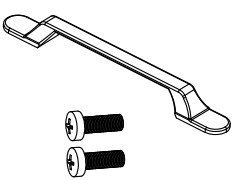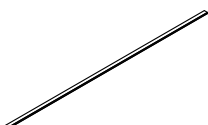Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

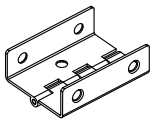A  62pcs	B  62pcs	C  M4*40=64pcs	D  6*30=8pcs
E  6*50=4pcs	F  M4*12=44pcs	G  2pcs	H  2pcs
J  M4*40 2pcs	K  4pcs	L  1pc	M  4pcs
N  16pcs	P  8pcs	Q  6pcs	R  12pcs
S  1pc	T  8*30=4pcs		

Ruler - Use this ruler to help correctly identify the screws

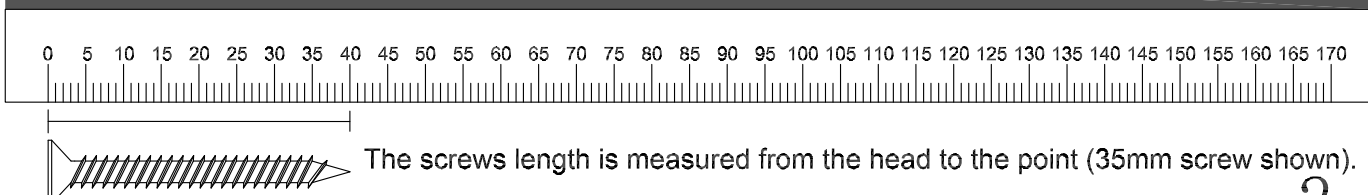


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

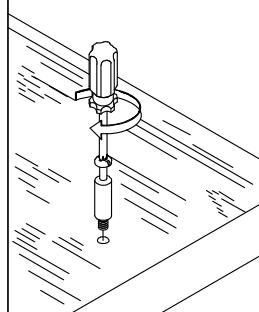

Step 2

Push the male camlock into the entry hole.

2

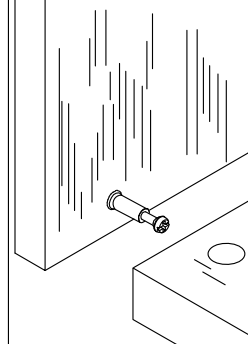


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

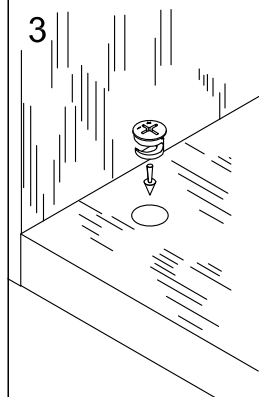


Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.


4

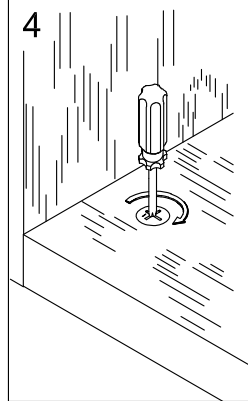

Assembly Instructions














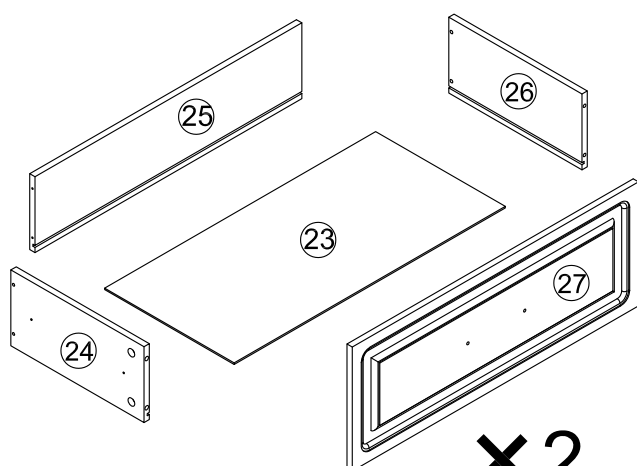
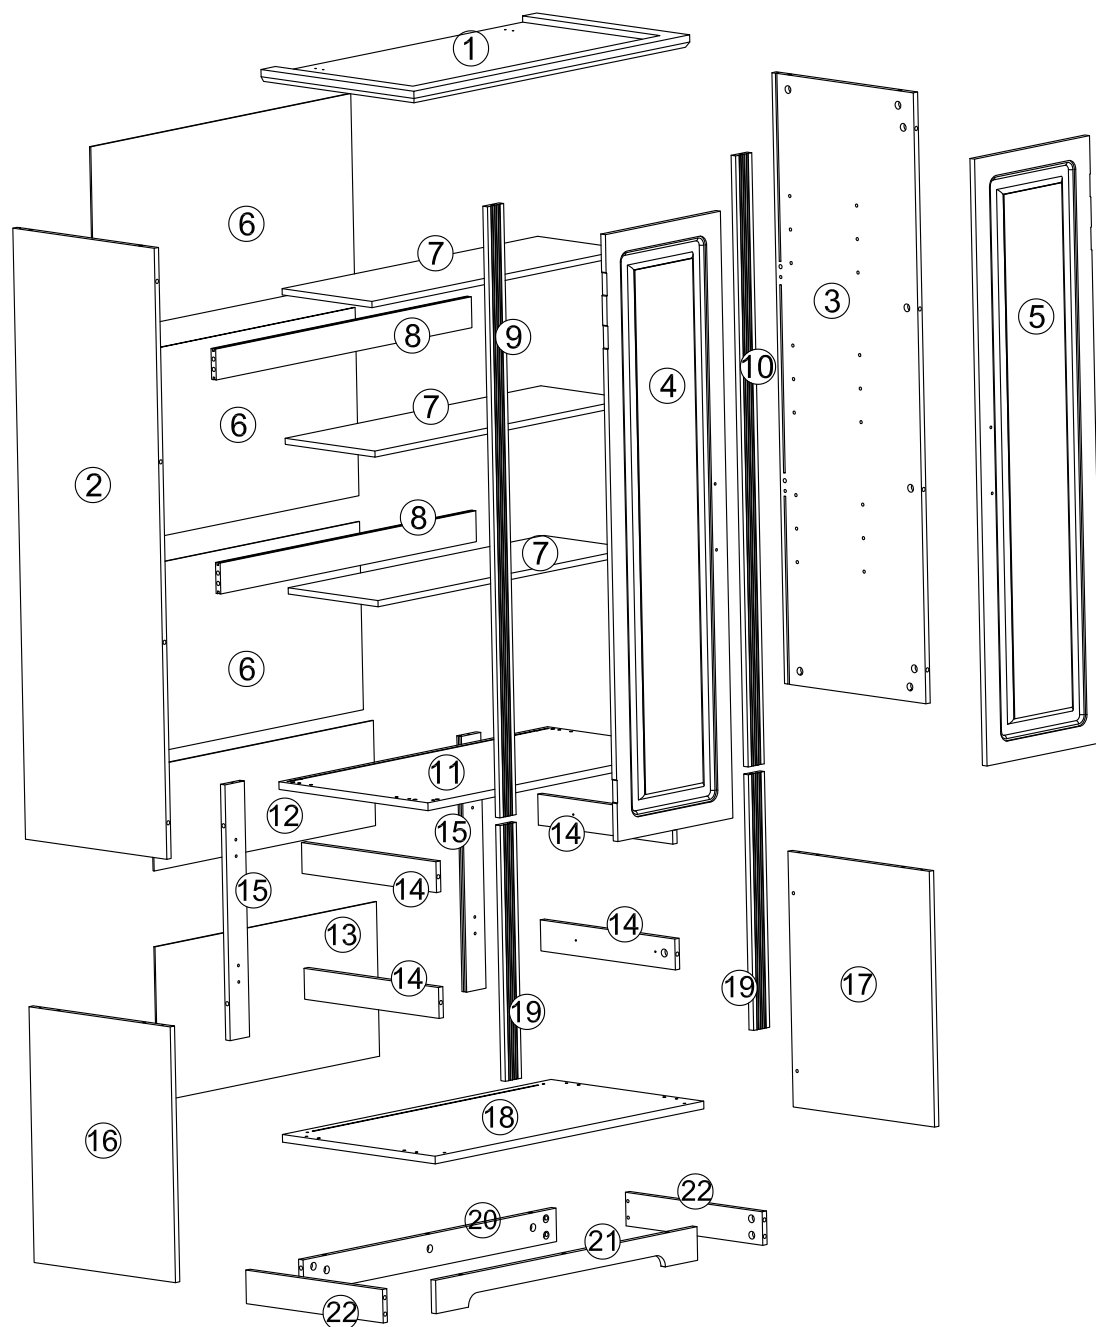


×2















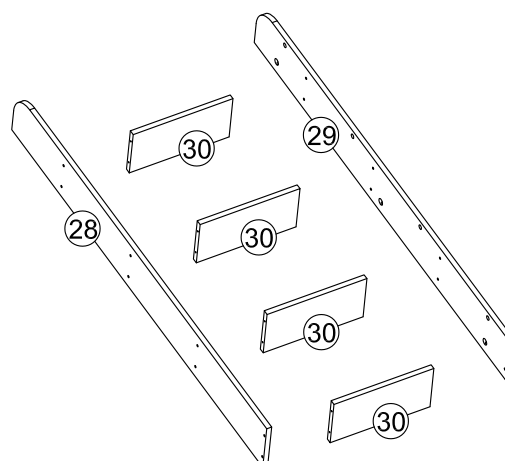


×2

Assembly Instructions
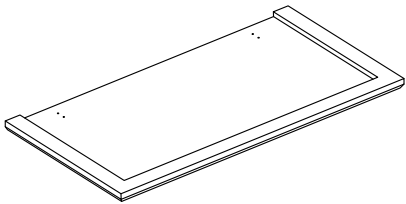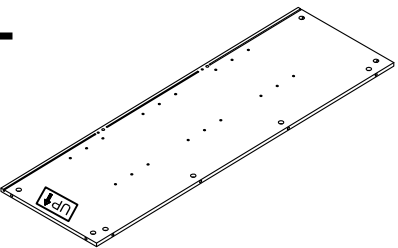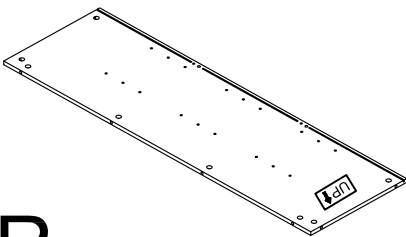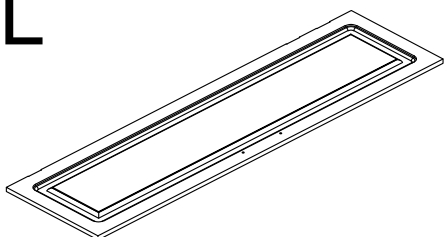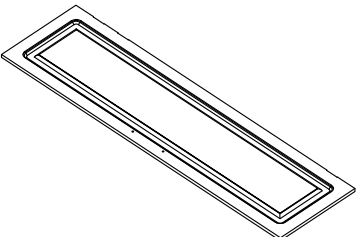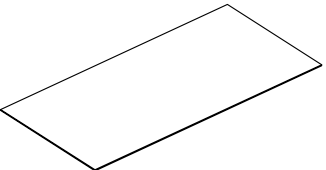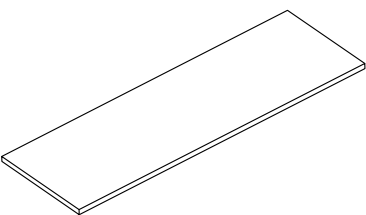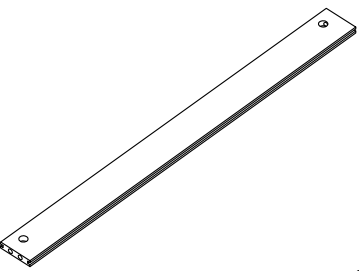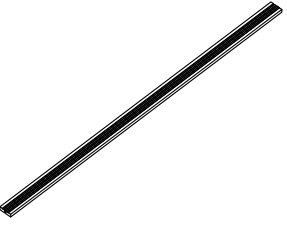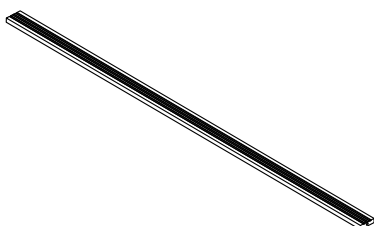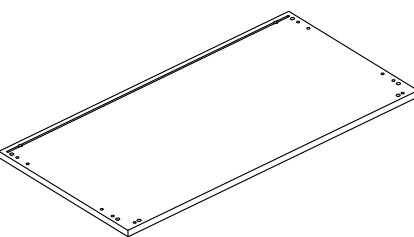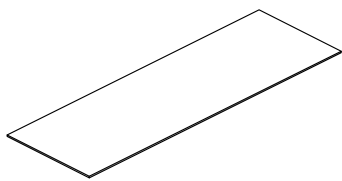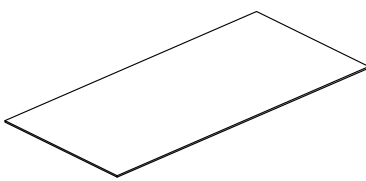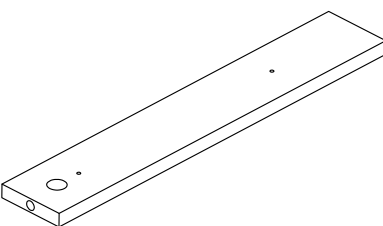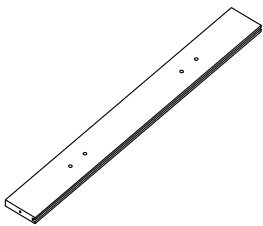
<p>① 770 x 400 x 24 mm</p>  <p>1pc</p>	<p>② 1185 x 370 x 12 mm</p> <p>L</p>  <p>1pc</p>	<p>③ 1185 x 370 x 12 mm</p> <p>R</p>  <p>1pc</p>
<p>④ 1177 x 321 x 12 mm</p> <p>L</p>  <p>1pc</p>	<p>⑤ 1177 x 321 x 12 mm</p> <p>R</p>  <p>1pc</p>	<p>⑥ 726 x 365 x 3 mm</p>  <p>3pcs</p>
<p>⑦ 714 x 235 x 12 mm</p>  <p>3pcs</p>	<p>⑧ 716 x 60 x 12 mm</p>  <p>2pcs</p>	<p>⑨ 1185x 45 x 12 mm</p> <p>L</p>  <p>1pc</p>
<p>⑩ 1185x 45 x 12 mm</p> <p>R</p>  <p>1pc</p>	<p>⑪ 750 x 390 x 15 mm</p>  <p>1pc</p>	<p>⑫ 618 x 204 x 3 mm</p>  <p>1pc</p>
<p>⑬ 618 x 300 x 3 mm</p>  <p>1pc</p>	<p>⑭ 352 x 60 x 12 mm</p>  <p>4pcs</p>	<p>⑮ 496 x 54 x 12 mm</p>  <p>2pcs</p>

Assembly Instructions

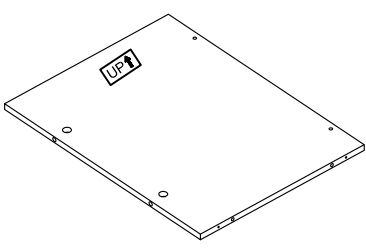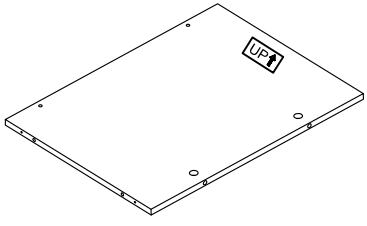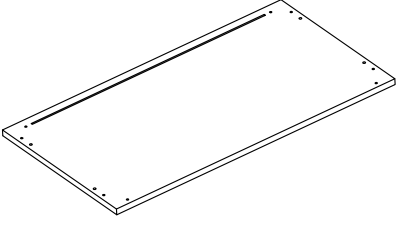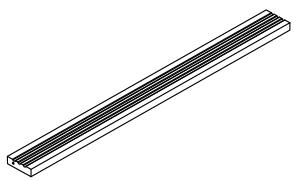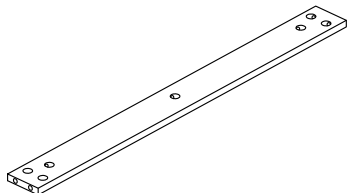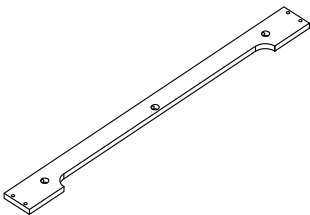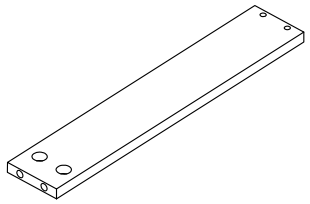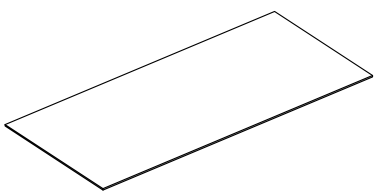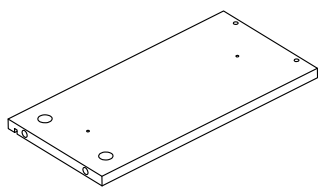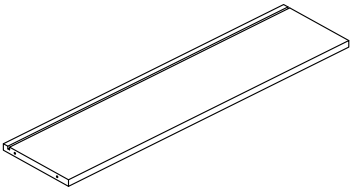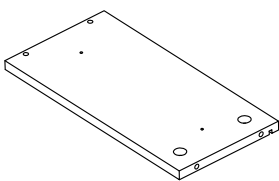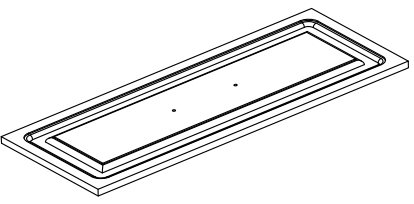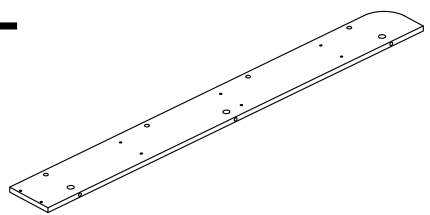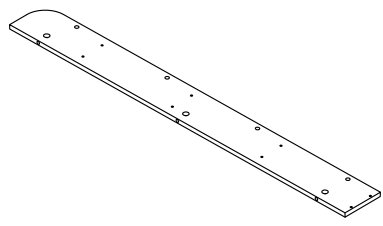
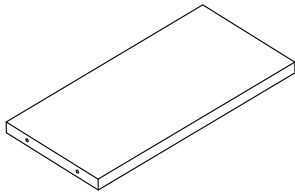
<p>16</p> <p>496 x 370 x 12 mm</p> <p>L</p>  <p>1pc</p>	<p>17</p> <p>496 x 370 x 12 mm</p>  <p>1pc</p>	<p>18</p> <p>750 x 390 x 15 mm</p>  <p>1pc</p>
<p>19</p> <p>496 x 45 x 12 mm</p>  <p>2pcs</p>	<p>20</p> <p>706 x 65 x 12 mm</p>  <p>1pc</p>	<p>21</p> <p>730 x 65 x 12 mm</p>  <p>1pc</p>
<p>22</p> <p>358 x 65 x 12 mm</p>  <p>2pcs</p>	<p>23</p> <p>611 x 298 x 3 mm</p>  <p>2pcs</p>	<p>24</p> <p>300 x 148 x 12 mm</p> <p>L</p>  <p>2pcs</p>
<p>25</p> <p>601 x 148 x 12 mm</p>  <p>2pcs</p>	<p>26</p> <p>300 x 148 x 12 mm</p>  <p>2pcs</p>	<p>27</p> <p>645 x 242 x 12 mm</p>  <p>2pcs</p>
<p>28</p> <p>1080 x 118 x 12 mm</p> <p>L</p>  <p>2pcs</p>	<p>29</p> <p>1080 x 118 x 12 mm</p>  <p>2pcs</p>	<p>30</p> <p>241 x 117 x 12 mm</p>  <p>8pcs</p>

Assembly Instructions


Step1

M 

M x 4

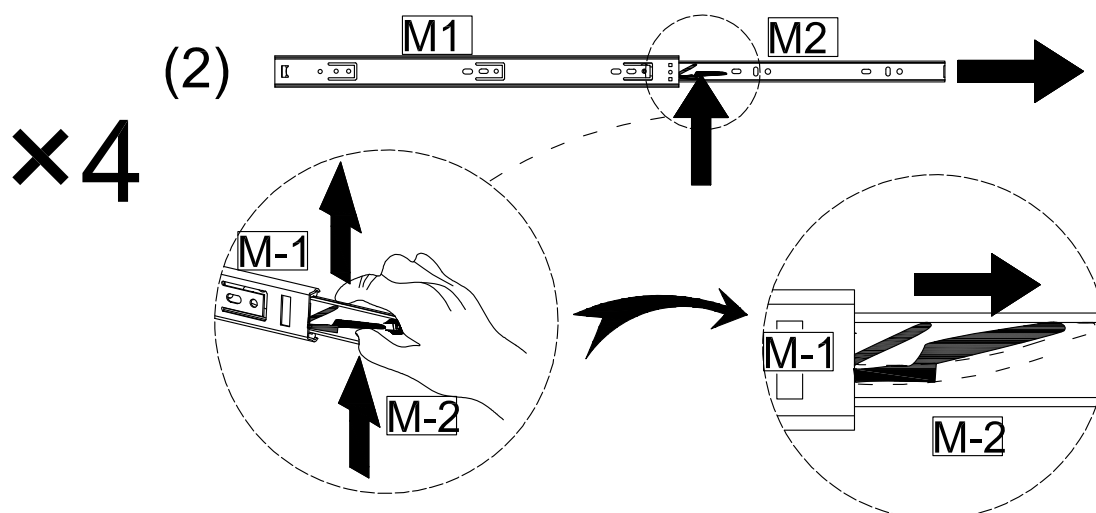



Move the black paddle upward and pull out (M2) to the right.

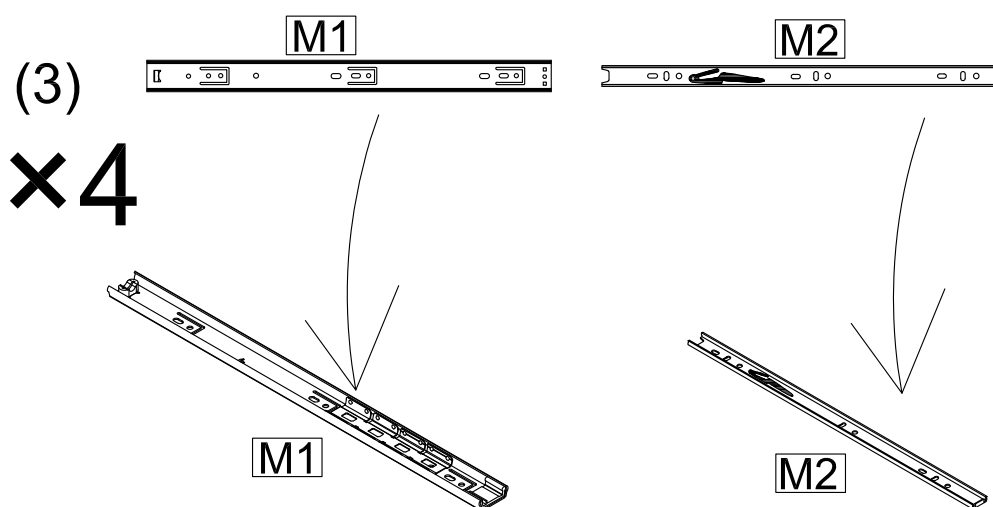


Assembly Instructions

Step2

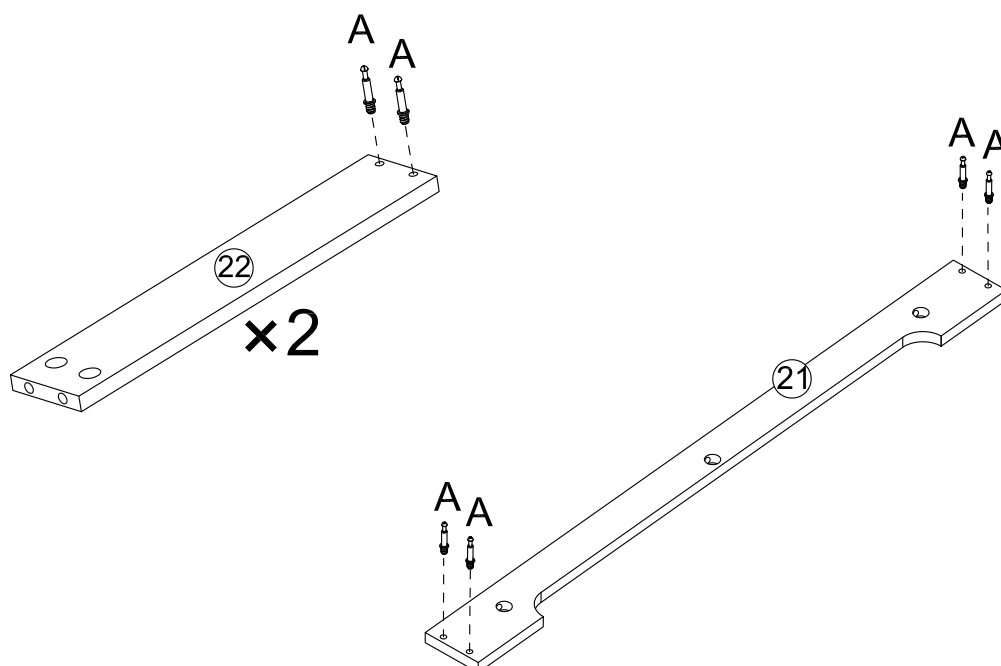
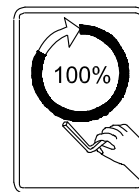


A



A x 8

Step3

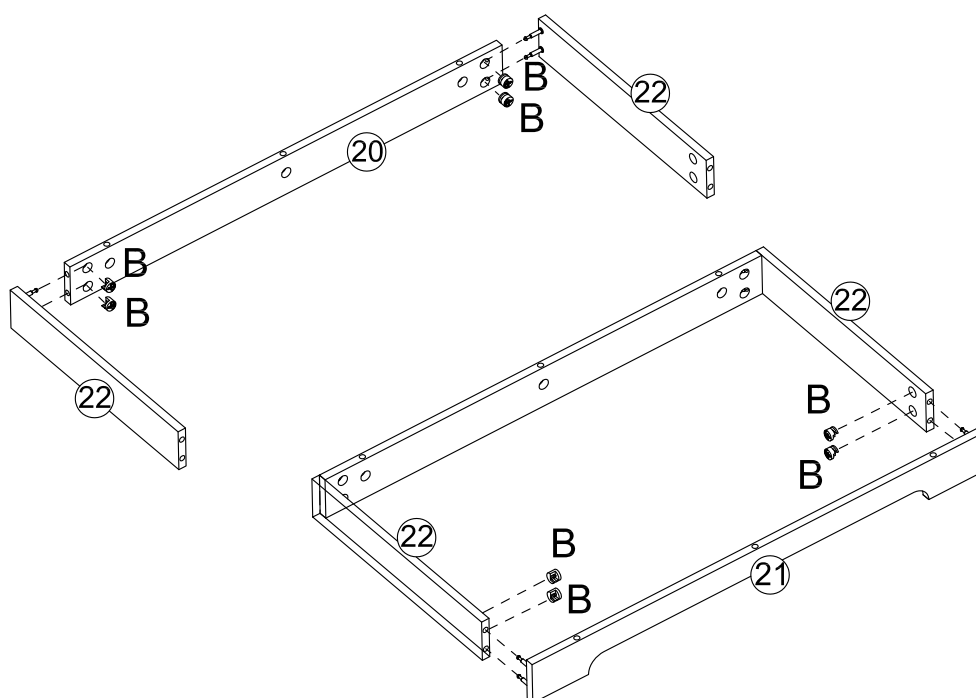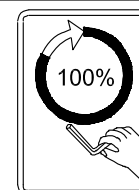

B




B x 8




Assembly Instructions

Step4


L

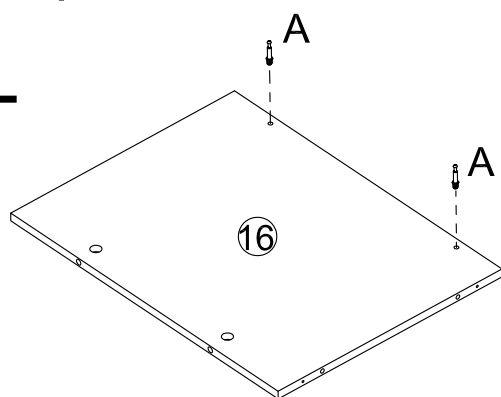

R

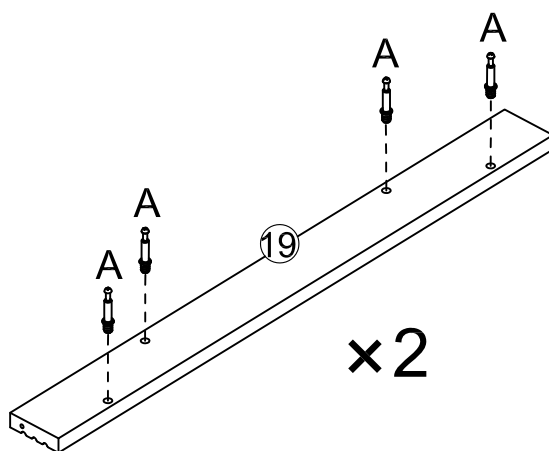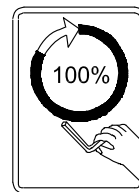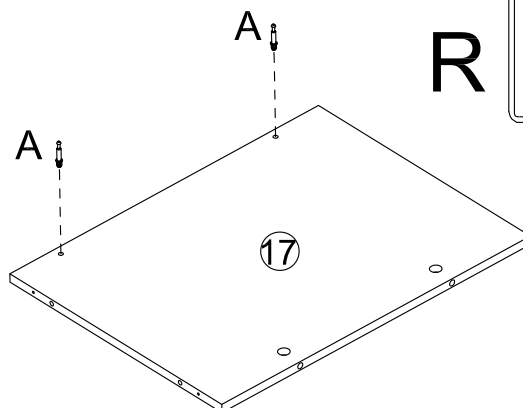




A



A x 12

Step5

L

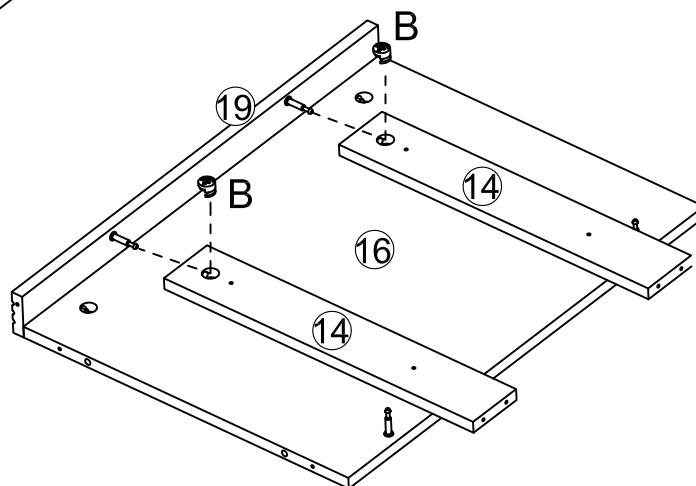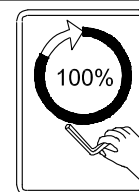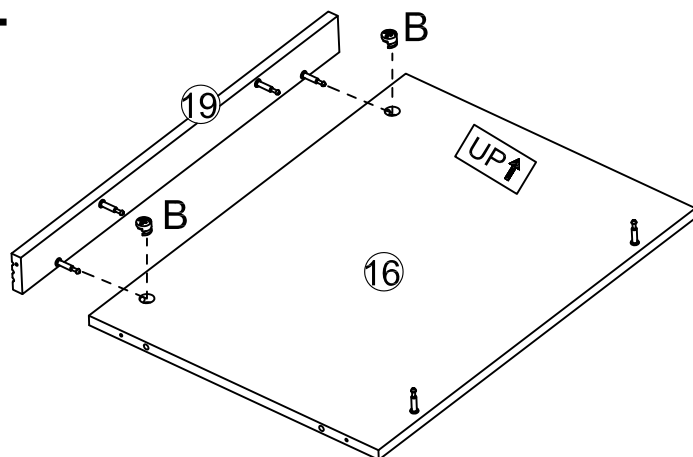

B







B x 4

Assembly Instructions





Step6

L

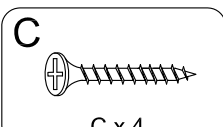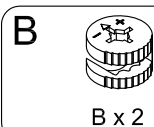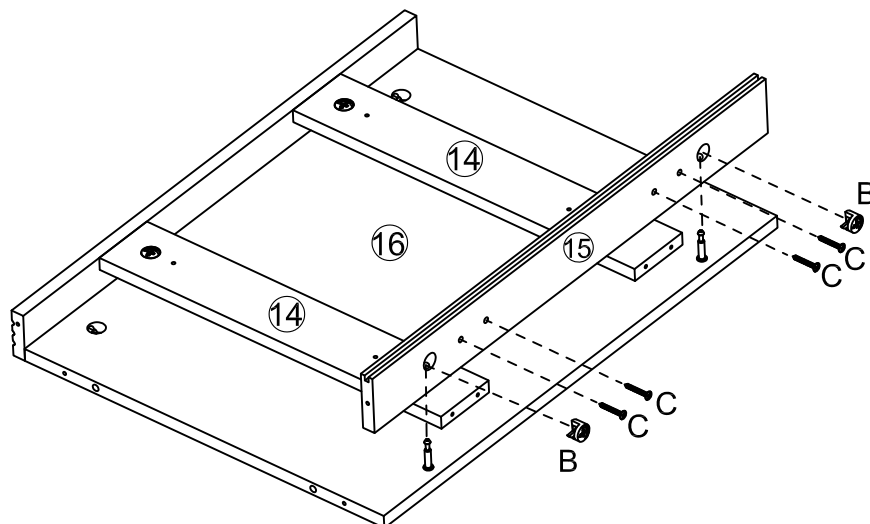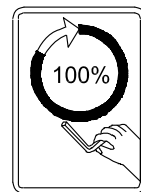

Step7





R

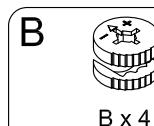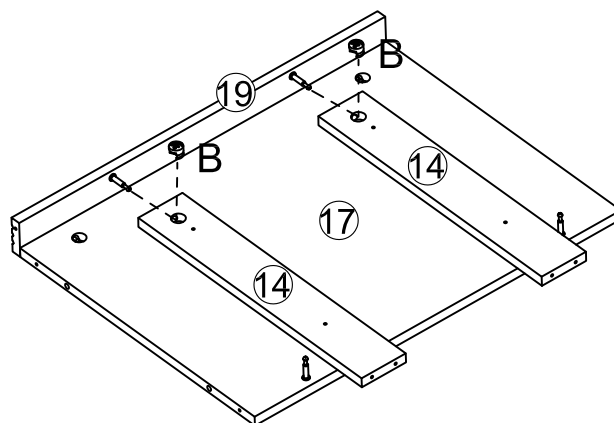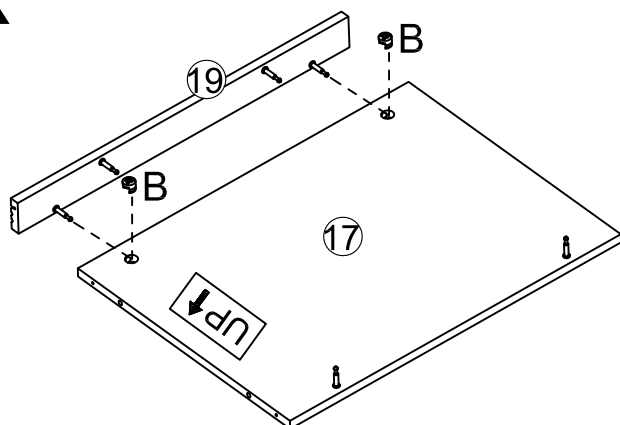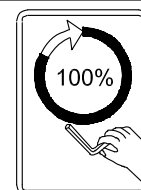

Assembly Instructions





Step8

R

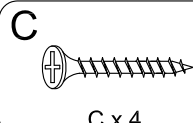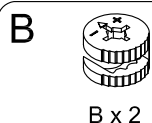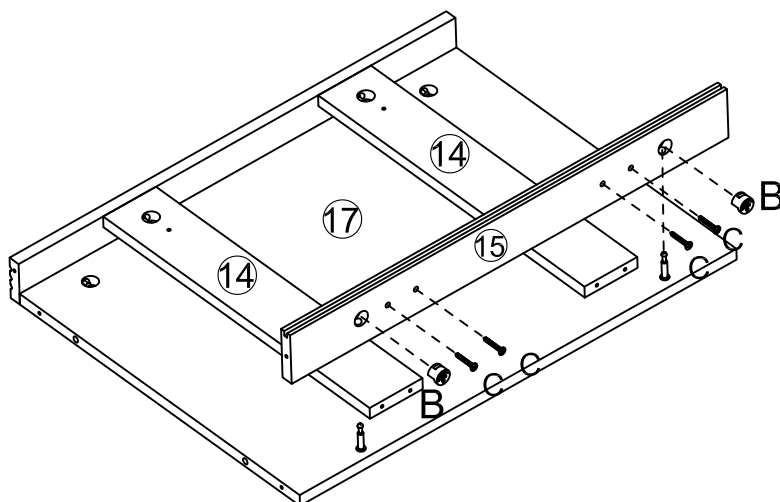
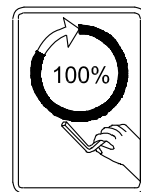


Step9

L


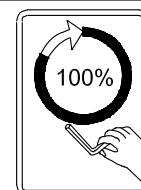
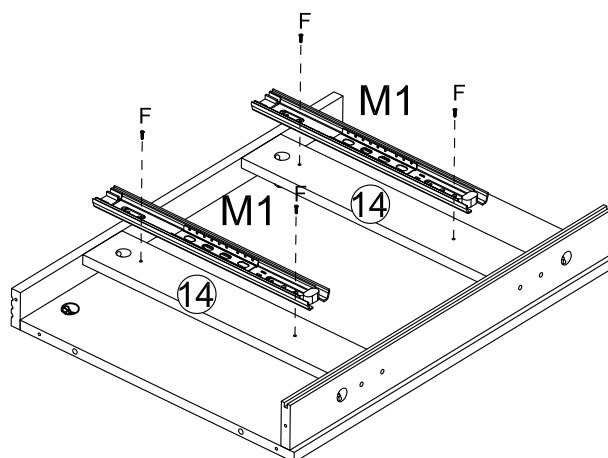
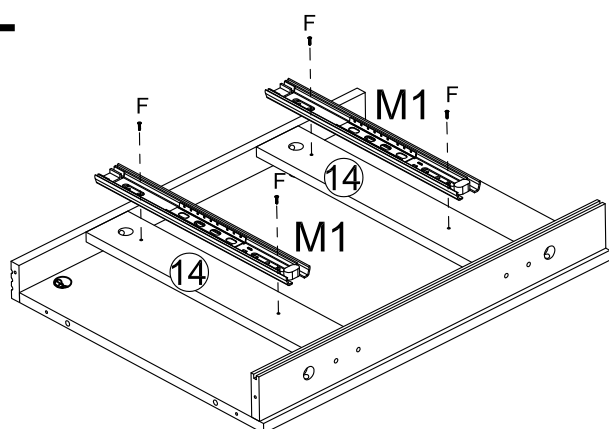
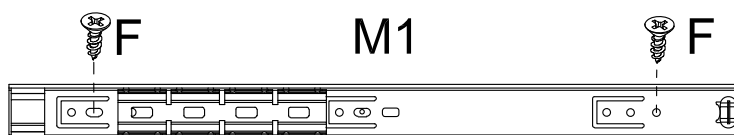


R


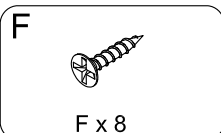
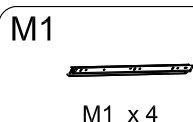


Assembly Instructions

Step10

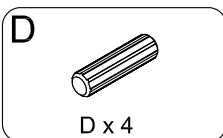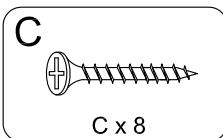
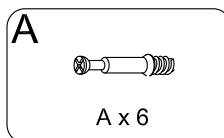
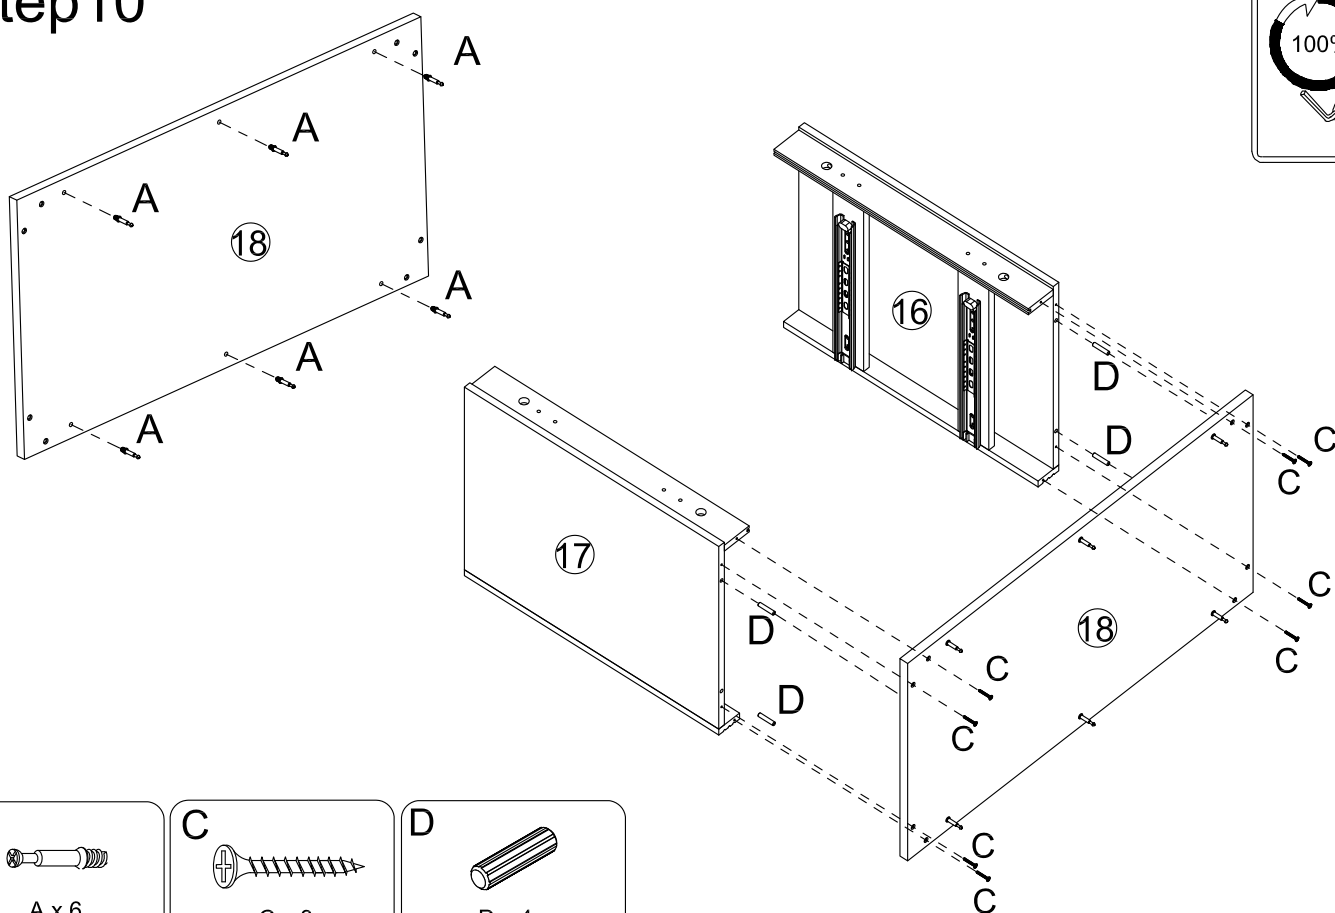
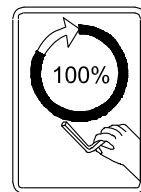


Step11



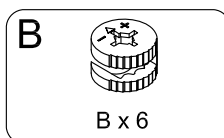
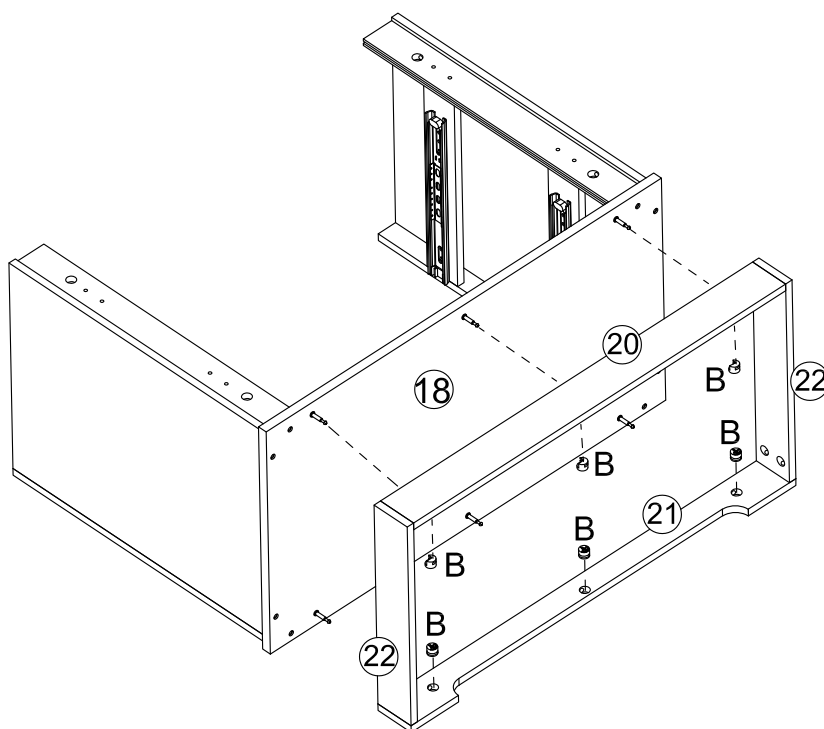
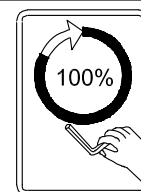


Assembly Instructions

Step 12

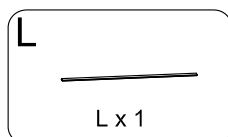
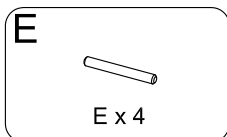
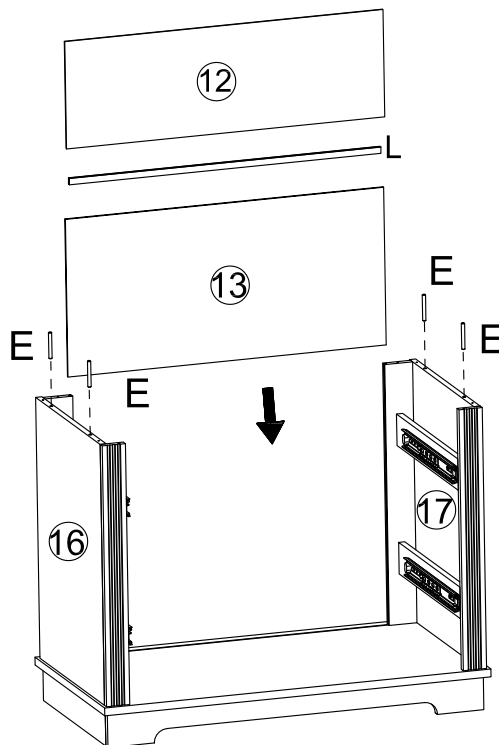
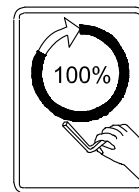


Step 13

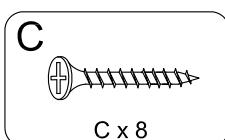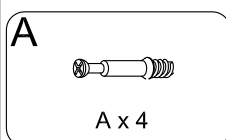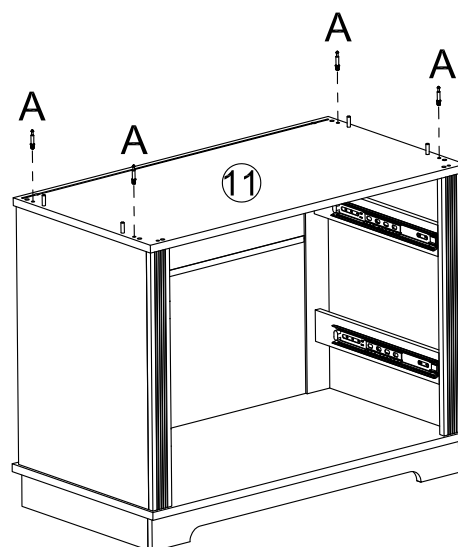
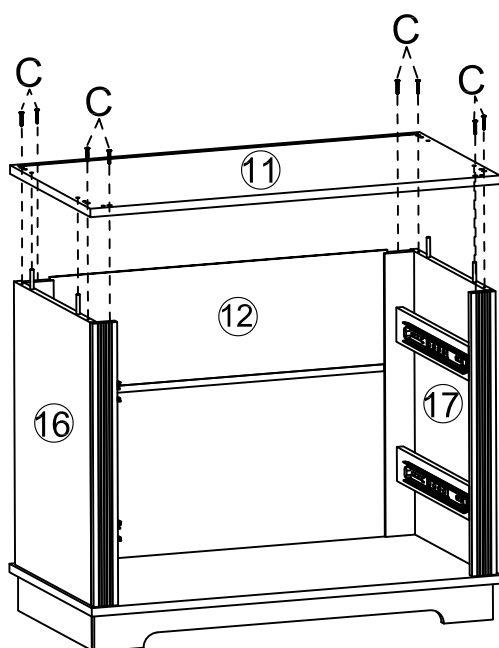
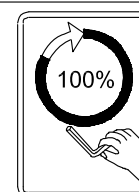


Assembly Instructions

Step14


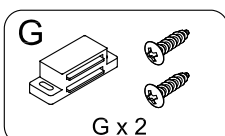
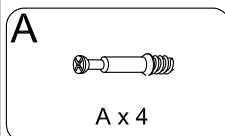
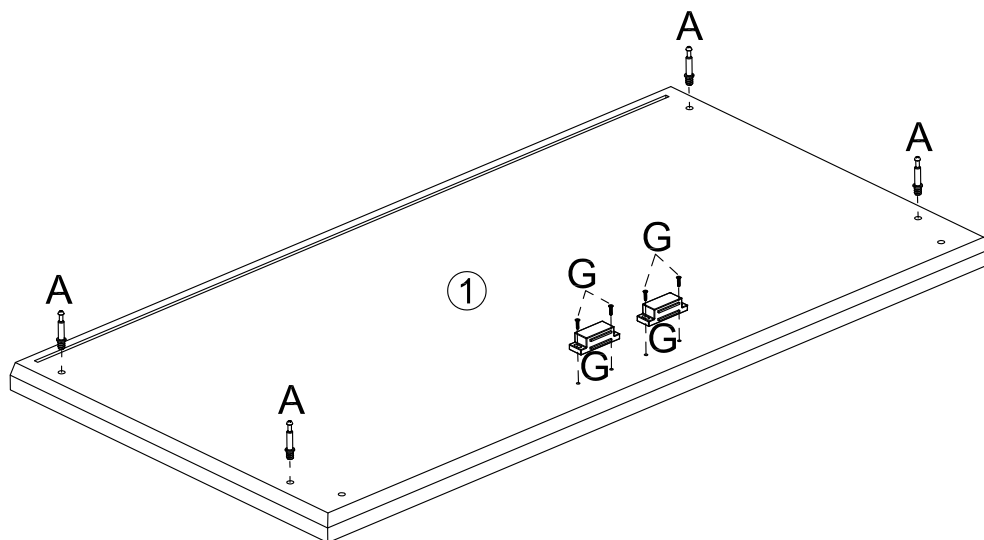
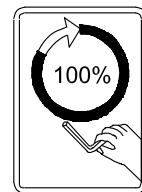


Step15

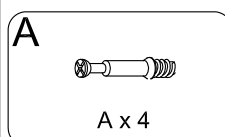
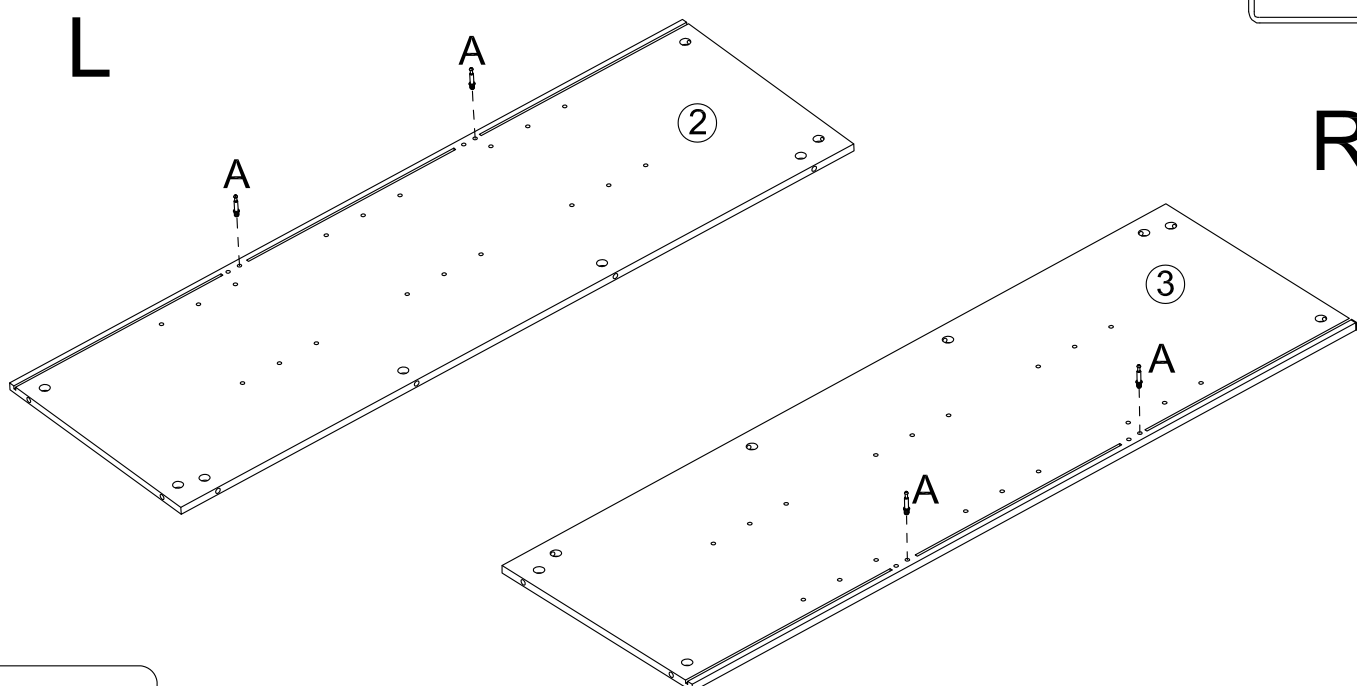
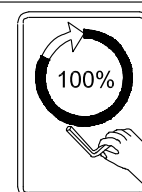


Assembly Instructions

Step 16

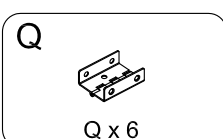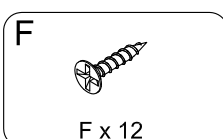
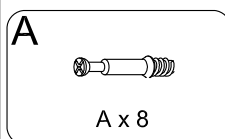
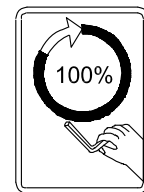
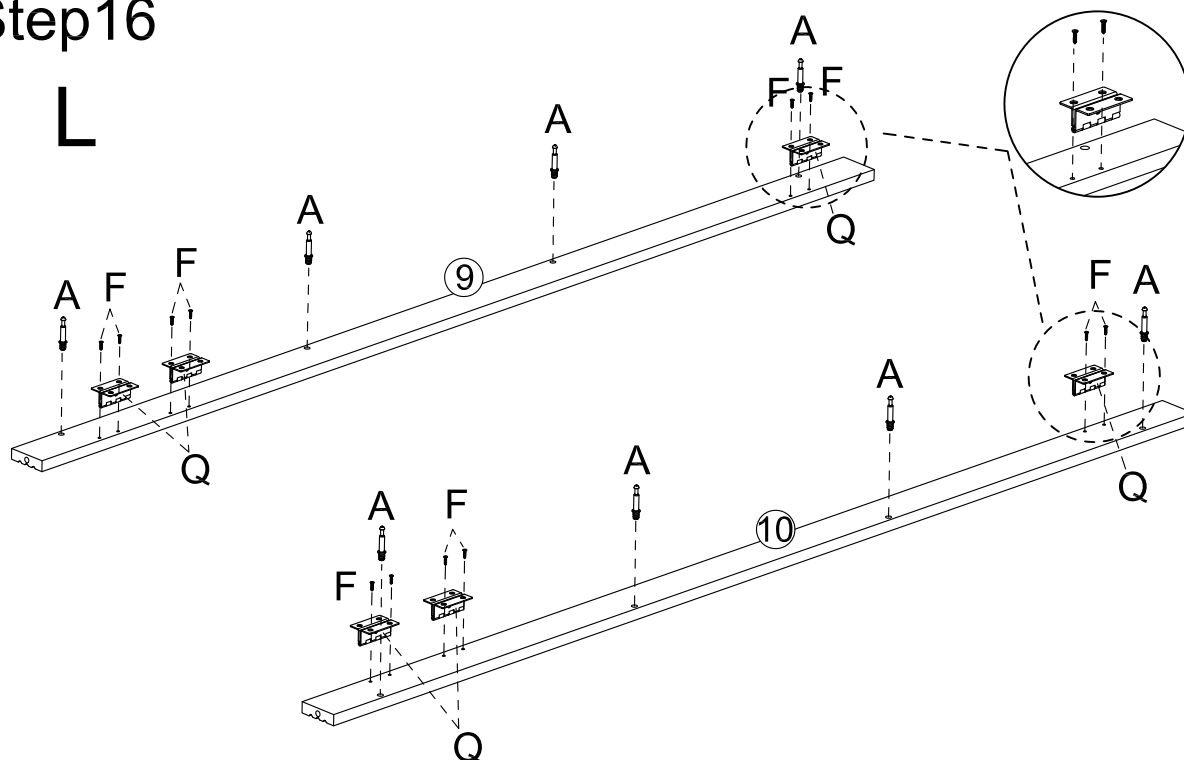


Step 17


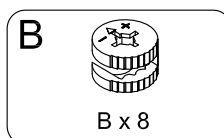
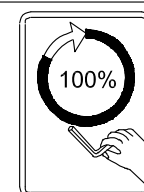
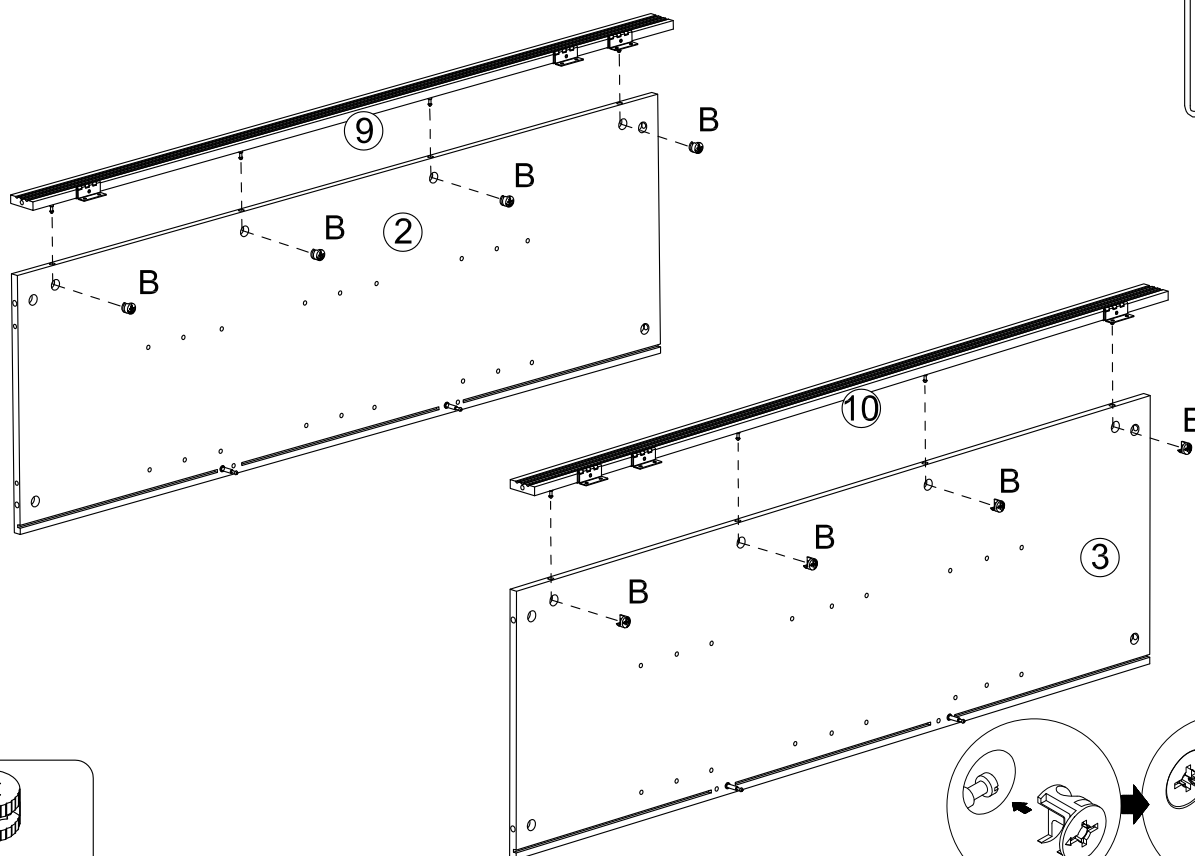


Assembly Instructions

Step18

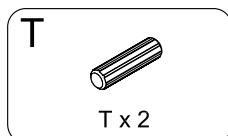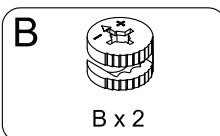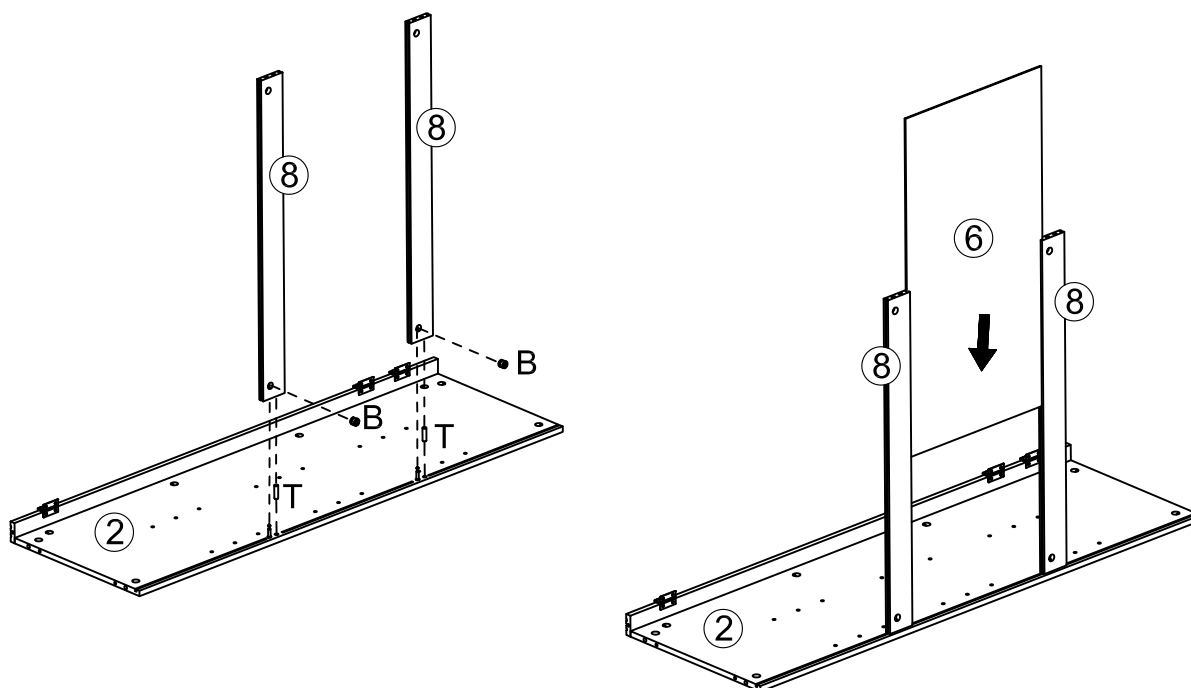
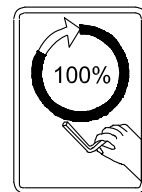


Step19

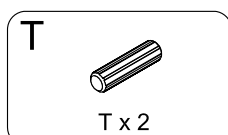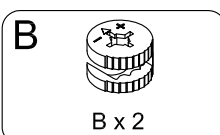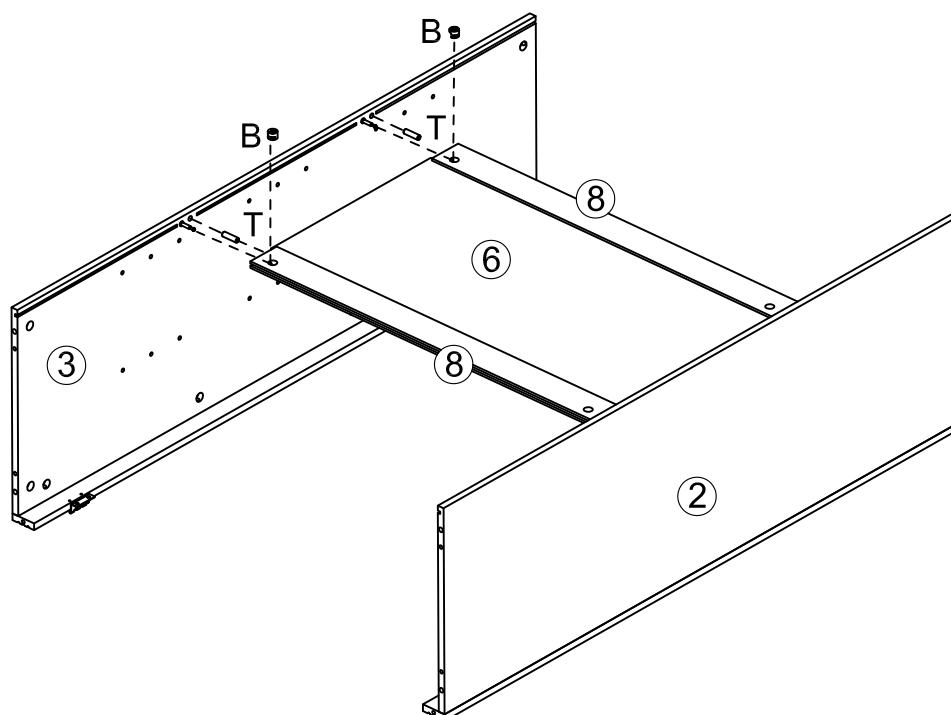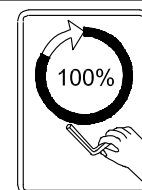

Assembly Instructions

Step20

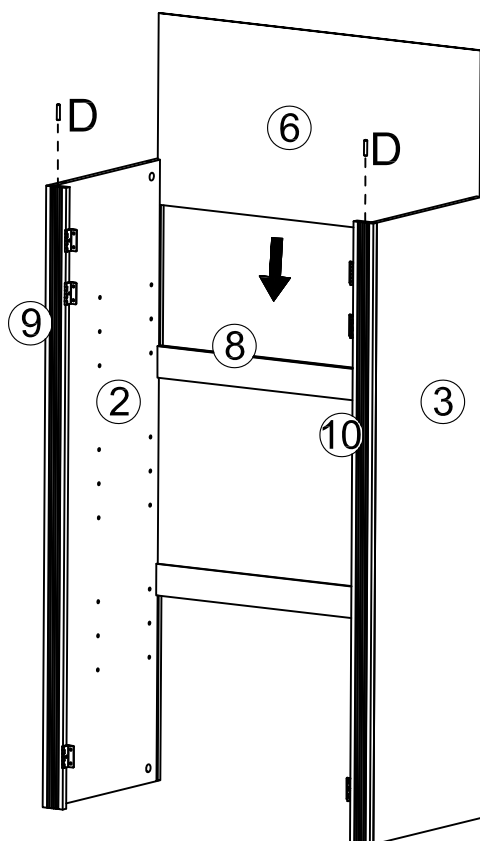
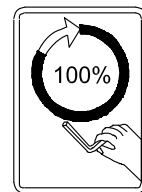


D



D x 2

Step21

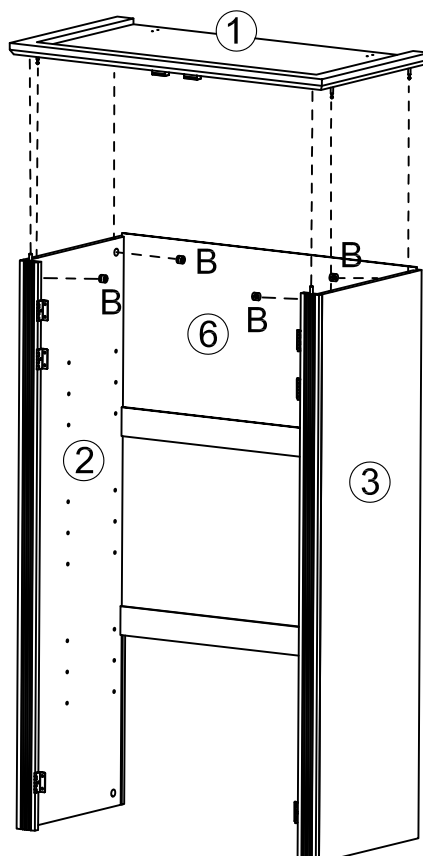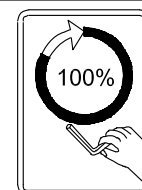




B






B x 4

Assembly Instructions

Step22

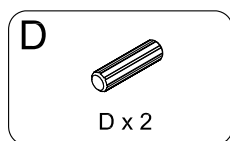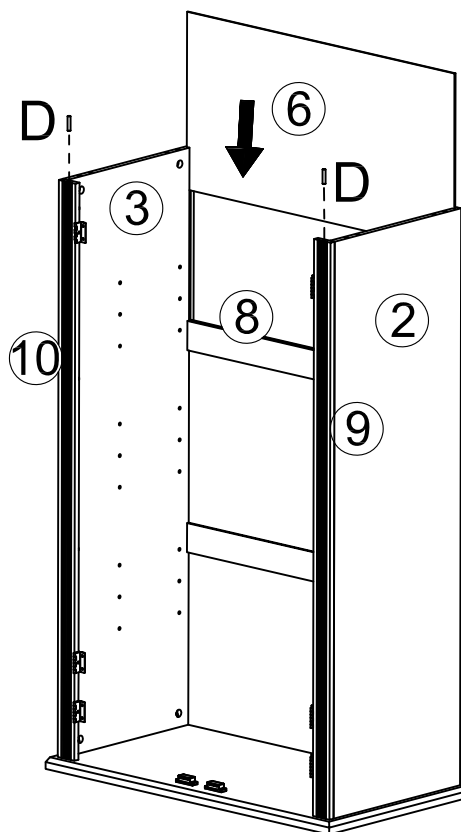
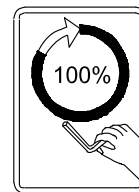


Step23

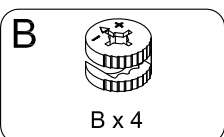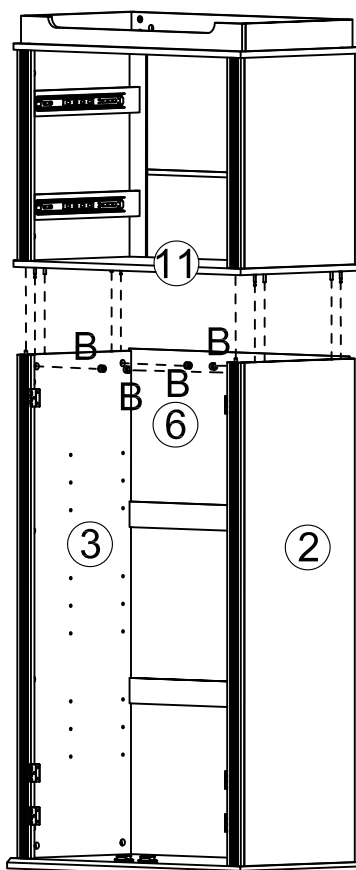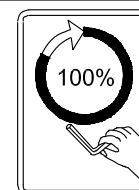

Assembly Instructions

Step24

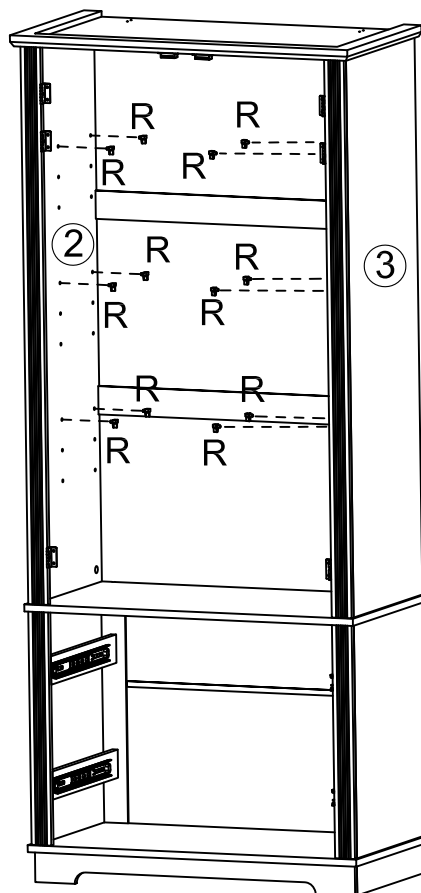
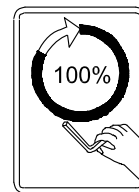


R








R x 12

Step25


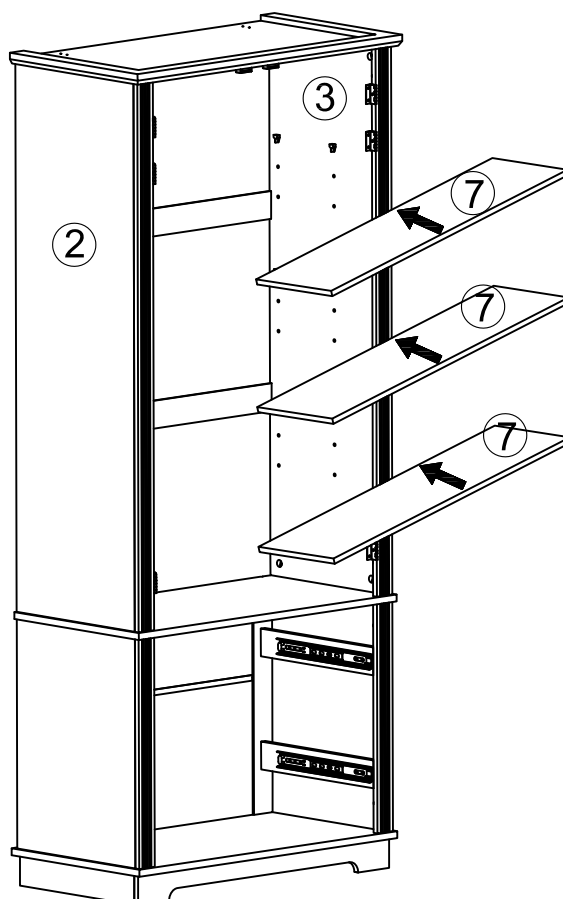
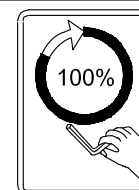


Assembly Instructions

Step26

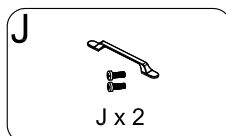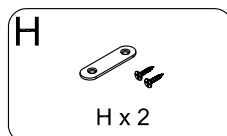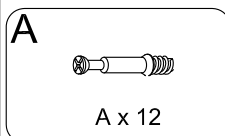
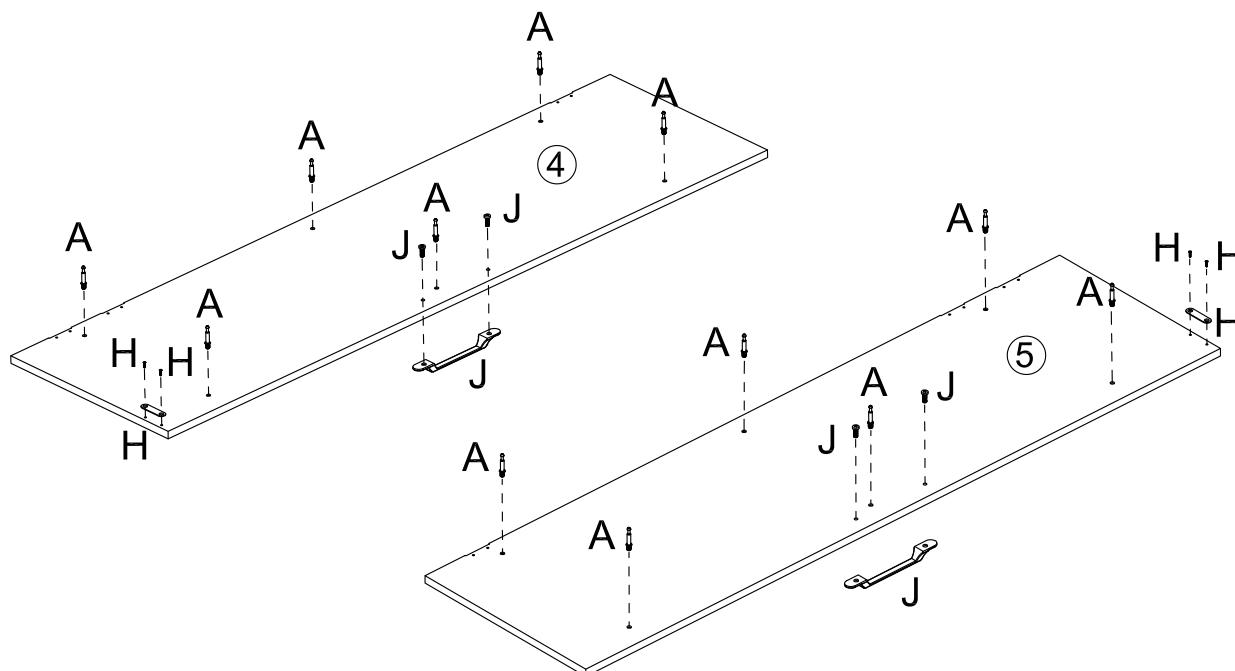
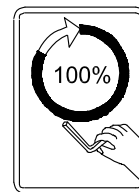


Step27

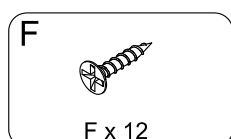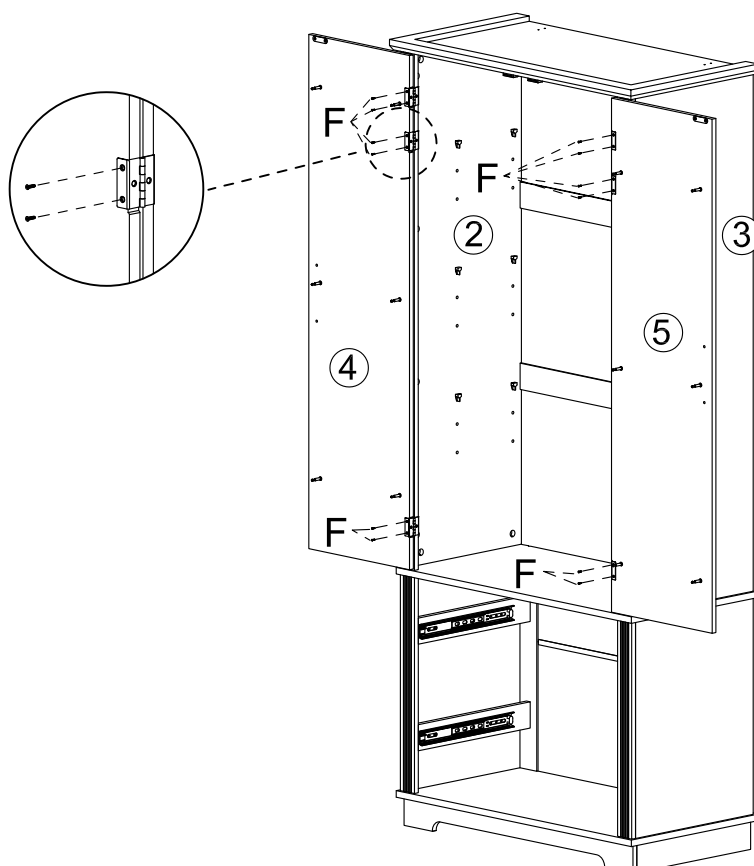
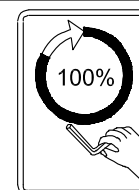


Assembly Instructions

Step28



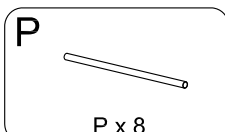
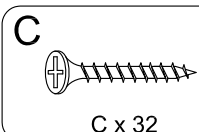
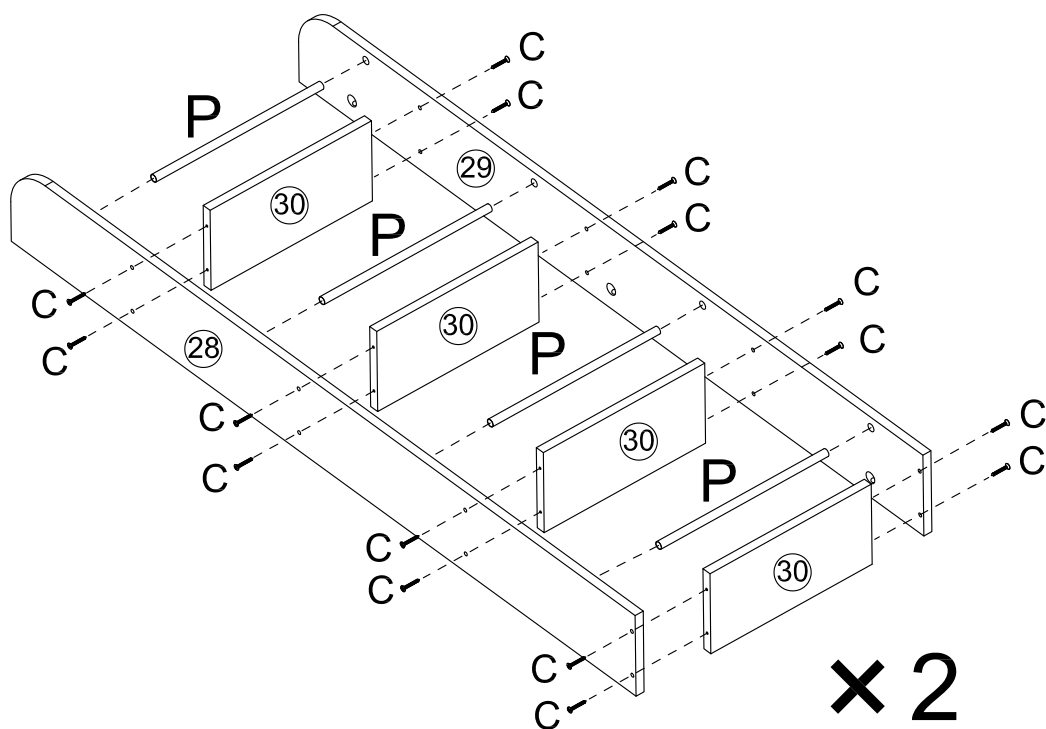


Step29

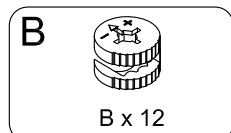
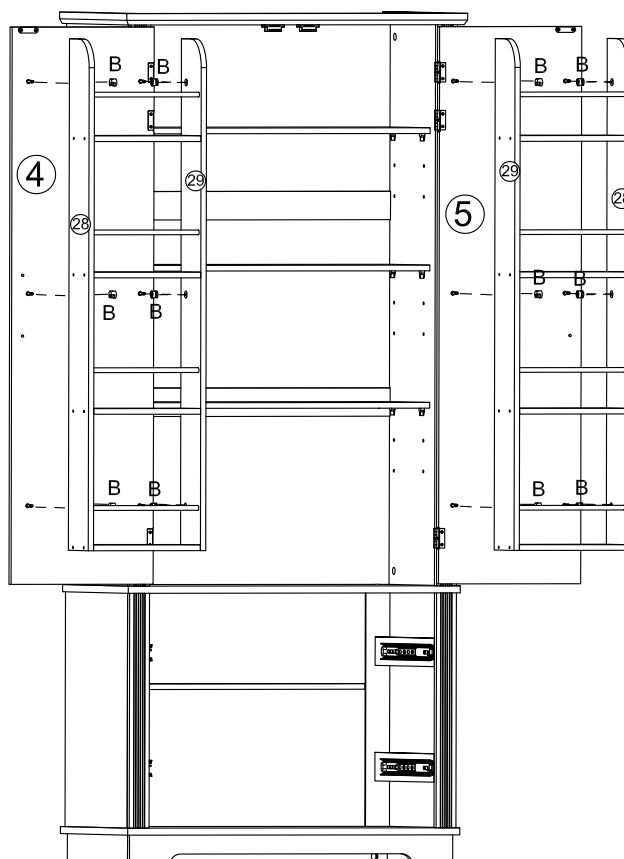


Assembly Instructions

Step30

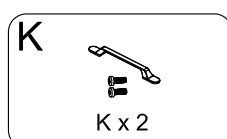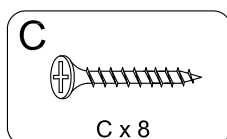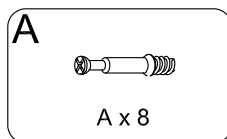
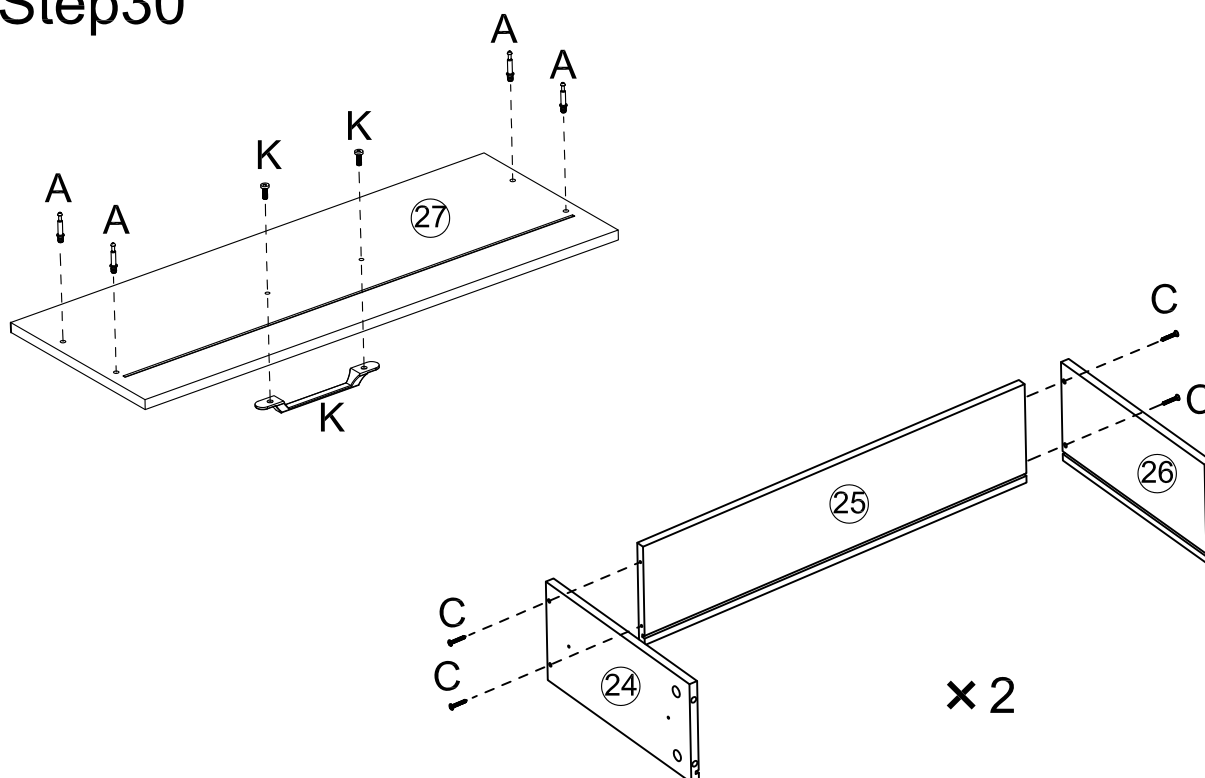
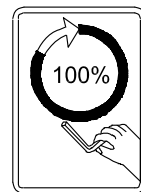


Step31

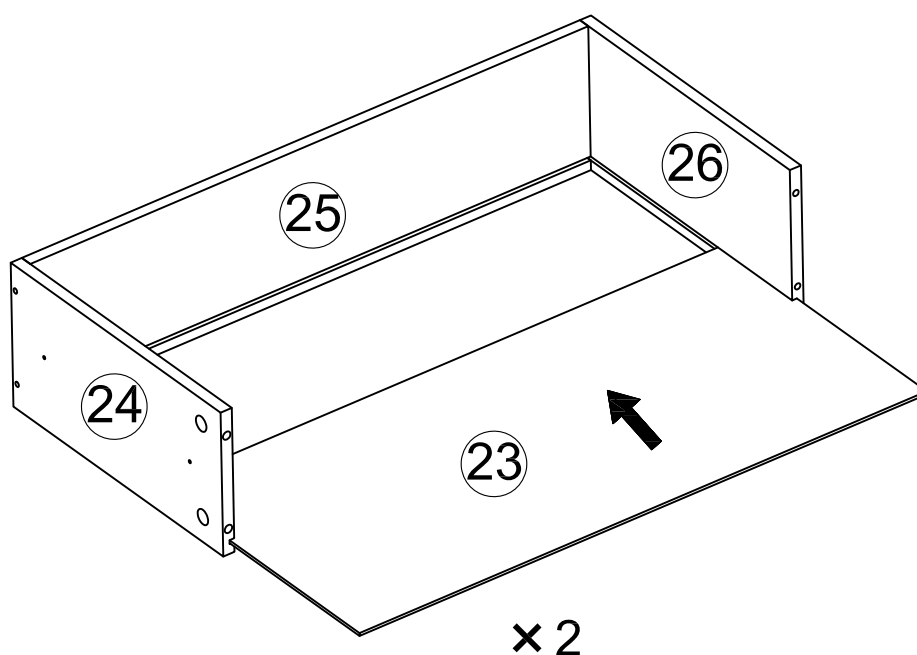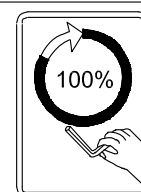





Assembly Instructions

Step32

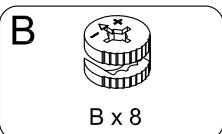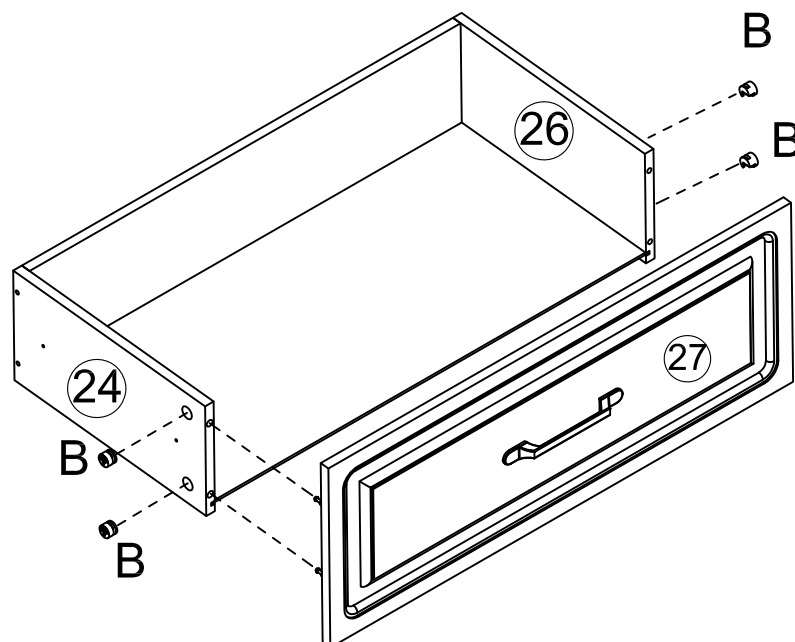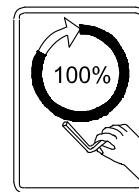



× 2

Step33

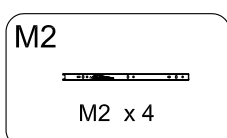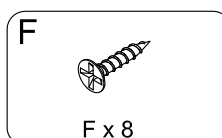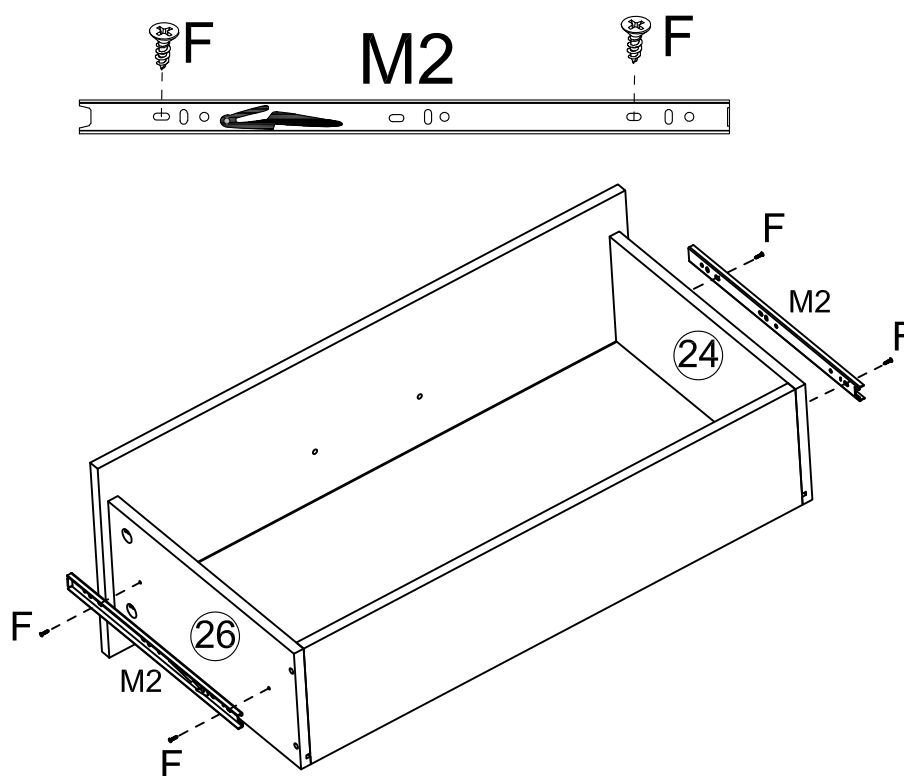
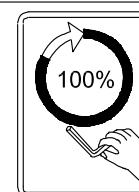


Assembly Instructions

Step34

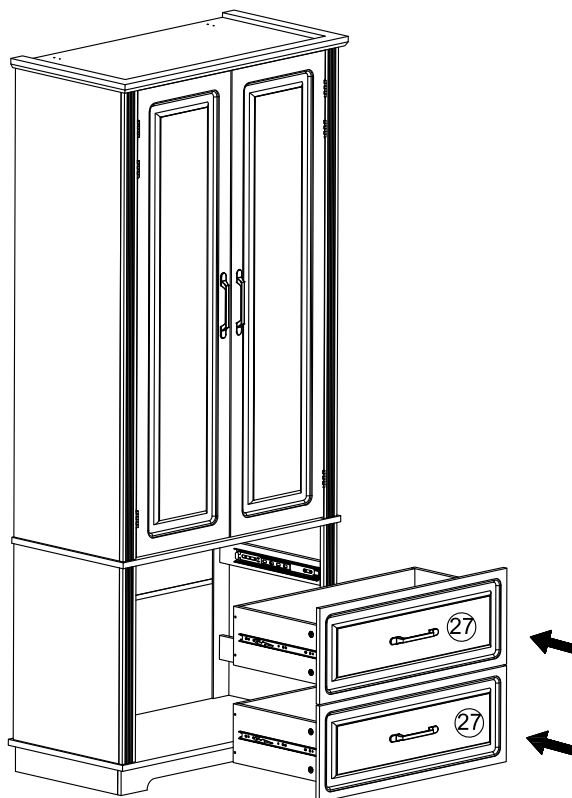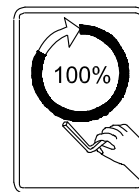

Step35

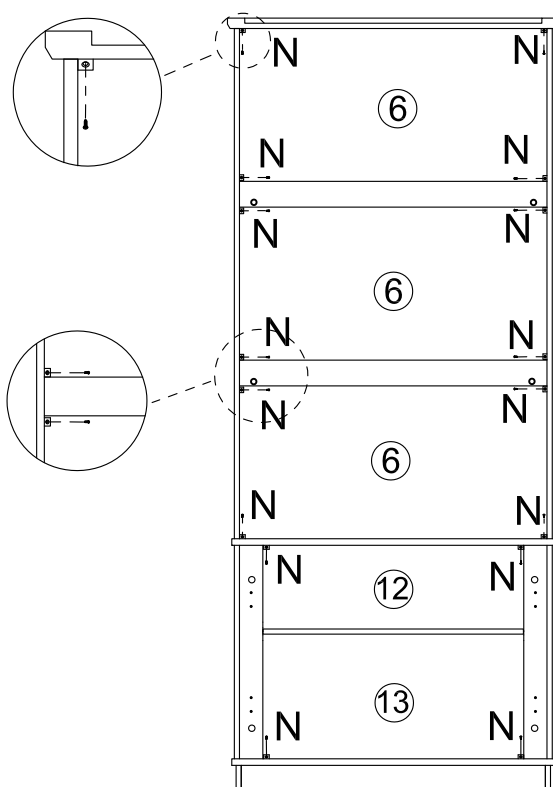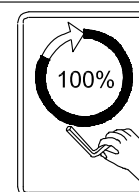



N



N x 16

Assembly Instructions

Step 36

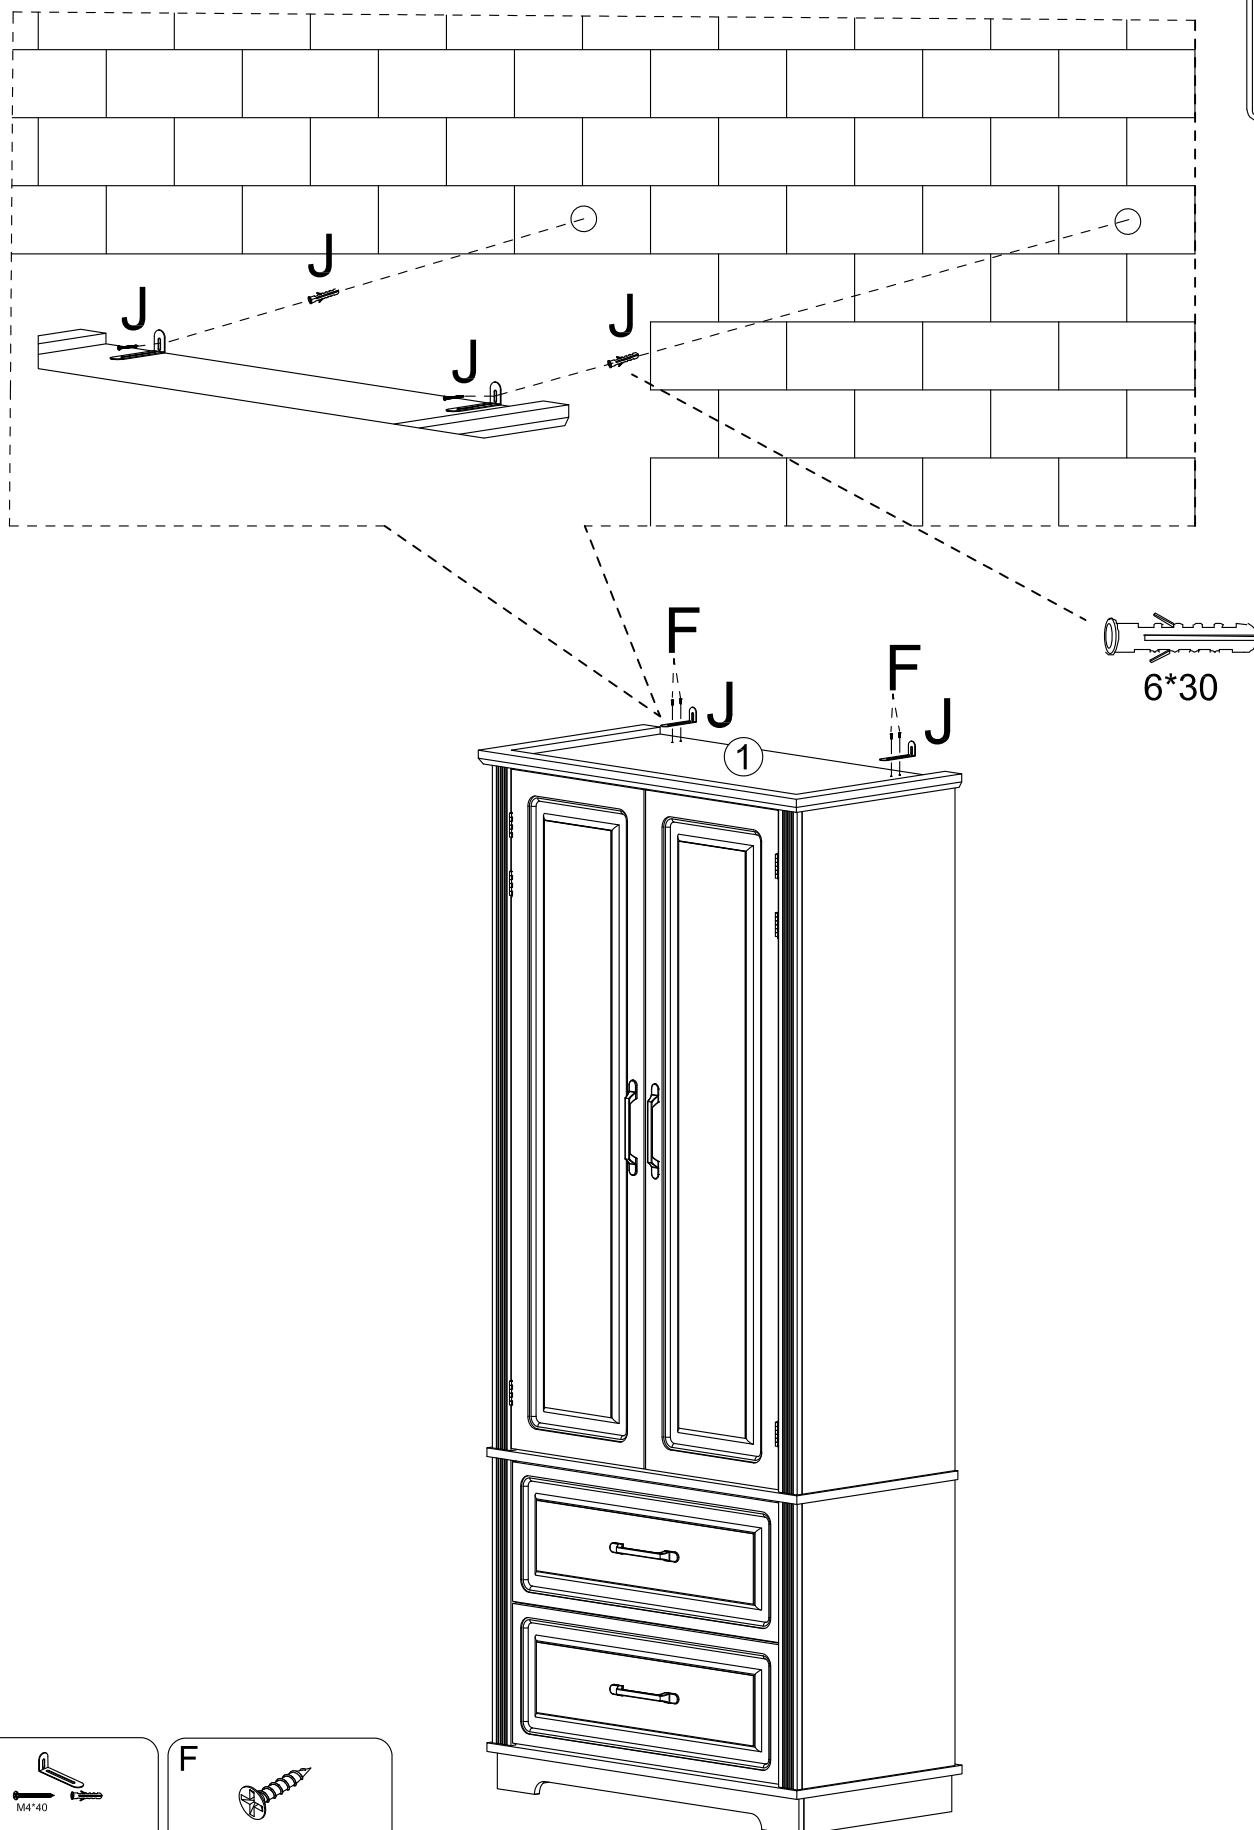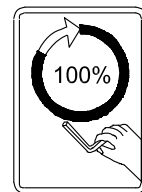

J



J x 2

F



F x 4