


Bed Frame with Storage Headboard & Charging Station Assembly Instructions

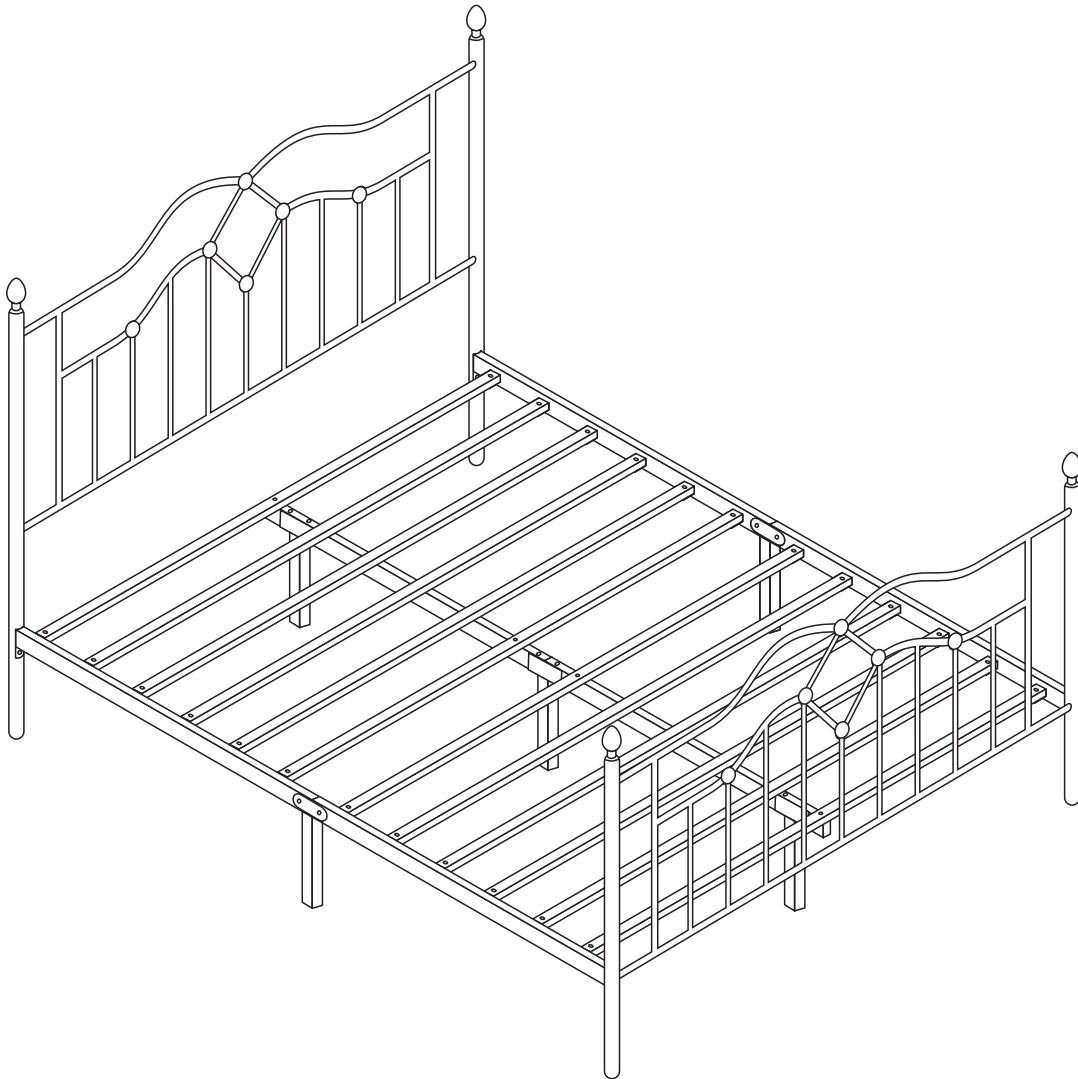



Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADEINCHINA




Please follow the instruction manuals and use a pad to protect the product during your assembly.

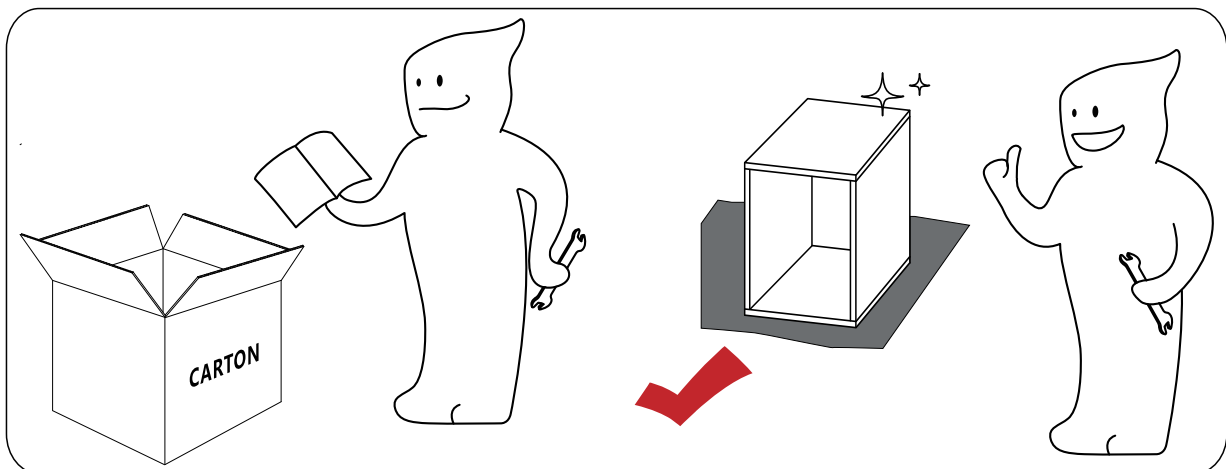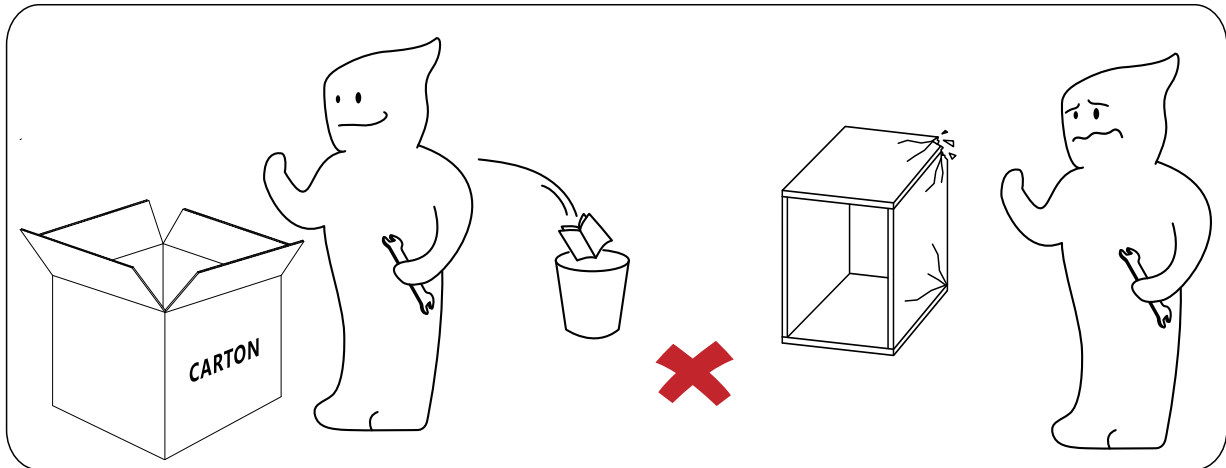


Note:

- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**



For easier and better assembly, **2** or more adults are required.


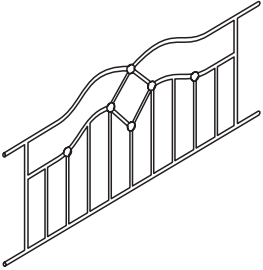


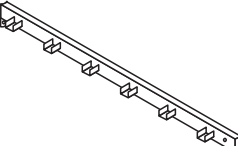
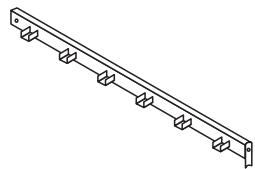
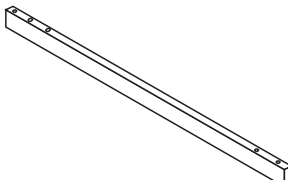


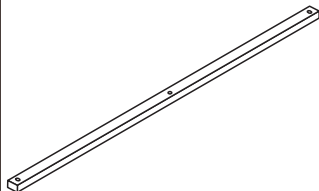
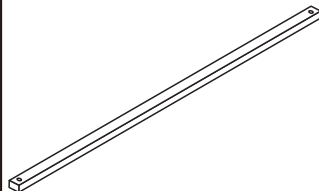


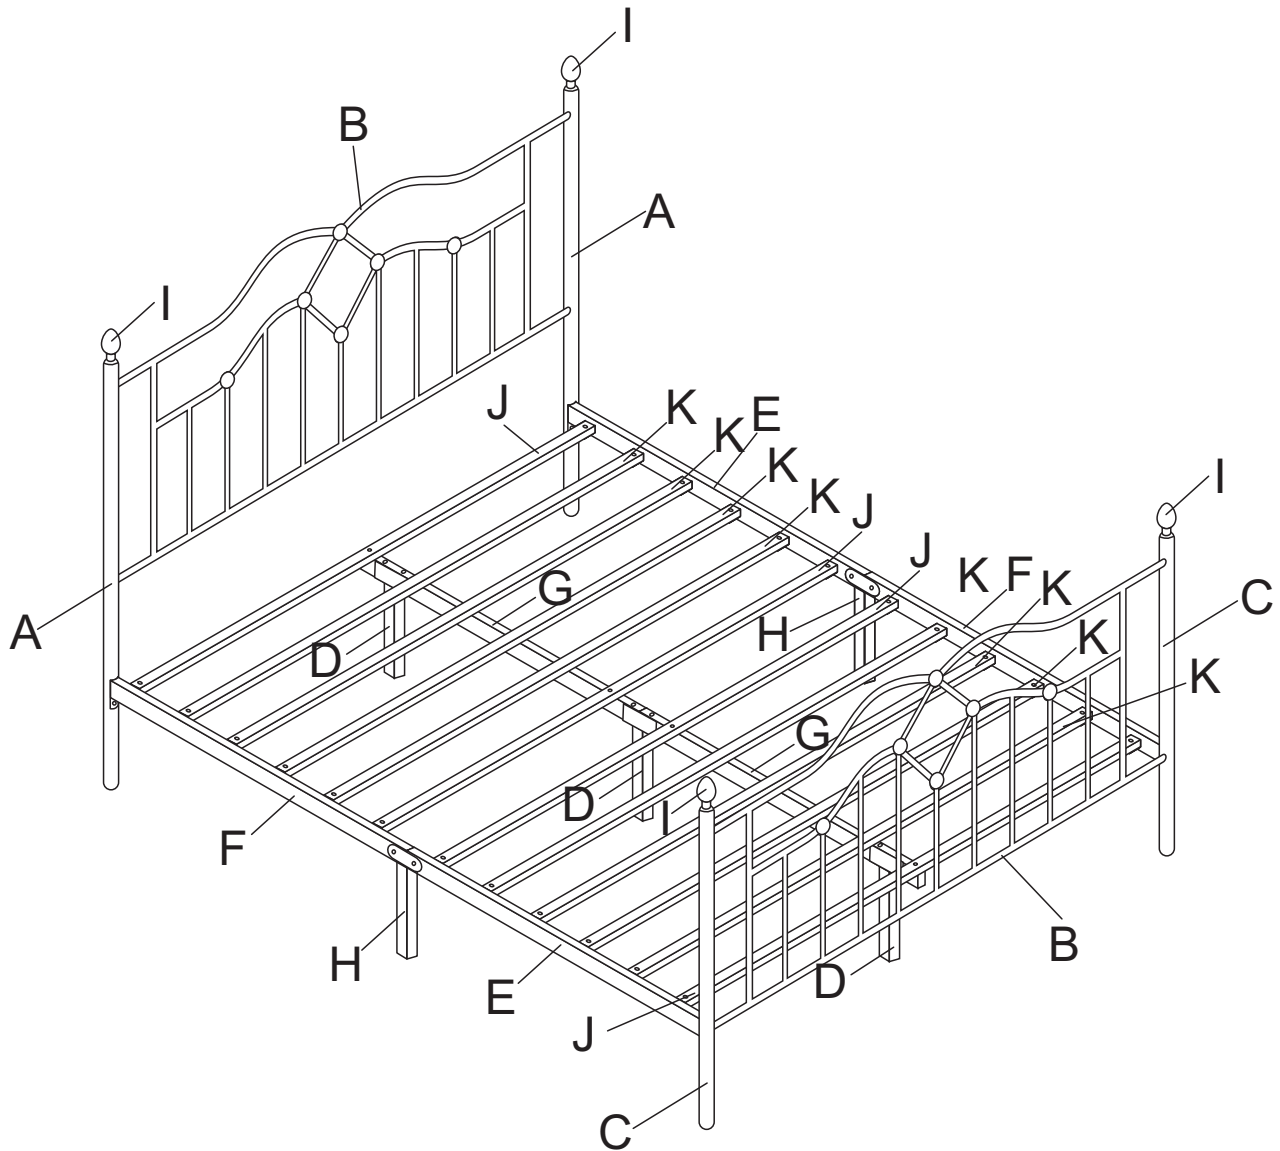




ASSEMBLY INSTRUCTIONS



Notice: Do not tighten the screws too tightly at the beginning of the assembly. After each hole position is matched well, with gently force to screw, if there is no problem, then tighten all the screws.


ASSEMBLY INSTRUCTIONS



PARTSLIST

A  2PCS	B  2PCS	C  2PCS	D  3PCS	
E  2PCS	F  2PCS	G  2PCS	H  2PCS	
I  4PCS	J  4PCS	K  8PCS		
L  x28PCS M6x25mm	M  x6PCS M6x35mm	N  x8PCS M8x20mm	O  x4PCS M8x40mm	P  x8PCS M8x50mm
Q  x1PC	R  x16PCS M8			


ASSEMBLY INSTRUCTIONS

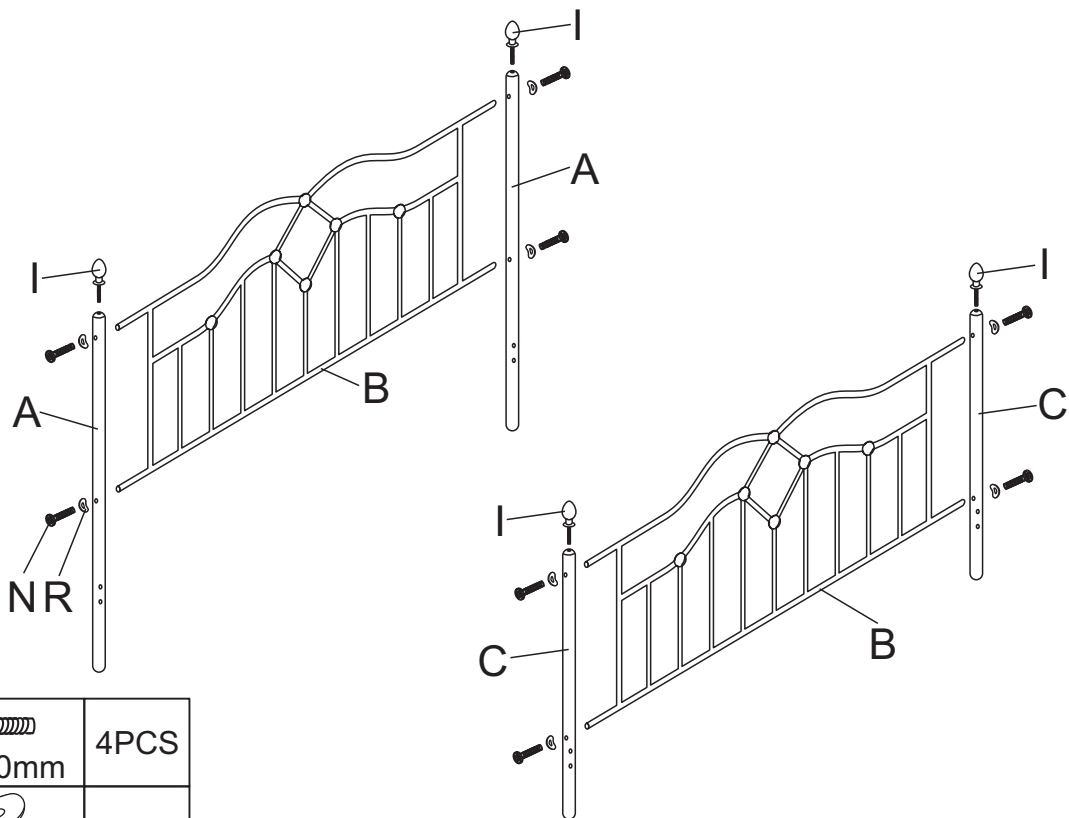
1



N	 M8x20mm	4PCS
R	 M8	4PCS

2

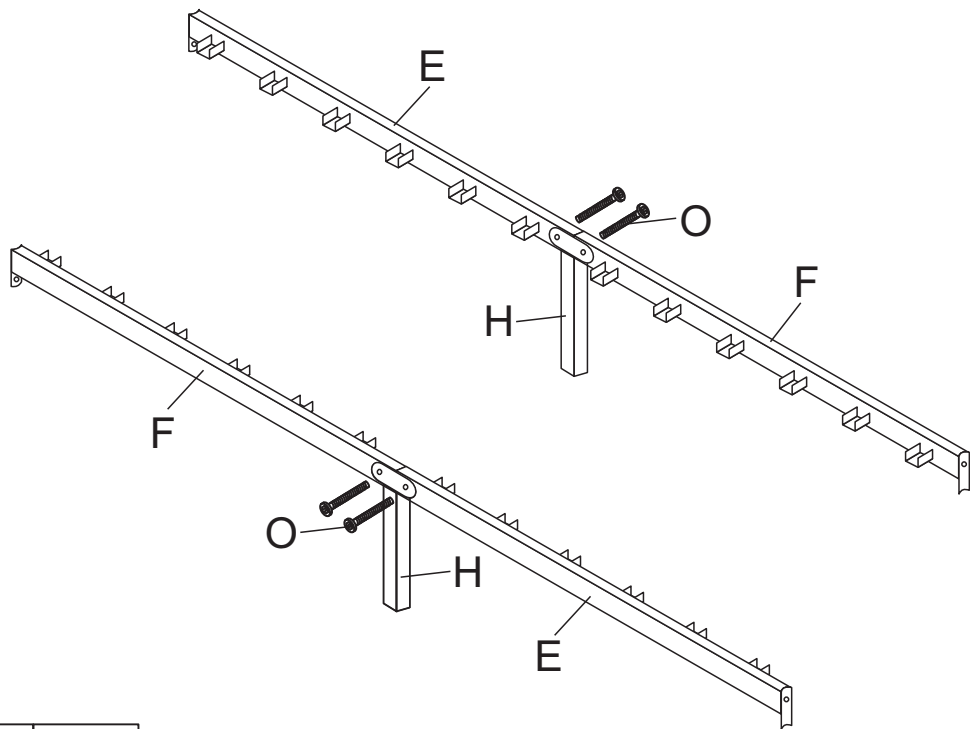




O	 M8x40mm	4PCS
---	--	------

ASSEMBLY INSTRUCTIONS


3

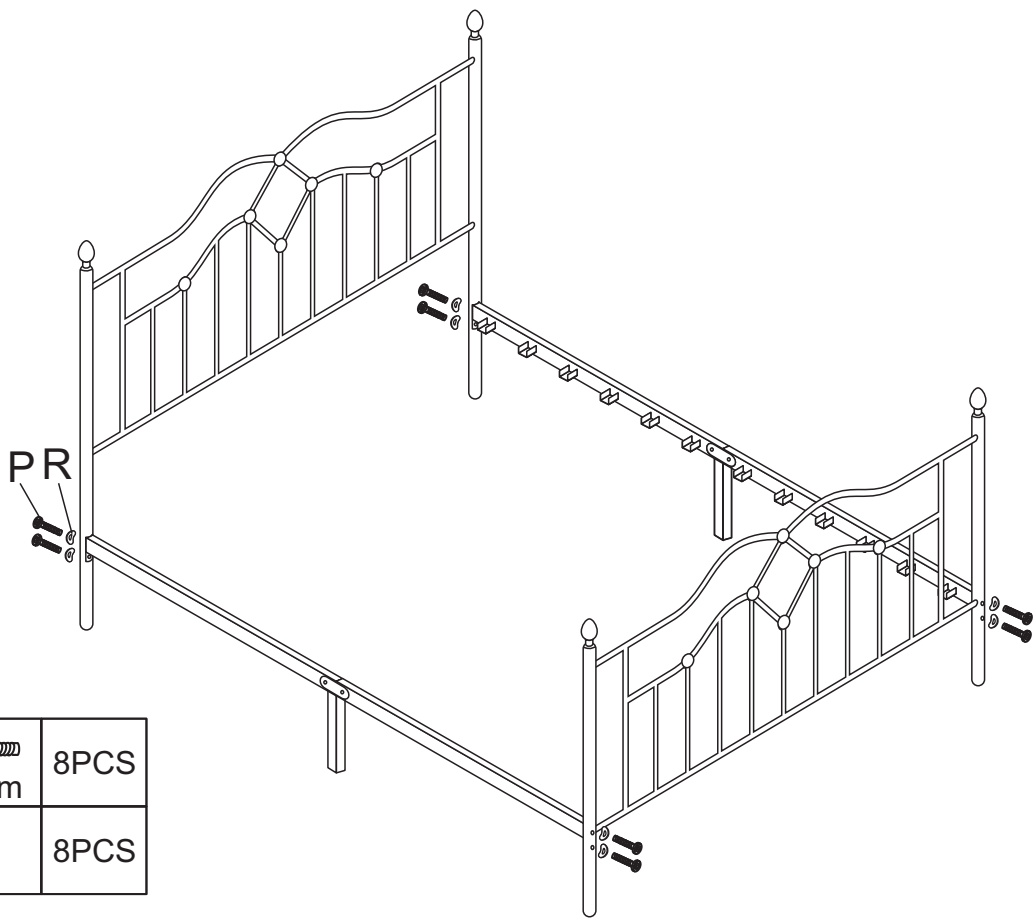
AB



P	 M8x50mm	8PCS
R	 M8	8PCS


4

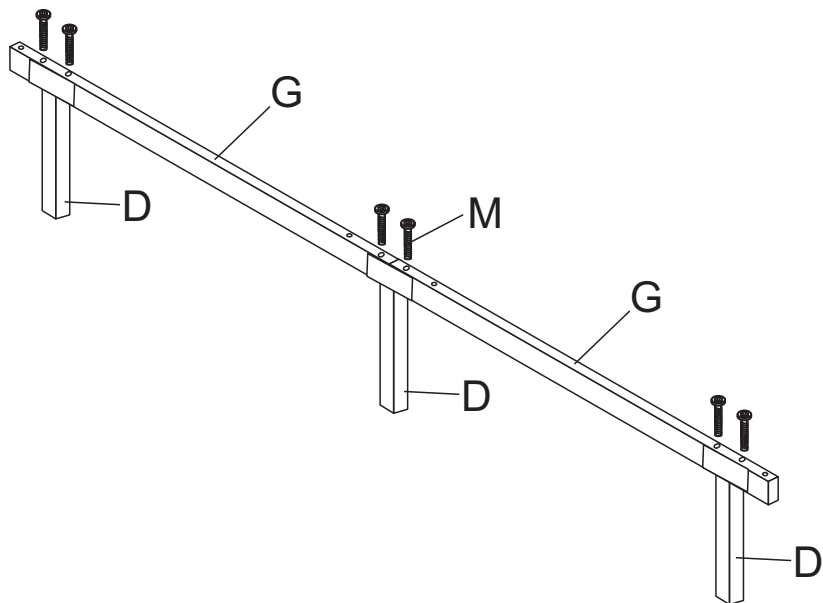


M	 M6x35mm	6PCS
---	--	------


ASSEMBLY INSTRUCTIONS


5

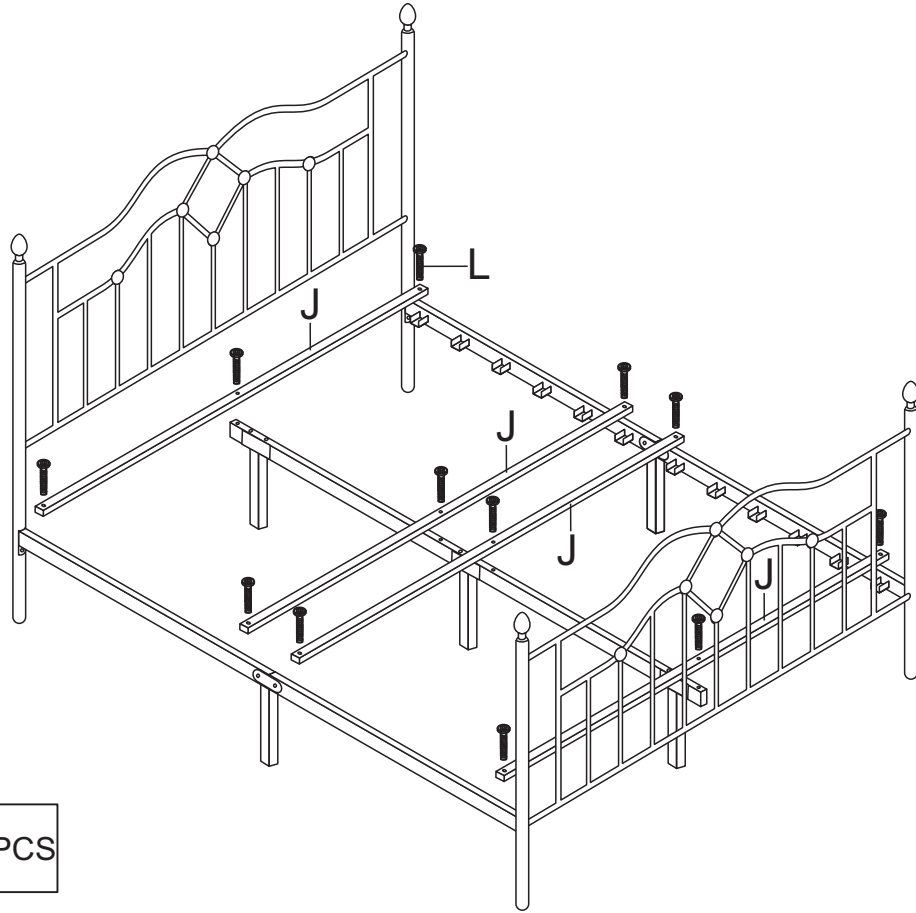

L		12PCS
M6x25mm		

6

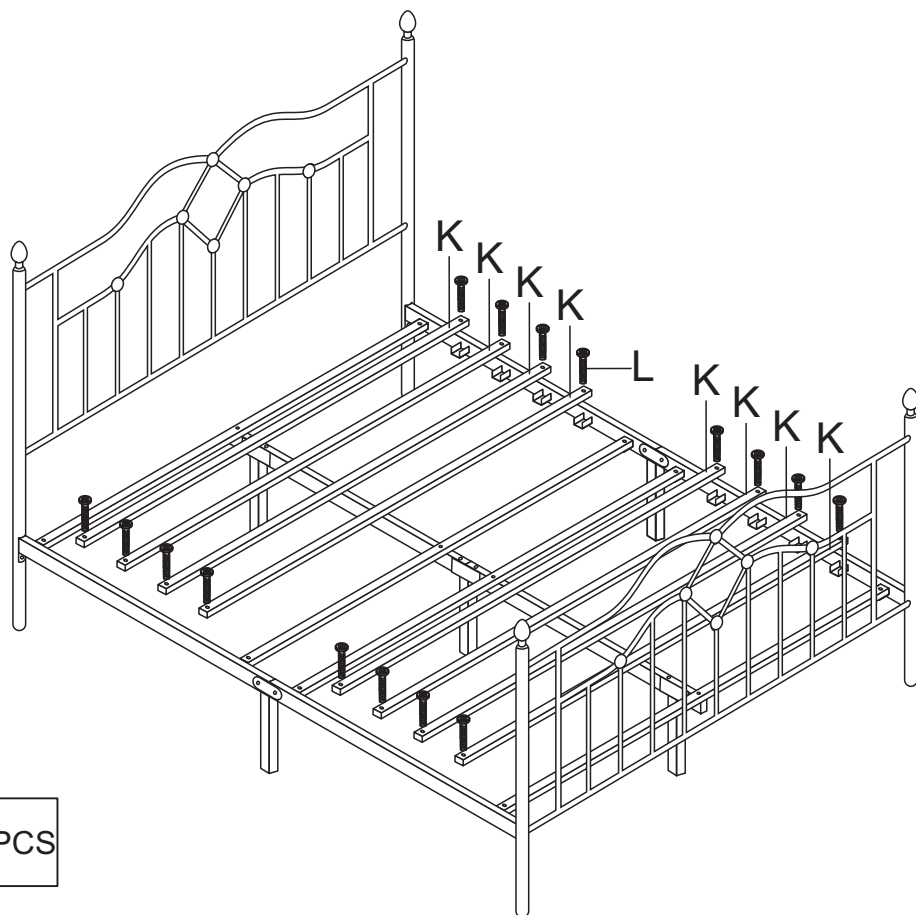

L		16PCS
M6x25mm		