
ASSEMBLY INSTRUCTIONS


Wine Rack

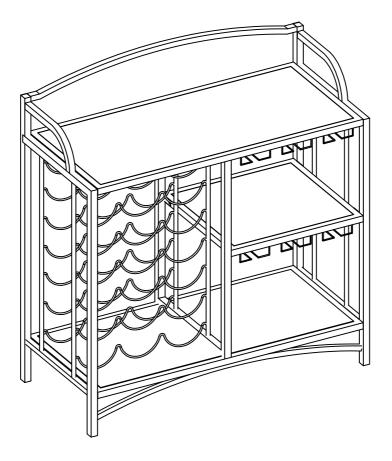

NOTE TO CUSTOMERS:


- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten ,as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


Parts List

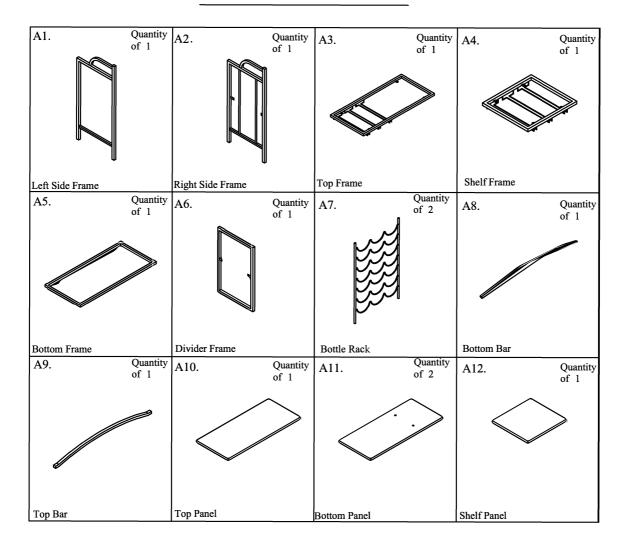

Hardware List


B1	Quantity of 4	B2		Quantity of 15	В3	Quantity of 2	B4	Quantity of 12
							< 1000 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	
Bolt Dia: \(\frac{1}{4}\)" \(X\frac{1}{2}\)"L		Bolt	Dia:\frac{1}{4}" X 1"L	<u>, </u>	Bolt	Dia:\frac{1}{4}"x 1-\frac{5}{8}"L	Screw Dia: $\frac{3}{16}$ " $x_{\frac{1}{2}}$ " L	,
Allen Wrench								

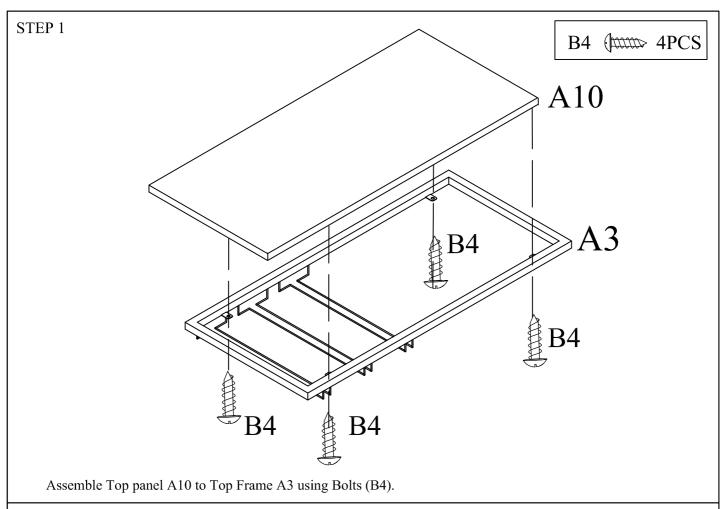

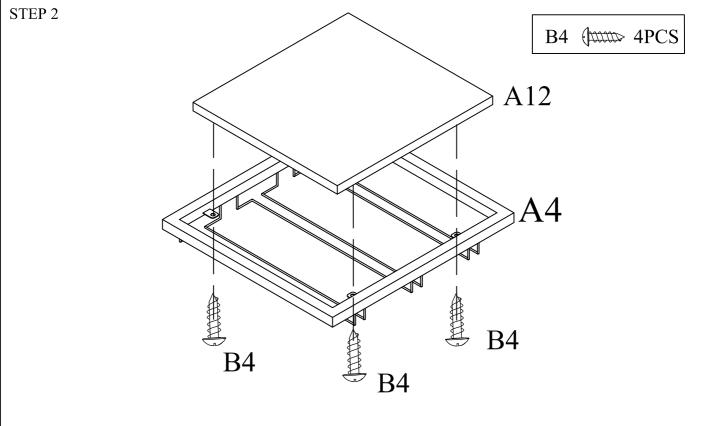


Page 3 of 7

Assemble Shelf panel A12 to Shelf Frame A4 using Bolts (B4).

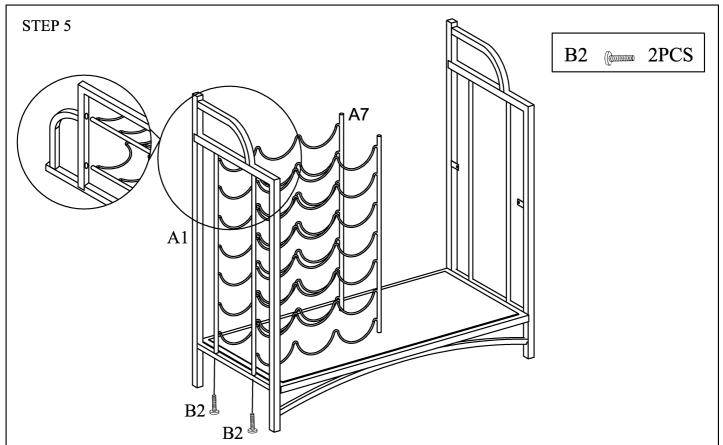


Insert Bottle Rack (A7) into holes on top of Left Side Frame (A1), Then assemble Bottle Rack (A7) to the bottom of Left Side Frame (A1) using Bolts (B2).


NOTE: Please do not tighten Bolts (B2) until step 9.

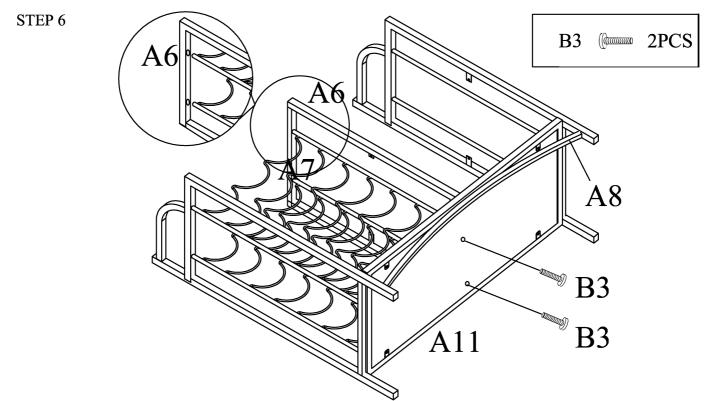

Insert Bottle Rack(A7) into holes on the top of Divider Frame (A6). Then Attach Bottle Rack (A7) and Divider Frame (A6) to Bottom Panel (A11) using Bolts (B3). NOTE: Please do not tighten Bolts (B3) until step 9.

Page 5 of 7

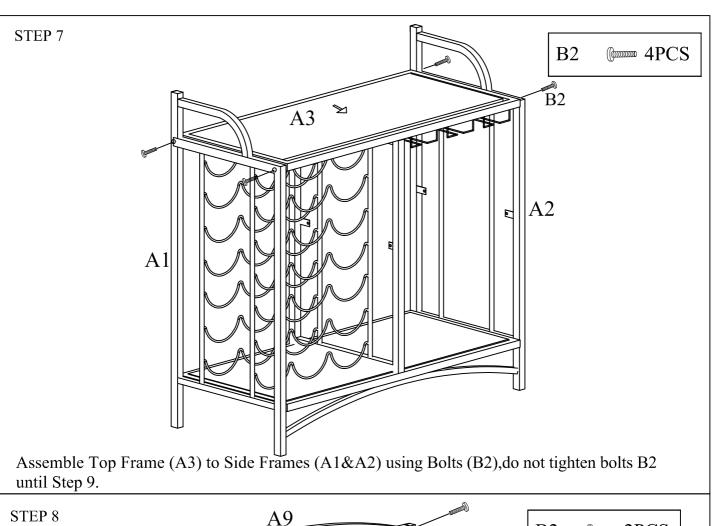


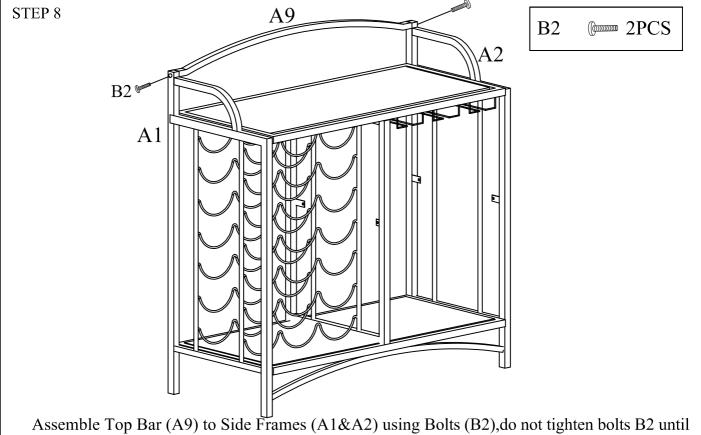

Page 6 of 7

Step 9.

B1 PCS

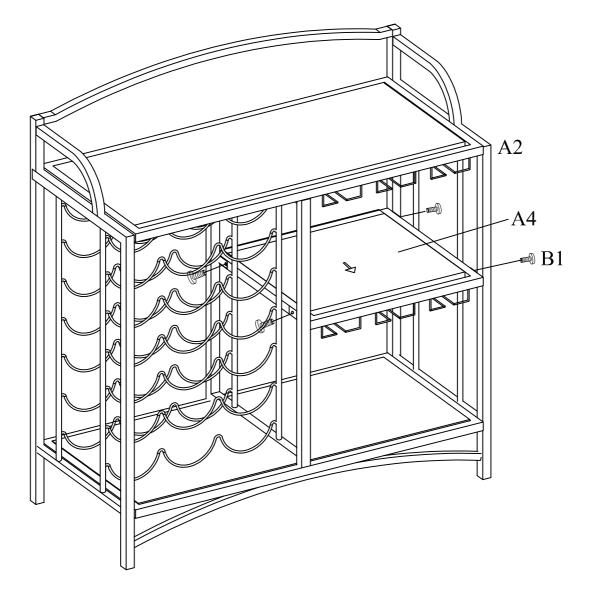

Assemble Shelf Frame A4 to Right Side Frame A2 and Divider A6 using Bolts (B1). Then tighten all bolts at this point.