
PPSTN043AK0245

Upholstered Bed


Queen

Weight Limit:
Bed:1000LBS / 454KG










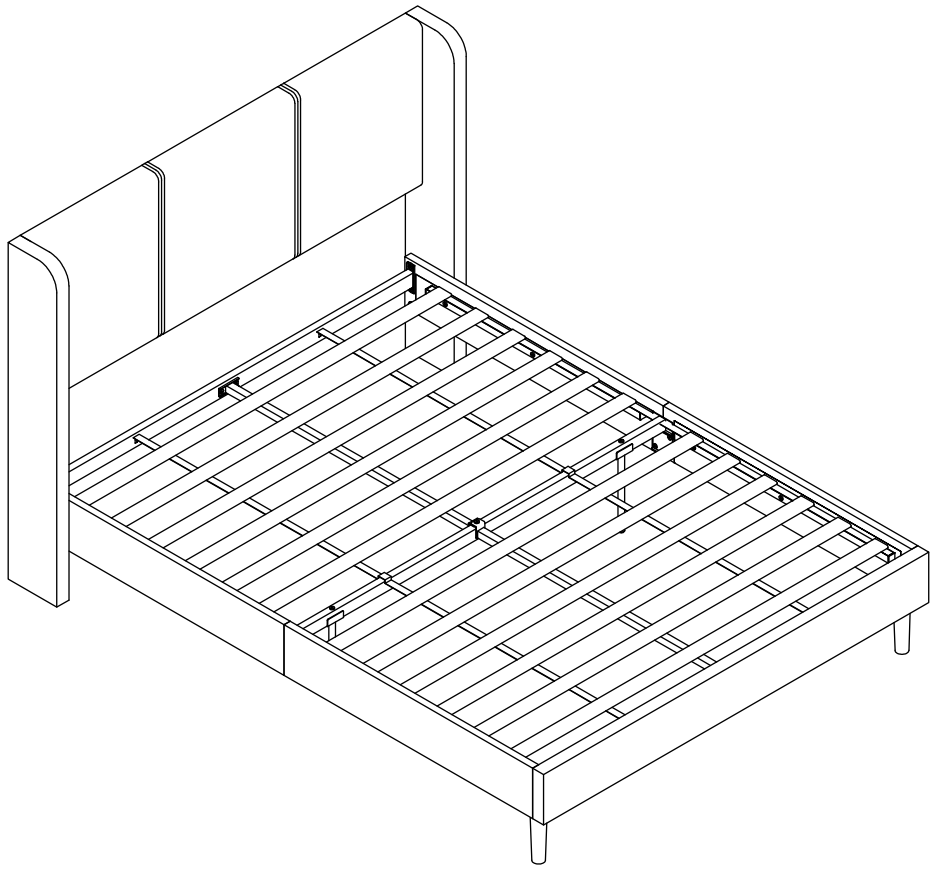


Version：2026/3/17










PARTS

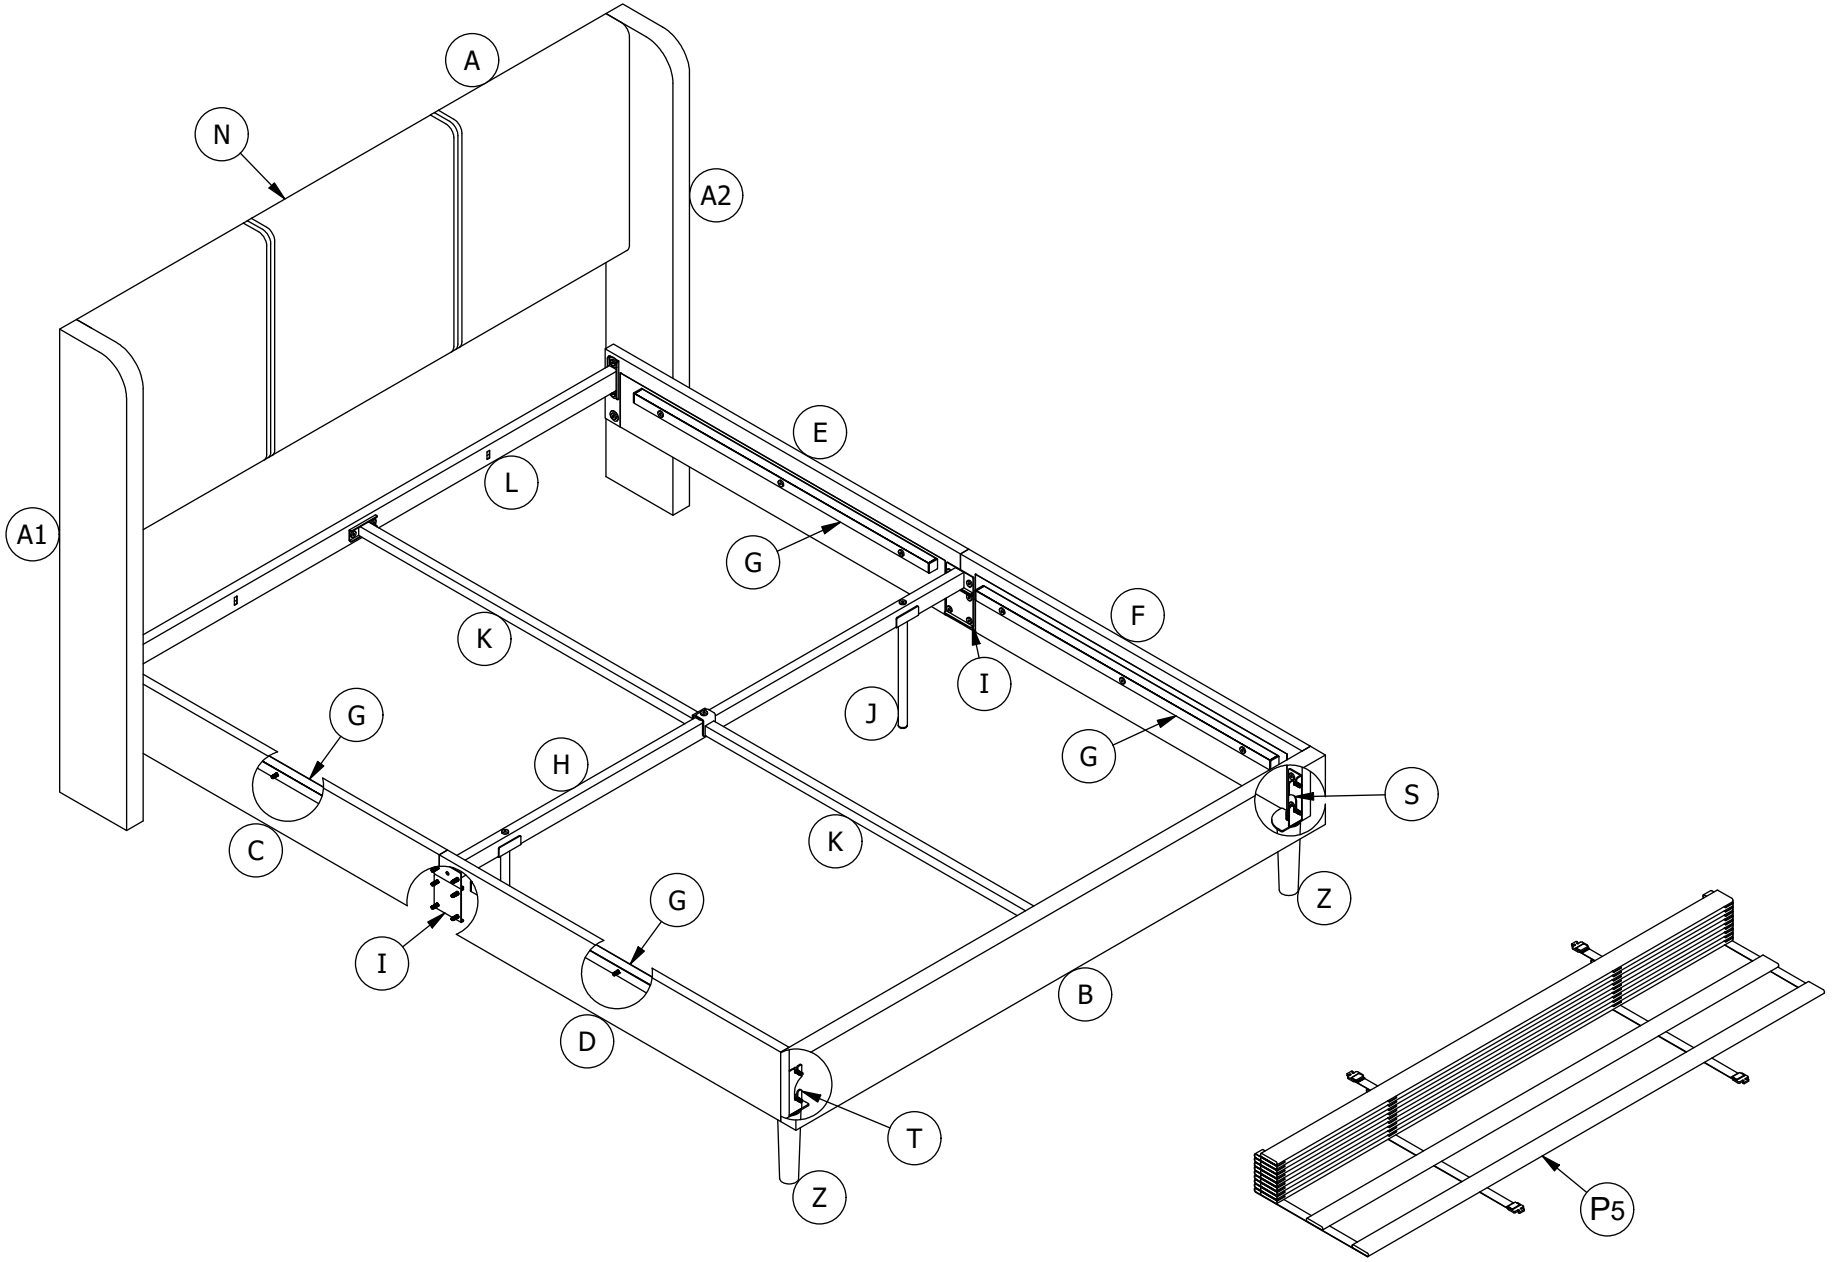





PARTS LIST

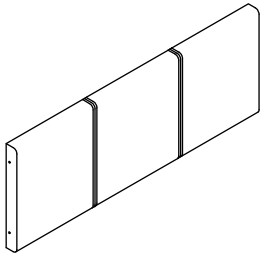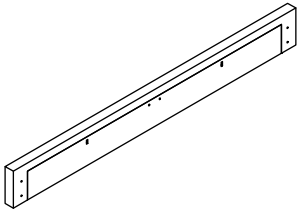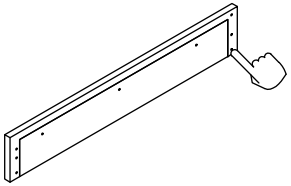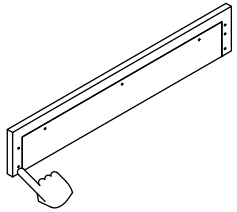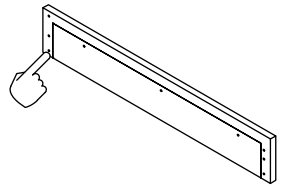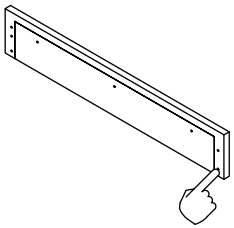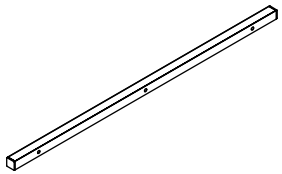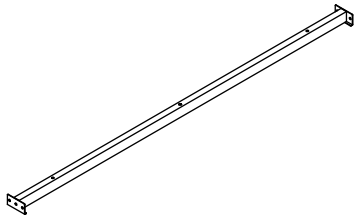
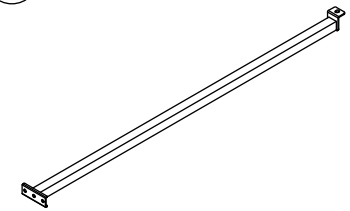
A 	B 	C 	D 	E 
Headboard 1 PC	Footboard 1 PC	Side Panel 1 PC	Side Panel 1 PC	Side Panel 1 PC
F 	G 	H 	J 	K 
Side Panel 1 PC	Side Rail 4 PCS	Cross Brace 1 PC	Support Leg 2 PCS	Center Rail 2 PCS

PARTS LIST

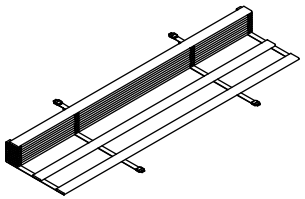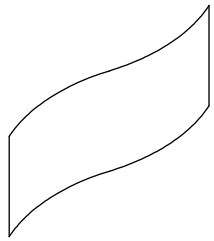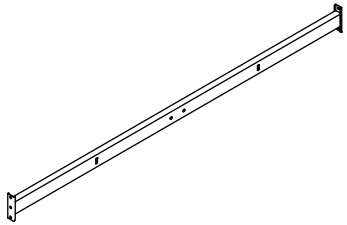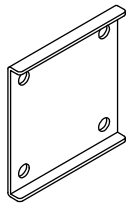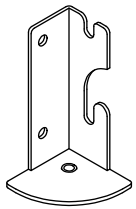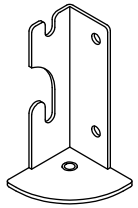P5 	A1 	A2 	Z 	N 
Wooden Slats 1 PC	Side Board 1 PC	Side Board 1 PC	Leg 2 PCS	Back Cover 1 PC
L 	I 	S 	T 	
End Rail 1 PC	Connector 2 PCS	Bracket 1 PC	Bracket 1 PC	


HARDWARE LIST

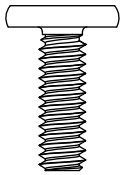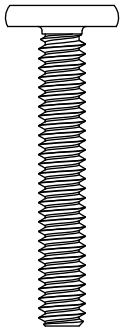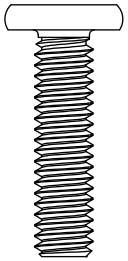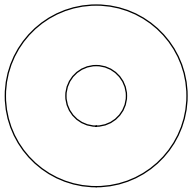
1 	2 	3 	4 	5 
1/4" X 3/4"	1/4" X 1 9/16"	5/16" X 1 3/16"	1/4"	1/4"
Bolt X 30	Bolt X 16	Bolt X 1	Metal Washer X 10	Spring Washer X 6

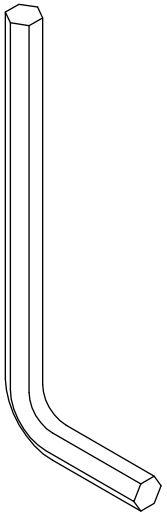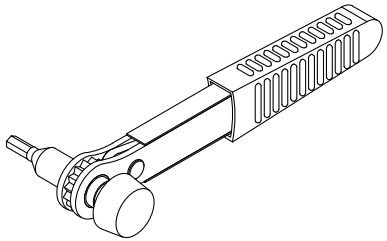6 	7 	8 
1/4" X 1 3/4"	4mm	4mm
Bolt X 6	Allen Key X 1	Ratchet Wrench X 1

How To Use The Ratchet

1. Before assembling the furniture, please adjust the lock tool as needed.

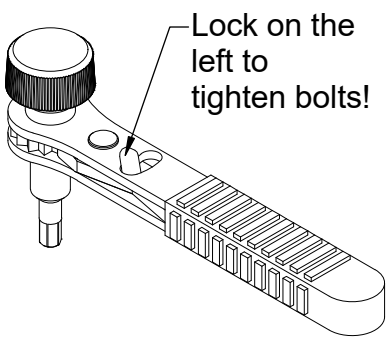


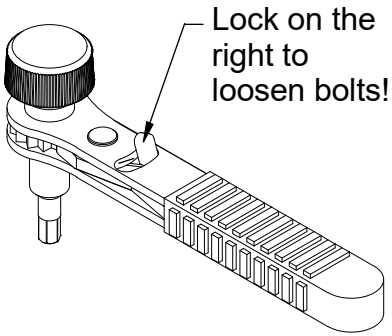

2. Tighten or loosen the bolts

- **Tighten bolts :** Locate the turncap (picture) and rotate it clockwise to screw the bolt quickly, until it cannot be rotated any more. Then start rotating with the handle clockwise to finalize tightening the bolts.

- **Loosen bolts :** Rotate the handle counterclockwise to loosen the bolt. Then, to completely remove the bolts, continue rotating with the turncap in the same direction.

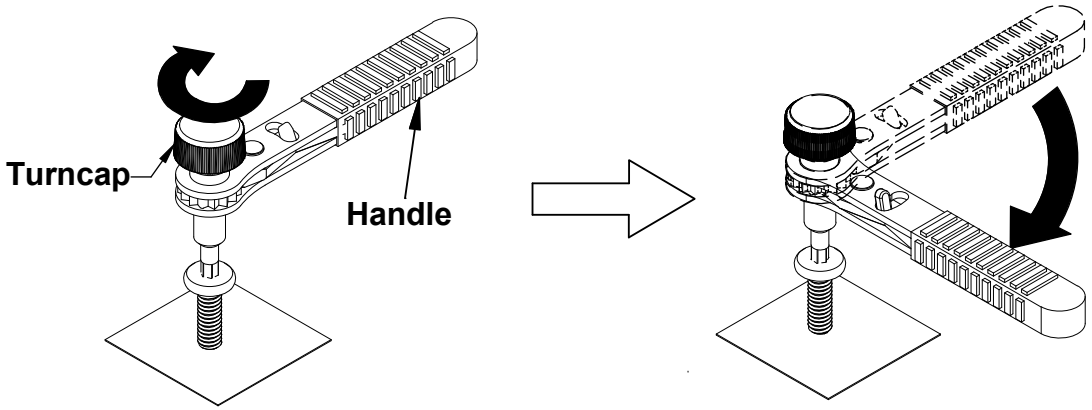


Helpful Hints

- Before assembling the furniture, please read the instructions on how to use ratchet, it will help you to assemble the furniture quickly.
- Please don't throw away the ratchet in case you may need to use in future.

Step 1


Attach **Z** to **S** .
Attach **Z** to **T** .


⚠ **Fully tighten all bolts in this Step.**

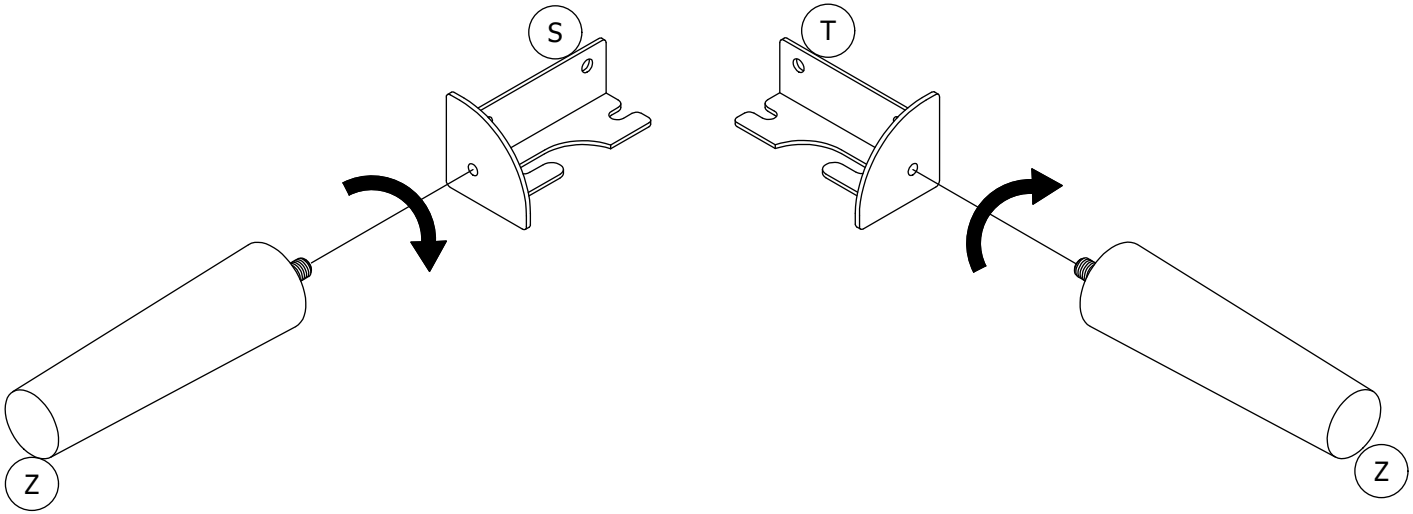

Step 2

Screw ❶ into **B** with half of the threads exposed as illustrated.

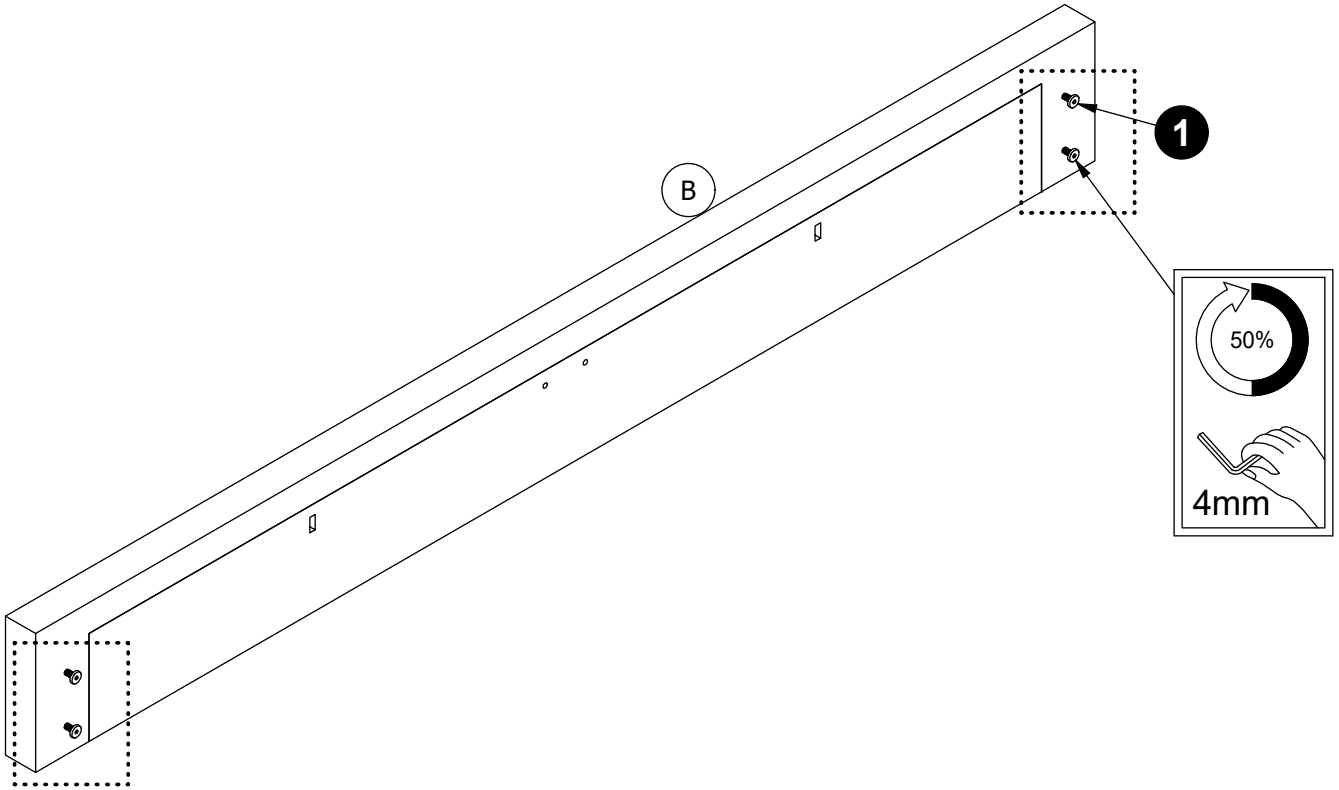


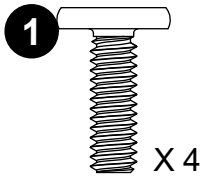



Step 3

Attach **T** to **D** with ❶.
Attach **S** to **F** with ❶.

⚠ **Fully tighten all bolts in this Step.**

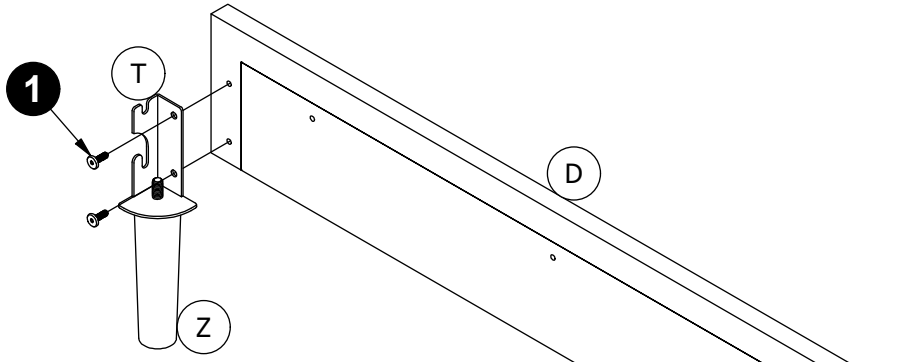

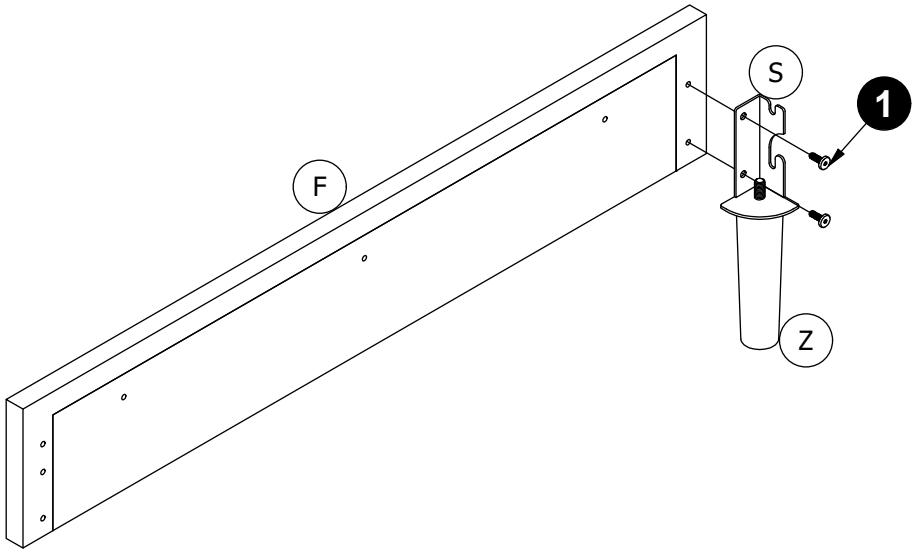


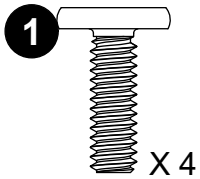



Step 4


Attach **I** to **C** & **D** with ❶.
Attach **I** to **E** & **F** with ❶.

⚠ **Fully tighten all bolts in this Step.**

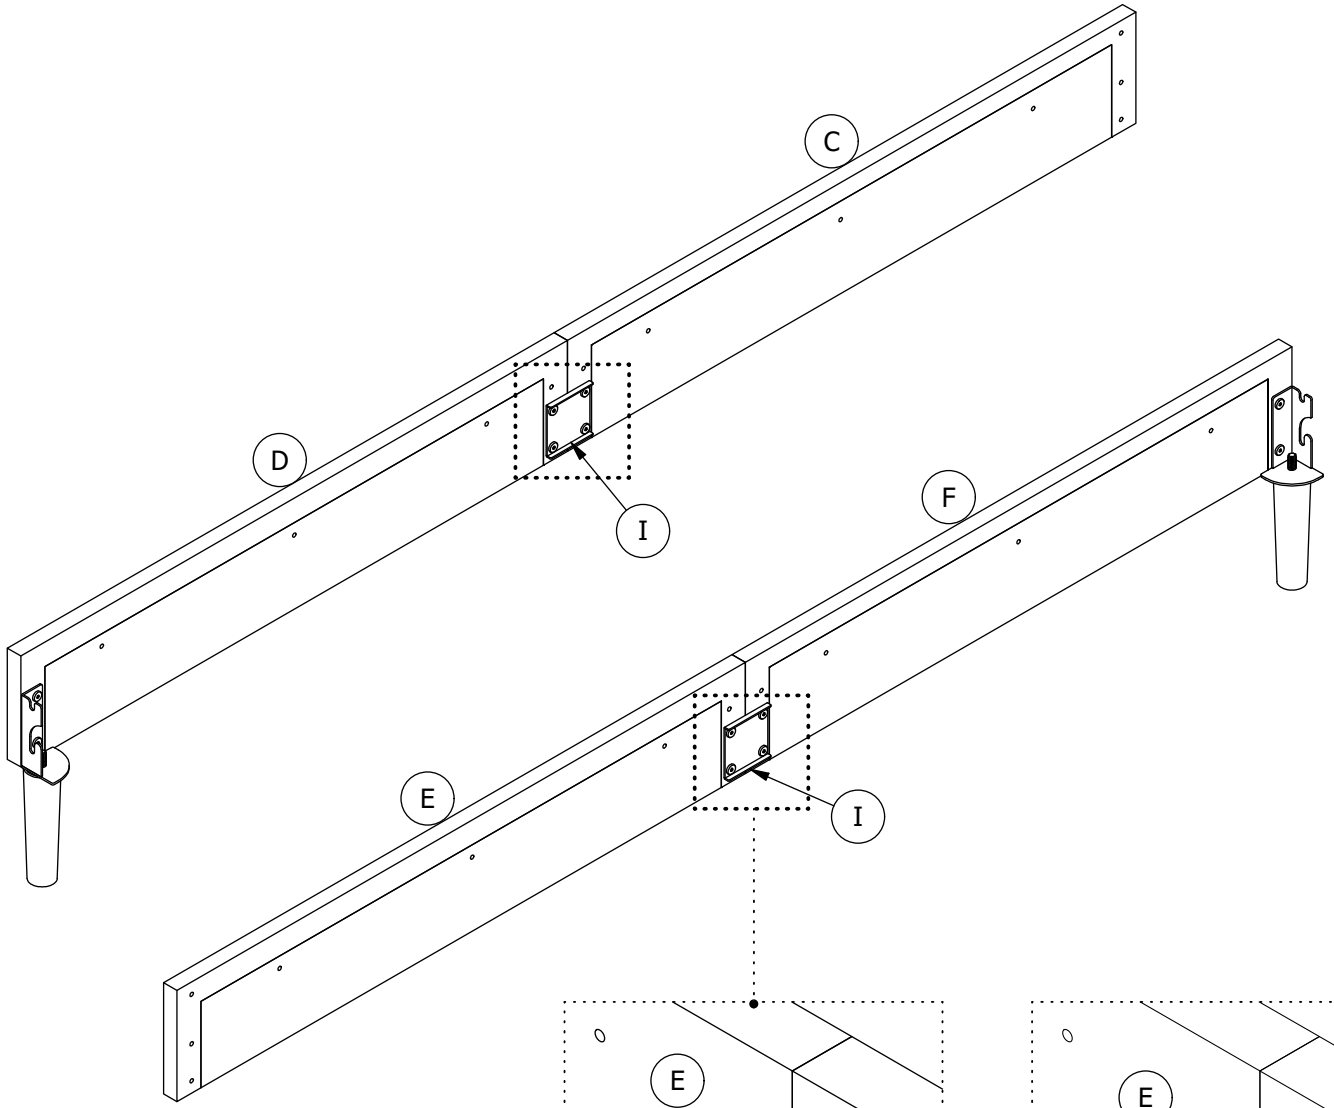

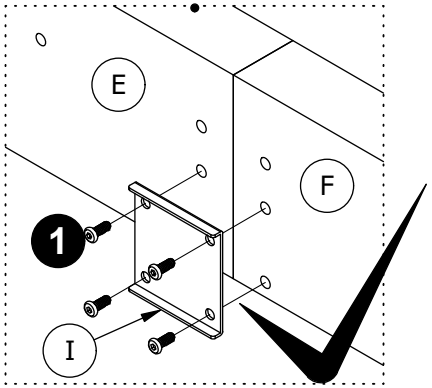


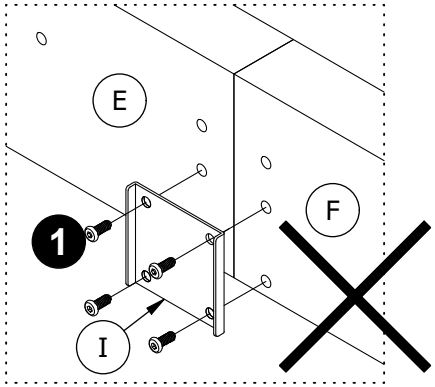


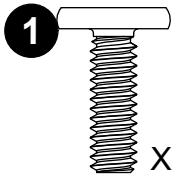

Step 5


Attach **J** X 2 to **H** with ❶ .

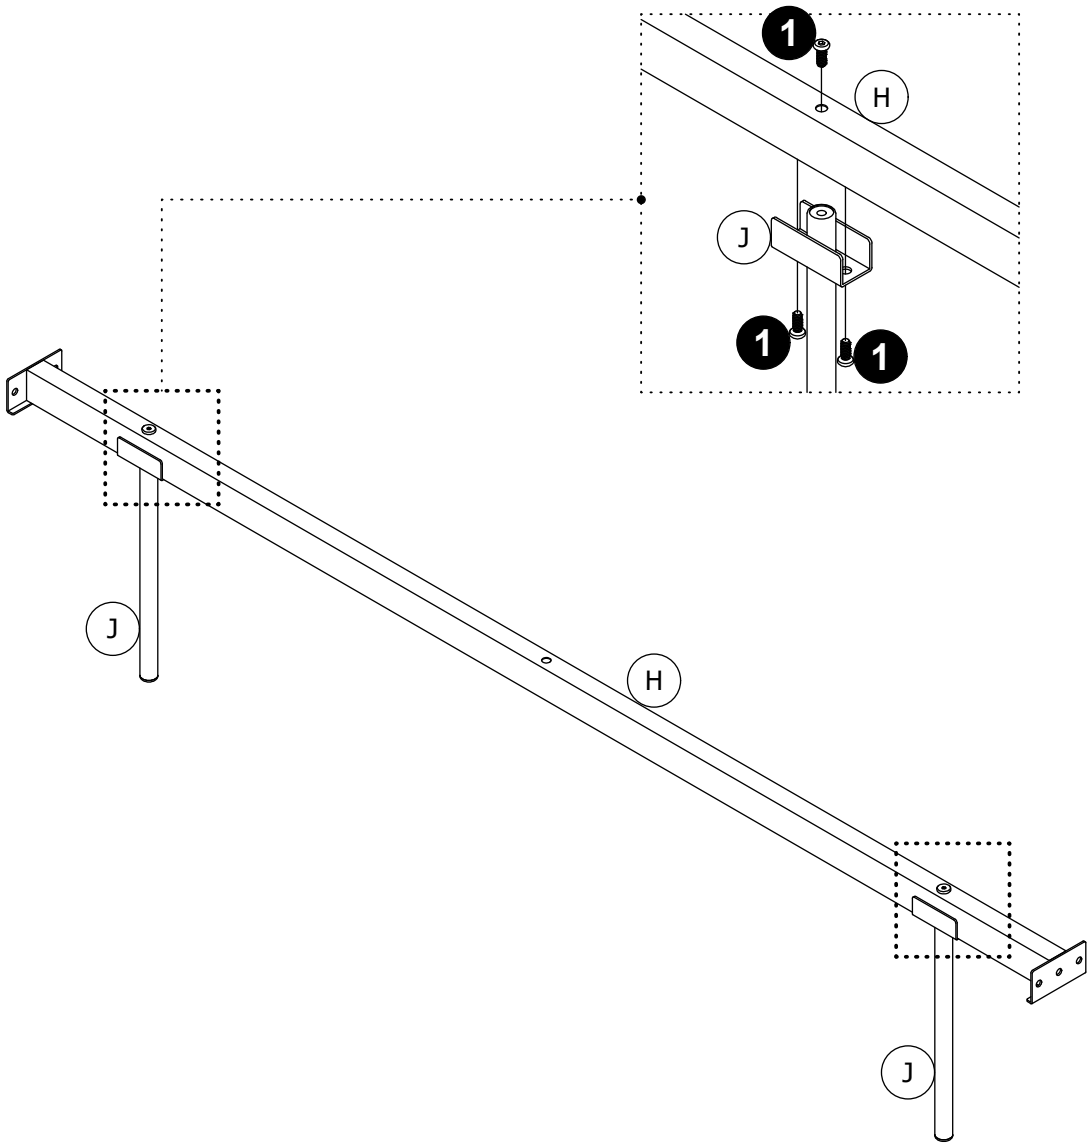


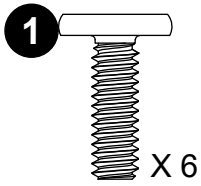

Step 6


Attach subassembly (**H** & **J**) from previous step to **C** & **D** and **E** & **F** with ❶.

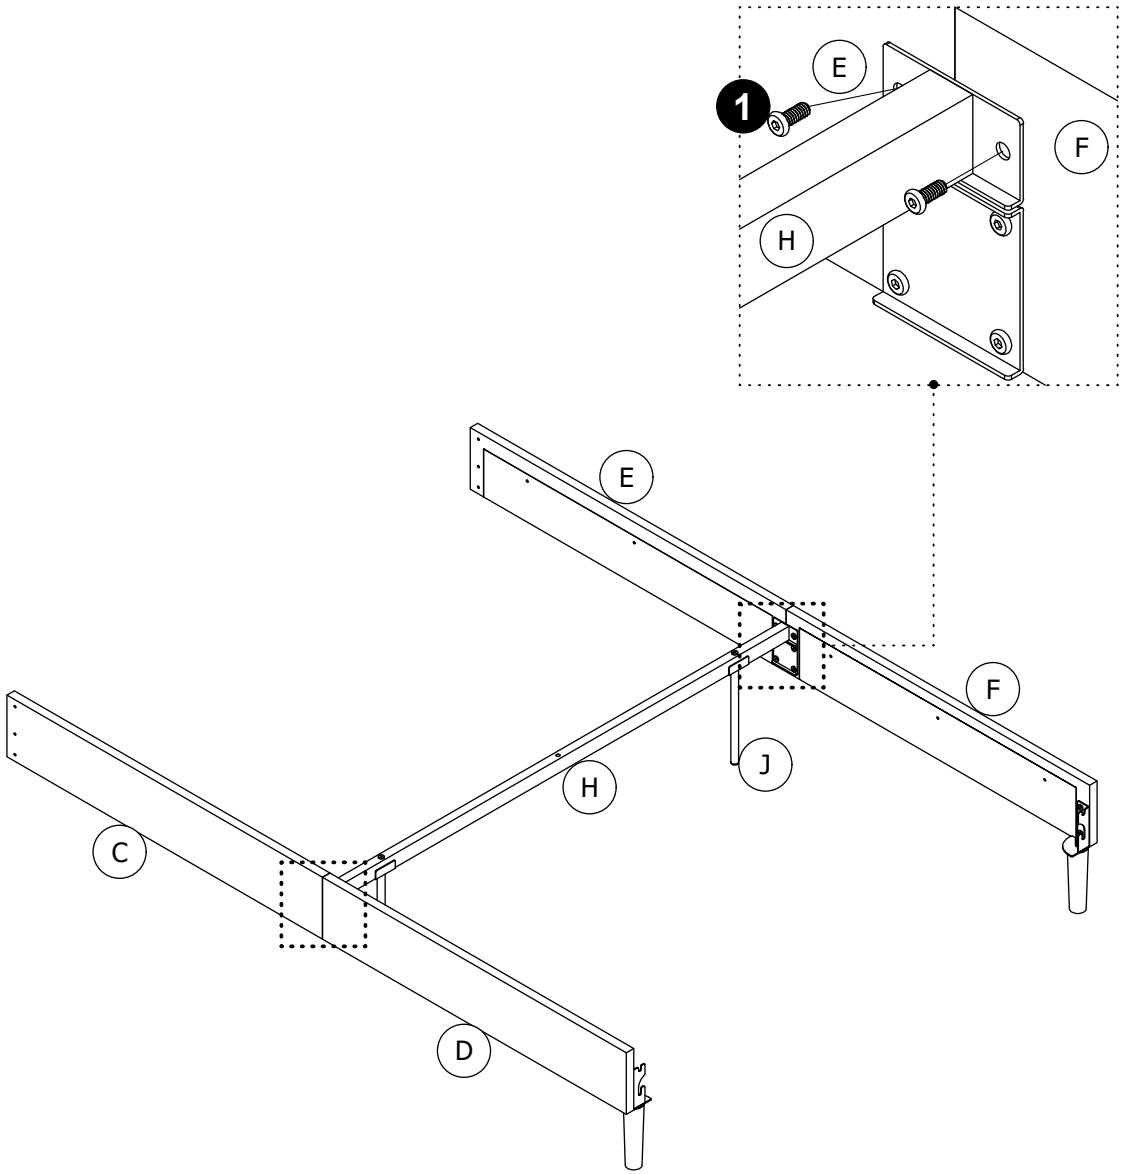


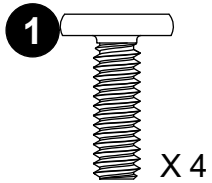

Step 7


Attach **C** to **A1** with ❹❺❻.
Attach **E** to **A2** with ❹❺❻.

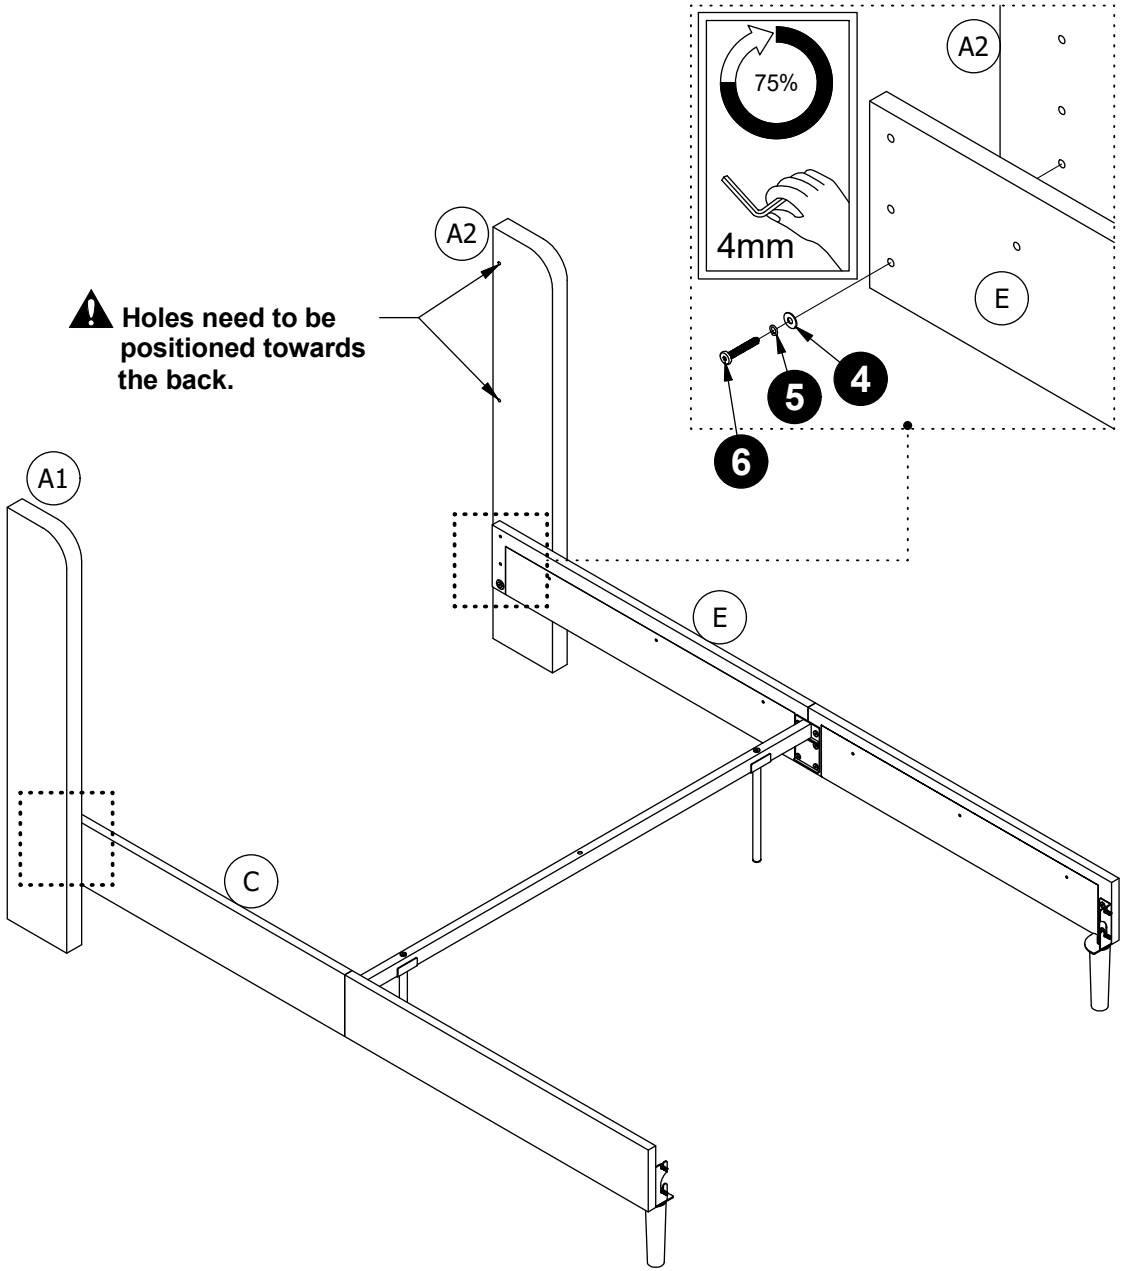


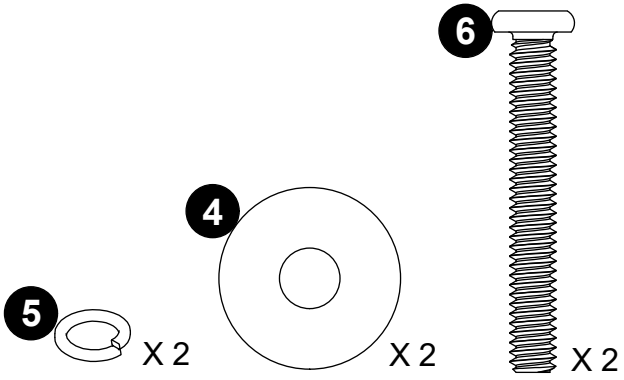

Step 8


Hang **B** on **S** and **T** as illustrated .

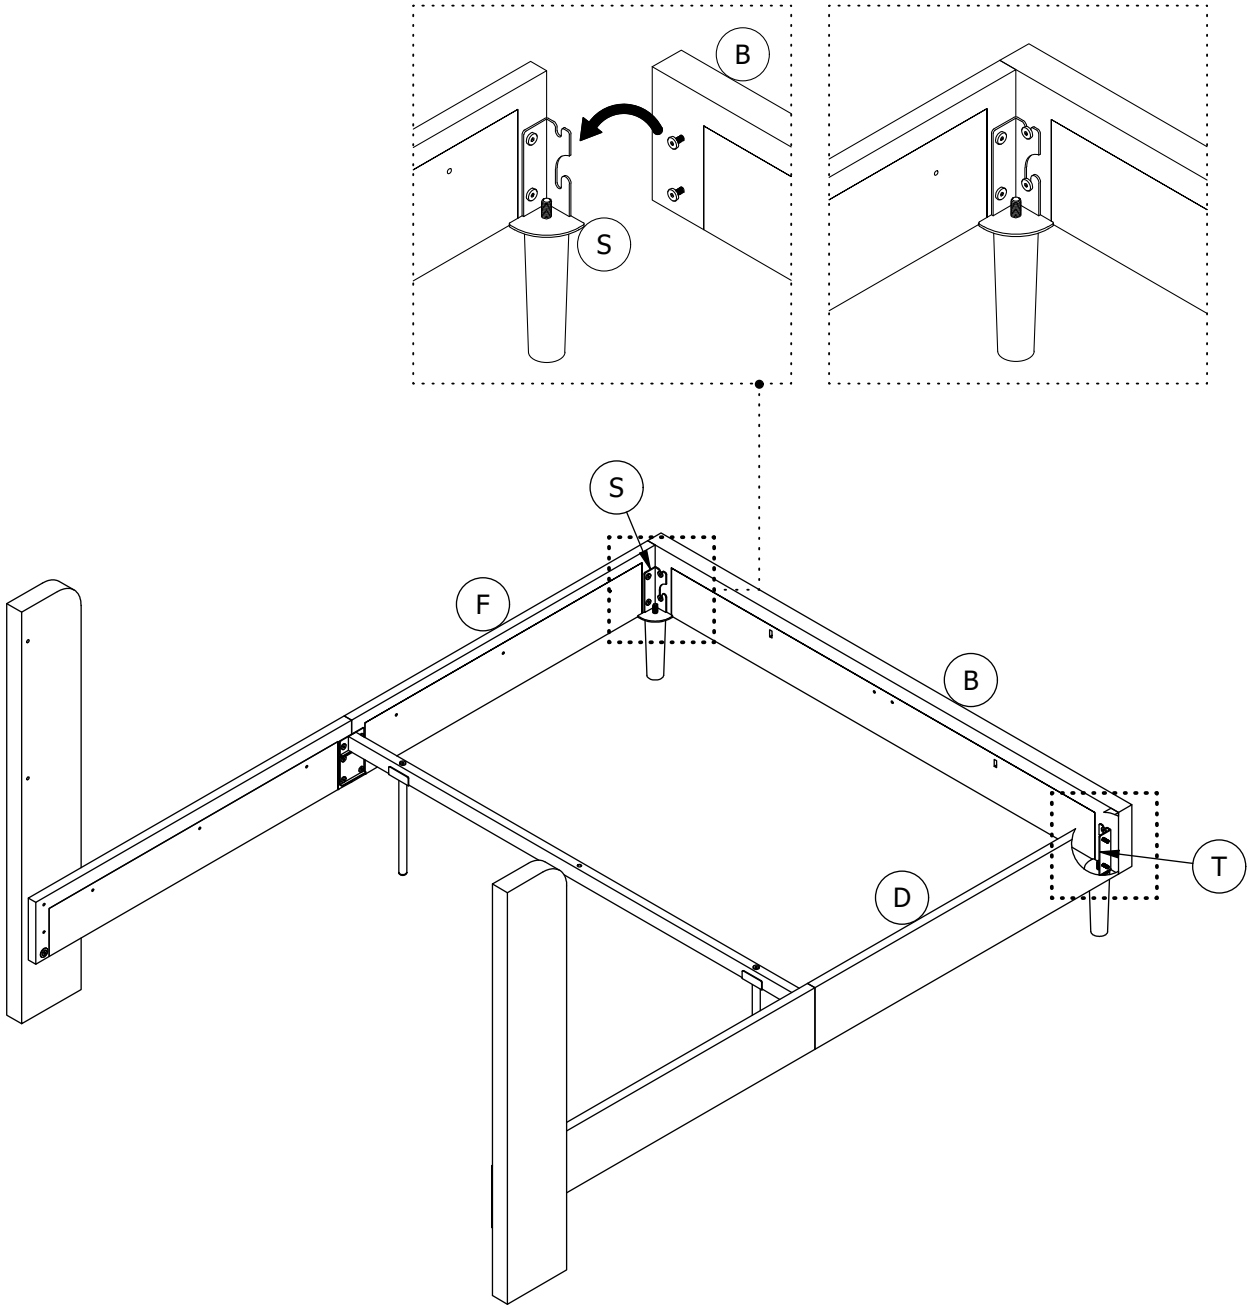

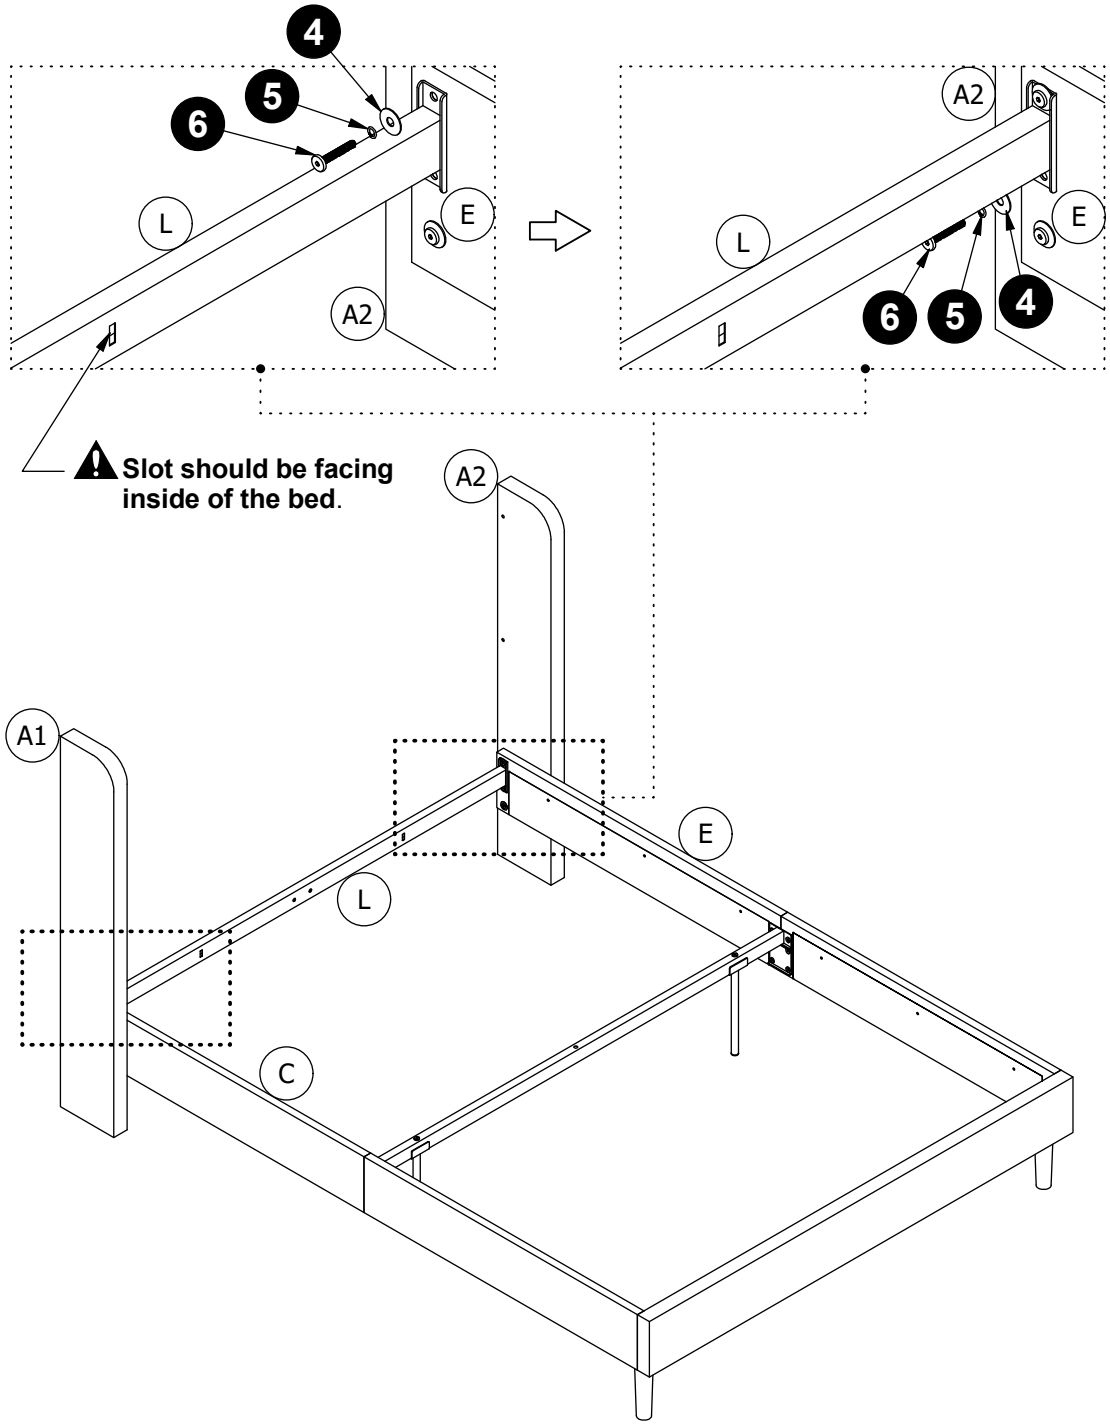


Step 9


Attach **L** and **C** to **A1** with ❹ ❺ ❻ .
Attach **L** and **E** to **A2** with ❹ ❺ ❻ .

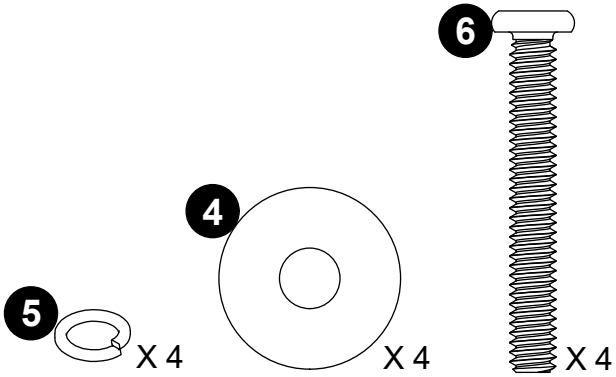

Step 10


Attach **A** to **A1** and **A2** with❷❹.

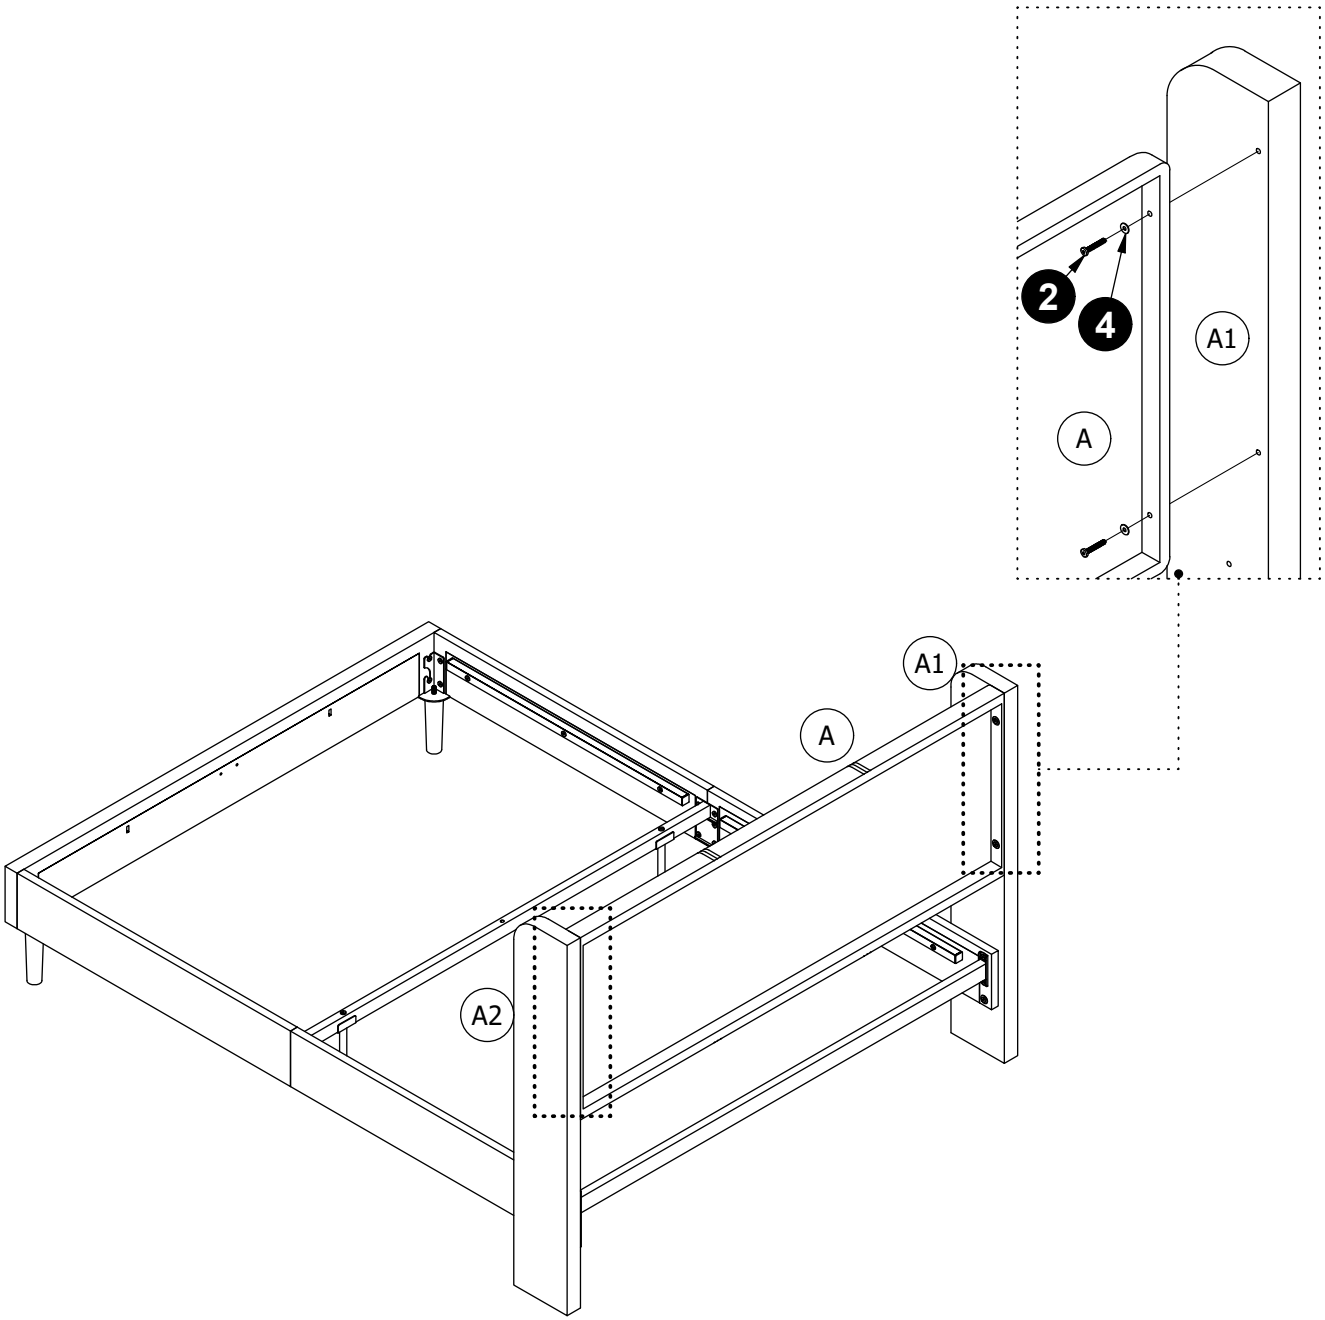

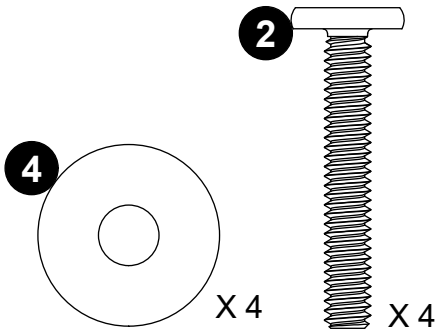

Step 11

Stick **N** to the back of **A** with Velcro as illustrated.

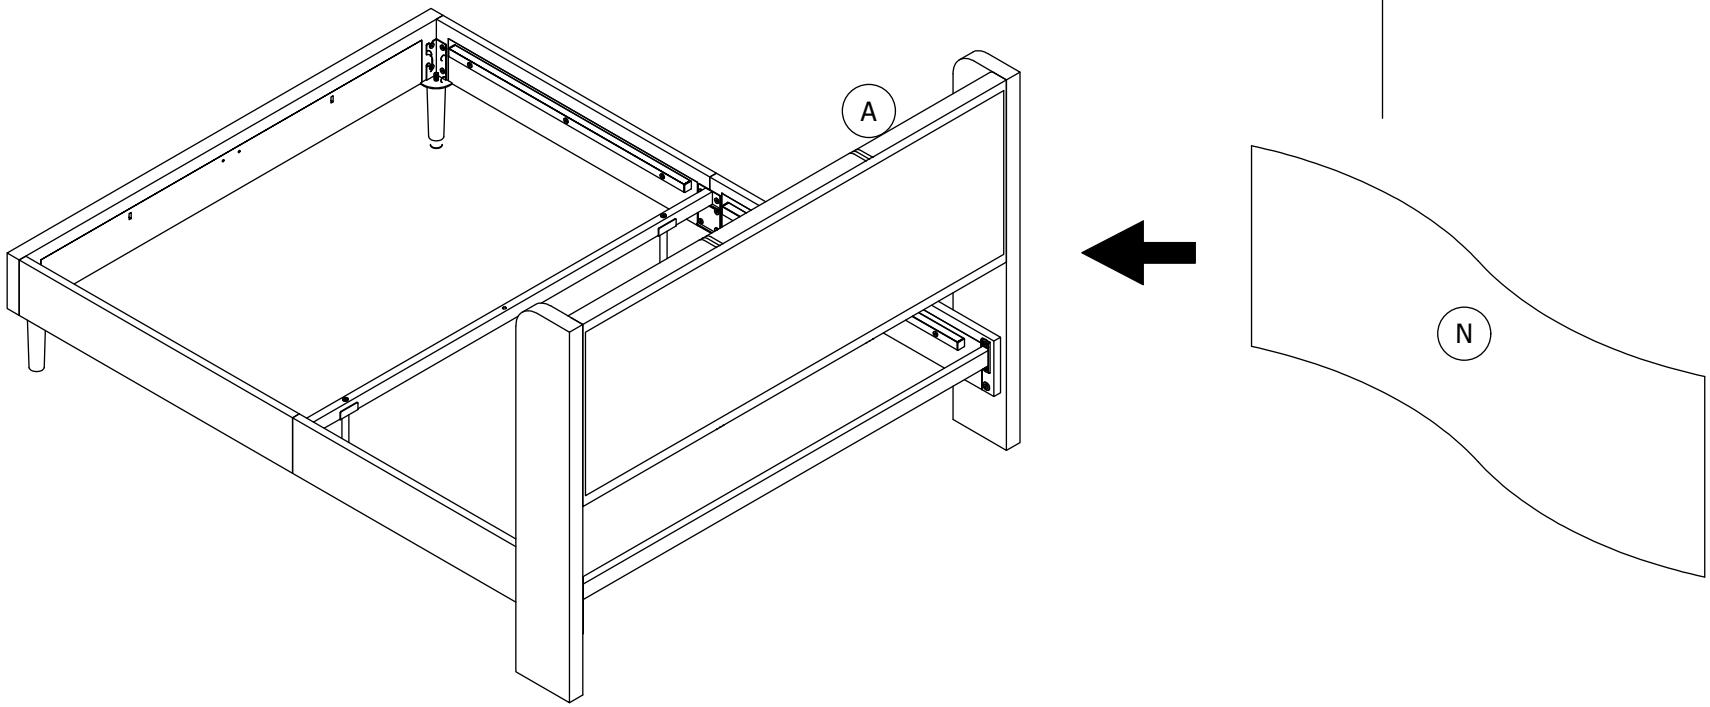


Step 12


12.1 Attach one **K** to **L** with ❶.

12.2 Attach the other **K** to B with ❶.


12.3 Attach **K** x 2 to **H** with ❸.

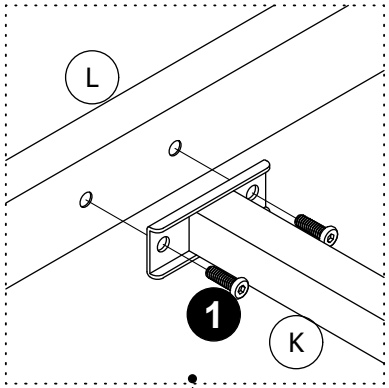


12.1

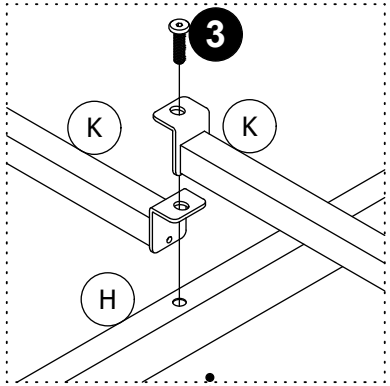


12.3

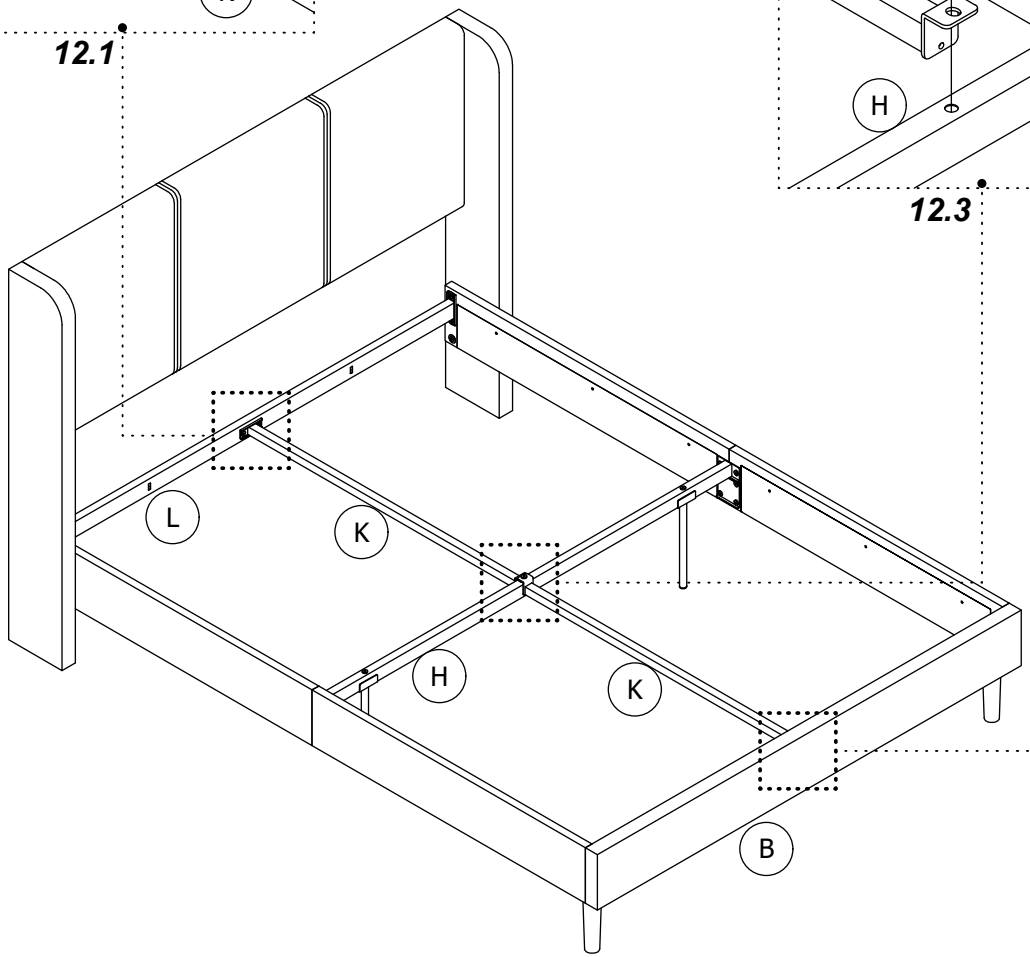

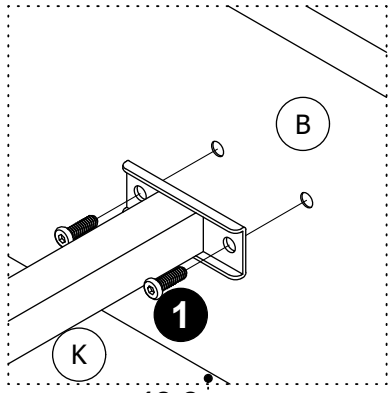


12.2

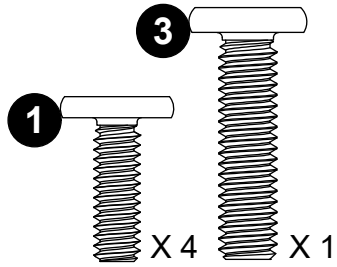


Step 13

Attach **G** x 4 to **C** & **D** & **E** & **F** with ❷.


⚠ **Fully tighten bolts in all steps.**

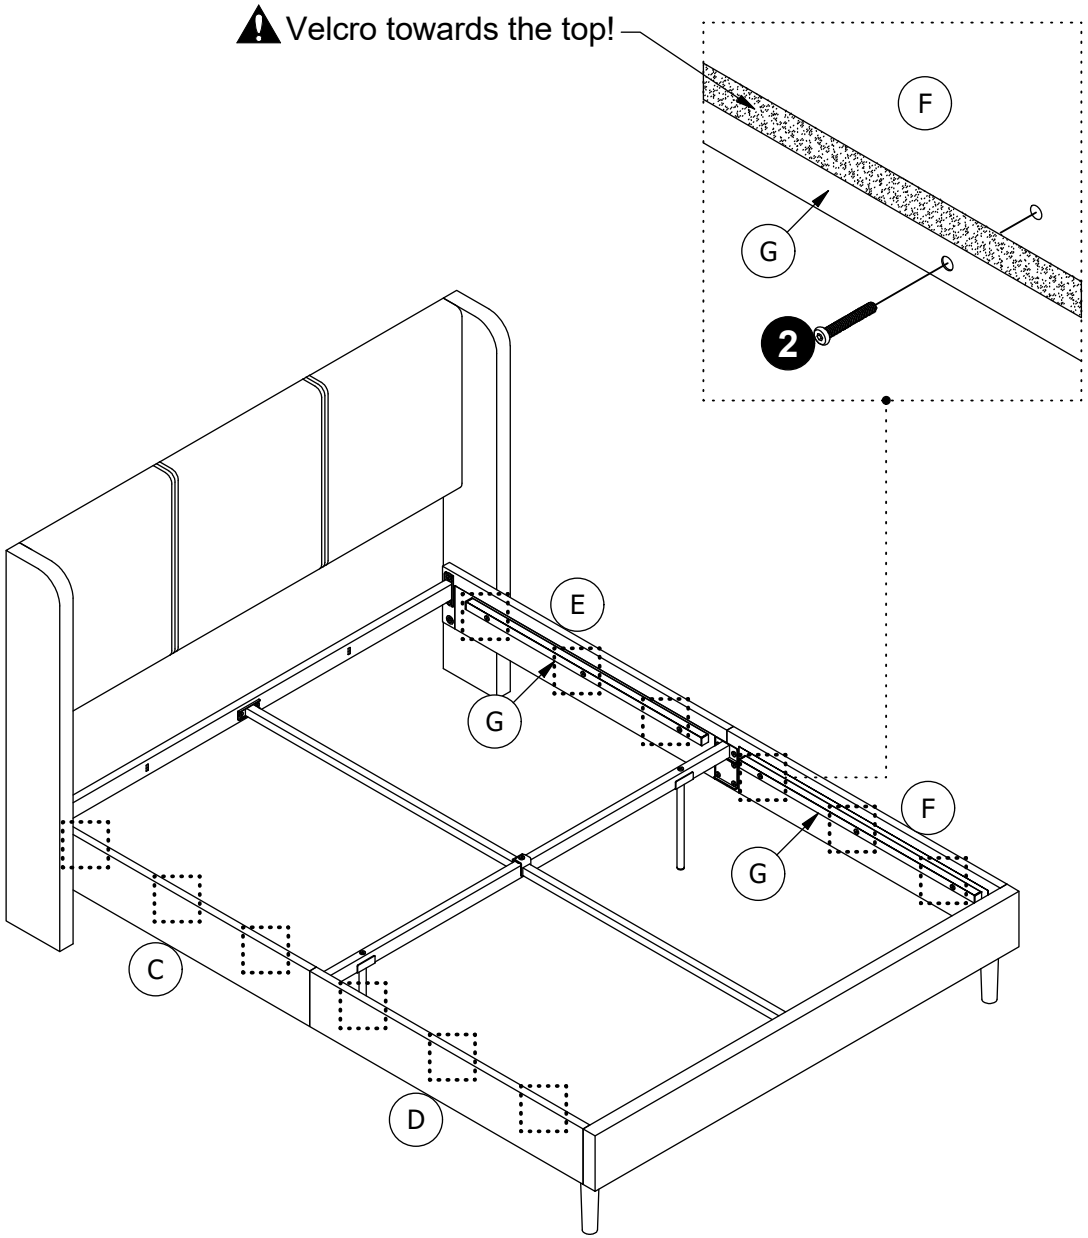

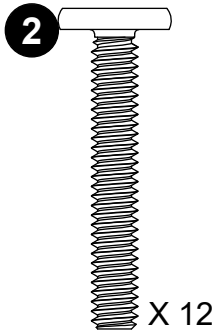


Step 14


14.1 Attach one end of **P5** to **L** by inserting the tab into the slot and turn it to the level position.
14.2 Spread the slats **P5** along the bed with equal spacing, engage the velcro at the end of slat with the counter part on **G**.

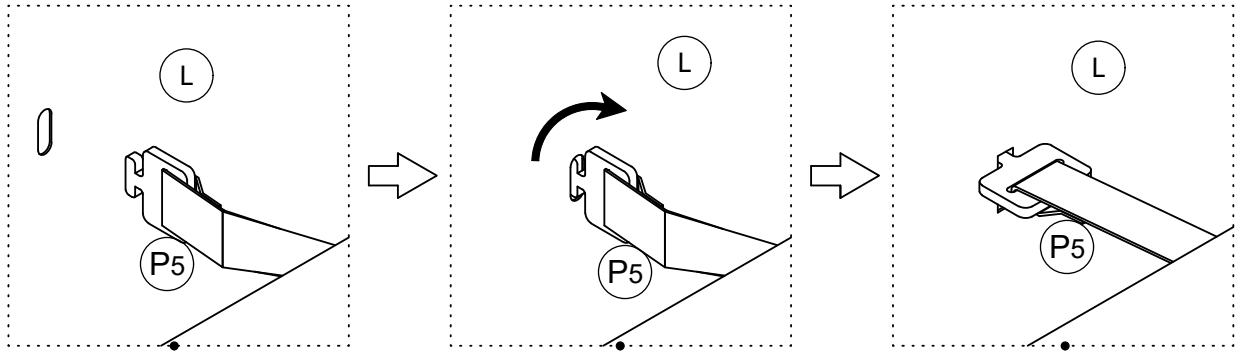


14.1

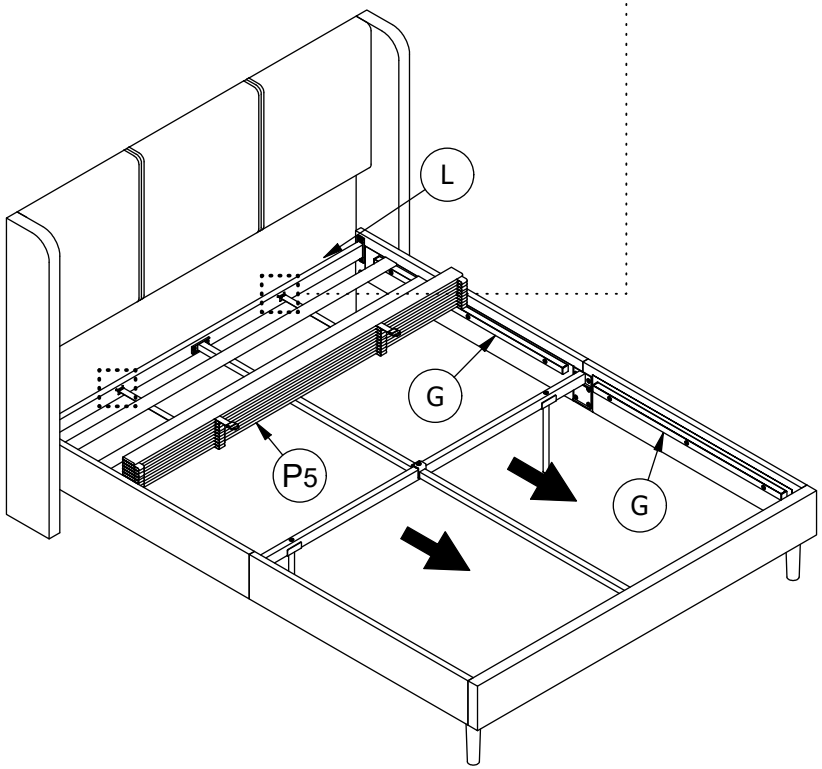

14.2

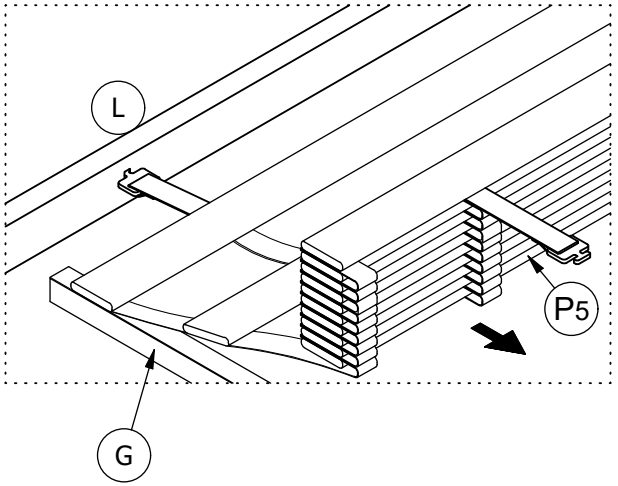

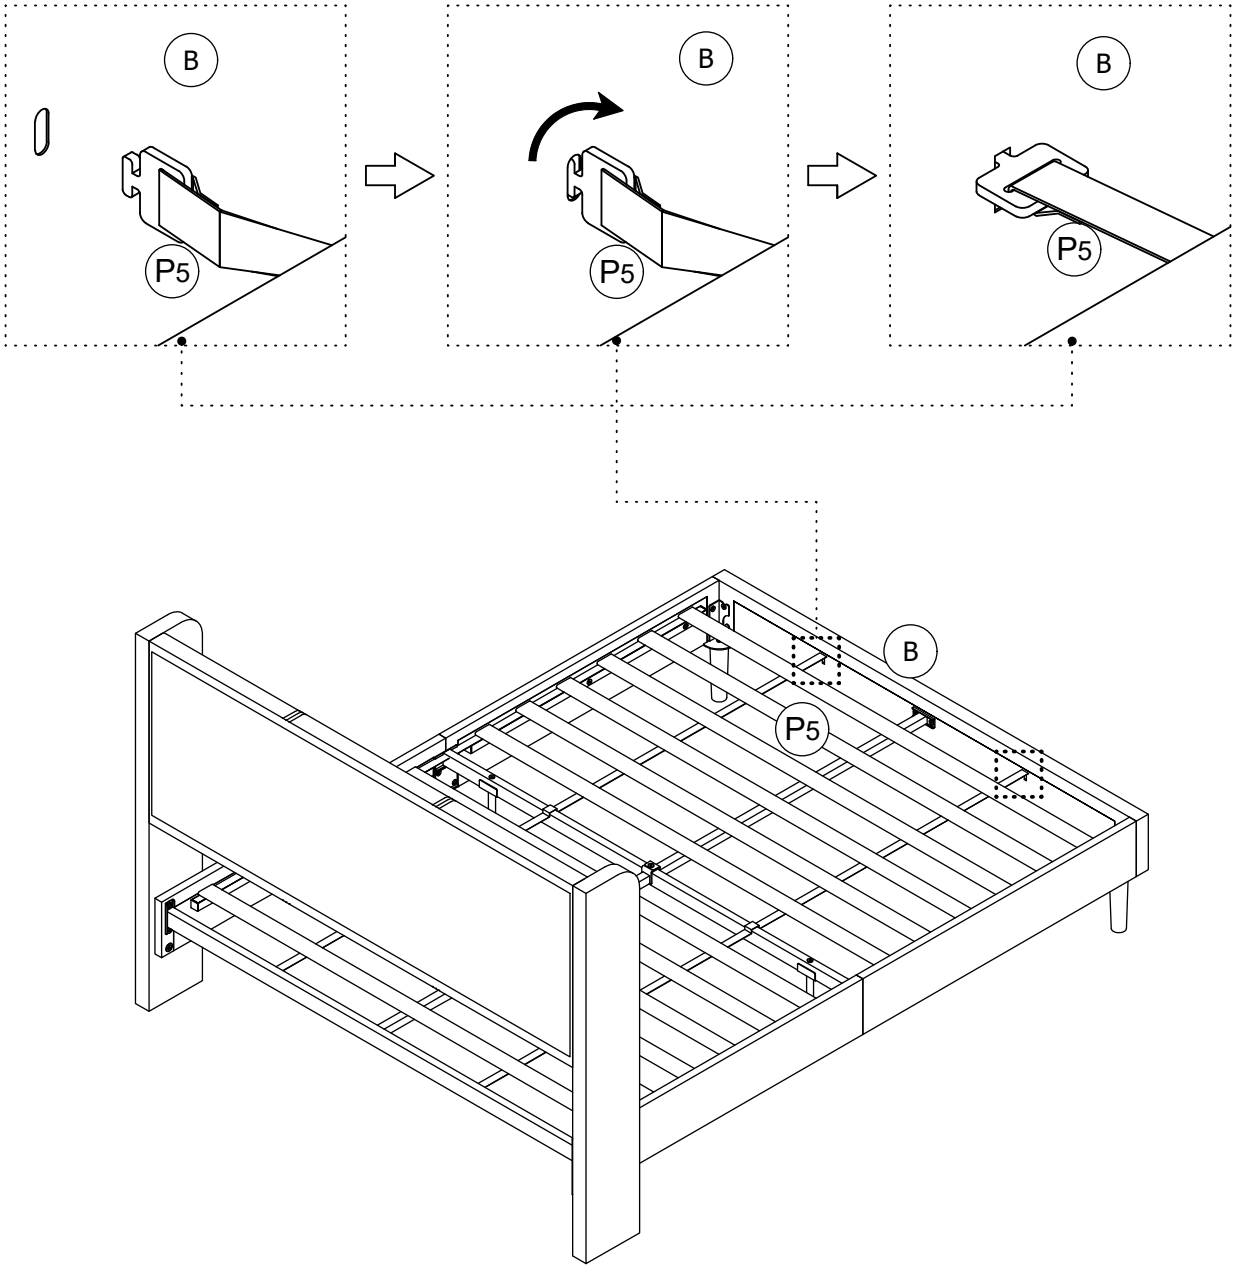

Step 15

Attach the other end of **P5** to **B** by inserting the tab into the slot and turn it to the level position.