


## ASSEMBLY INSTRUCTIONS

# EEI-6639

VO.01.29.24

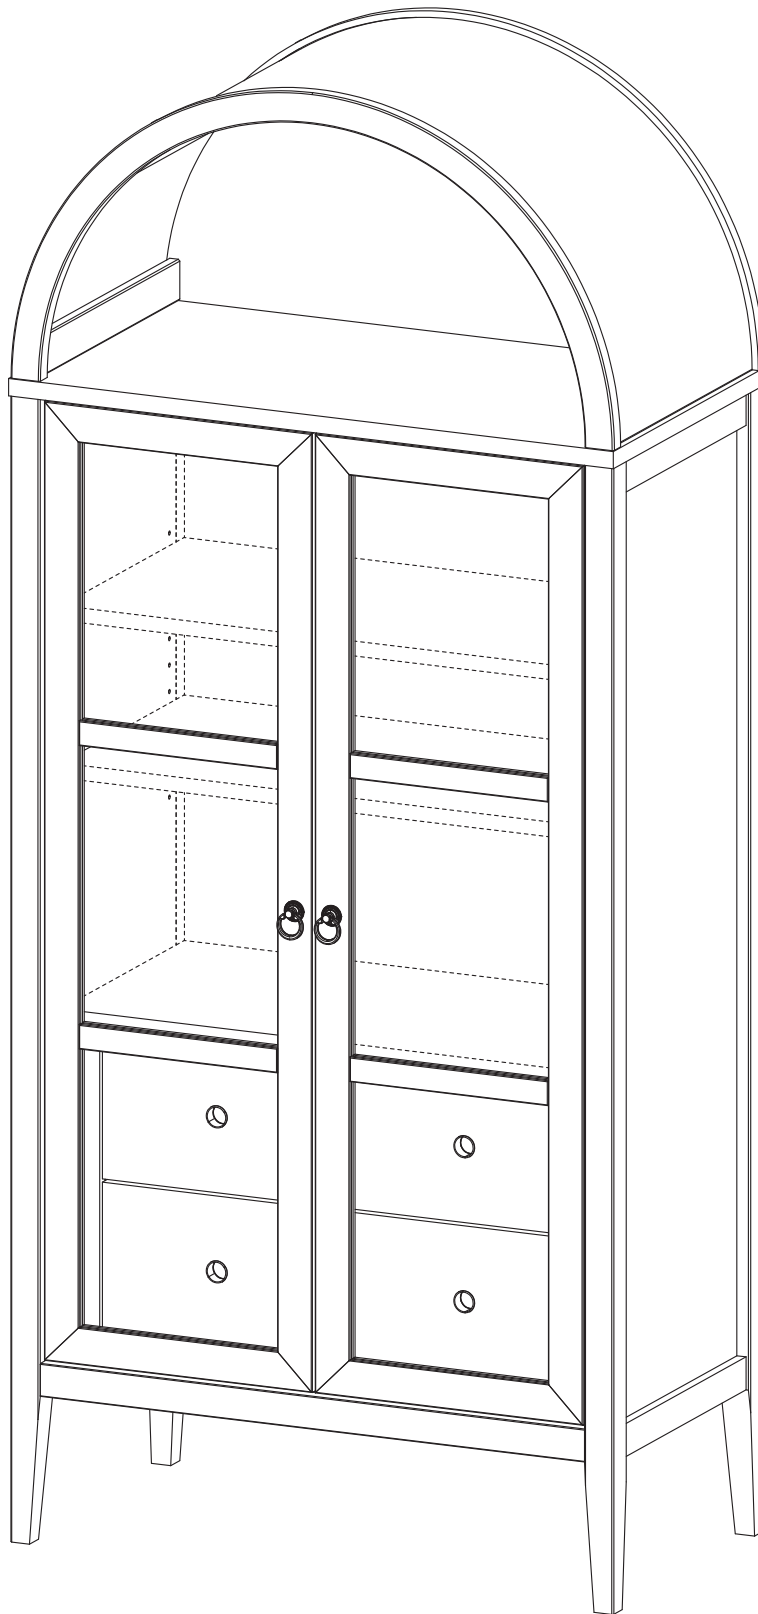

**Questions? Contact us!**

609.256.9000 • [cs@modway.com](mailto:cs@modway.com)  
[www.modway.com](http://www.modway.com)

**\*modway**

# Let's get started!

\*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

**Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.



Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

## Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Adjustable Shelf	x2
6	Fixed Shelf	x1
7	Bottom Skirt	x1
8	Door Left	x1
9	Door Right	x1

10	Support Board 1 Hutch	x2
11	Support Board 2 Hutch	x3
12	Front Board Hutch	x1
13	Back Board Hutch	x1
14	PVC Board	x1
15	Support Board 1	x2
16	Support Board 2	x2
17	Side Board Drawer 1	x1
18	Side Board Drawer 2	x1



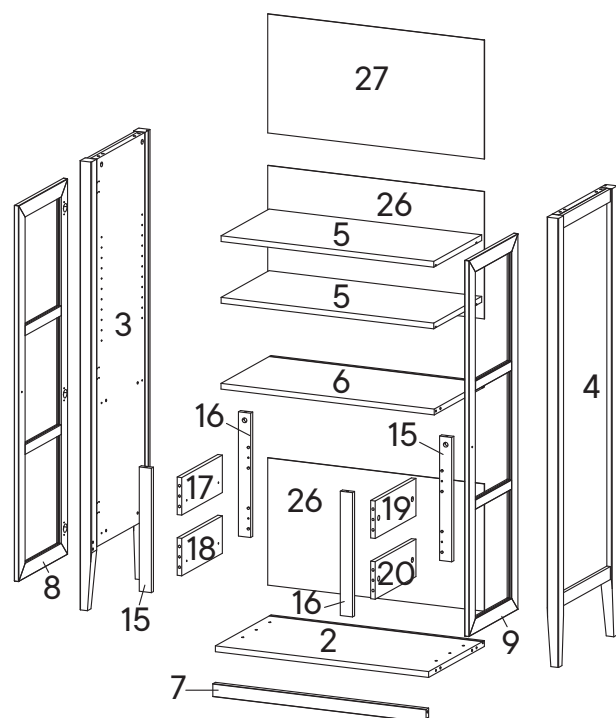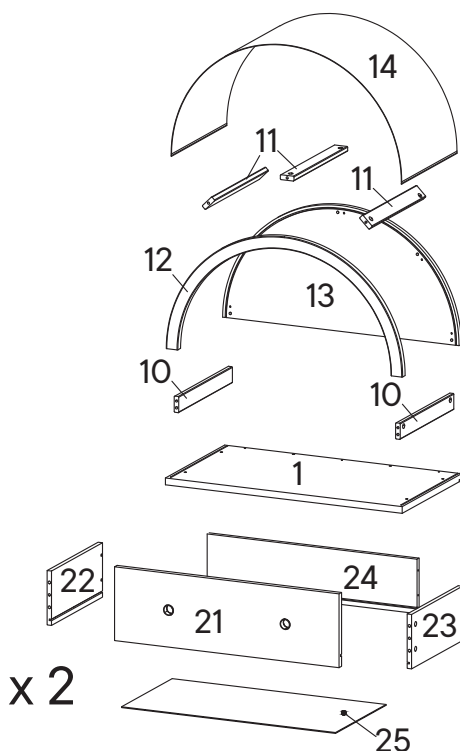

























19	Side Board Drawer 3	x1
20	Side Board Drawer 4	x1
21	Front Drawer	x2
22	Side Drawer Left	x2
23	Side Drawer Right	x2
24	Back Drawer	x2
25	Bottom Drawer	x2
26	Back Board 1	x2
27	Back Board 2	x1



Wait!

Missing parts or hardware? Need assistance?  
Contact us before returning your item. We're here to help!  
609.256.9000 • [cs@modway.com](mailto:cs@modway.com)

## Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x45	L		Screw M 4.5 x 12.5 mm	x37	W		Plate	x1
B		Cam Lock Ø15 mm	x37	M		Wedge	x24	X		Rubber	x2
C		Wood Dowel Ø8 x 30 mm	x45	N		Screw M 3.5 x 15.5 mm	x24	RM30A		Drawer Runner	x2
D		Screw M 6.4 x 14 mm	x1	O		Handle	x4	HS26C		Hinge	x6
E		Screw M 8 x 39 mm	x8	P		Allen Key	x2	<h2>What you need:</h2> <div>               Phillips Head Screwdriver           </div>			
F		Shelf Pin	x8	Q		Joining Strip	x1				
G		Screw Cap Ø15 mm	x4	R		Cam Lock Ø12 mm	x8				
H		Stopper	x2	S		Wood Dowel Ø6 x 30 mm	x4				
I		Handle	x2	T		Screw M 7 x 50 mm	x6				
J		Screw M 4 x 20 mm	x2	U		Screw M 6 x 10.5 mm	x8				
K		Floor Protector	x4	V		Screw M 3.5 x 13 mm	x12				

## Components Carton Placement

### Carton 1 of 2

Label	Description	Qty
3	Side Board Left	x1
4	Side Board Right	x1
8	Door Left	x1
9	Door Right	x1
14	PVC Board	x1
26	Back Board 1	x2
27	Back Board 2	x1
	Hardware Pack	x1

### Carton 2 of 2

Label	Description	Qty	Label	Description	Qty
1	Top Board	x1	18	Side Board Drawer 2	x1
2	Bottom Board	x1	19	Side Board Drawer 3	x1
5	Adjustable Shelf	x2	20	Side Board Drawer 4	x1
6	Fixed Shelf	x1	21	Front Drawer	x2
7	Bottom Skirt	x1	22	Side Drawer Left	x2
10	Support Board 1 Hutch	x2	23	Side Drawer Right	x2
11	Support Board 2 Hutch	x3	24	Back Drawer	x2
12	Front Board Hutch	x1	25	Bottom Drawer	x2
13	Back Board Hutch	x1			
15	Support Board 1	x2			
16	Support Board 2	x2			
17	Side Board Drawer 1	x1			

Wait!

Missing parts or hardware? Need assistance?  
Contact us before returning your item. We're here to help!  
609.256.9000 • cs@modway.com


## Step 1

### HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- S** Wood Dowel Ø6 x 30 mm x4

### COMPONENTS

- 21** Front Drawer x2
- 22** Side Drawer Left x2
- 23** Side Drawer Right x2

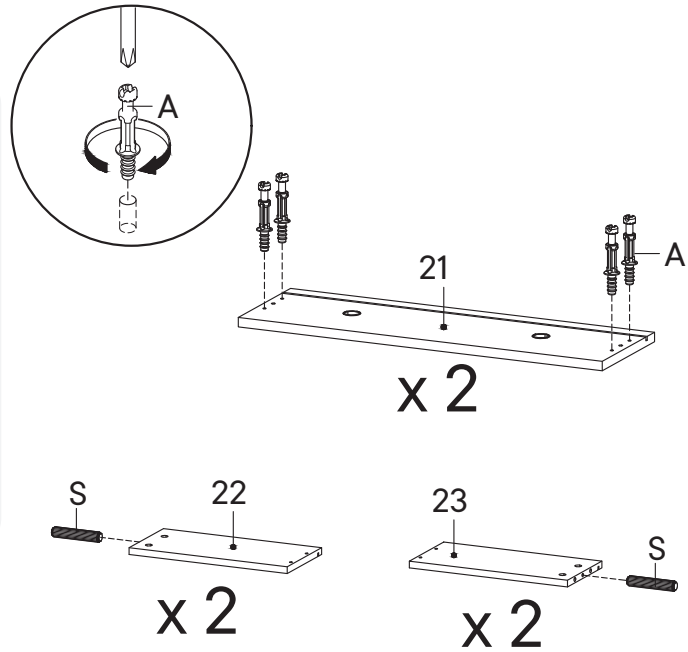


## Step 2

### HARDWARE

- E** Screw M 8 x 39 mm x8
- R** Cam Lock Ø12 mm x8

### COMPONENTS



- 21** Front Drawer x2
- 22** Side Drawer Left x2
- 23** Side Drawer Right x2
- 24** Back Drawer x2
- 25** Bottom Drawer x2

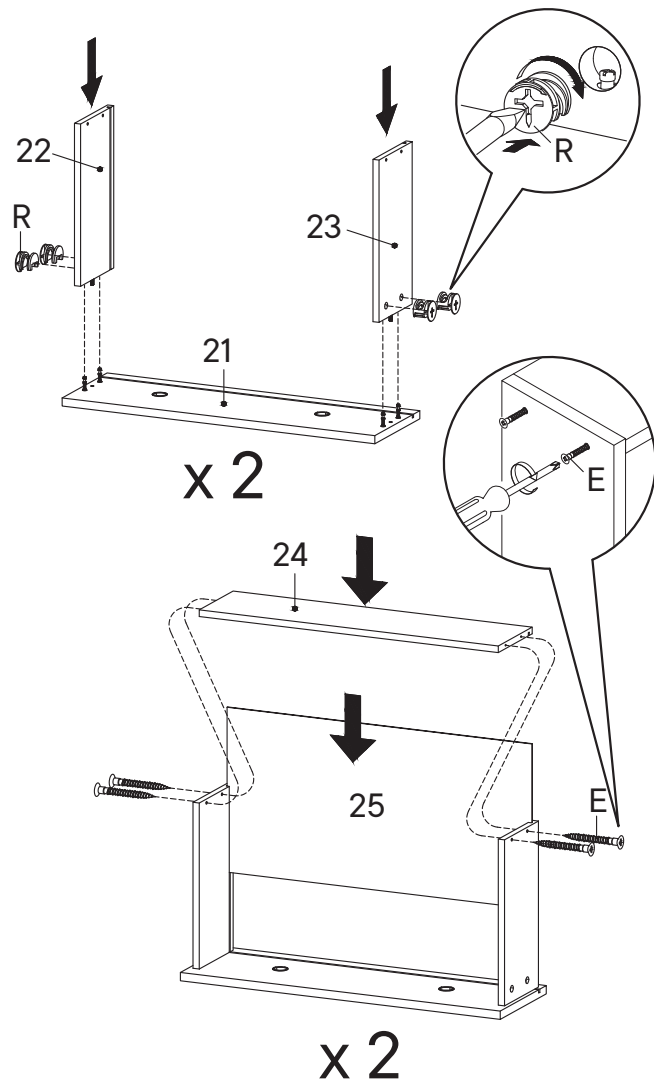

## Step 3

### HARDWARE



<b>M</b>	Wedge	x8
<b>N</b>	Screw M 3.5 x 15.5 mm	x8
<b>V</b>	Screw M 3.5 x 13 mm	x12
<b>RM30A</b>	Drawer Runner	x2

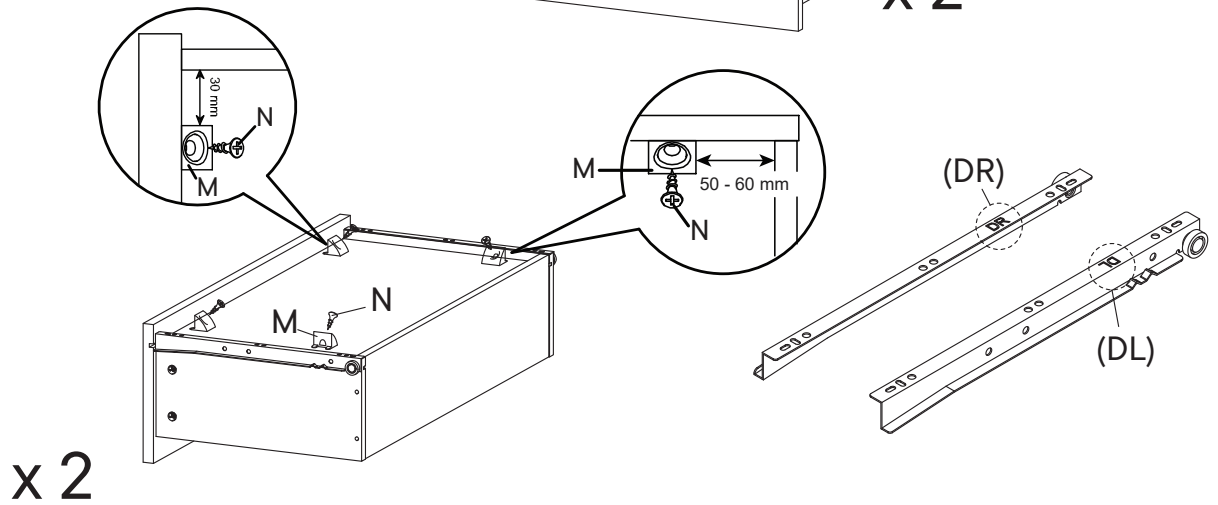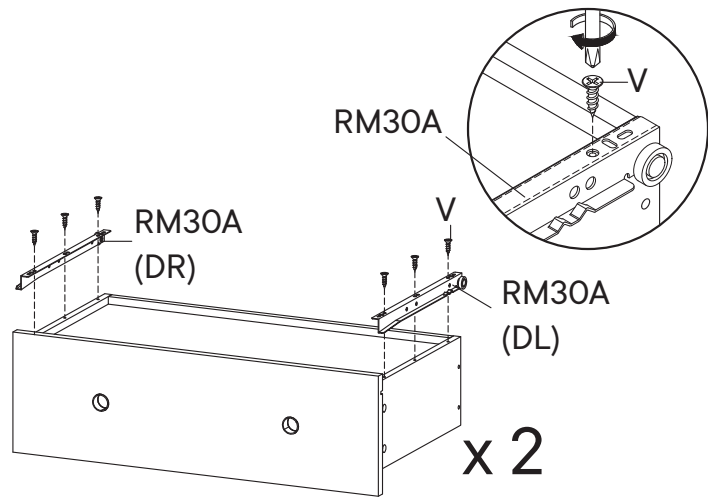

## Step 4

### HARDWARE

<b>O</b>	Handle	x4
----------	--------	----

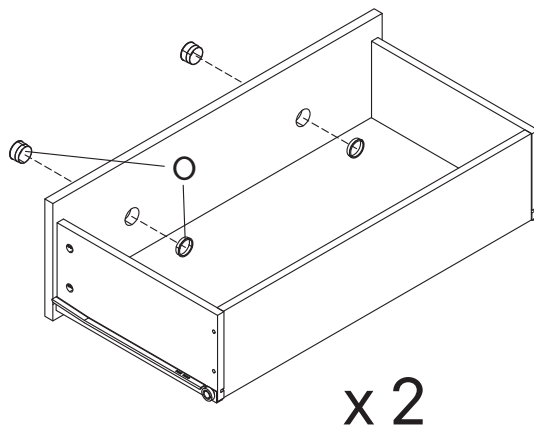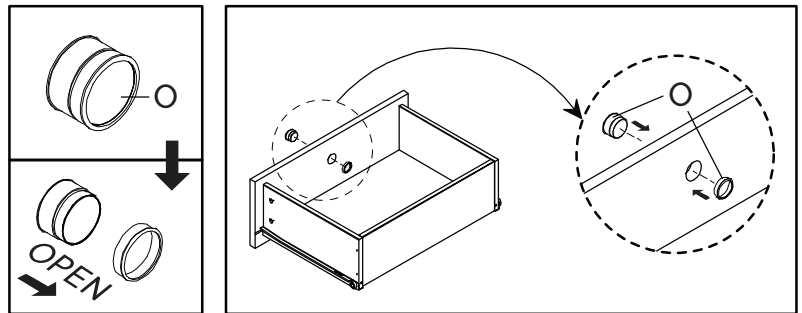


## Step 5

### HARDWARE

<b>A</b>	Cam Bolt Ø6 x 35 mm	x8
<b>C</b>	Wood Dowel Ø8 x 30 mm	x4
<b>K</b>	Floor Protector	x4

### COMPONENTS

<b>3</b>	Side Board Left	x1
<b>4</b>	Side Board Right	x1

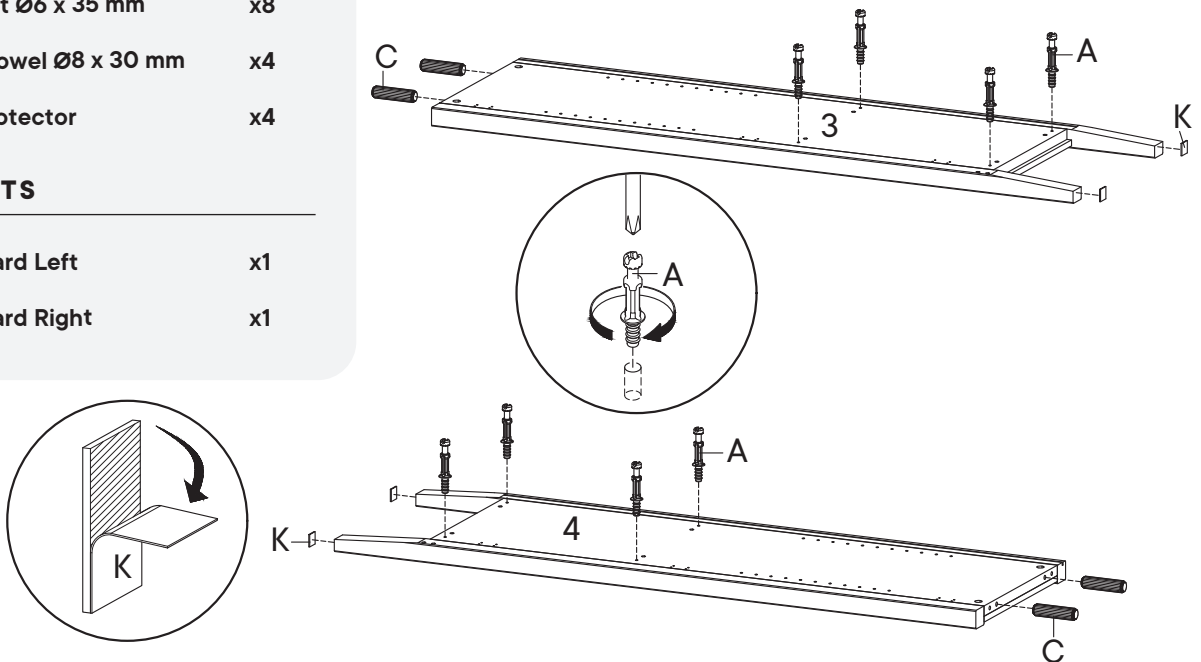


## Step 6

### HARDWARE

<b>C</b>	Wood Dowel Ø8 x 30 mm	x4
<b>L</b>	Screw M 4.5 x 12.5 mm	x1
<b>W</b>	Plate	x1

### COMPONENTS

<b>2</b>	Bottom Board	x1
----------	--------------	----

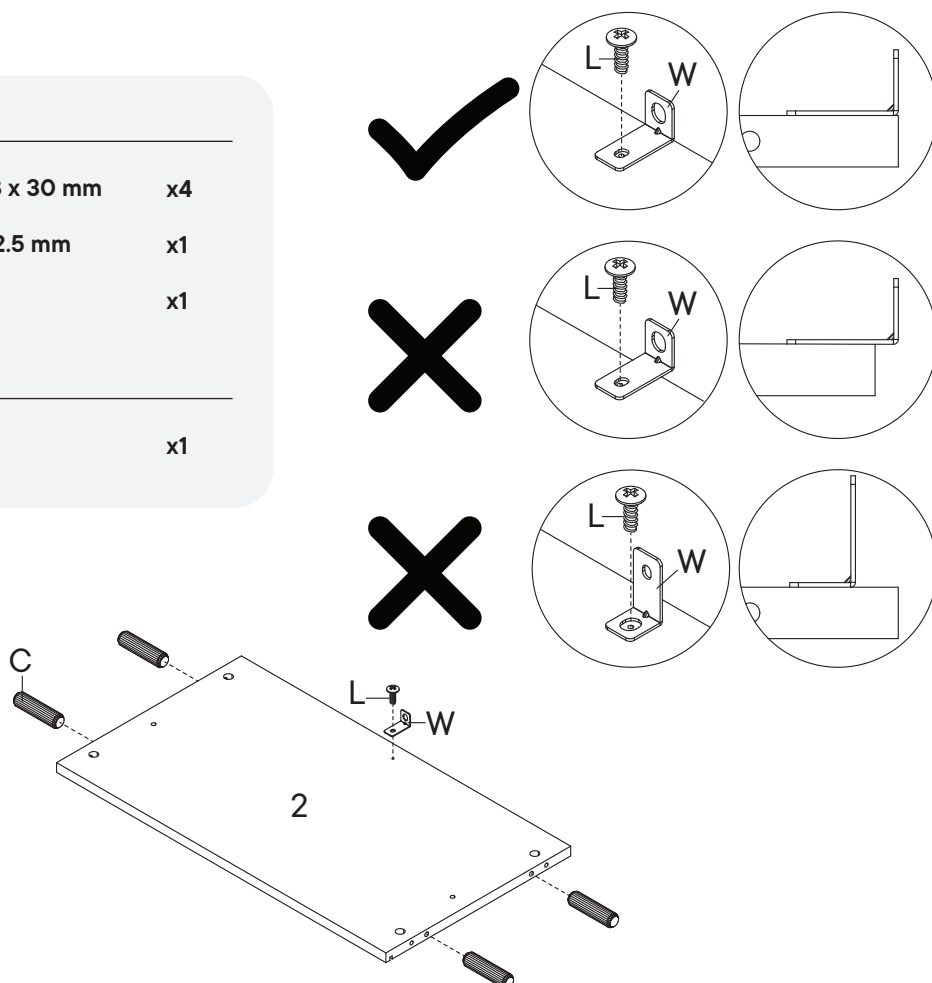


## Step 7

### HARDWARE

- C** Wood Dowel Ø8 x 30 mm x20

### COMPONENTS

- 17** Side Board Drawer 1 x1  
**18** Side Board Drawer 2 x1  
**19** Side Board Drawer 3 x1  
**20** Side Board Drawer 4 x1

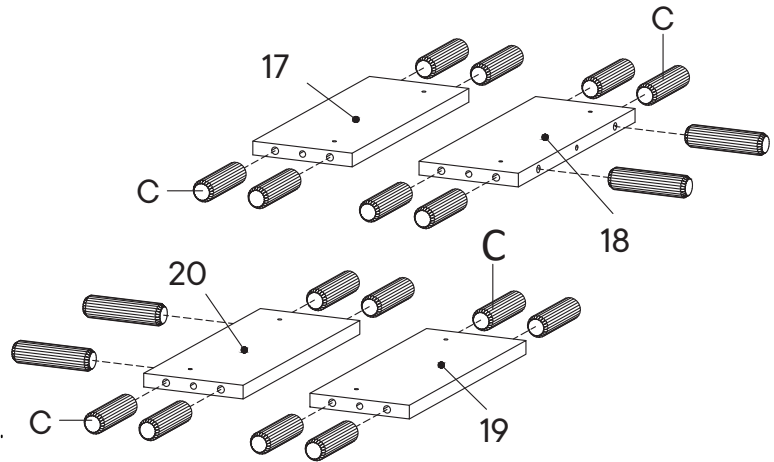



## Step 8

### HARDWARE

- A** Cam Bolt Ø6 x 35 mm x15  
**C** Wood Dowel Ø8 x 30 mm x8

### COMPONENTS

- 1** Top Board x1  
**6** Fixed Shelf x1  
**7** Bottom Skirt x1  
**15** Support Board 1 x2  
**16** Support Board 2 x2

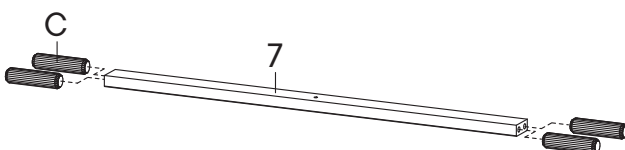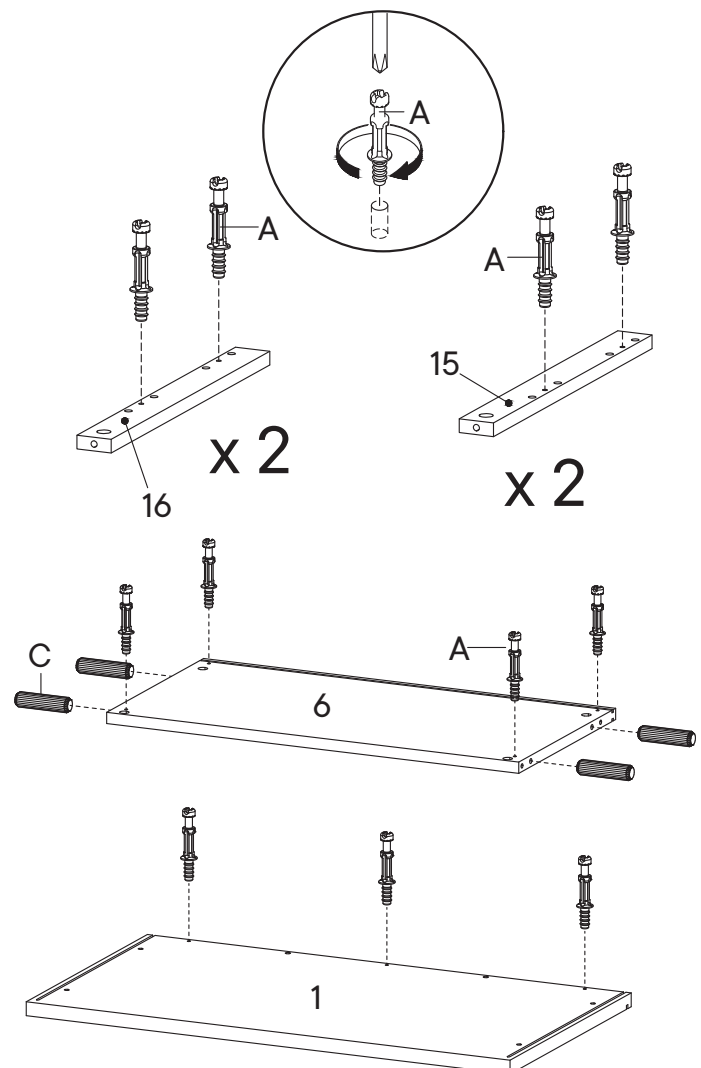




## Step 9

### HARDWARE

- U** Screw M 6 x 10.5 mm x4
- RM30A** Drawer Runner x2

### COMPONENTS

- 15** Support Board 1 x1
- 16** Support Board 2 x1
- 17** Side Board Drawer 1 x1
- 18** Side Board Drawer 2 x1

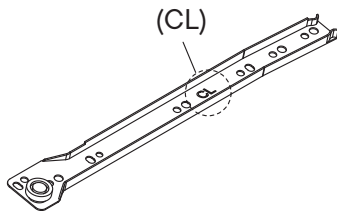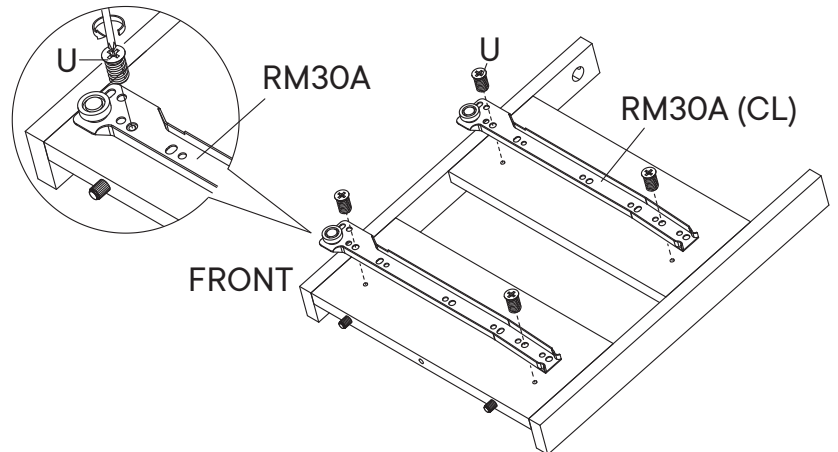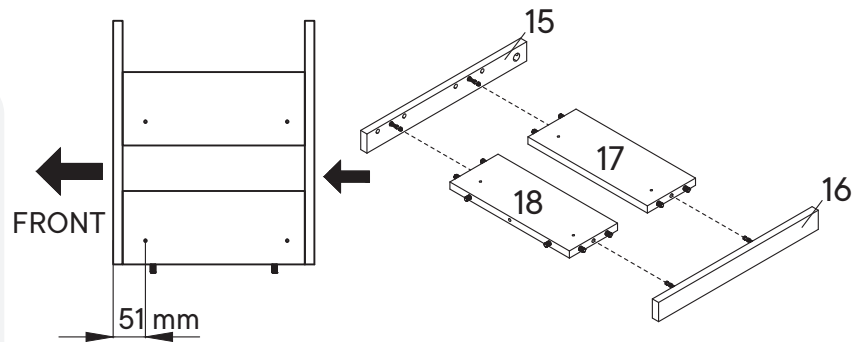




## Step 10

### HARDWARE

- U** Screw M 6 x 10.5 mm x4
- RM30A** Drawer Runner x2

### COMPONENTS

- 15** Support Board 1 x1
- 16** Support Board 2 x1
- 19** Side Board Drawer 3 x1
- 20** Side Board Drawer 4 x1

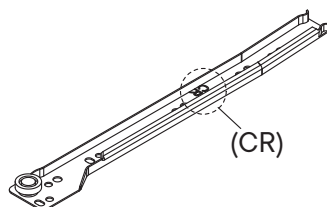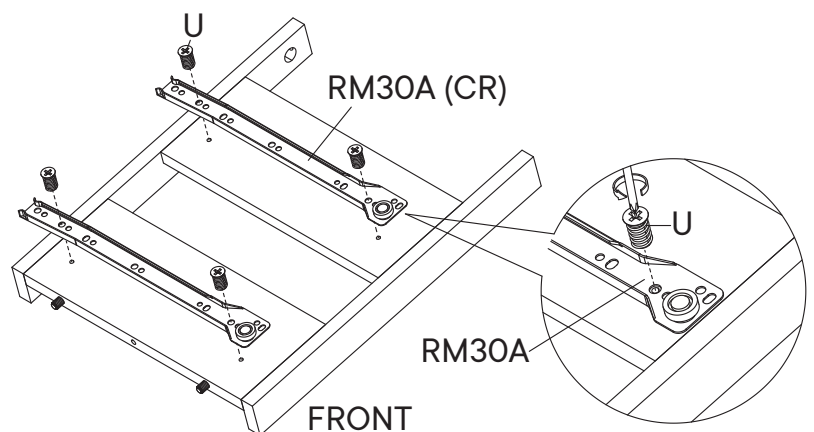
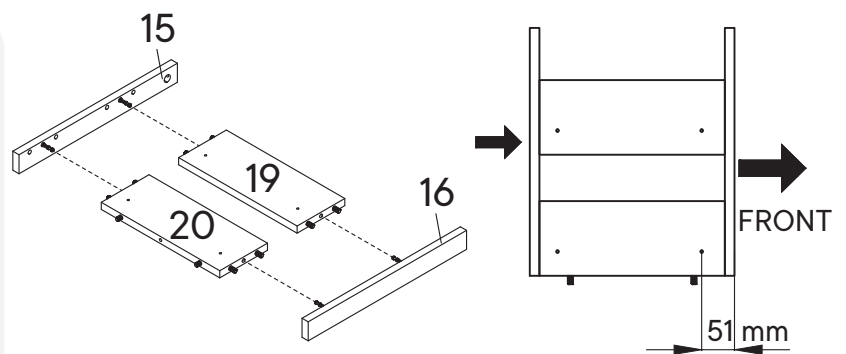




## Step 11

### HARDWARE

- B** Cam Lock Ø15 mm x8

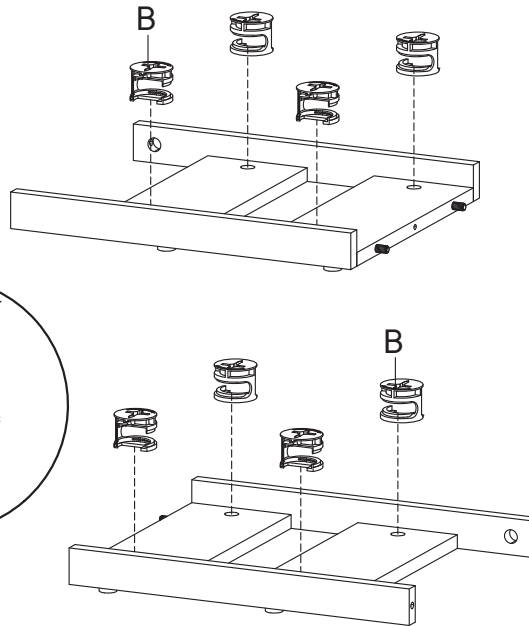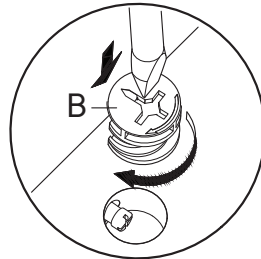


## Step 12

### HARDWARE

- B** Cam Lock Ø15 mm x4

### COMPONENTS

- |           |                     |    |
|-----------|---------------------|----|
| <b>6</b>  | Fixed Shelf         | x1 |
| <b>15</b> | Support Board 1     | x2 |
| <b>16</b> | Support Board 2     | x2 |
| <b>17</b> | Side Board Drawer 1 | x1 |
| <b>18</b> | Side Board Drawer 2 | x1 |
| <b>19</b> | Side Board Drawer 3 | x1 |
| <b>20</b> | Side Board Drawer 4 | x1 |

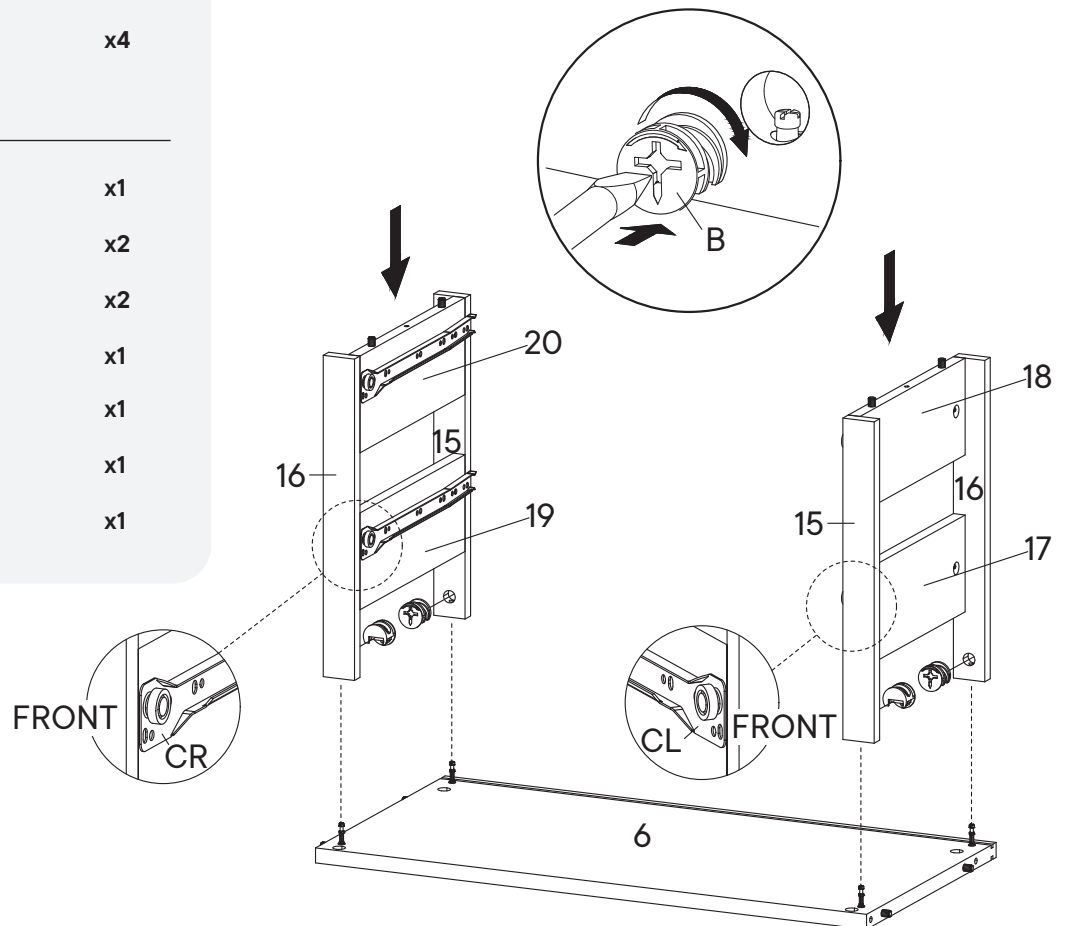



## Step 13

### HARDWARE

- P** Allen Key x1
- T** Screw M 7 x 50 mm x2

### COMPONENTS

- 2** Bottom Board x1

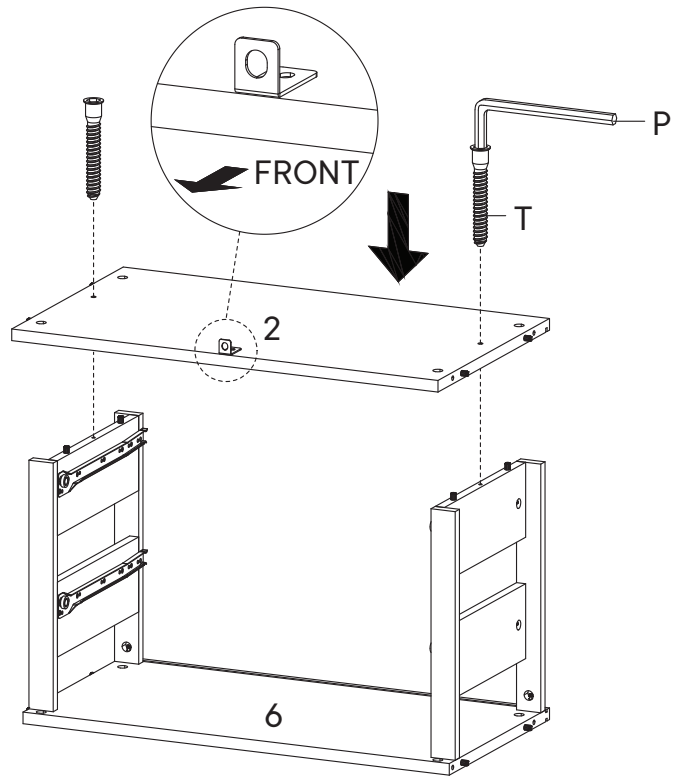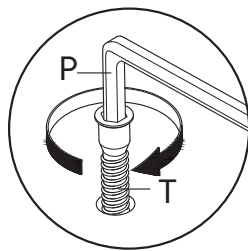



## Step 14

### HARDWARE

- B** Cam Lock Ø15 mm x4
- P** Allen Key x1

### COMPONENTS


- 4** Side Board Right x1

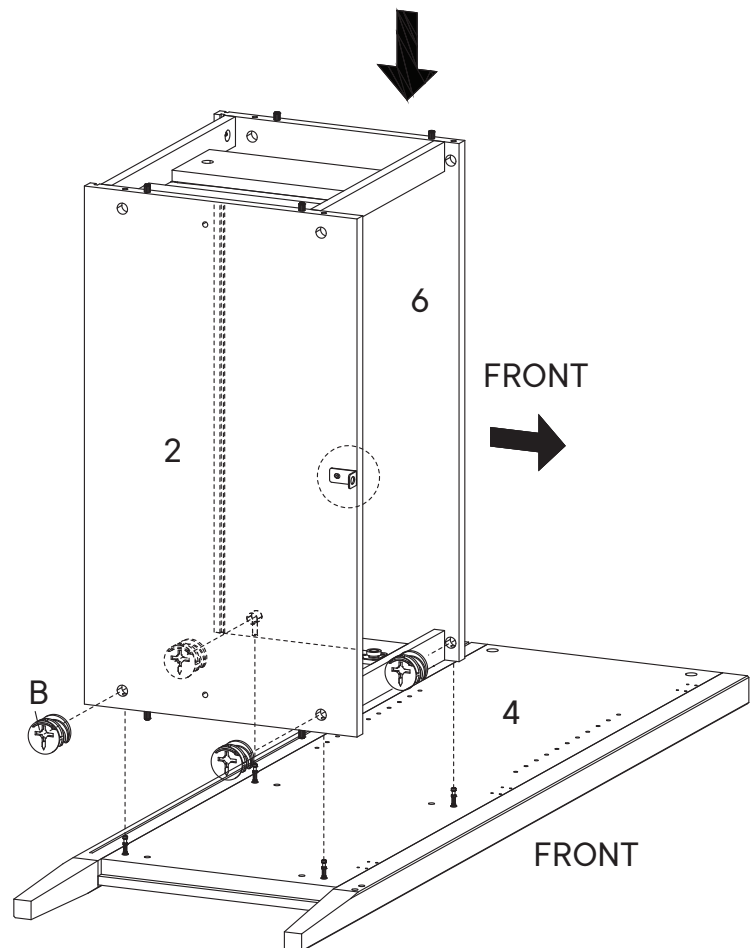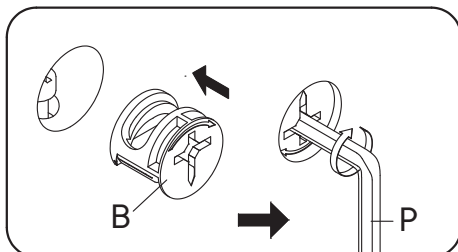

## Step 15

### COMPONENTS

- |          |              |    |
|----------|--------------|----|
| <b>7</b> | Bottom Skirt | x1 |
|----------|--------------|----|

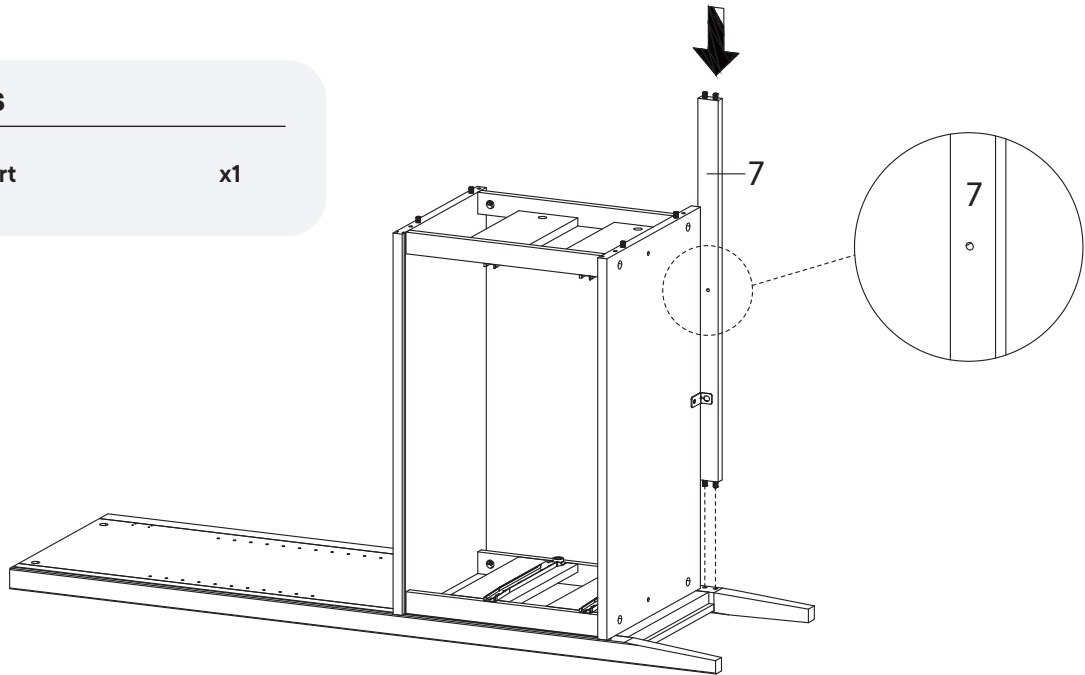



## Step 16

### HARDWARE

- |          |                 |    |
|----------|-----------------|----|
| <b>B</b> | Cam Lock Ø15 mm | x4 |
| <b>P</b> | Allen Key       | x1 |

### COMPONENTS


- |           |                 |    |
|-----------|-----------------|----|
| <b>3</b>  | Side Board Left | x1 |
| <b>26</b> | Back Board 1    | x1 |

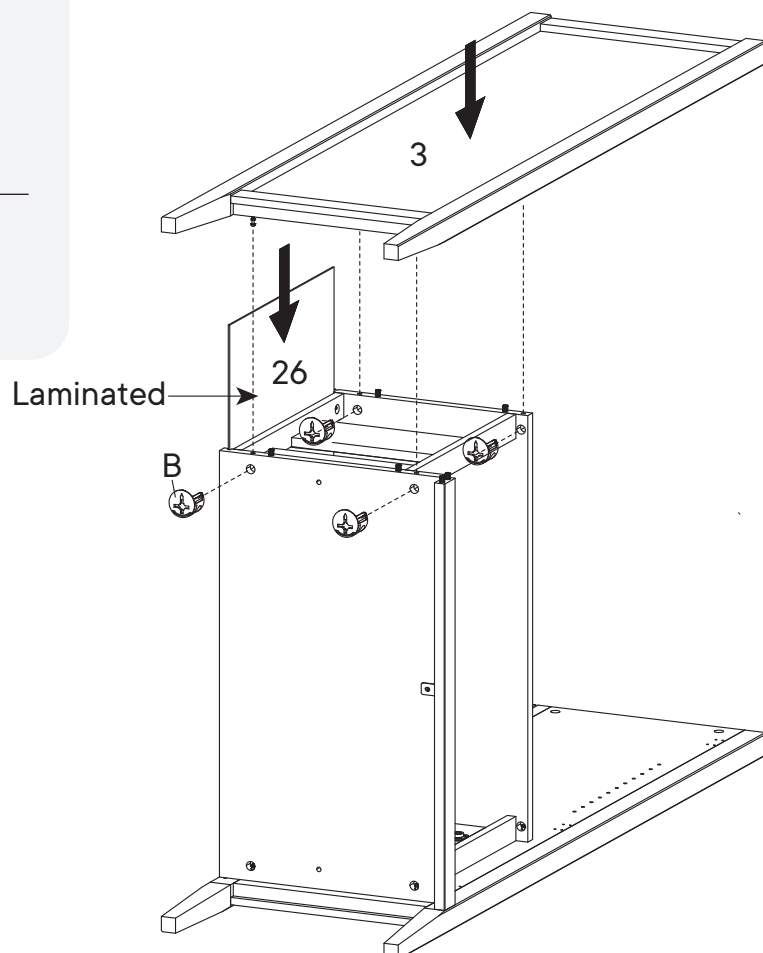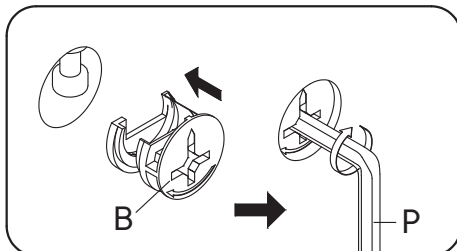

## Step 17

### HARDWARE

- D** Screw M 6.4 x 14 mm x1
- P** Allen Key x1

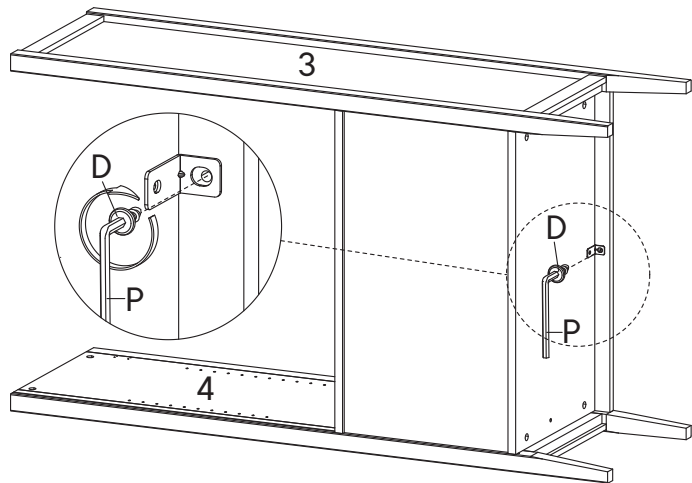


## Step 18

### HARDWARE

- Q** Joining Strip x1

### COMPONENTS

- 26** Back Board 1 x1
- 27** Back Board 2 x1

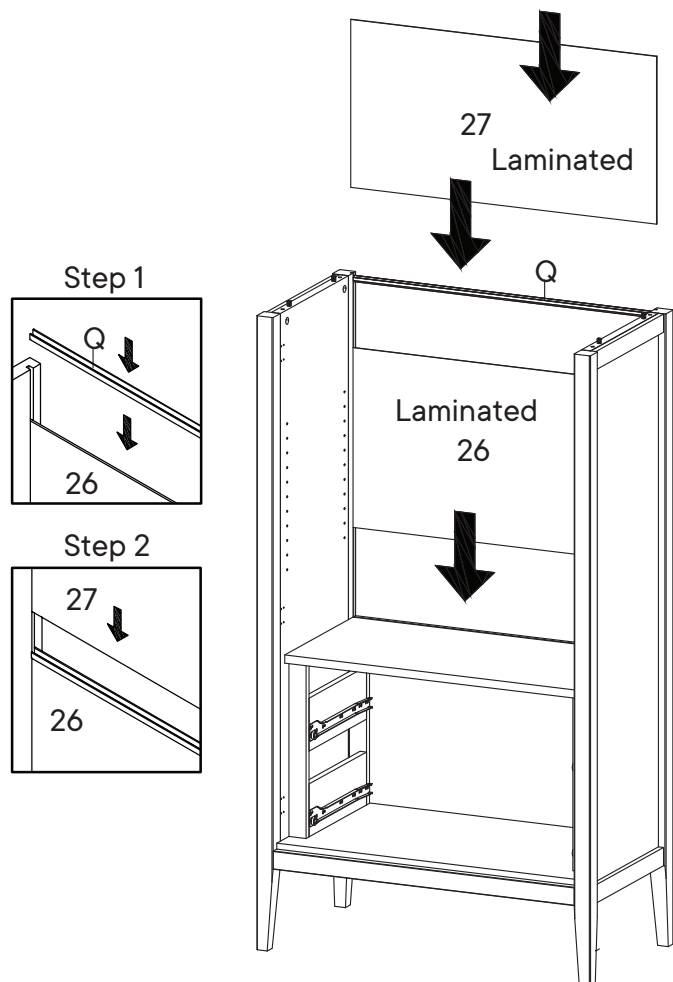


## Step 19

### HARDWARE

- A** Cam Bolt Ø6 x 35 mm x10
- C** Wood Dowel Ø8 x 30 mm x9

### COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 12** Front Board Hutch x1
- 13** Back Board Hutch x1

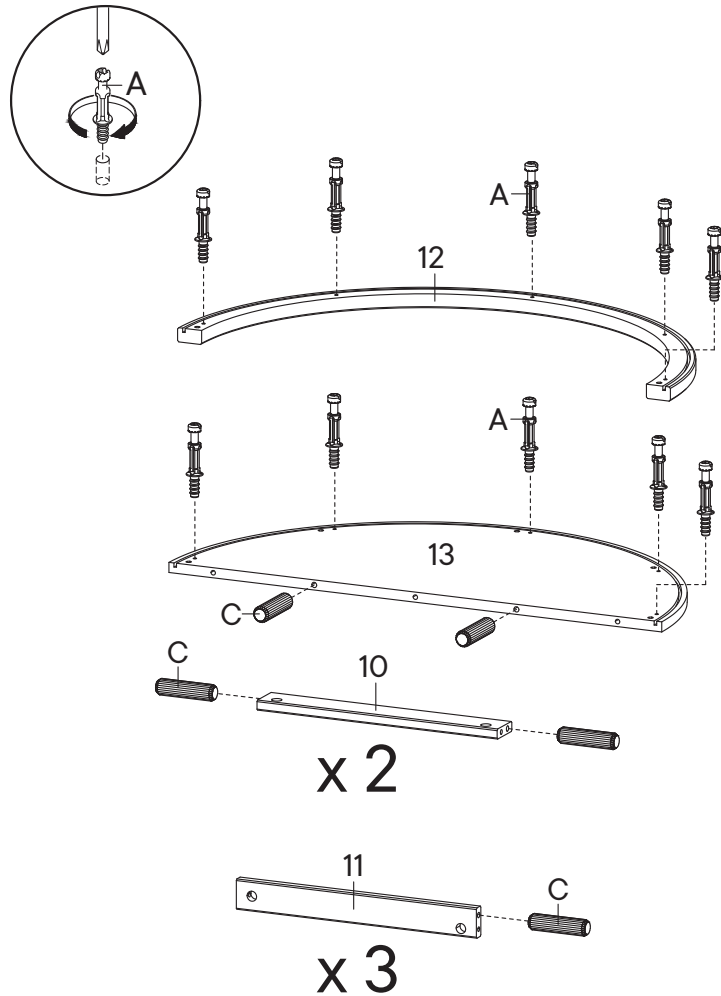


## Step 20

### HARDWARE

- B** Cam Lock Ø15 mm x5

### COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 13** Back Board Hutch x1

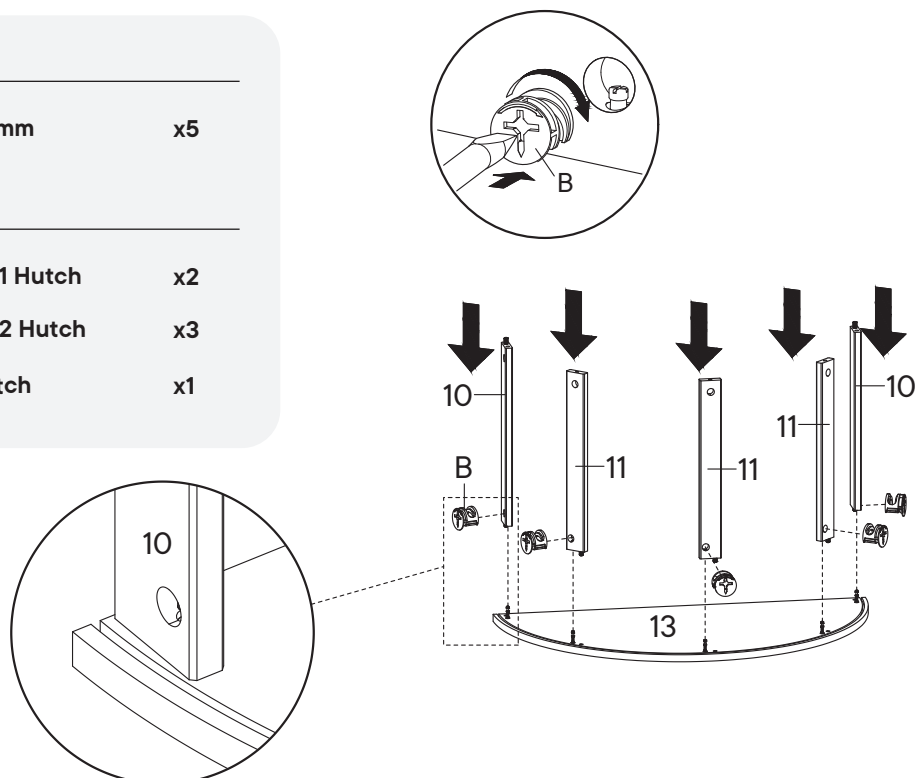


## Step 21

### HARDWARE

**B** Cam Lock Ø15 mm x5

### COMPONENTS


**12** Front Board Hutch x1

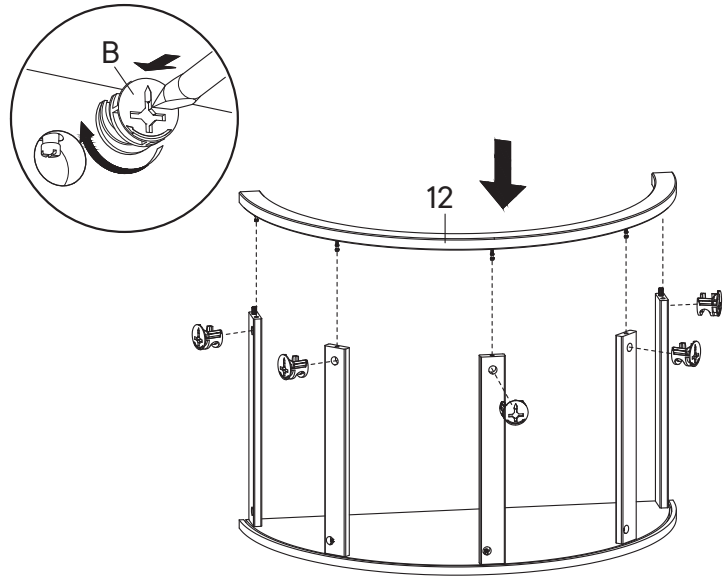

## Step 22

### COMPONENTS

**14** PVC Board x1

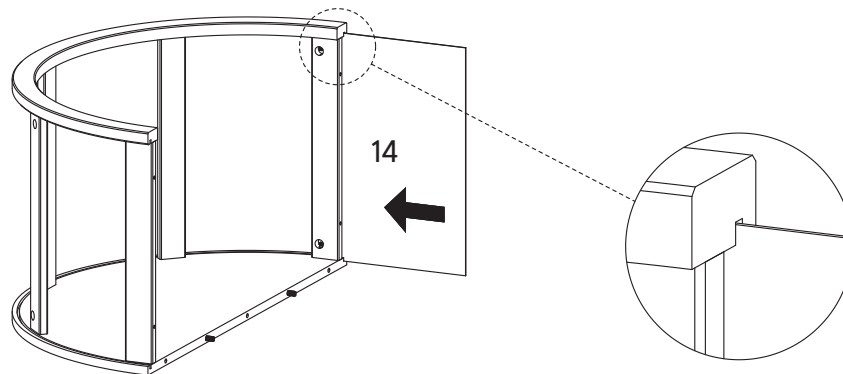


## Step 23

### HARDWARE

<b>A</b>	Cam Bolt Ø6 x 35 mm	x4
<b>B</b>	Cam Lock Ø15 mm	x3
<b>T</b>	Screw M 7 x 50 mm	x4
<b>H</b>	Stopper	x2
<b>P</b>	Allen Key	x1

### COMPONENTS


<b>1</b>	Top Board	x1
----------	-----------	----

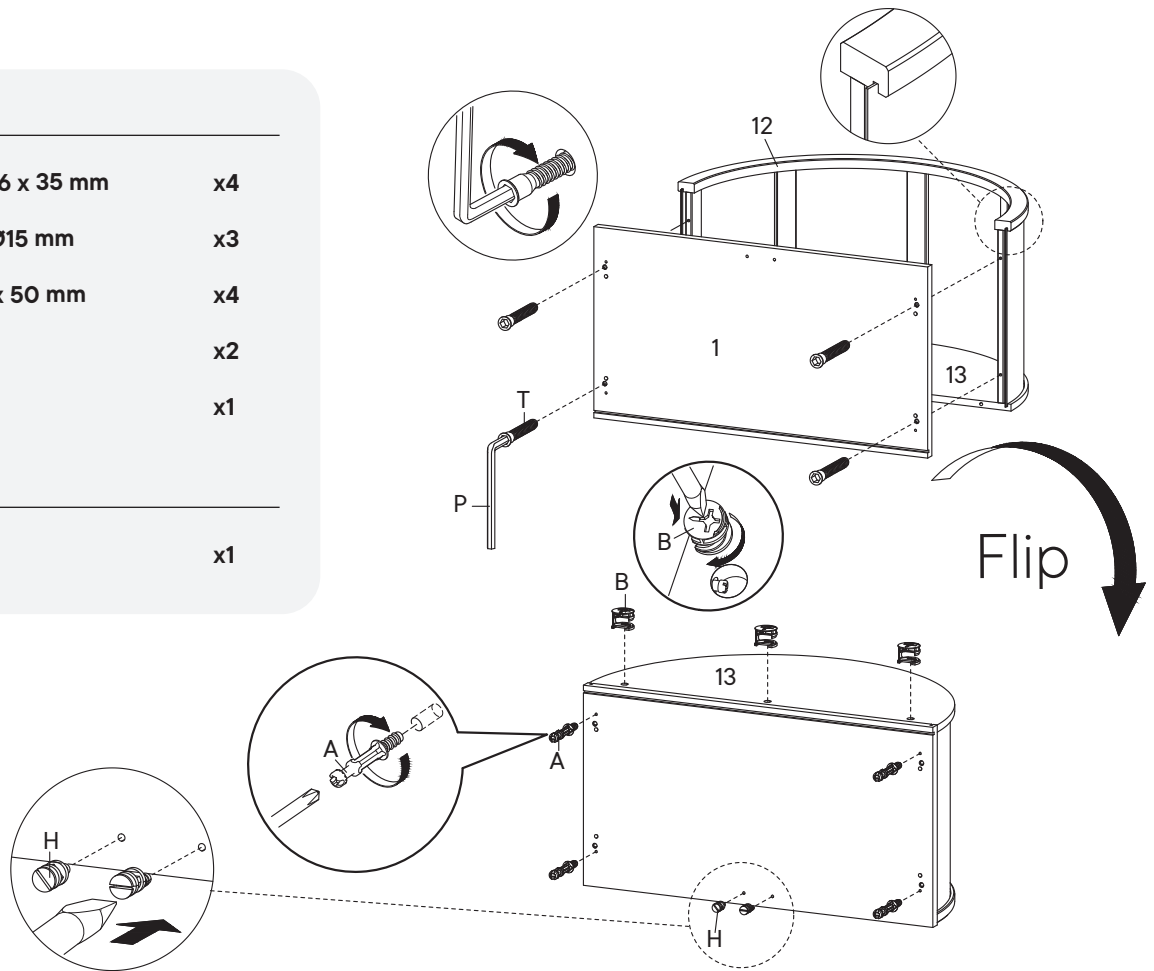

## Step 24

### HARDWARE

<b>B</b>	Cam Lock Ø15 mm	x4
<b>G</b>	Screw Cap Ø15 mm	x4

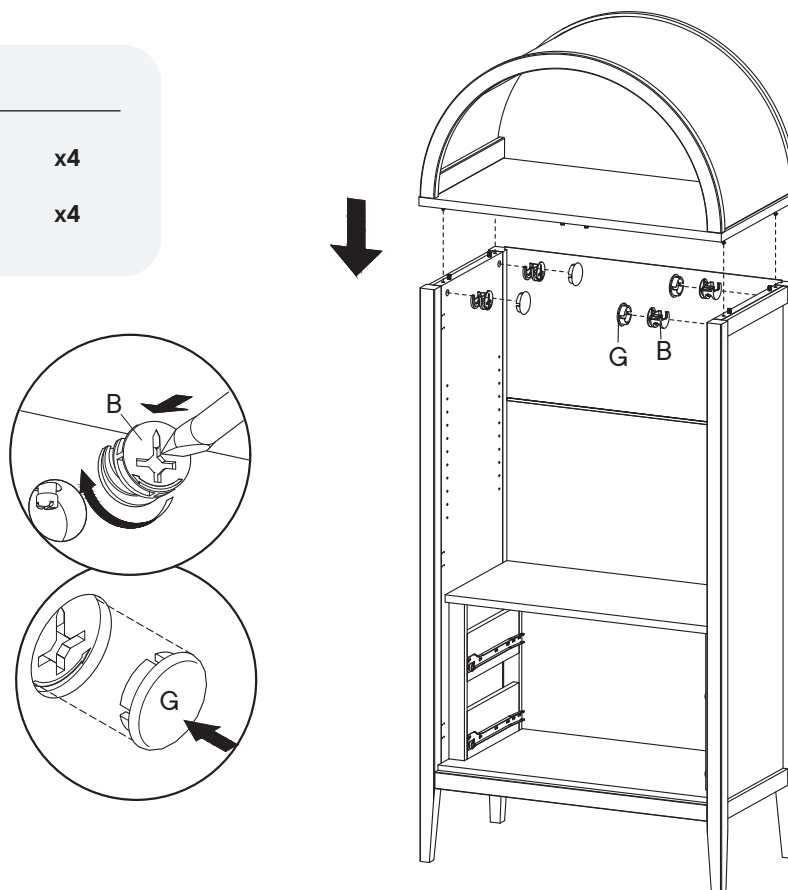


## Step 25

### HARDWARE



**F** Shelf Pin x8

### COMPONENTS

**5** Adjustable Shelf x2

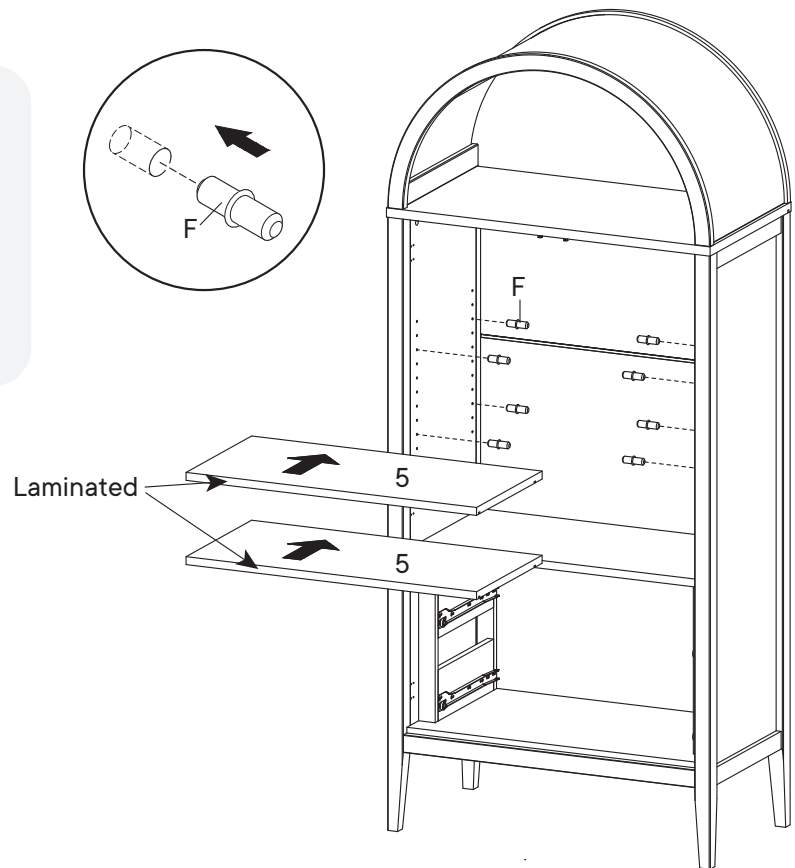

## Step 26

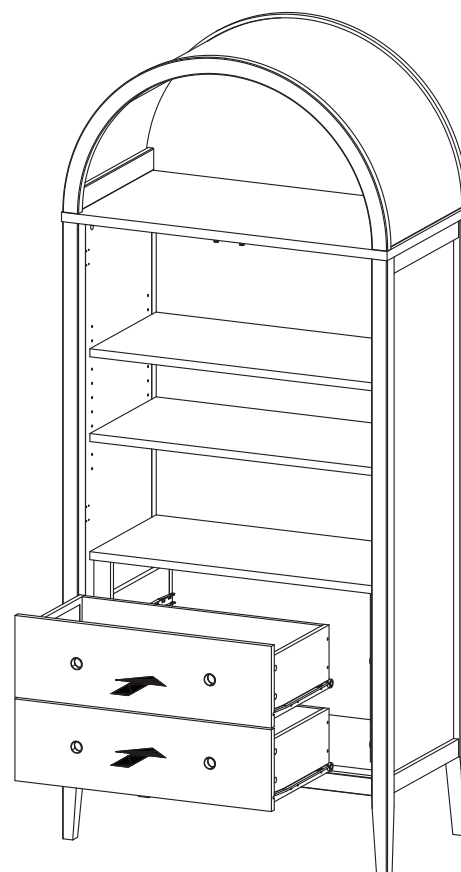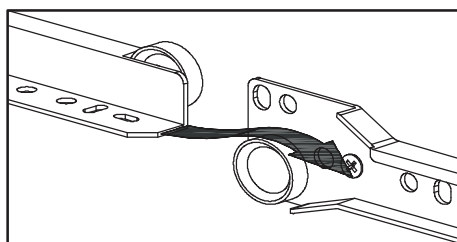




## Step 27

### HARDWARE

<b>L</b>	Screw M 4.5 x 12.5 mm	x12
<b>HS26C</b>	Hinge	x6

### COMPONENTS

<b>8</b>	Door Left	x1
<b>9</b>	Door Right	x1

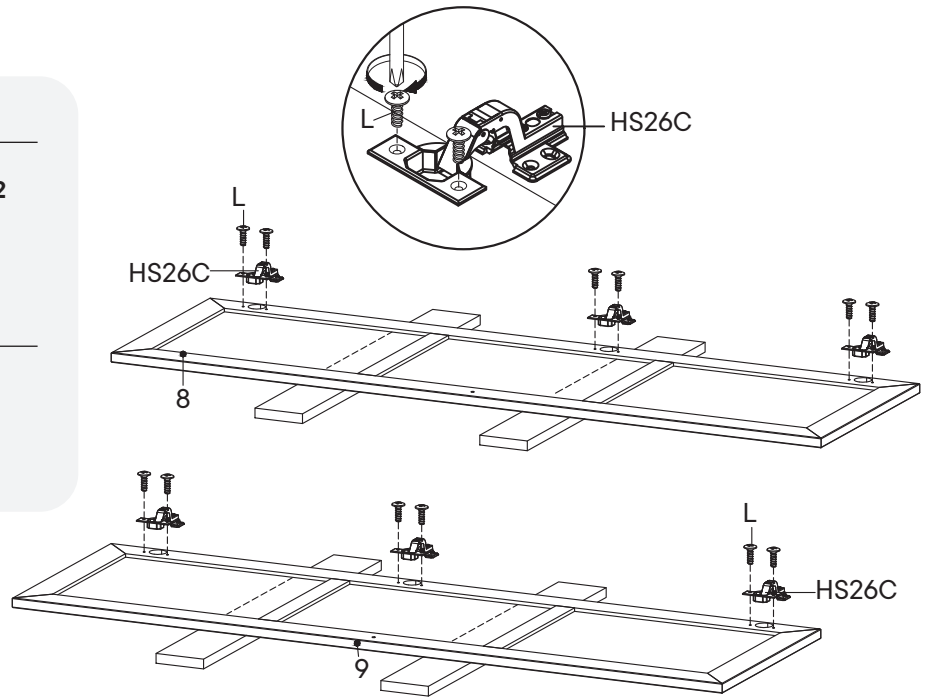


## Step 28

### HARDWARE


<b>I</b>	Handle	x2
<b>J</b>	Screw M 4 x 20 mm	x2
<b>L</b>	Screw M 4.5 x 12.5 mm	x24

### COMPONENTS

<b>8</b>	Door Left	x1
<b>9</b>	Door Right	x1

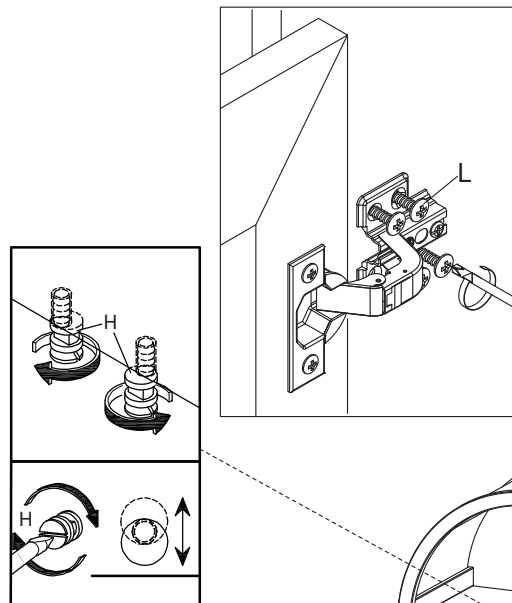

The door stopper position is adjustable (H). Please use screwdriver to adjust it as needed, so the doors are aligned when closed

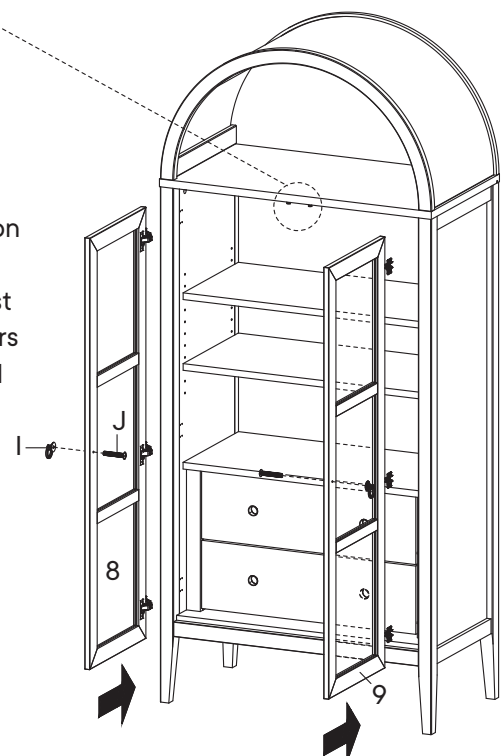


### Note:

Door alignment can be adjusted after all cabinet parts are secured. Refer page 20 OF 20

## Step 29

### HARDWARE



- |          |                       |     |
|----------|-----------------------|-----|
| <b>M</b> | Wedge                 | x16 |
| <b>N</b> | Screw M 3.5 x 15.5 mm | x16 |

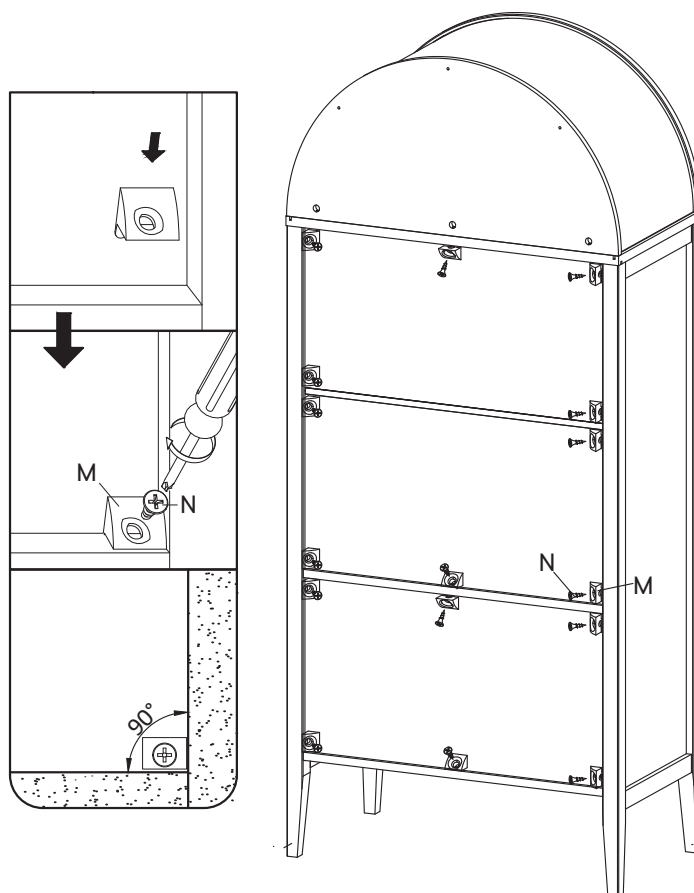

## Step 30

### HARDWARE

- |          |        |    |
|----------|--------|----|
| <b>X</b> | Rubber | x2 |
|----------|--------|----|

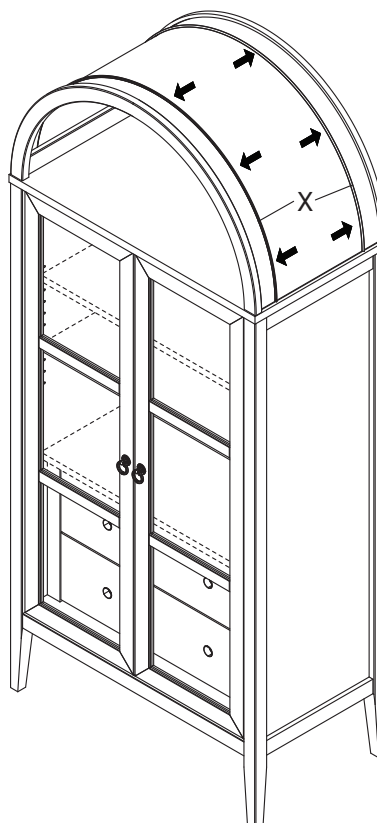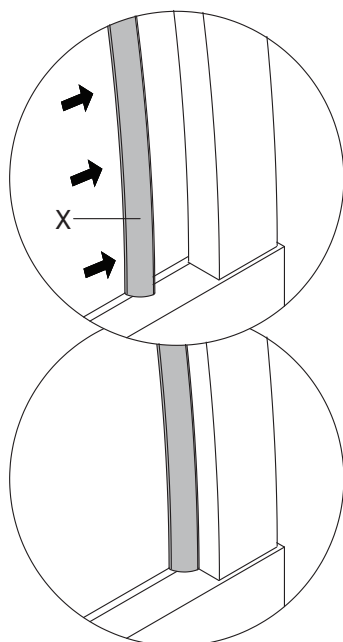

# Great job!

Bookcase assembly is complete.

## ♥ CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.



Never use harsh chemicals, as they could damage the finish or integrity of the item.

## CONNECT WITH US!

Tag us [@modway\\_furniture](#) and [#modway](#) for a chance to be featured.

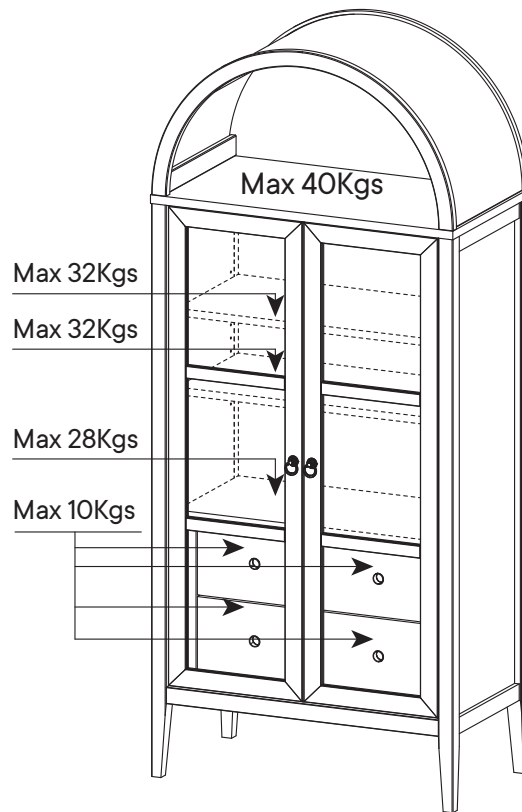


# Cabinet Door Alignment

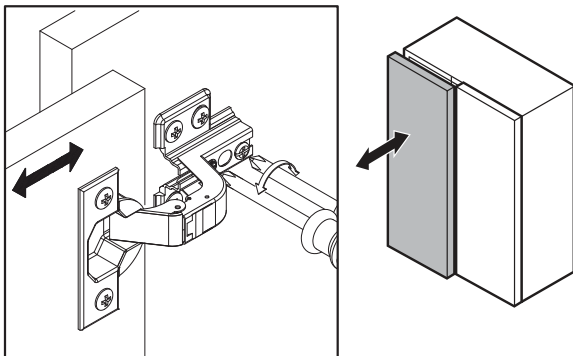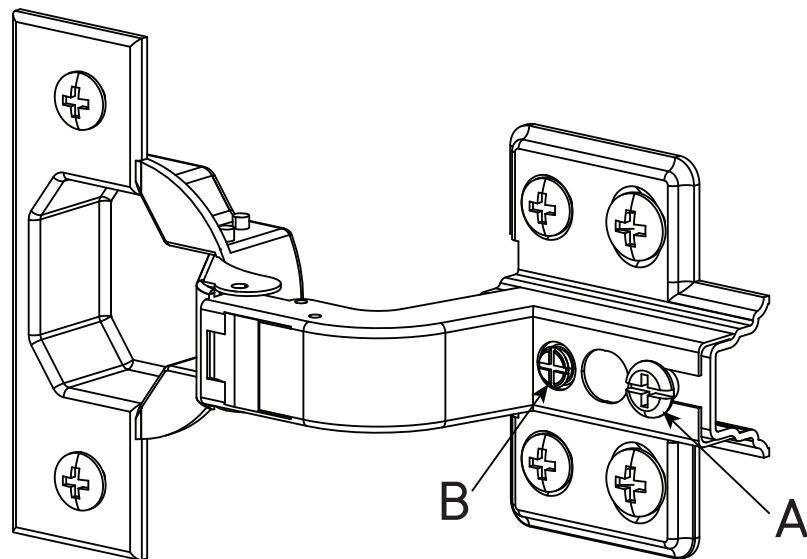

## To adjust depth.

Loosen screw "A" and adjust door forward/backward.  
If the door can not be adjusted, please loosen screw "B",  
then try again.  
Tighten screw "A" and "B".

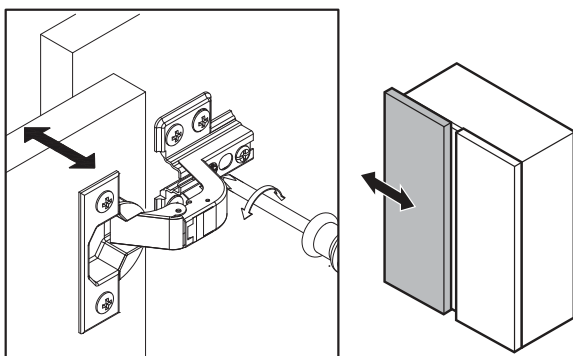

## To adjust side ways.



Turning the screw "B" on BOTH hinges  
on each door.

## TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

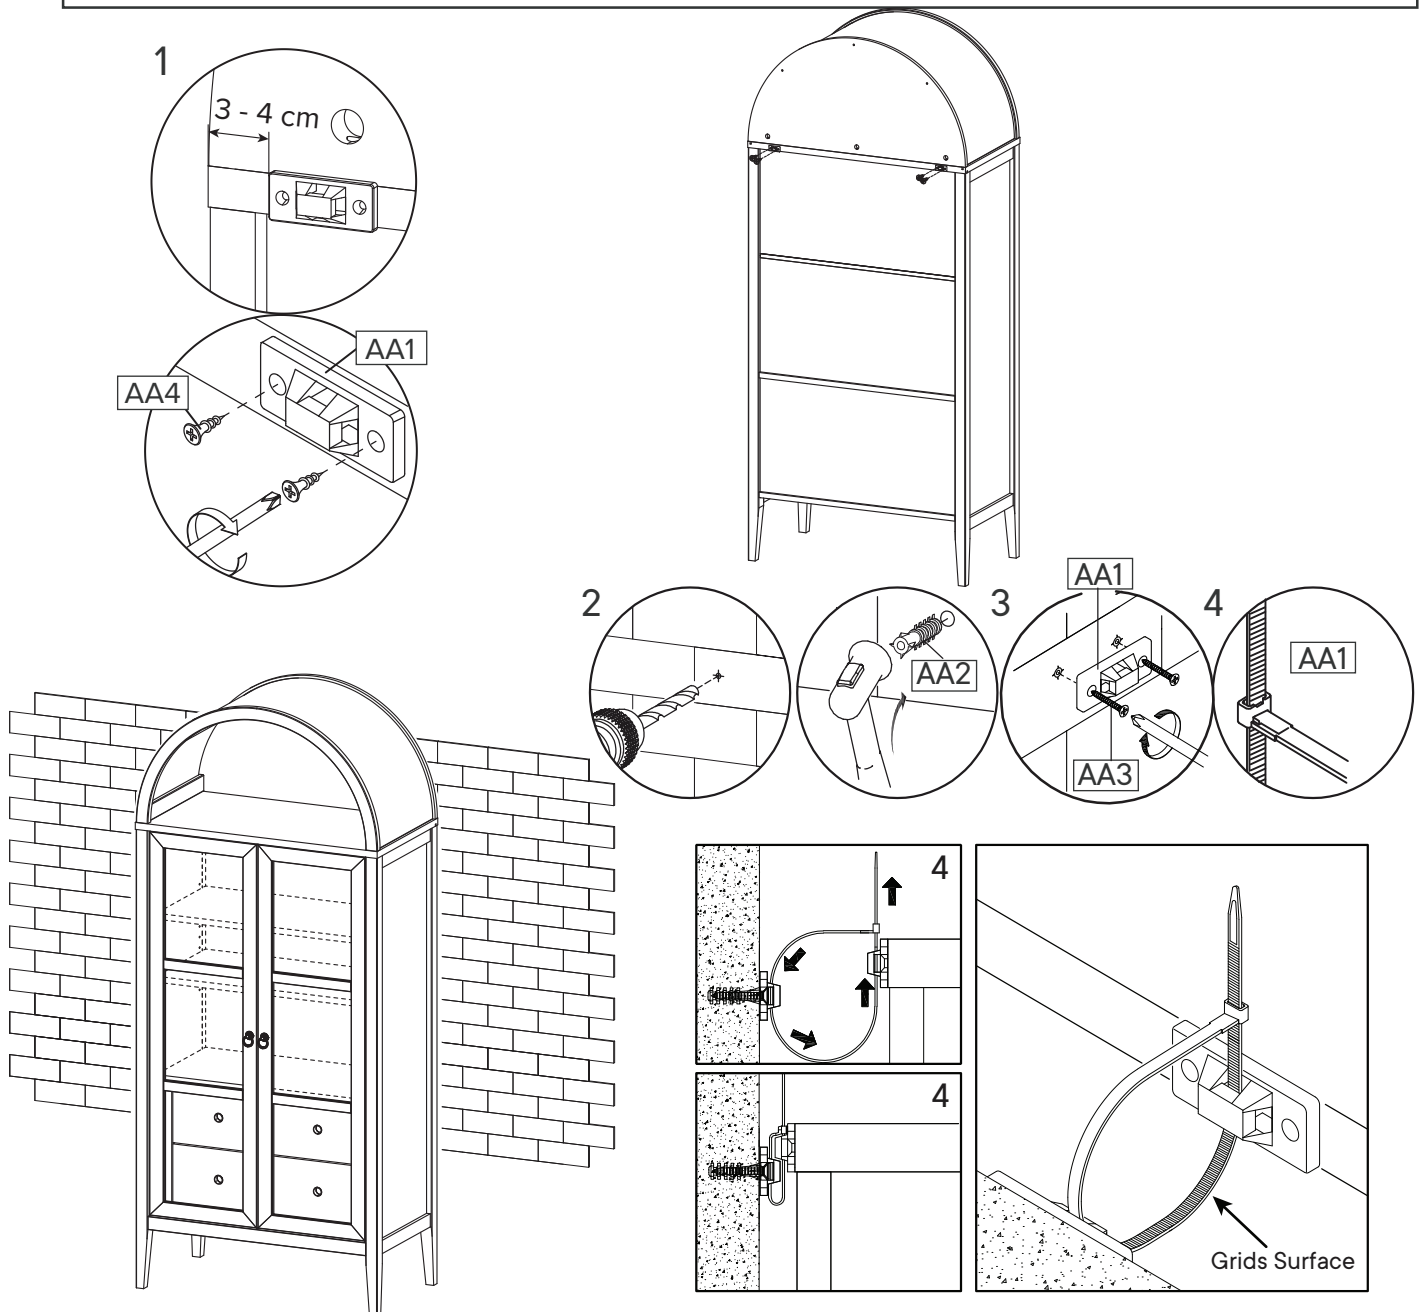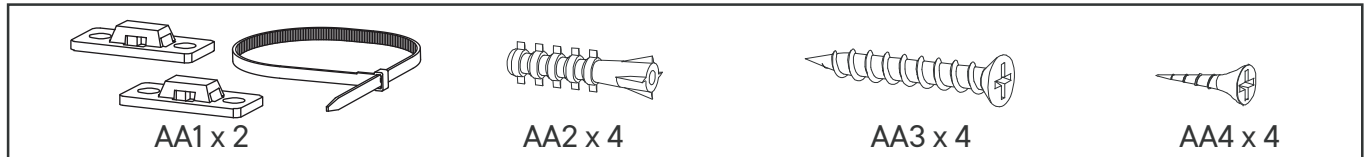

### Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.