

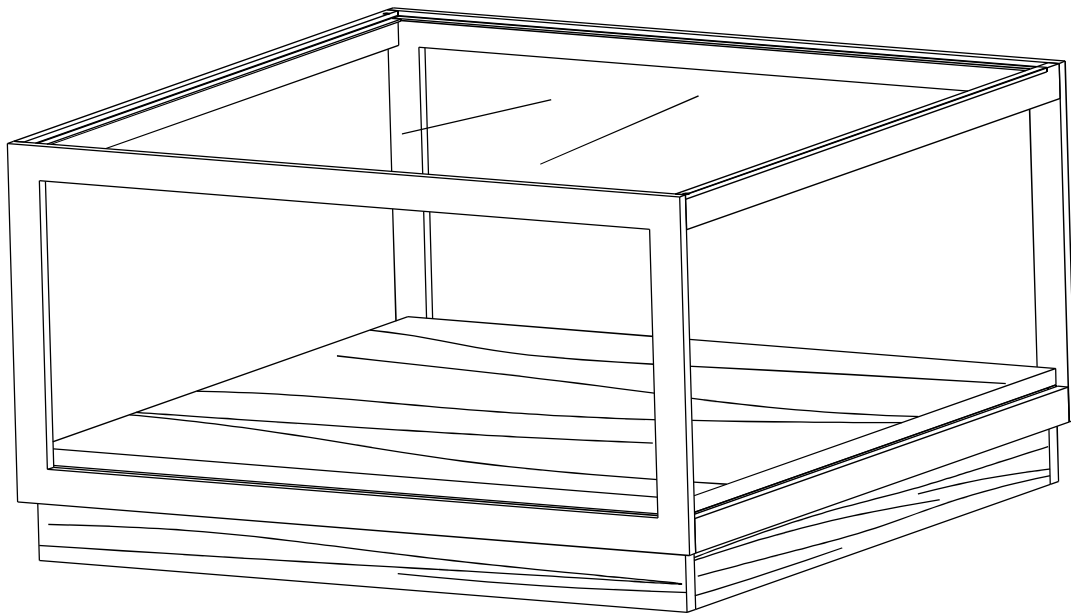
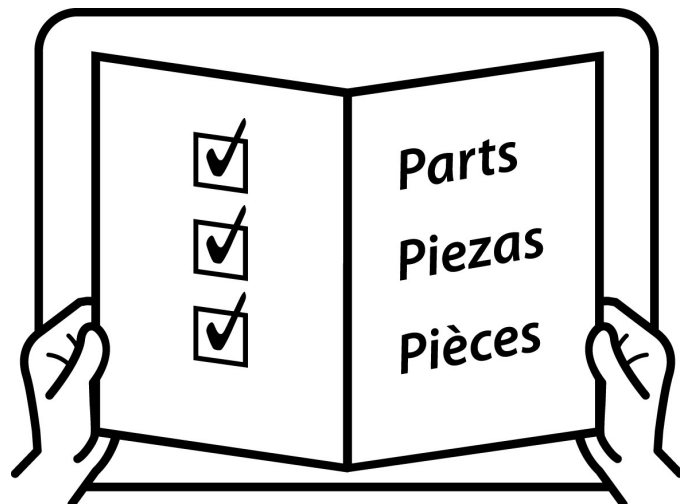
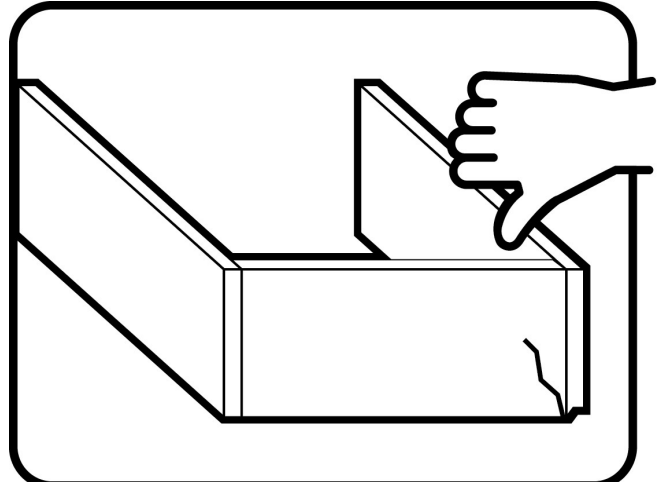
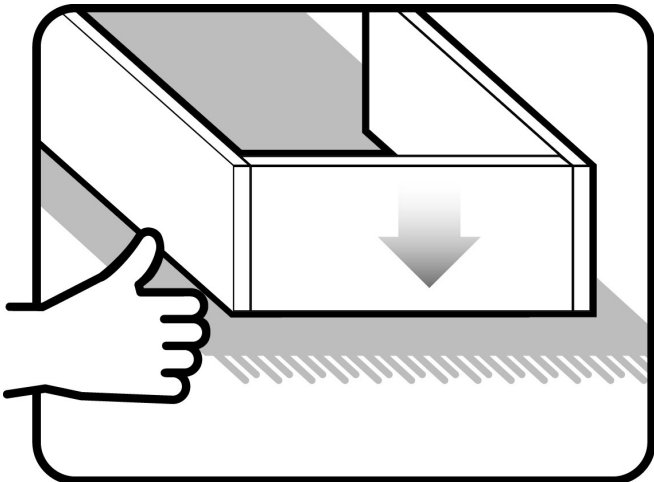


Assembly | Asambla | Assemblage

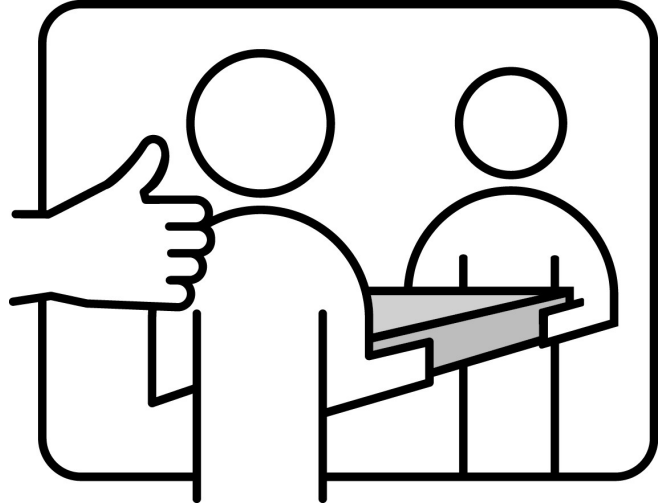


Assembly | Asamblea | Assemblage

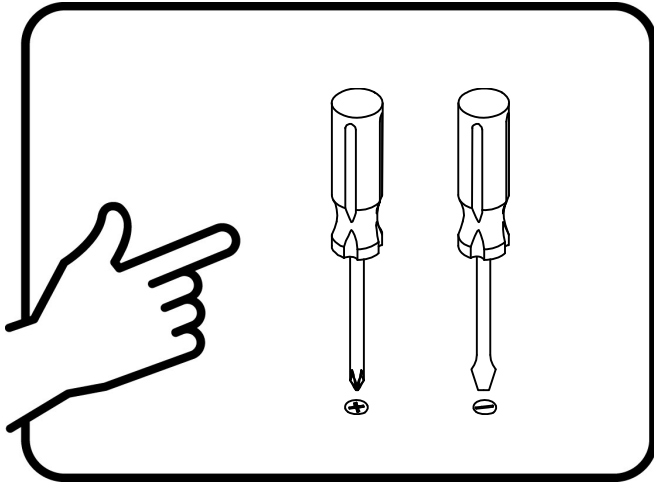

Assembly | Asamblea | Assemblage

Techniques | Técnicas | Techniques

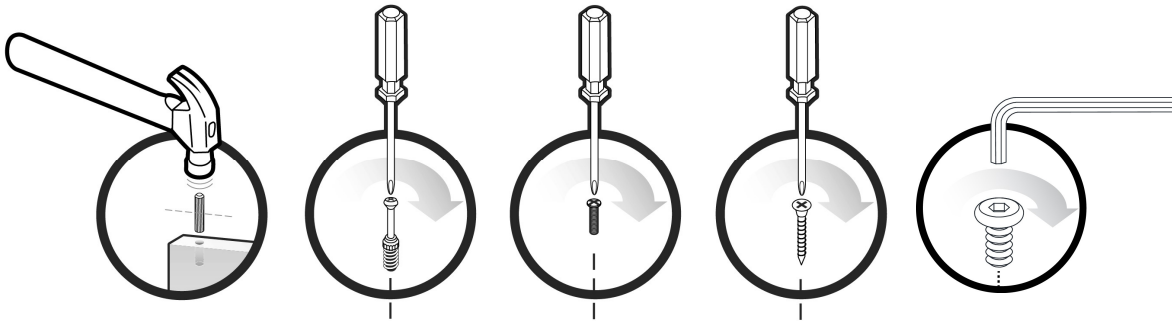

Care | Cuidado | Entretien










Safety | Seguridad | Sécurité







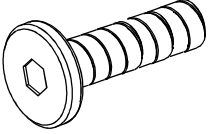


Note! | ¡Nota! | Remarque!



Assembly | Asamblea | Assemblage

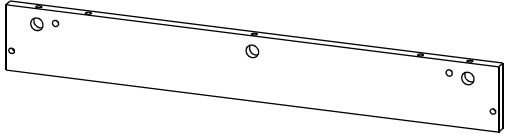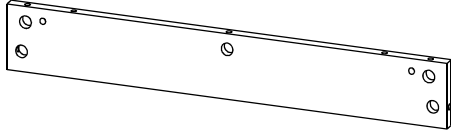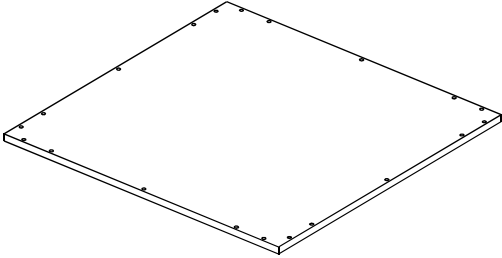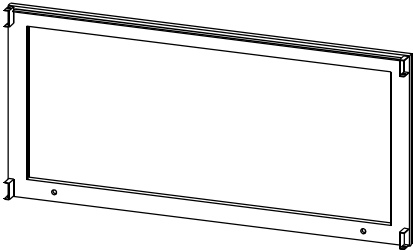
<p>1 x2</p>  <p>Wooden Long Panel Panel largo de madera Panneau long en bois</p>	<p>2 x2</p>  <p>Wooden Short Panel Panel Corto De Madera Panneau court en bois</p>
<p>3 x1</p>  <p>Wood Board Tabla de madera Planche de bois</p>	<p>4 x2</p>  <p>Metal Side Panel Panel lateral de metal Panneau latéral en métal</p>
<p>5 x2</p>  <p>Bottom Stretcher Camilla inferior Civière inférieure</p>	<p>6 x2</p>  <p>Top Stretcher Camilla superior Civière supérieure</p>
<p>7 x1</p>  <p>Glass Top Tapa de cristal Dessus en verre</p>	

Assembly | Asamblea | Assemblage

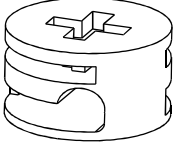
<p>A x16</p>  <p>Cam Bolt Perno de leva Boulon à came</p>	<p>B x16</p>  <p>Cam Lock Bloqueo de leva Cam Lock</p>
<p>C x8</p>  <p>Wood Dowel Taco de madera Goujon en bois</p>	<p>D x8</p>  <p>Bolt Tornillo Boulon 3/16"x1/2"</p>
<p>E x8</p>  <p>Bolt Tornillo Boulon 1/4"x1"</p>	<p>F x1</p>  <p>Allen Wrench Llave Allen Clé Allen</p>
<p>G x8</p>  <p>Glass Pad Almohadilla de vidrio Tampon De Verre</p>	

Assembly | Asambla | Assemblage

1

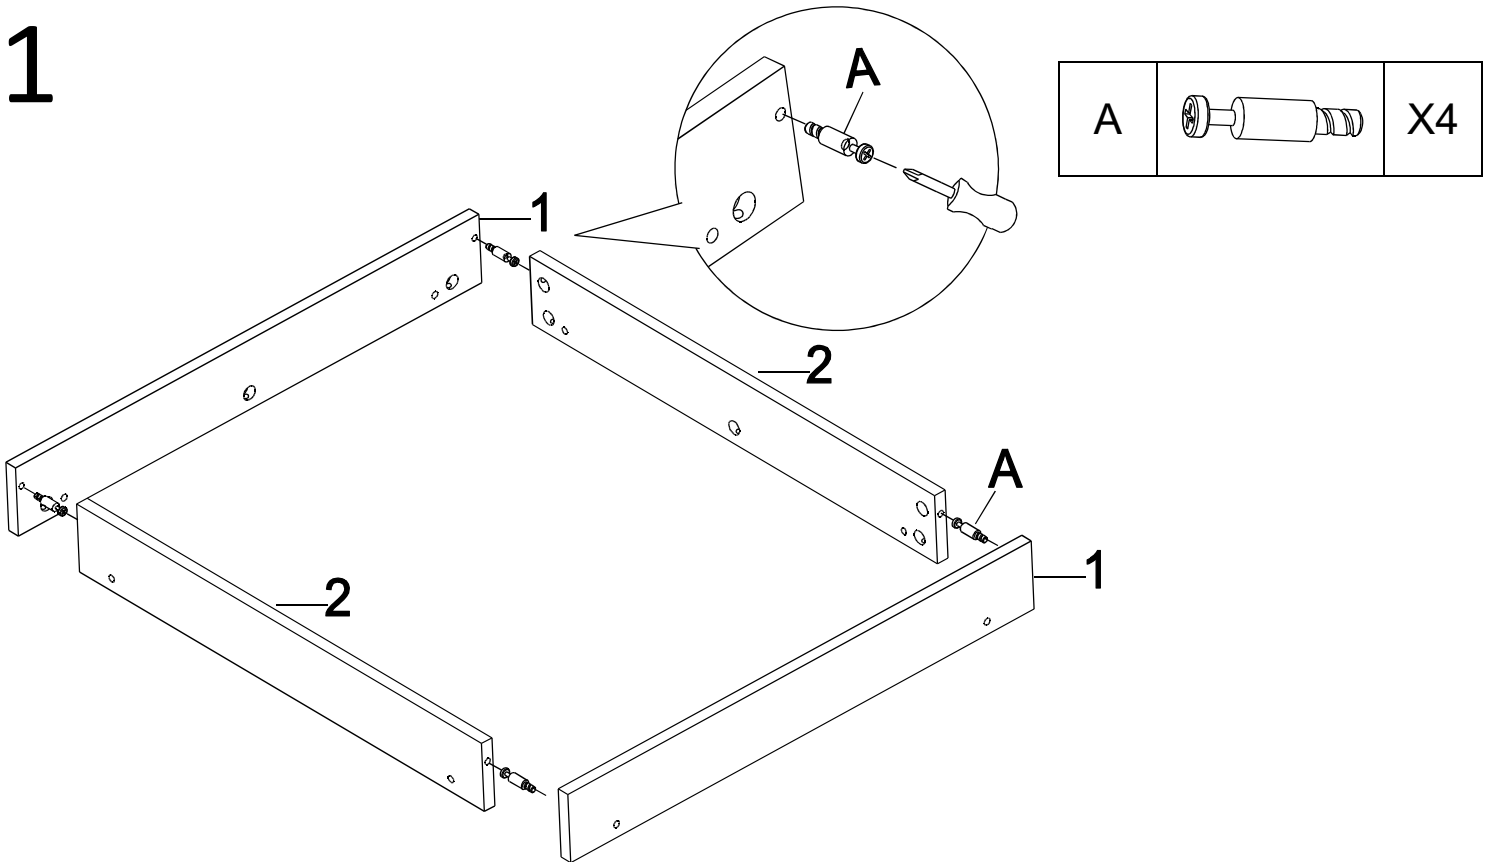


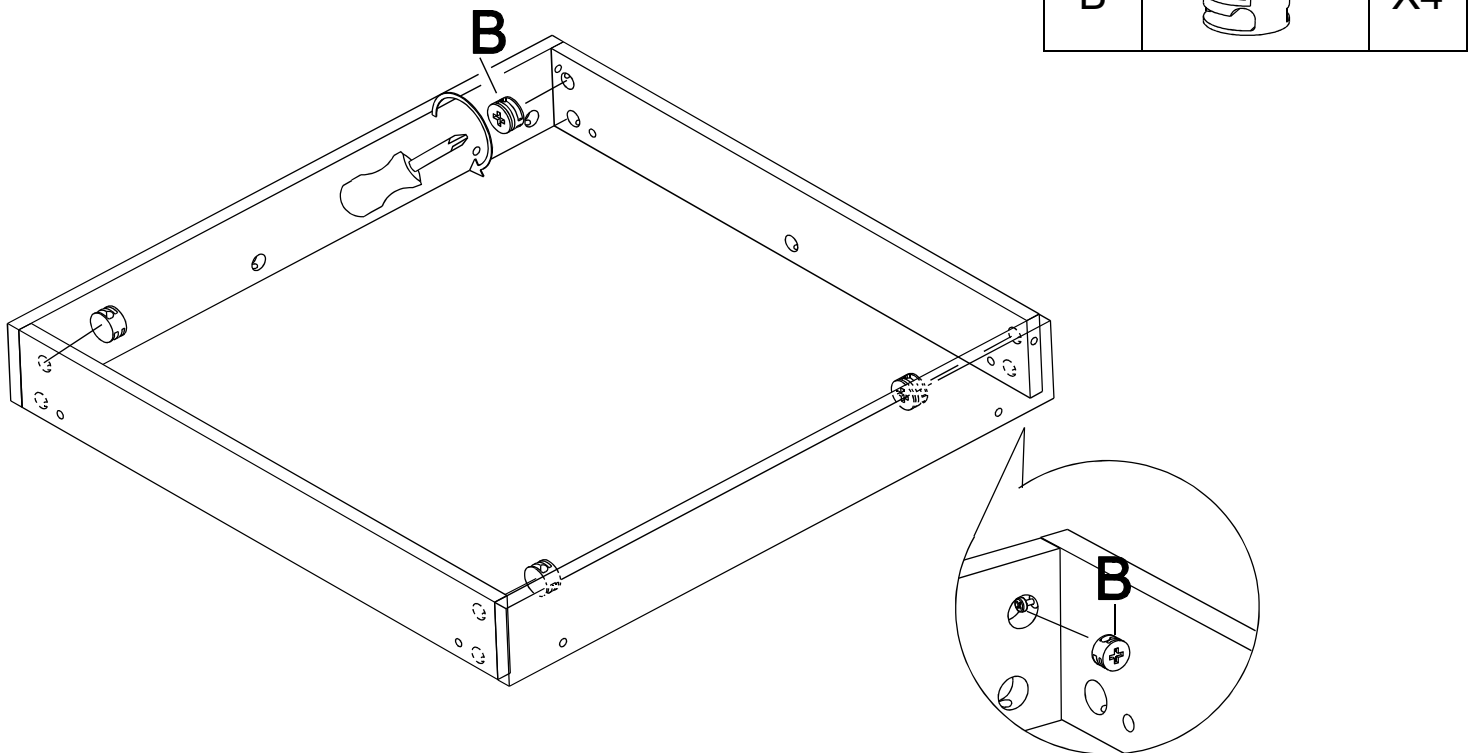

2




Assembly | Asambla | Assemblage

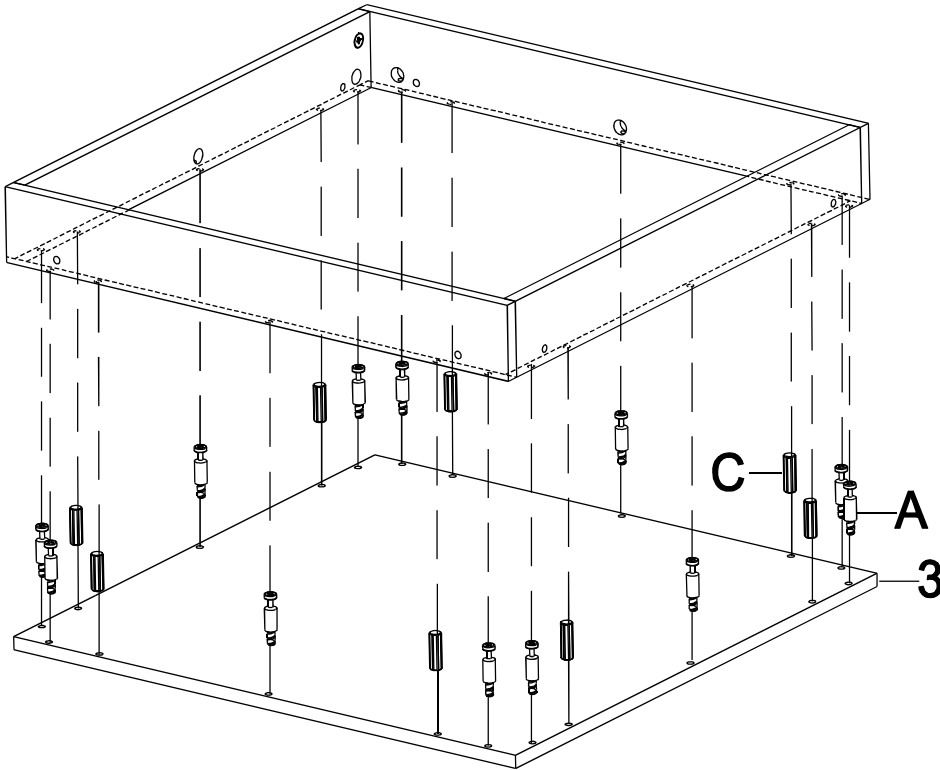
3




A		X12
C		X8



4

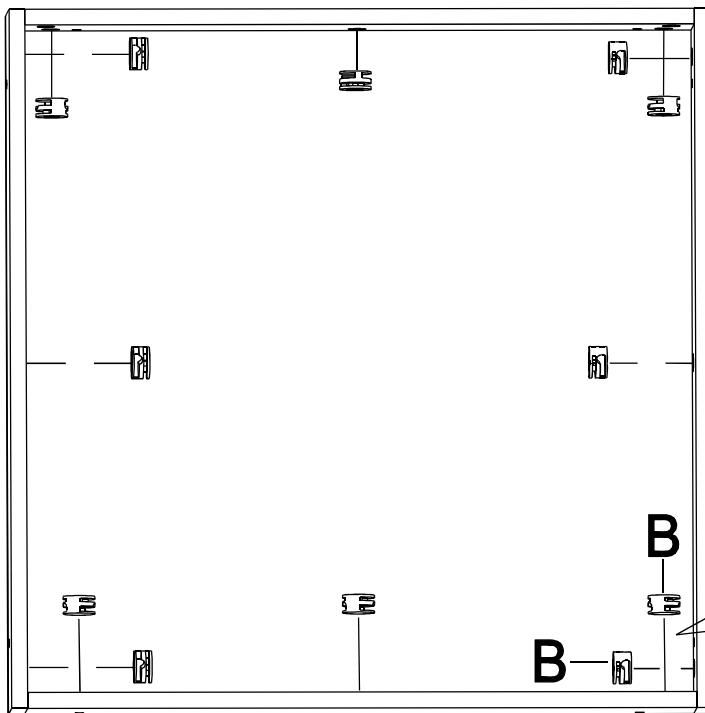

B		X12
---	---	-----

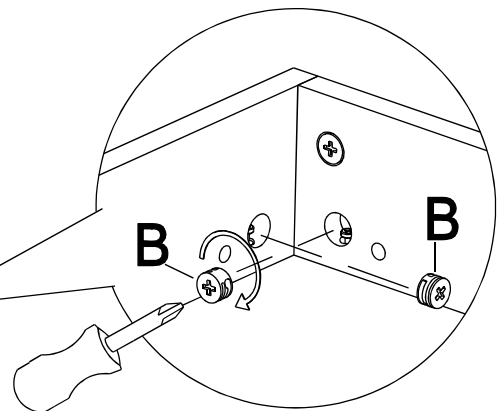


Assembly | Asambla | Assemblage

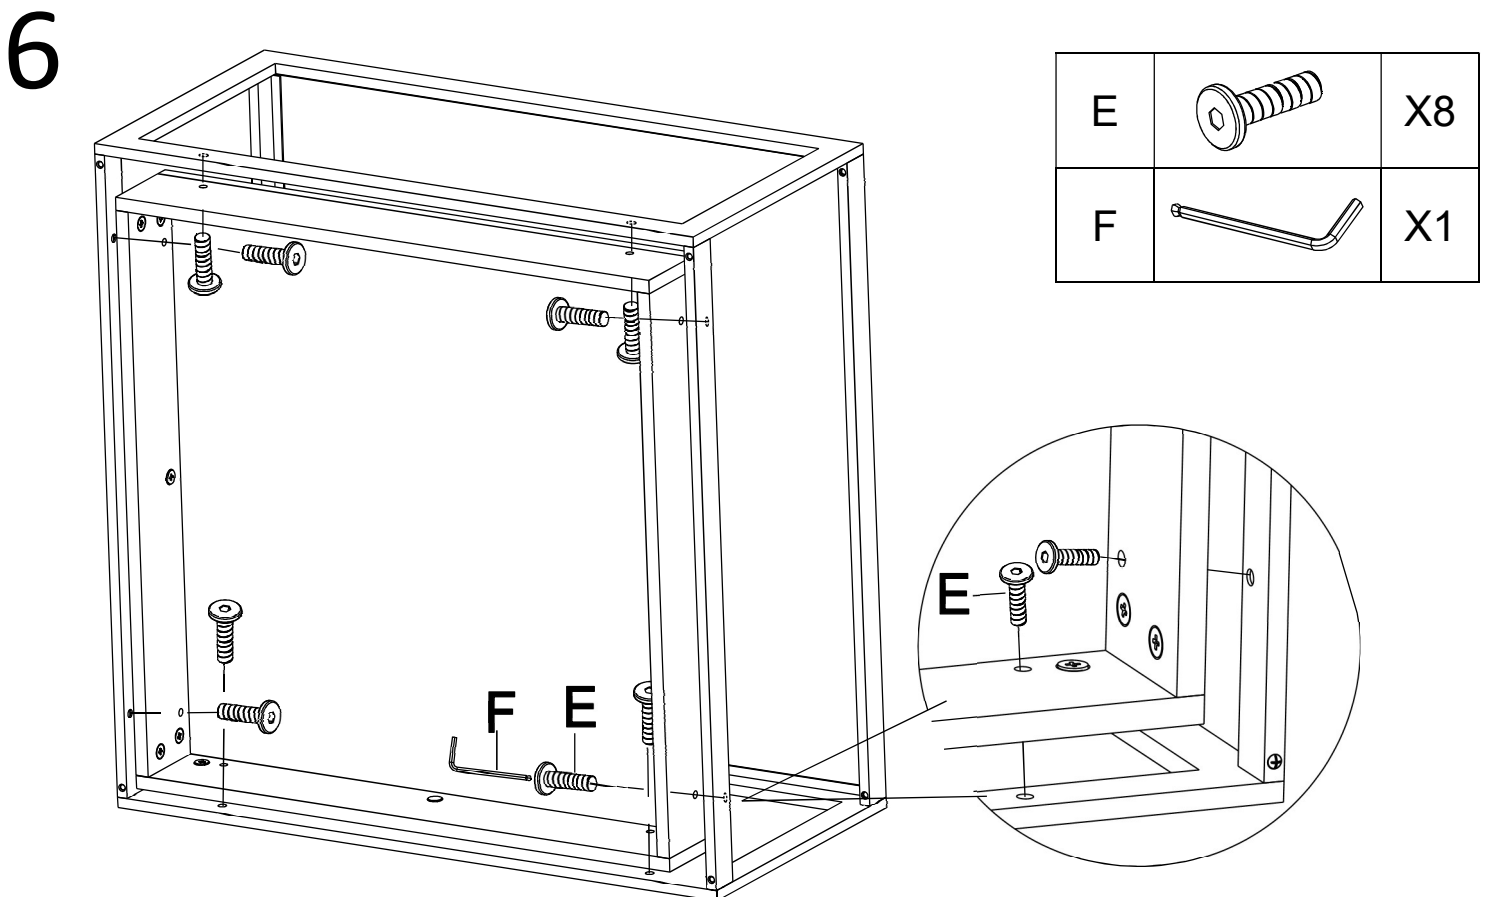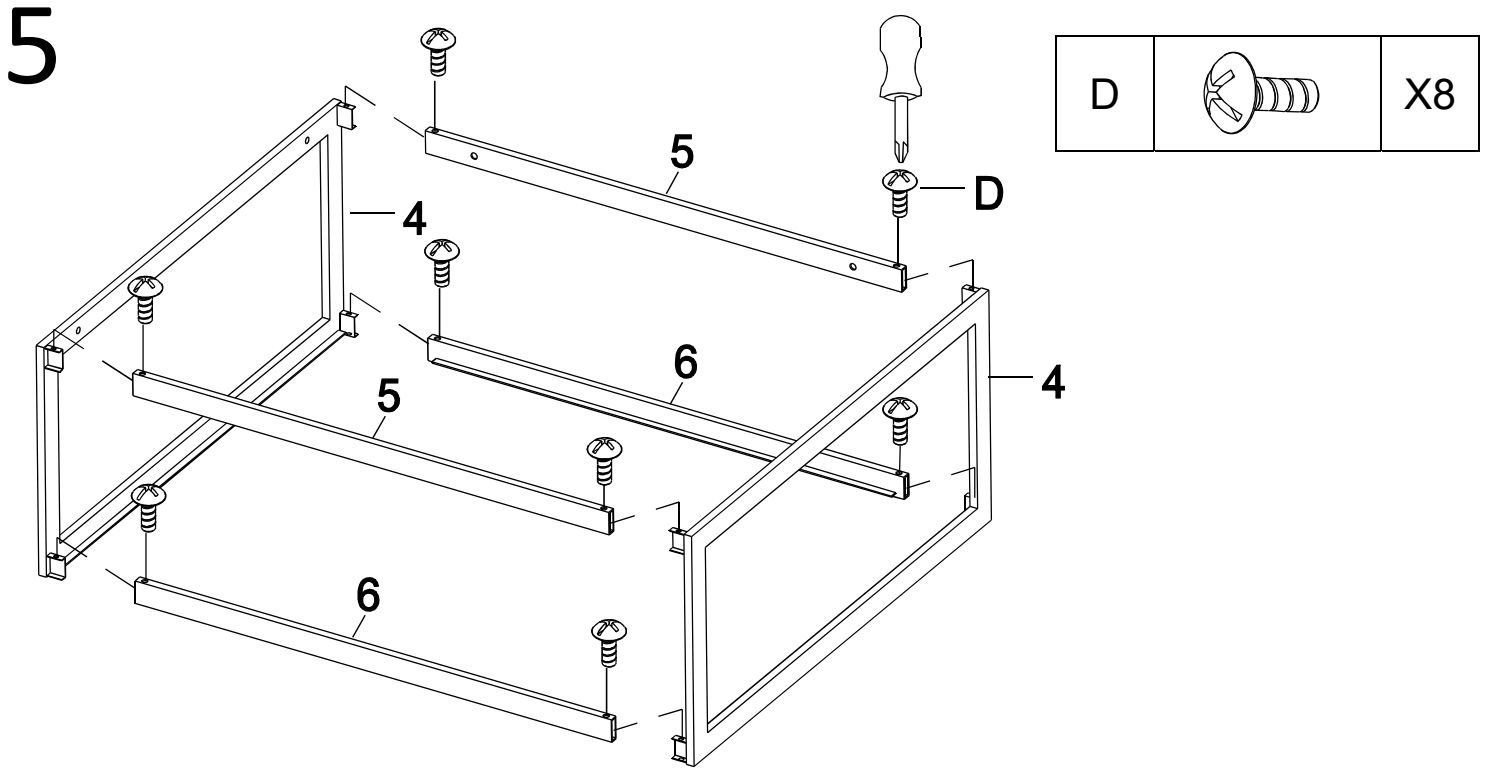

Assembly | Asambla | Assemblage

7

G		X8
---	---	----

