


ASSEMBLY INSTRUCTION



DE - MONTAGEANWEISUNG
 FR - INSTRUCTIONS DE MONTAGE
 DK - MONTAGEVEJLEDNING
 CZ - NÁVOD K MONTÁŽI
 ES - INSTRUCCIONES DE MONTAJE
 FI - ASENNUSOHJE

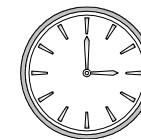





HR - UPUTE ZA MONTAŽU
 SE - MONTERINGSANVISNING
 SI - NAVODILA ZA MONTAŽO
 TR - MONTAJ TALIMATI
 NO - MONTASJEANVISNING
 IT - ISTRUZIONI DI MONTAGGIO


GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
 NL - MONTAGE INSTRUCTIE
 PT - INSTRUÇÕES DE MONTAGEM
 PL - INSTRUKCJA MONTAŻU
 HU - SZERELÉSI UTASÍTÁS

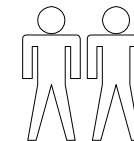


20 min




- ①  **x 8** HW-ST-01-078 (7 x 120)
- ②  **x 2** HW-ST-01-046 (7 x 90)
- ③  **x 3** HW-ST-01-043 (7 x 65)
- ④  **x 4** HW-ST-01-040 (7 x 50)
- ⑤  **x 4** HW-WD-17-011 (10x40)
- ⑥  **x 1** HW-ST-18-001 (4 x 98)

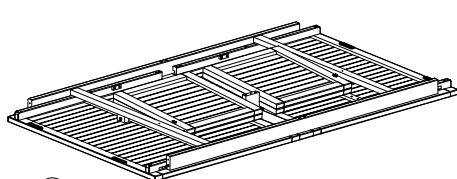


Ⓐ x1
SU-TB-AS-0250

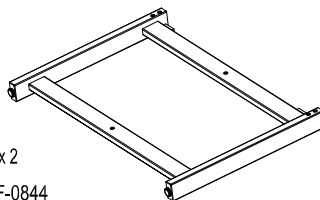


Ⓑ x2
SU-TB-LF-0844

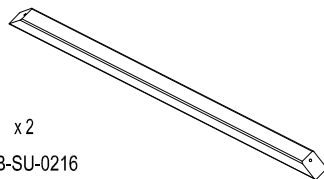

Ⓒ x2
C-W-TB-SU-0216

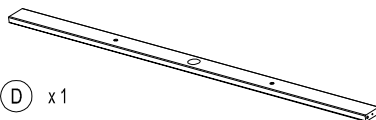

Ⓓ x1
C-W-TB-FP-0059

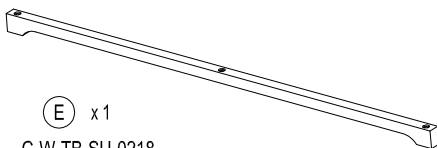

Ⓔ x1
C-W-TB-SU-0218

