





Modern Coffee Table

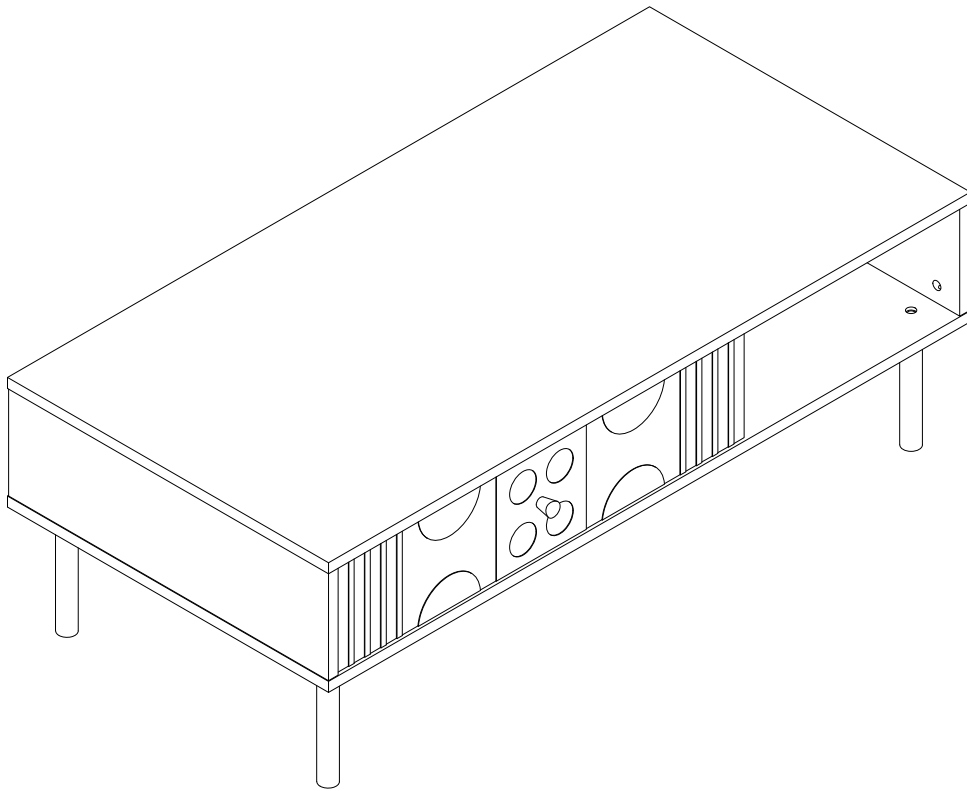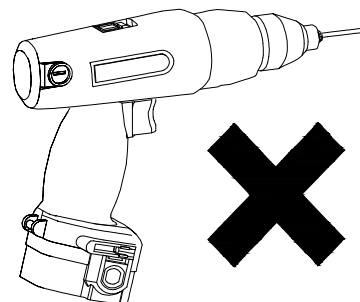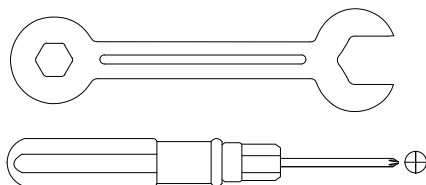

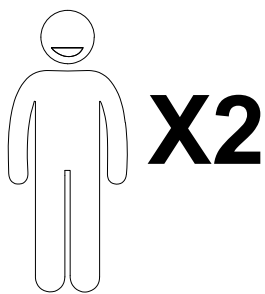


We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

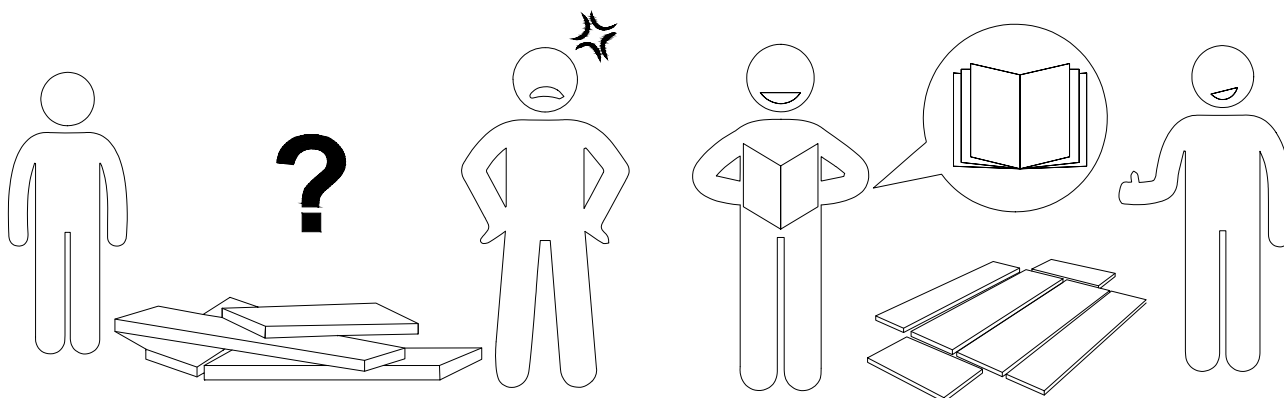

Warm Tips





1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.





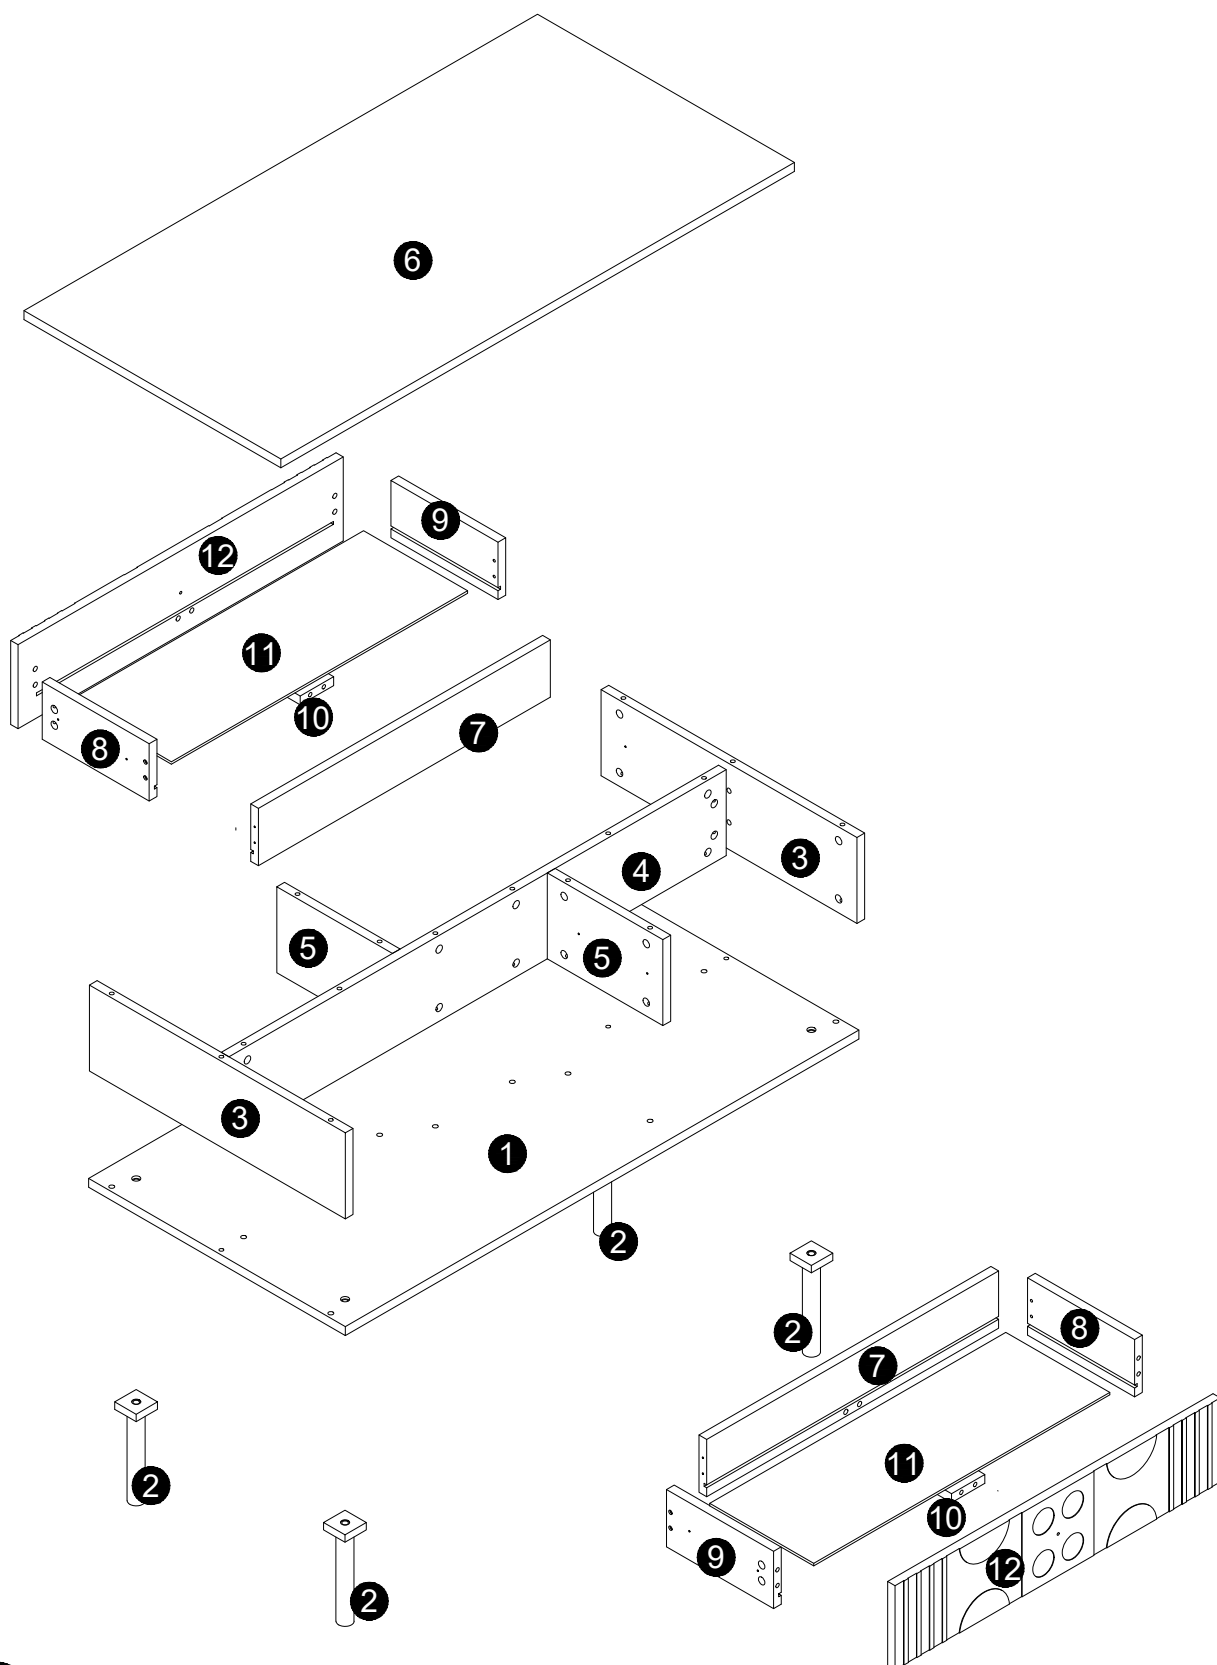




⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.





Parts List

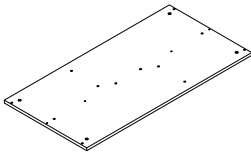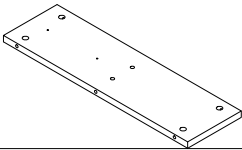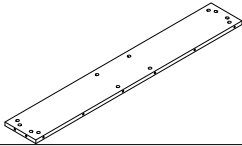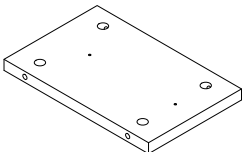1 	2 	3 	4 	5 
1 pc	4 pcs	2 pcs	1 pc	2 pcs

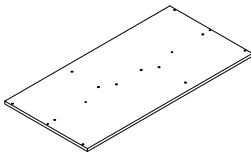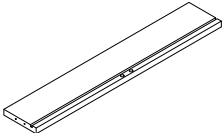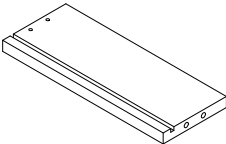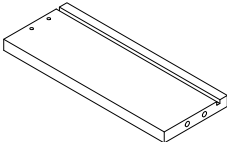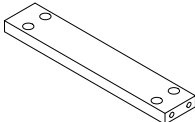6 	7 	8 	9 	10 
1 pc	2 pcs	2 pcs	2 pcs	2 pcs

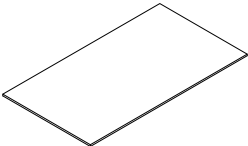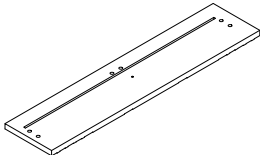11 	12 			
2 pcs	2 pcs			


Hardware List

A	B	C	D	E	F
 M6x35mm	 Ø15x12mm	 Ø8x30mm	 Ø8x35mm	 M3. 5x14mm	 Ø3. 5*35mm
32 pcs	44 pcs	8 pcs	4 pcs	16 pcs	8 pcs
G	H	I	J	K	
 Ø4x22mm		 Screwdriver	 240mm	 M6x35mm	
2 pcs	2 pcs	1 pc	2 sets	12 pcs	


Please split component “J” into “J-1” and “J-2” before assembling the slide and then proceed to the next step of assembly

Step 1

Pull apart component "J" to each side, and then gently push up the lever of component "J-2"

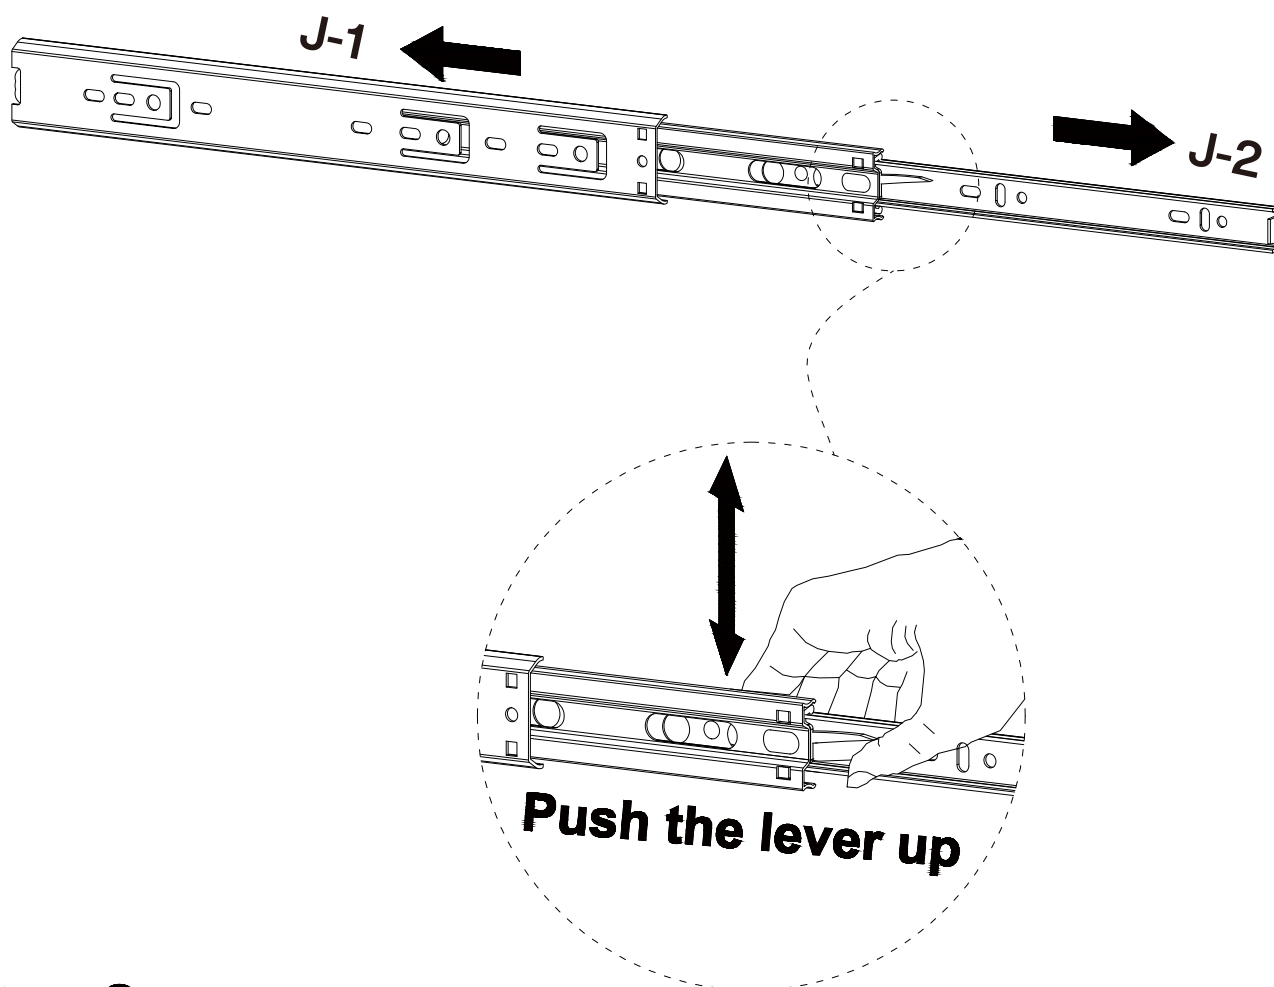


Step 2 Split component “J-1” and “J-2”

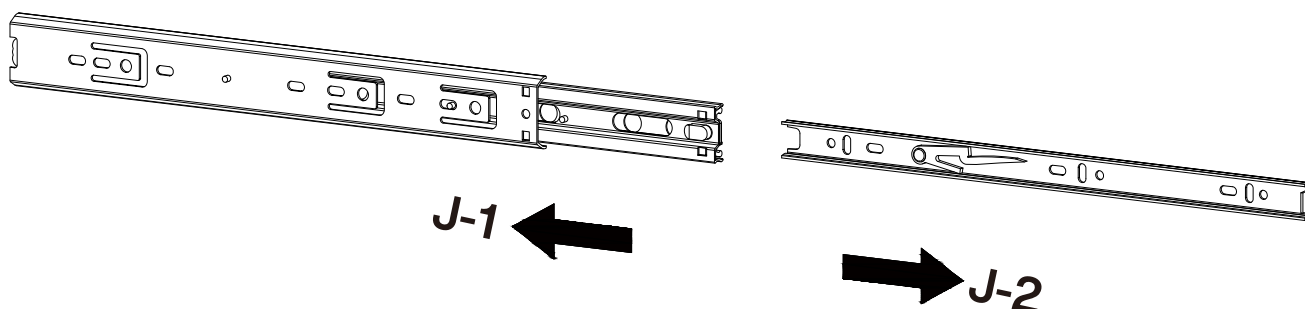


Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

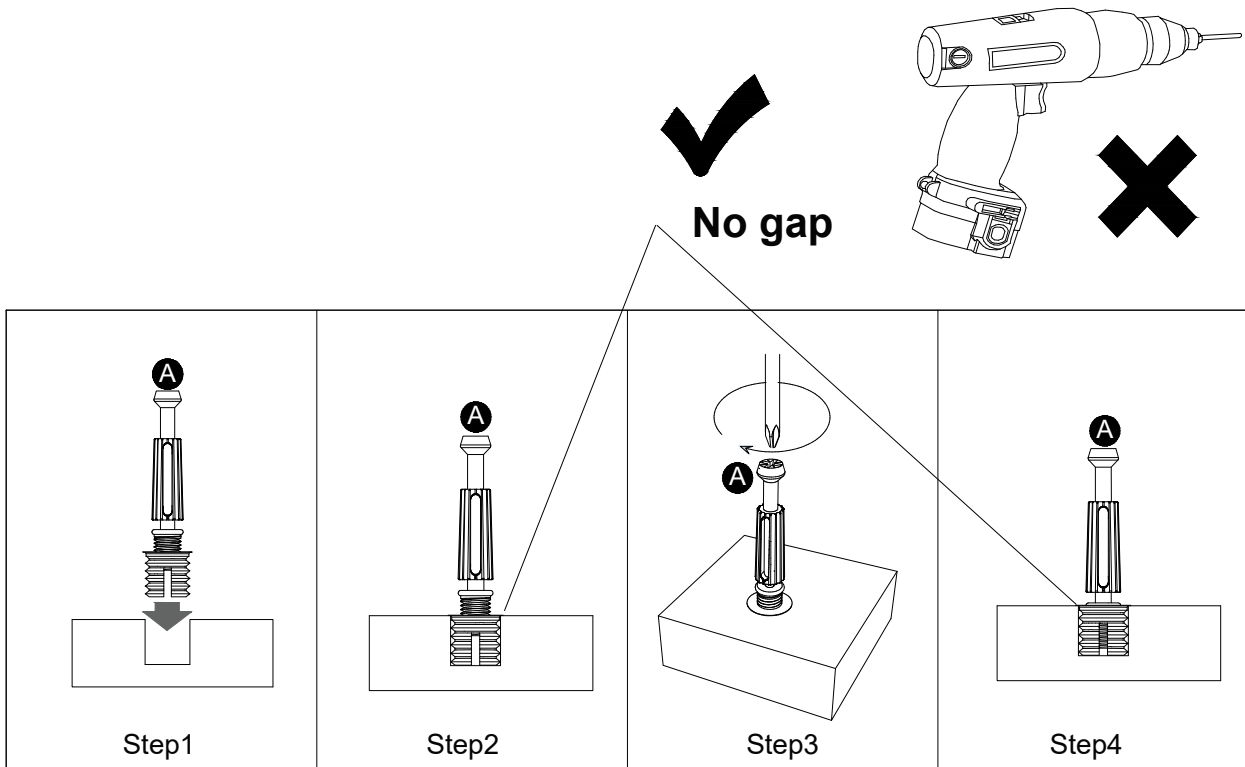

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

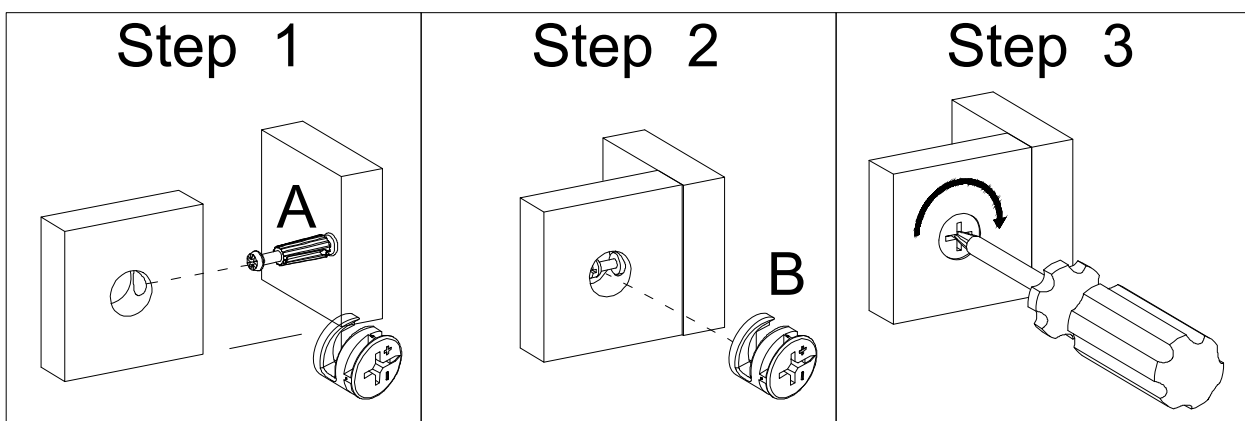


1

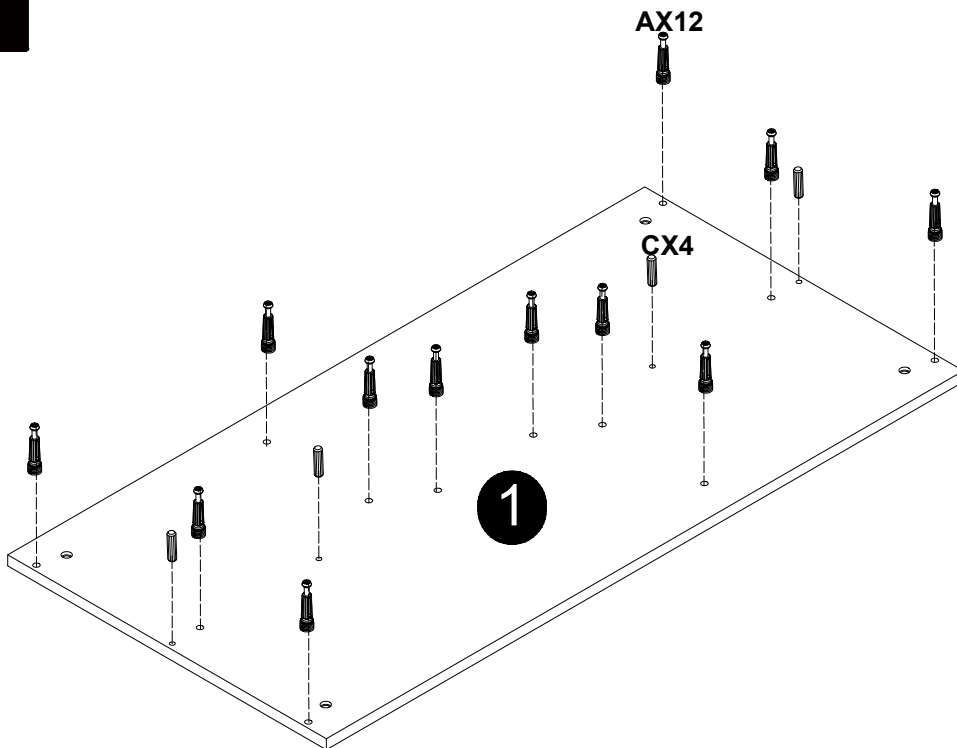


A	C
	
M6x35mm 12 pcs	Ø8x30mm 4 pcs

2

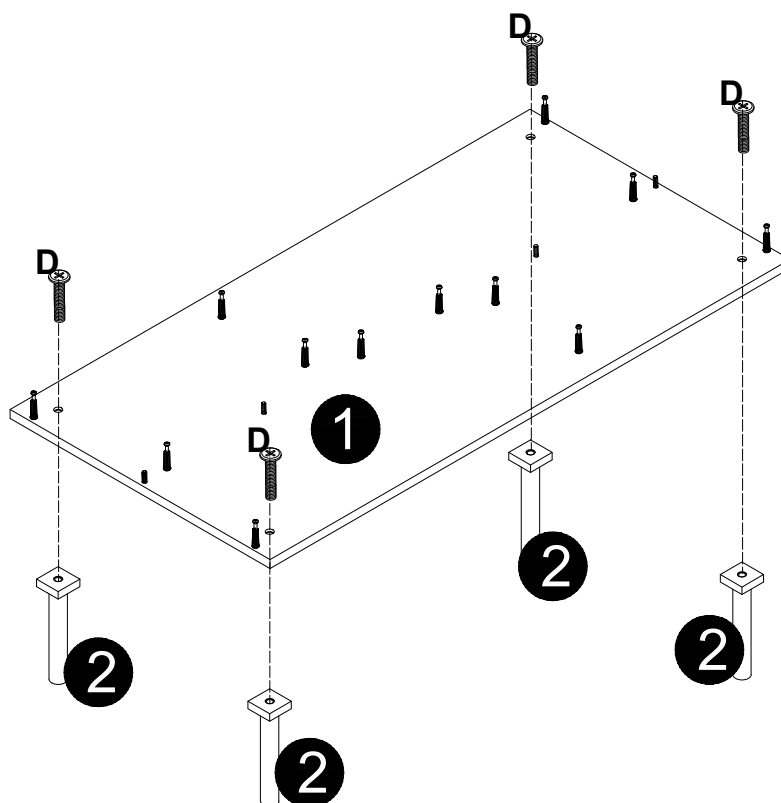


D



Ø8x35mm 4 pcs

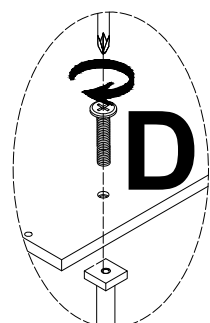


3

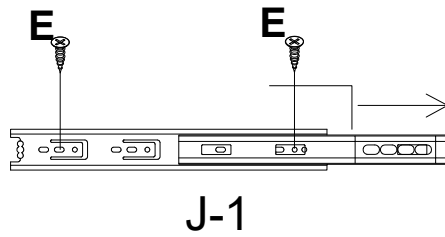

A	J	E
		
M6x35mm	250mm	Ø3.5x14mm
4 pcs	2 pcs	4pcs

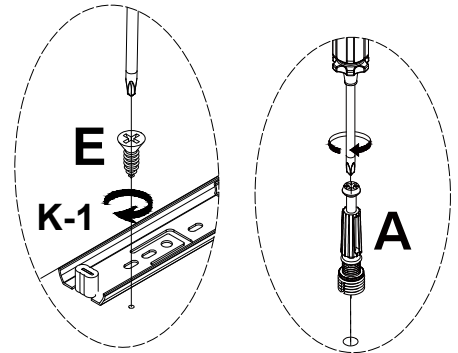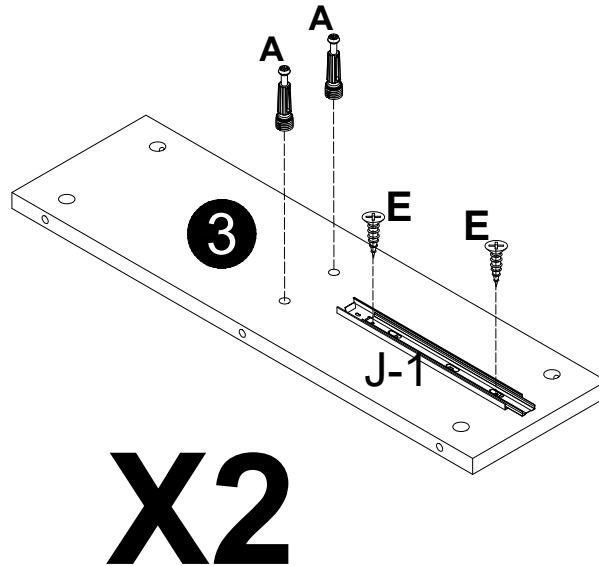


4


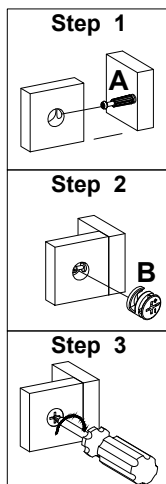


B

Ø15x12mm
4 pcs

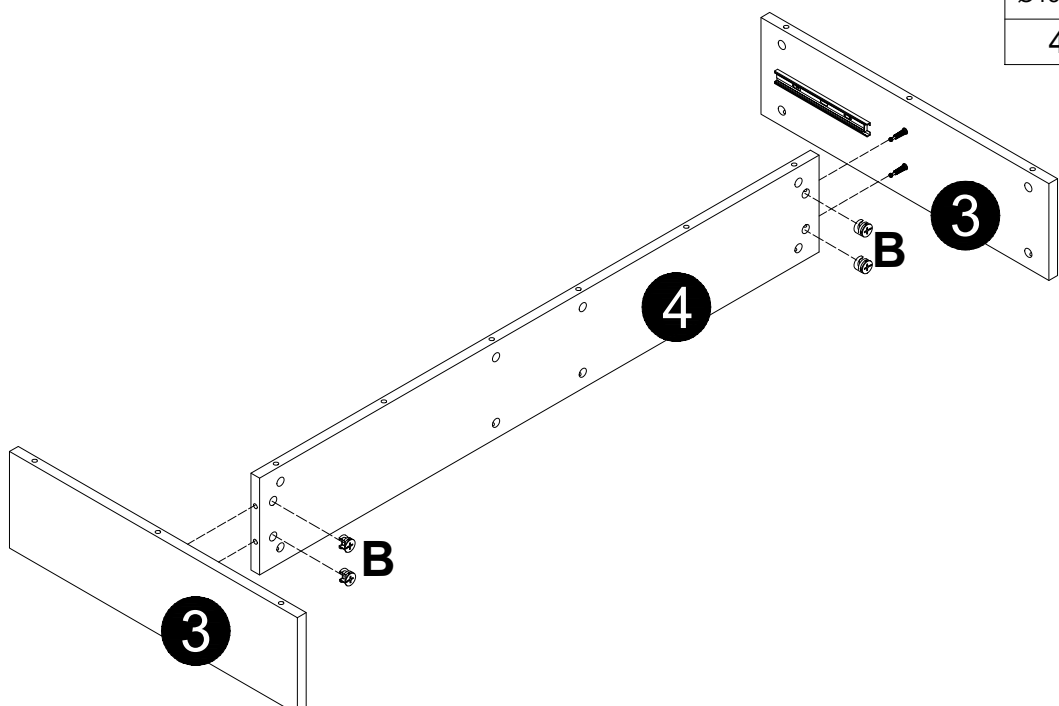


5

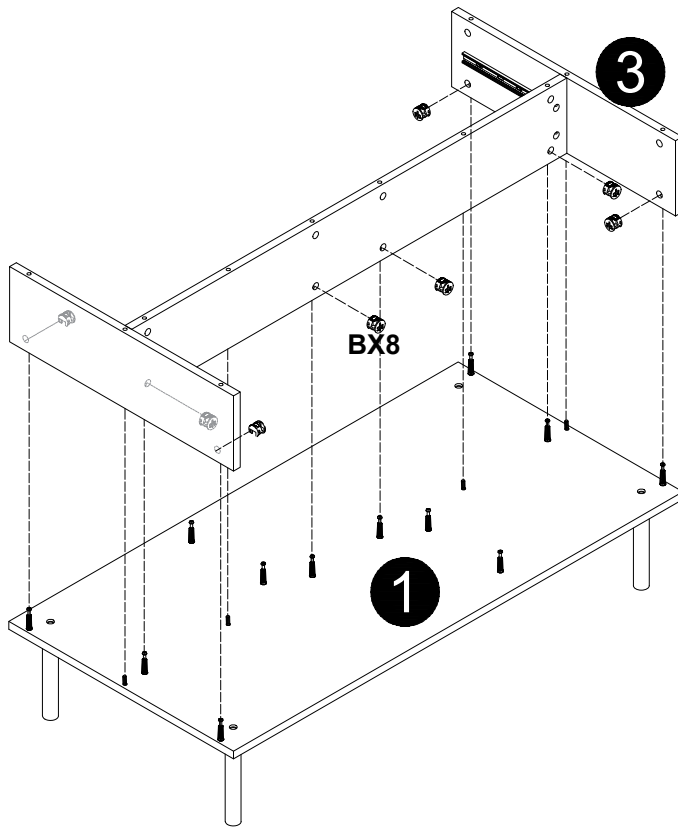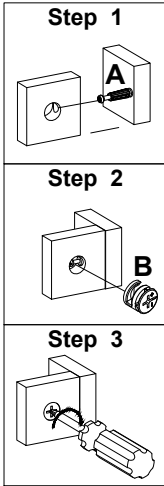


B

Ø15x12mm
8 pcs


6

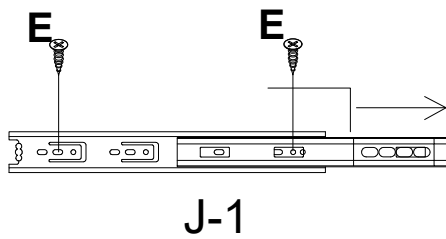



J	E
	
250mm	Ø3.5x14mm
2 pcs	4pcs

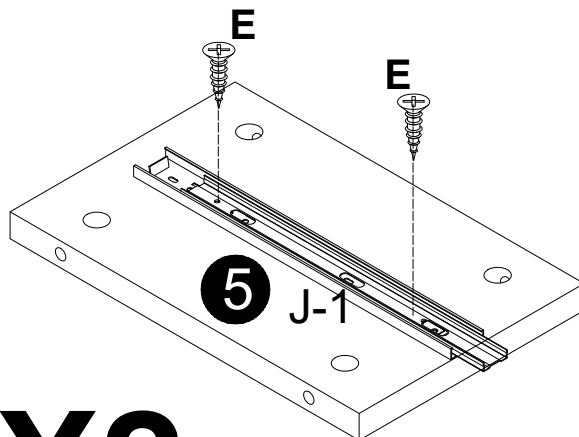

X2

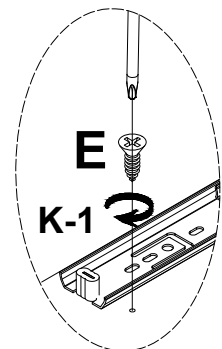


7

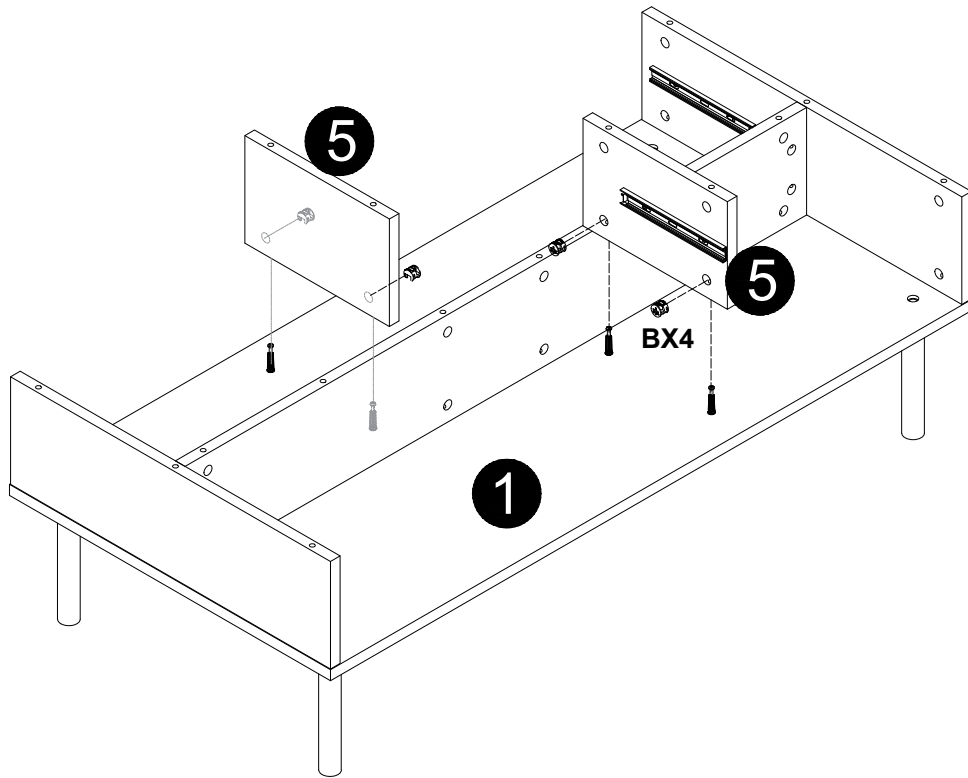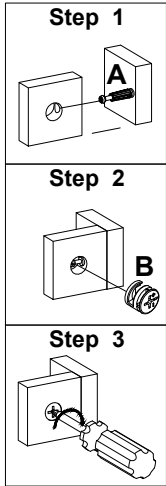


B

Ø15x12mm
4 pcs



8

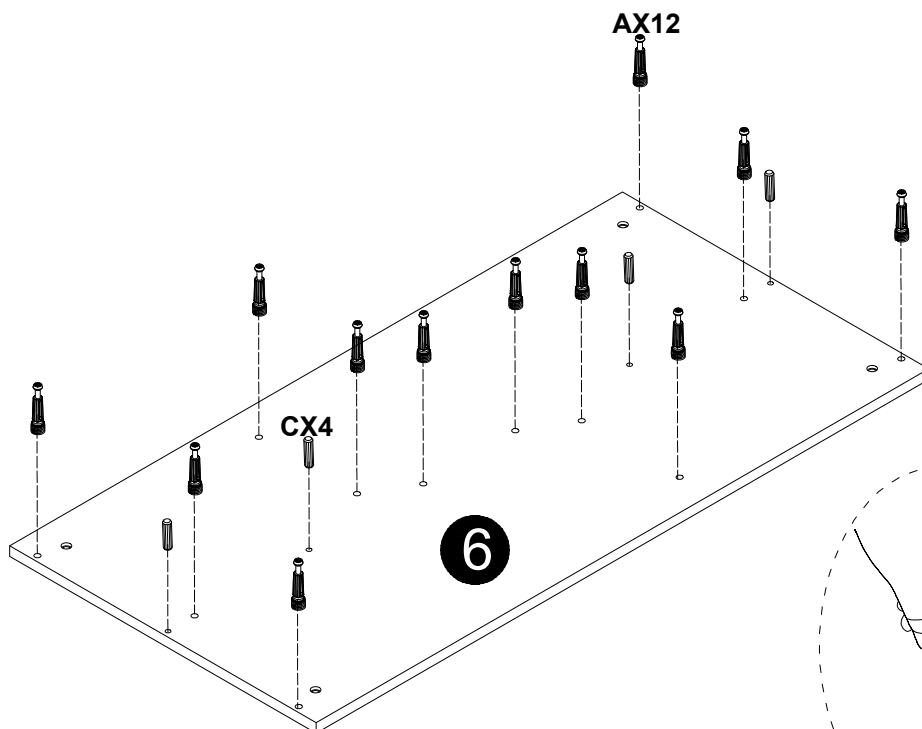

A	C
	
M6x35mm	Ø8x30mm
12 pcs	4 pcs

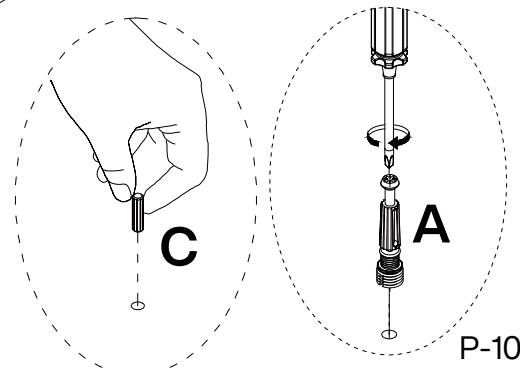



9

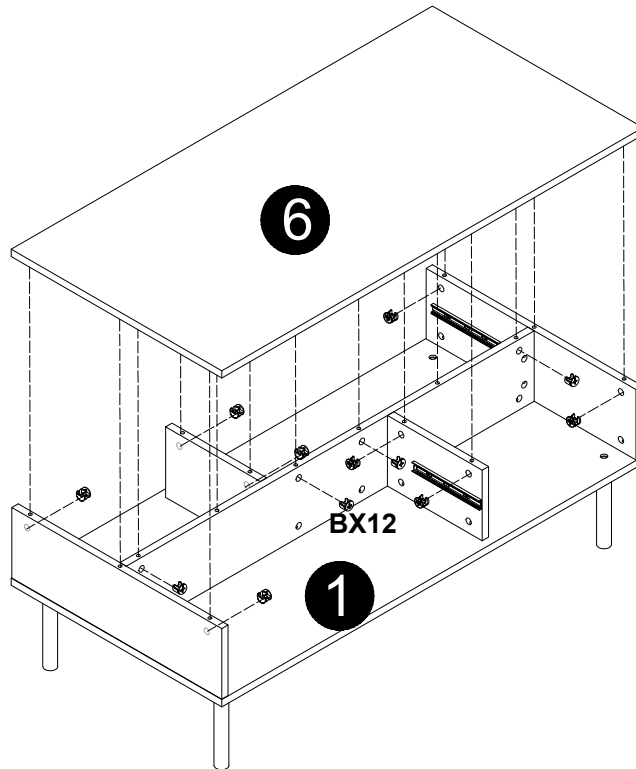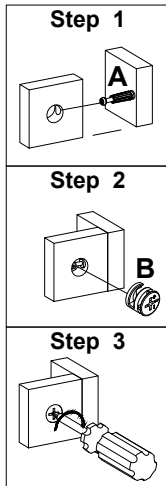

B

Ø15x12mm
12 pcs


10

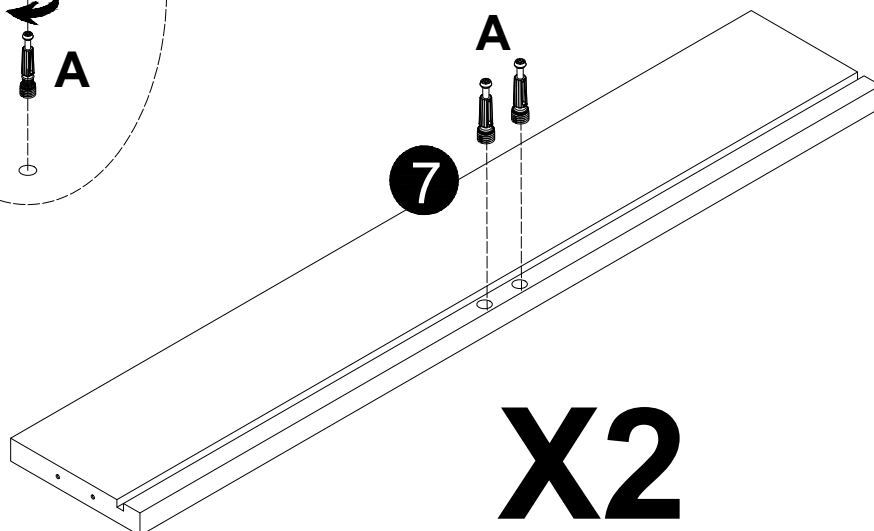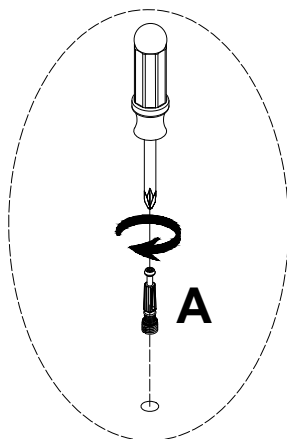



A

M6x35mm
4 pcs


11

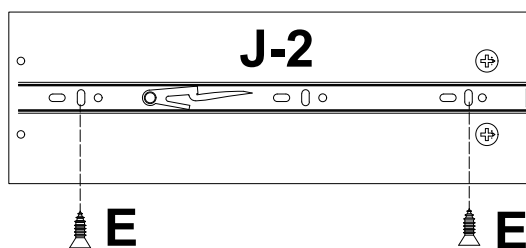

J	E
4 pcs	8 pcs

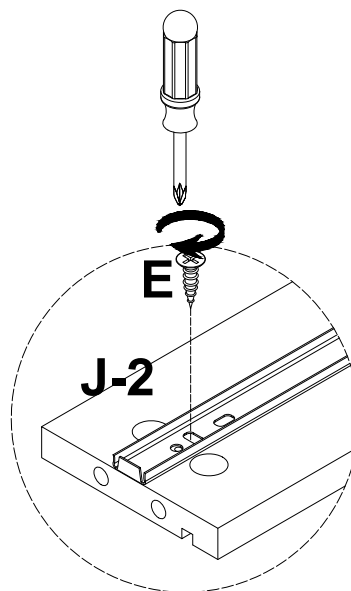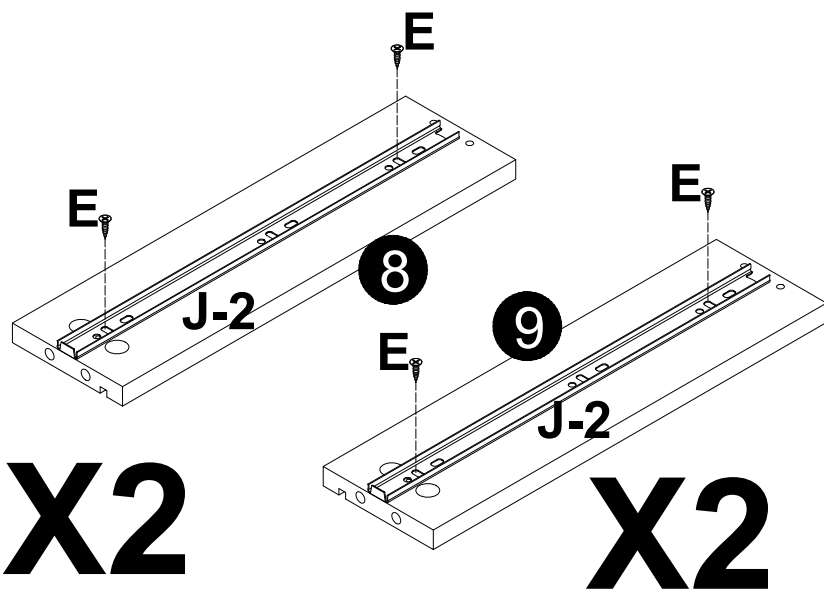


12

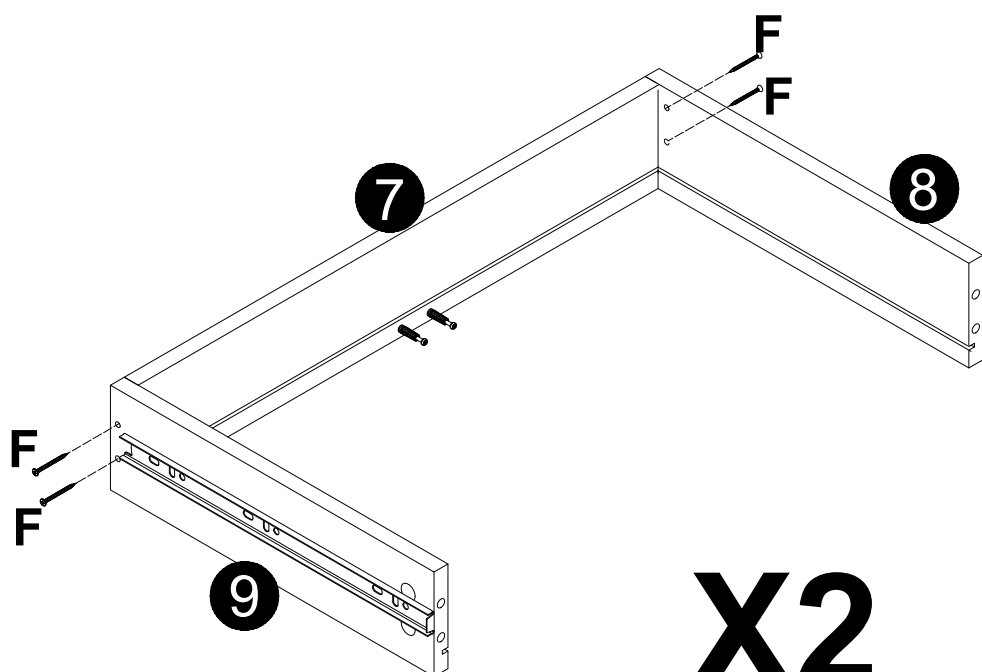


F
Ø3.5x35mm
8 pcs

13

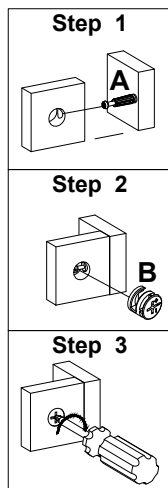


B


Ø15x12mm
4 pcs

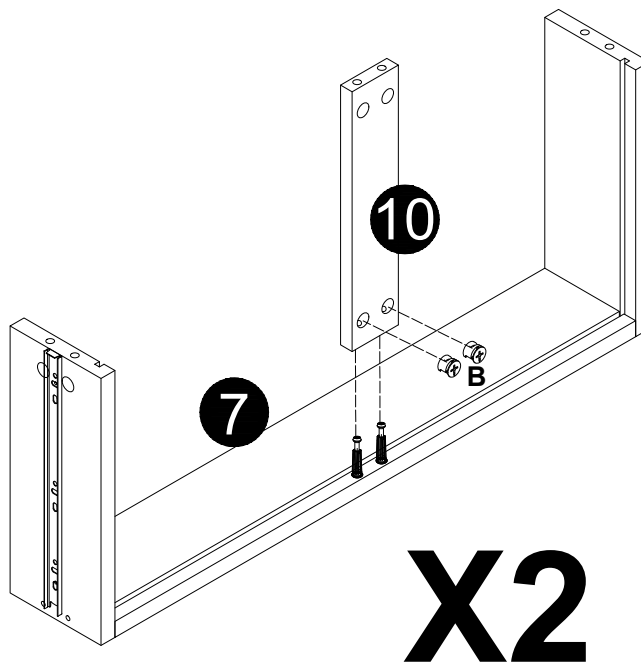

14

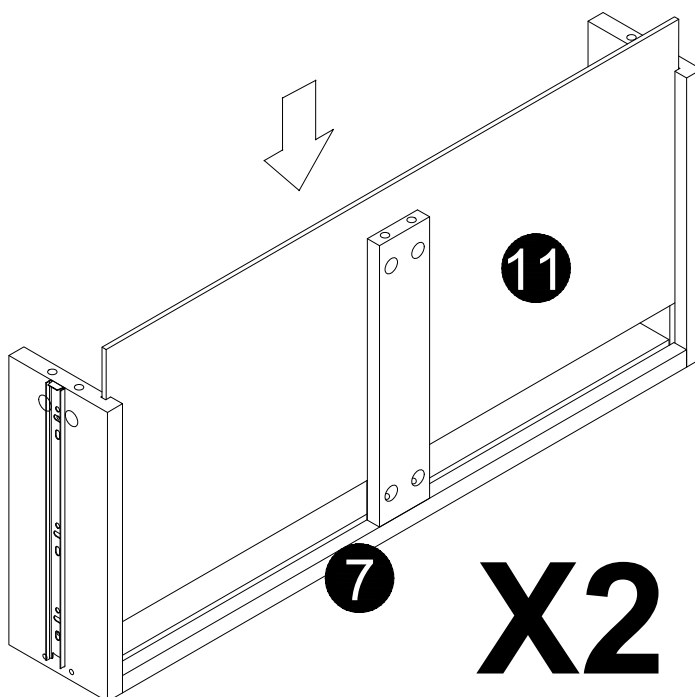


15

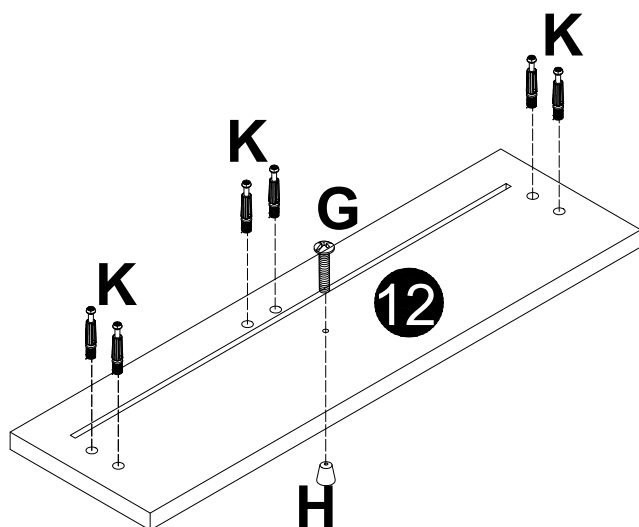

K	H
	
M6x35mm	
12 pcs	2 pcs
G	
	
M4x22mm	
2 pcs	


X2

16

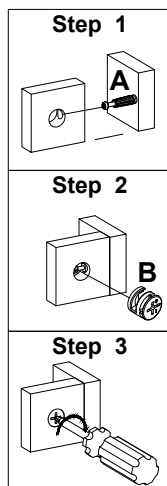


B

Ø15x12mm
12 pcs

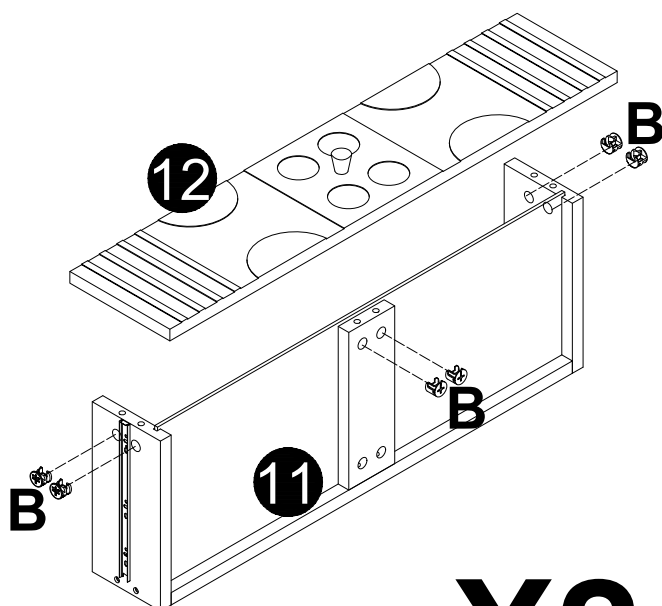

X2

17

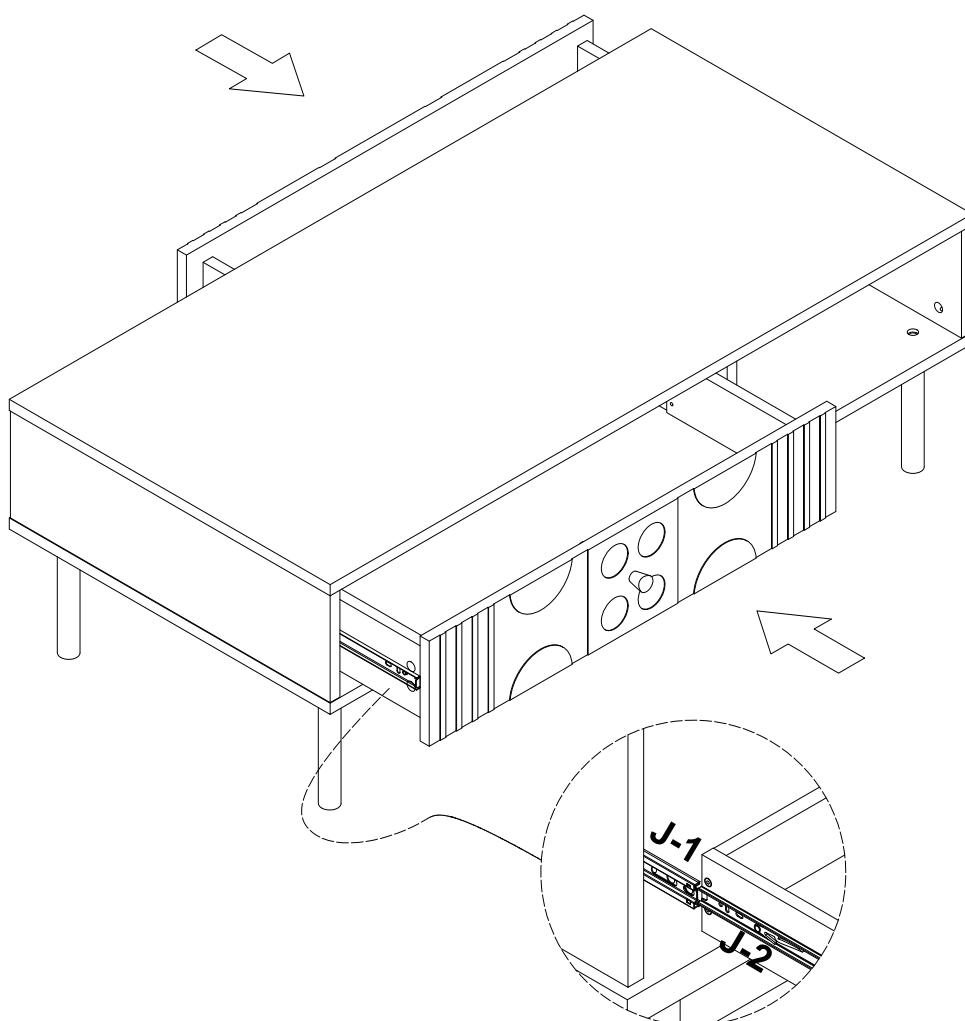

Align the "J-2" with the "J-1"
guideway and gently push it in to
complete the assembly

Thank you for your support!

