




NO.	DRAWING	DESCRIPTION	QTY
<b>A</b>		TABLE TOP	<b>1</b>
<b>B</b>		RIGHT SIDE FRAME	<b>1</b>
<b>C</b>		LEFT SIDE FRAME	<b>1</b>

NO.	DRAWING	DESCRIPTION	QTY
<b>D</b>		PARTITION	<b>1</b>
<b>E</b>		SHELF	<b>2</b>
<b>F</b>		BACK PANEL	<b>1</b>

NO.	DRAWING	DESCRIPTION	QTY
<b>G</b>		<b>M6x35MM BOLT</b>	<b>8</b>
<b>H</b>		<b>M6x20MM BOLT</b>	<b>2</b>
<b>I</b>		SHELF CLIP	<b>8</b>
<b>J</b>		ALLEN KEY	<b>1</b>

NO.	DRAWING	DESCRIPTION	QTY
<b>K</b>		BRACE PLATE	<b>2</b>
<b>L</b>		4x15 SCREW	<b>4</b>
<b>M</b>		ANTI-TIP	<b>1</b>

## Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.


## Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish

## Step 3


Lay Table Top Assembly (A) upside down on a non abrasive surface. Attach Right Side Frame (B) to Table Top (A) using 2-M6x35MM Hex Bolts (H).NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

Attach Left Side Frame (C) to Table Top (A) using 2-M6x45MM Hex Bolts (H). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

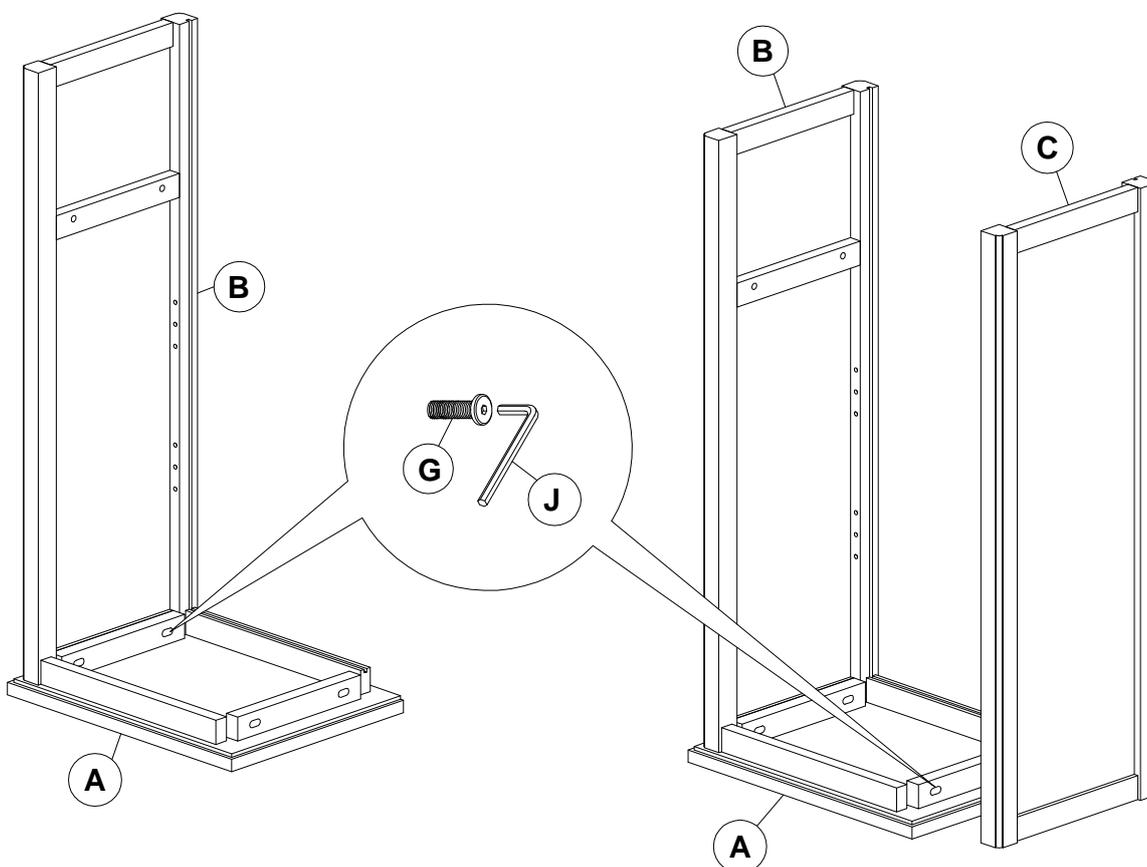


## Step 4

Attach Partition Shelf (D) to Side Frame (B)&(C) using 4-M6x35MM Hex Bolts (G). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME ! Align Back Panel (F) with grooves in Side Frame Assembly (B)&(C)-Slide Back panel (F) into place. Thread 2-M6x20MM Hex Bolts (H) thru Back Panel (F) in to threaded inserts in back edge of Partition Shelf (D). NOTE: TIGHTEN ALL BOTLS AT THIS TIME !

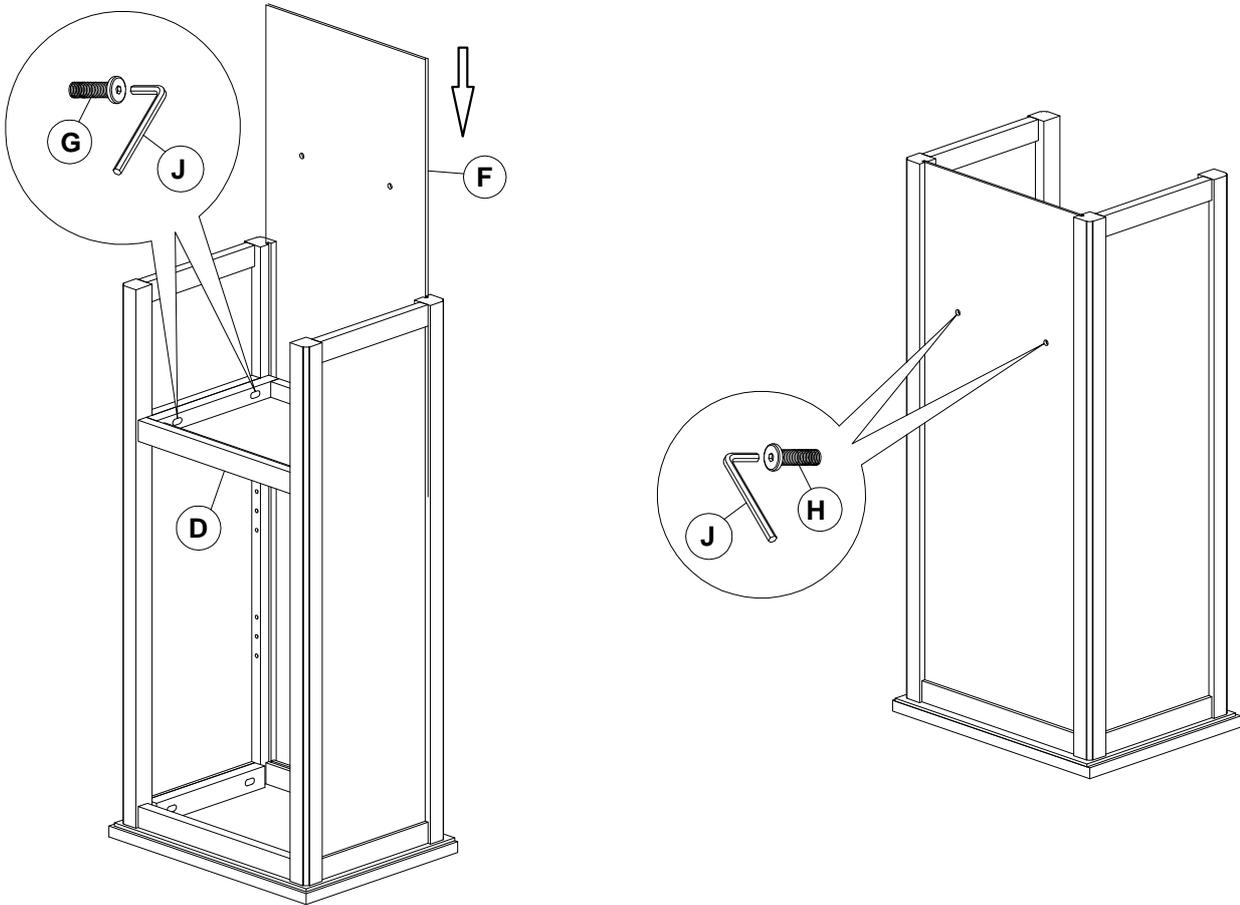


## Step 5

Insert 8-Shelf Clips (I) in Holes on Side Frames (B)&(C) at desired location. Place Shelves (E) on Shelf Clips (I).

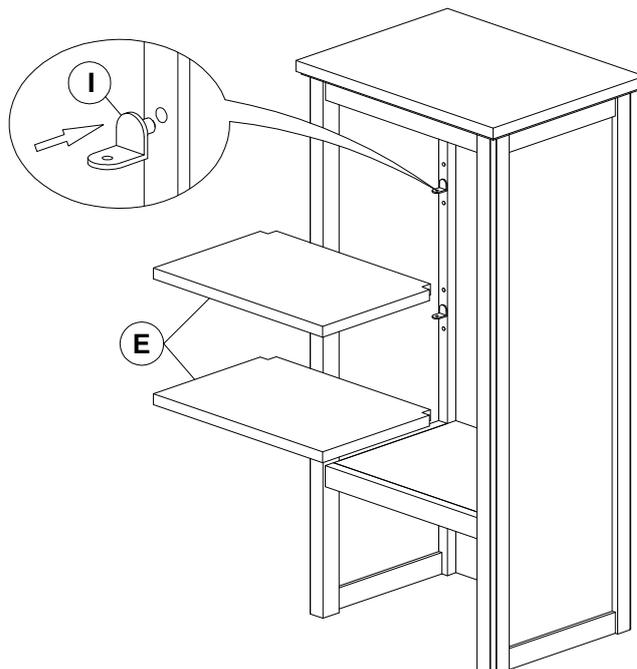

## Step 6

Attach to Storage Base using 2-Brace Plates (L) and 4-4x15MM Screws (M).

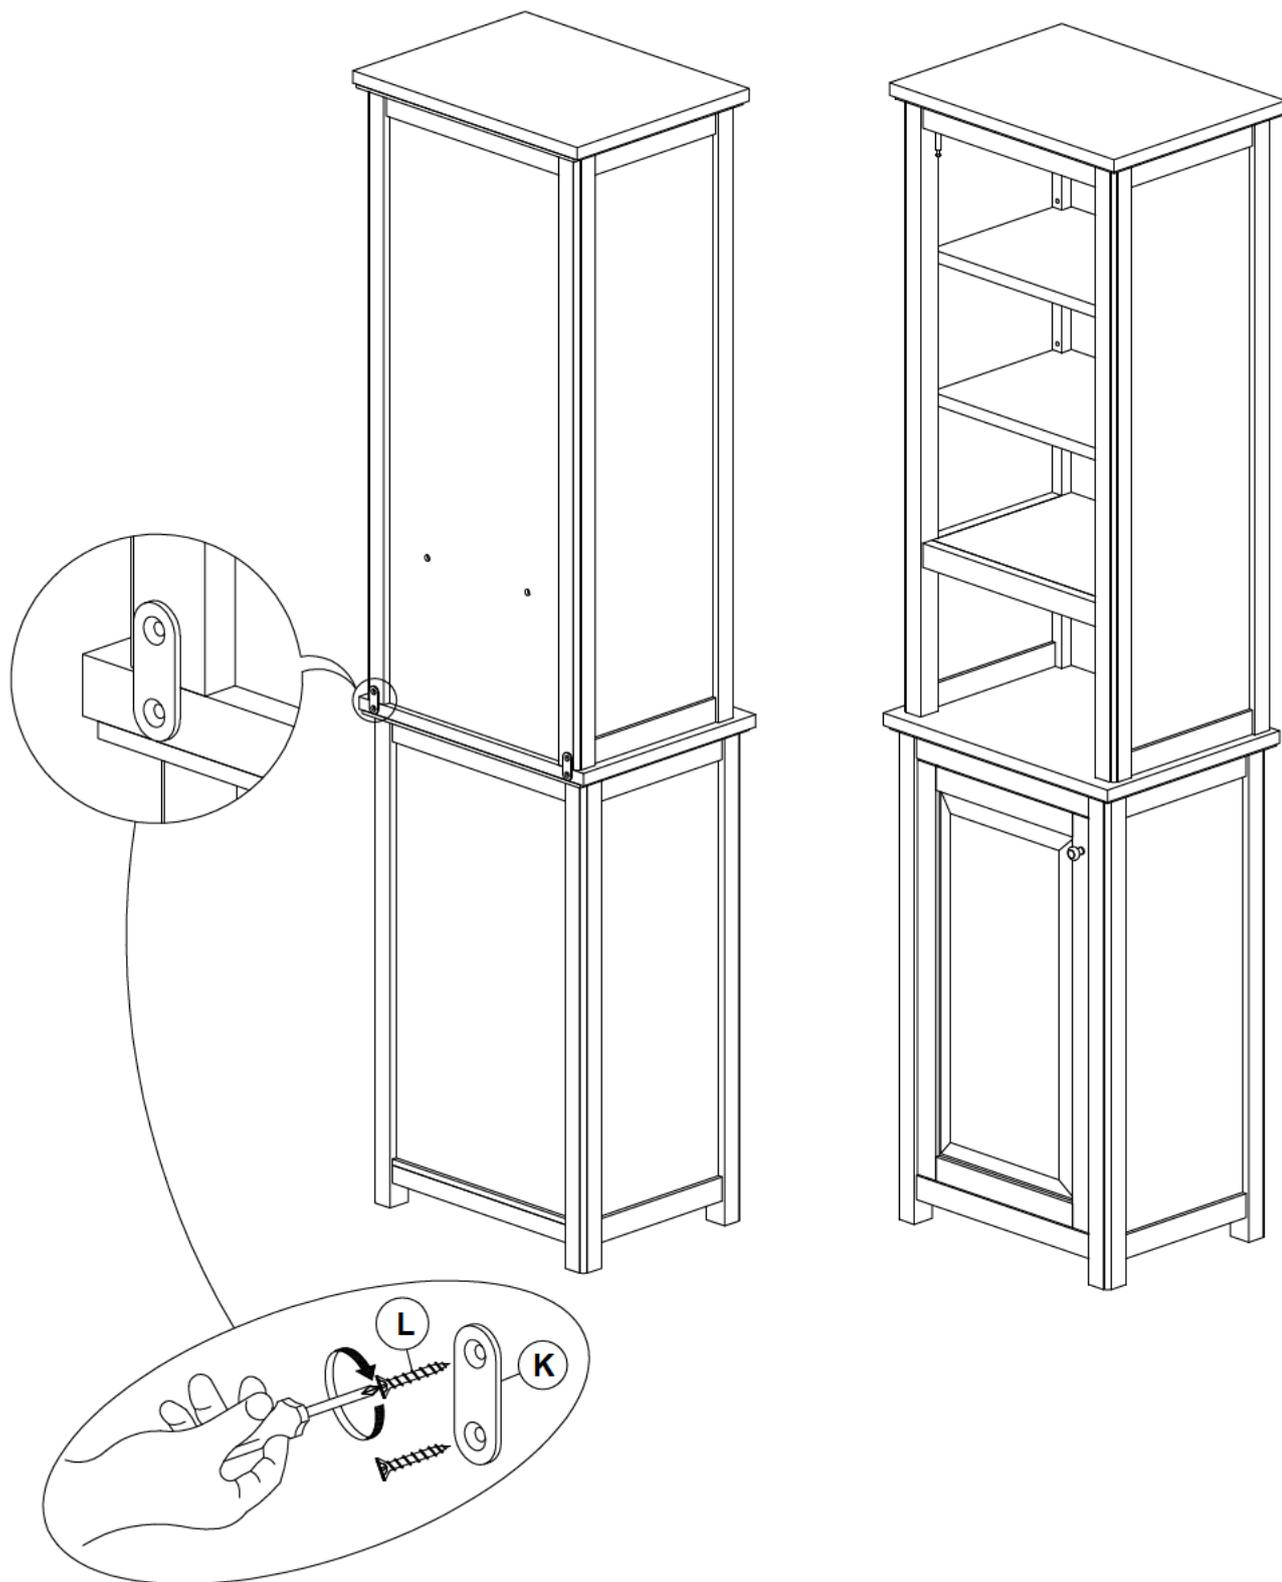

---

## CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.