

# MOUNTING INSTRUCTIONS

## 98-B2800 & 98-B2800/SIL (BASE, SCONCE)


**CAUTION:** A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT MUST INSTALL THIS SCONCE IN ACCORDANCE WITH ALL APPLICABLE LOCAL CODES AND WITH FULL KNOWLEDGE OF THE HAZARDS INVOLVED.

**WARNING:** THE ELECTRICITY MUST BE DISCONNECTED AT THE MAIN FUSE BOX OR CIRCUIT BREAKER PANEL BEFORE INSTALLATION OF THIS SCONCE BASE – TURNING THE POWER OFF USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.  
THIS SCONCE BASE IS NOT DESIGNED TO SUPPORT EXTERNAL WEIGHT OTHER THAN THE SHADE THAT IT IS PROVIDED WITH.

The 98-B2800 series wall sconce base consists of the following components:

- A.) Wall Sconce base with lamp socket and wiring
- B.) Bracket Bar assembly

**Mounting Procedure** – Attach bracket bar to electrical box using the two machine screws provided. Adjust length of threaded pipe so that only 1/4 inch protrudes through the front of the sconce base. Tighten lower nut to fix the length of the threaded pipe. Connect wiring to electrical service in accordance with all local electrical codes.

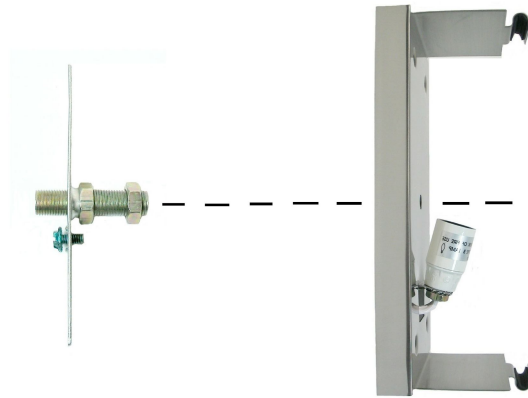

Finally, remove upper nut from threaded pipe. Push sconce base onto threaded pipe and reattach upper nut. Tighten nut securely to hold sconce base to wall.

Alternatively, the sconce base may be attached to the wall directly with screws, using the four recessed holes on the front plate.

### Installing the Sconce Glass Shade –



Insert glass shade into the upper mounting arm as shown in the figure above. Then, while holding the glass straight with the thumbs, push upward until the glass can be seated into the lower mounting arm.