

BED FRAME

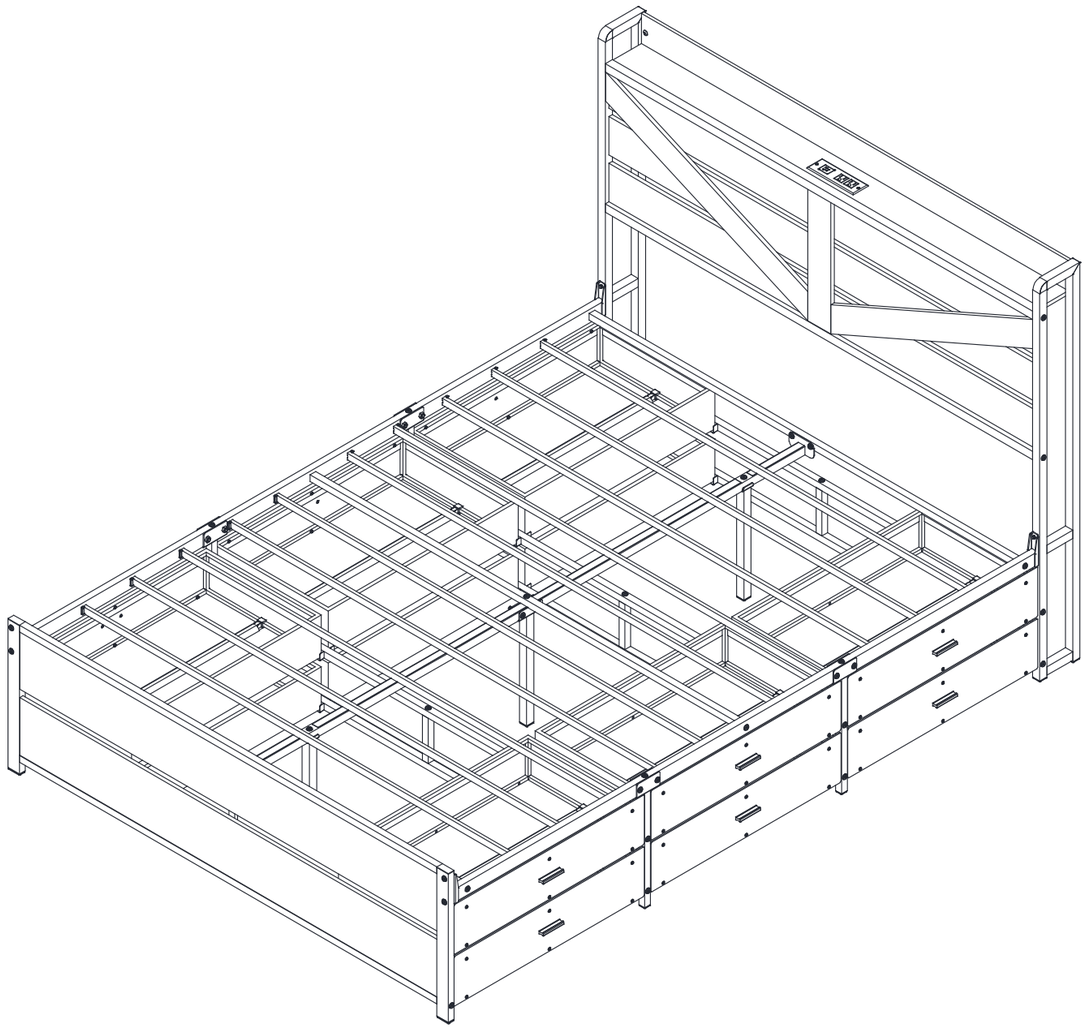

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

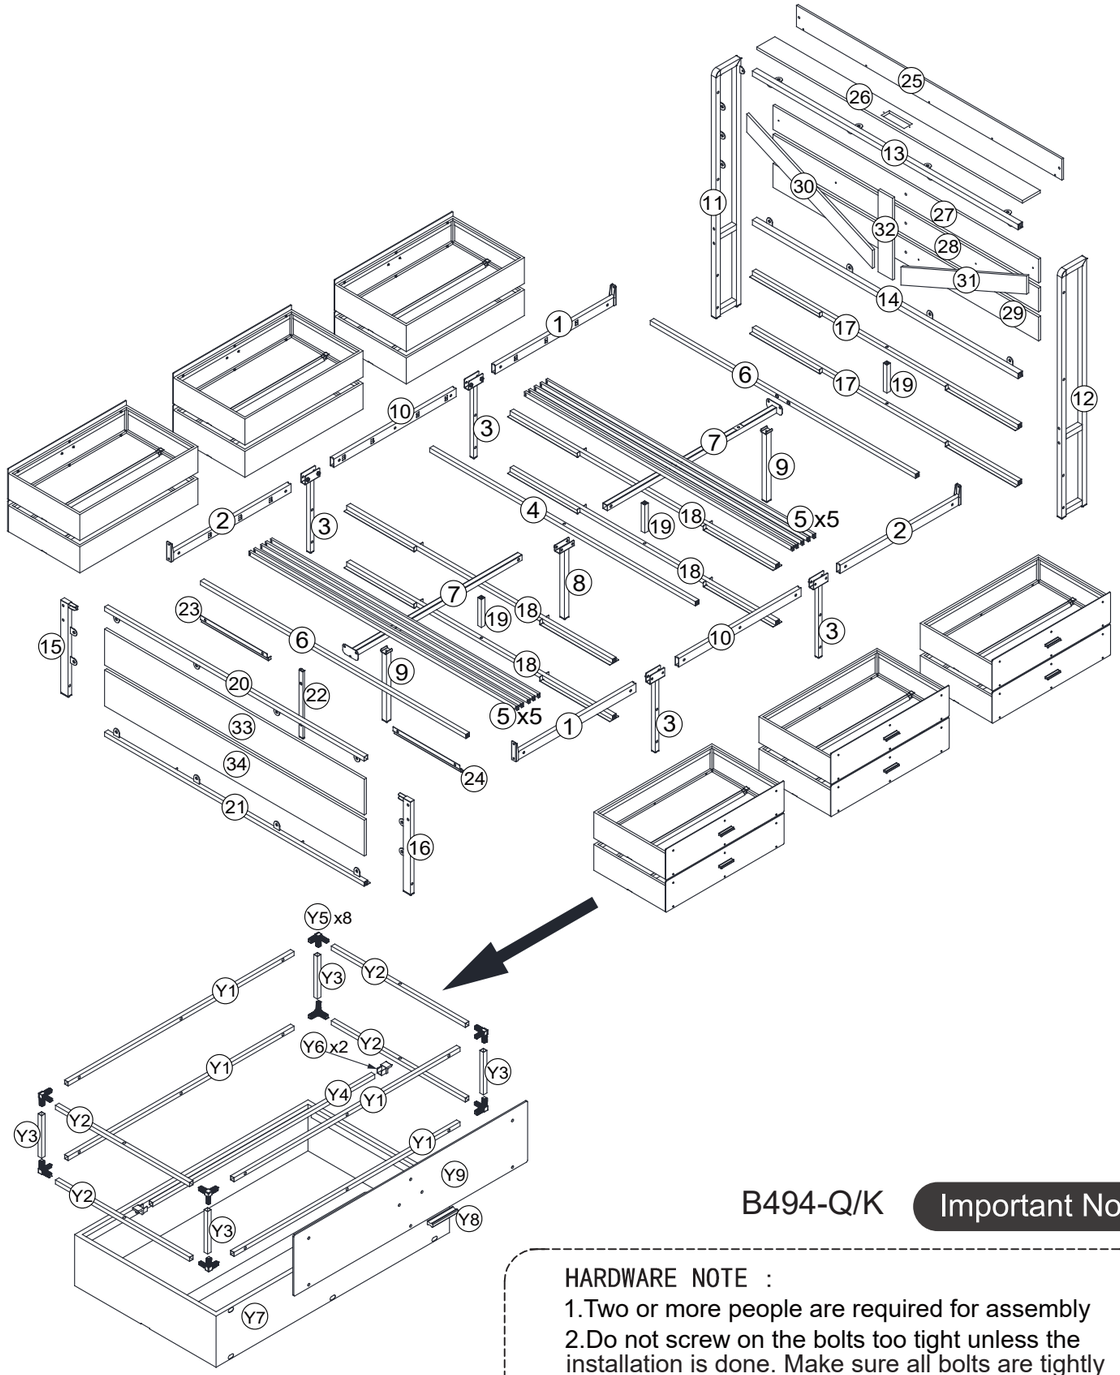

B494-Q/K

Important Note

HARDWARE NOTE :


1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.




Finish


Components

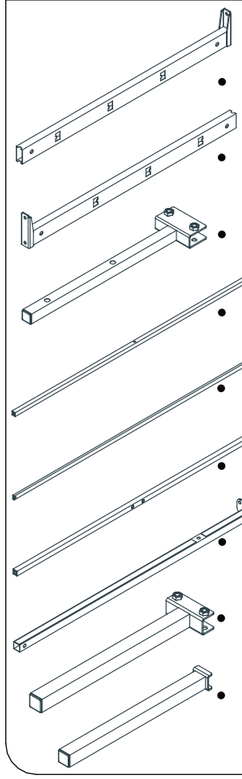


1 x2pcs
2 x2pcs
3 x4pcs
4 x1pc
5 x10pcs
6 x2pcs
7 x2pcs
8 x1pc
9 x2pcs

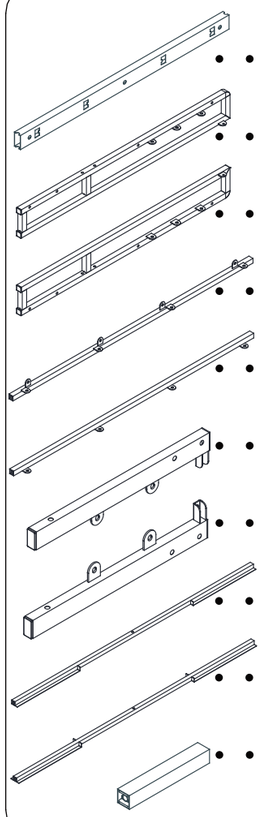


10 x2pcs
11 x1pc
12 x1pc
13 x1pc
14 x1pc
15 x1pc
16 x1pc
17 x2pcs
18 x4pcs
19 x3pcs

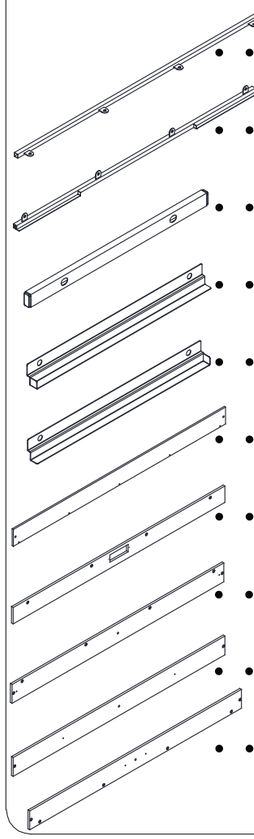

20 x1pc
21 x1pc
22 x1pc
23 x1pc
24 x1pc
25 x1pc
26 x1pc
27 x1pc
28 x1pc
29 x1pc

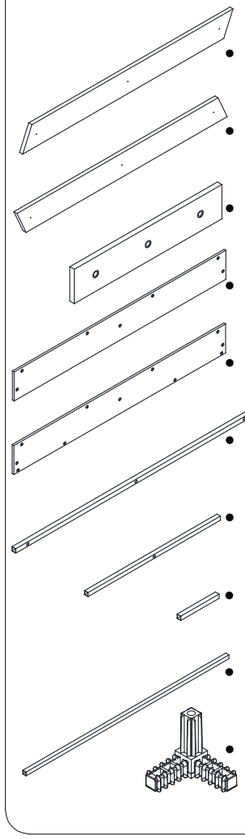

30 x1pc
31 x1pc
32 x1pc
33 x1pc
34 x1pc
Y1 x48pcs
Y2 x48pcs
Y3 x48pcs
Y4 x12pcs
Y5 x96pcs

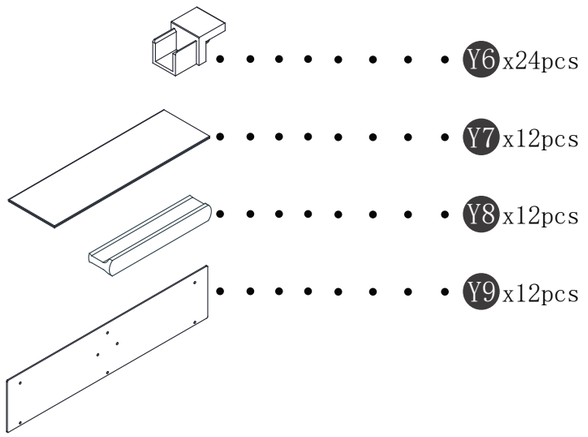



Y6 x24pcs

Y7 x12pcs


Y8 x12pcs


Y9 x12pcs

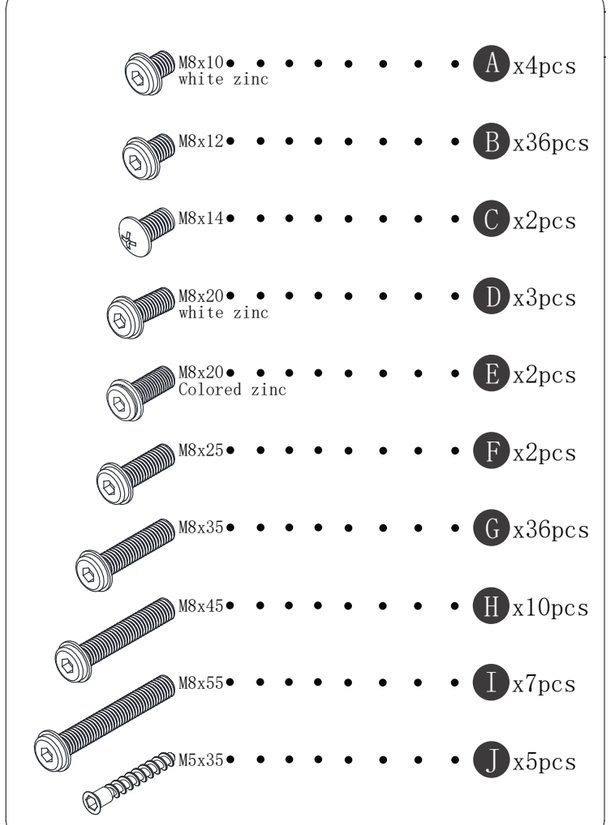


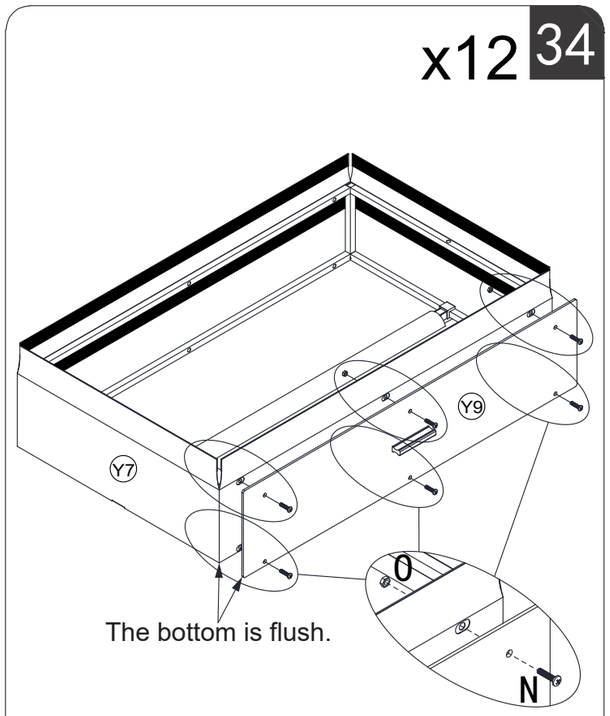


N	M4x18	72pcs
O	M4	72pcs

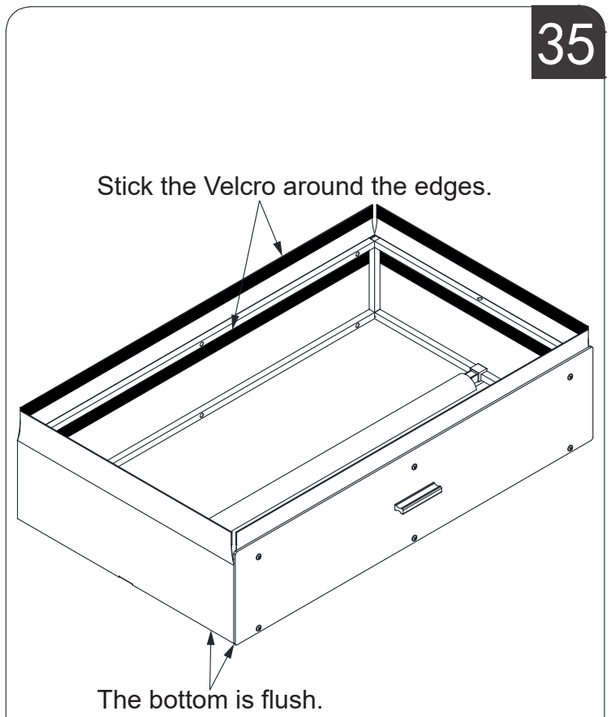

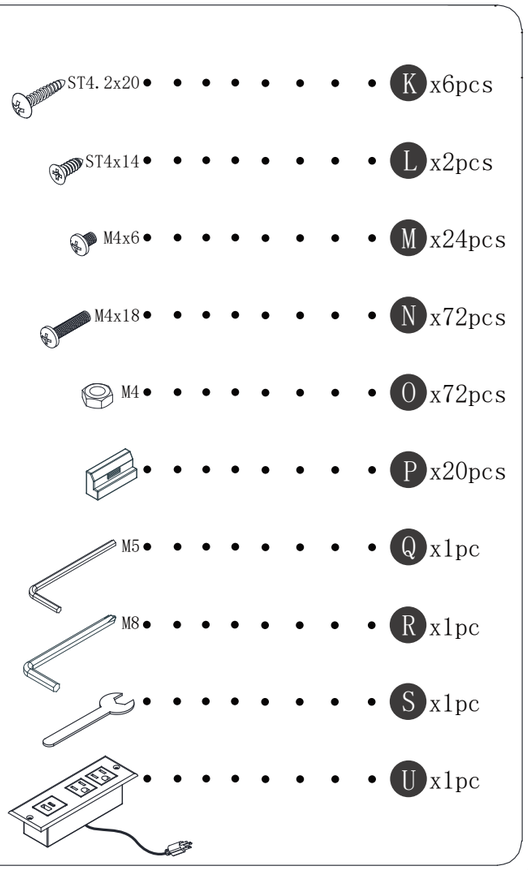


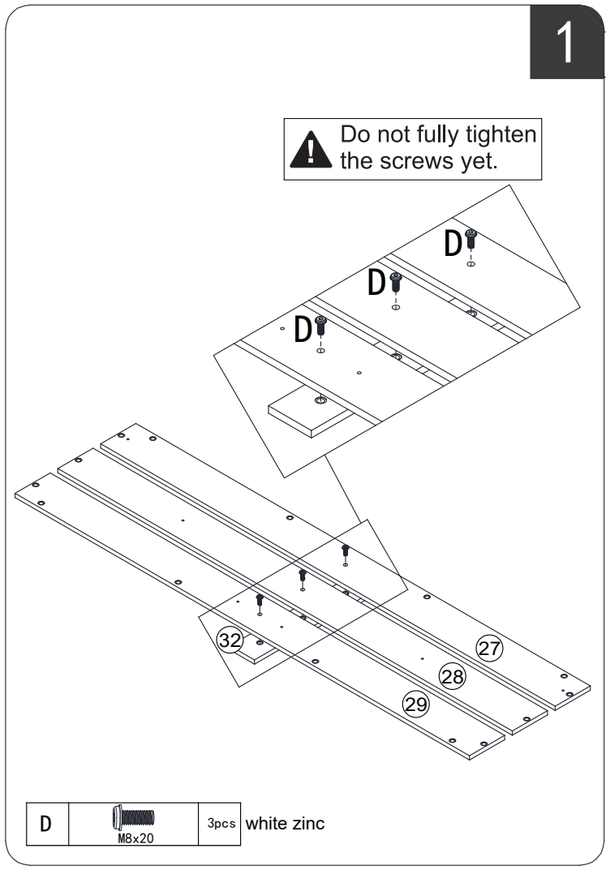


D	M8x20	3pcs	white zinc

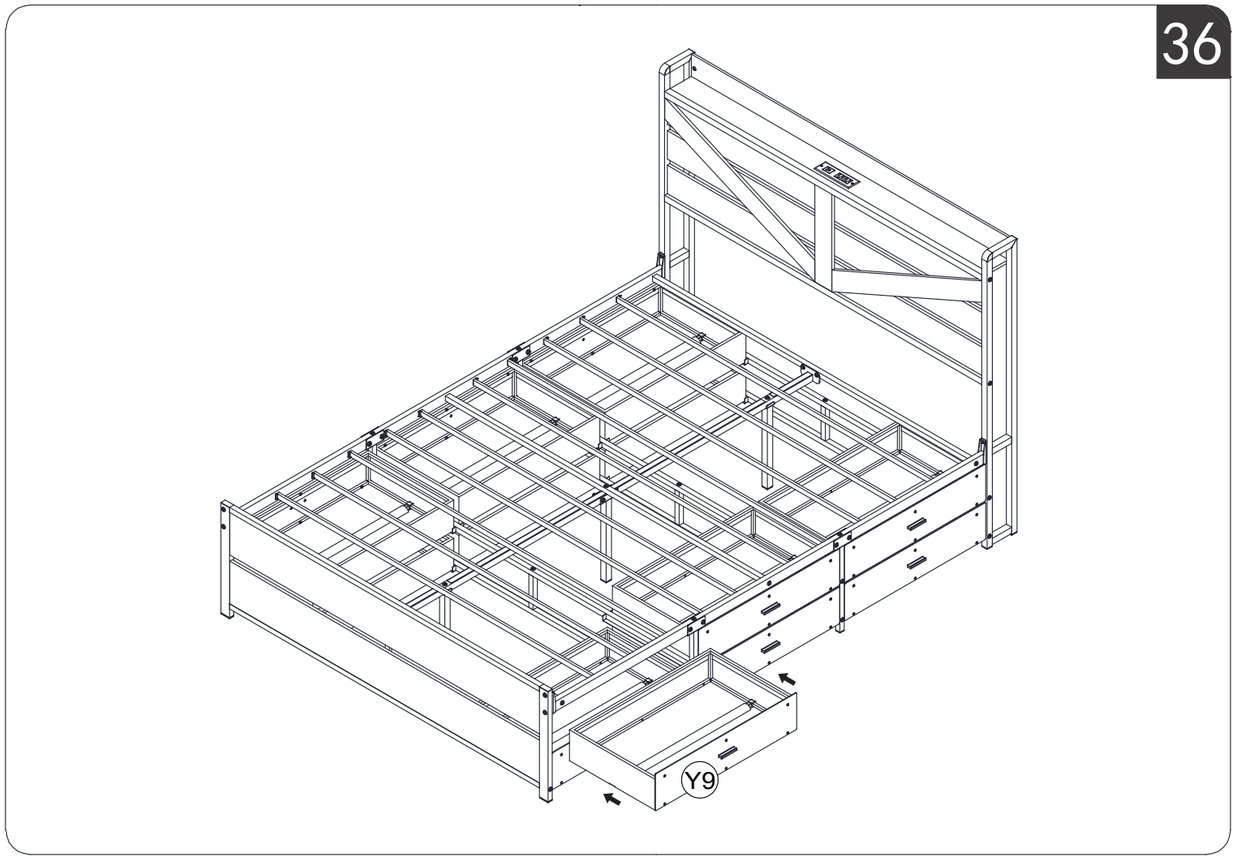

x12 30

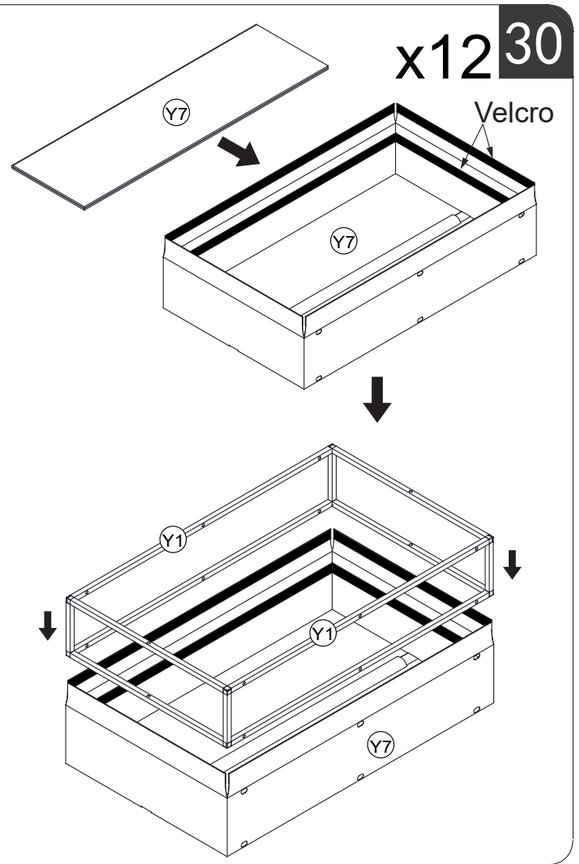


x12 31

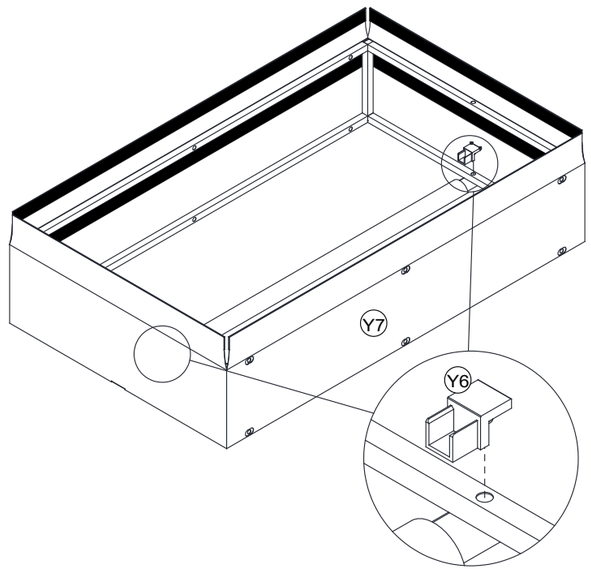

2


⚠ Do not fully tighten the screws yet.

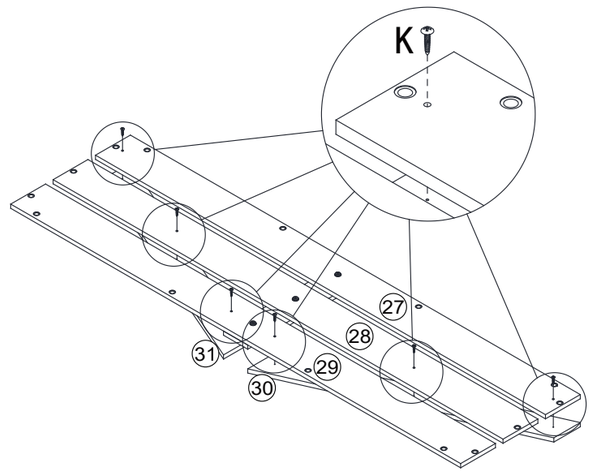

K	ST4. 2x20	6pcs


3

⚠ Do not fully tighten the screws yet.

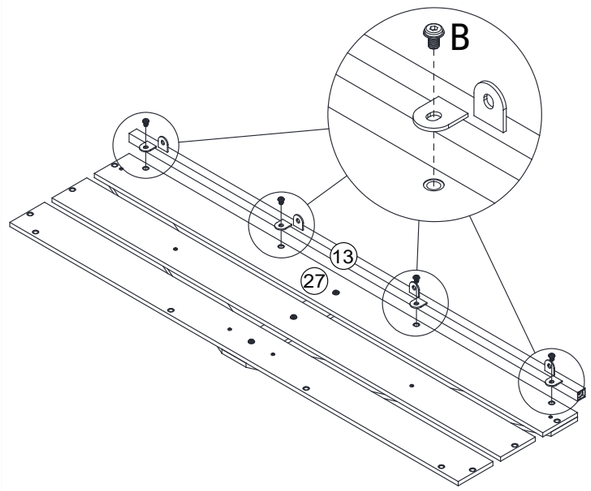


B	M8x12	4pcs

x12 32

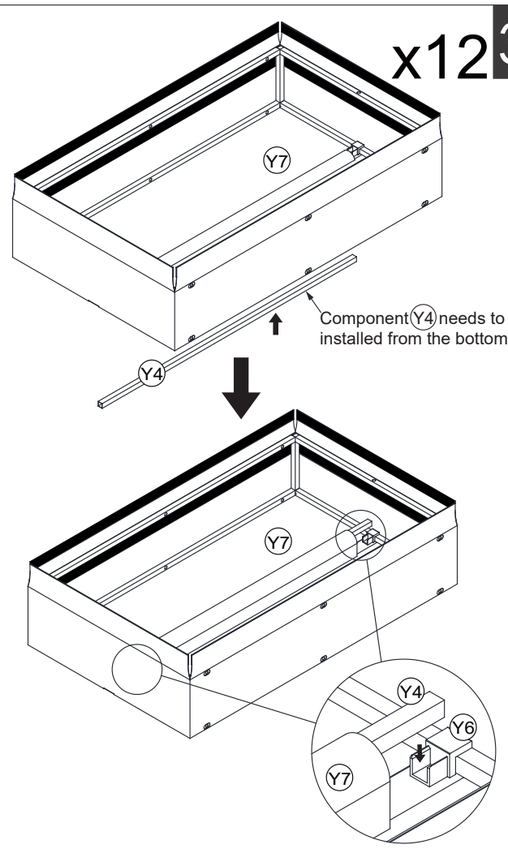


x12 33

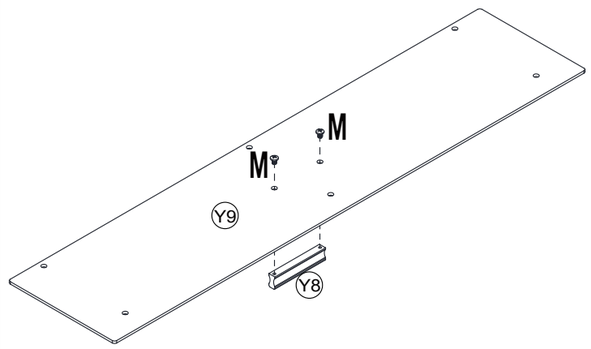

M	M4x6	24pcs


4

⚠ Do not fully tighten the screws yet.

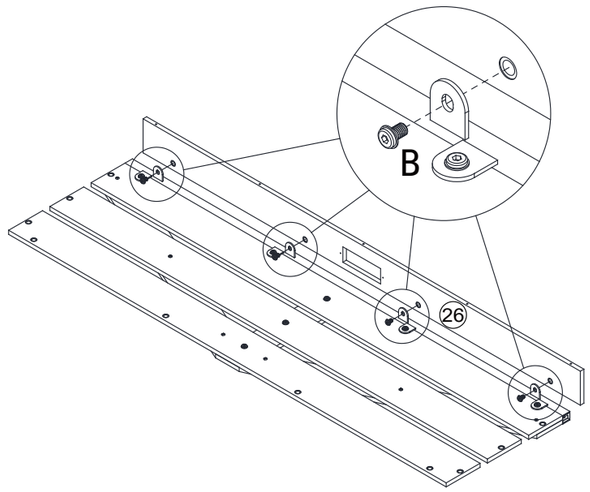


B	M8x12	4pcs

5

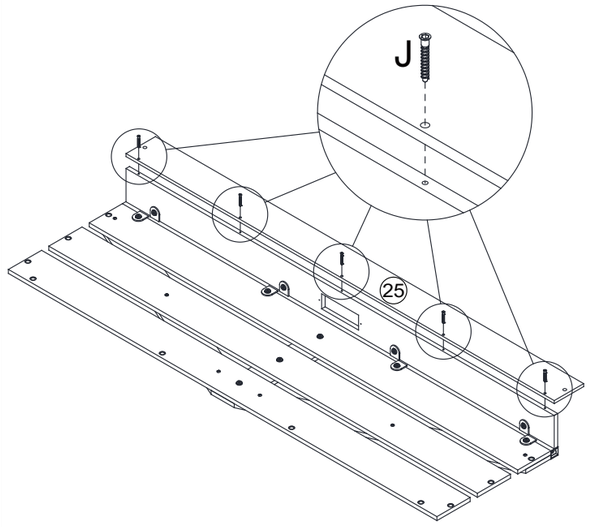

J	M5x35	5pcs


6

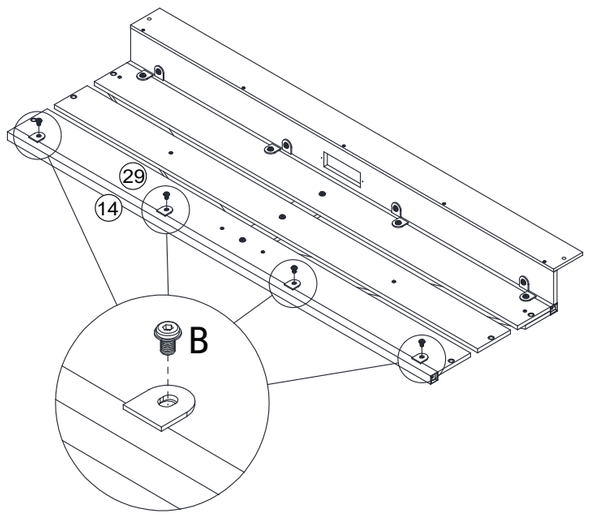

Do not fully tighten the screws yet.

B	M8x12	4pcs


7

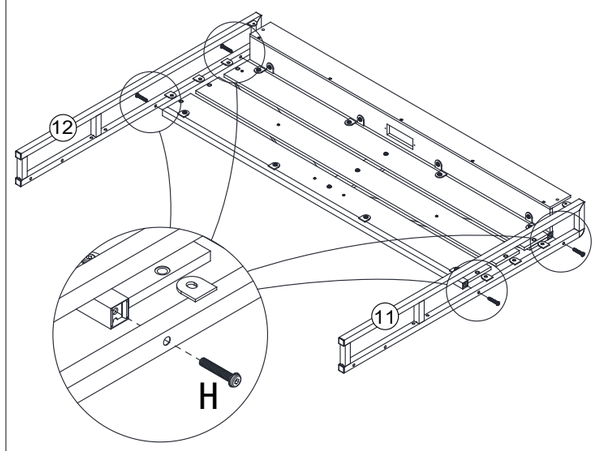

Do not fully tighten the screws yet.

H	M8x45	4pcs


26

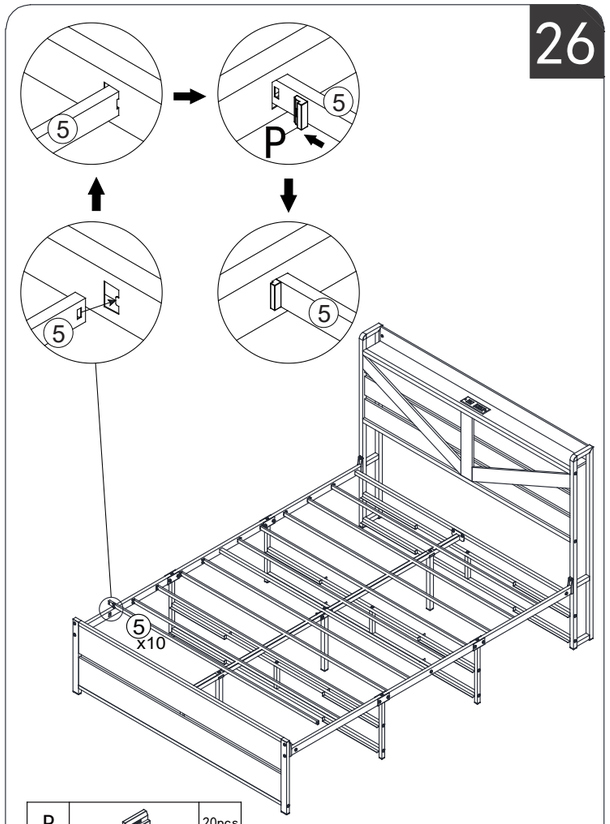

P		20pcs

x24 27


Pay attention to the orientation of the holes.

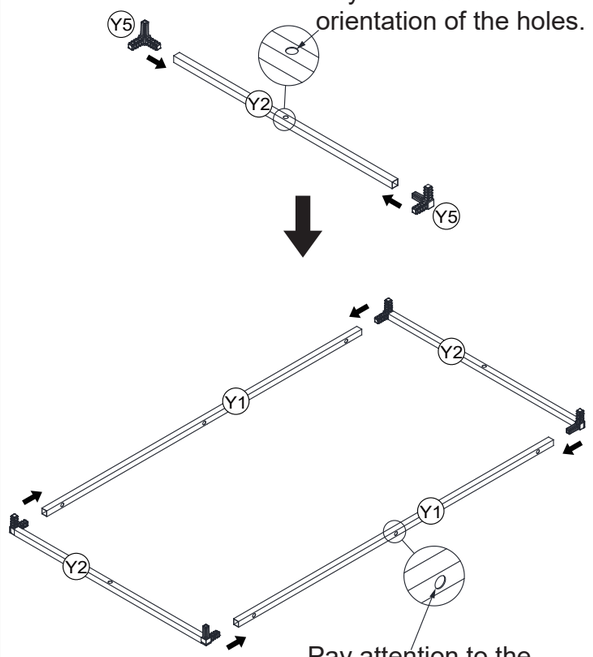

Pay attention to the orientation of the holes.


8

Do not fully tighten the screws yet.

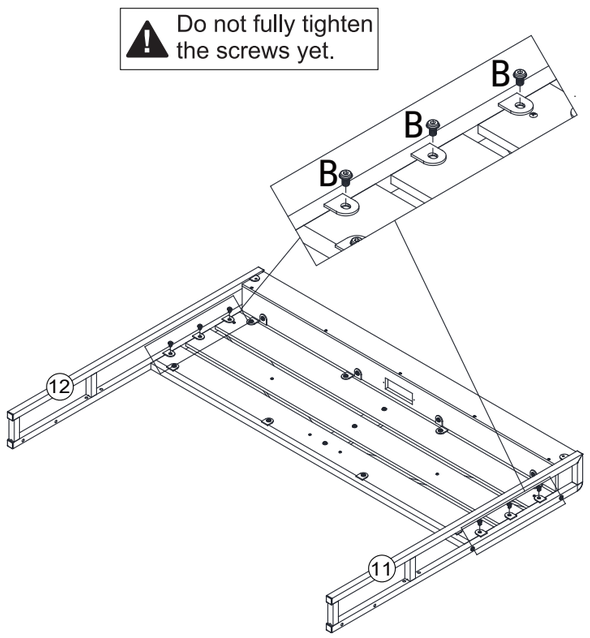

B	M8x12	6pcs


9

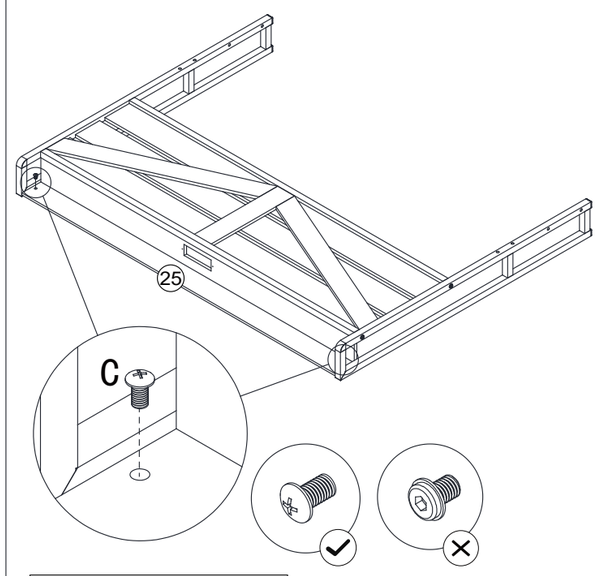


Fully tighten all the screws.

C	M8x14	2pcs


x12 28

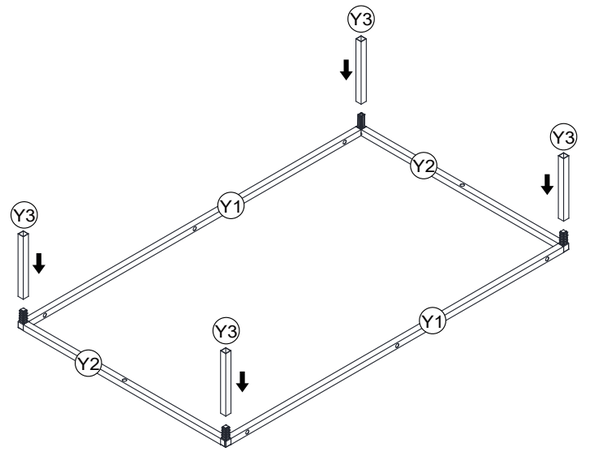

x12 29

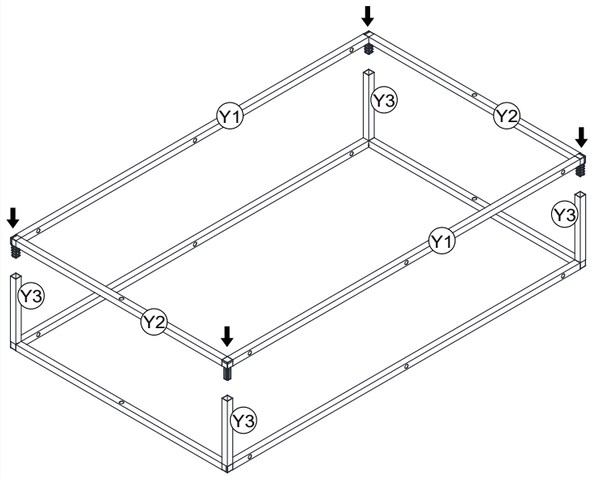

22

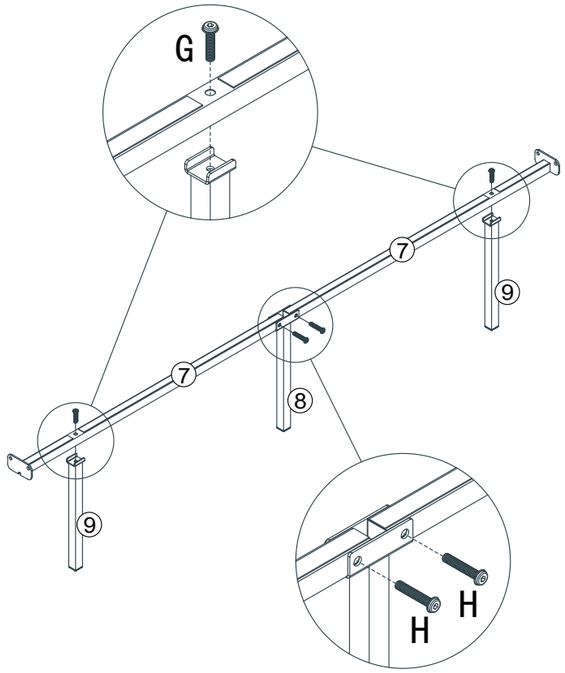


G	M8x35	2pcs
H	M8x45	2pcs

⚠ Do not fully tighten the screws yet.


23

⚠ Fully tighten all the screws.

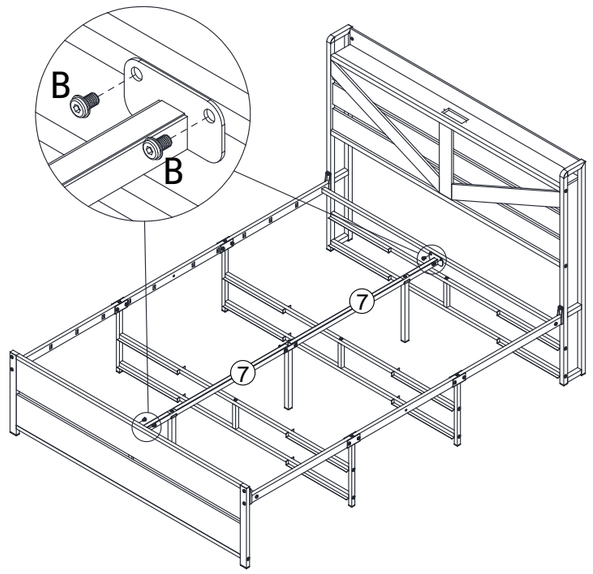


B	M8x12	4pcs

10

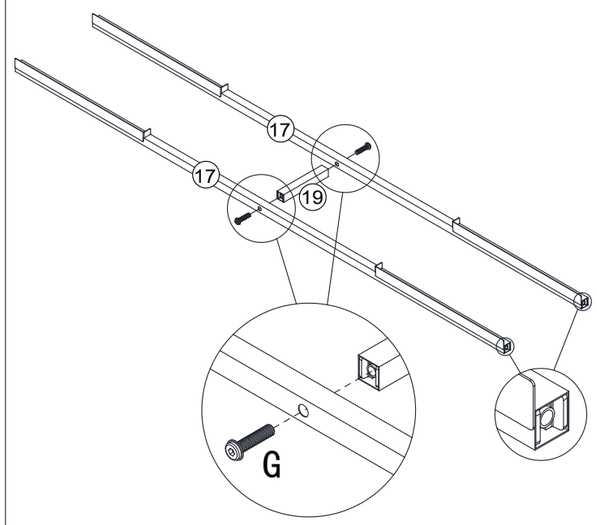


G	M8x35	2pcs

11

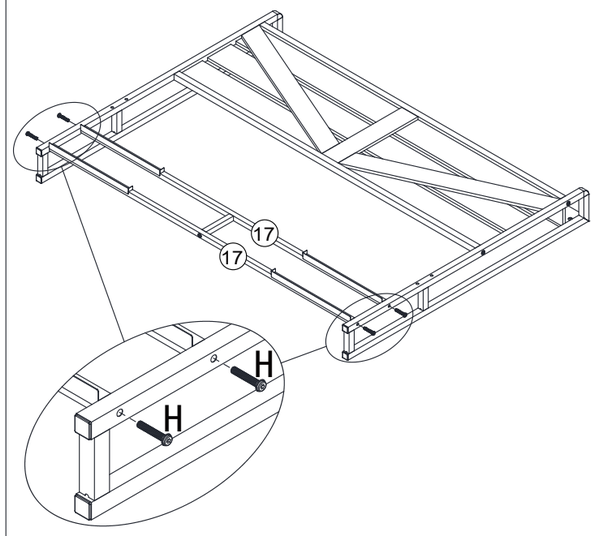


H	M8x45	4pcs

24

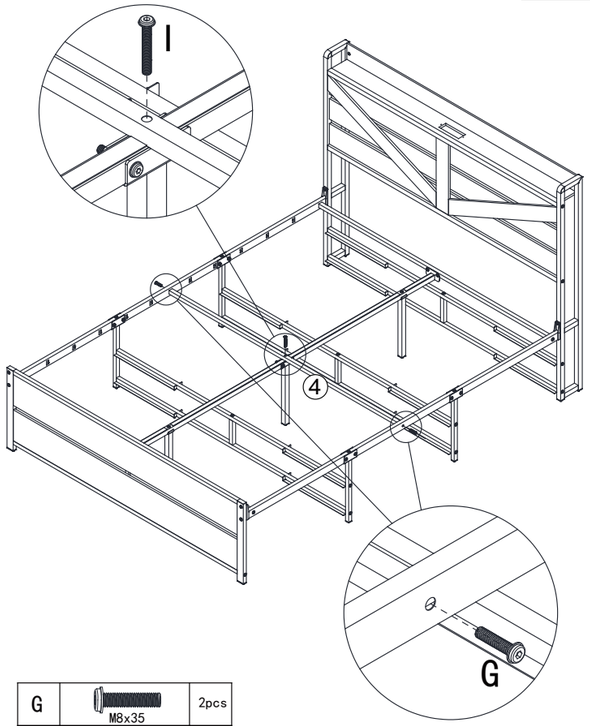

G	M8x35	2pcs
I	M8x55	1pc


25

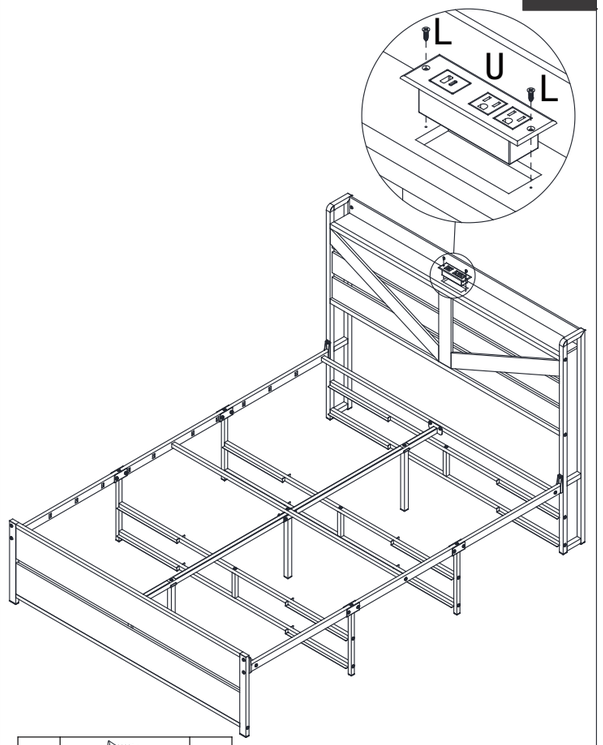

L	ST4x14	2pcs

12


x2

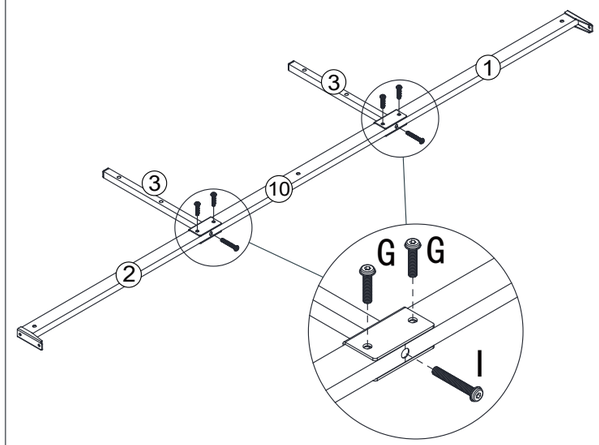

G	M8x35	8pcs
I	M8x55	4pcs

13


⚠ Do not fully tighten the screws yet.

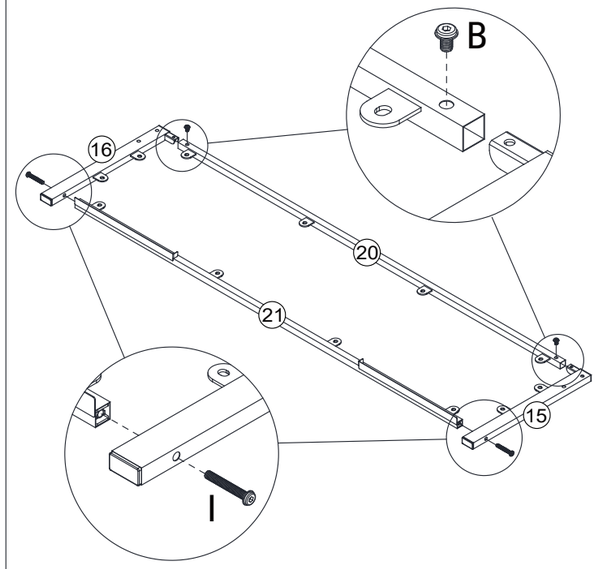

B	M8x12	2pcs
I	M8x55	2pcs


14

Fully tighten all the screws.

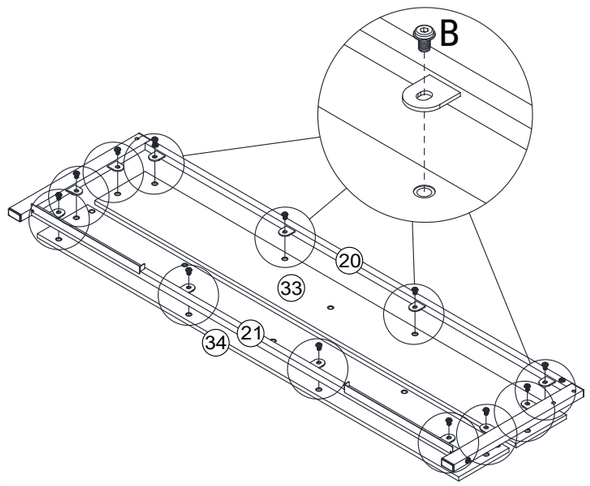


B	M8x12	12pcs

15

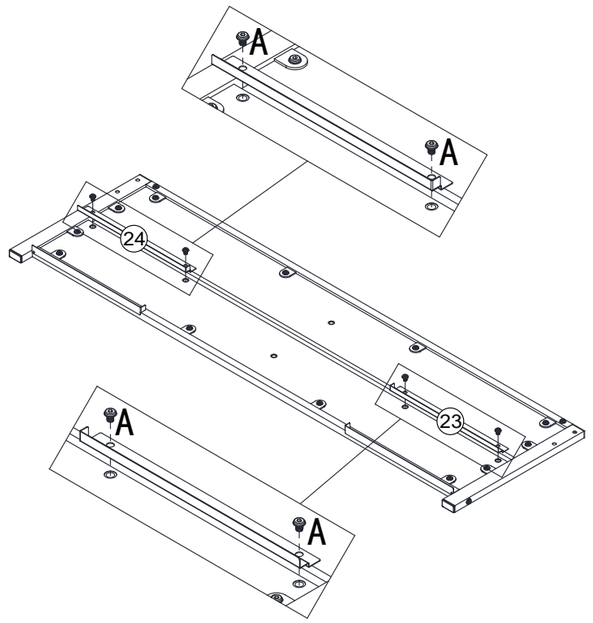

A	M8x10	4pcs	white zinc


18

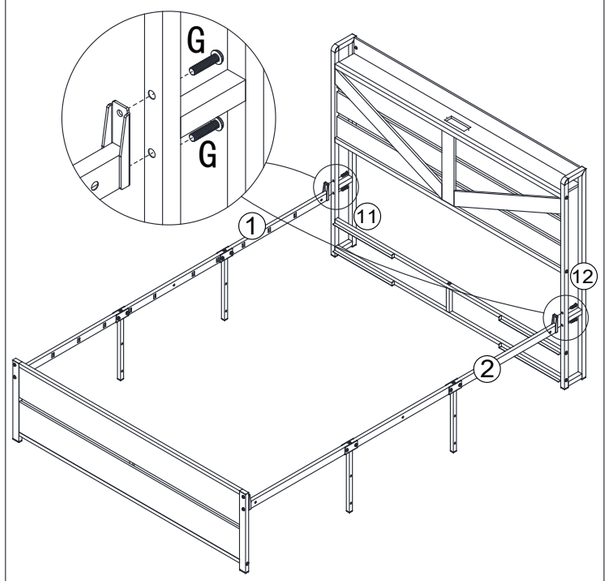

G	M8x35	4pcs


19

x2

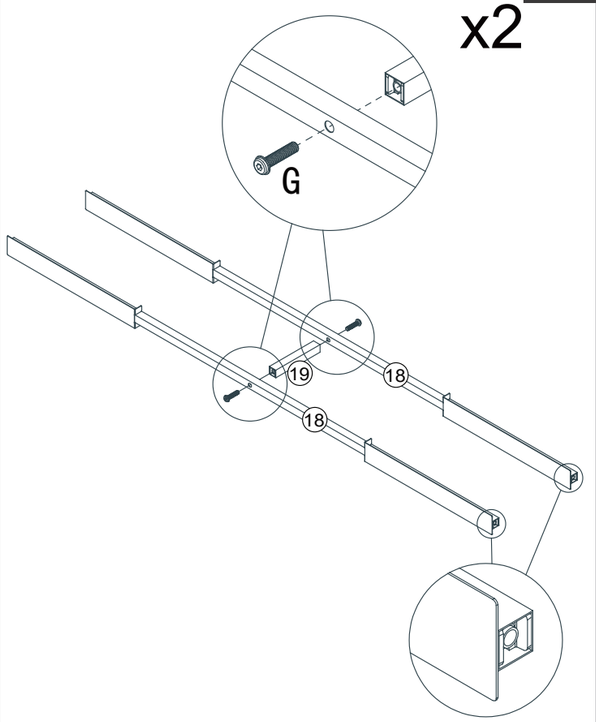


G	M8x35	4pcs

16

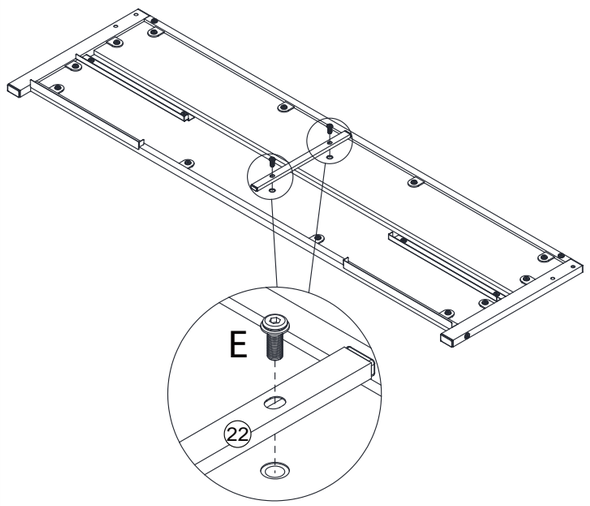


E	M8x20	2pcs	Colored zinc

17

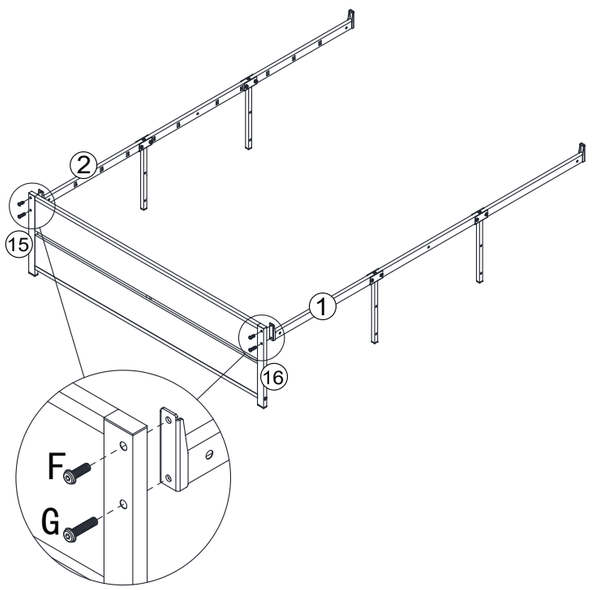


F	M8x25	2pcs
G	M8x35	2pcs

20

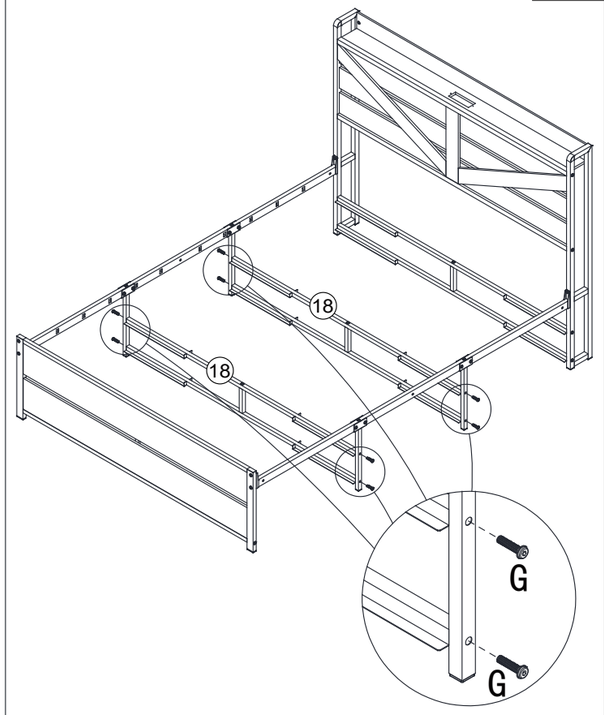

G	M8x35	8pcs

21

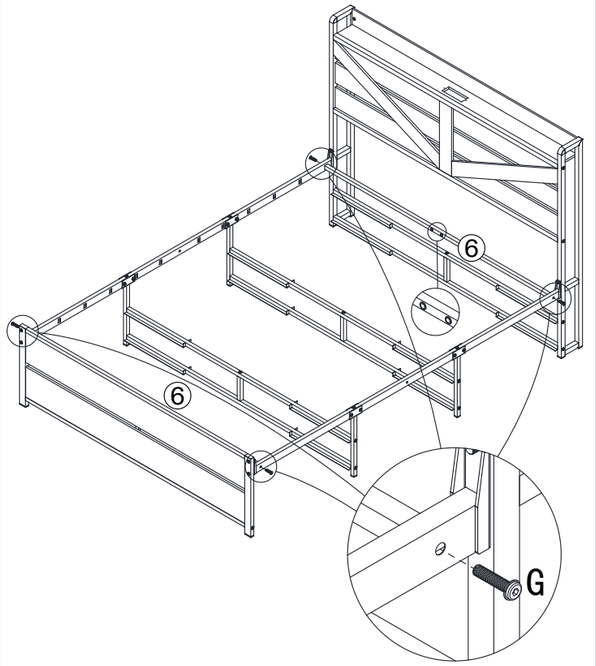

G	M8x35	4pcs