

# BOOKSHELF


## ASSEMBLY INSTRUCTION



- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.  
2. This product is for home use only and not intended for commercial establishment.

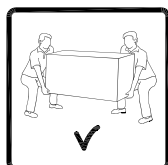

PARTS IDENTIFICATION:

NEL

1PC

3PCS






1PC

2PCS





2PCS

1PC


1PC

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1PC	4	SCREW $\varnothing$ 4.5x42mm		8PCS
2	WOODEN DOWEL $\varnothing$ 8x30mm		36PCS	5	STICKER $\varnothing$ 20mm		6PCS
3	BOLT $\varnothing$ 9.5x55mm		28PCS				

# ASSEMBLY INSTRUCTION


Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
6	ANTI-TIP STRAP 170x15mm		2PCS	8	WALL SCREW Ø4x25mm		2PCS
7	WALL PLUG 6x30mm		2PCS	9	SCREW Ø4x16mm		2PCS

## STEP 1 :

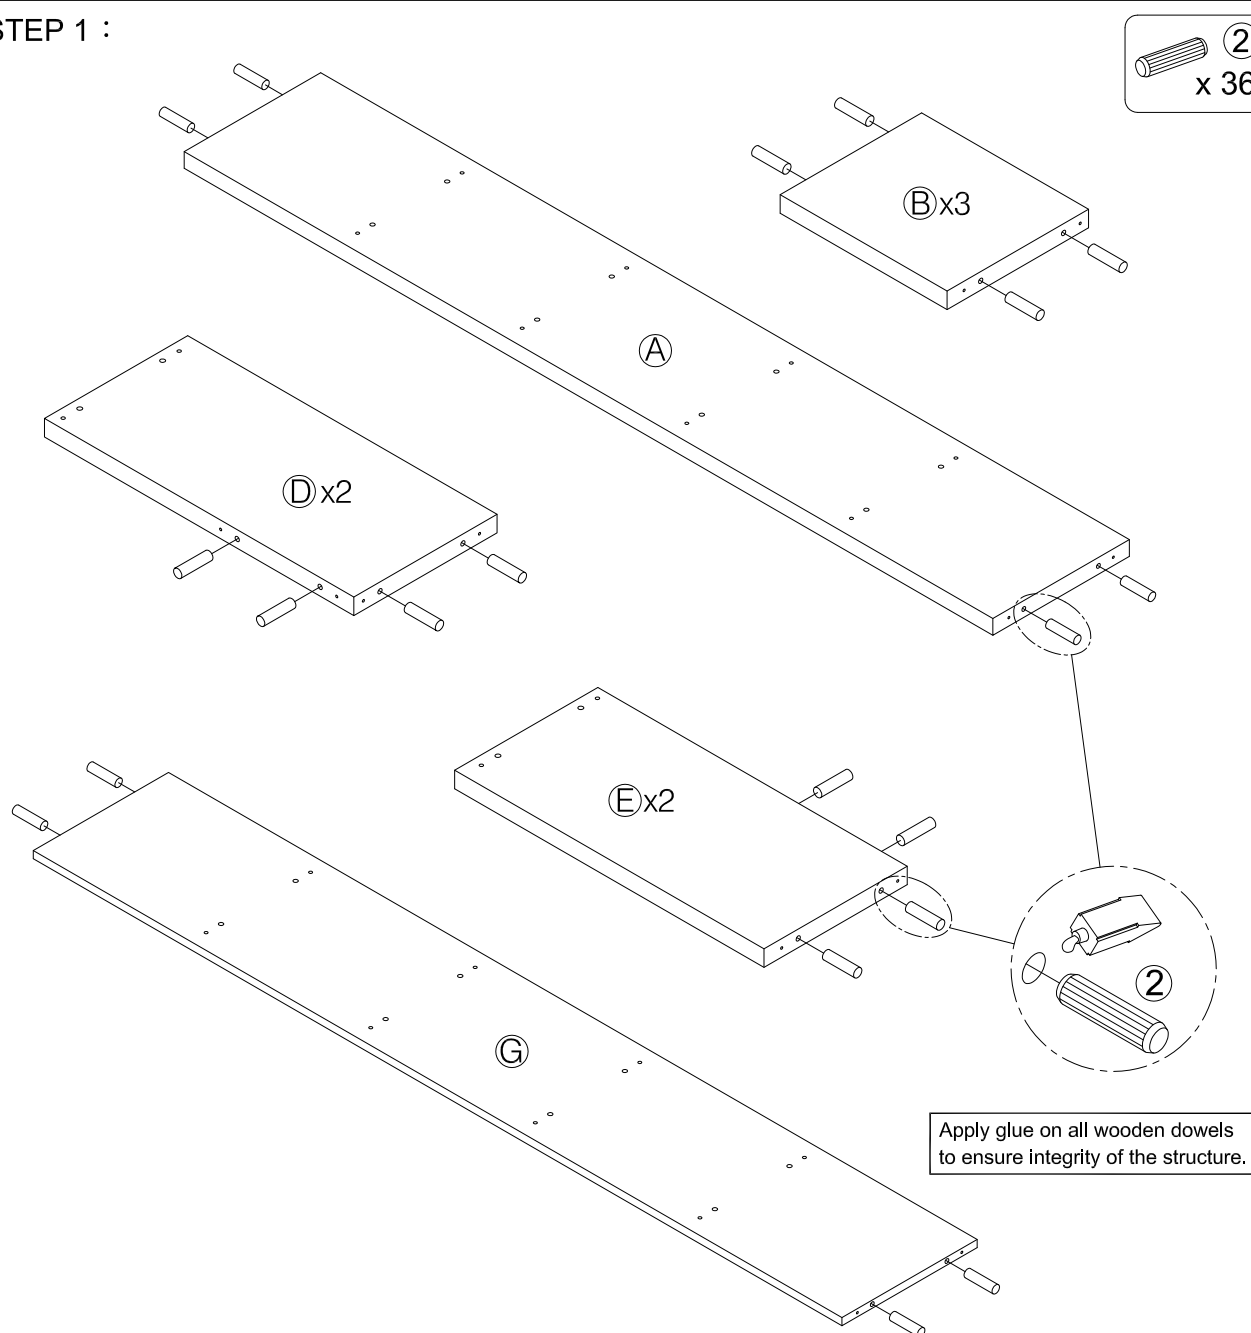


## ASSEMBLY INSTRUCTION

### STEP 2 :



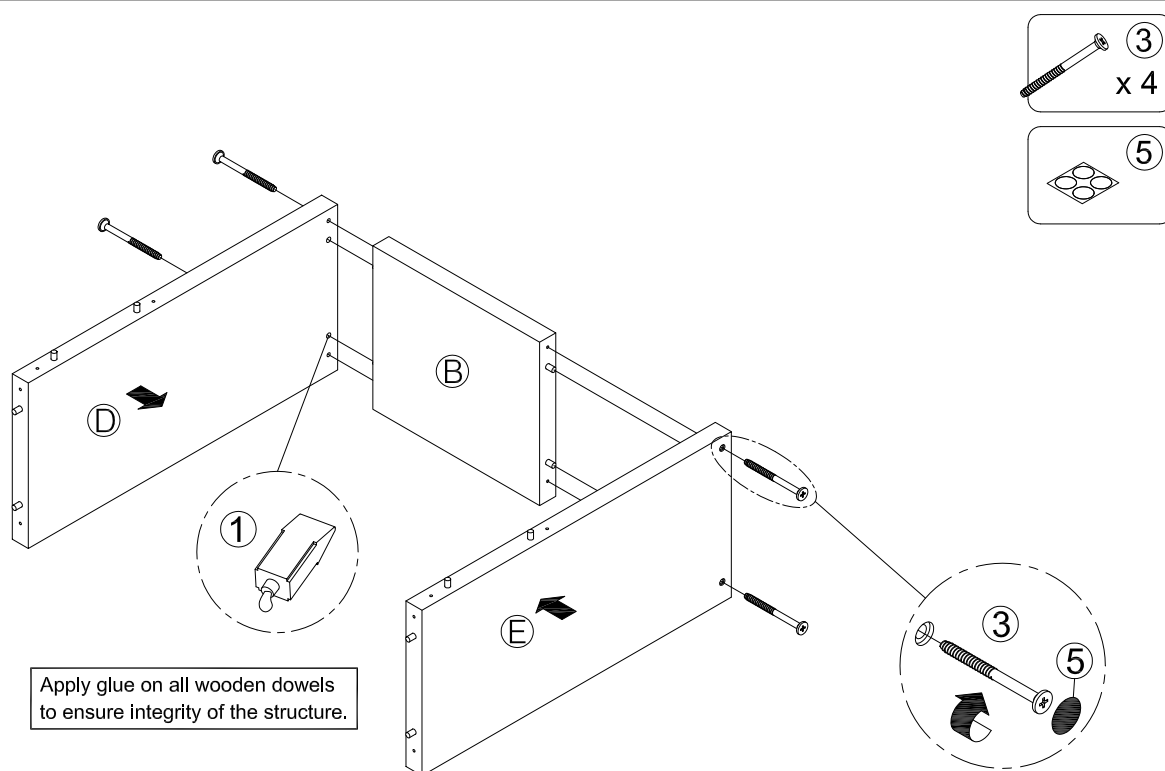


### STEP 3 :

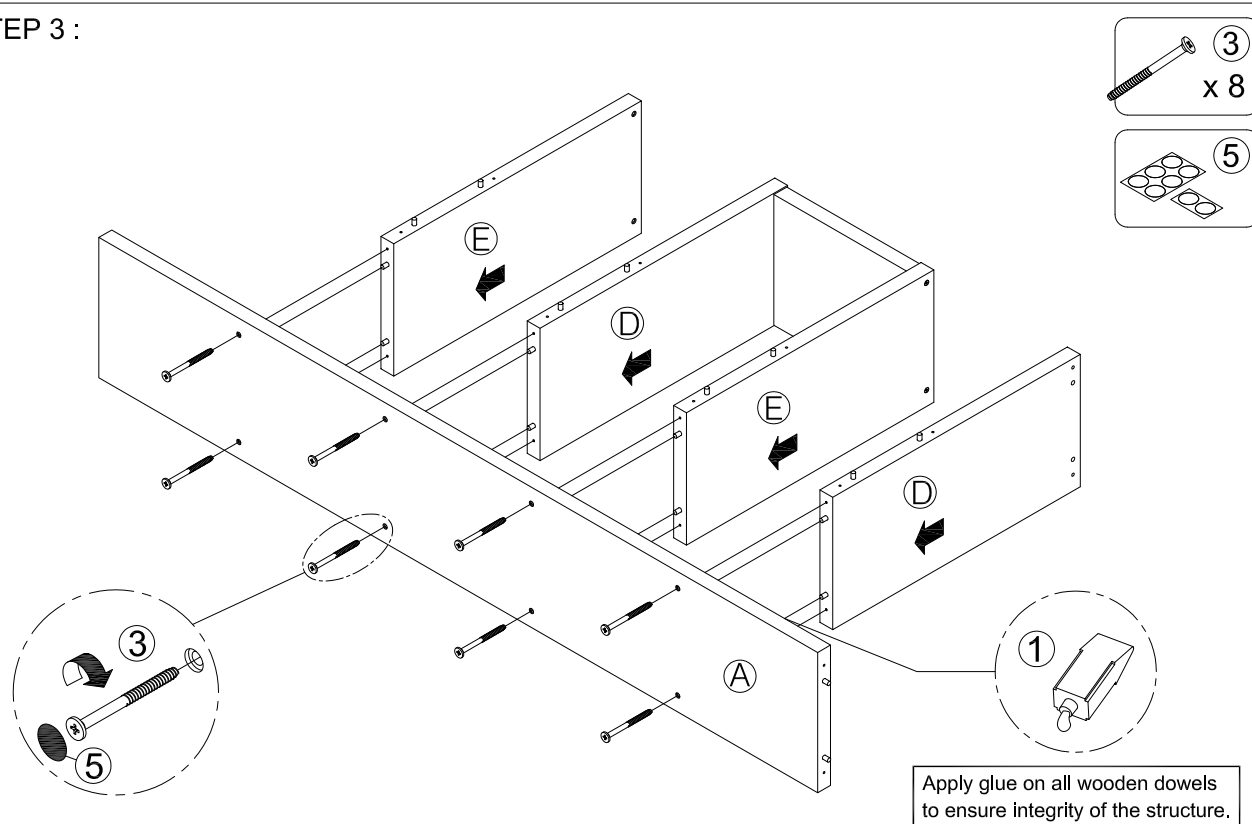




# ASSEMBLY INSTRUCTION

## STEP 4 :

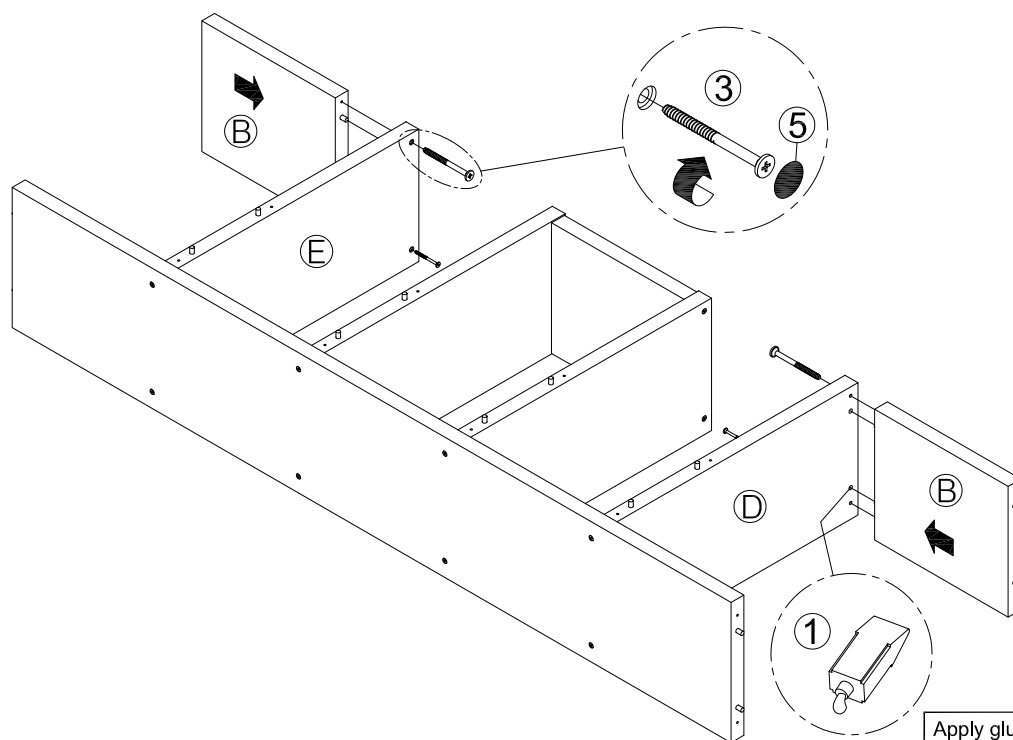


Apply glue on all wooden dowels to ensure integrity of the structure.

## STEP 5 :

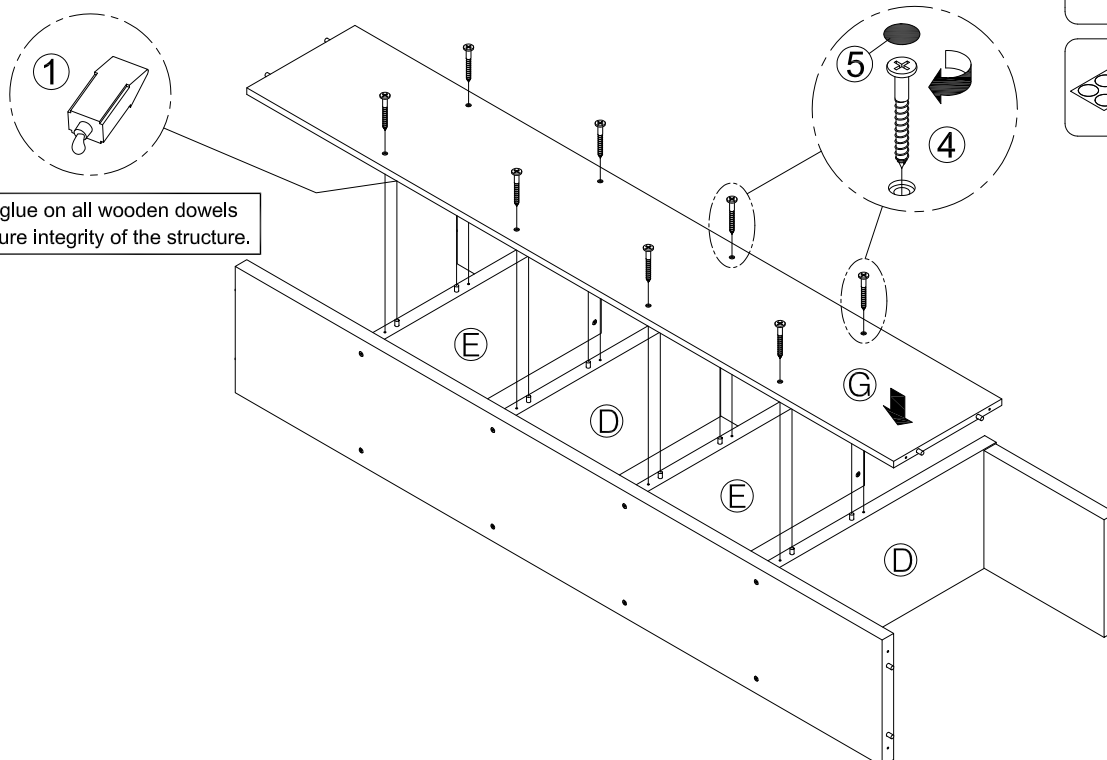

Apply glue on all wooden dowels to ensure integrity of the structure.

## STEP 6 :

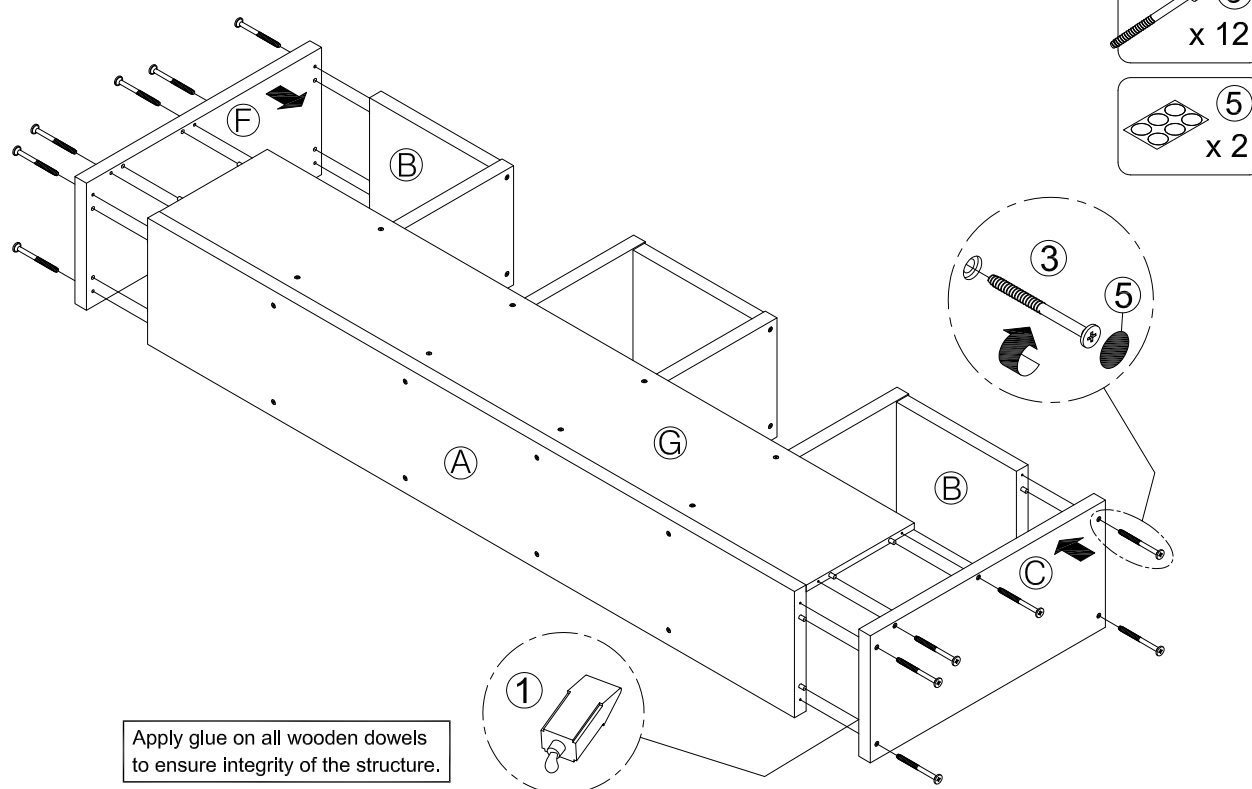

## STEP 7 : ATTENTION: ANTI TIPPING SAFEGUARD

Please install the anti-tipping hardware as shown in the drawing. This can help to prevent any tipping issues.

