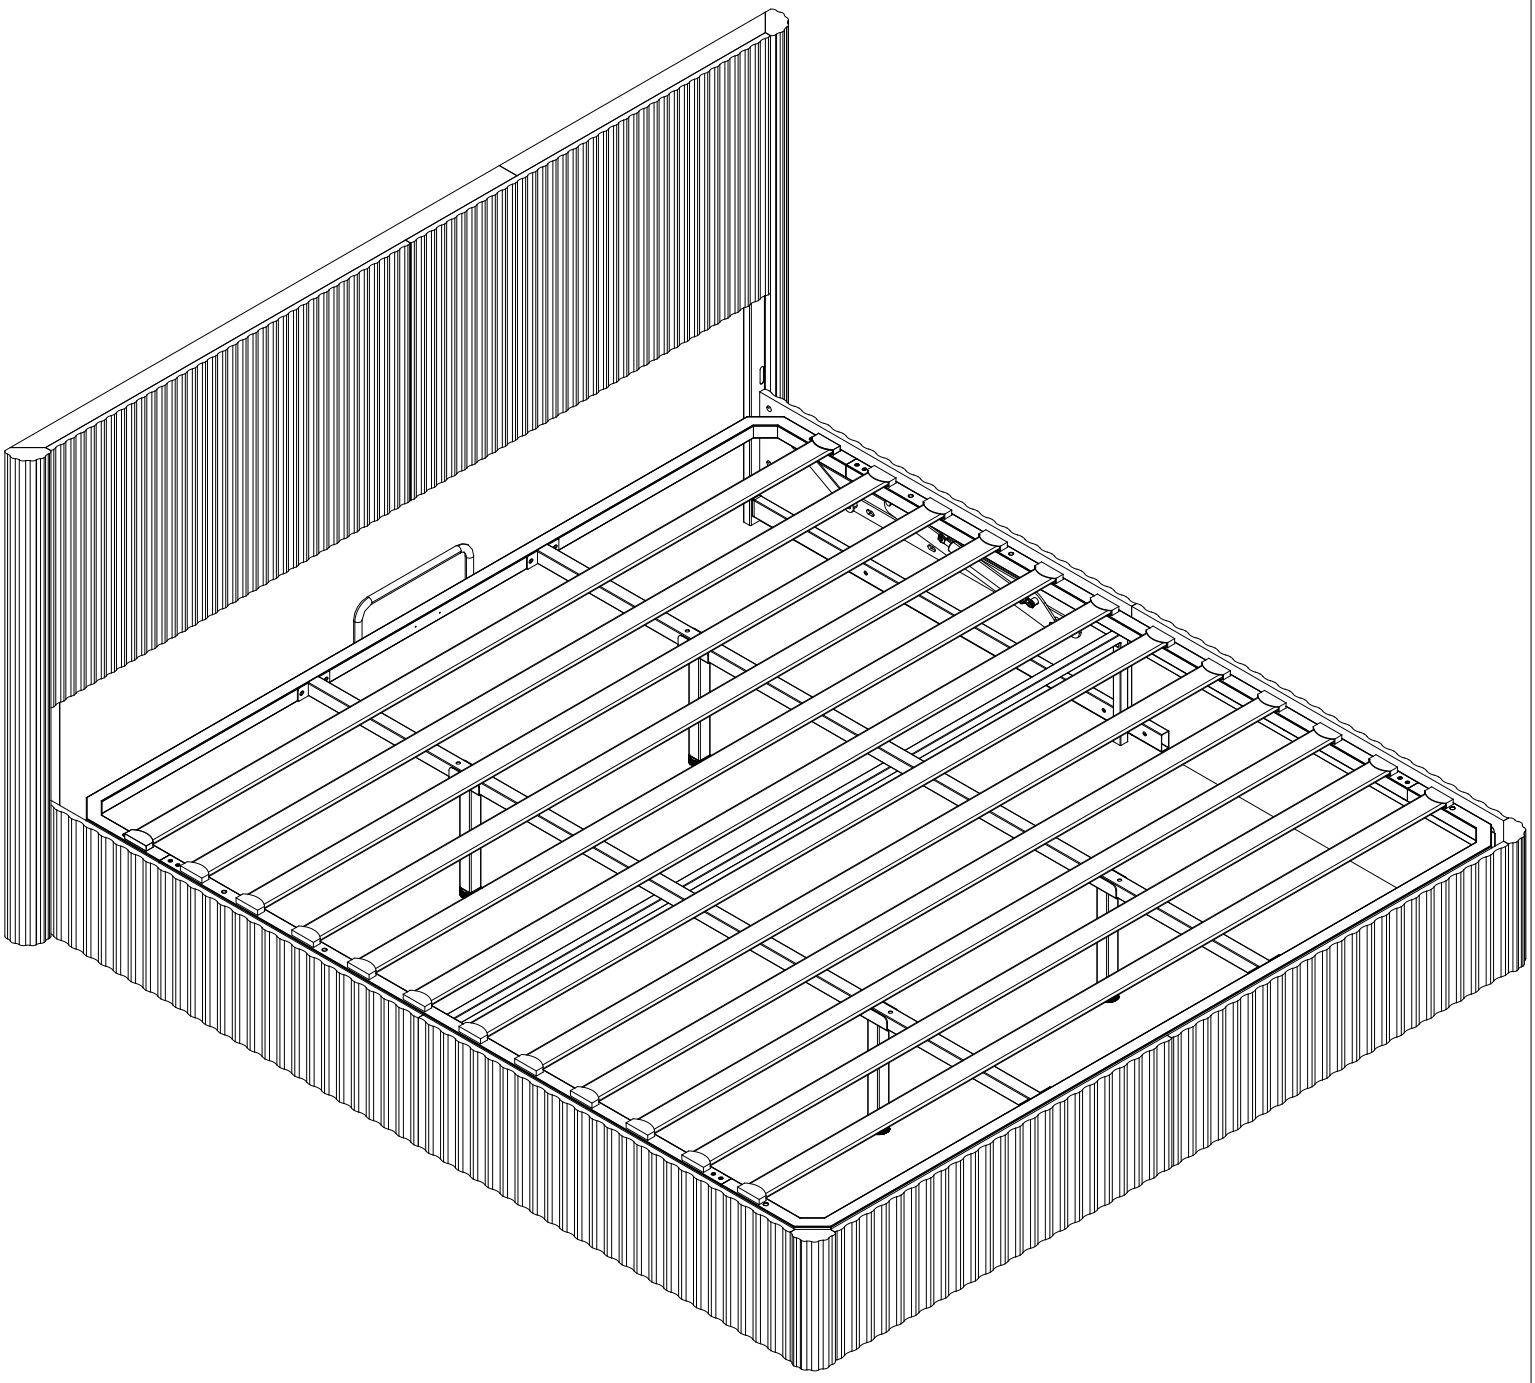
Assembly Instructions

LGR EK



EN

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

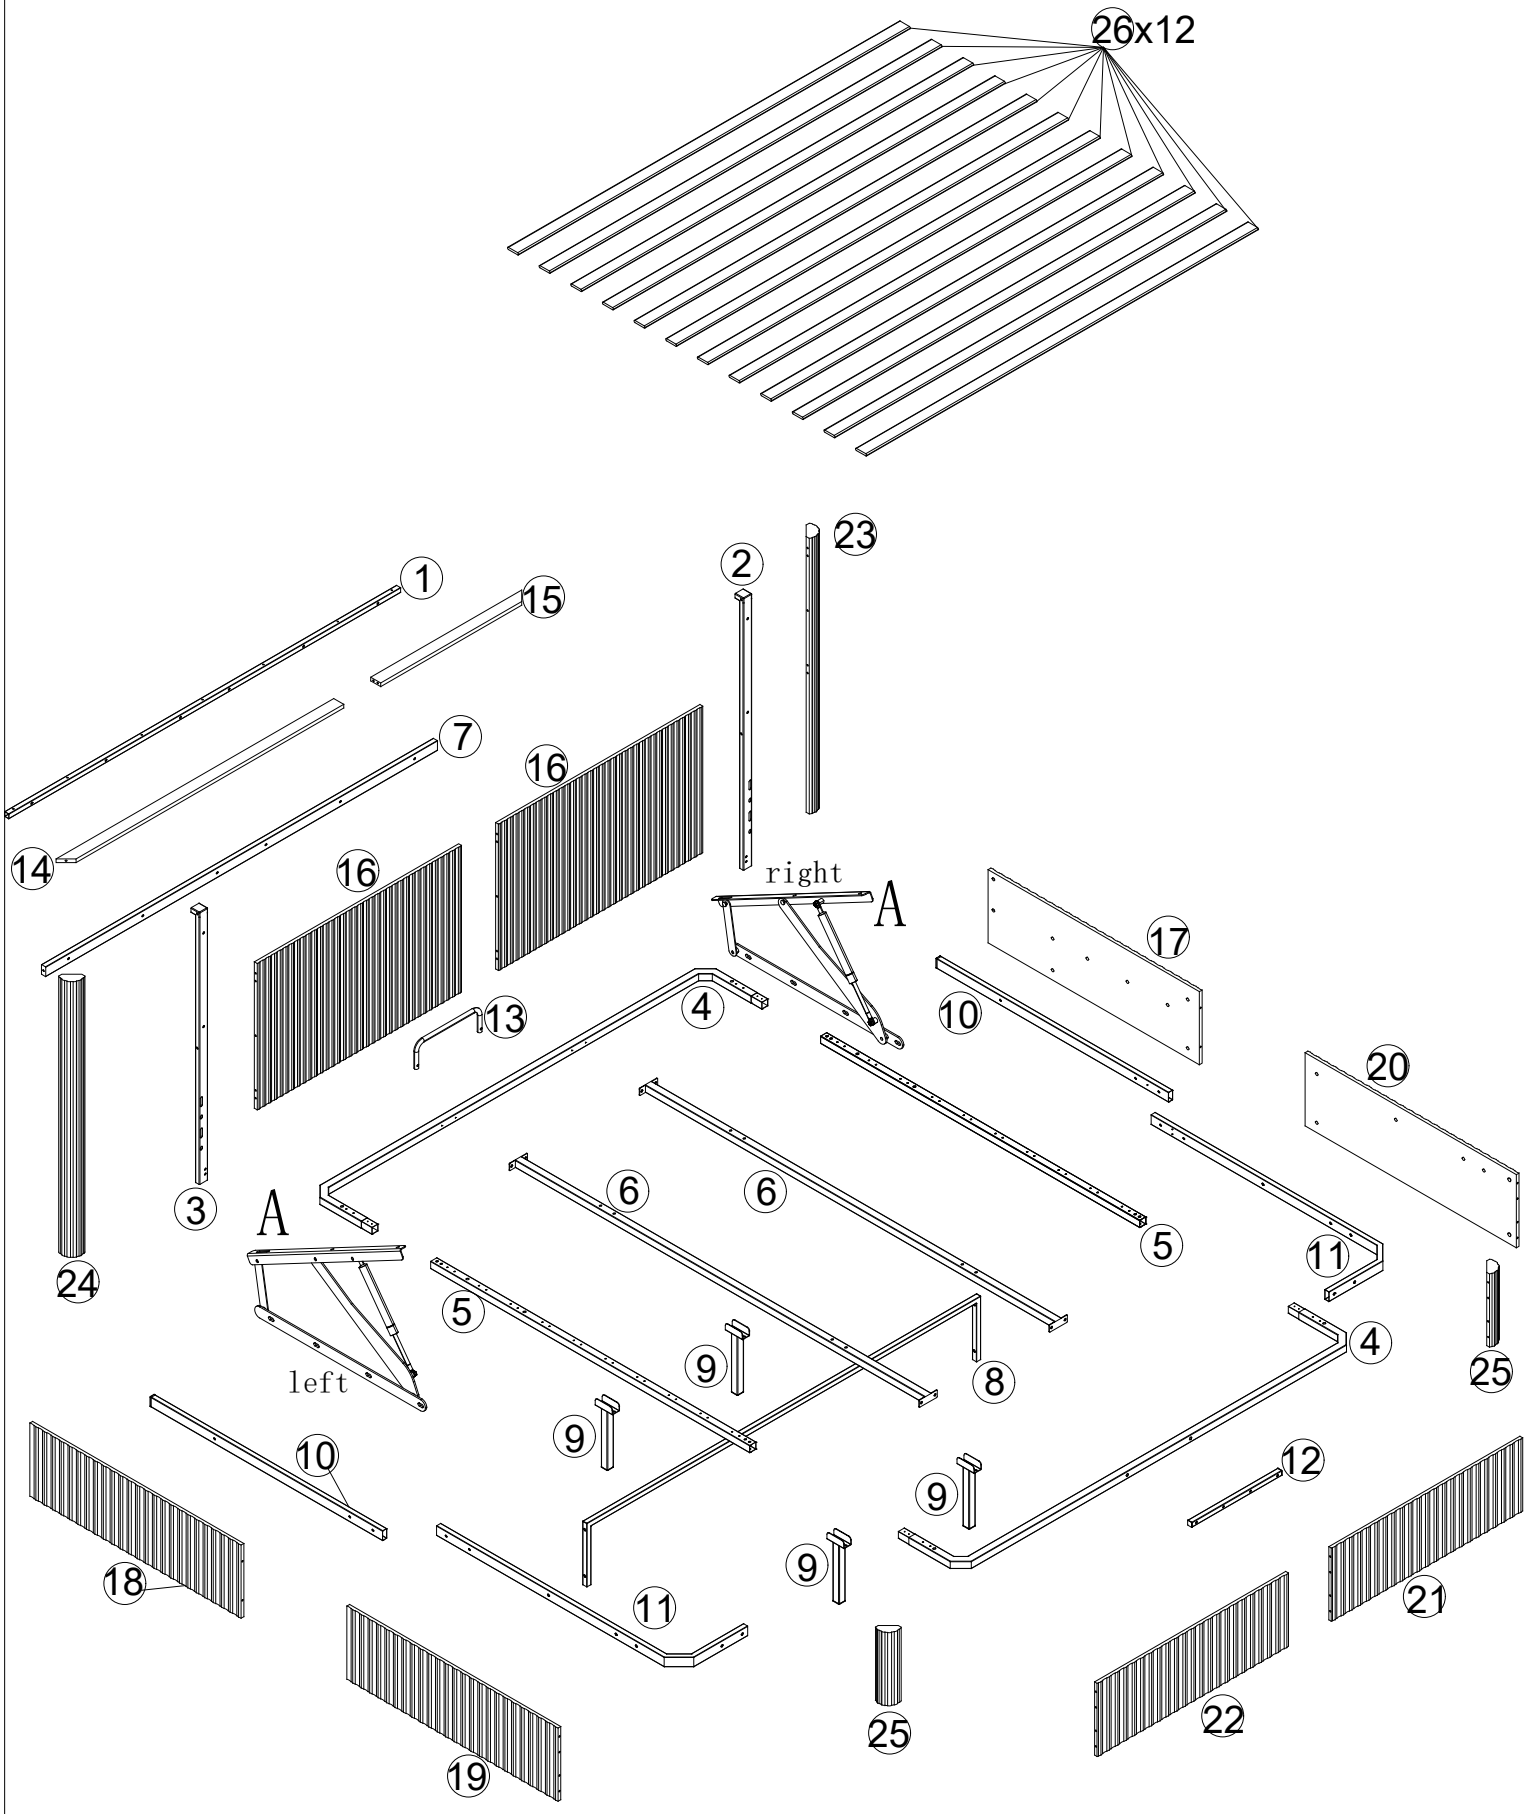
Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.


















Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.


Parts List(EN)



Parts List(EN)

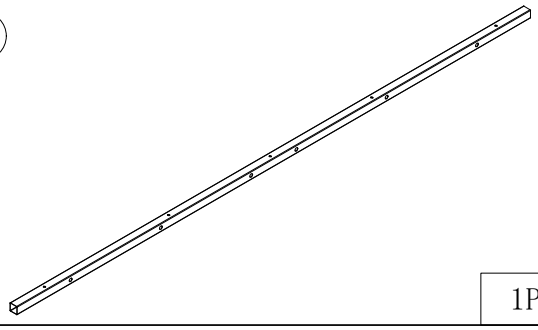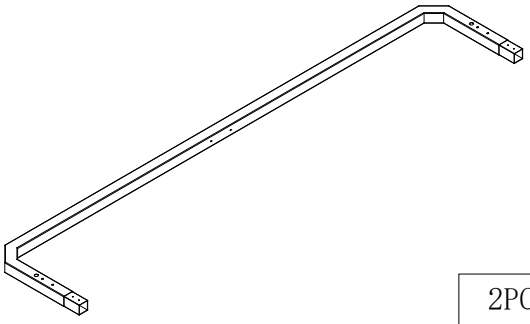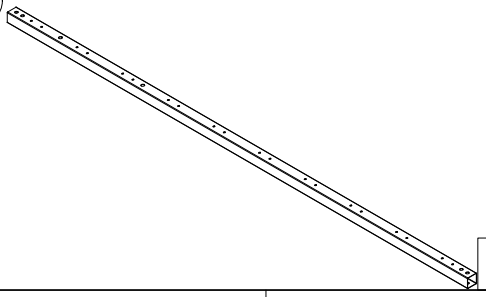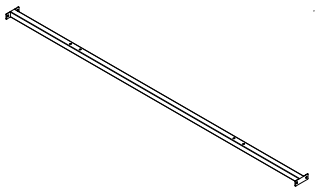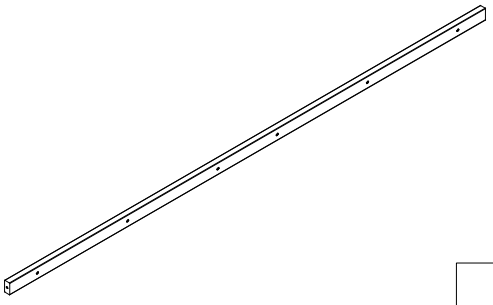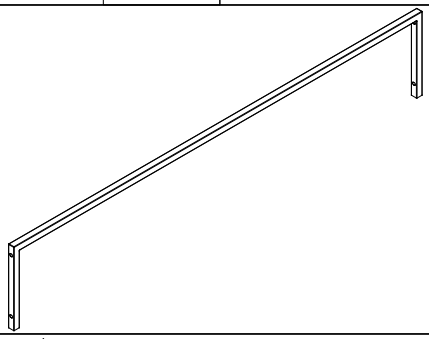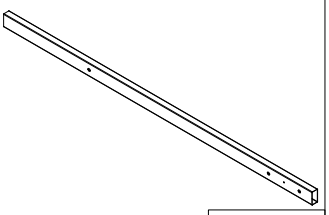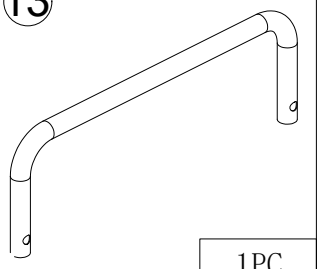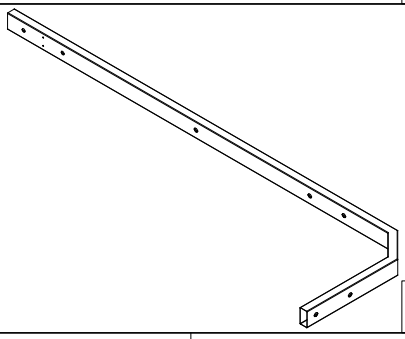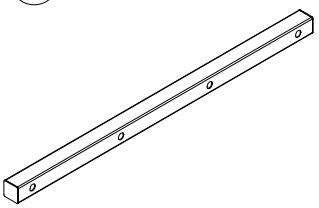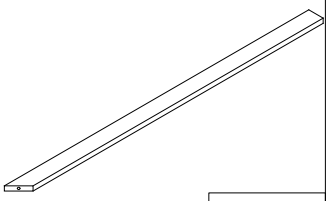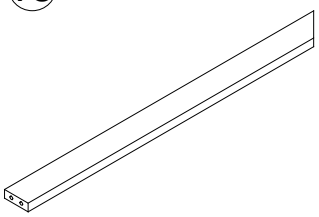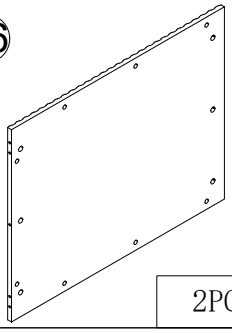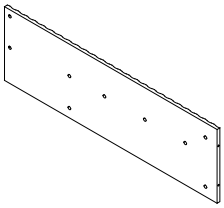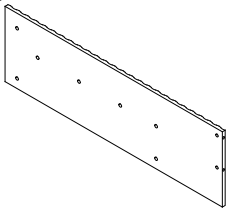1  1PC	2  1PC	3  1PC
4  2PCS	5  2PCS	
6  2PCS	7  1PC	9  4PCS
8  1PC	10  2PCS	13  1PC
11  2PCS	12  1PC	14  1PC
15  1PC	16  2PCS	17  1PC
		18  1PC



















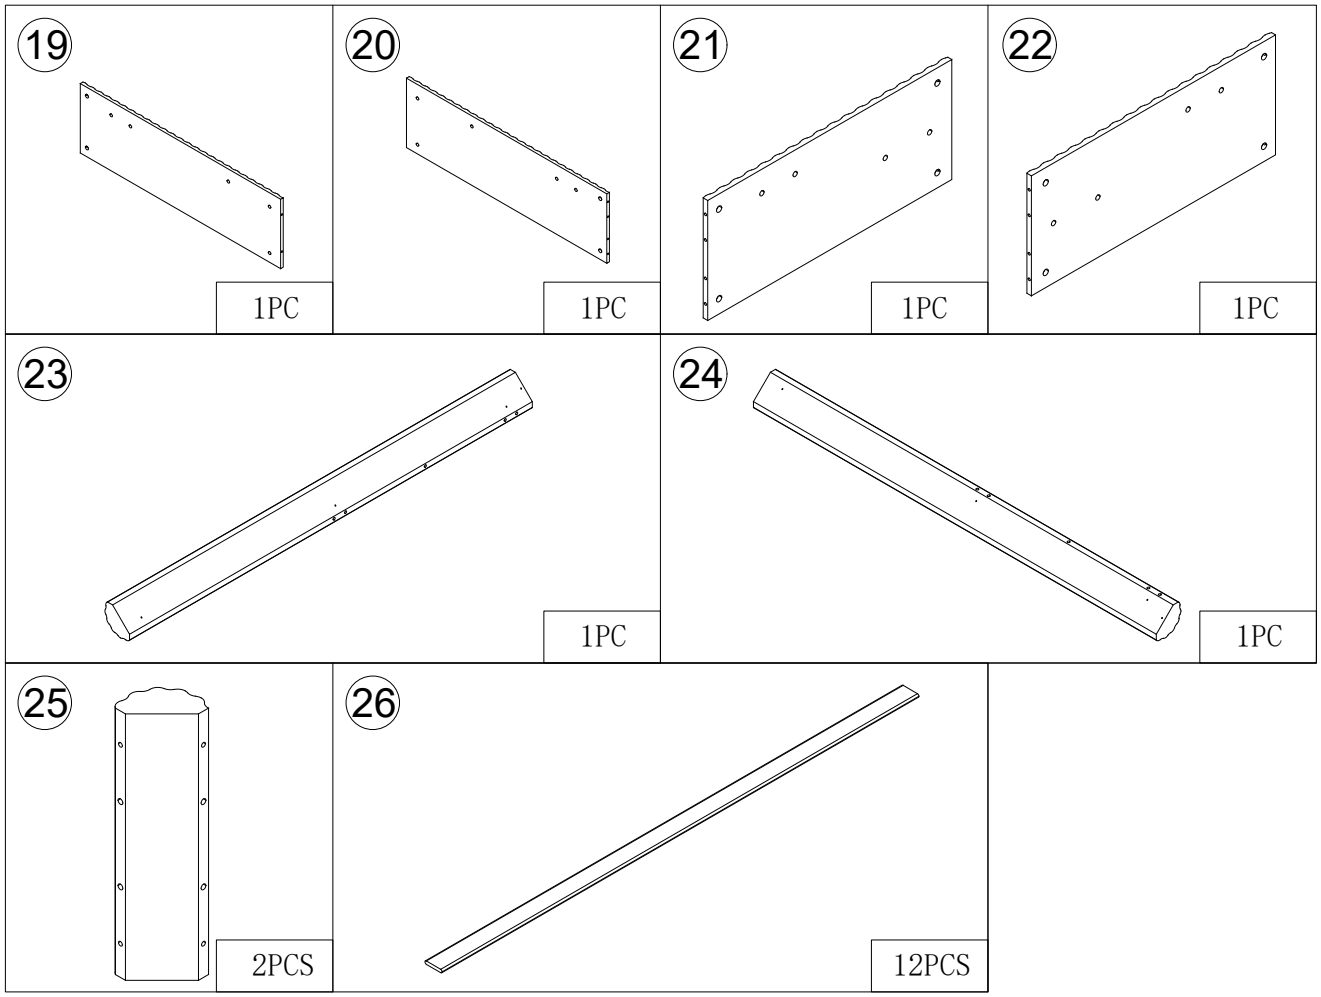
Parts List(EN)



Installation suggestion: 1-2 people

Note: The nut of the air pressure rod is in a removed state. If the air pressure rod fails to press in place after being pressed down, please slightly lift the bed and press again to exhaust the air inside the rod. Only then can it be pressed in place normally

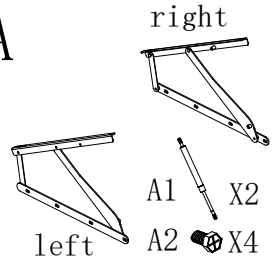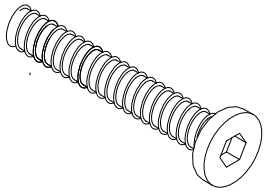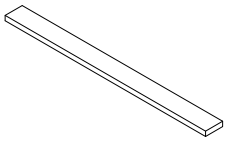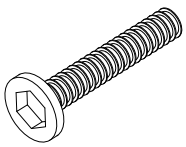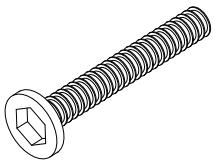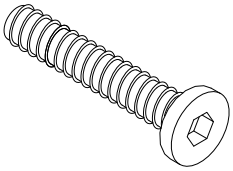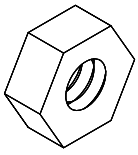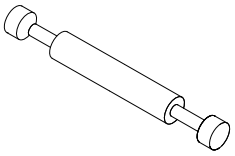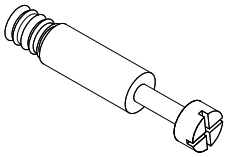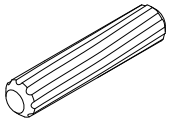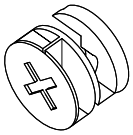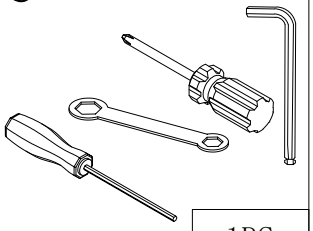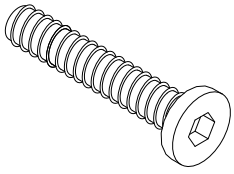Hardware list(EN)


A  1PC	B  24+2PCS	C  1PC	D  M6*35 4+1PC
E  10*70 12+2PCS	F  M8*40 6+1PC	G  M8*50 4+1PC	H  M6*12 24+2PCS
I  M3.5*30 9+1PC	J  M6*55 12+1PC	K  M8 6+1PC	L  M6 8+1PC
M  3.5*14 6+1PC	N  φ6*80 5+1PC	O  φ6*40 14+1PC	P  φ6*30 22+2PCS
Q  φ15*9.5 24+2PCS	R  M8*12.5 4+1PC	S  10*19 12+1PC	T  M8 4PCS
U  1PC	V  M6*28 46+3PCS		

STEP 1

Note: The side with the screws is on the outside.


Tighten Part Q on both sides of Part N to 50% initially. Verify no misalignment, then fully tighten to 100%

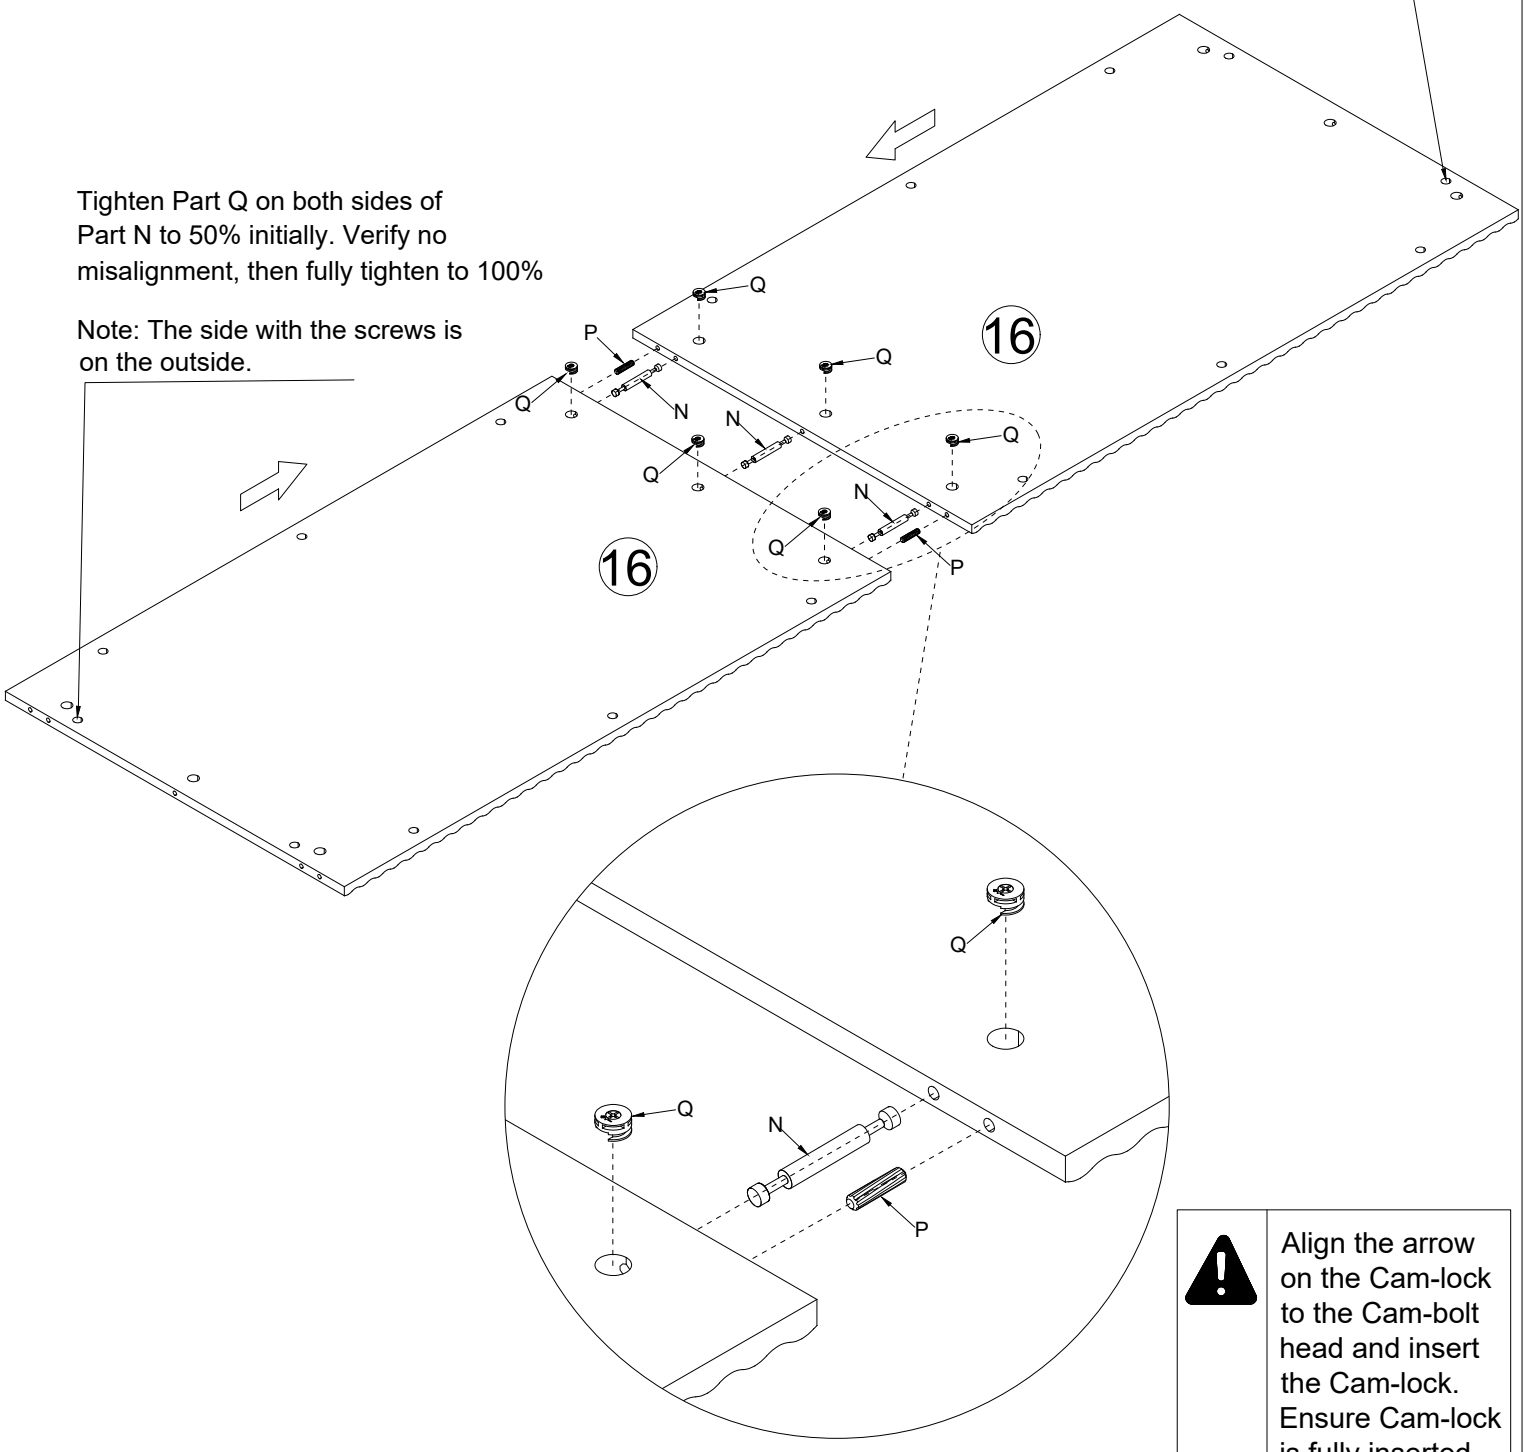Note: The side with the screws is on the outside.



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

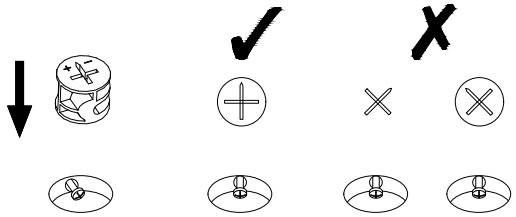
INSERTING AND TIGHTENING CAM-BOLT





	N×3PCS
	P×2PCS
	Q×6PCS

WARNING!!! After locking Component Q in place, Component N may shift sideways. If such shifting occurs and the component cannot be locked, make adjustments accordingly.

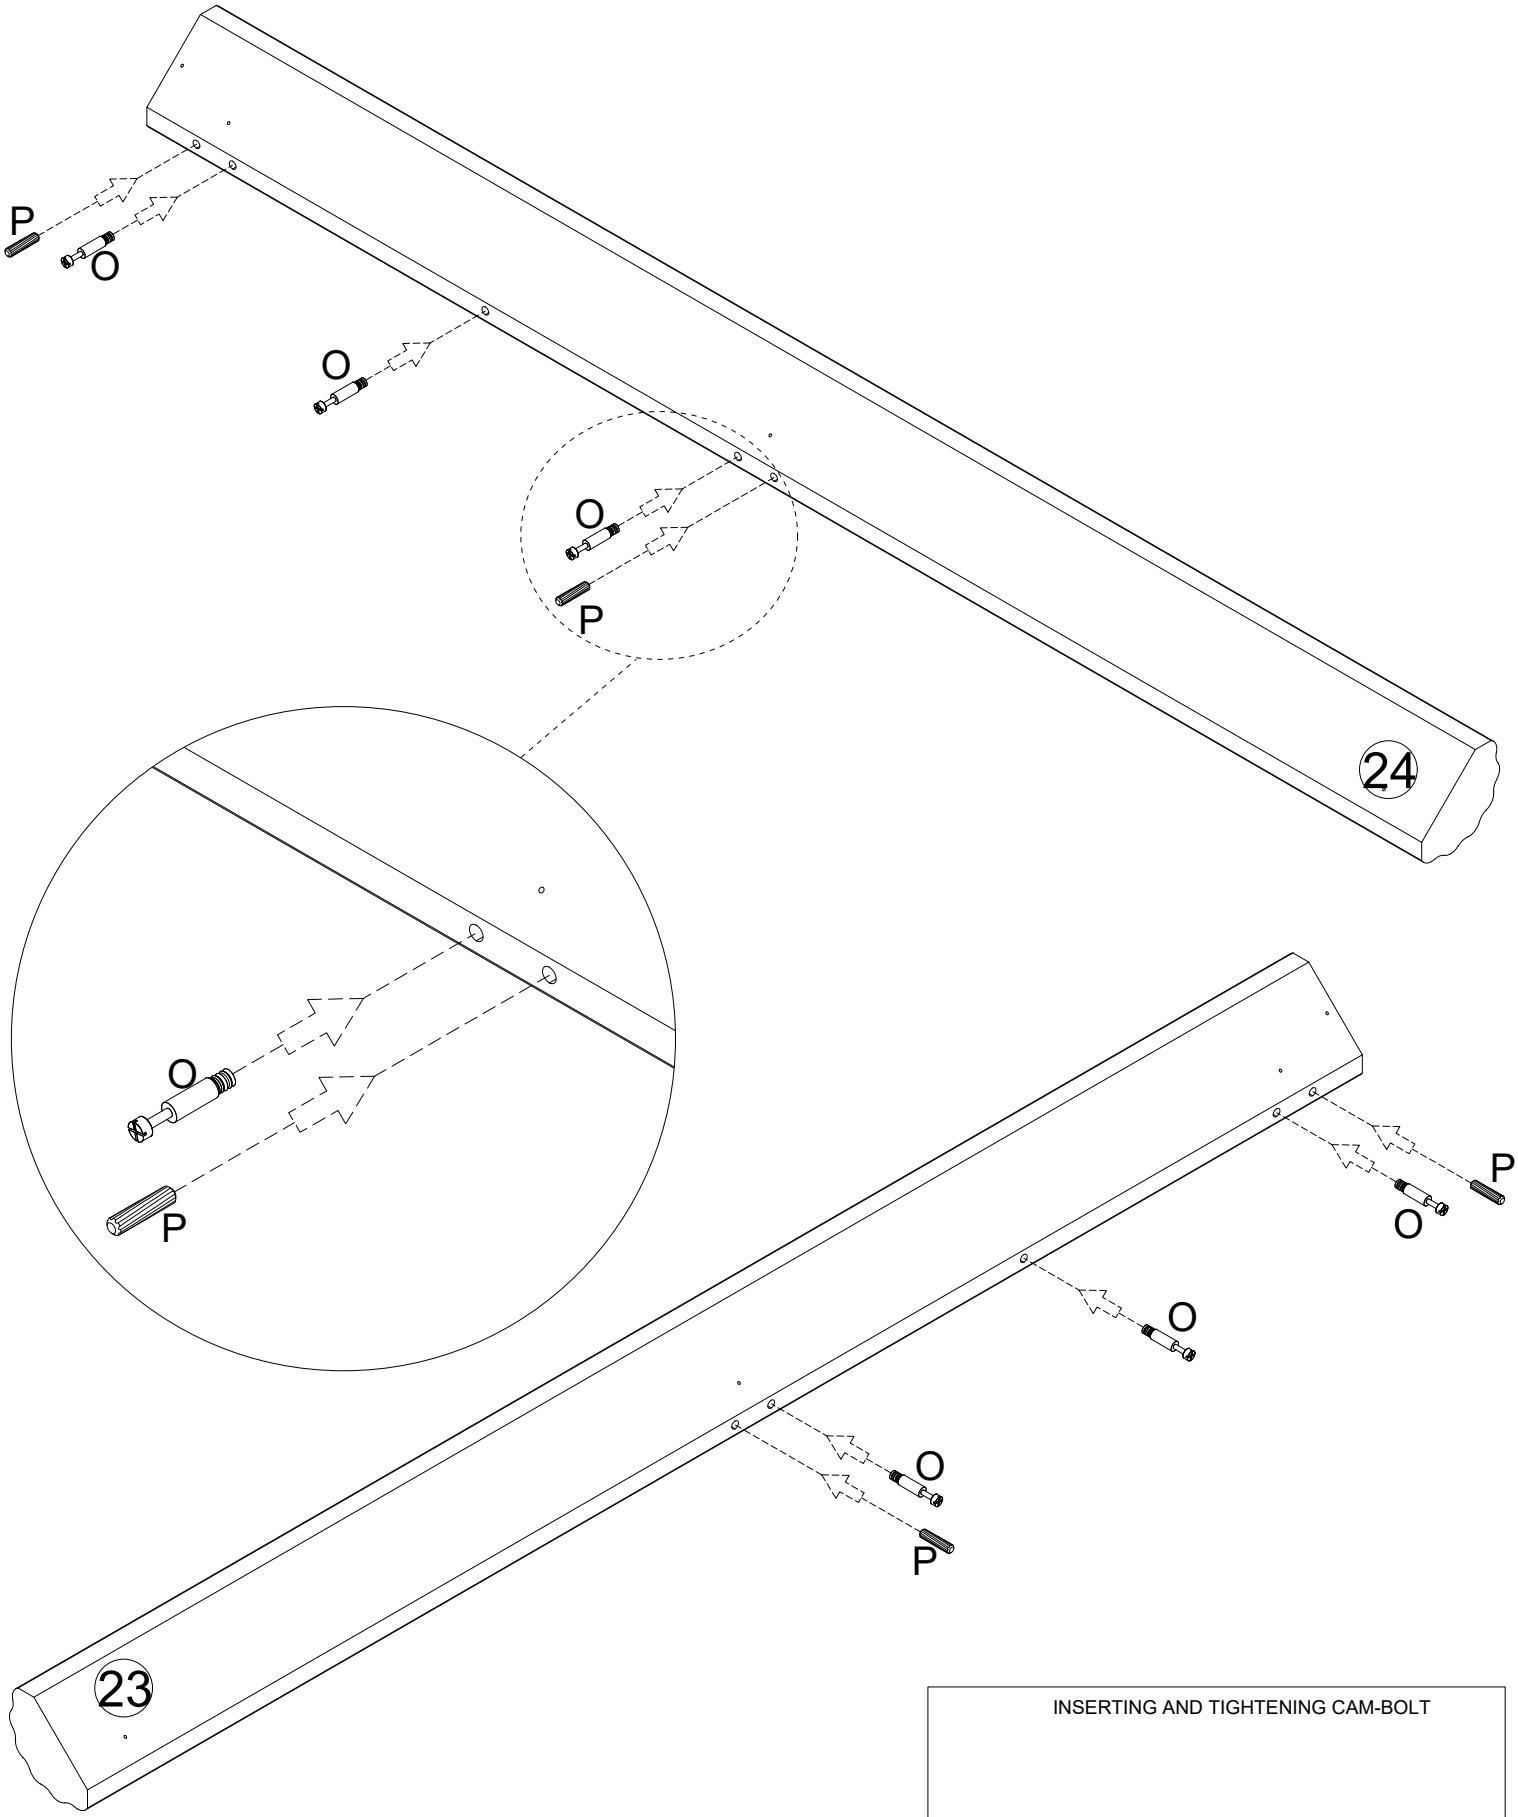STEP 2




	O×6PCS
	P×4PCS

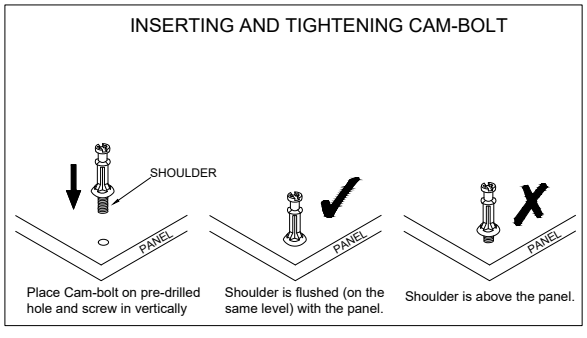


STEP 3

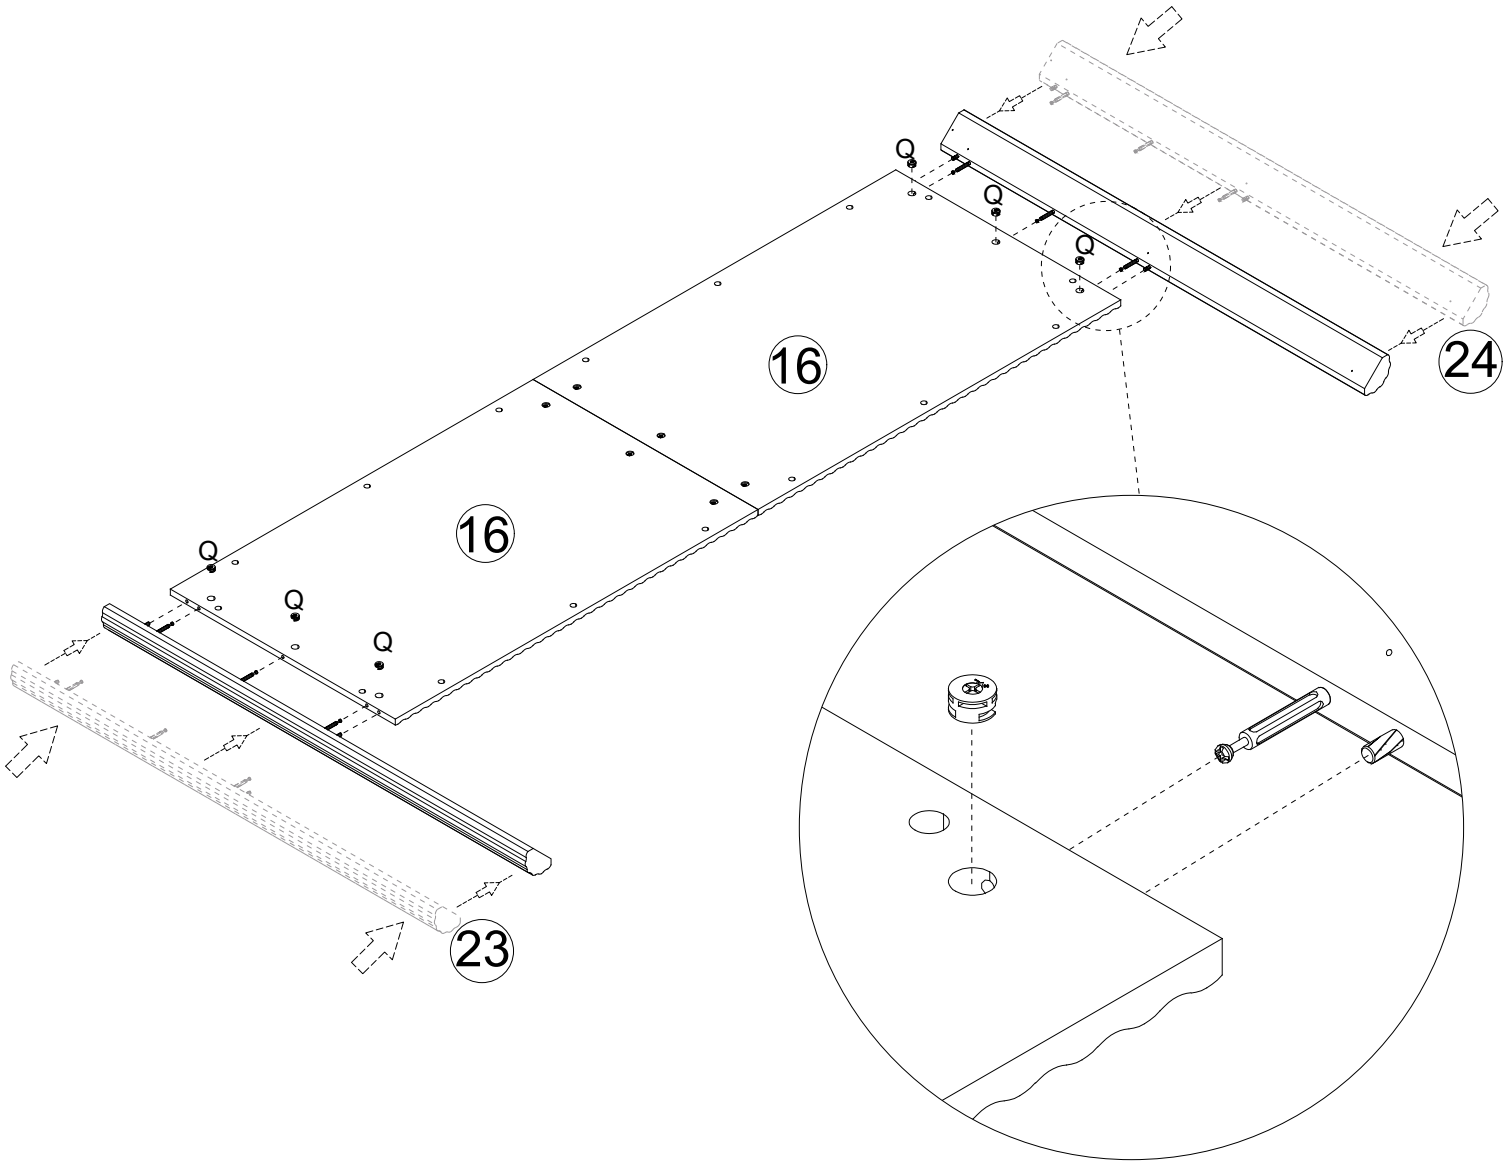Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.



INSERTING AND TIGHTENING CAM-BOLT

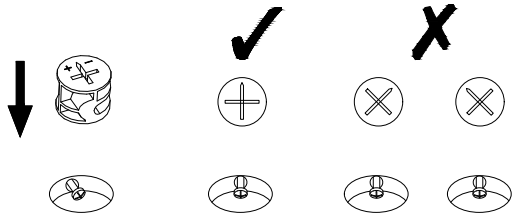


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

	Q×6PCS

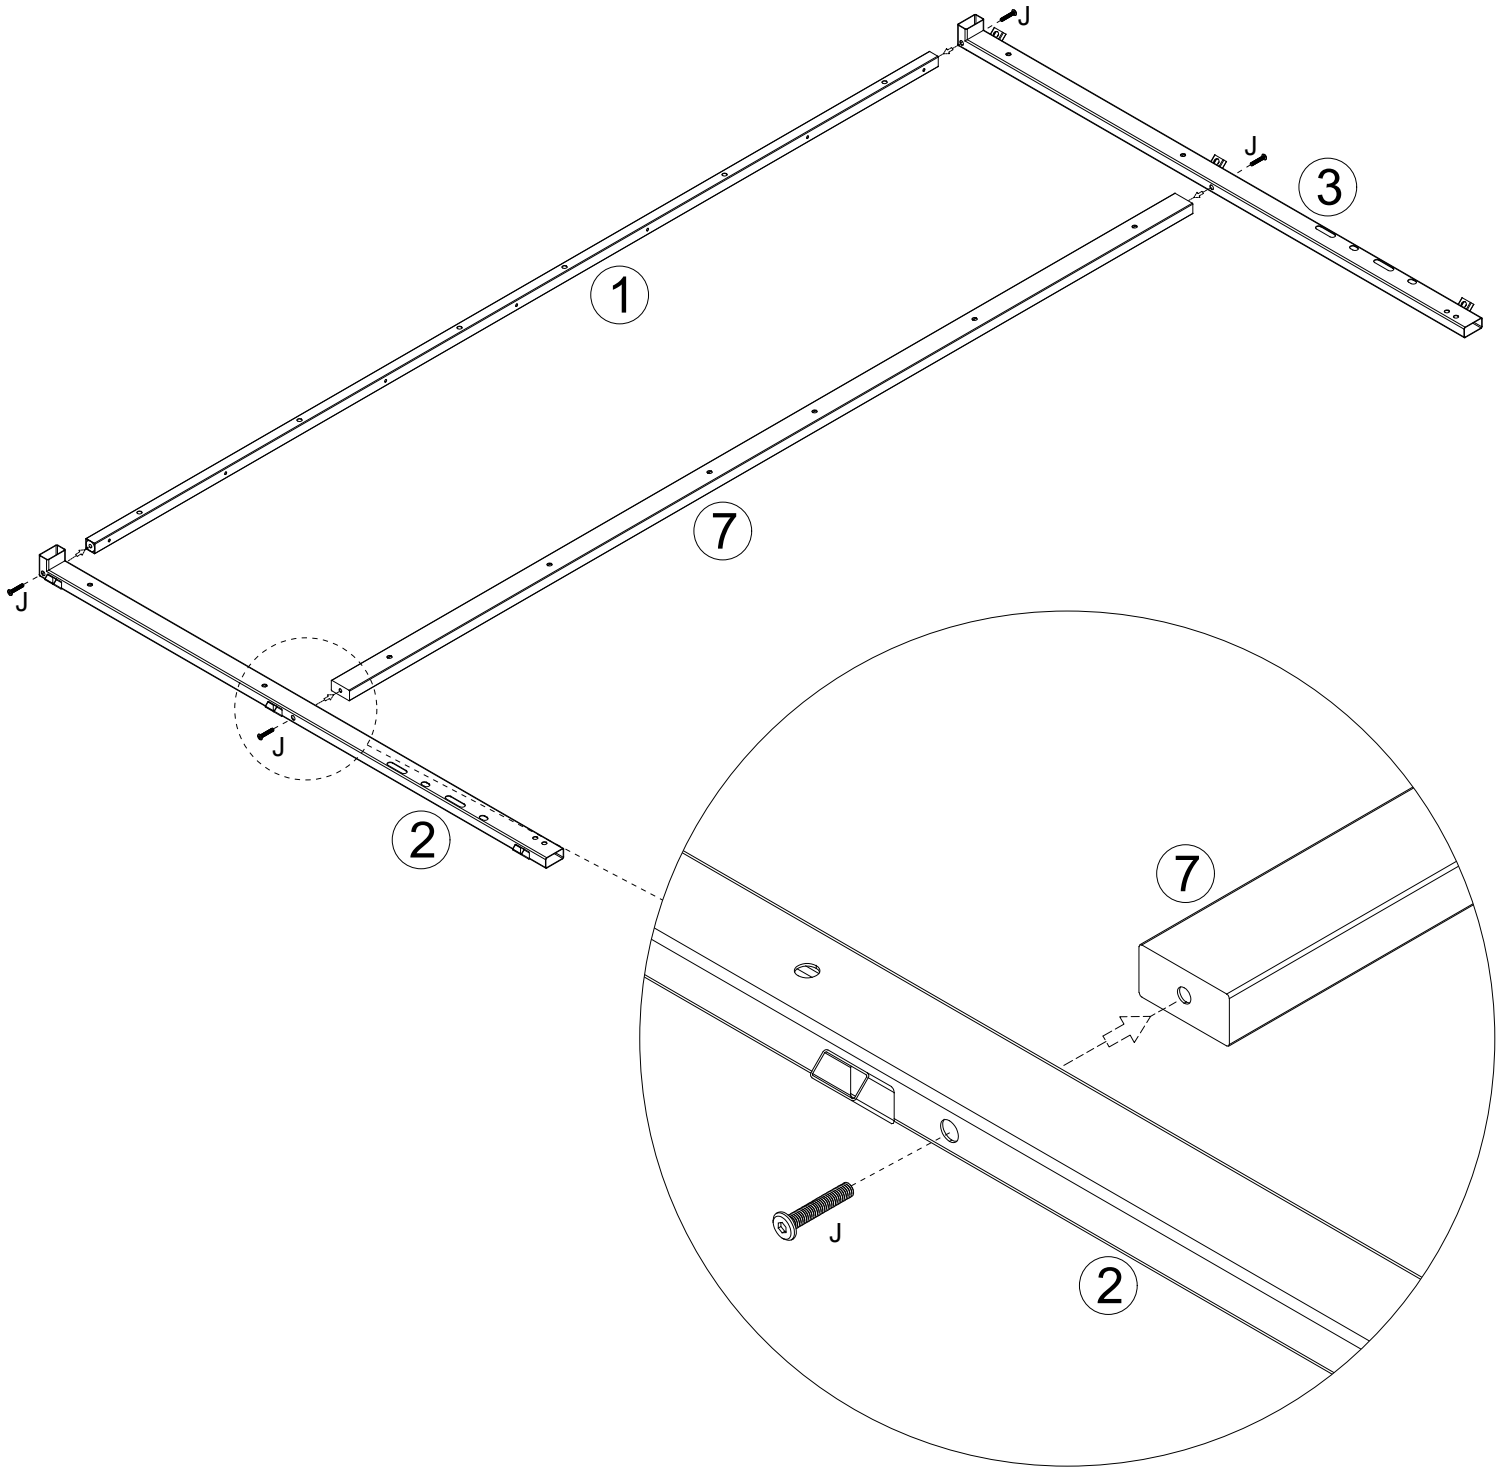
STEP 4




M6X55	J×4PCS

STEP 5

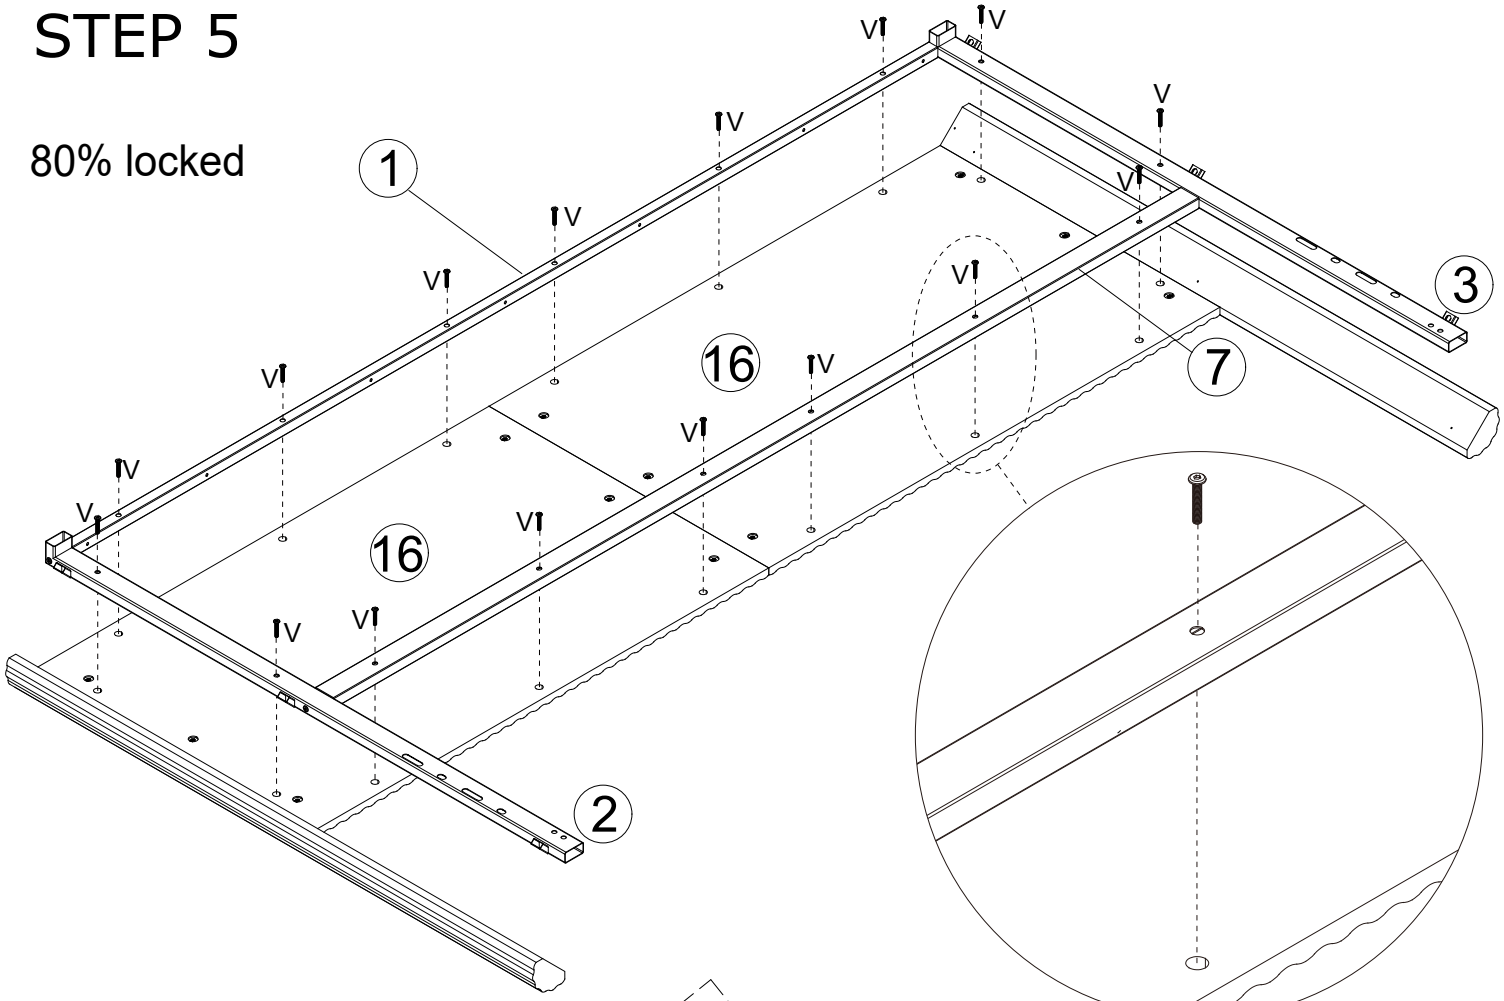80% locked



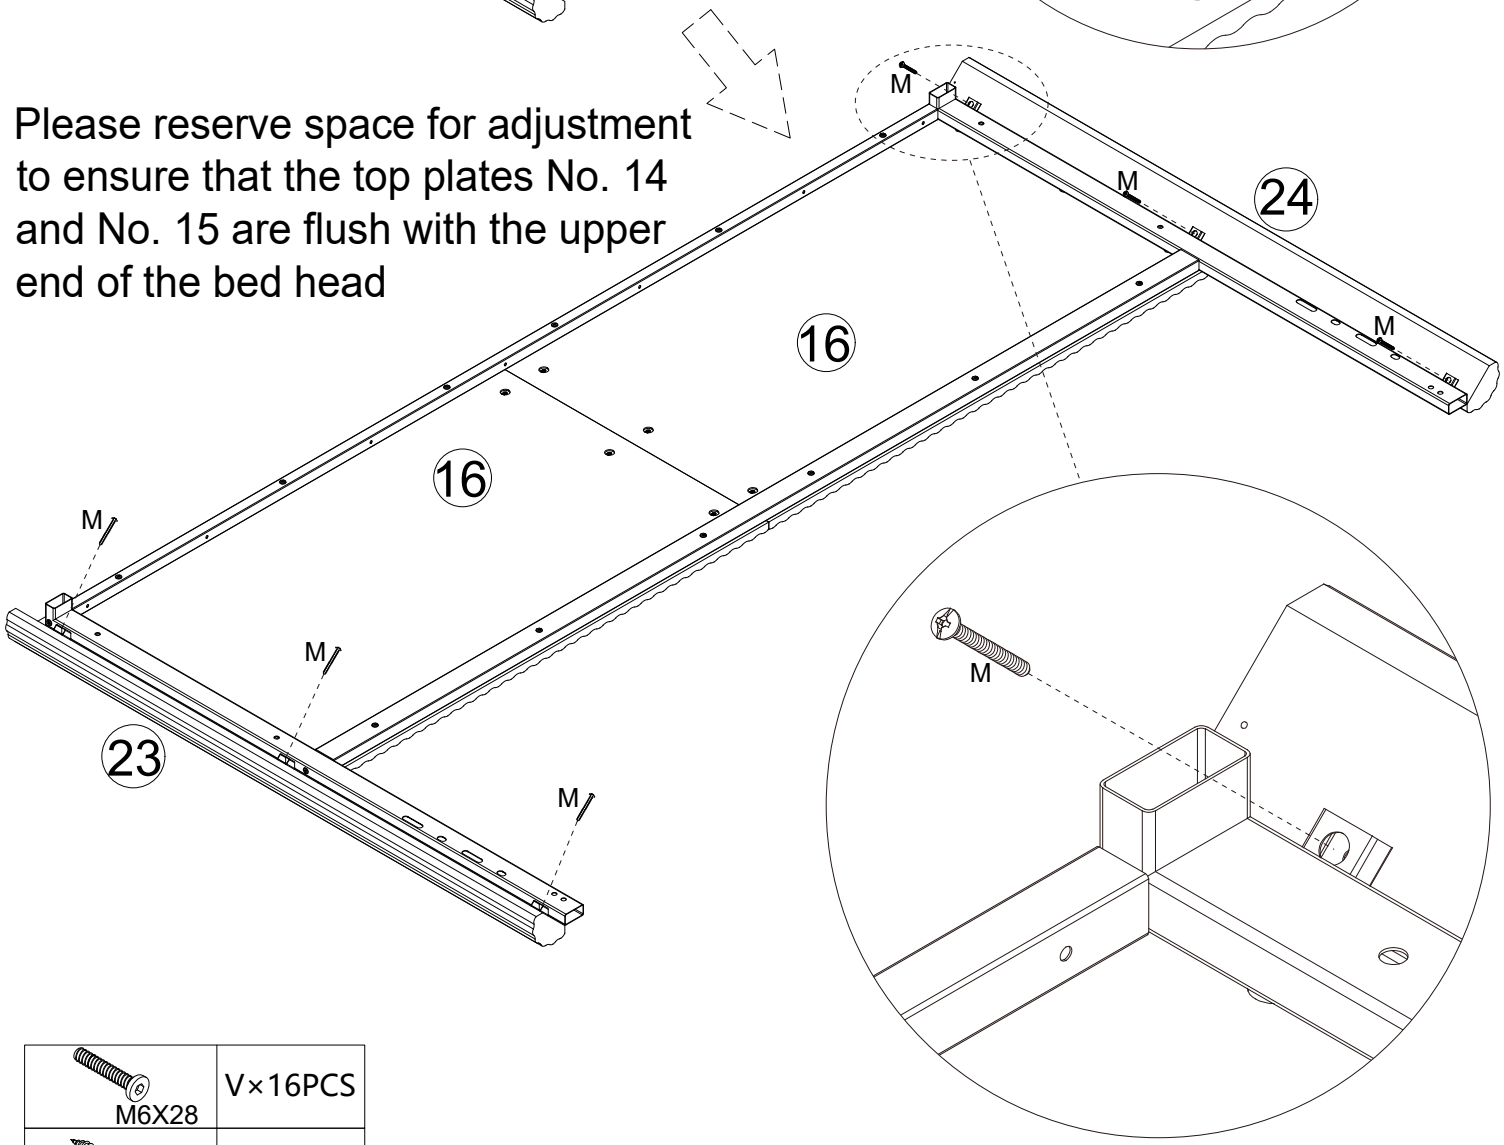
Please reserve space for adjustment to ensure that the top plates No. 14 and No. 15 are flush with the upper end of the bed head



M6X28	V×16PCS
3.5*14	M×6PCS


STEP 6

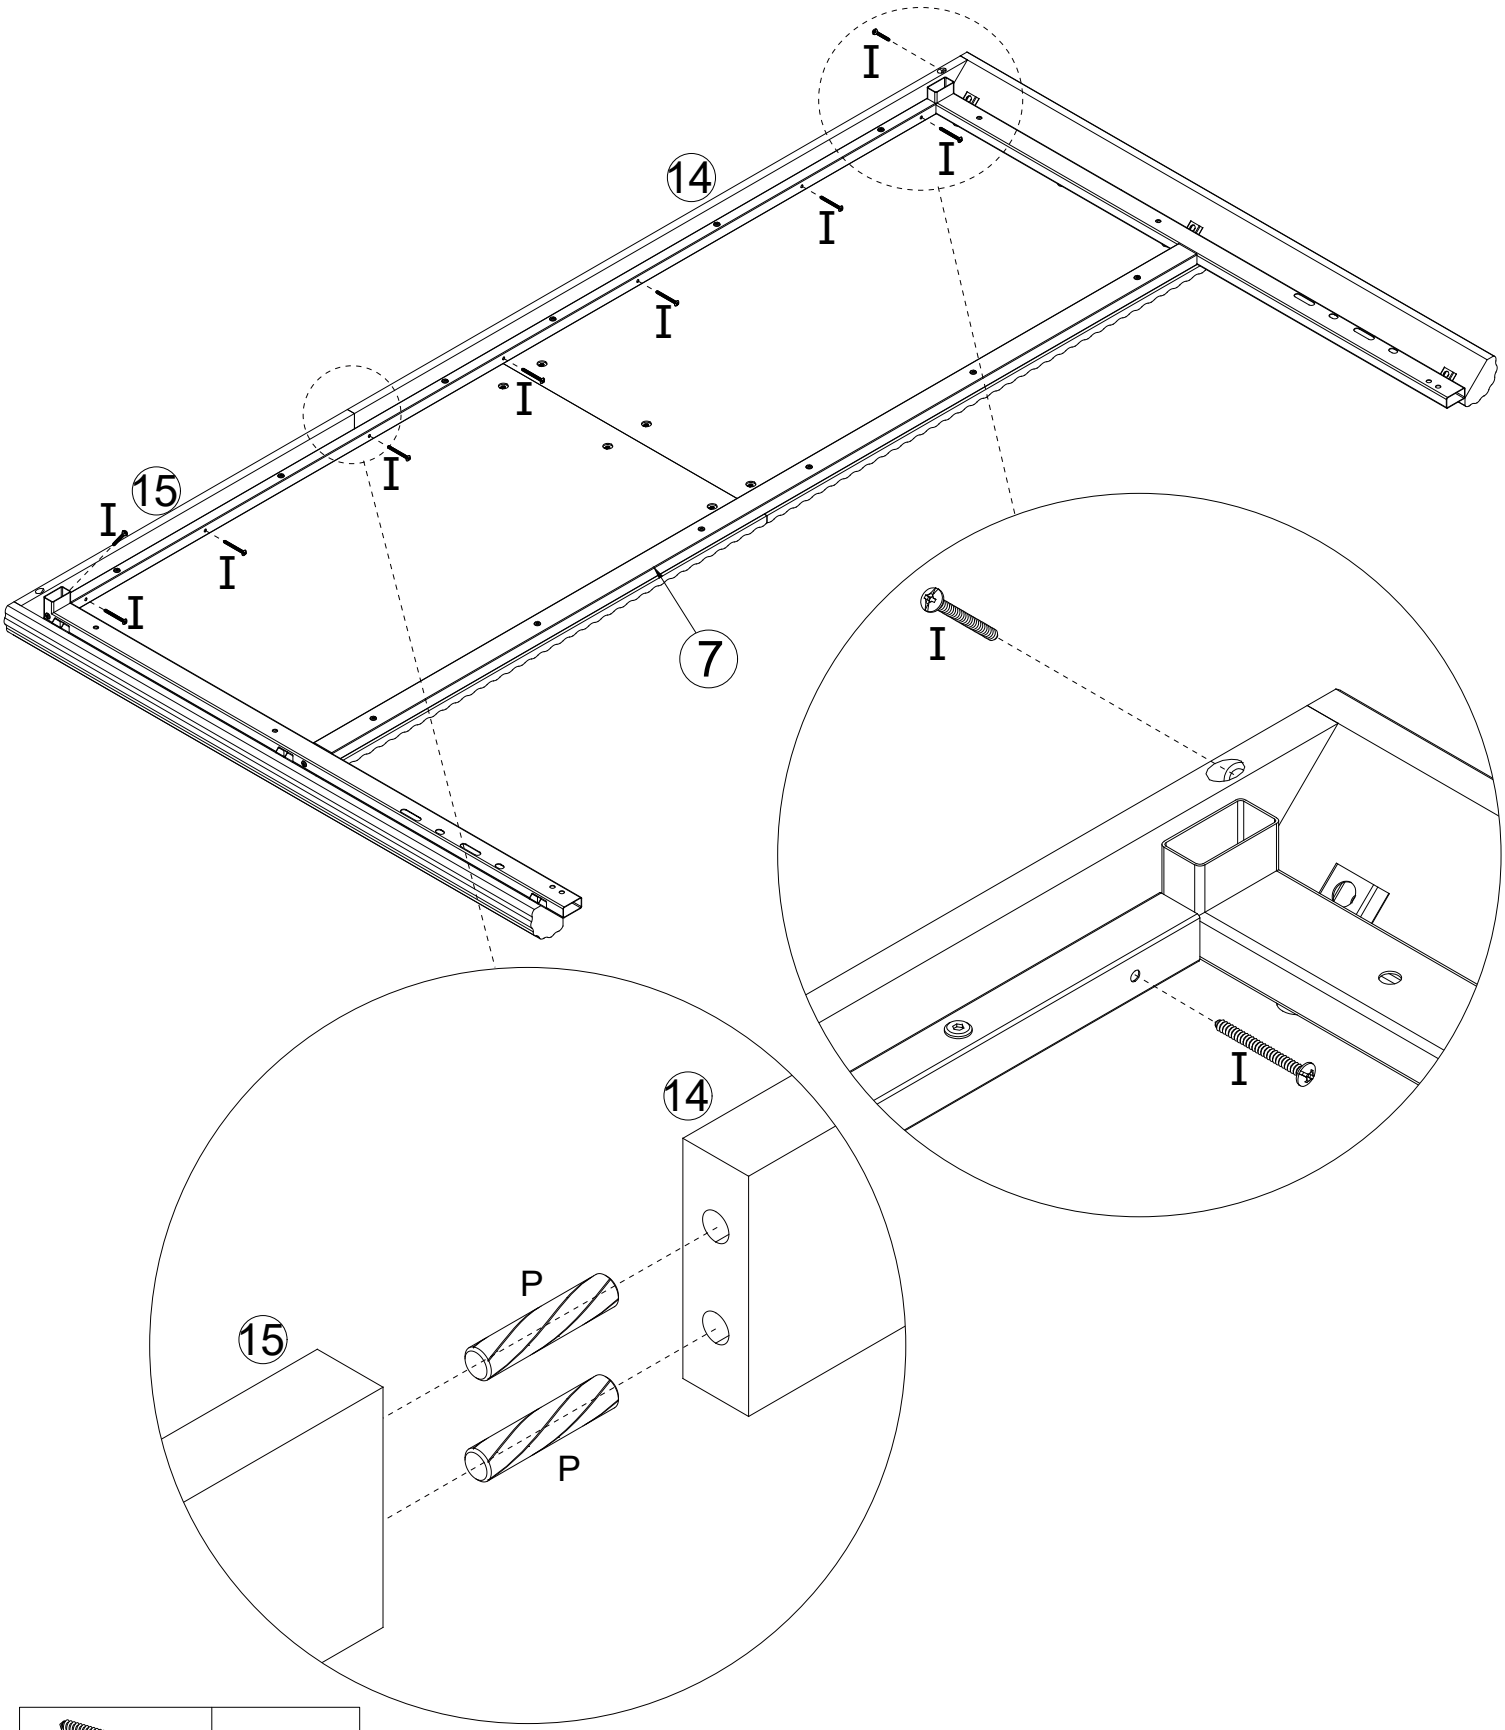Tighten screws in this step, then fully fasten the front screws




3.5X30	I×9PCS
	P×2PCS

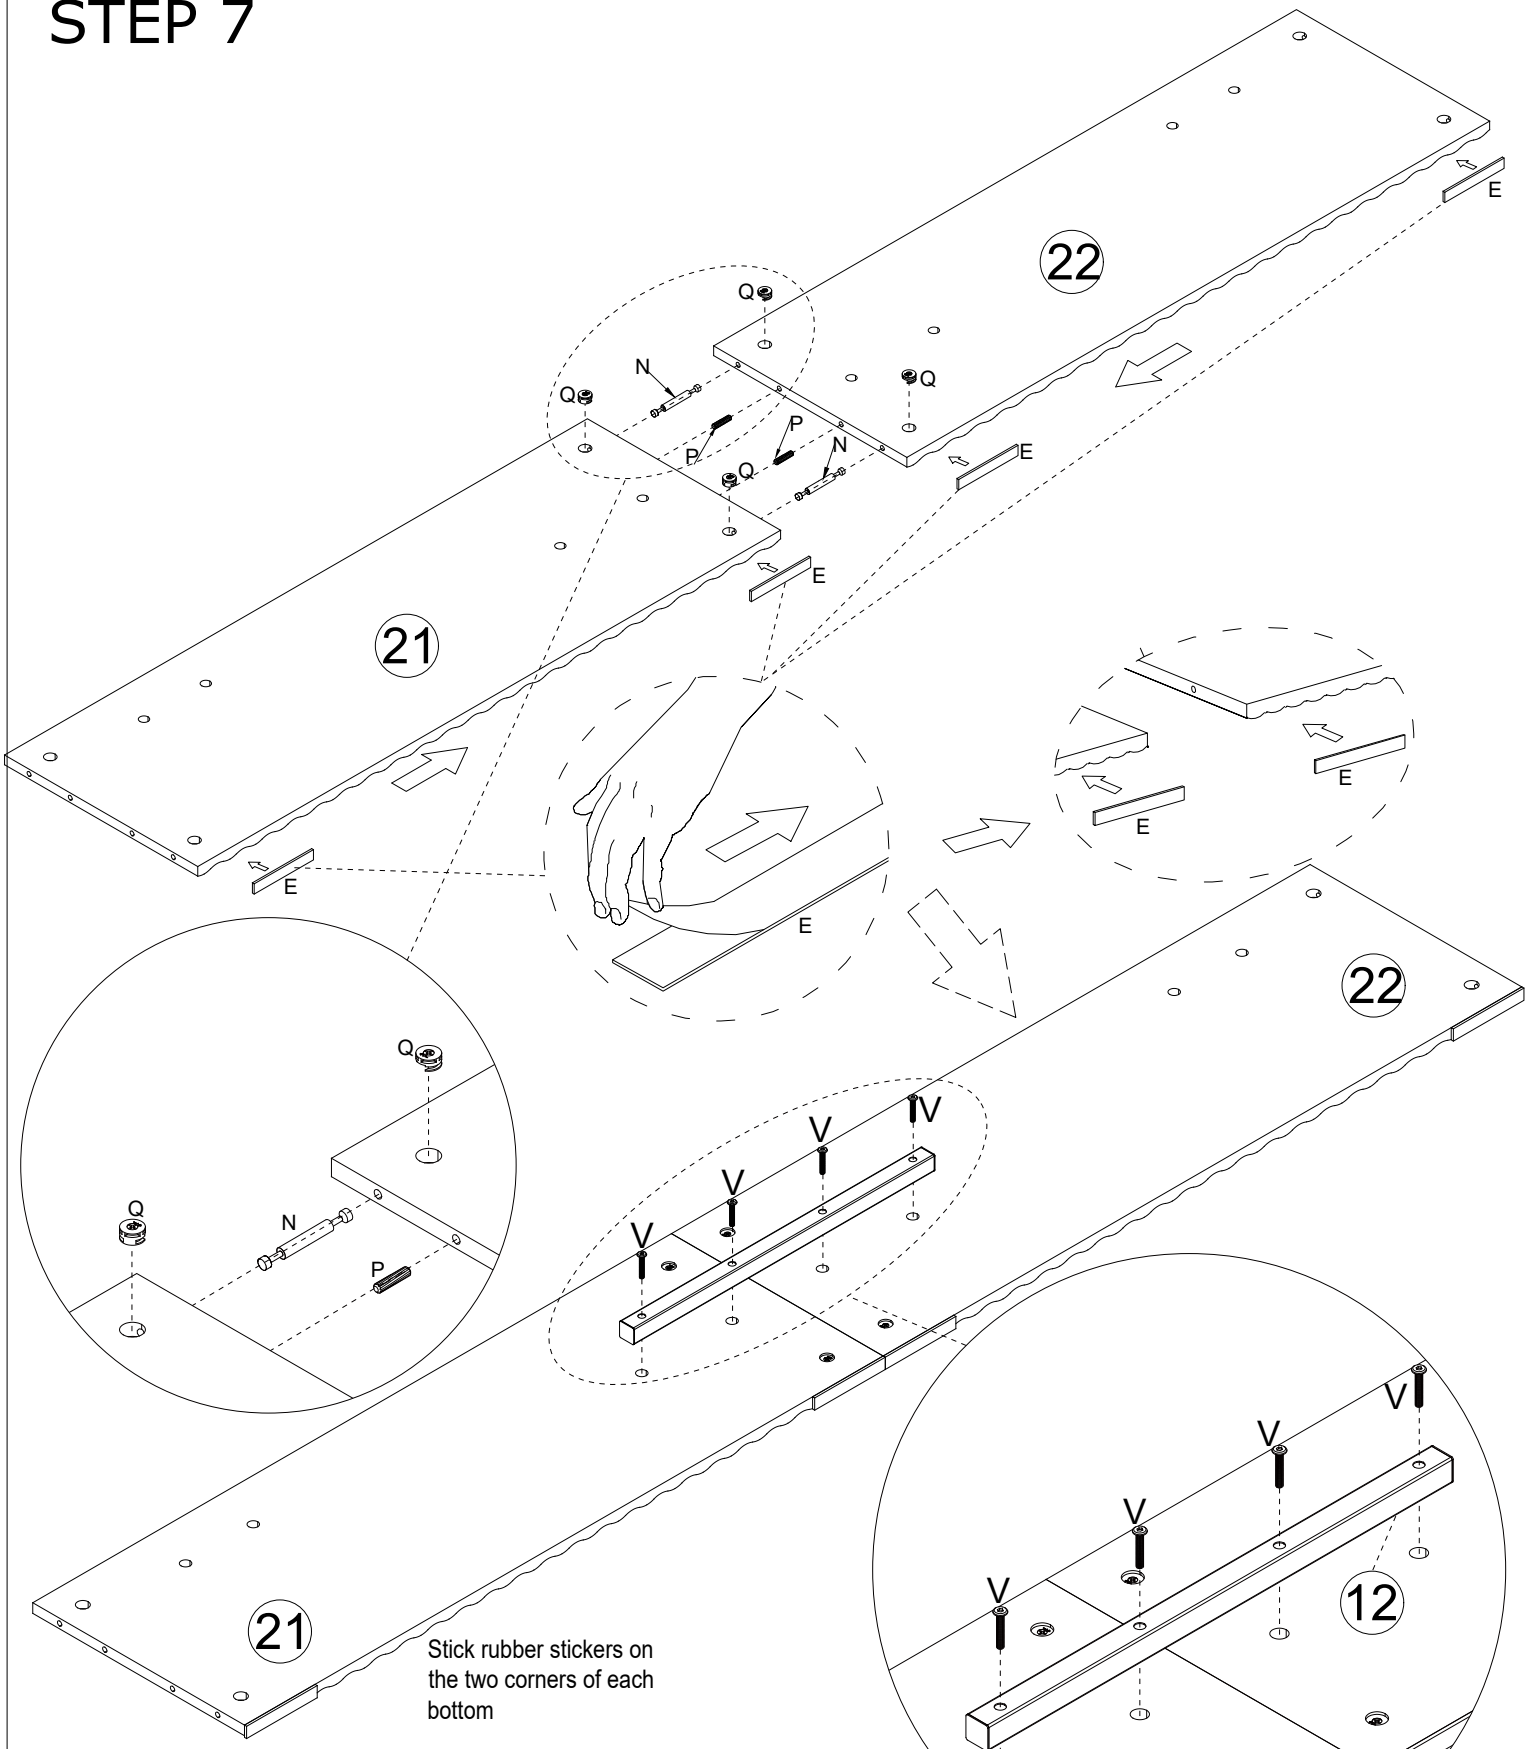STEP 7




	12#×1PC		
M6X28	V×4PCS		
	N×2PCS		
	P×2PCS		
	Q×4PCS		E×4PCS

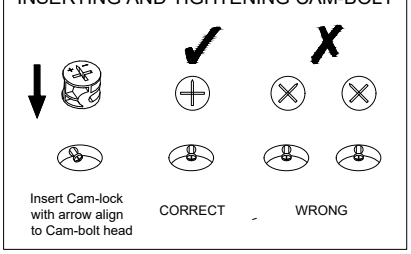
INSERTING AND TIGHTENING CAM-BOLT




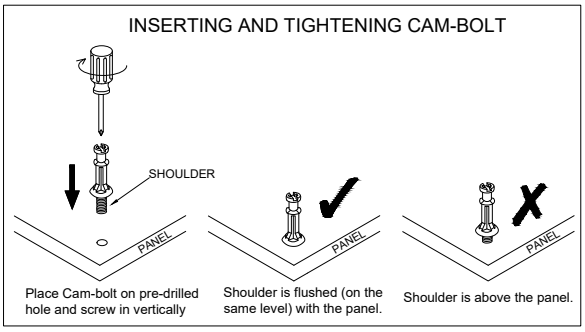STEP 8



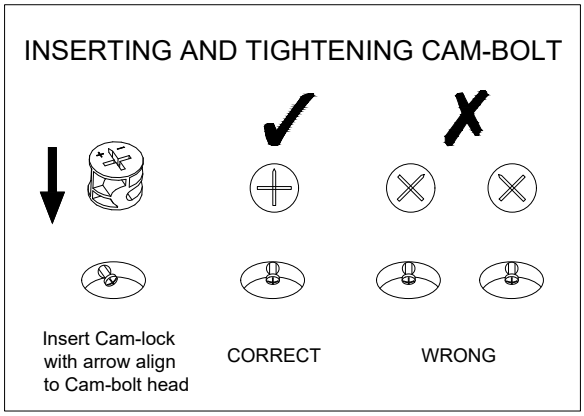Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.





	O×8PCS
	P×8PCS
	Q×4PCS


STEP 9

⚠	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

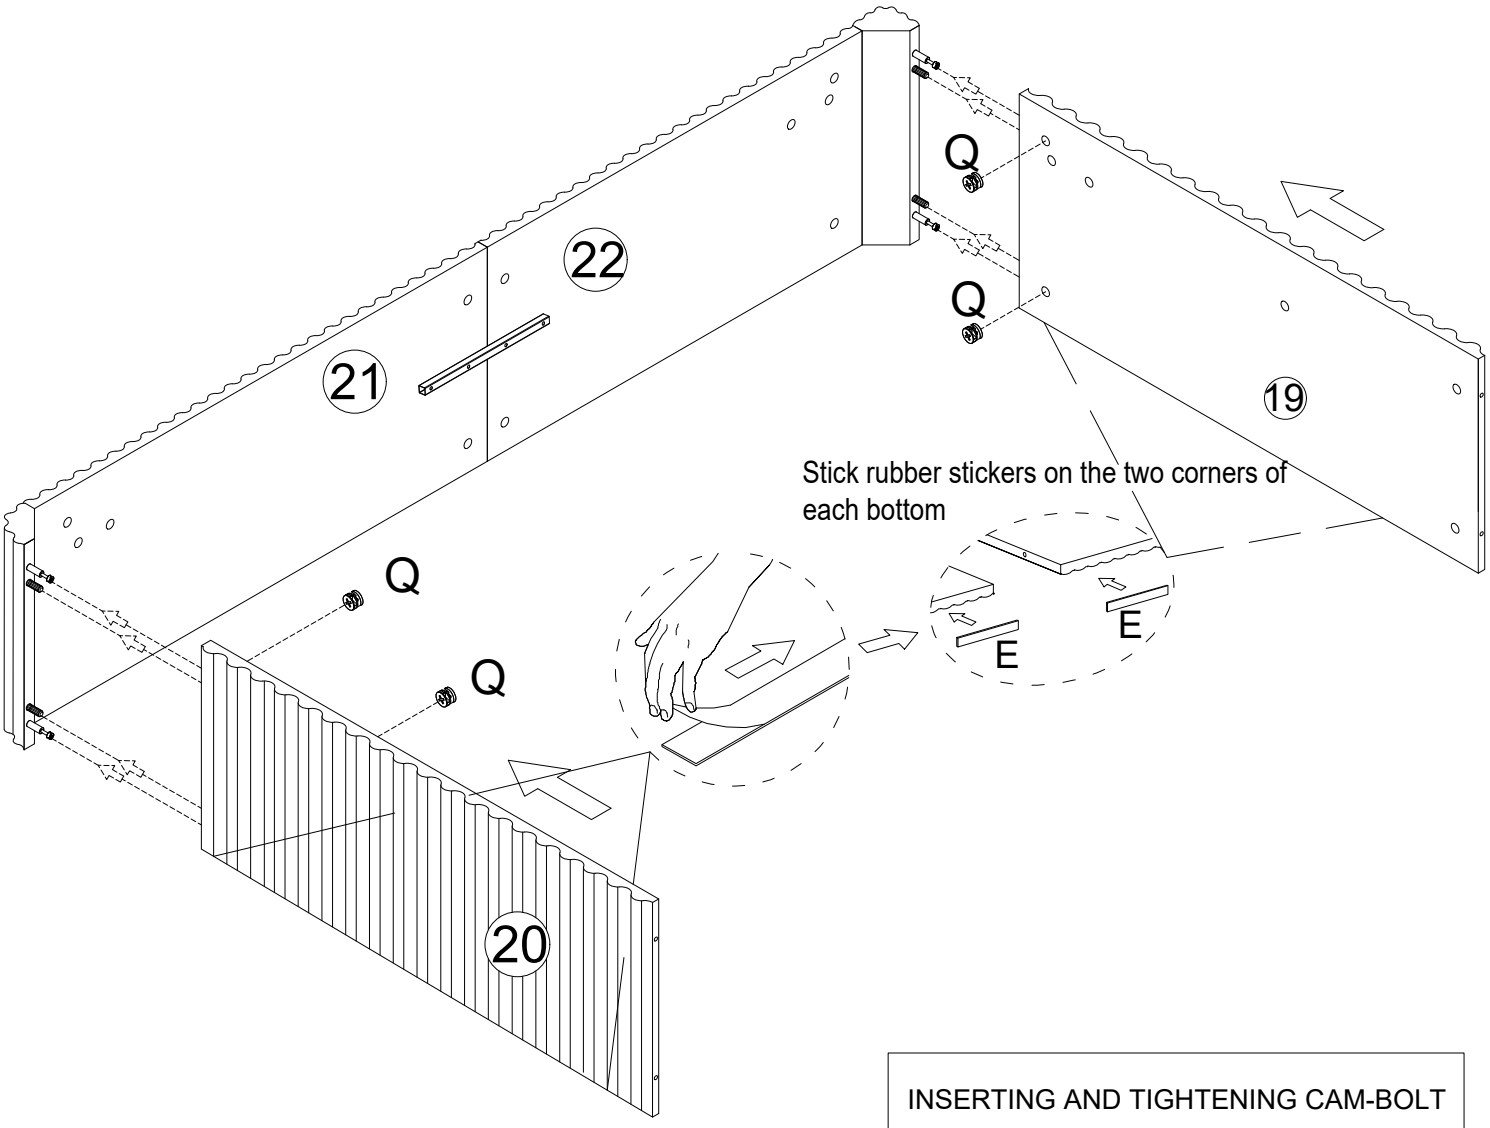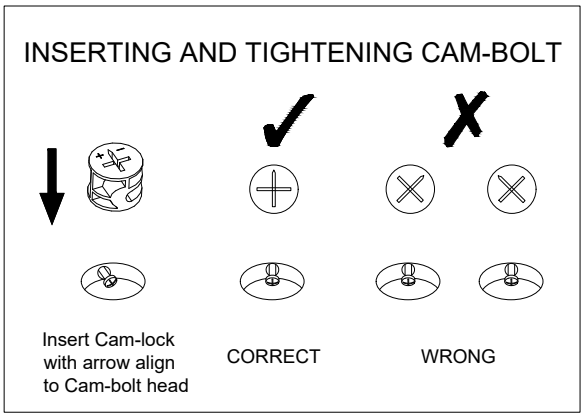
Note: Support the wooden plank during installation to prevent it from toppling over.





	E×4PCS
	Q×4PCS

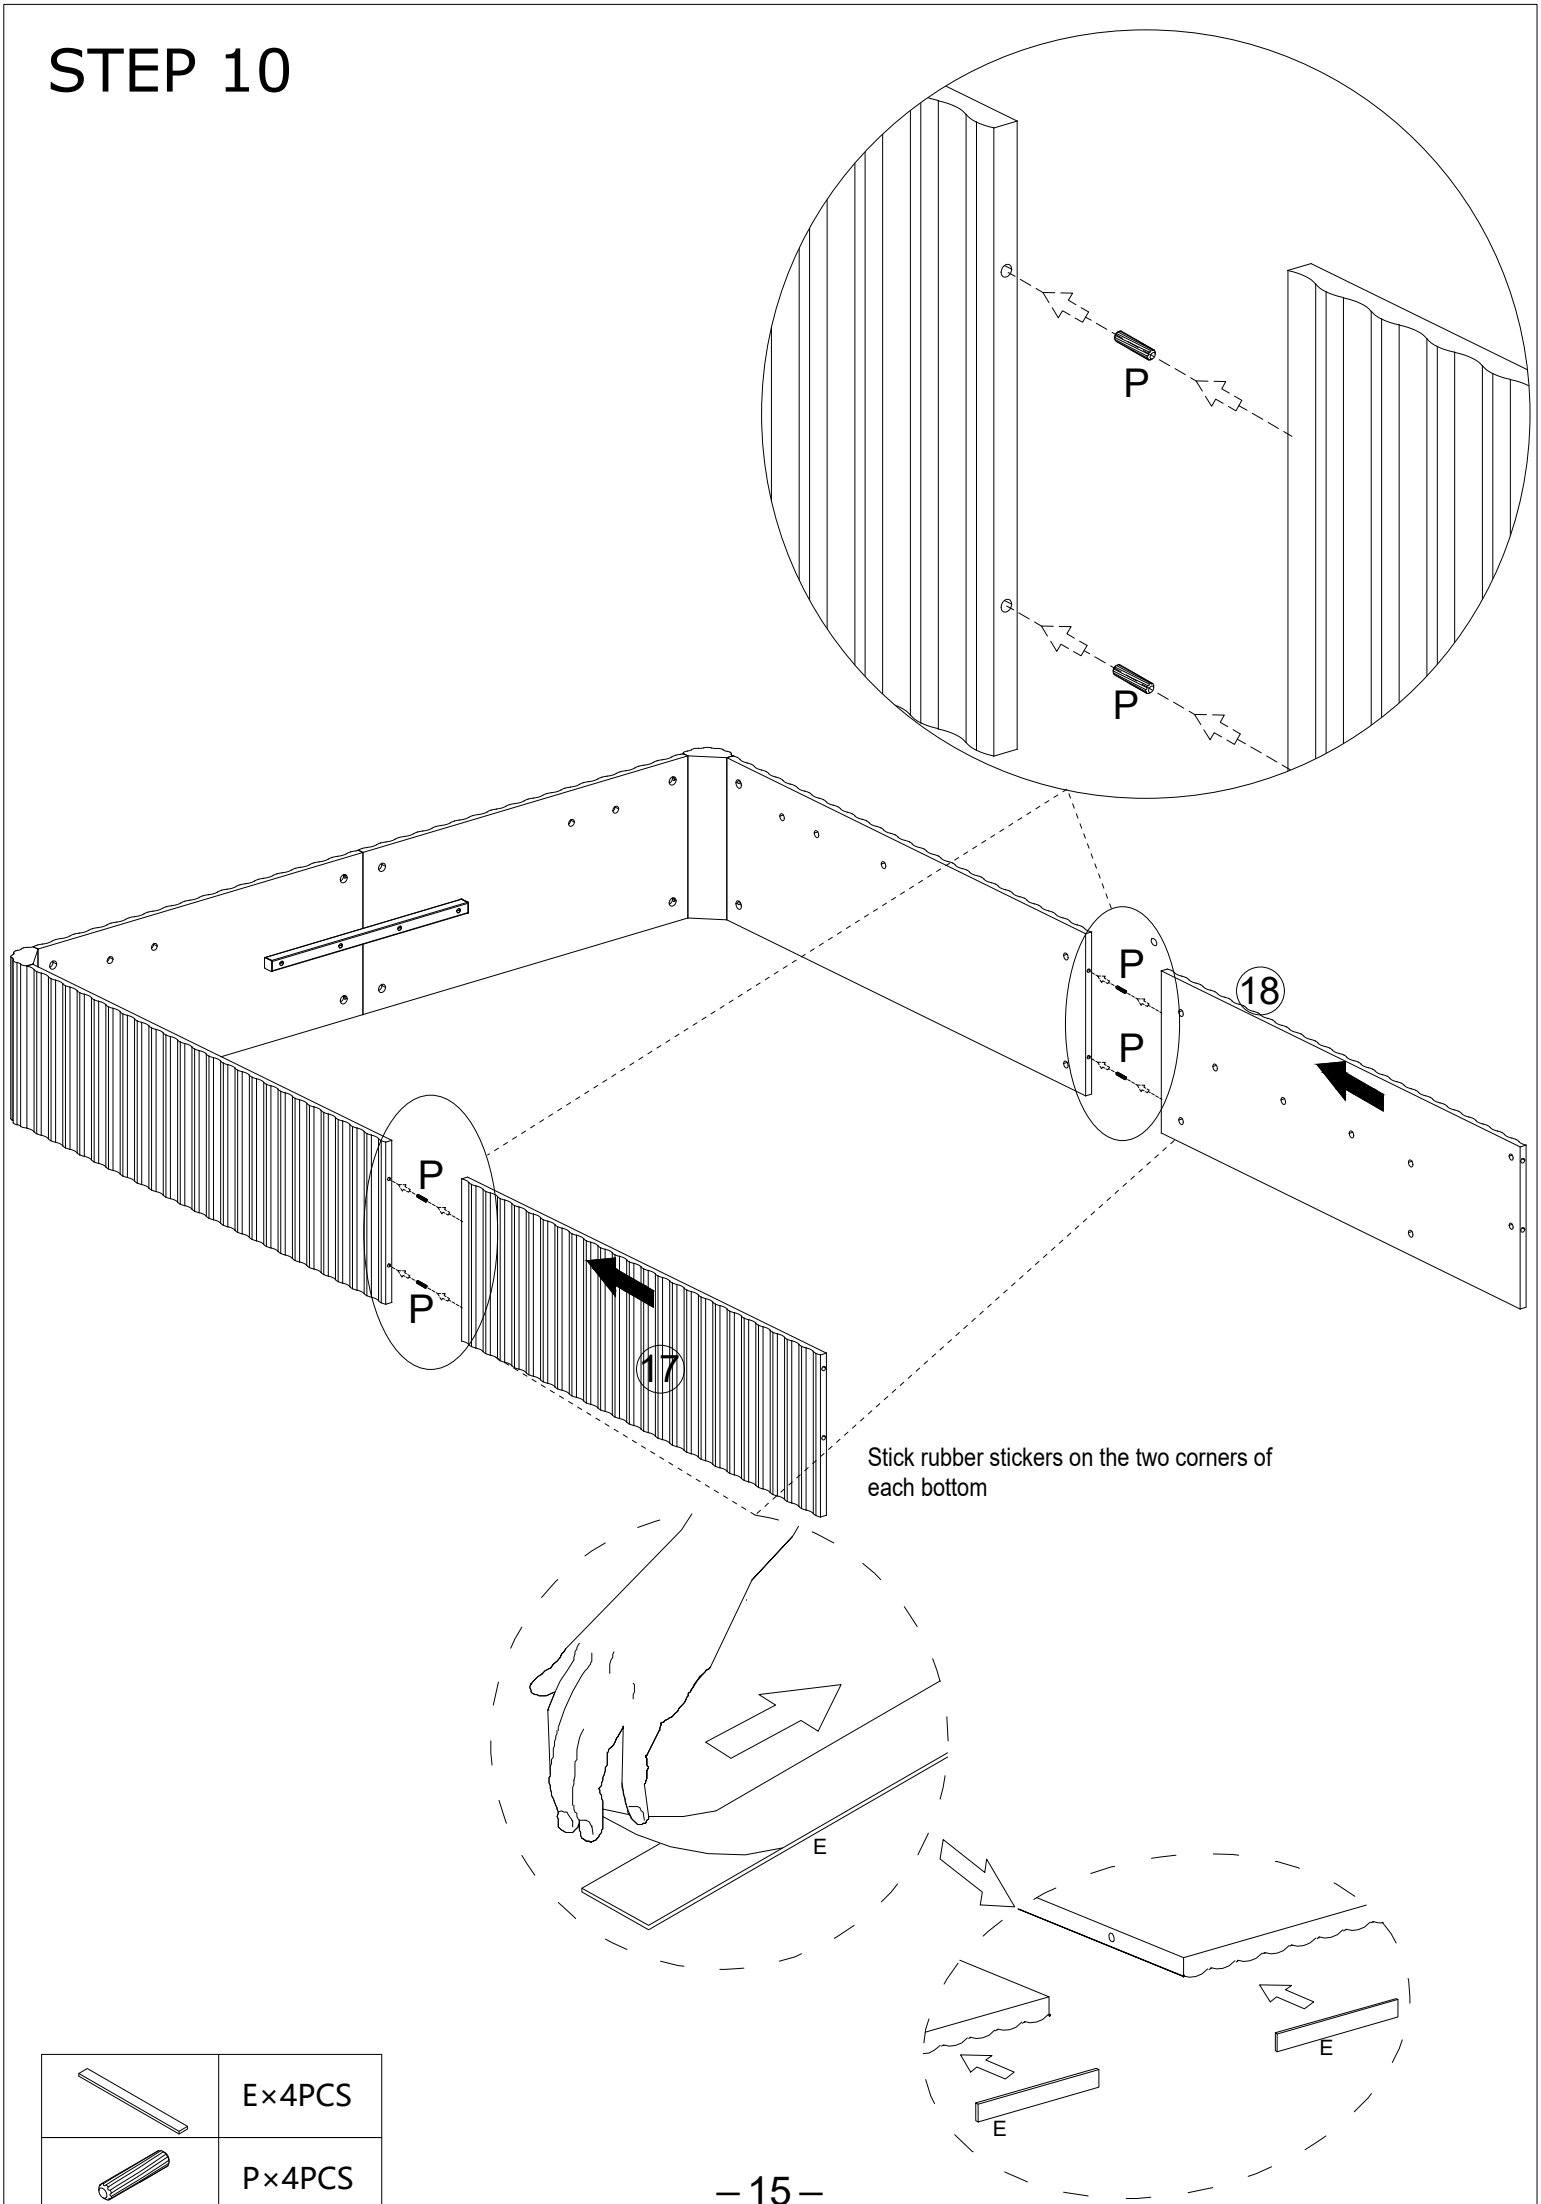
STEP 10




	E×4PCS
	P×4PCS

STEP 11

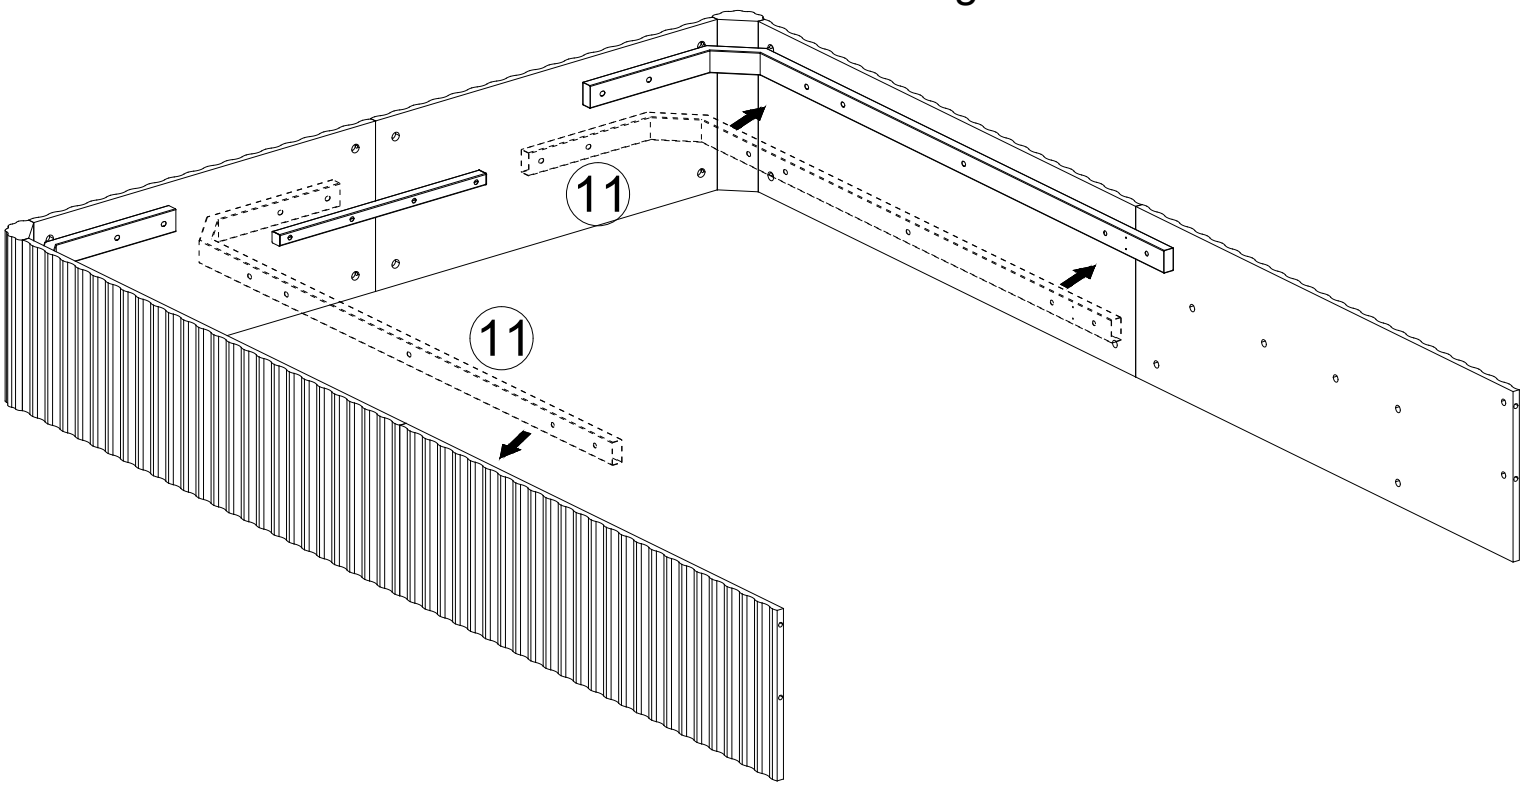
Note:First, place steel frame No. 11 in the correct position, adjust the holes, and then tighten the screws



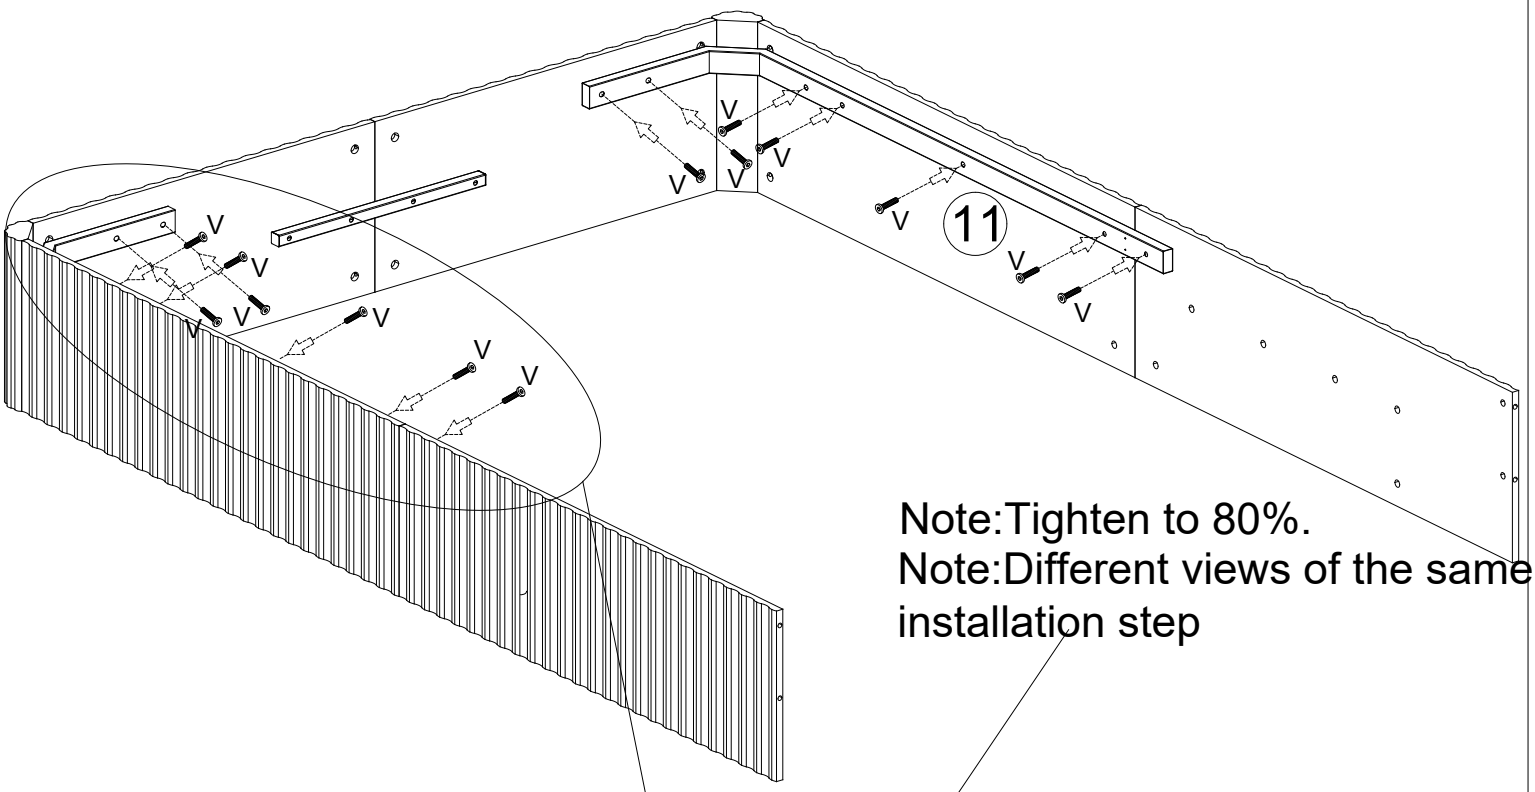STEP 12




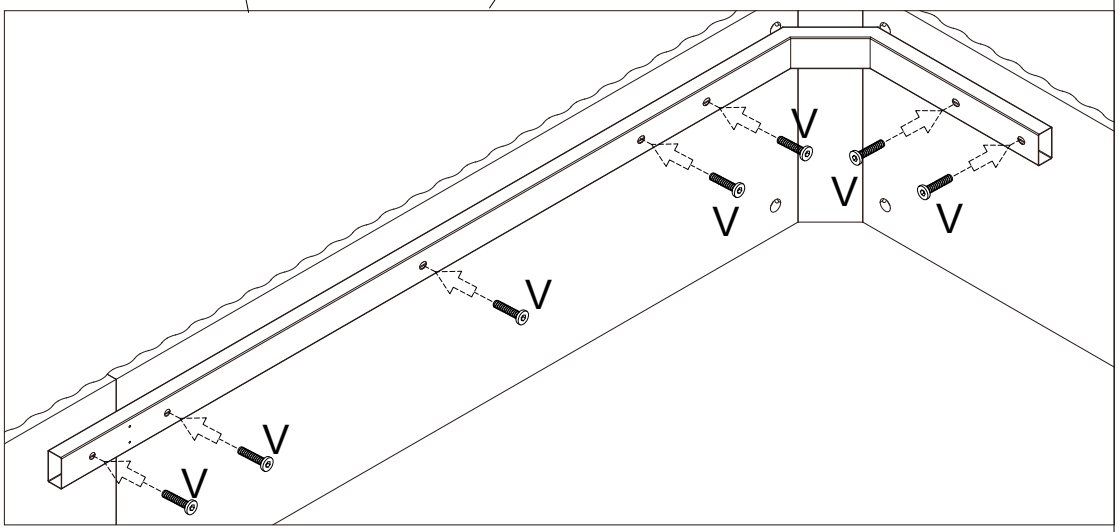Note:Tighten to 80%.
Note:Different views of the same installation step




M6X28	V×14PCS

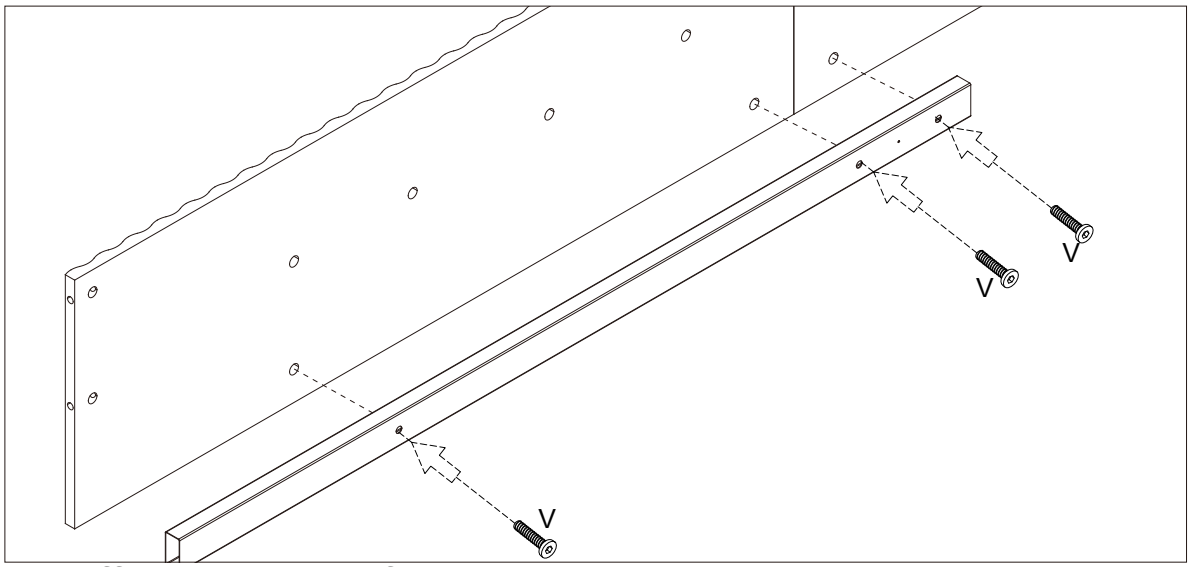STEP 13




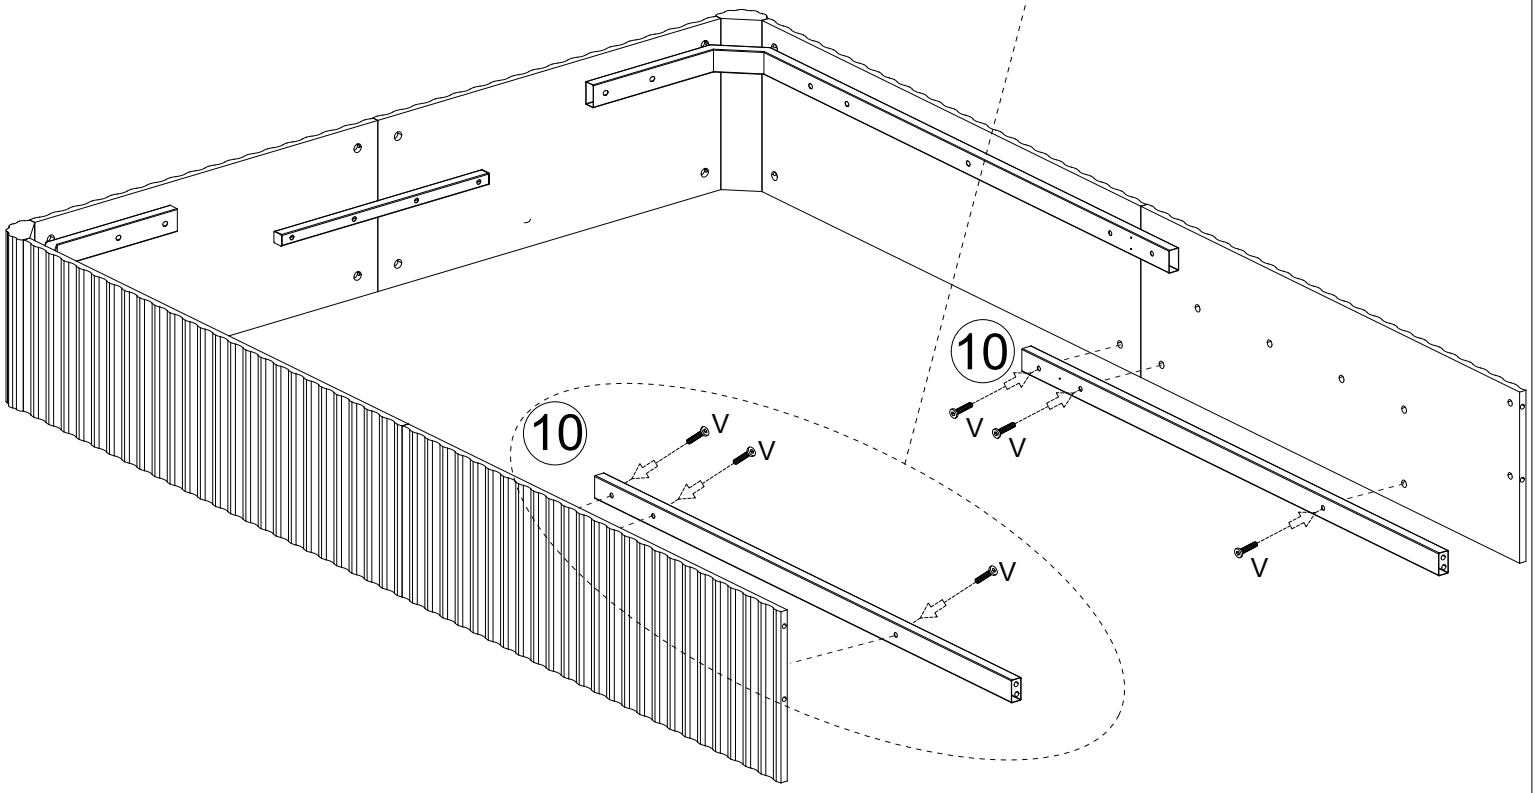Note:Different views of the same installation step



M6X28	V×6PCS

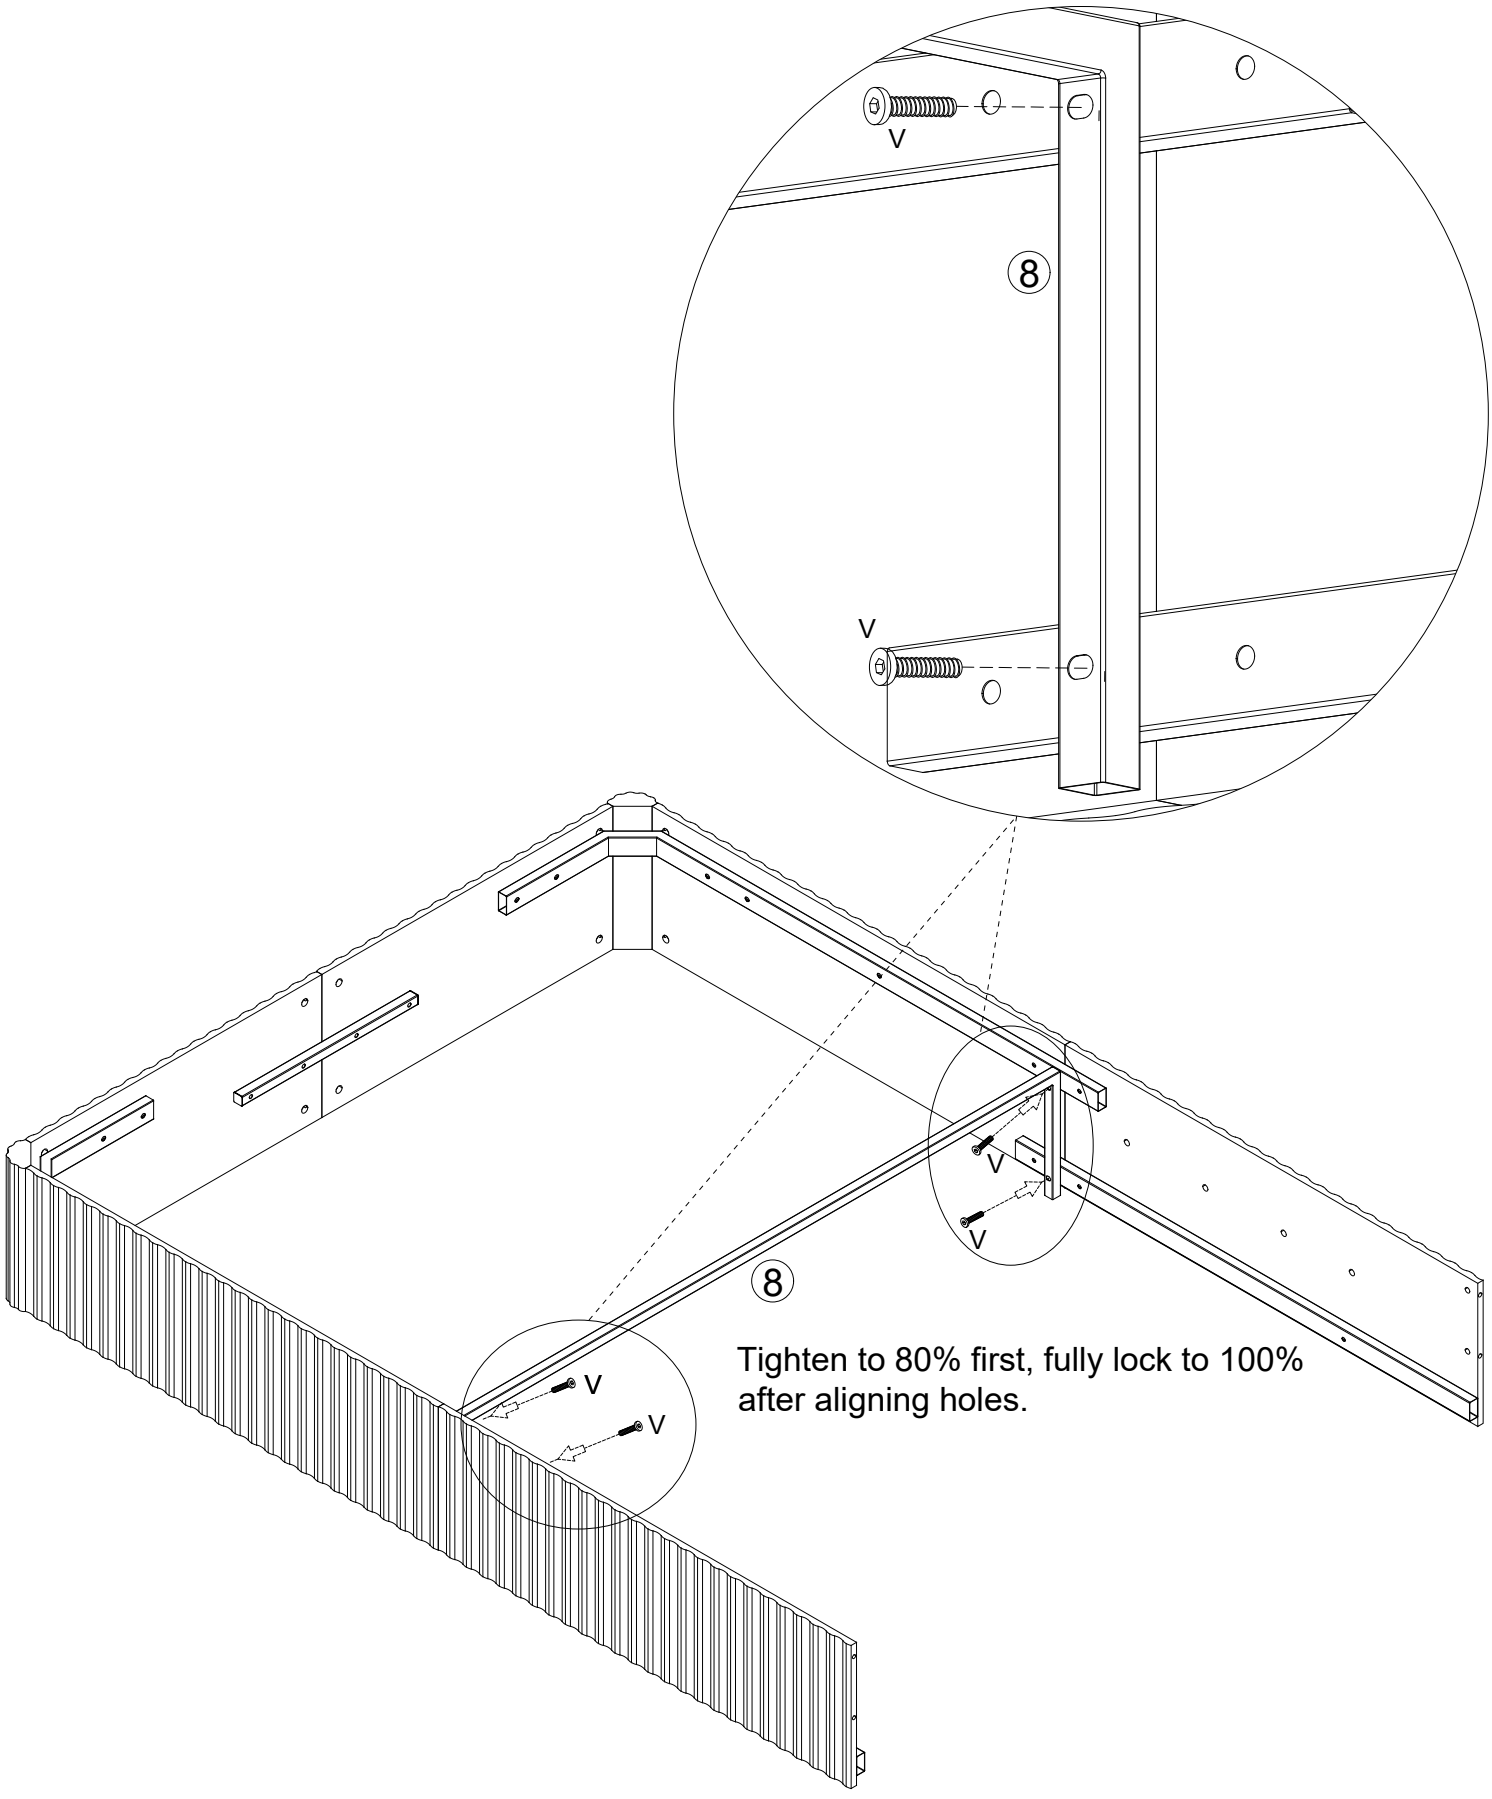
STEP 14



Tighten to 80% first, fully lock to 100% after aligning holes.

M6X28	V×4PCS

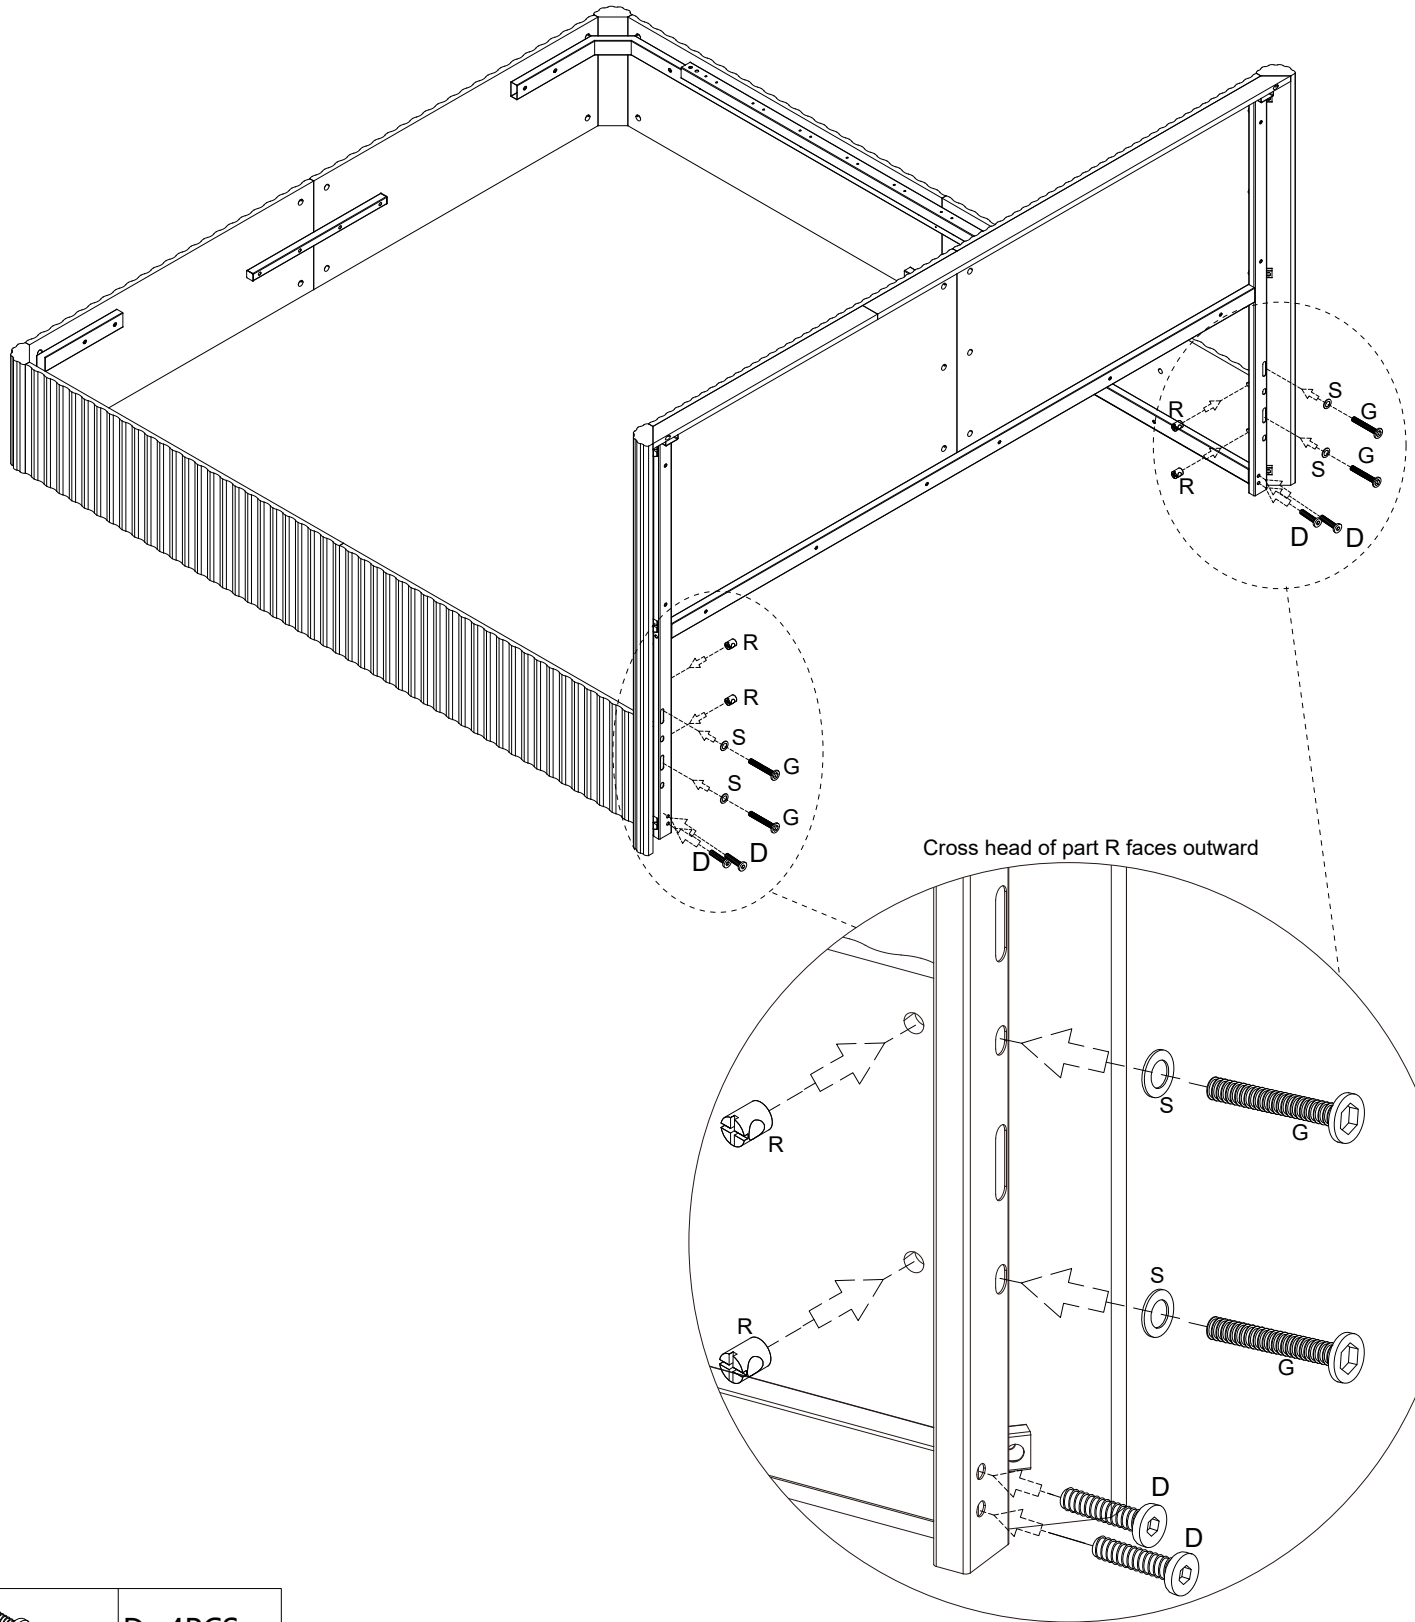
STEP 15



M6X35	D×4PCS
M8X50	G×4PCS
	R×4PCS
	S×4PCS

Note: When assembling, first insert the R accessory into the board, then tighten the screw.Note that the direction of the R parts should be aligned with hole position. If the screws cannot be locked, you can twist the R parts.

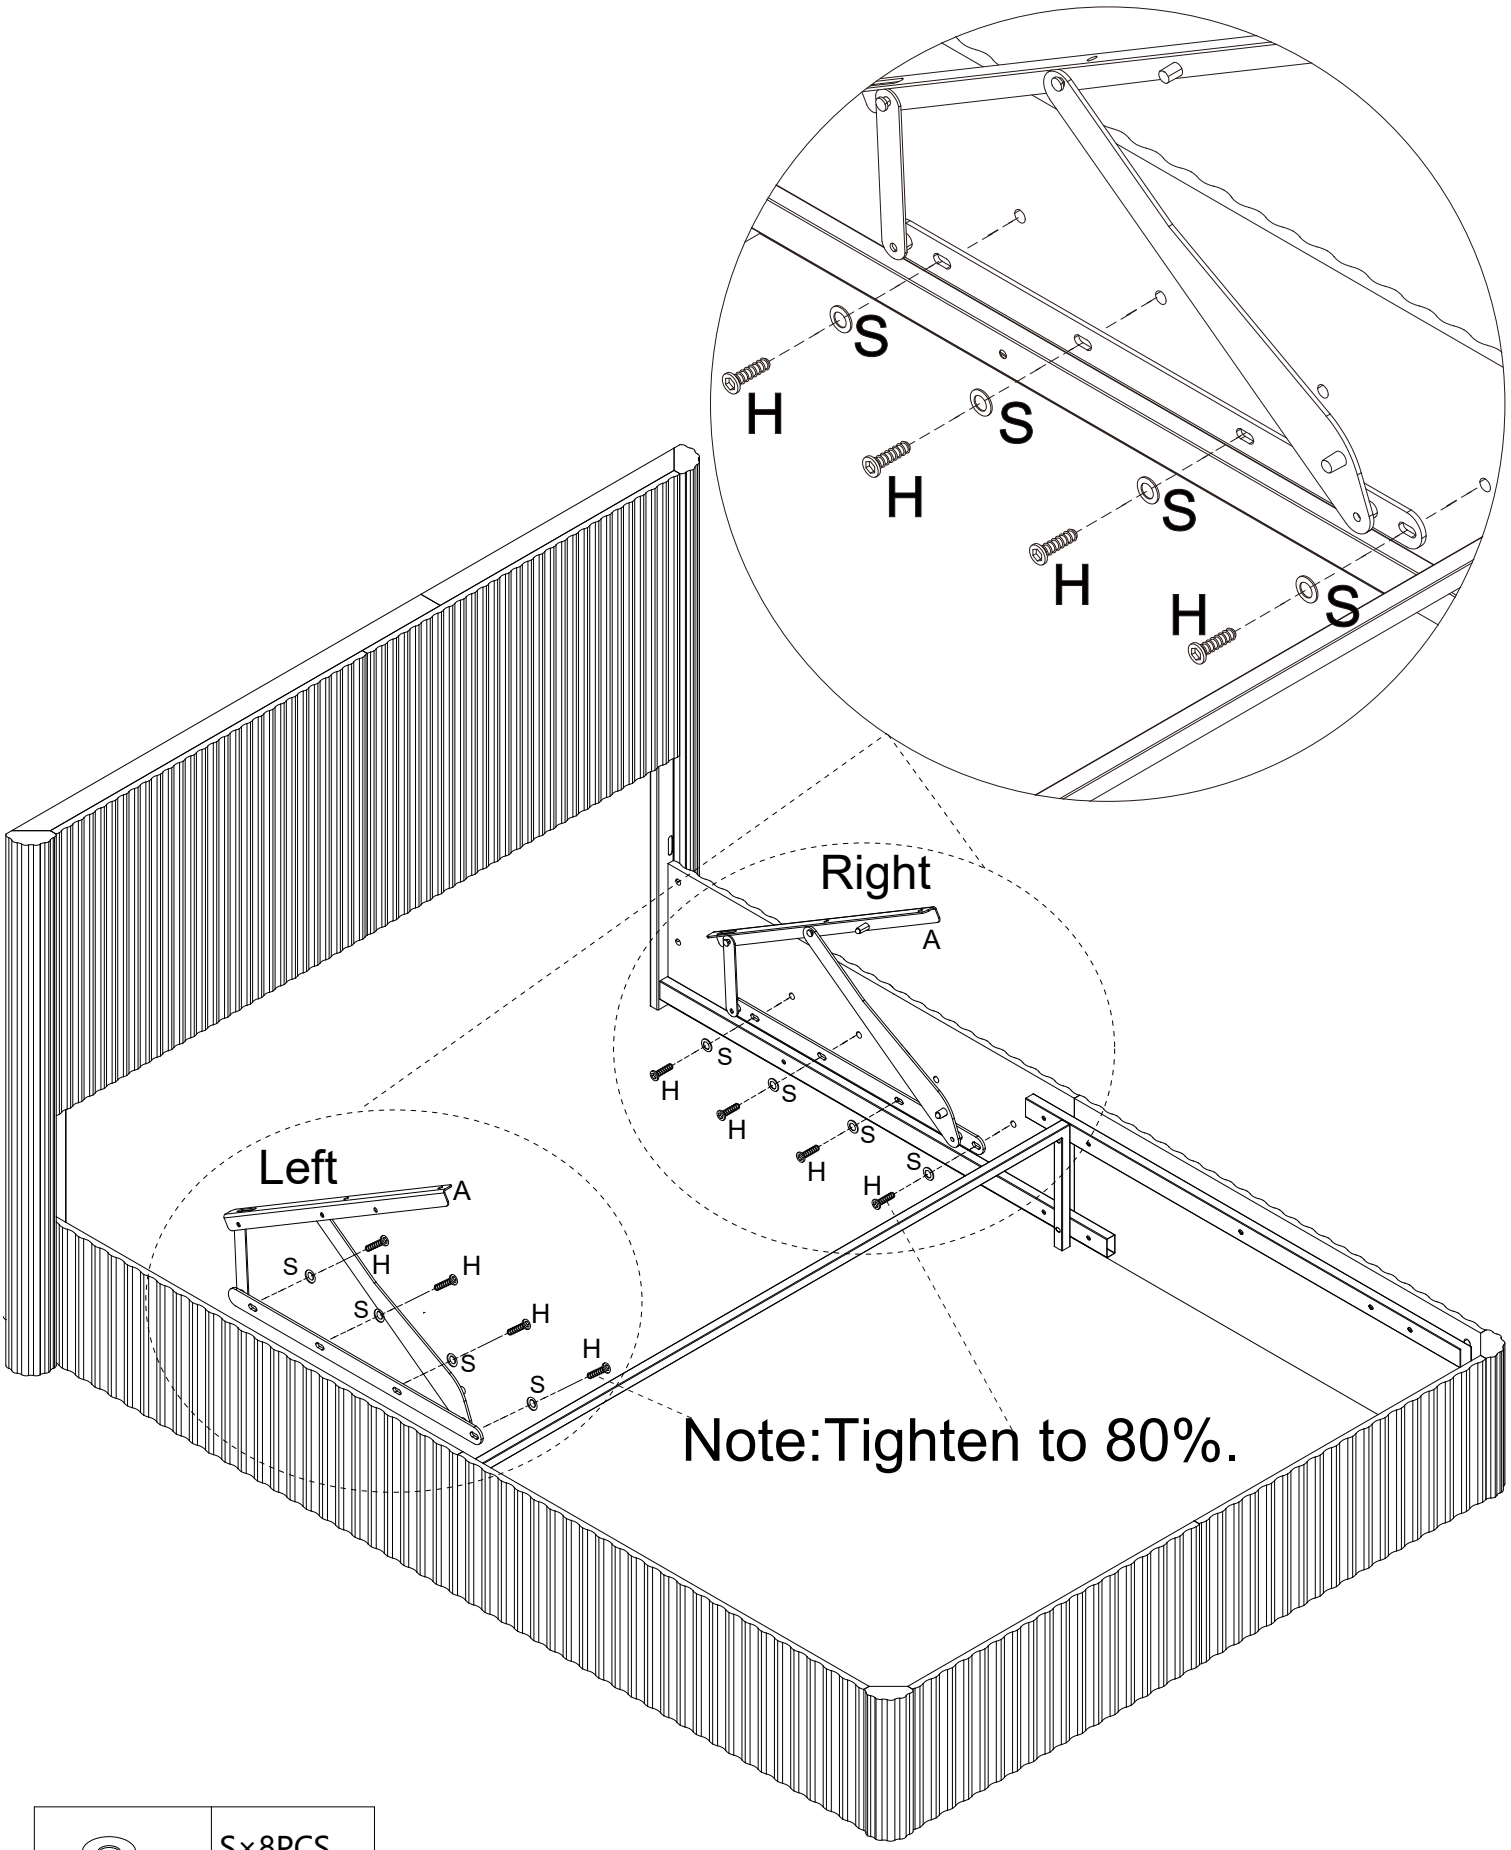
STEP 16



	S×8PCS
	A×1PC
M6X12	H×8PCS

STEP 17

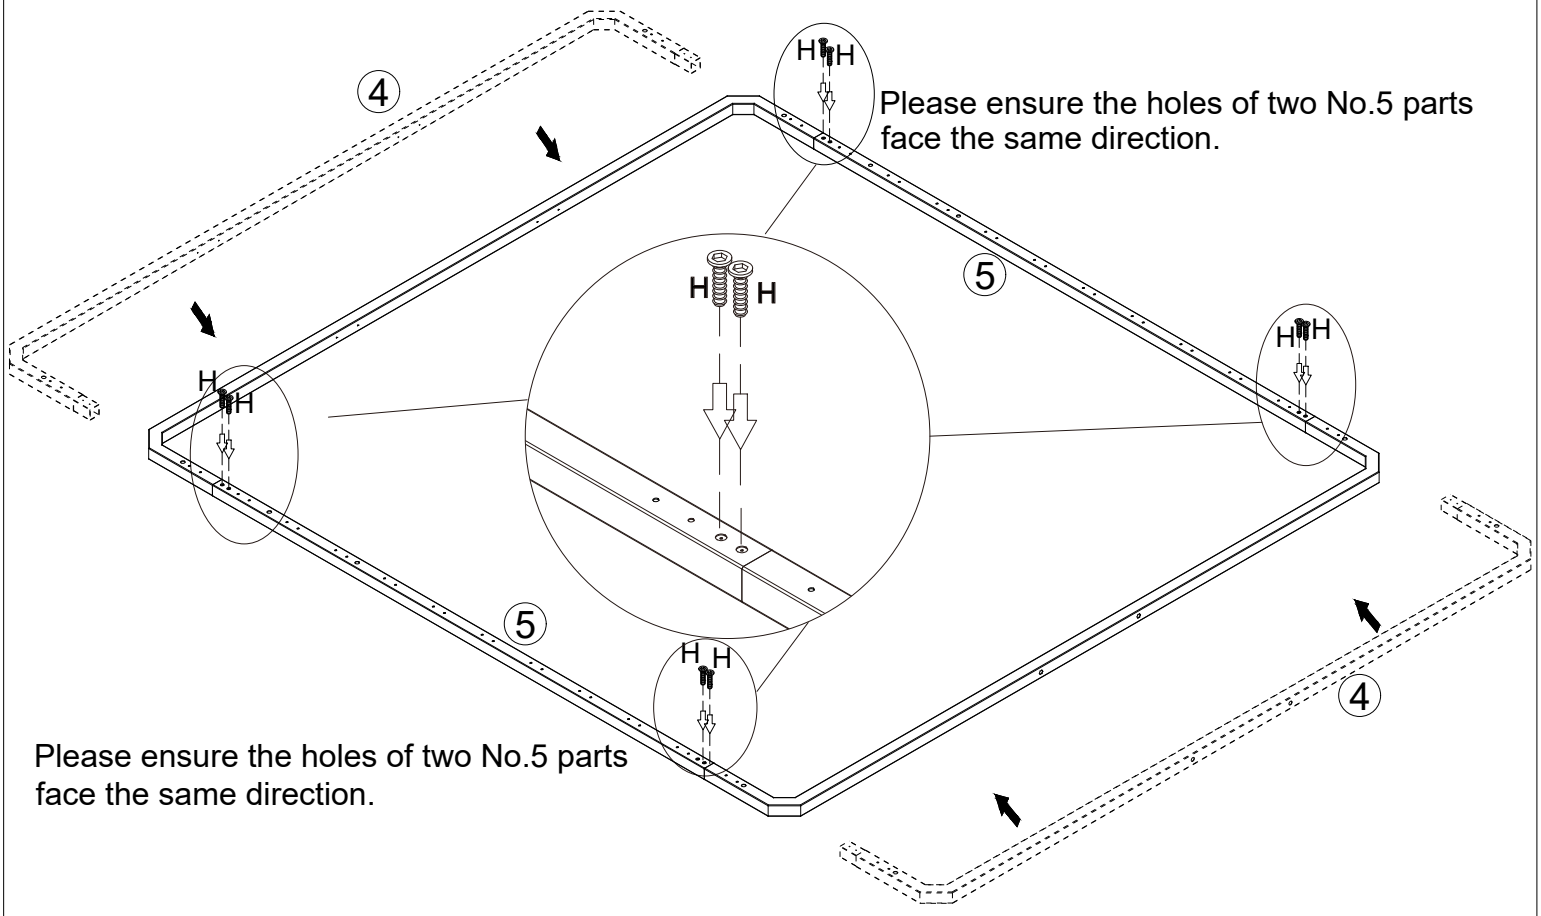
After installation, flip the bed frame 180° for Step 19 assembly.



M6X12	H×8PCS


STEP 18

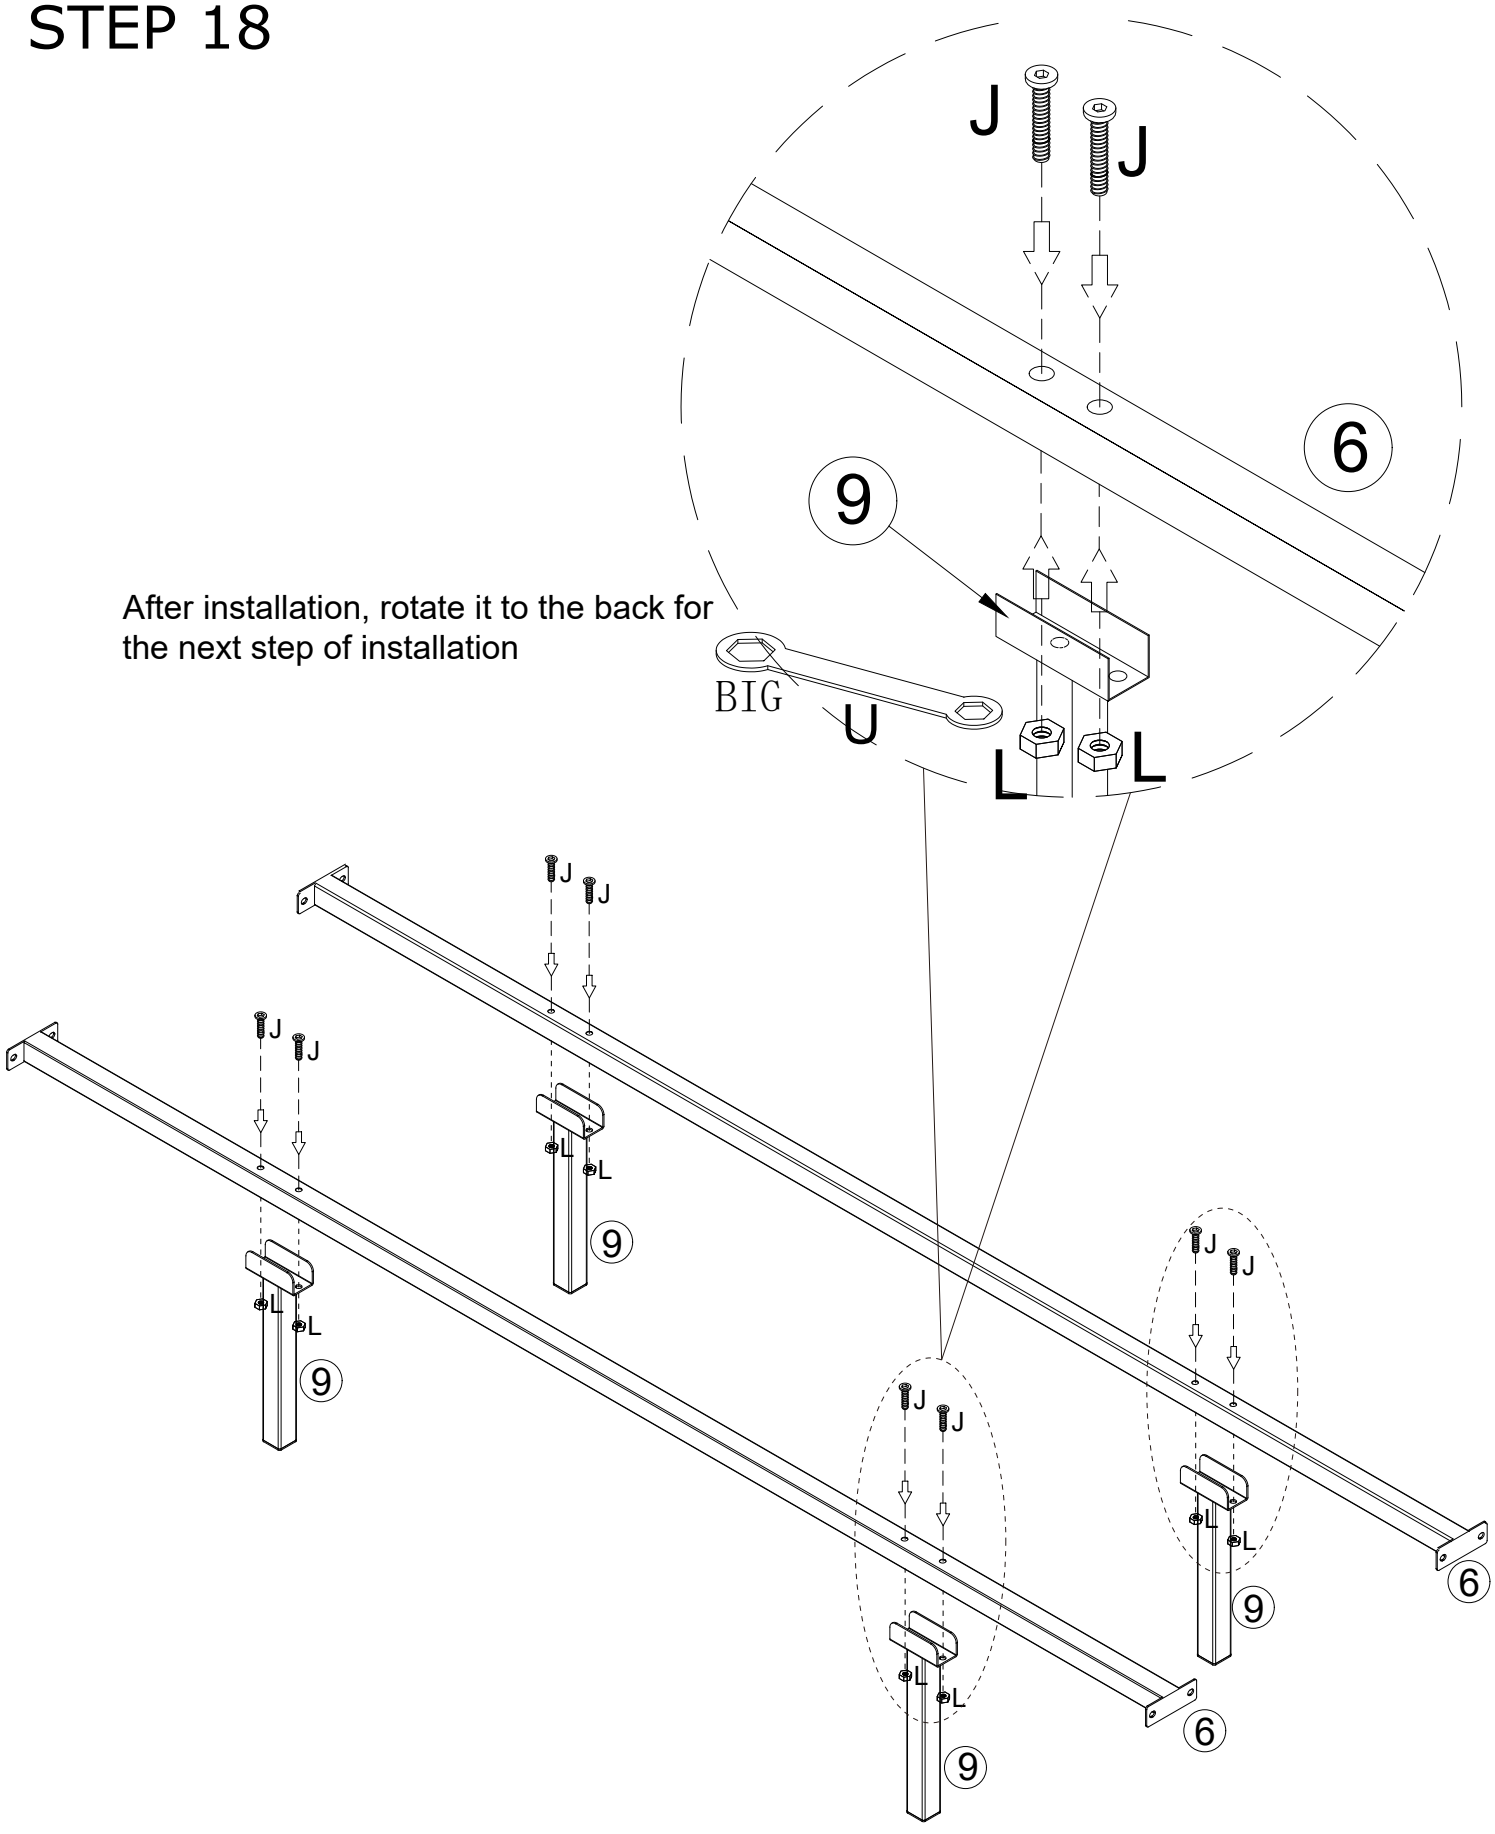After installation, rotate it to the back for the next step of installation



	9#×4PCS
M6X55	J×8PCS
M6	L×8PCS

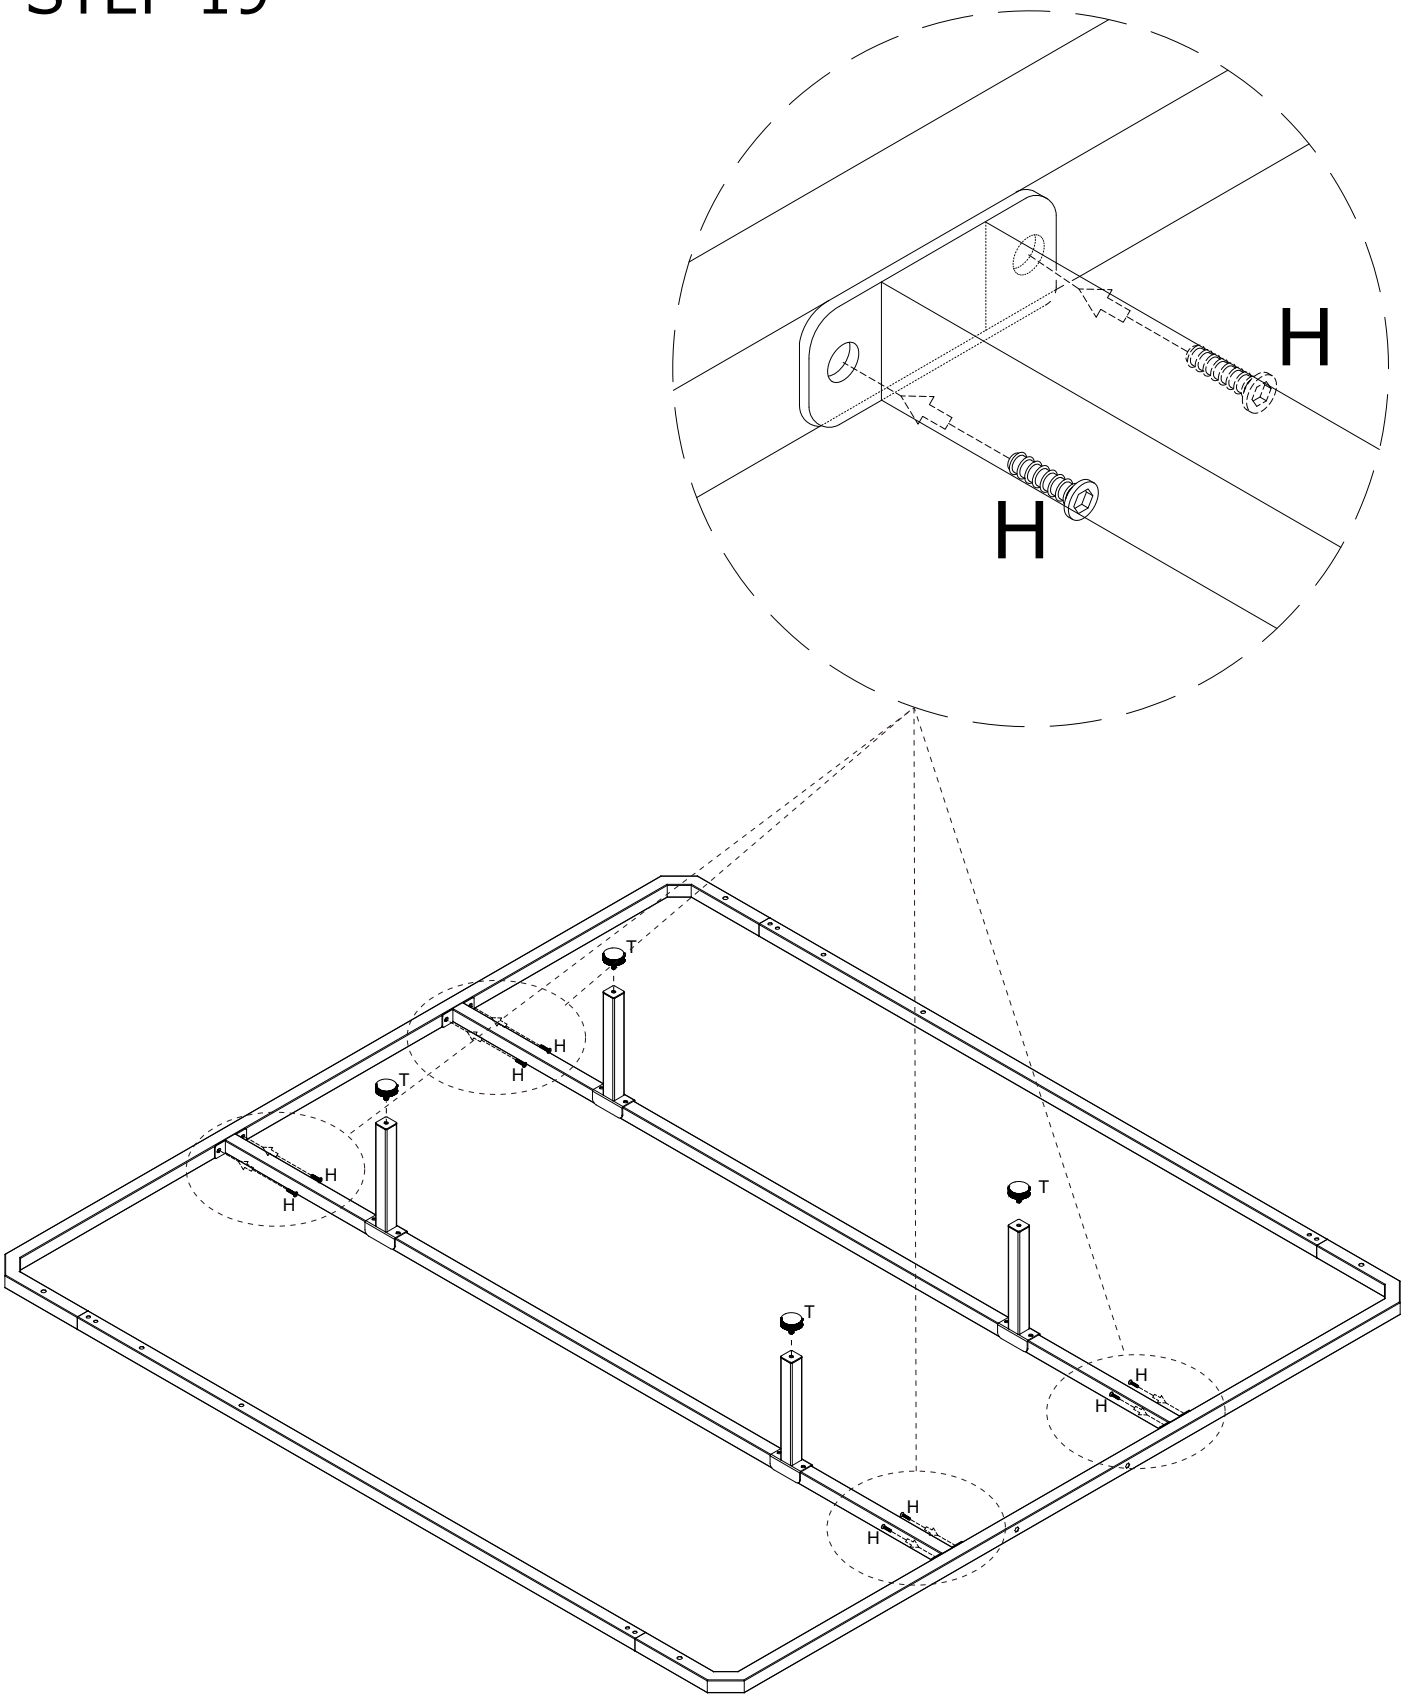STEP 19




	T×4PCS
M6X12	H×8PCS

This adjusting foot can be used to adjust the height when the bed frame is placed on uneven ground

STEP 20

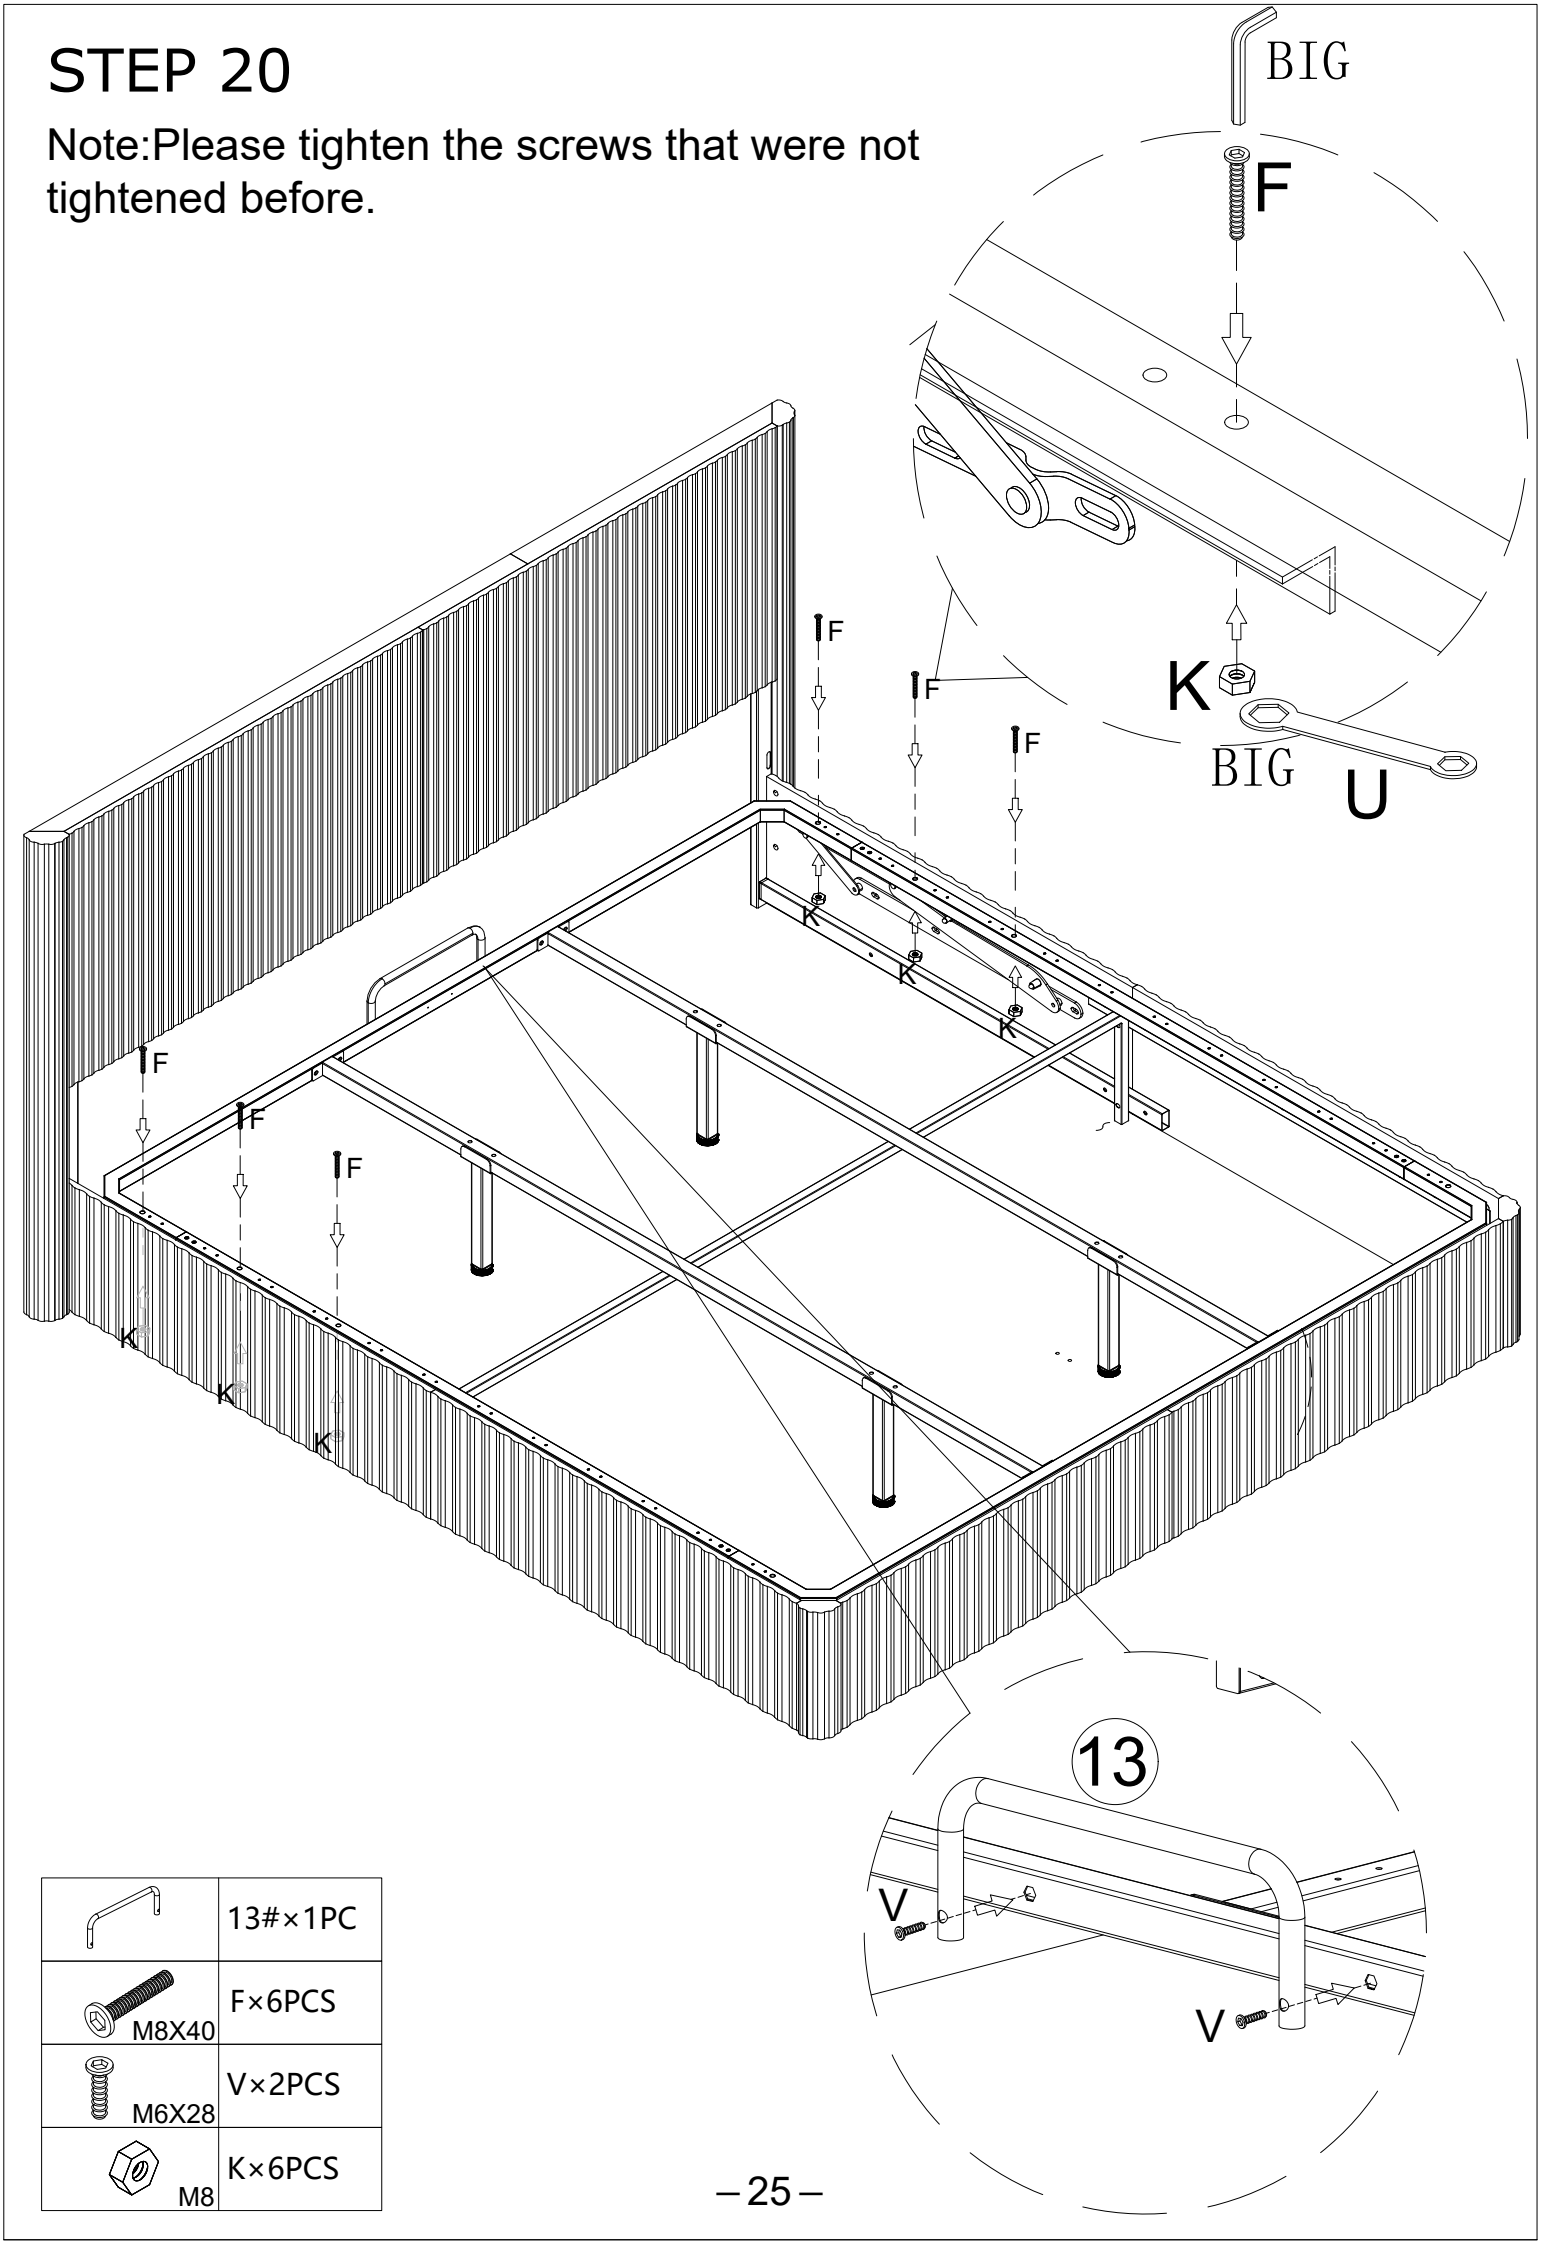
Note:Please tighten the screws that were not tightened before.




	13#×1PC
M8X40	F×6PCS
M6X28	V×2PCS
M8	K×6PCS

STEP 21

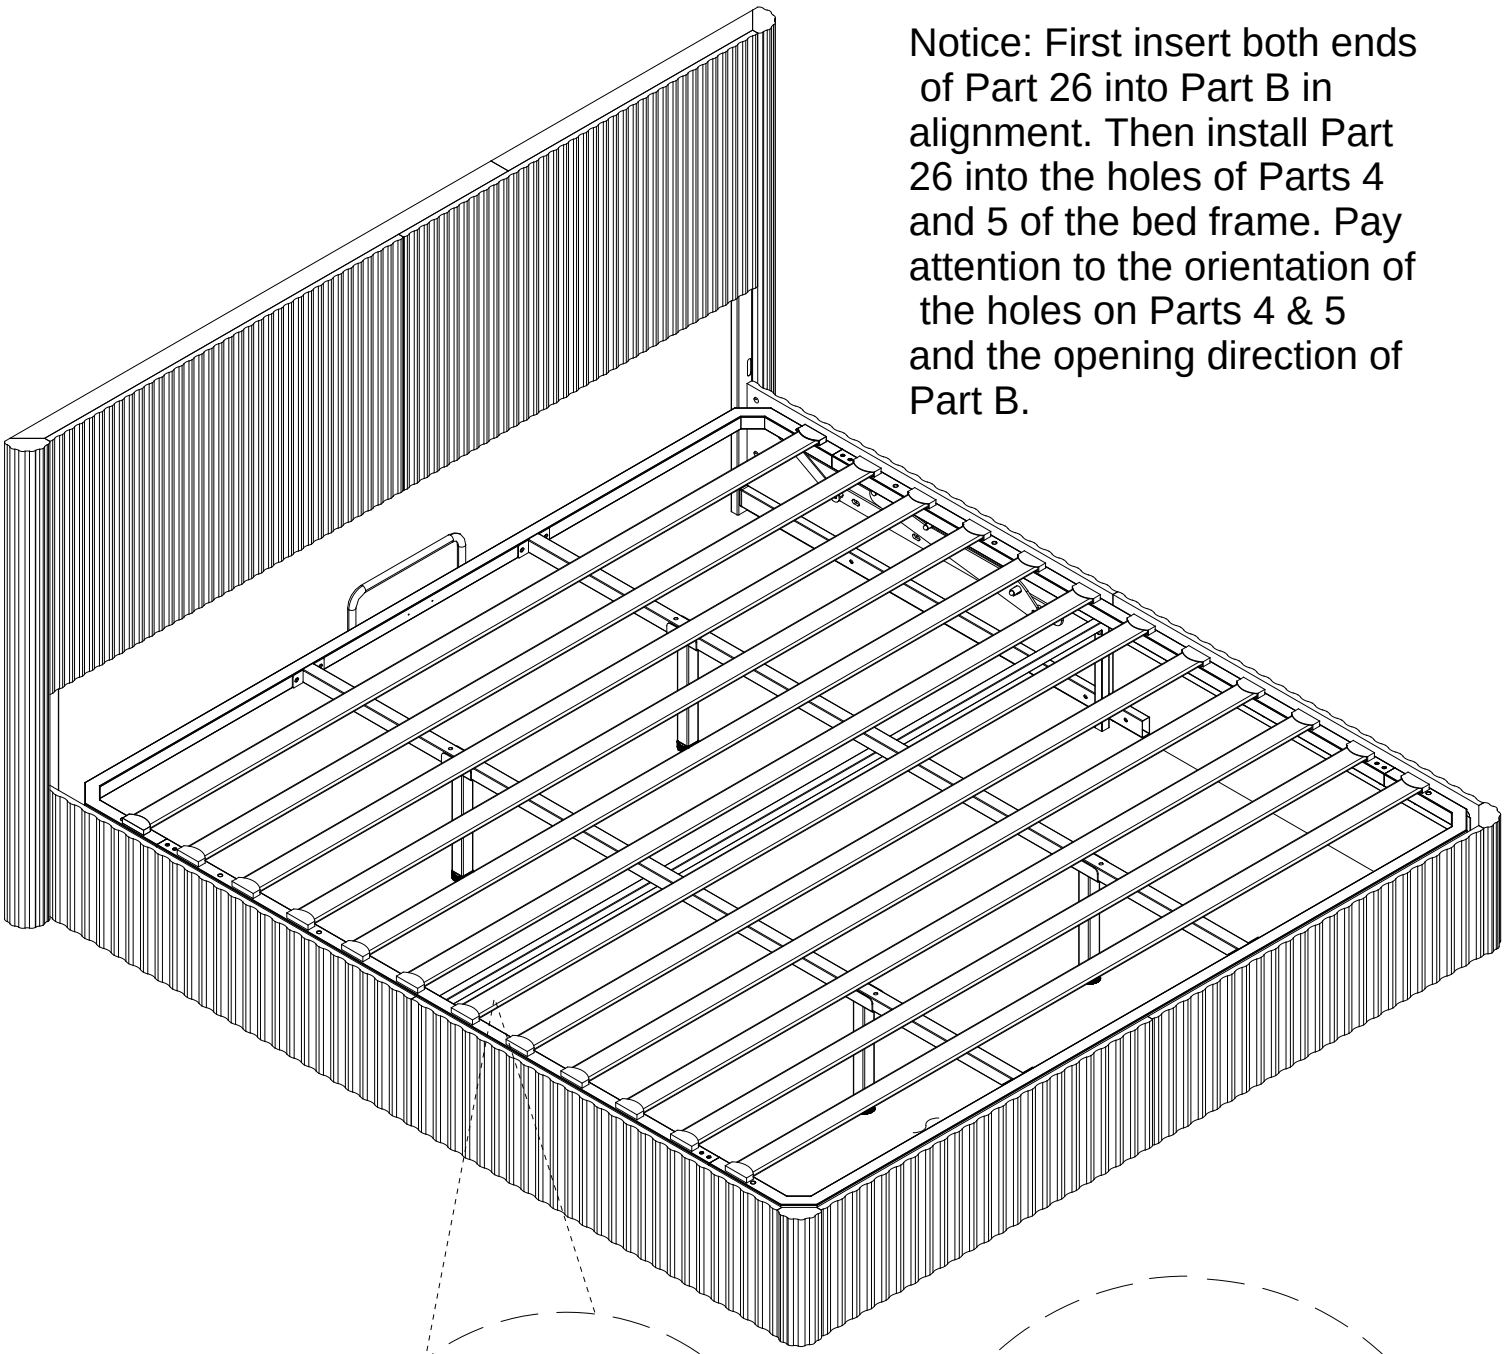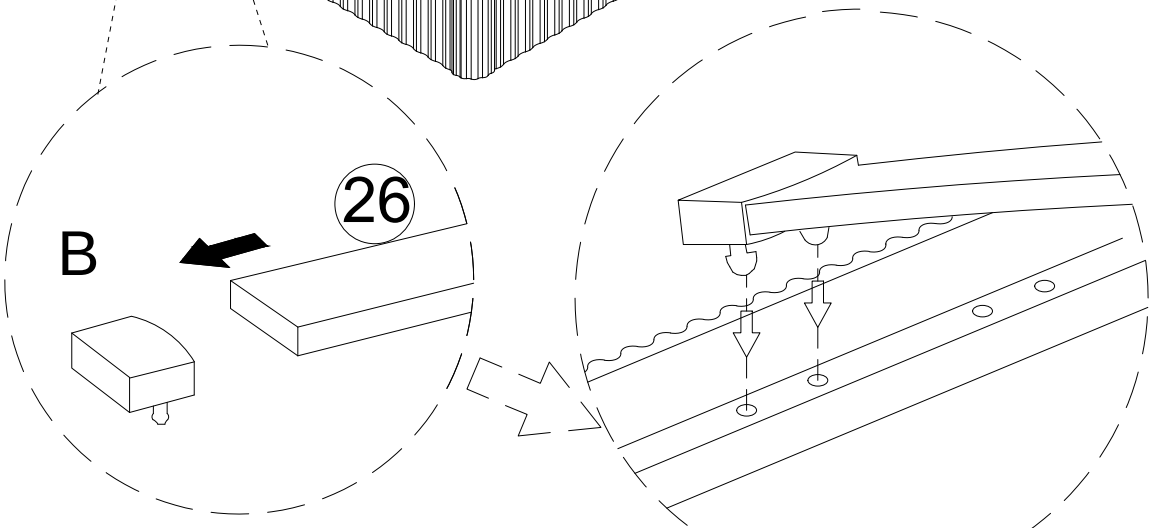Notice: First insert both ends of Part 26 into Part B in alignment. Then install Part 26 into the holes of Parts 4 and 5 of the bed frame. Pay attention to the orientation of the holes on Parts 4 & 5 and the opening direction of Part B.






First step


Second step

	B×24PCS
	26#×12PCS

STEP 22

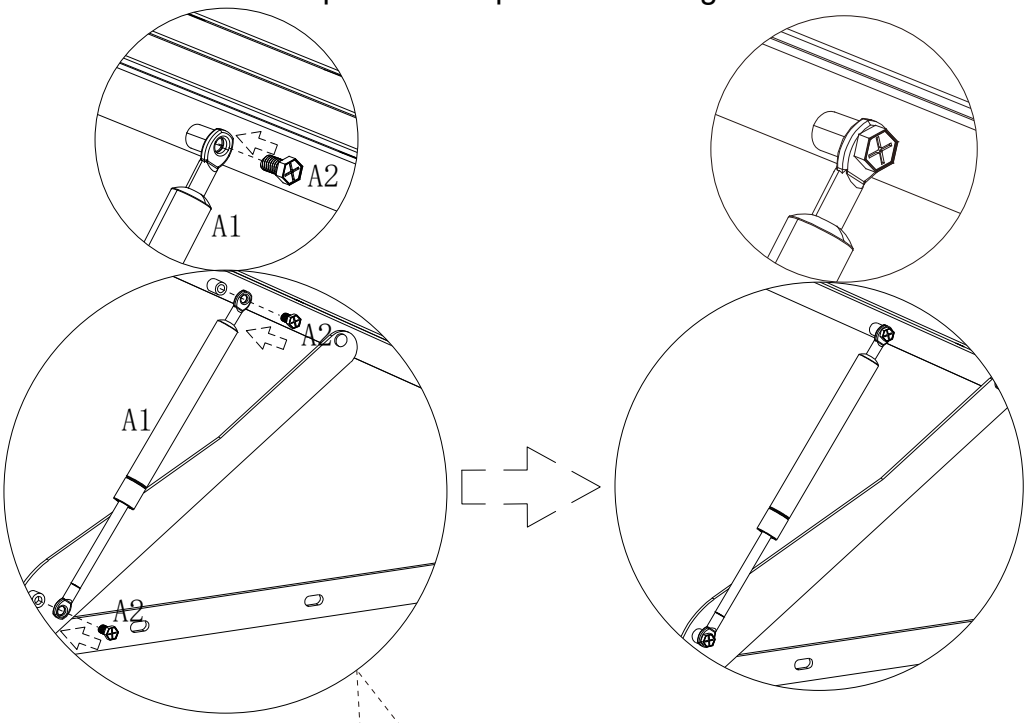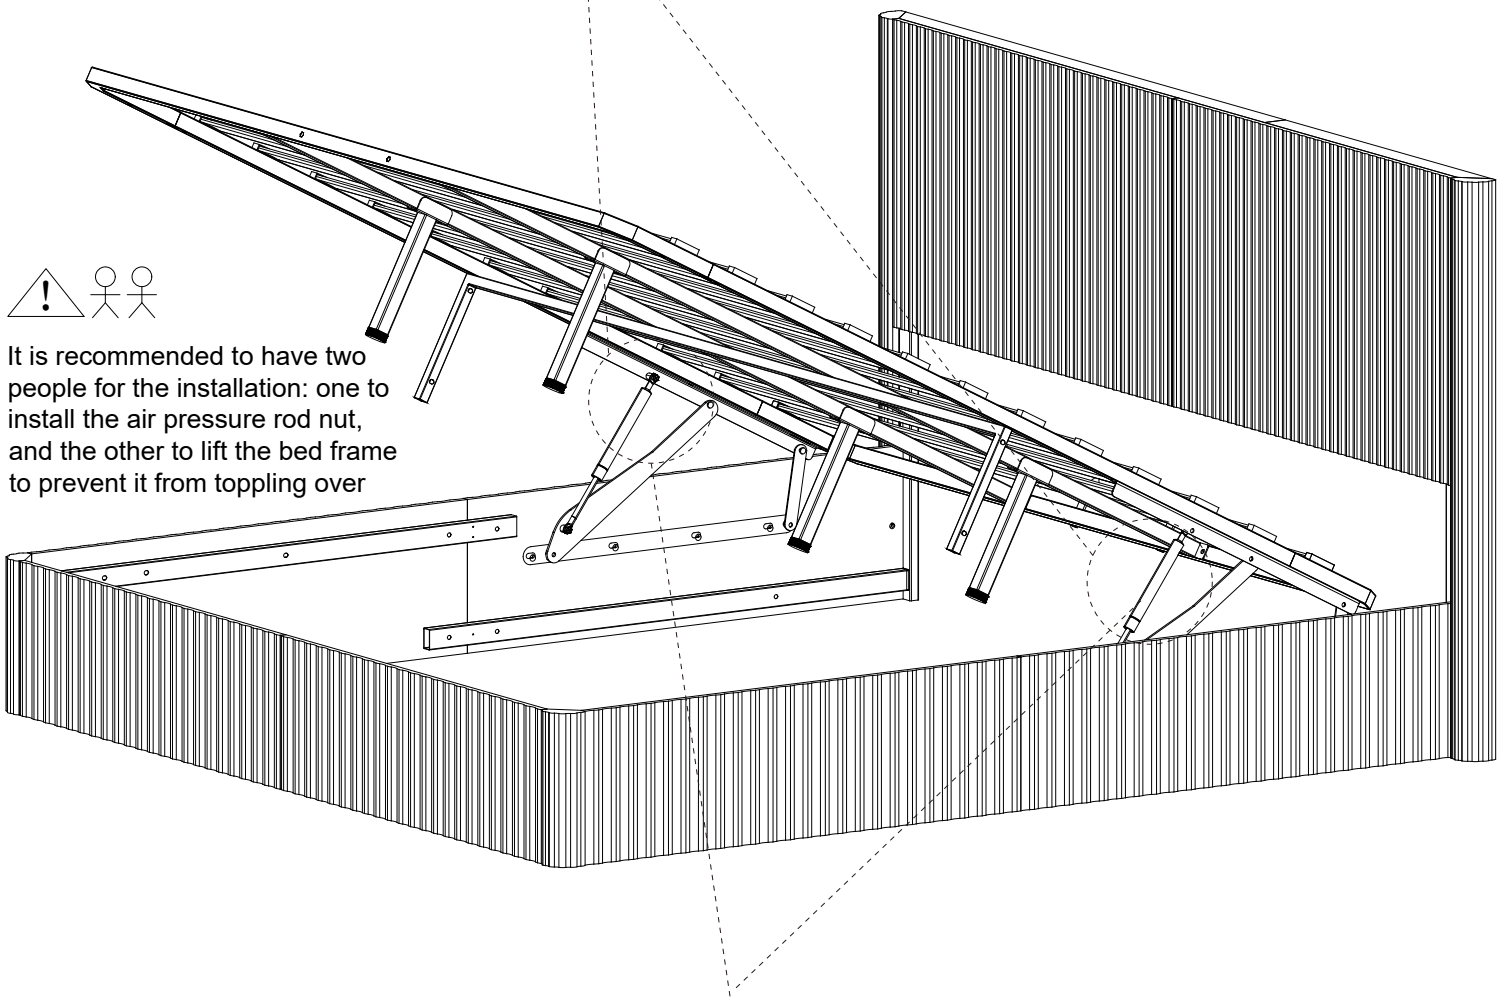Before lifting for installation, confirm whether the screws from the previous steps are 100% tightened.






It is recommended to have two people for the installation: one to install the air pressure rod nut, and the other to lift the bed frame to prevent it from toppling over


Note:When installing the hydraulic rod, ensure the screw holes on both ends are aligned. If they are not aligned, please adjust them accordingly during installation.

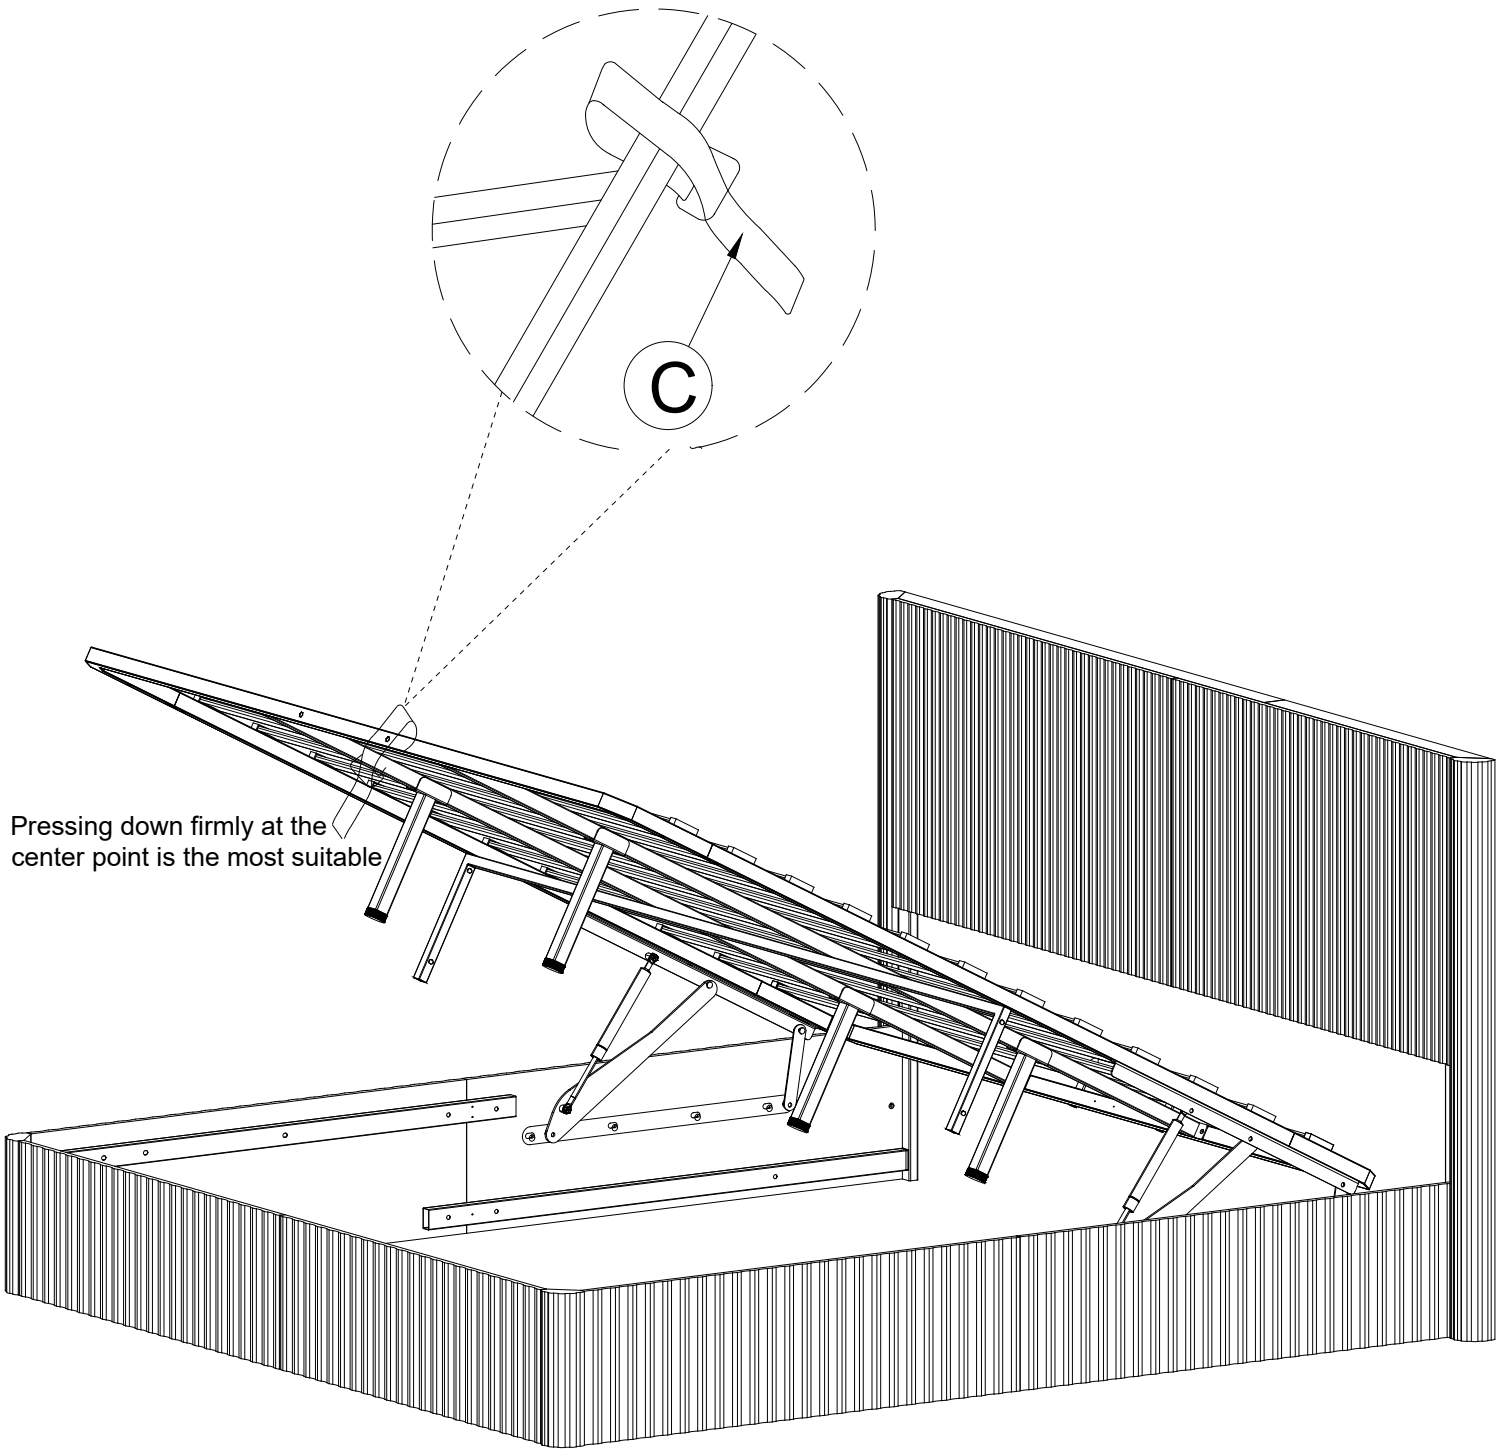STEP 23


C
Pressing down firmly at the
center point is the most suitable

	C#×1PC

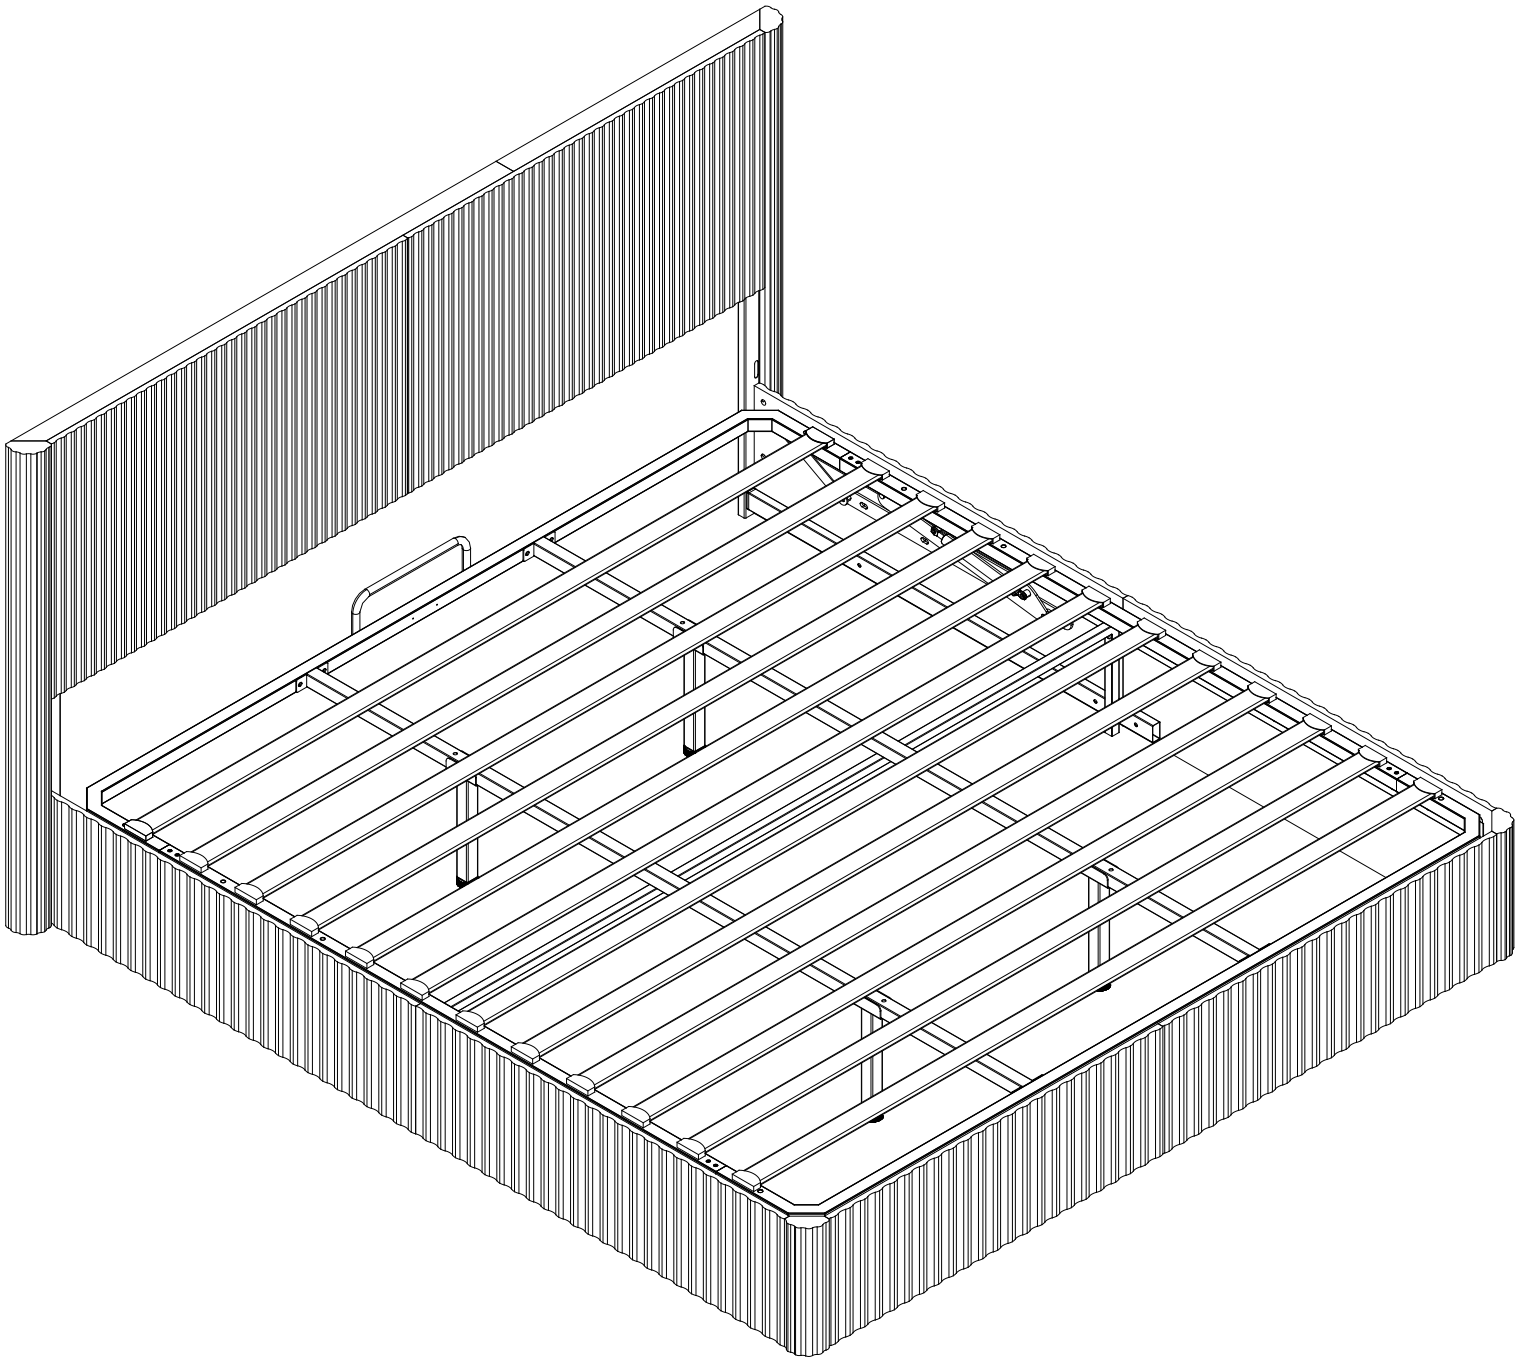STEP 24



Assembly Complete