

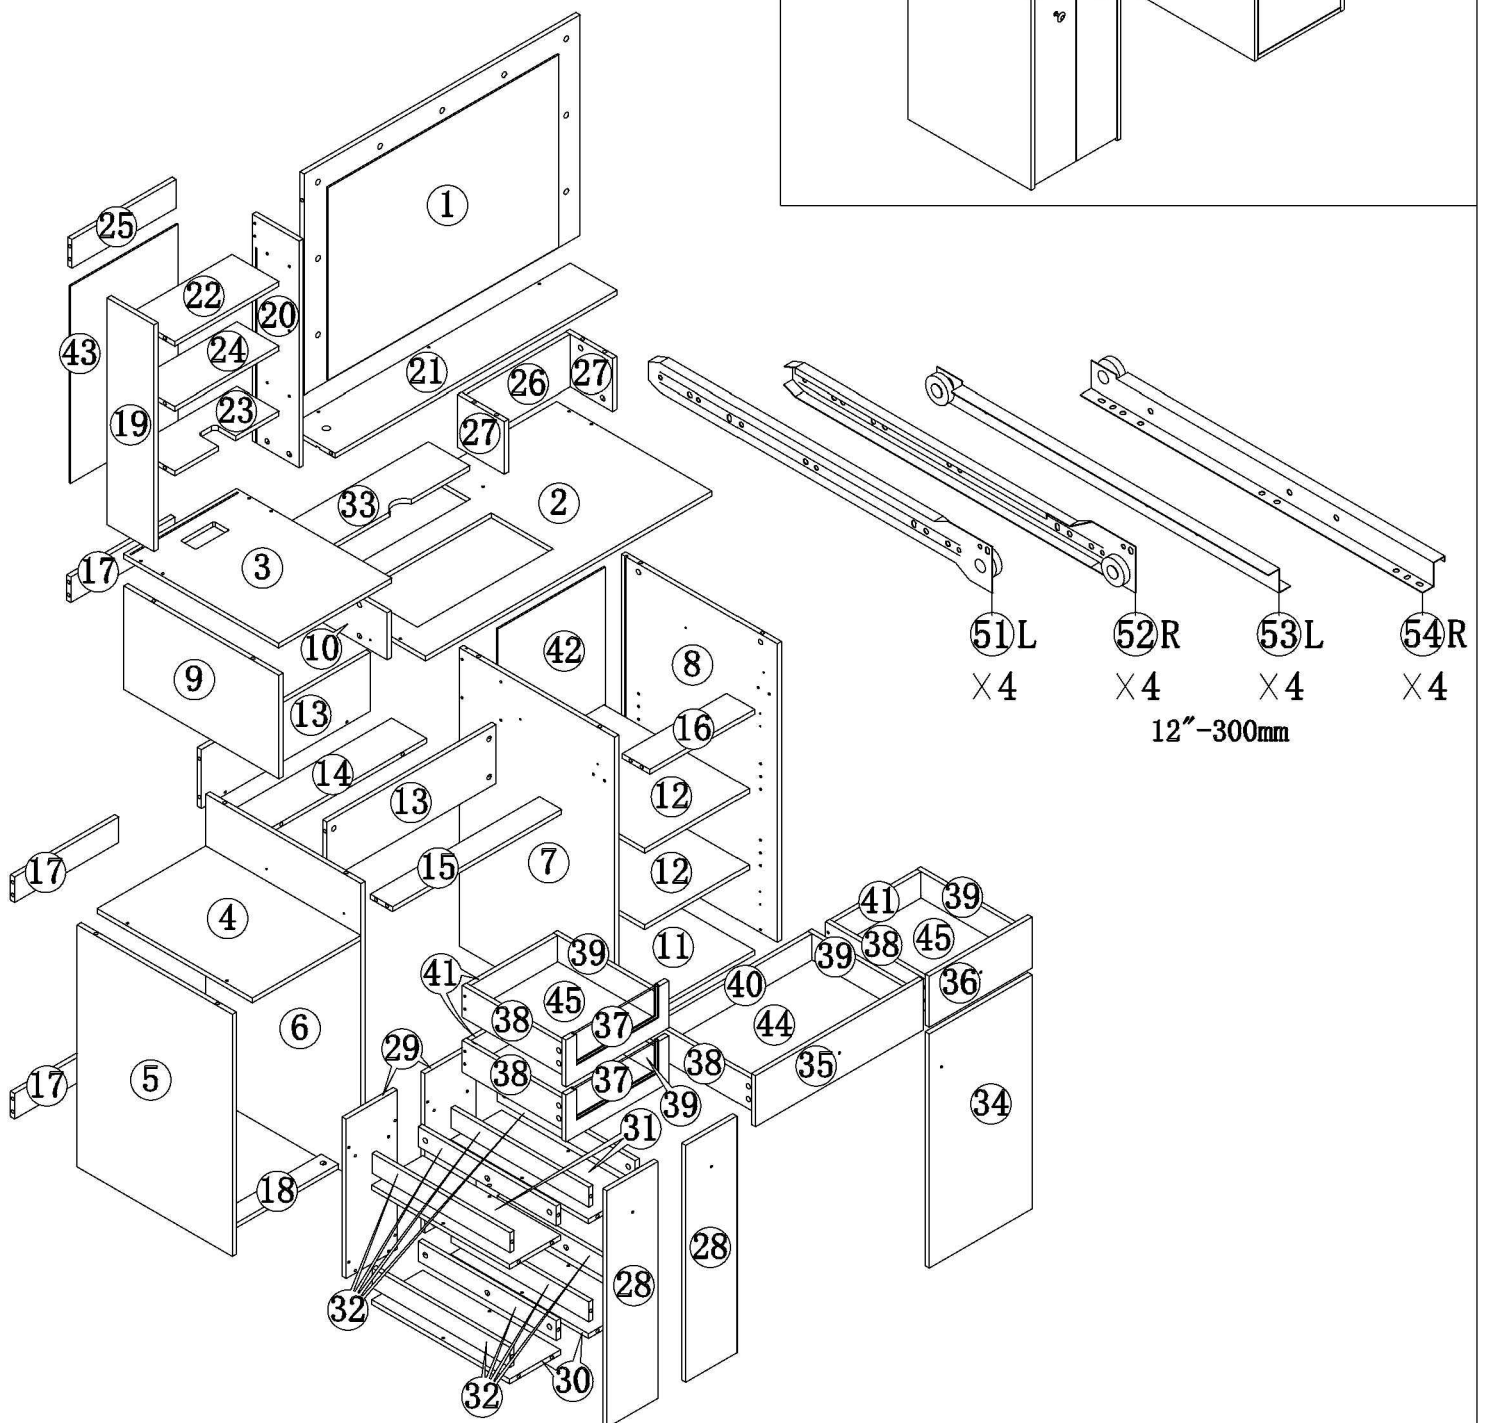
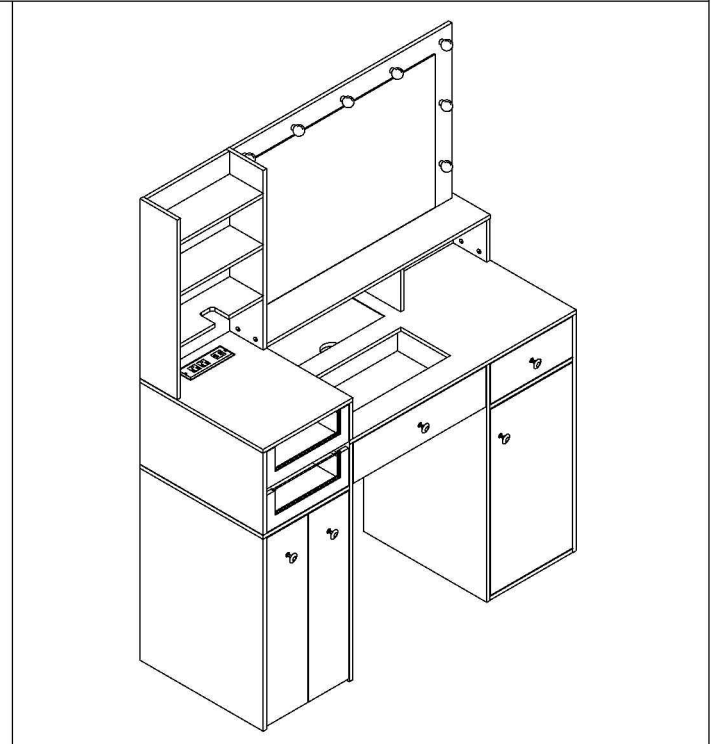


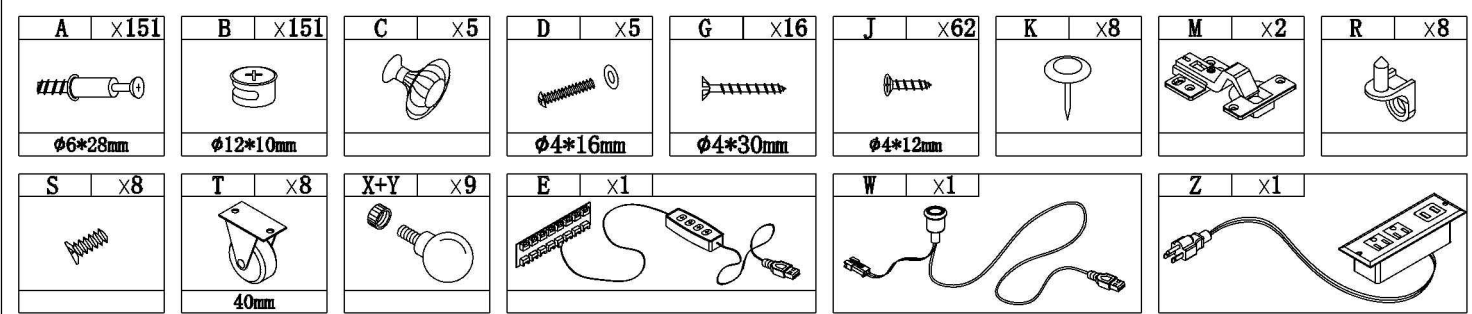

ASSEMBLY INSTRUCTION


P2

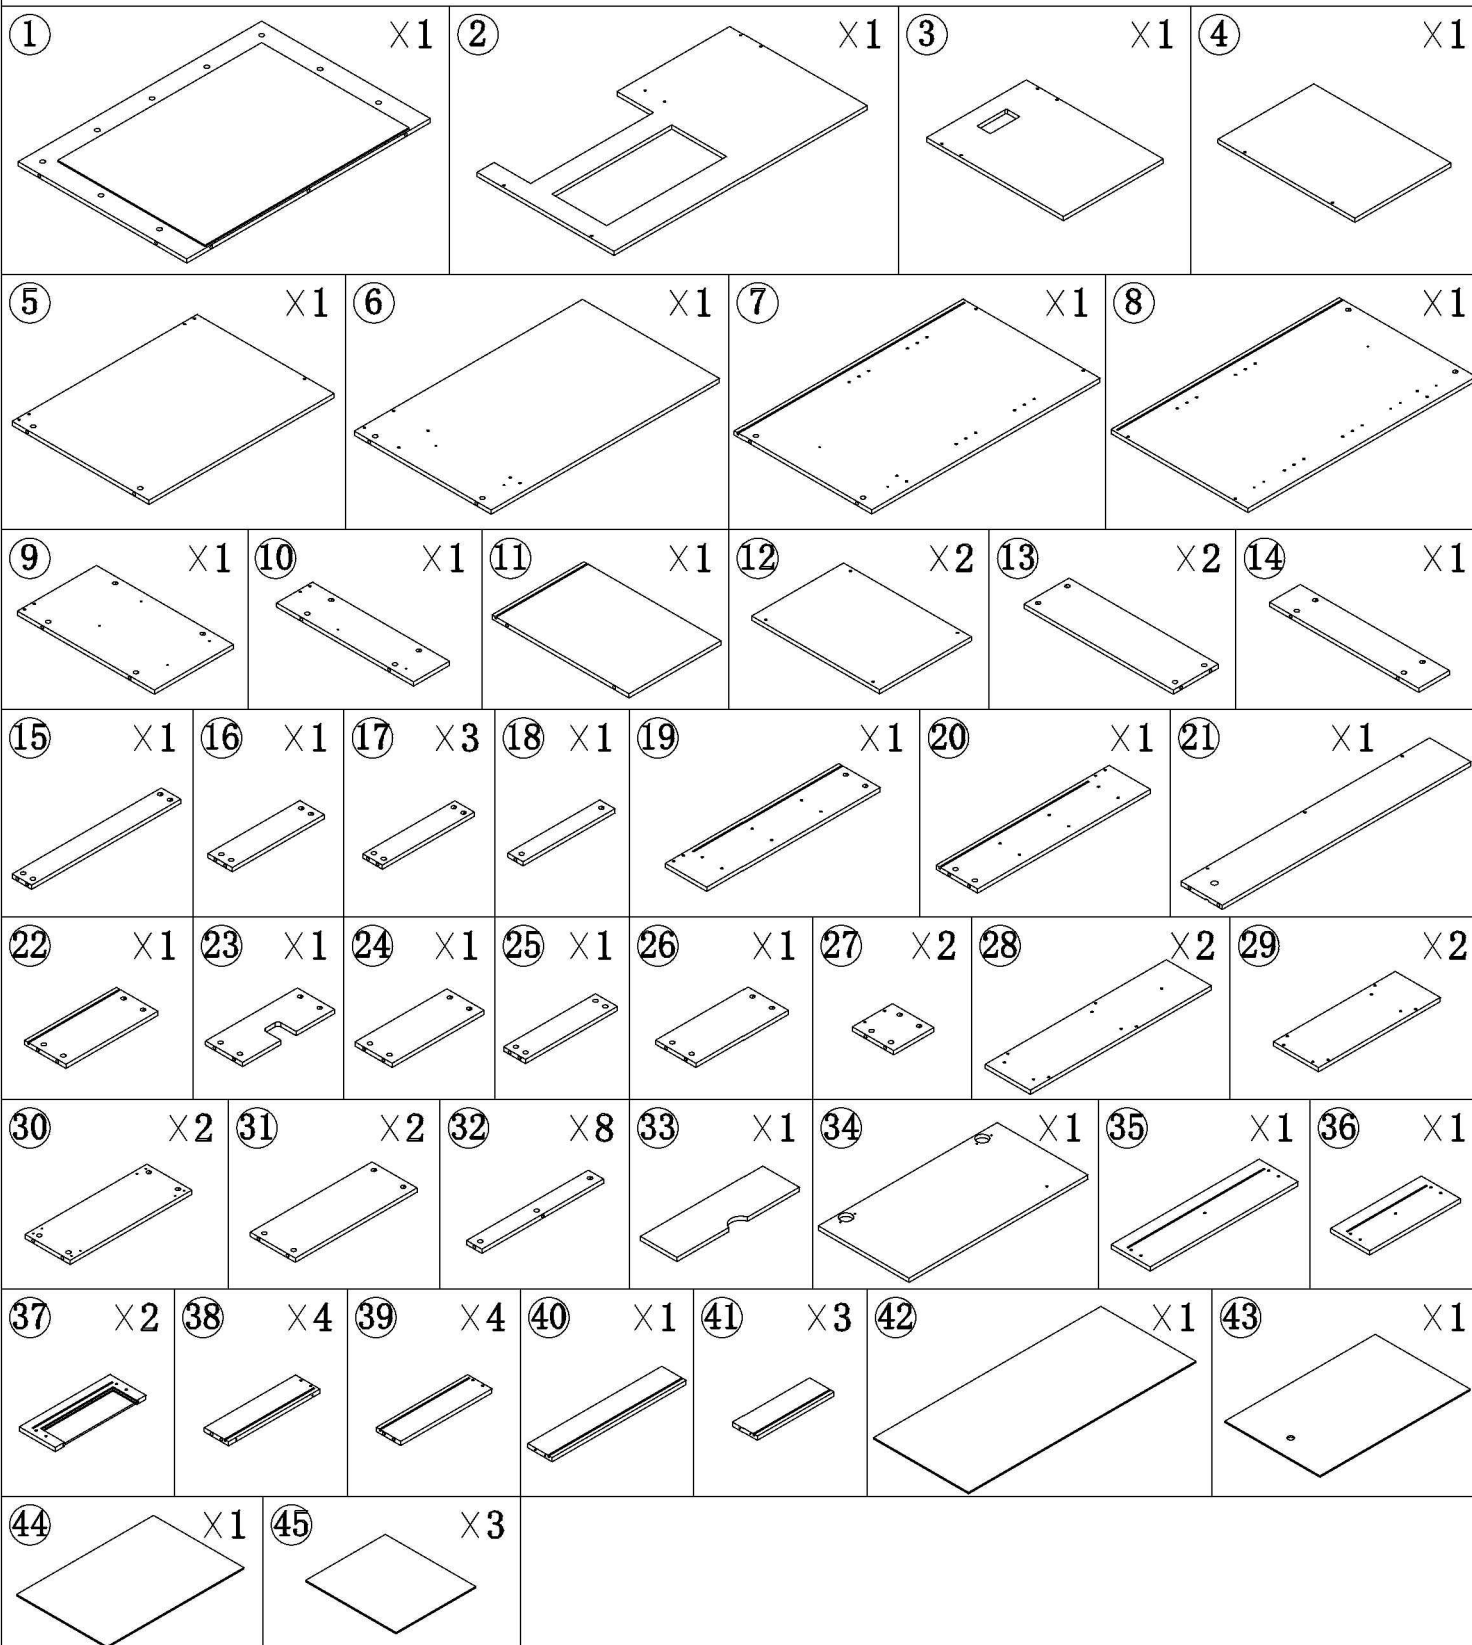


ASSEMBLY INSTRUCTION


P3


1

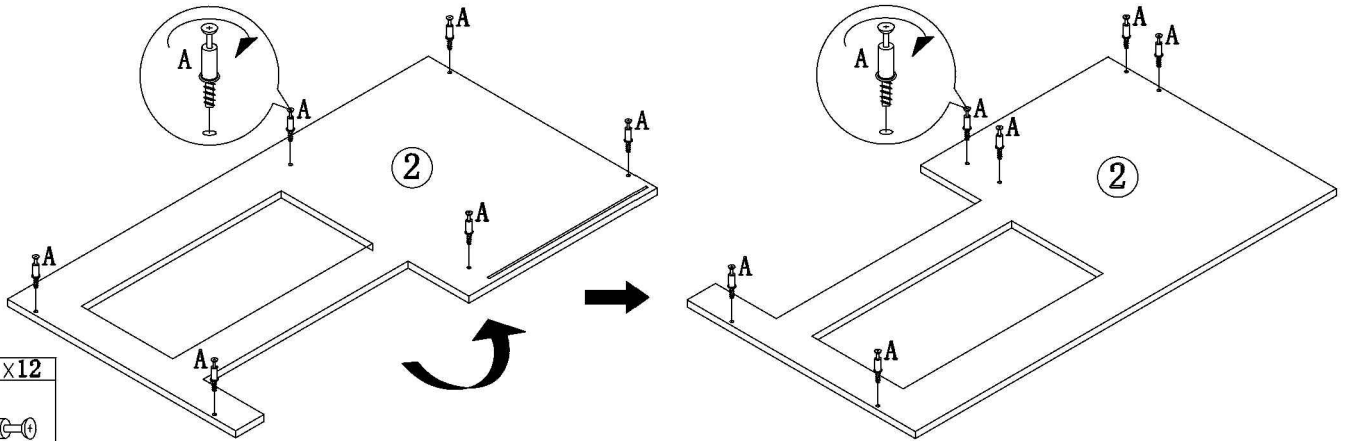


A	×12
	
φ6*28mm	


2

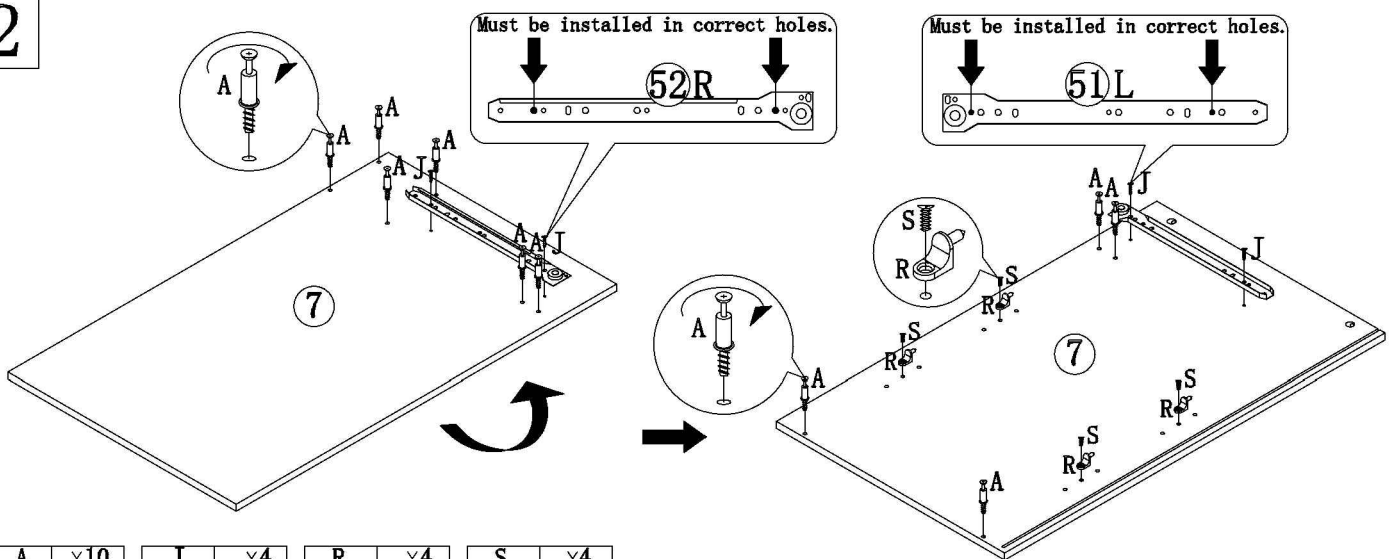


A	×10	J	×4	R	×4	S	×4
							
φ6*28mm		φ4*12mm					


3

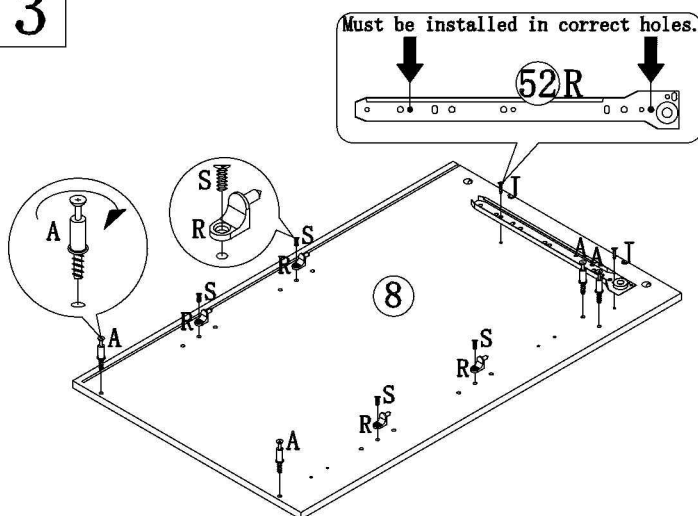

A	×4	J	×2	R	×4	S	×4
							
φ6*28mm		φ4*12mm					

4

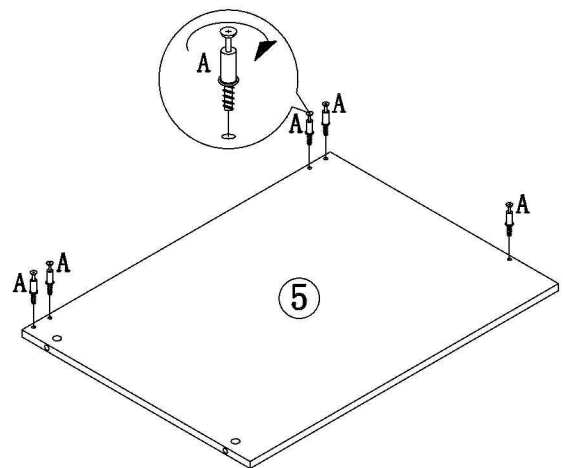


A	×5
	
φ6*28mm	


ASSEMBLY INSTRUCTION

P4


5

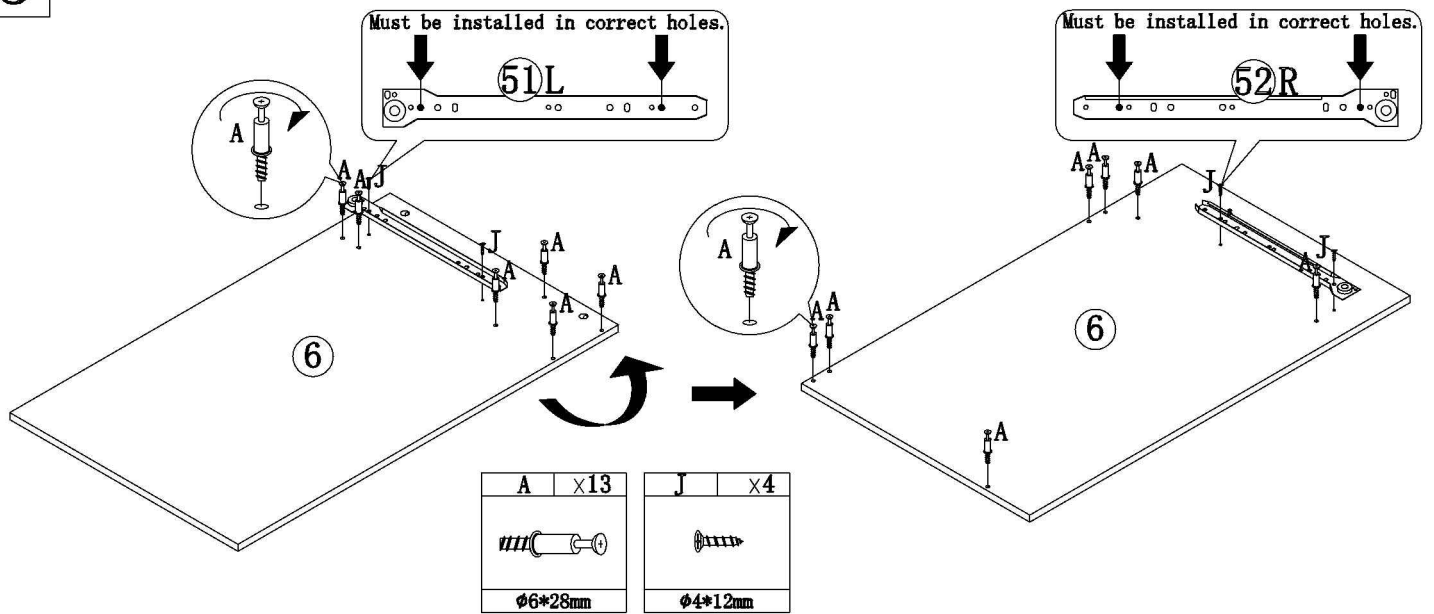


6

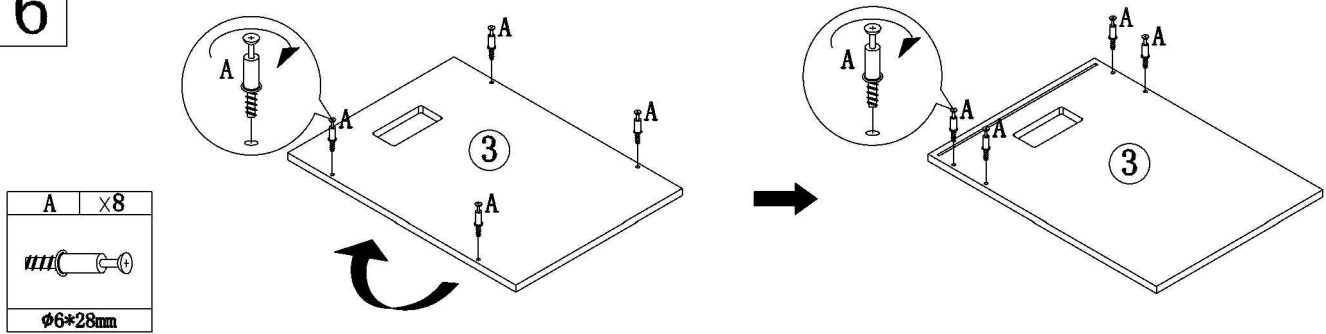

7

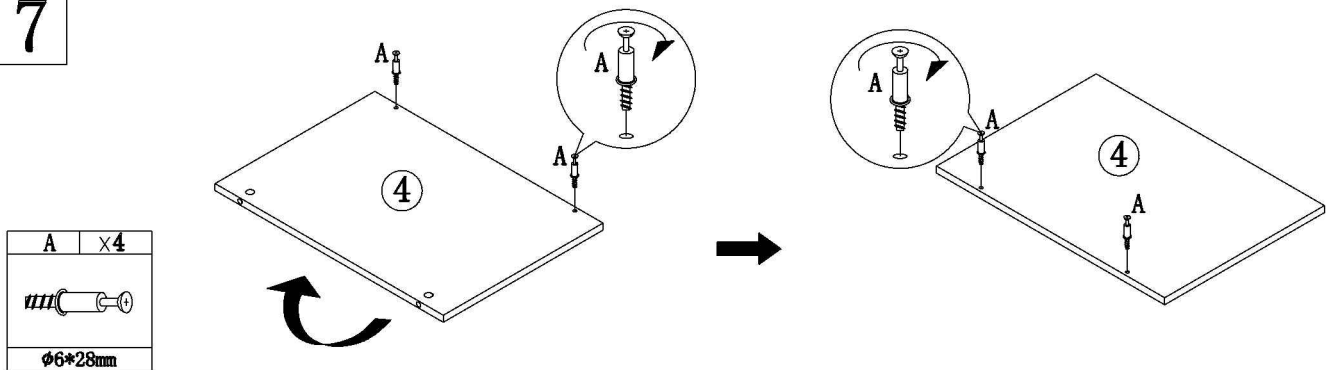


8

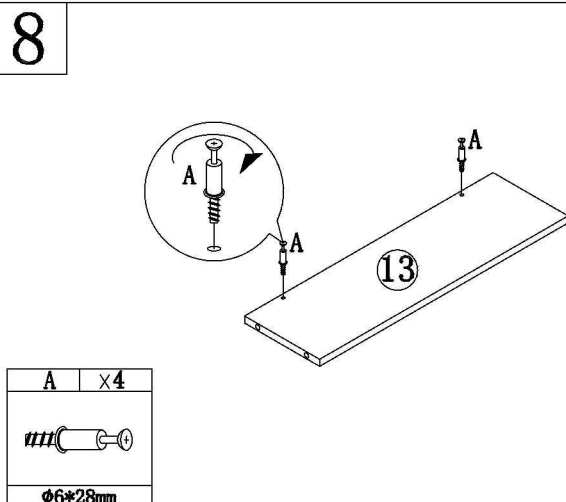

×2


9

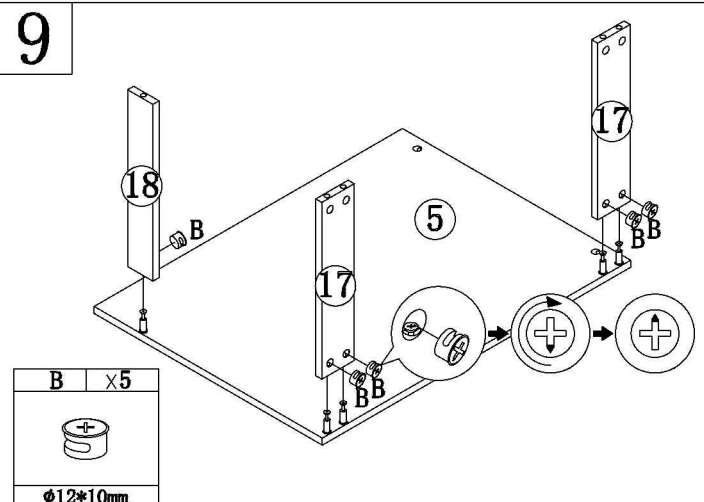


ASSEMBLY INSTRUCTION

P5


10

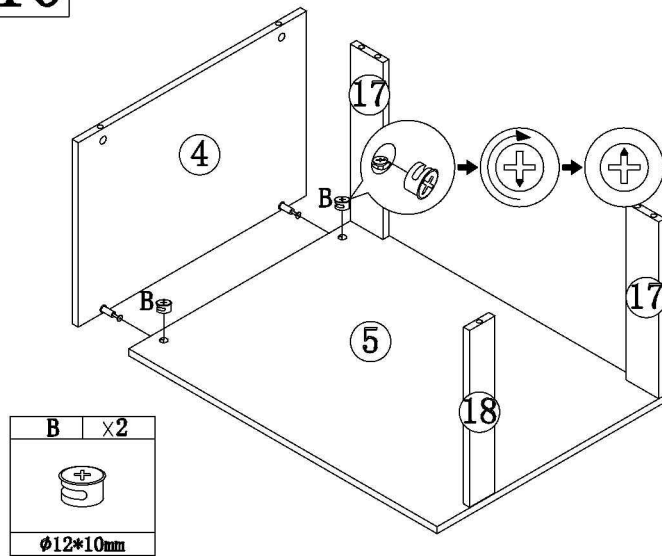


11

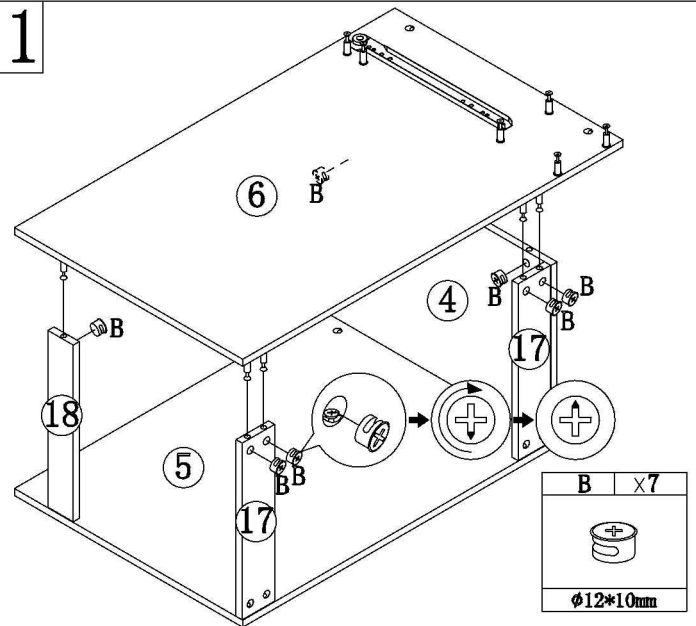


12

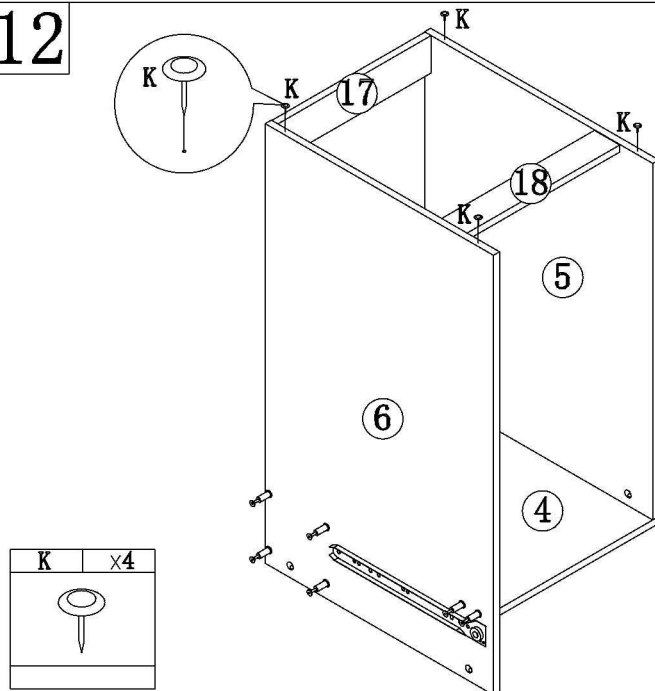


13

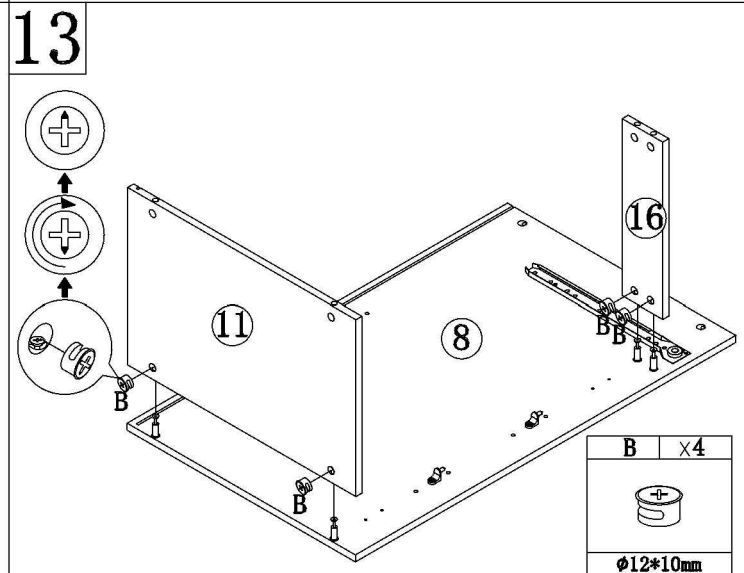

14

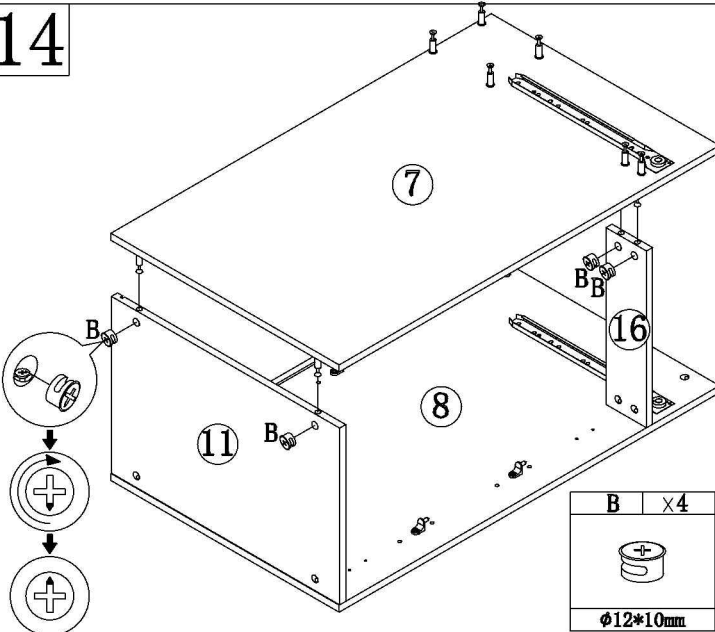



15

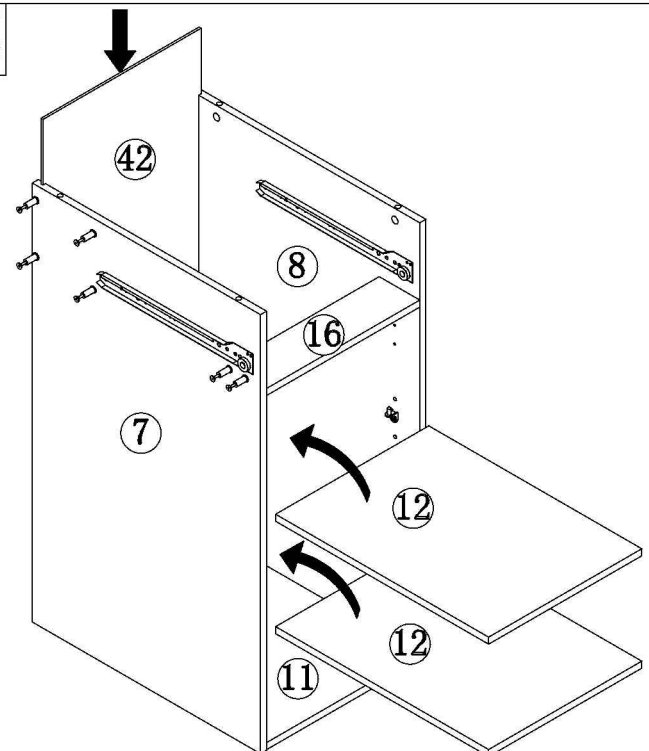


ASSEMBLY INSTRUCTION

P6








16

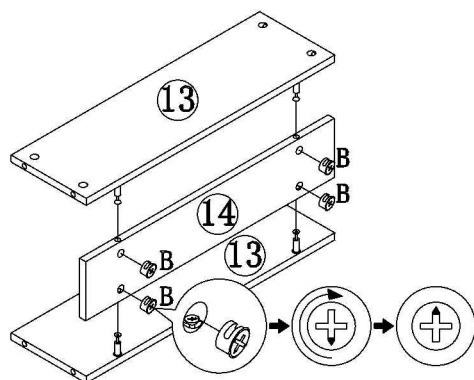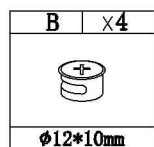



17

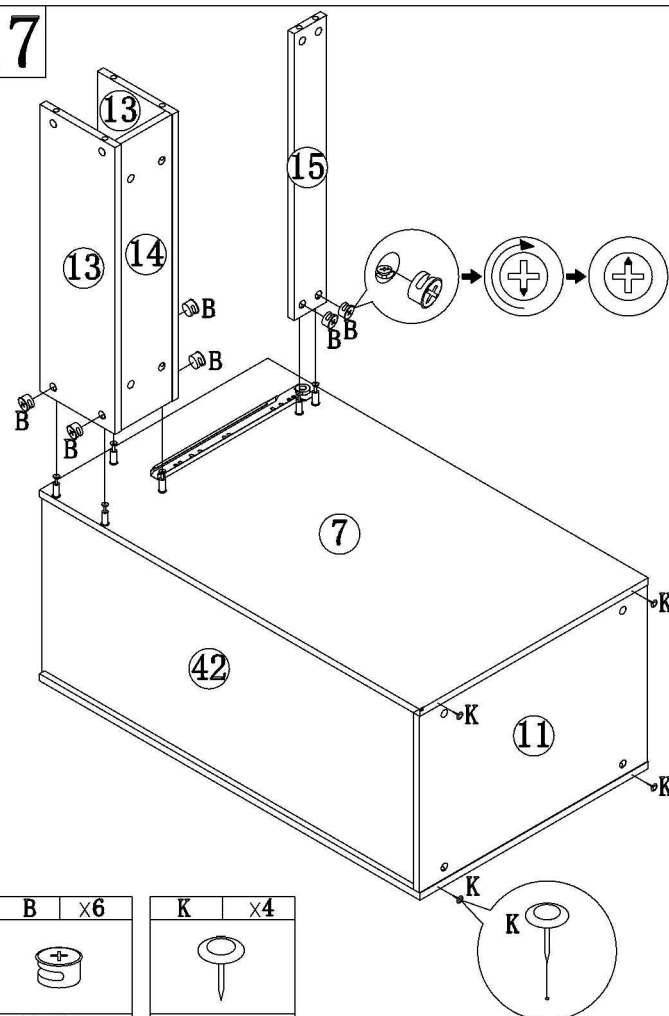

18

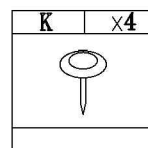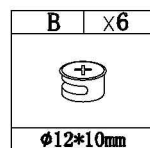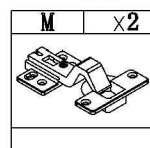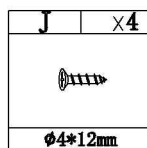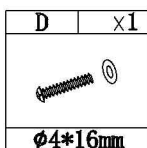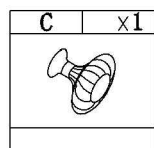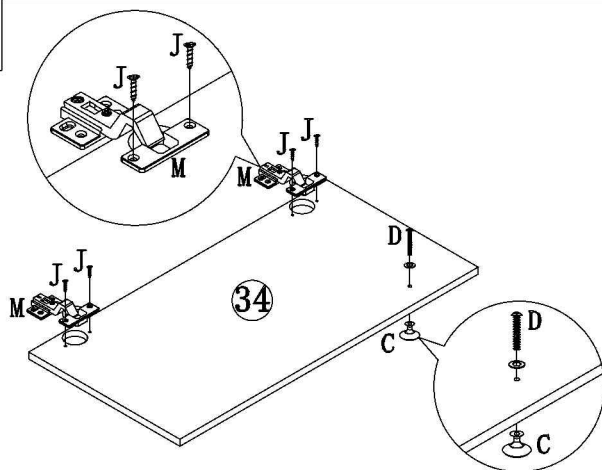


19

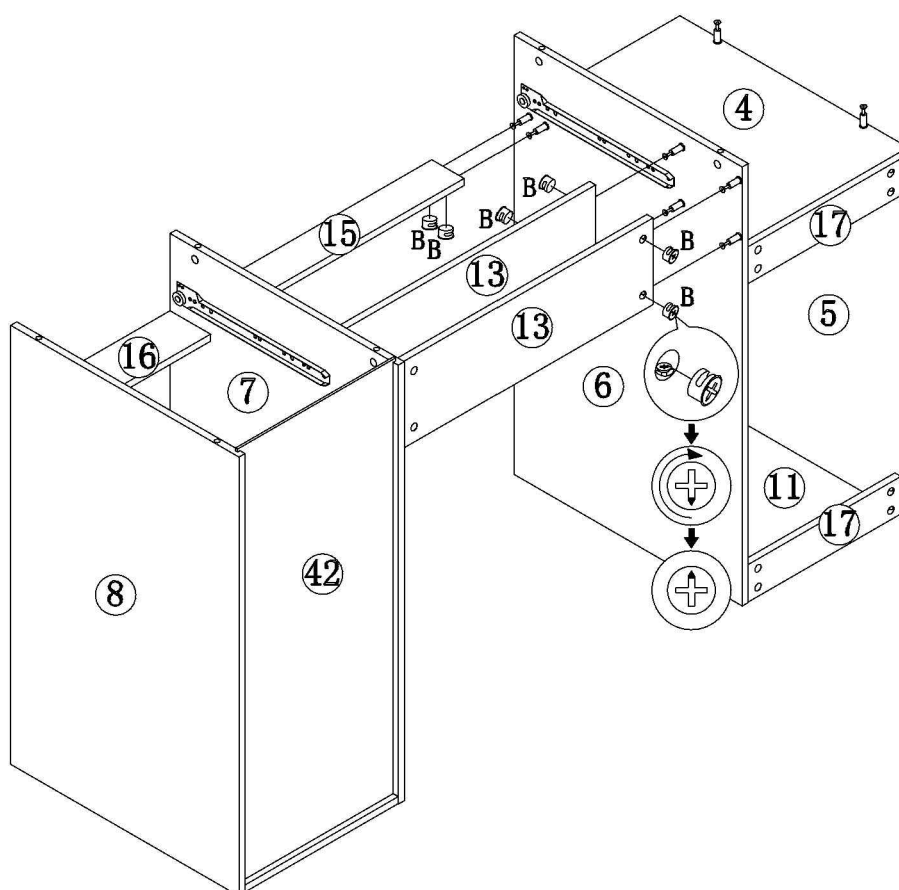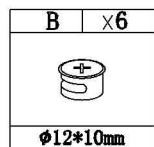


ASSEMBLY INSTRUCTION

P7


20

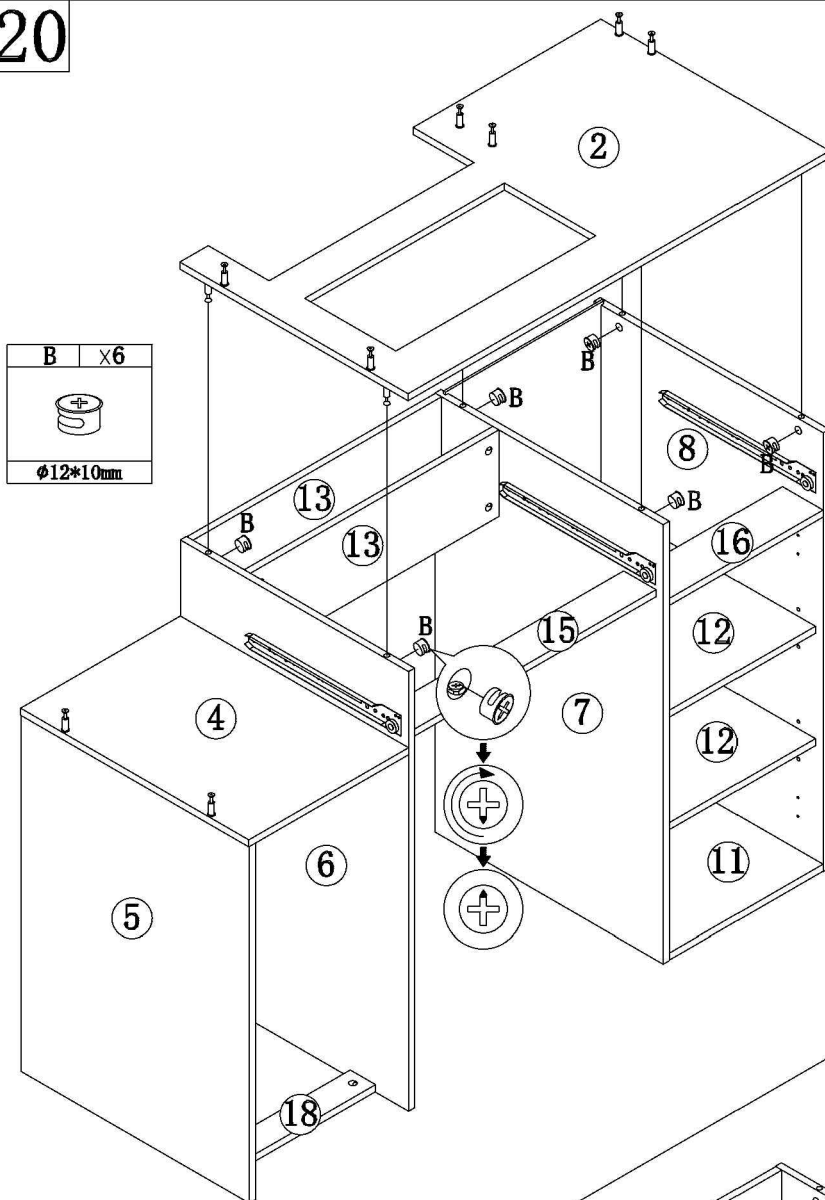


21

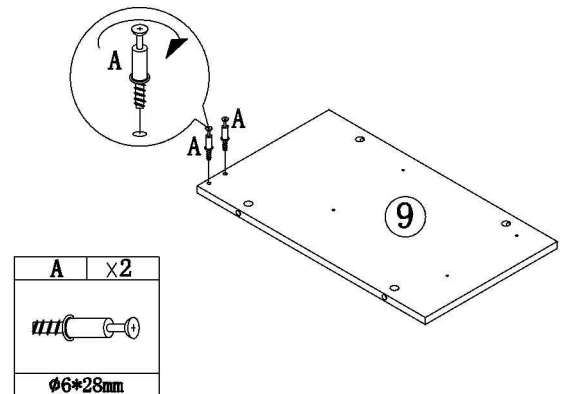


22

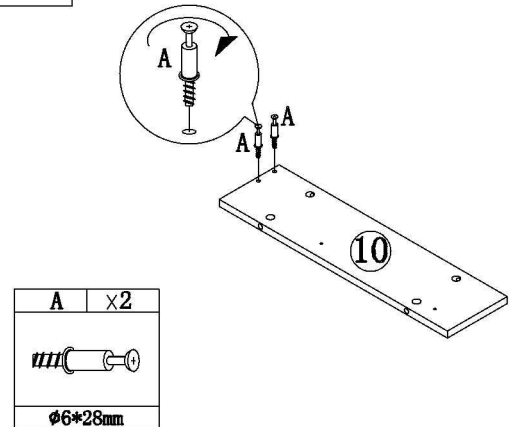



23

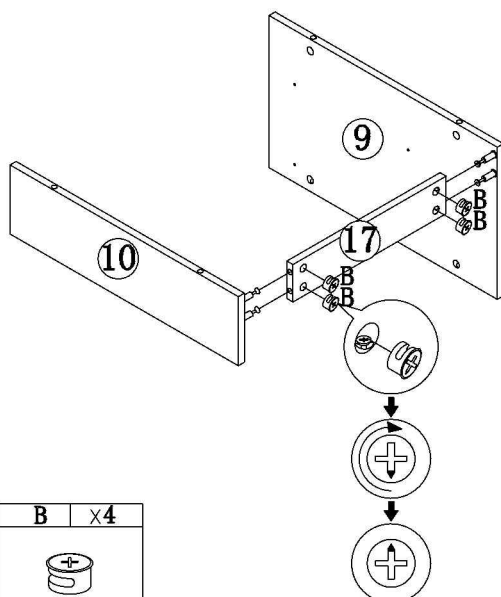



24

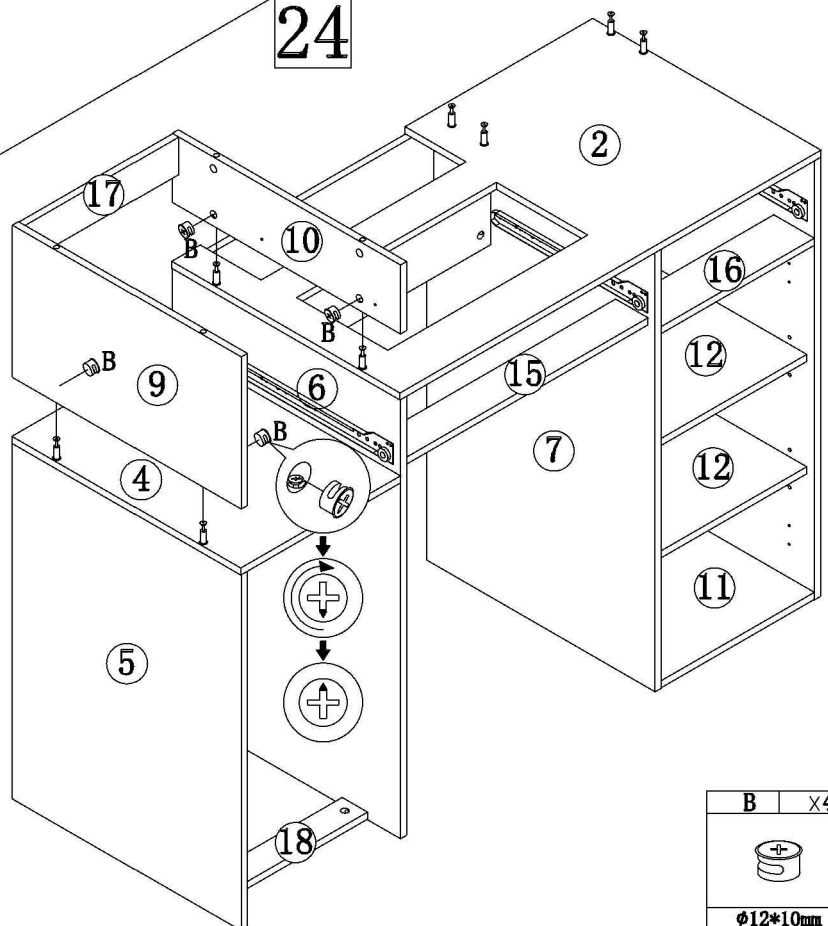



25

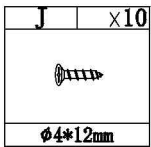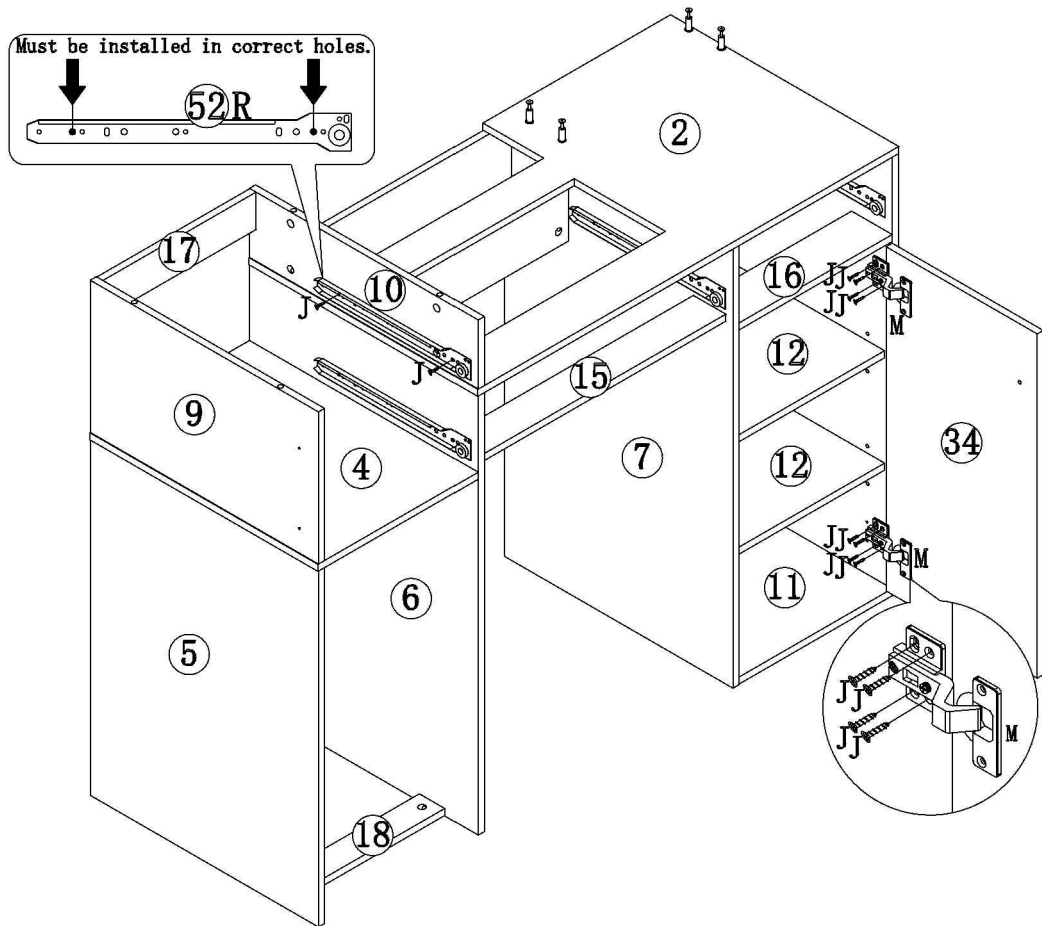



26

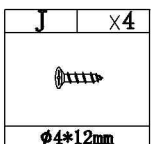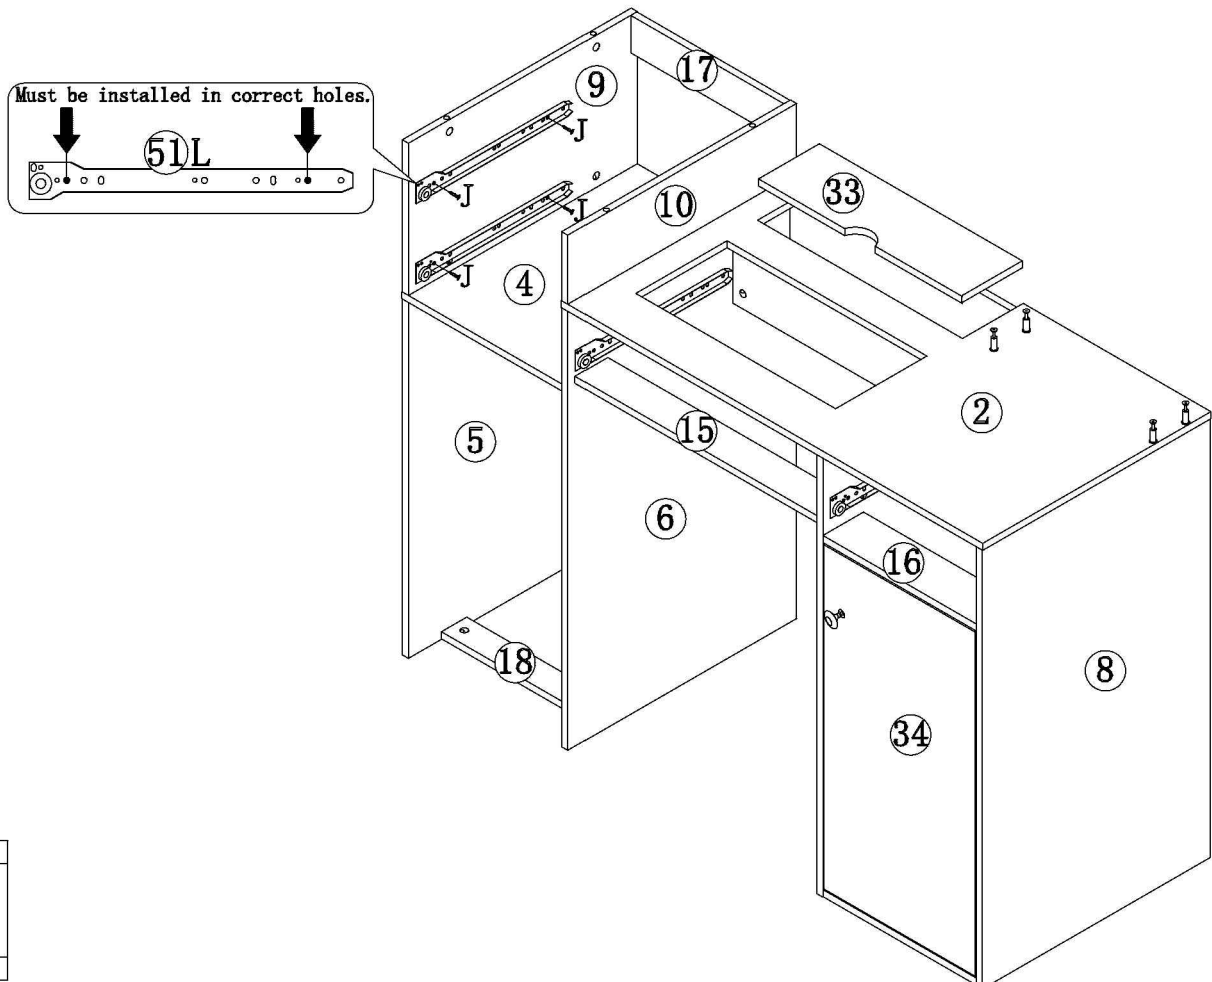



27

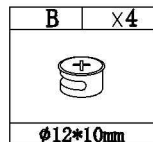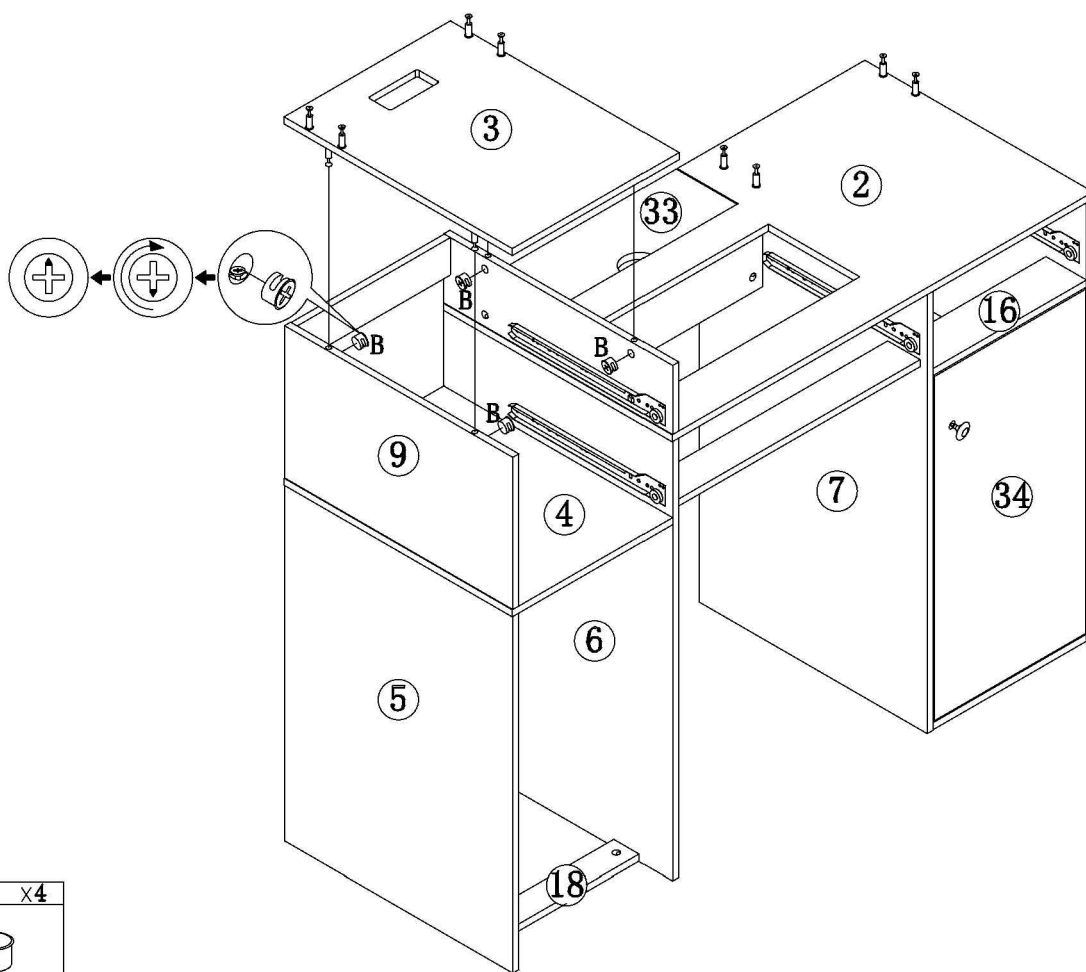



28

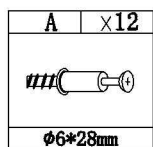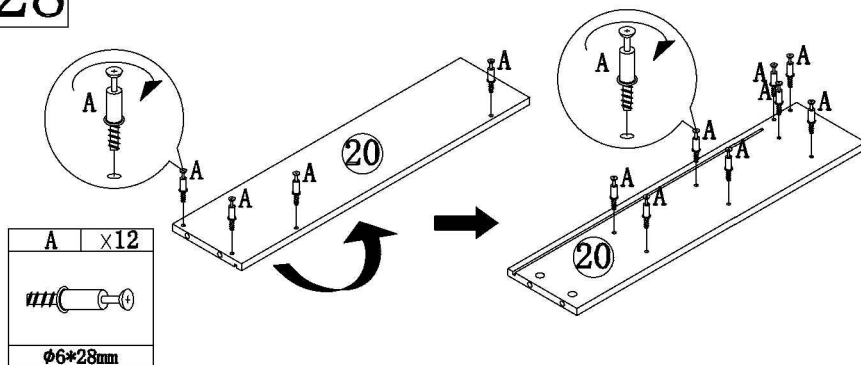



29

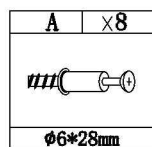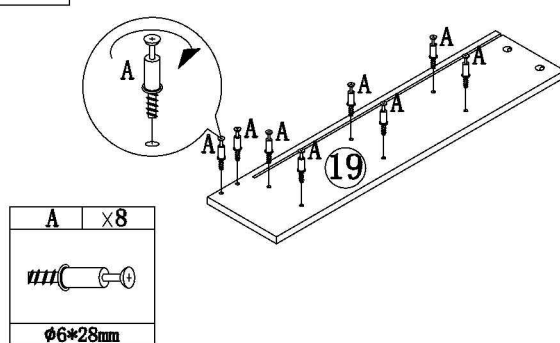

30

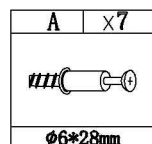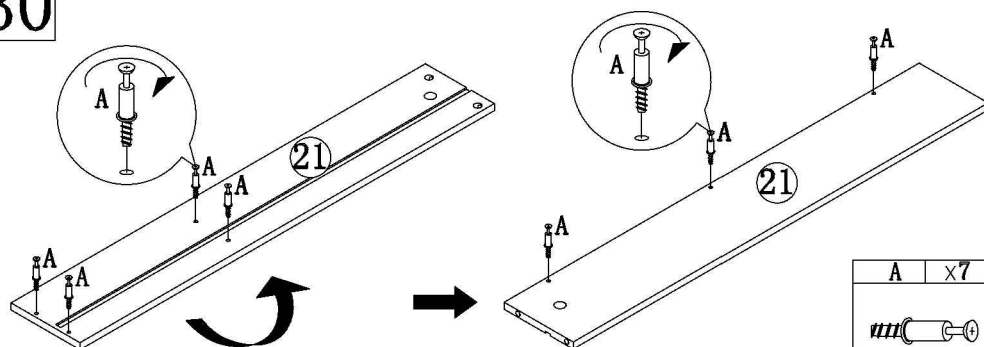


31

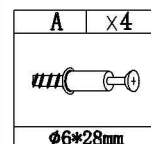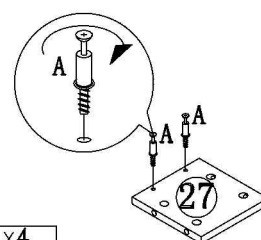


×2


32

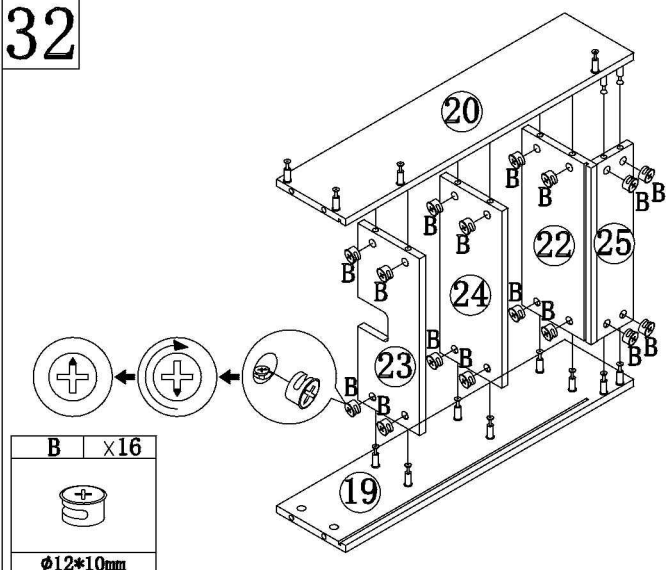


33

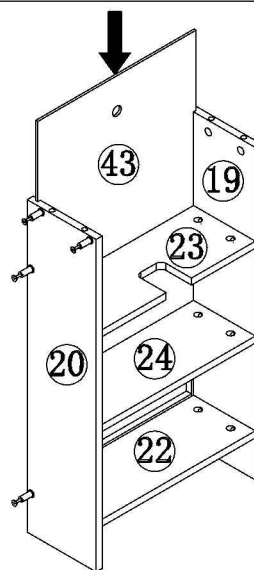


34

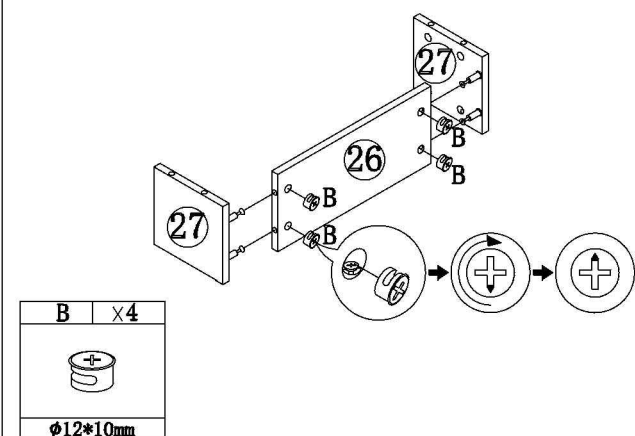


35

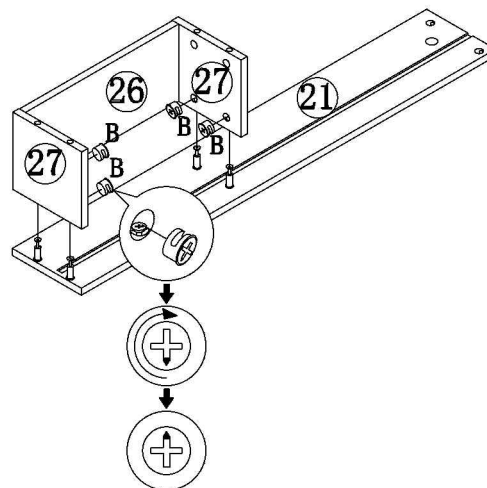


36

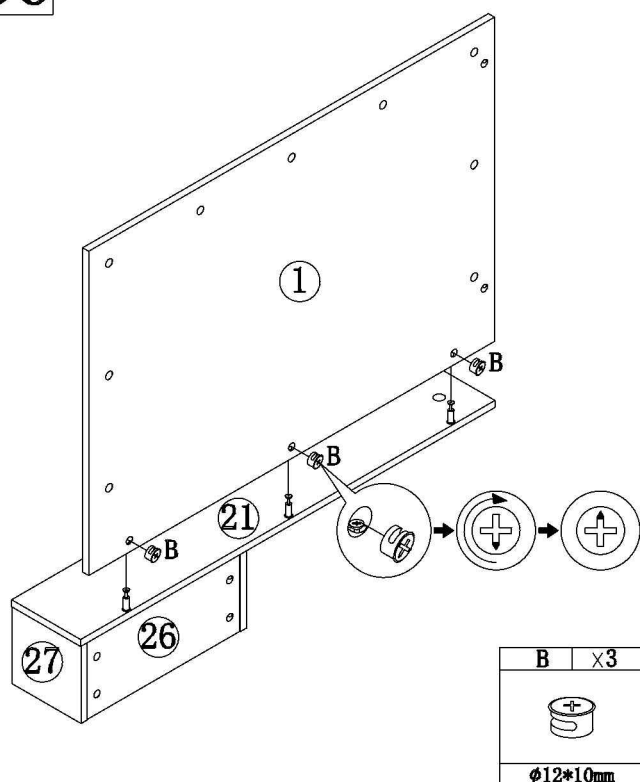

37

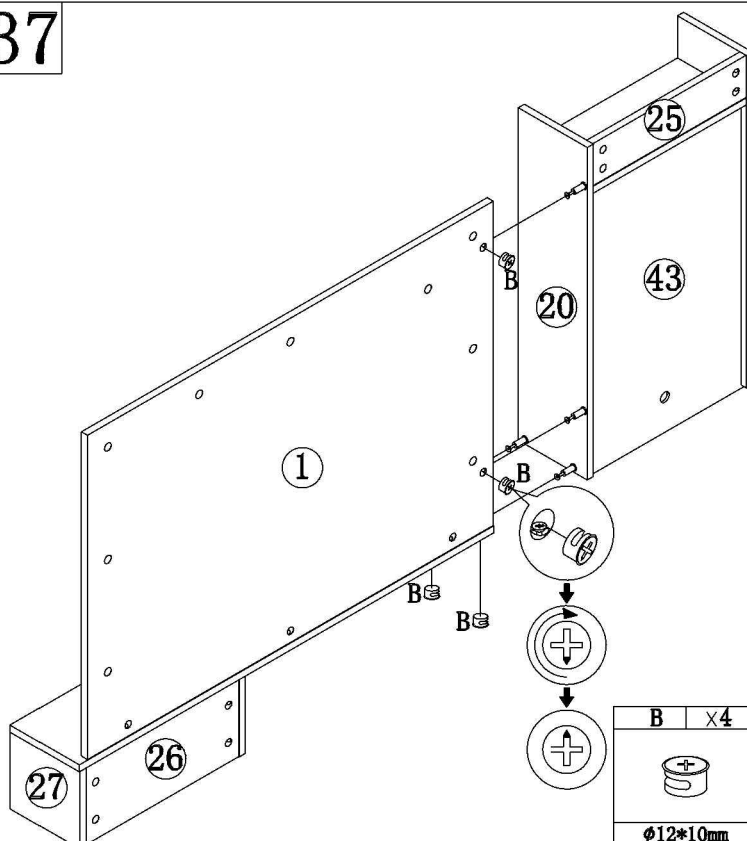


38

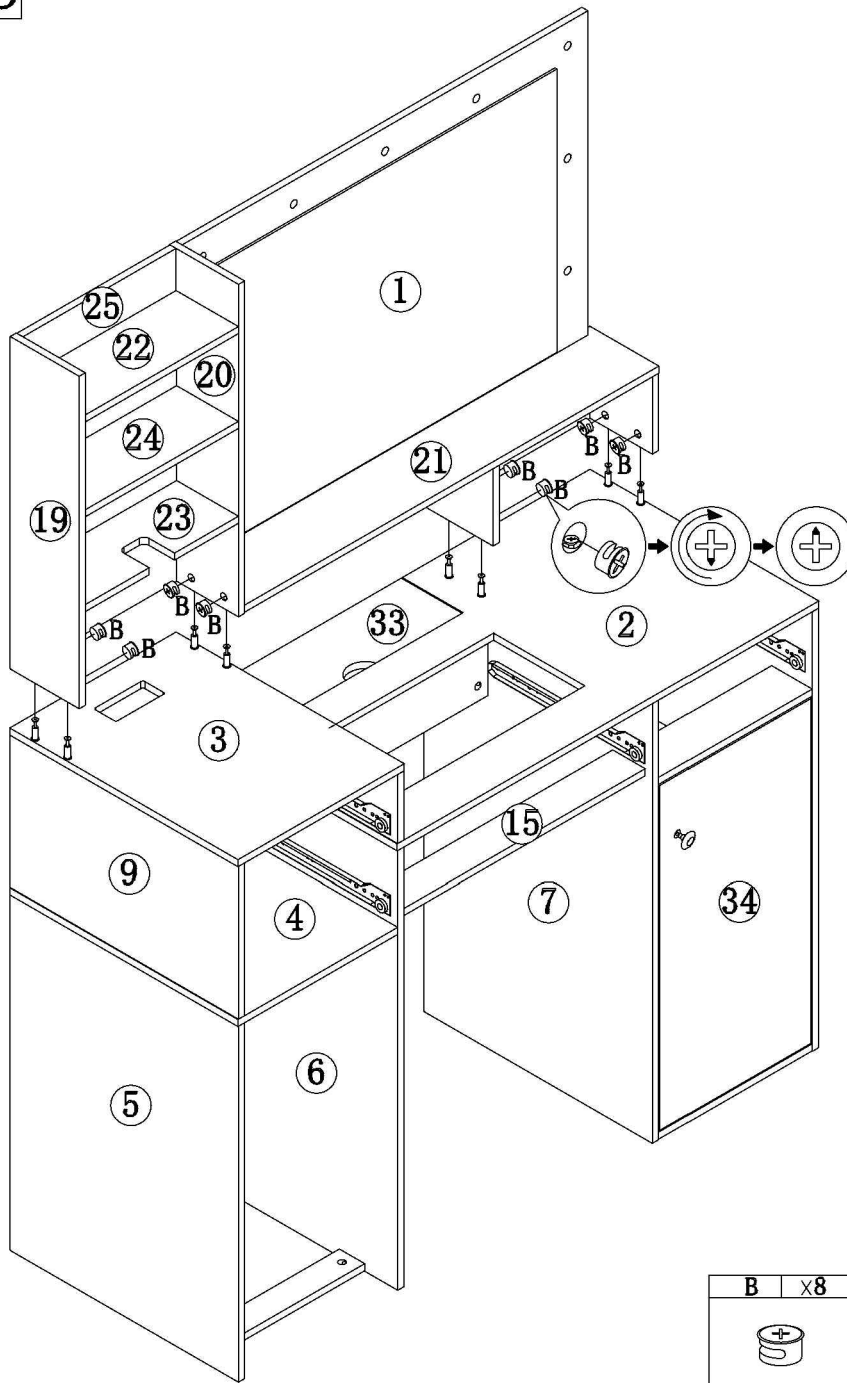

B	×8
φ12*10mm	

39

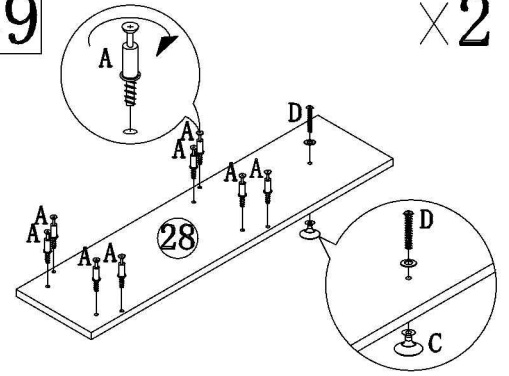


A	×16
φ6*28mm	

C	×2


D	×2
φ4*16mm	

40

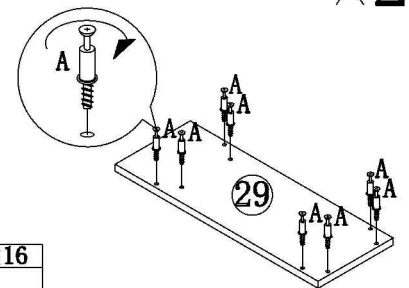


A	×16
φ6*28mm	

41

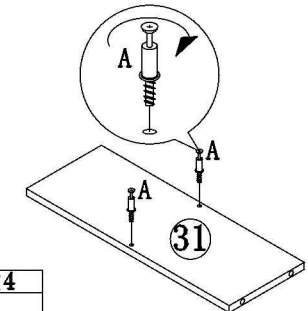

A	×4
φ6*28mm	

42

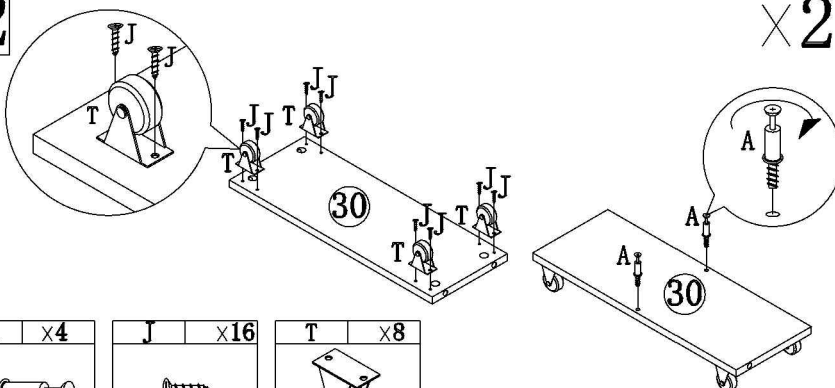


A	×4
φ6*28mm	

J	×16
φ4*12mm	

T	×8
40mm	

43

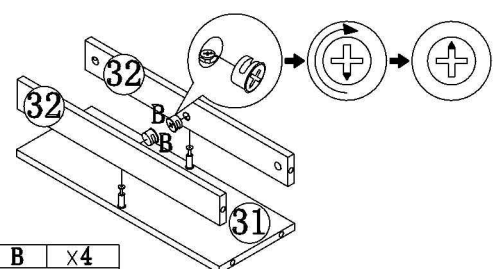

B	×4
φ12*10mm	

ASSEMBLY INSTRUCTION


P12

44


×2

45

×2

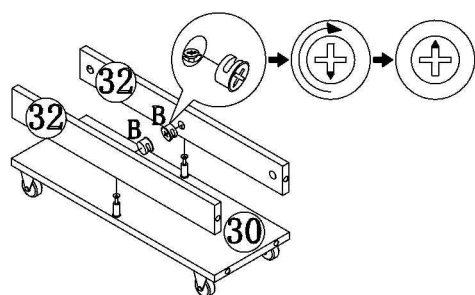


B	×4
	
Φ12*10mm	

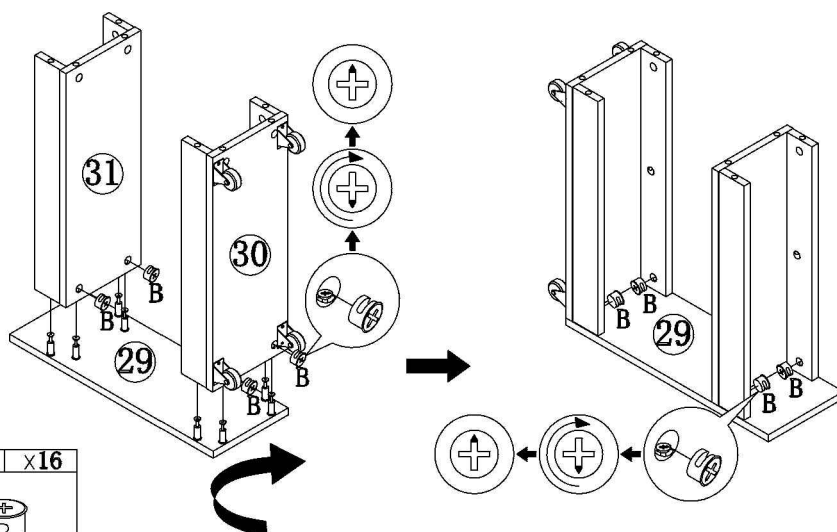

B	×16
	
Φ12*10mm	

46

×2

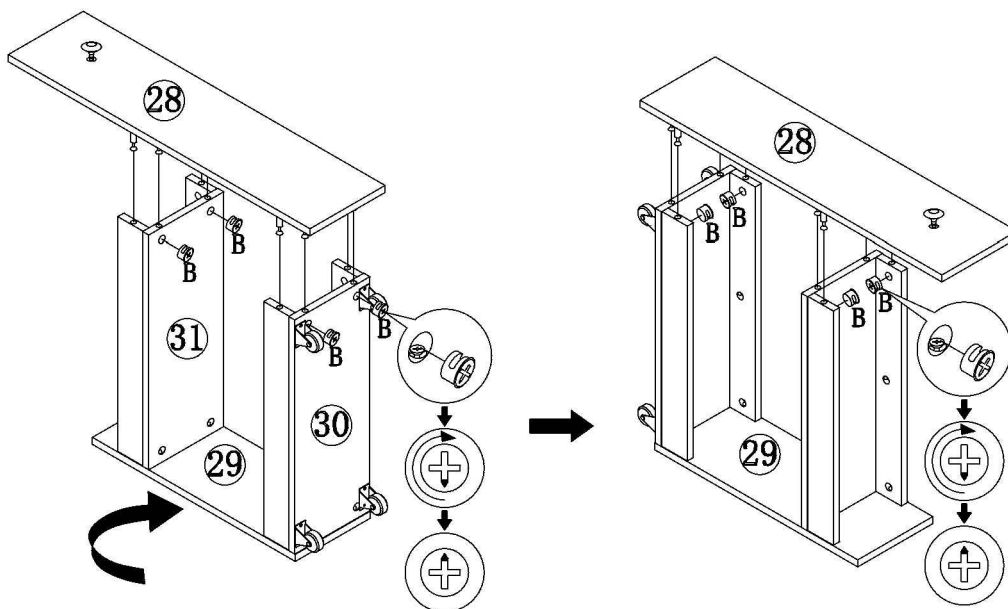


B	×16
	
Φ12*10mm	


47


×2


48

49

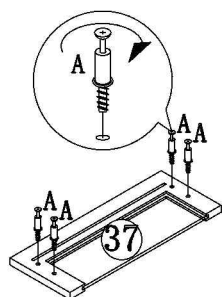


A	×8
	
Φ6*28mm	

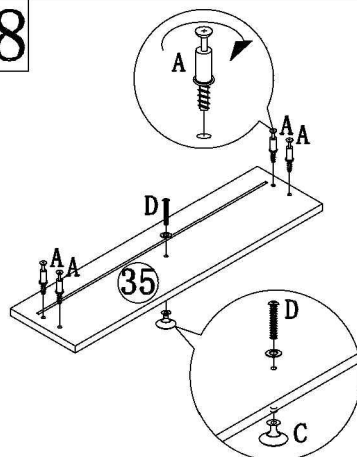


A	×4
	
Φ6*28mm	

C	×1
	

D	×1
	
Φ4*16mm	

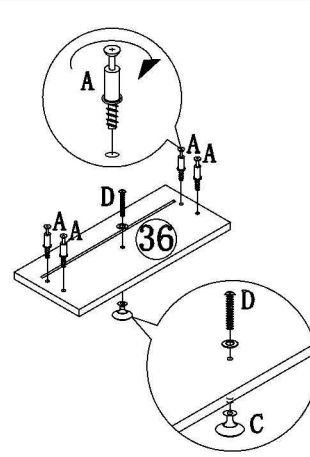

A	×4
	
Φ6*28mm	


C	×1
	

D	×1
	
Φ4*16mm	


ASSEMBLY INSTRUCTION

P13


50

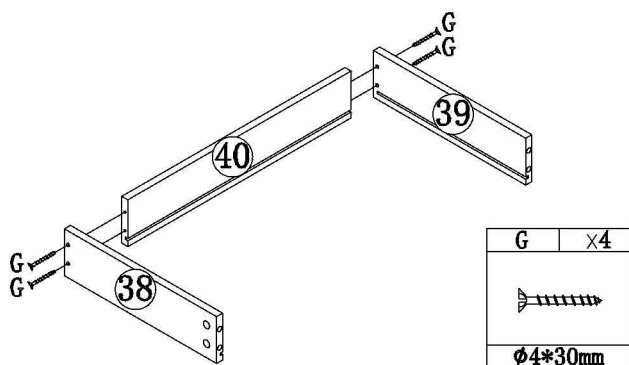


51

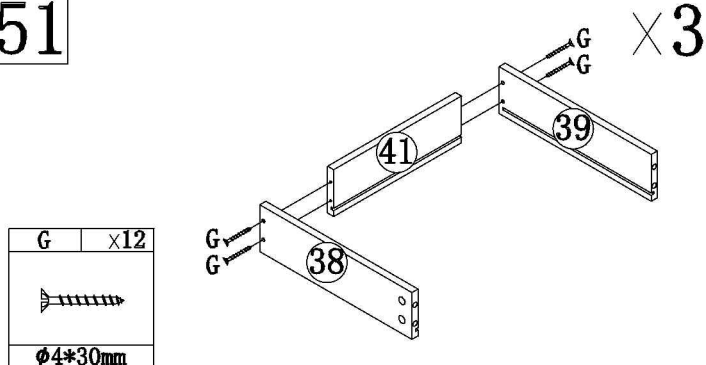


52

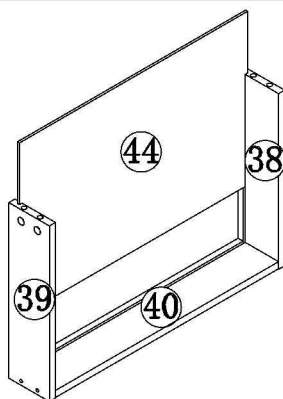


53

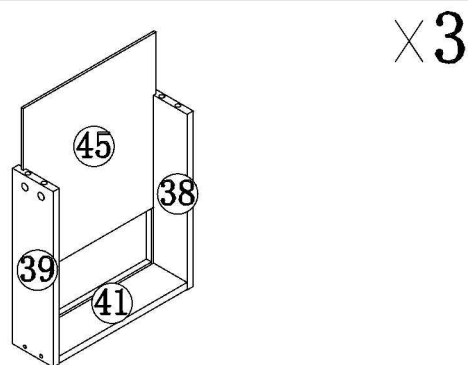


54

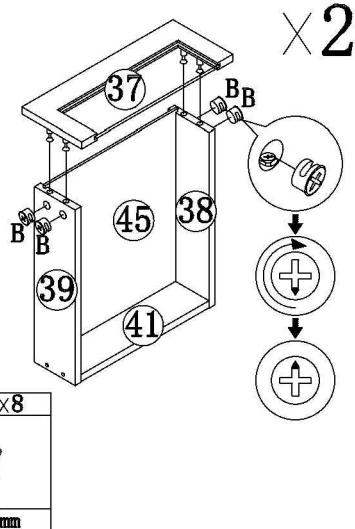

55

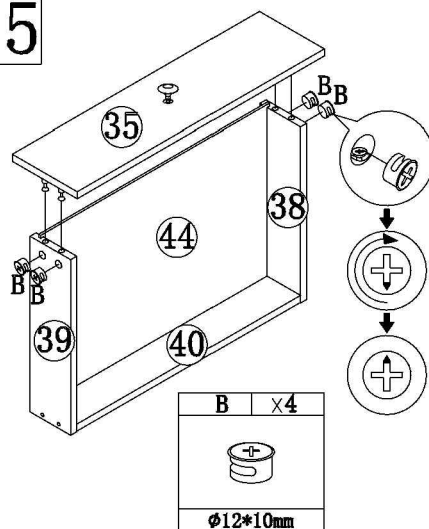


56

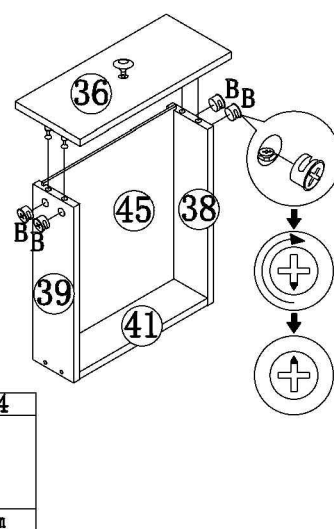


57

Must be installed in correct holes.

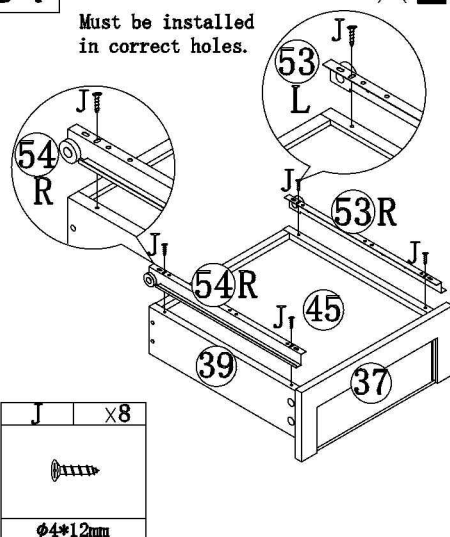


58

Must be installed in correct holes.



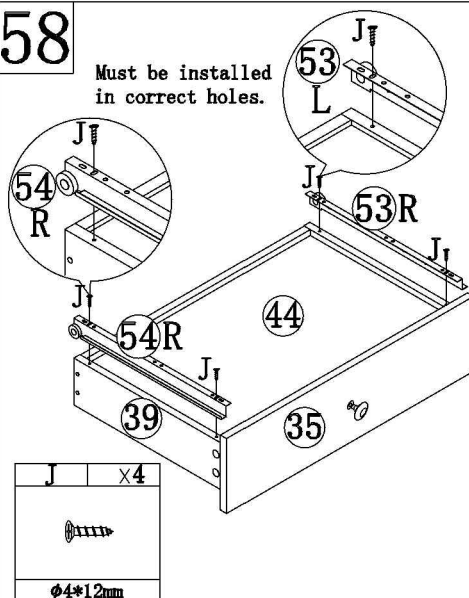


59


Must be installed in correct holes.

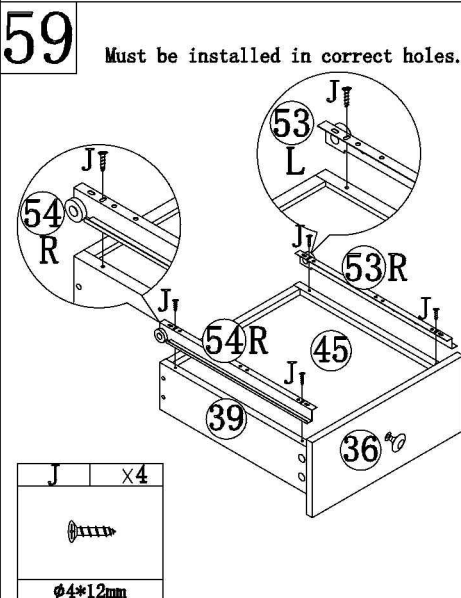

60

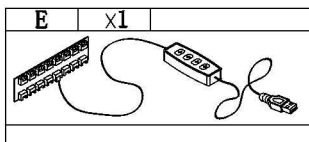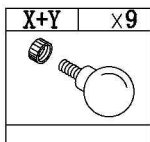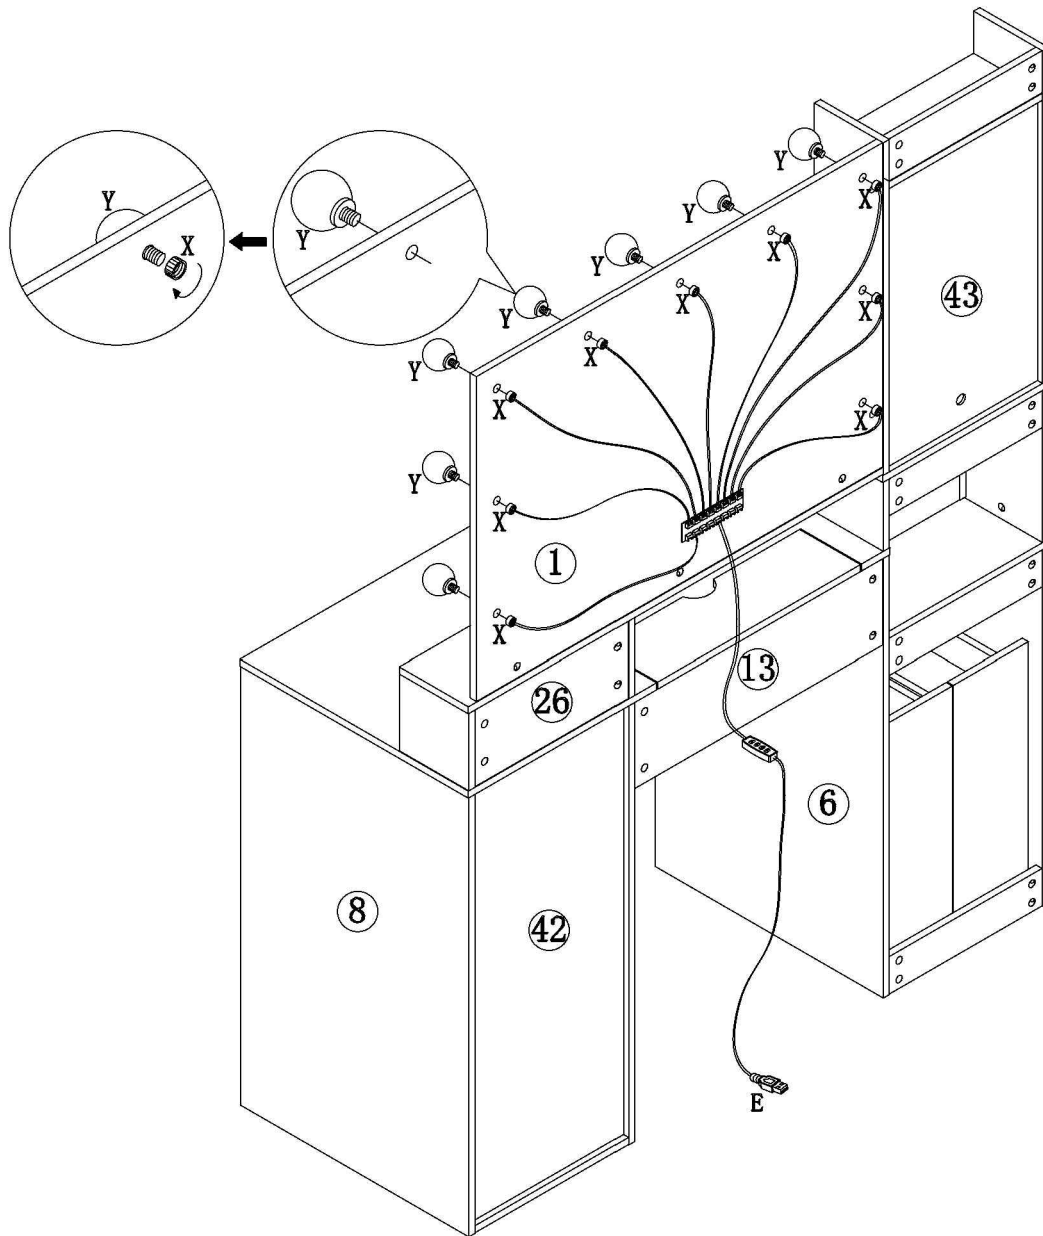

61

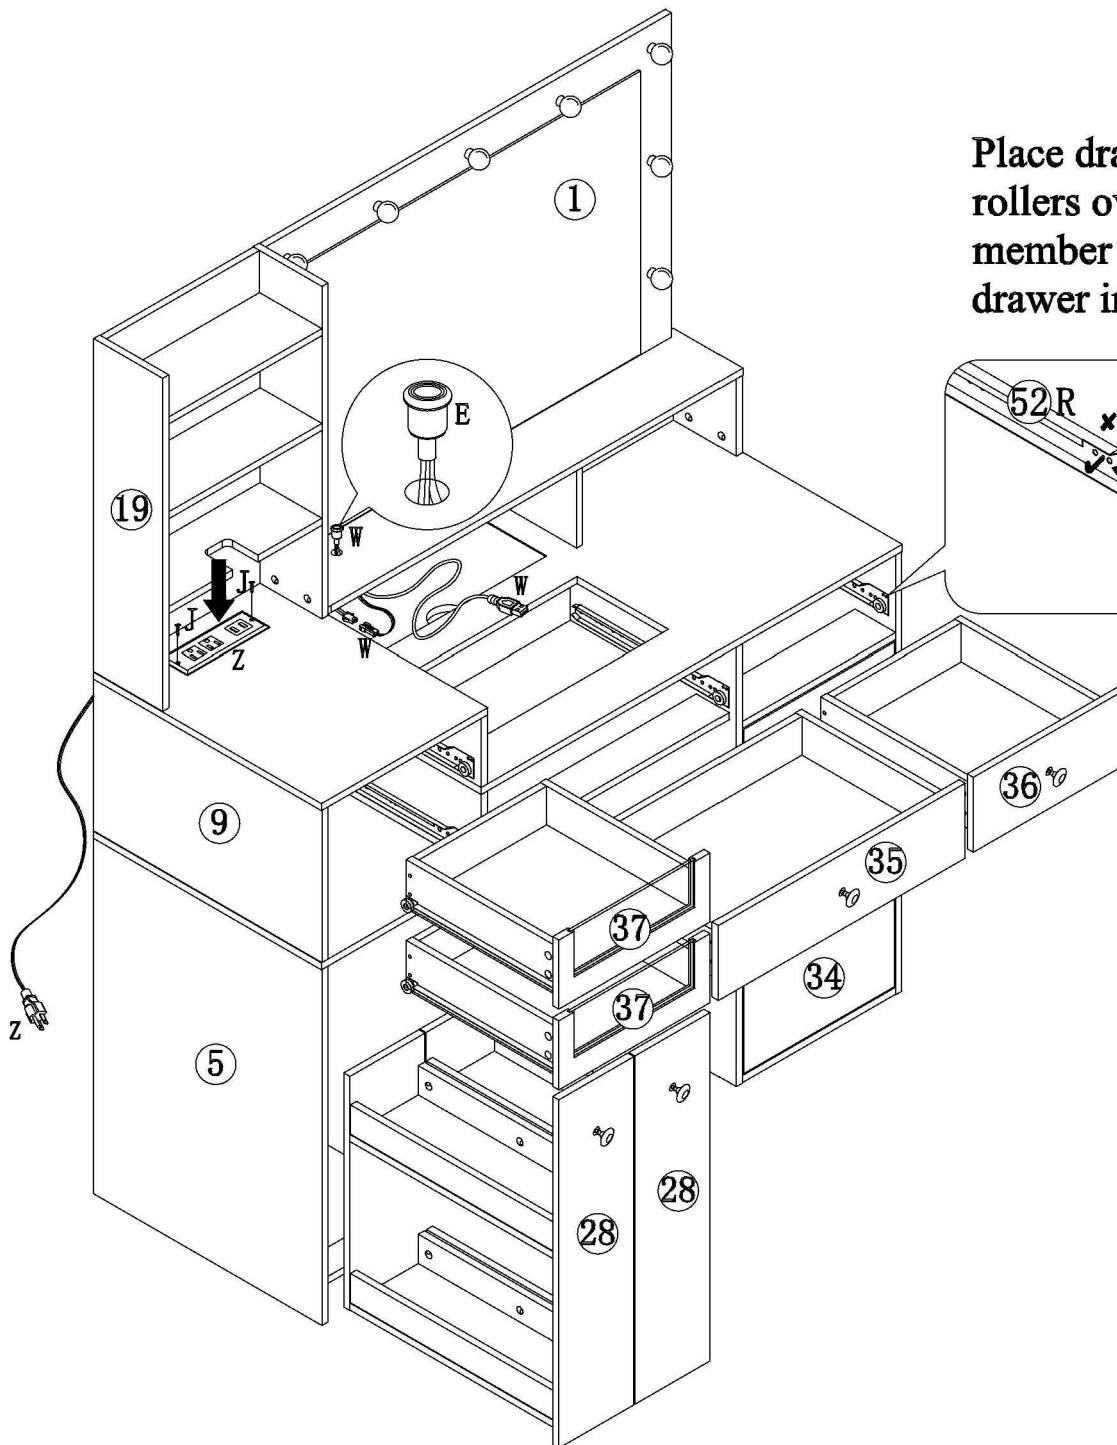

Place drawer member rollers over cabinet member rollers and insert drawer into cabinet.

