

Pedicure Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork

Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

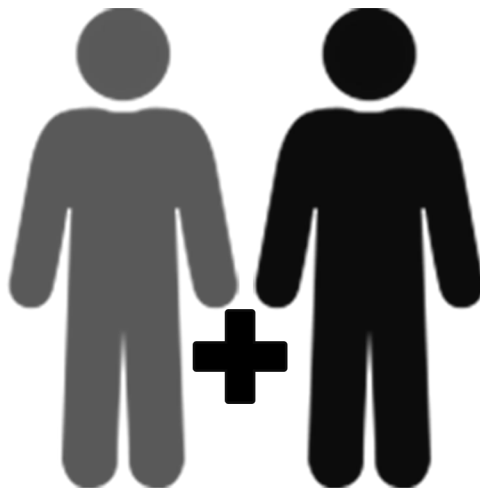

Components

Step 1

Check all parts you received.

Part List

Part List						
						
Ax1	Bx1		Cx1	Dx1		
						
Ex1	Fx1		Gx1	Hx1		
						
Ix1	Jx1		Kx1		Lx1	
						
Mx1	Nx1	Ox4	Px5	Qx1	Rx6	Sx1
						
Tx1	Ux2		Vx4	Wx4	Xx4	

Assembly Instructions


Step 2

Insert "U" into the base "E" by screws "V" and gaskets "W", tighten. (pay attention to the direction of part "U")



Step 3

Insert plank "T" into the base "E" by screws "X", tighten. (Please tighten the screws after you align the plank "T")

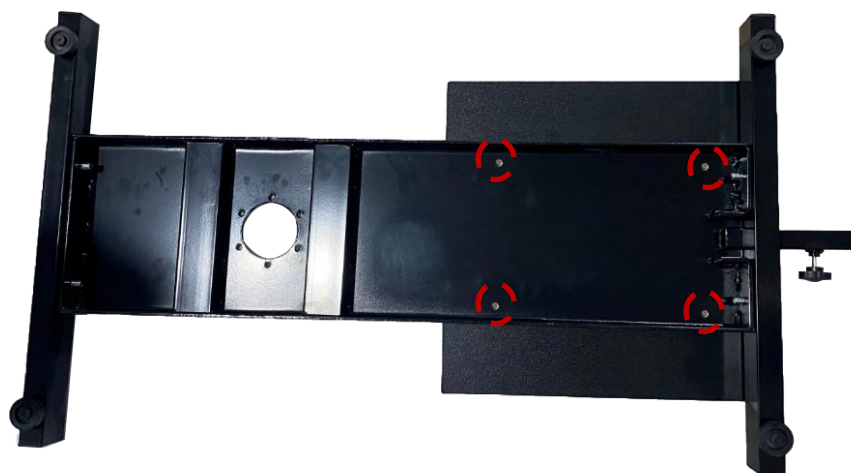


Align the edge of the plank with the edge of the iron frame and see if the plank is exactly in the middle.

Assembly Instructions


Step 4

Insert "N" into the holes on top of "E". Tighten and locking by "R".

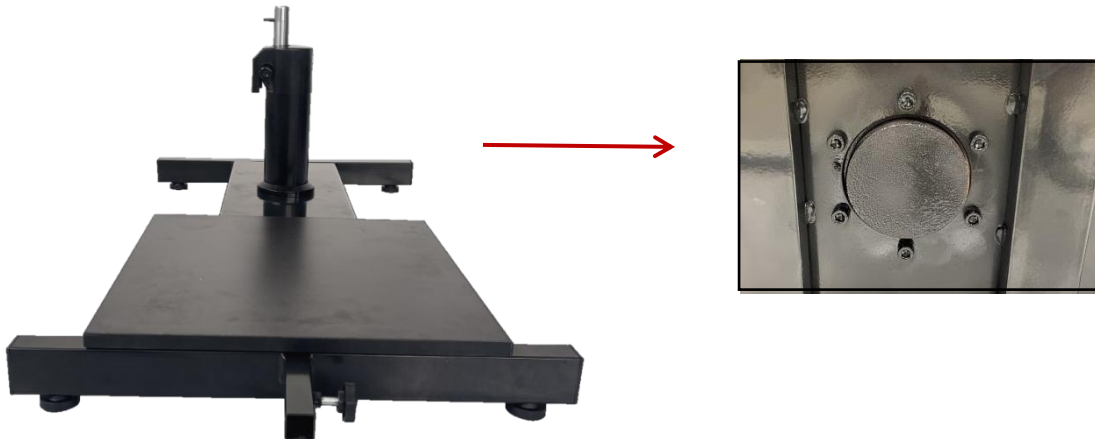

Step 5


Insert "K" into "N", tighten the screws on the both sides.(please noted the direction of "K").

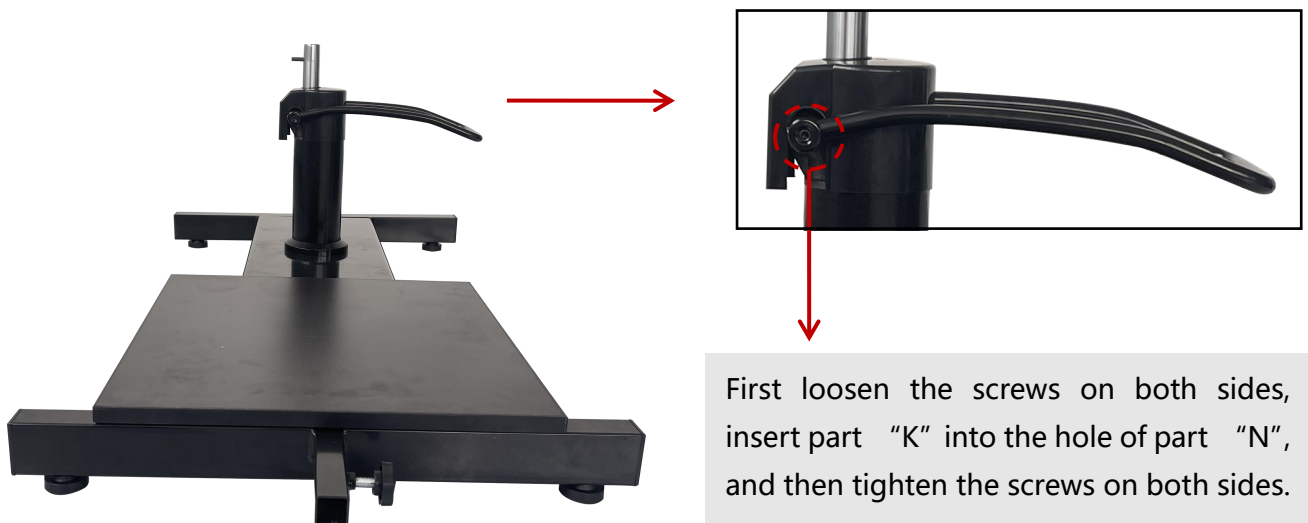

Assembly Instructions

Step 6

Attach Parts P (5 pcs.) onto the five feet on the back of Part L (1 pc.). Insert the Part S (1 pc.) and Part Q (1 pc.) into Part L (1 pc.).

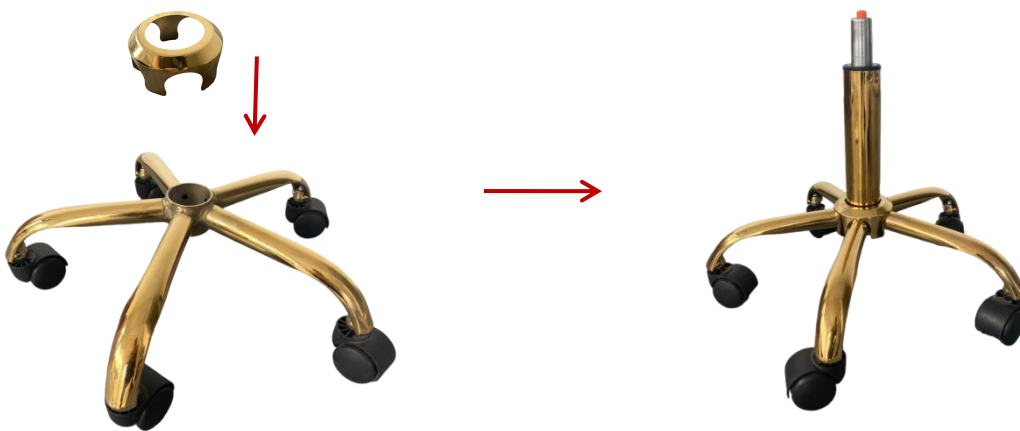

Step 7

Unscrew 2 screws on the "J", assemble the backrest "I" to "J" by those screws, tighten.



Assembly Instructions

Step 8

Put the assembled cushion "J" on the "Q" .



Step 9



Unscrew 4screws on both sides of the armrests " C " and " D " ,assemble connecting iron " O " to armrests by those screws. Tighten.(Noted: The direction of connecting iron)



Assembly Instructions

Step 10

Unscrew 8 screws on the seat cushion "B", assemble the armrests "C" and "D" to seat cushion by those screws, tighten. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)

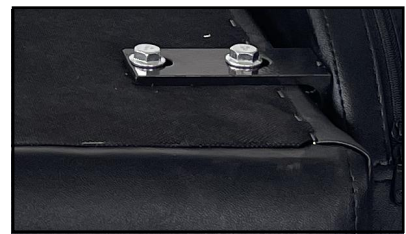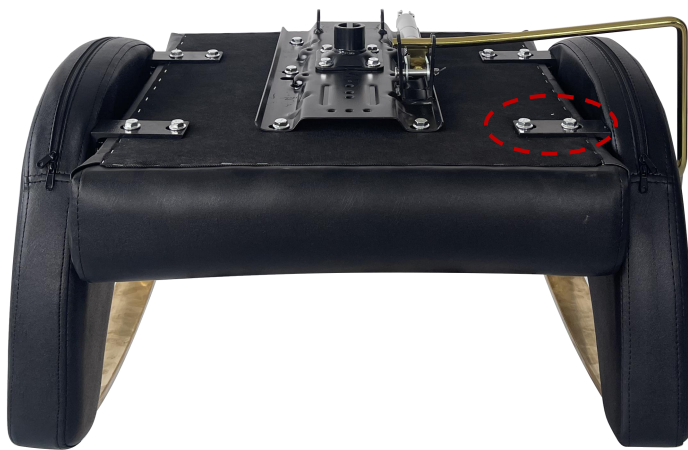

Please pay attention to the direction of the armrest, you can judge the direction according to the zipper.



Assembly Instructions


Step 11

Firstly: Loosen the 4 embedded black screws on the round tube of the backrest "A"

under the bottom of the backrest iron, attach the backrest to the assembled seat of chair ,make sure the angle of backrest correct, Tighten.Photo ① for reference

Secondly: Loosen nut and bolt on the iron of backrest,Link gas pump and the iron on backrest by the nut and bolt ,tighten.Photo ② for reference.

Noted:Please push the reclining lever back wards make the backrest reclining a litte bit ,then the iron on the backrest will much closer to the gas pump.When you felt it' s hard to link the gas pump and the iron of backrest.

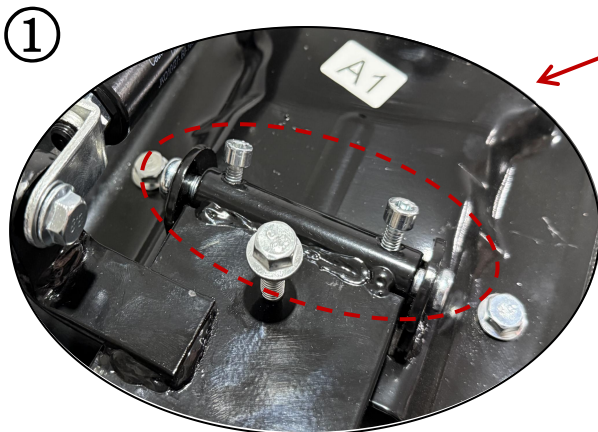

First tighten the screws on both sides,then tighten the two screws on the top.



Assembly Instructions



Assembly Instructions

Step 12:

Put the assembled seat to the hydraulic pump. insert pillow "M" into backrest.



Noted: the tray on the set plate must be aligned with the black pin of hydraulic pump.

Step 13:

Insert "F" into the hole of "E", then insert "G" into the hole of "F".



Through this adjust the height of cushion.

Through this adjust the distance between "F" and "E".