


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET


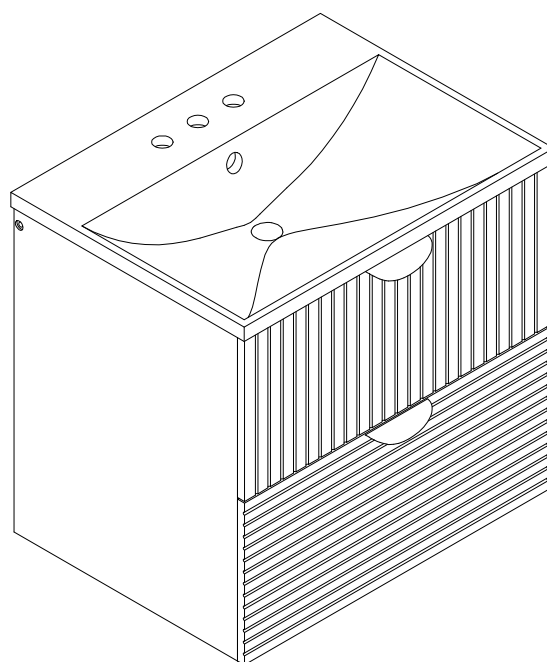


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

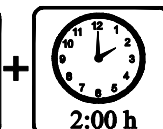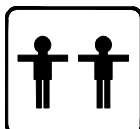

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.



**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


**Pay attention when connecting !
The sliding module must be at the front end.**

**STEP 1 : Extend Slide
Extender la diapositiva**

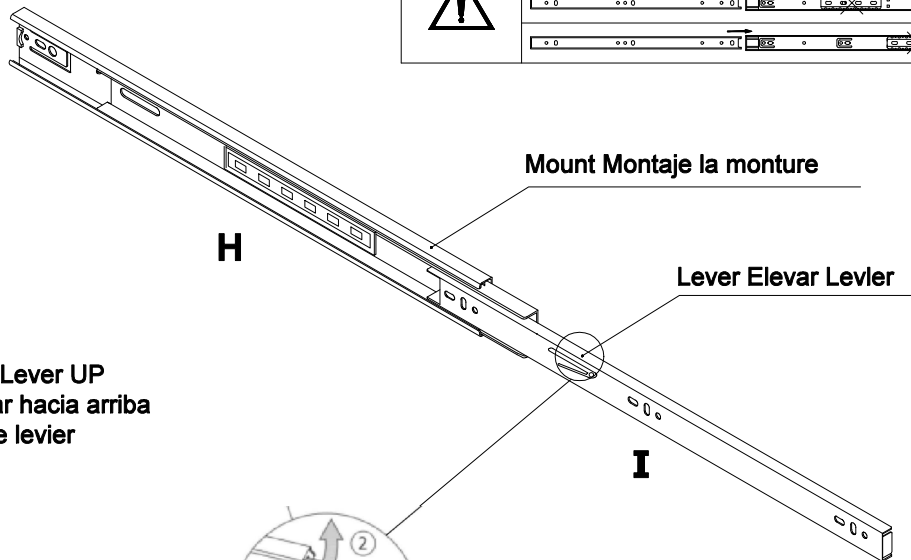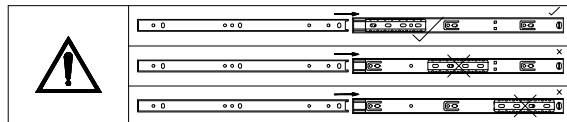


**STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier**

**Push lever for the left of drawer ,
press the lever for the right of drawer.**

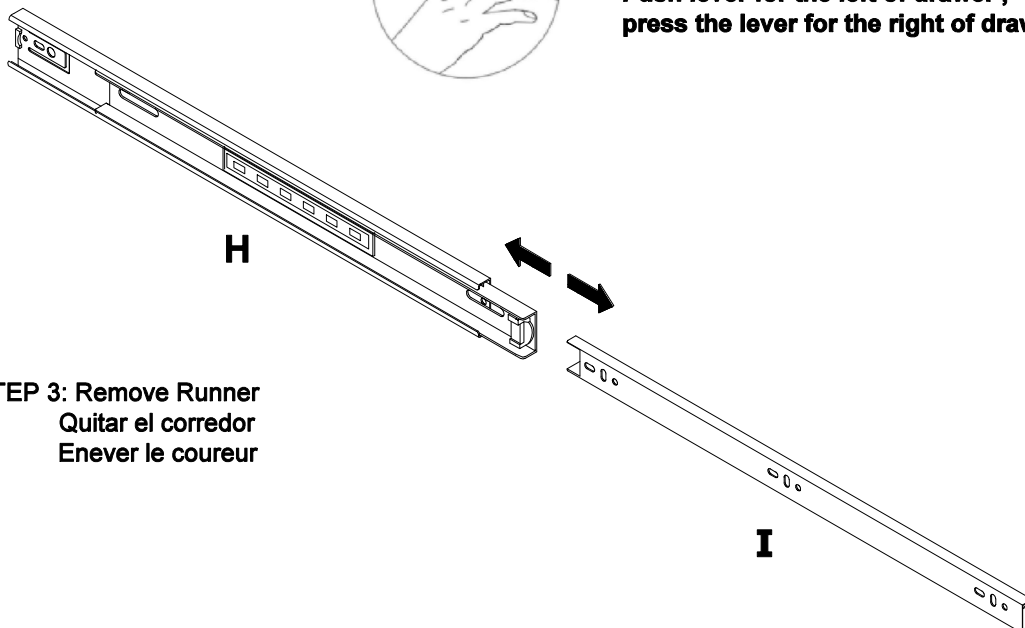













**STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur**

Detail View - CABINET

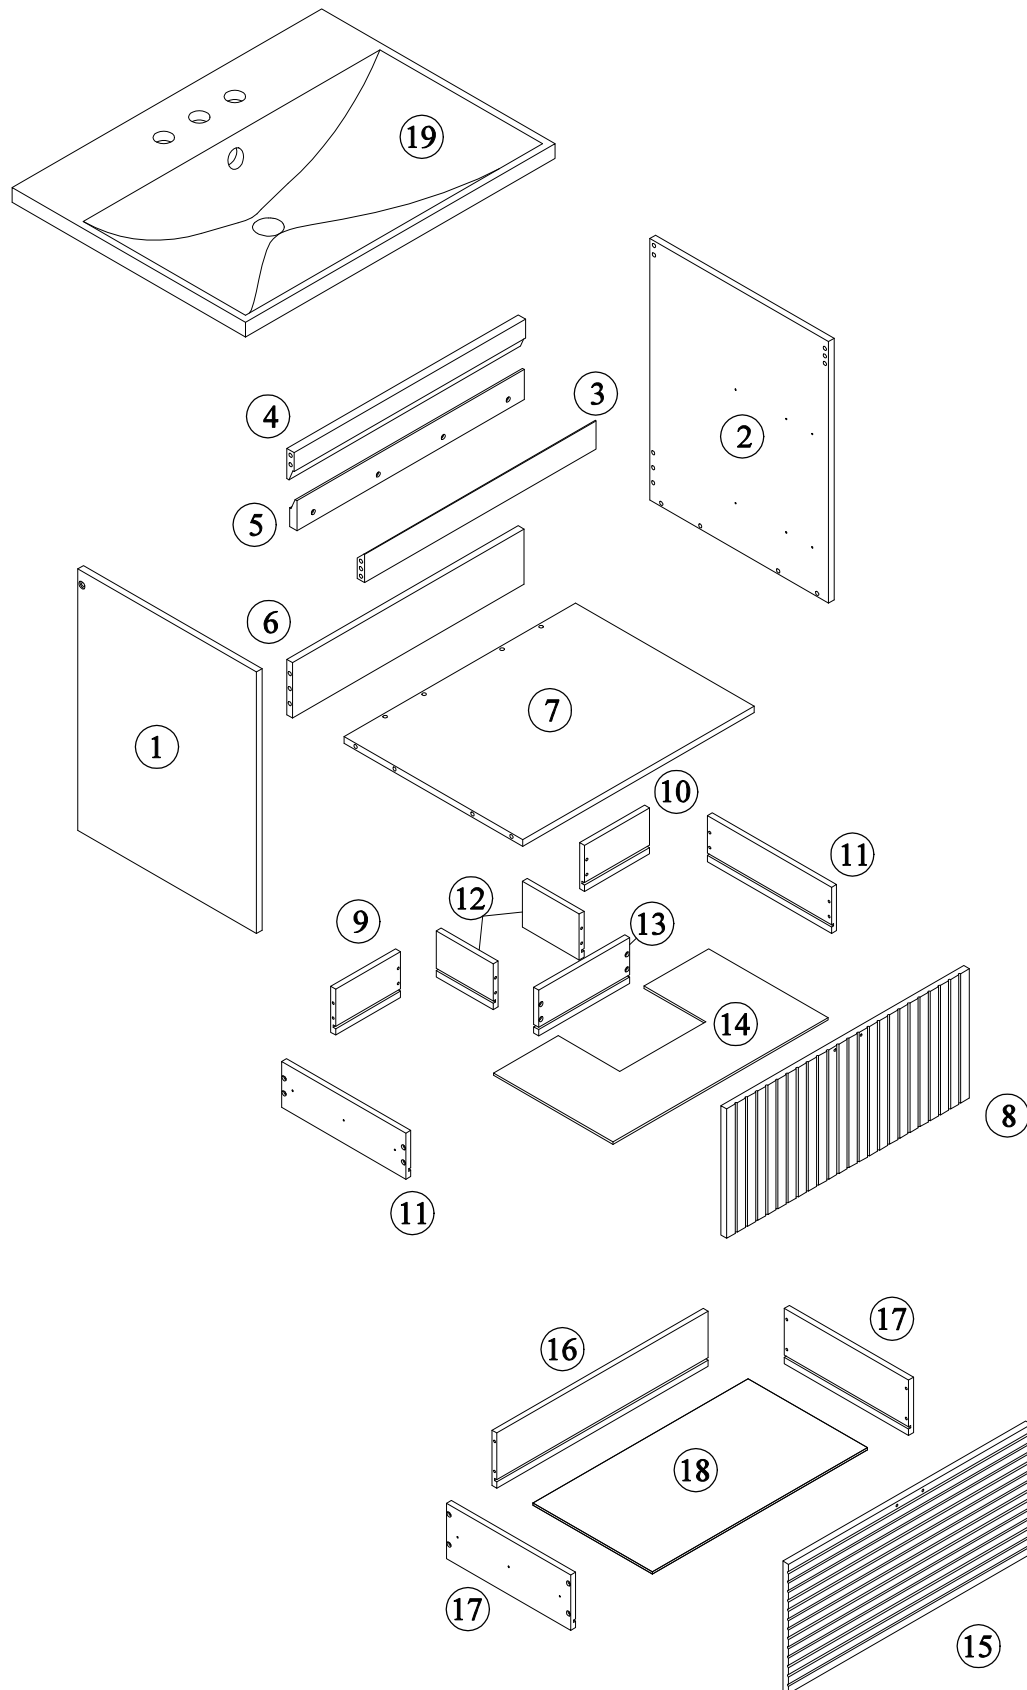


Identifying the Hardware-Identify the hardware using the illustrations below.

Part List - WF311074

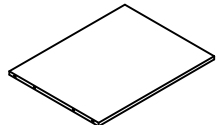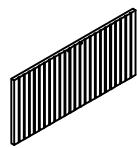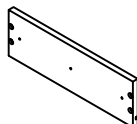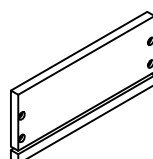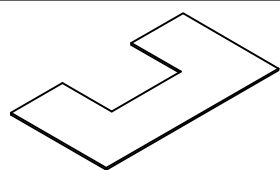1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Front Crossbar Top - 1pc		Rear Crossbar Top - 1pc
5		6	
	Connect Bar - 1pc		Rear Panel Bottom - 1pc
7		8	
	Panel Bottom - 1pc		Top Drawer Face - 1pc
9		10	
	Top Drawer Rear (L) - 1pc		Top Drawer Rear (R) - 1pc
11		12	
	Drawer Panel Side - 2pcs		Mid Drawer Side - 2pcs
13		14	
	Mid Drawer Panel - 1pc		Top Drawer Panel Bottom - 1pc


Part List - WF31074

15

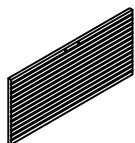


Bottom Drawer Face - 1pc

16

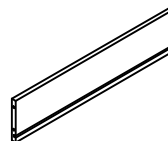


Bottom Drawer Panel Rear - 1pc

17

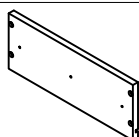


Bottom Drawer Panel Side - 2pcs

18

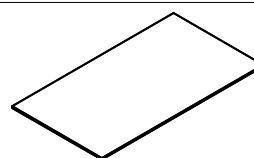






Bottom Drawer Panel Bottom - 1pc

19

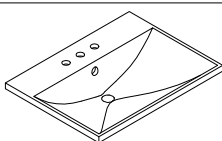


Sink - 1pc

Hardware List - WF311074







A	 ø13x1/4"x50mm Hex-Head bolts (2pcs)	B	 ø10x13mm Horizontal-Hole bolts(2pcs)	C	 ø6x35mm Three in one bolts (12pcs)
D	 ø14.5x12mm Three in one lock (12pcs)	E	 ø8xø4x32mm Round head screw (24pcs)	F	 Handle (2pcs)
G	 ø5/32"x15mm Handle screw (4pcs)	H	 ø300x35mm Slide rails (4pcs)	I	 ø298x18mm Slide rails (4pcs)
J	 ø6xø3x12mm Flat head screw (24pcs)	K	 ø8x30mm Wood dowel (14pcs)	L	 ø10xø5x50mm Flat head screw - 4pcs
M	 ø12x55mm Plastic stopper - 4pcs	N	 4mm Allen key (1pc)		

STEP: 1

C



12PCS

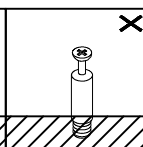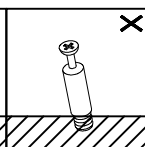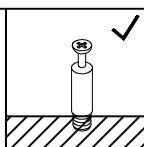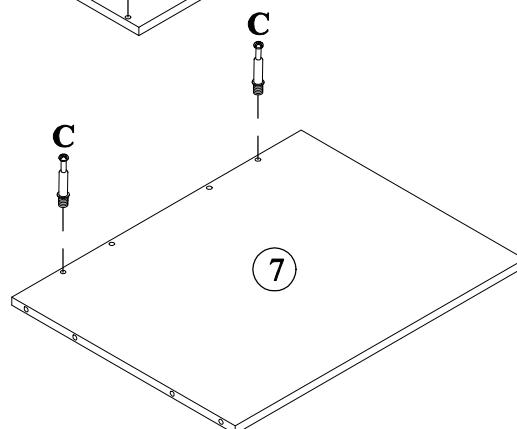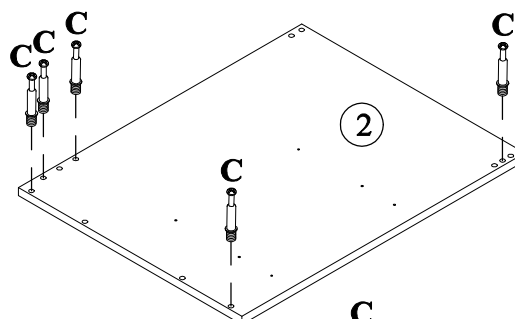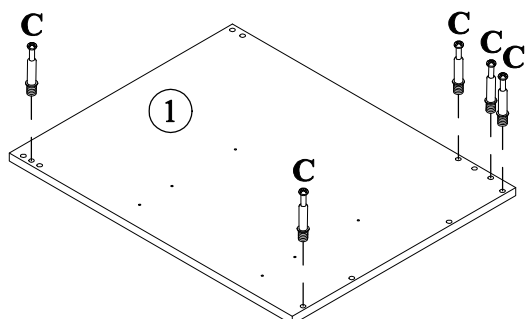

STEP: 2

H





4PCS

J



12PCS

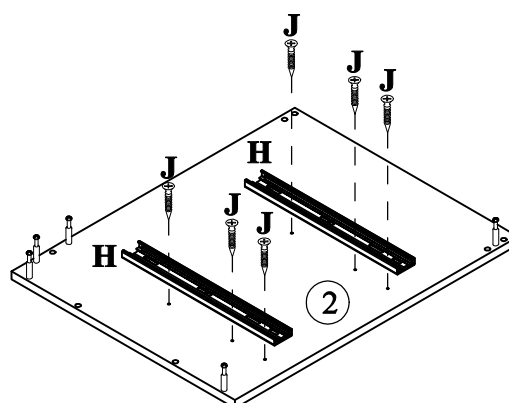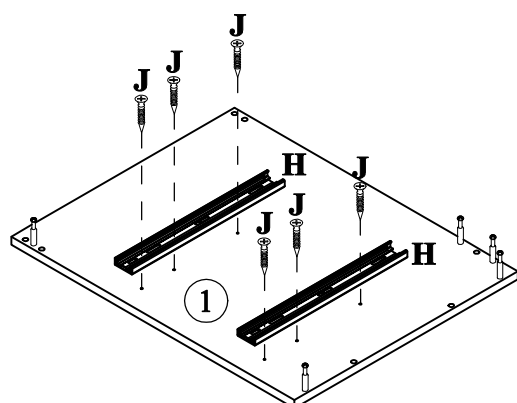

POSITION OF SCSEW





1

2

1



STEP: 3

D		K	
2PCS		2PCS	

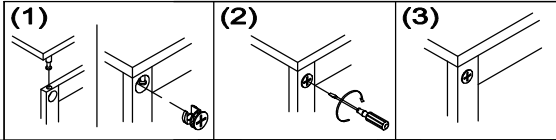
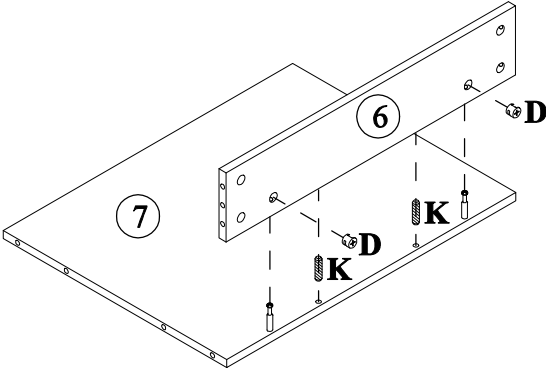




STEP: 4

D		K	
4PCS		3PCS	

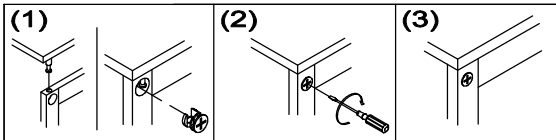
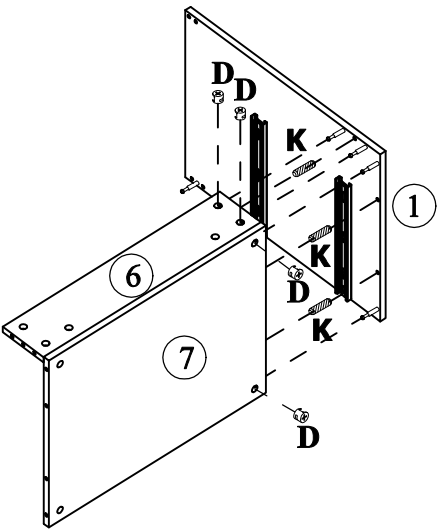




STEP: 5

A	B	D	K
			
1PC	1PC	1PC	3PCS

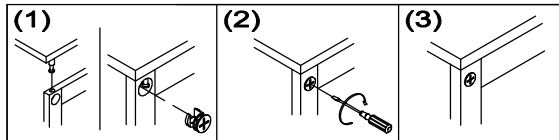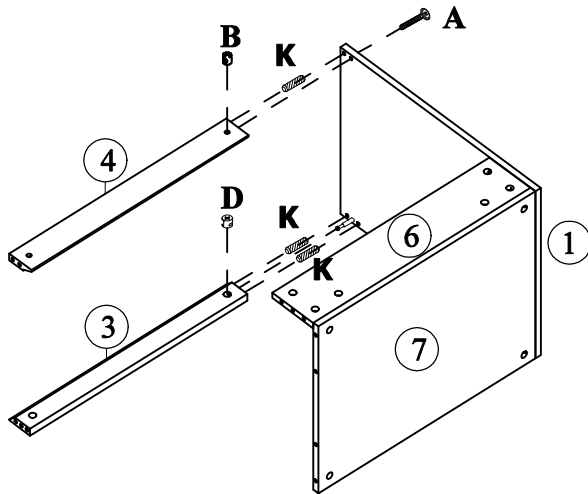


STEP: 6

A	B	D	K
			
1PC	1PC	5PCS	6PCS

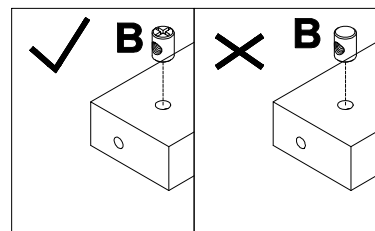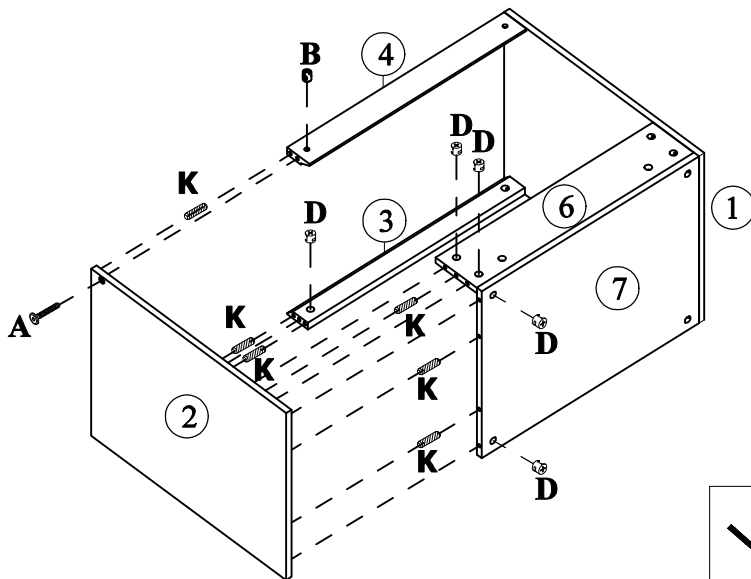


STEP: 7

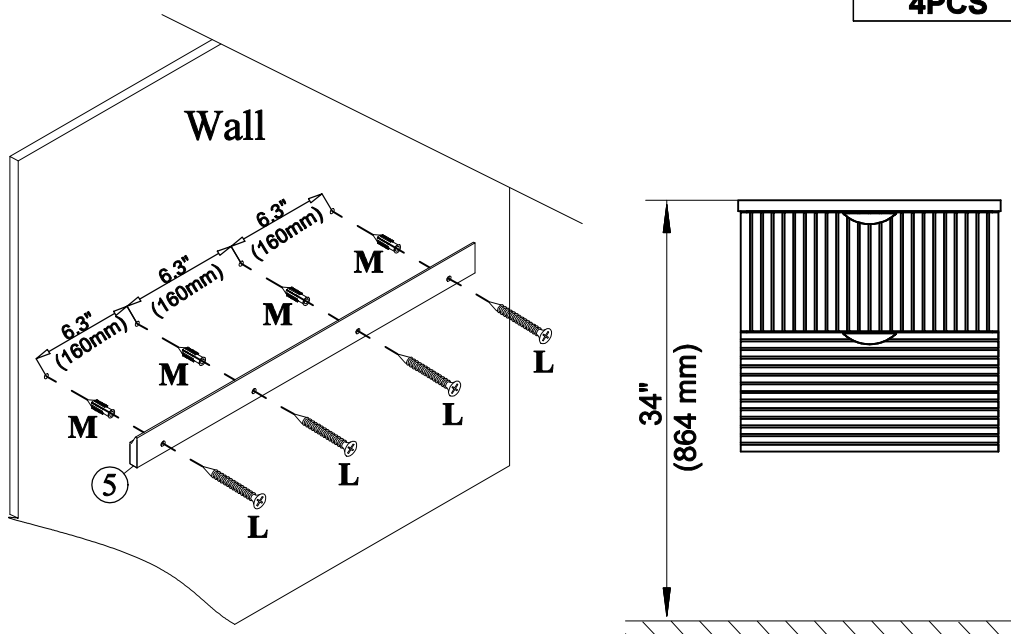



Draw the spacing between the walls and the No.5, punch holes in the wall, and fix the No.5 to the wall with screws.


Note: Appropriate distance from the top of sink to the ground is 34\".

STEP: 8


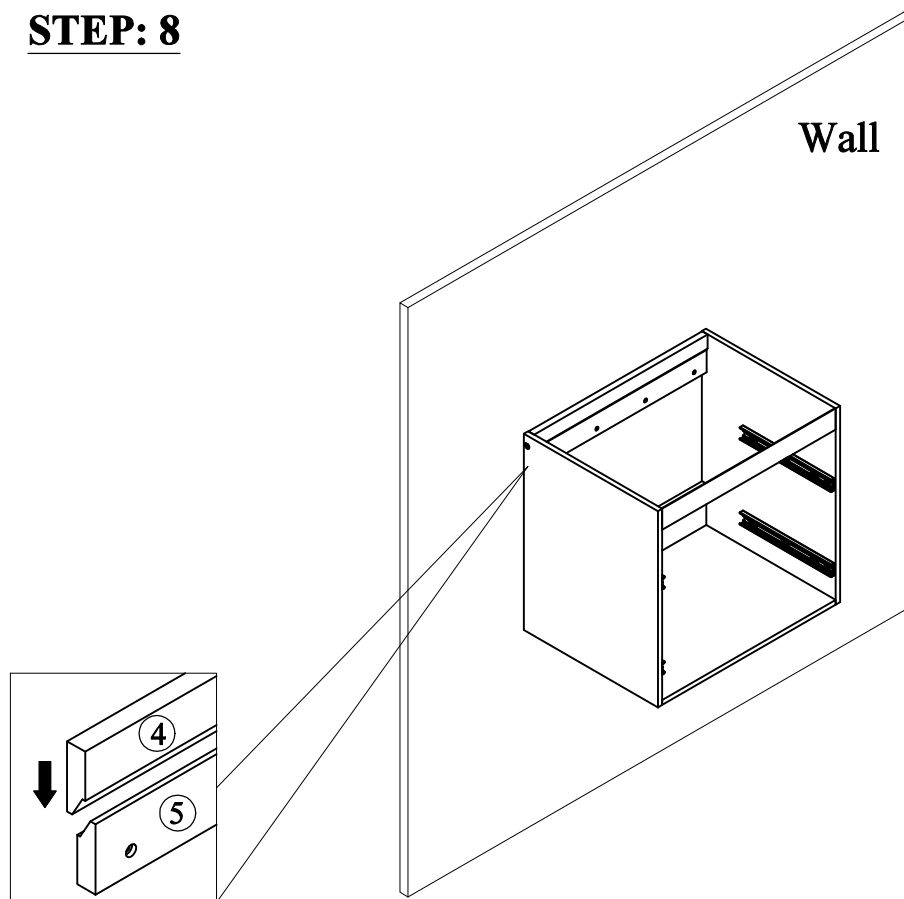




STEP: 9

E	F	G	I	J
				
16PCS	1PC	2PCS	2PCS	6PCS

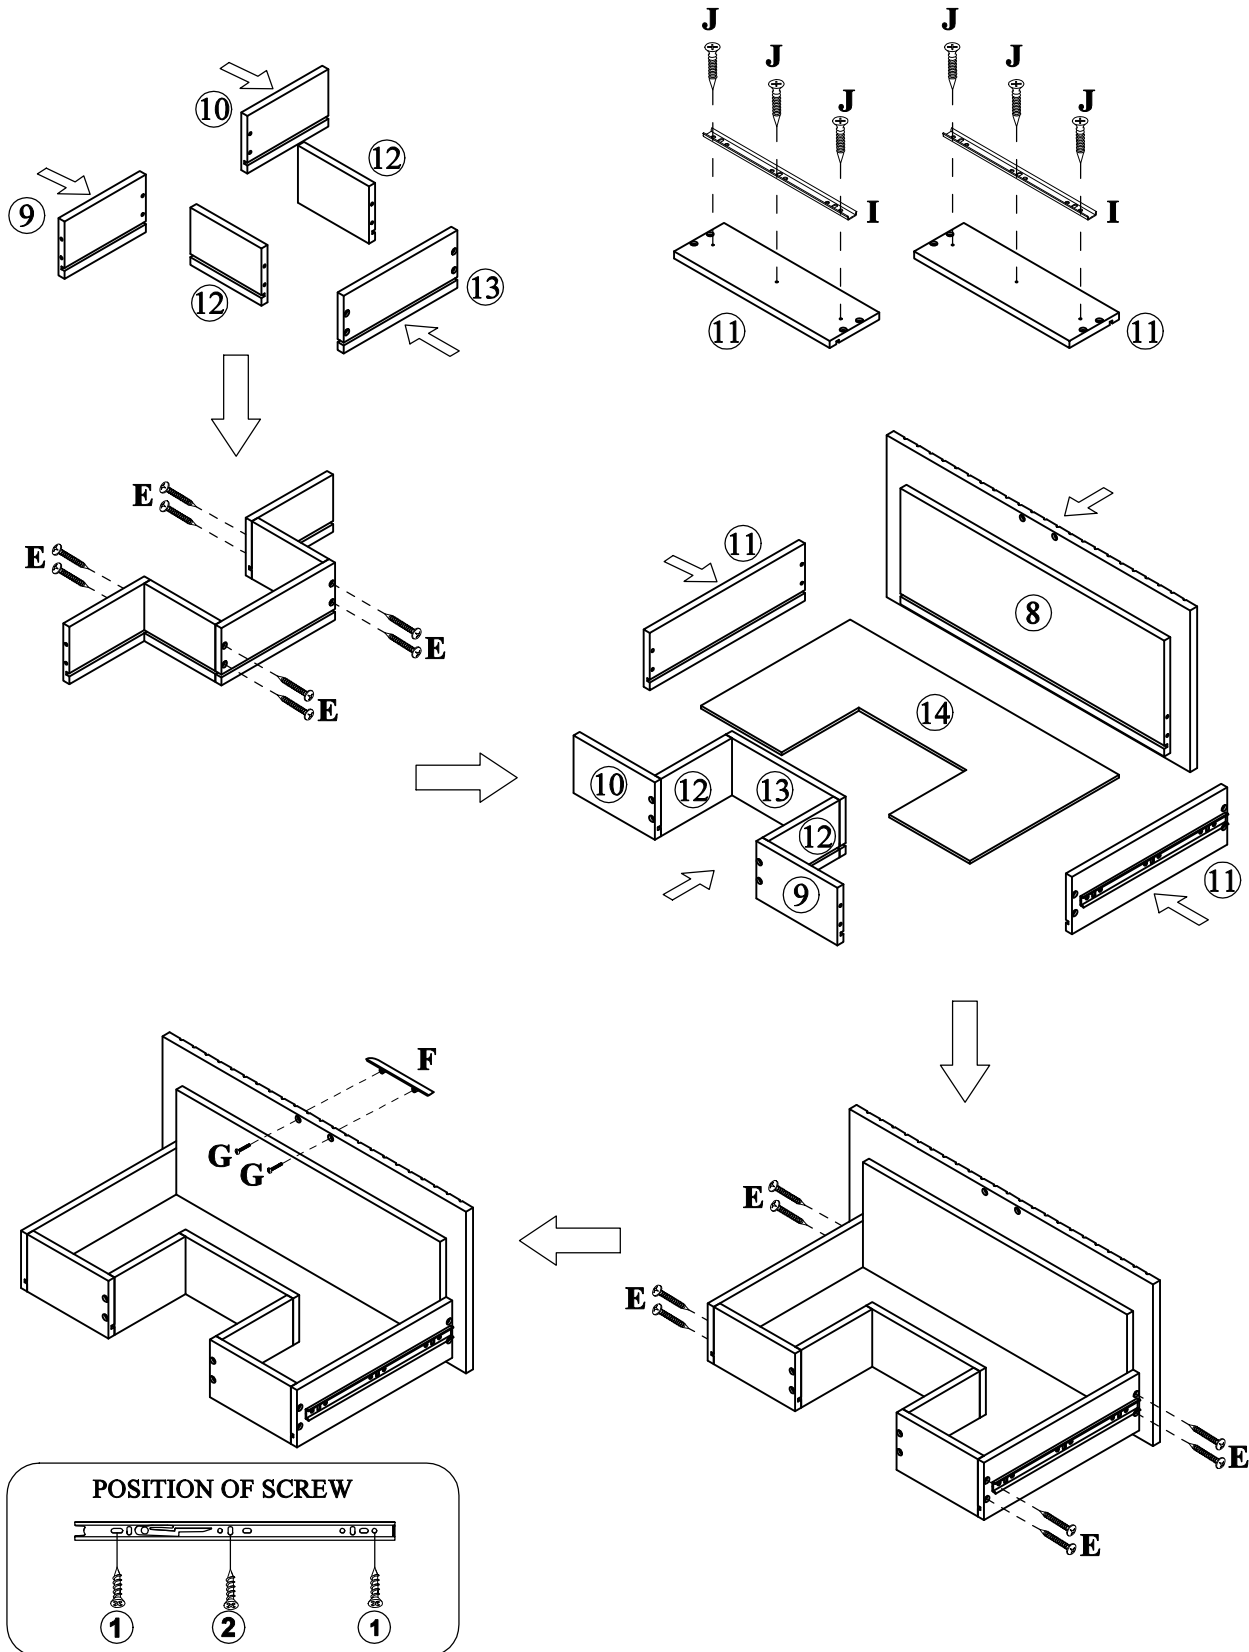


STEP: 10

E	F	G	I	J
				
8PCS	1PC	2PCS	2PCS	6PCS

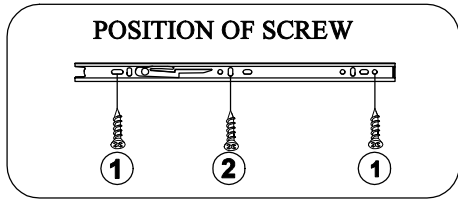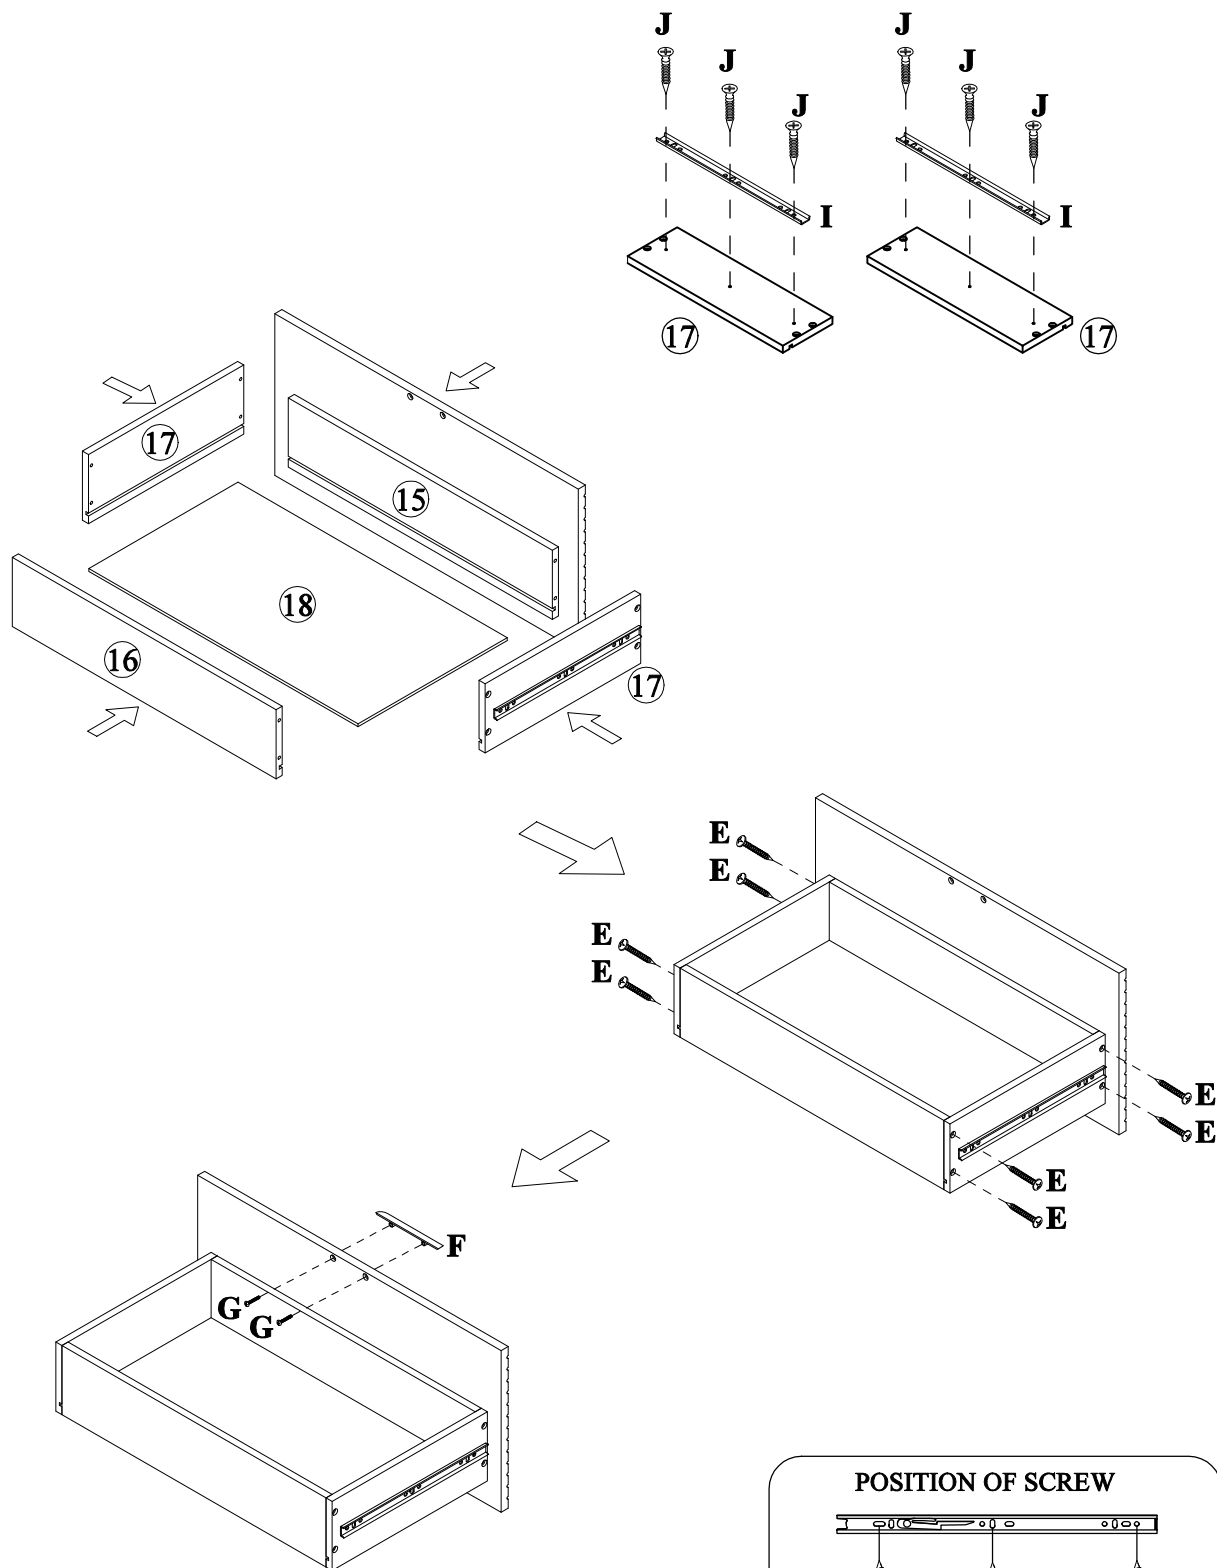


STEP: 11

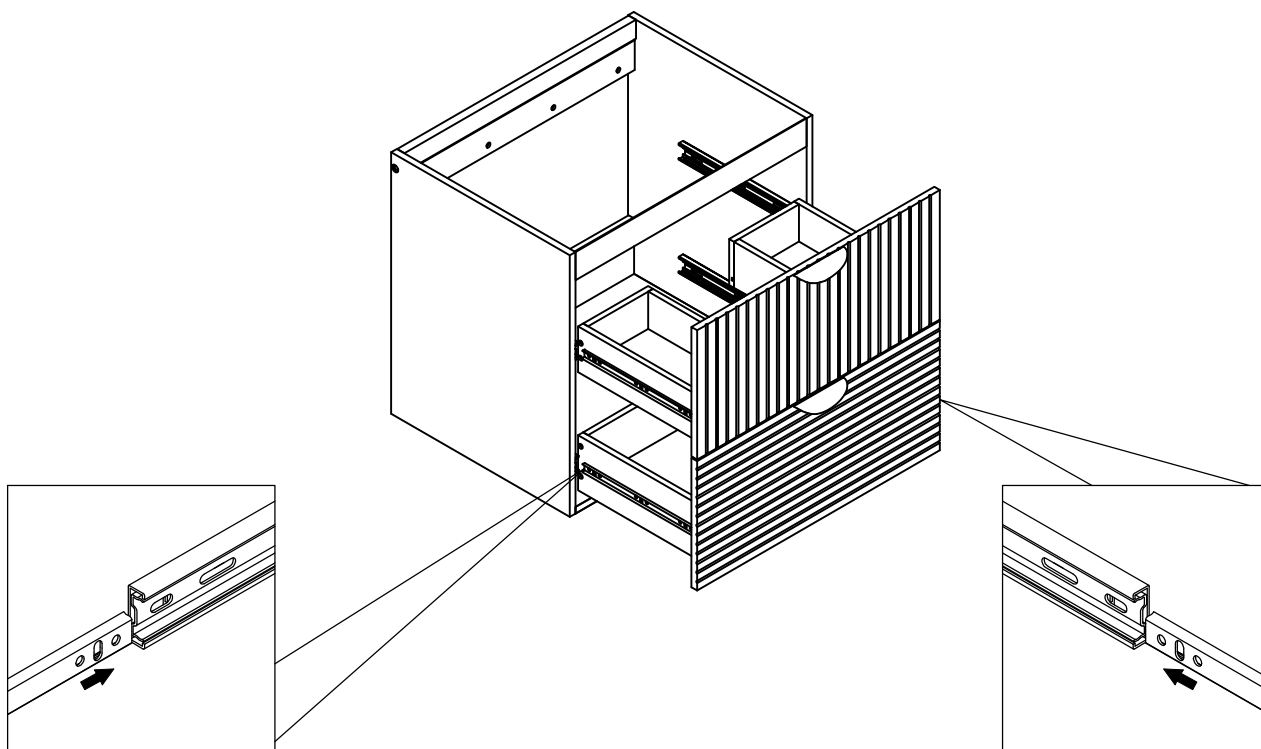

STEP: 12

Install the sink on the cabinet with glue.
Let stand for 24 hours

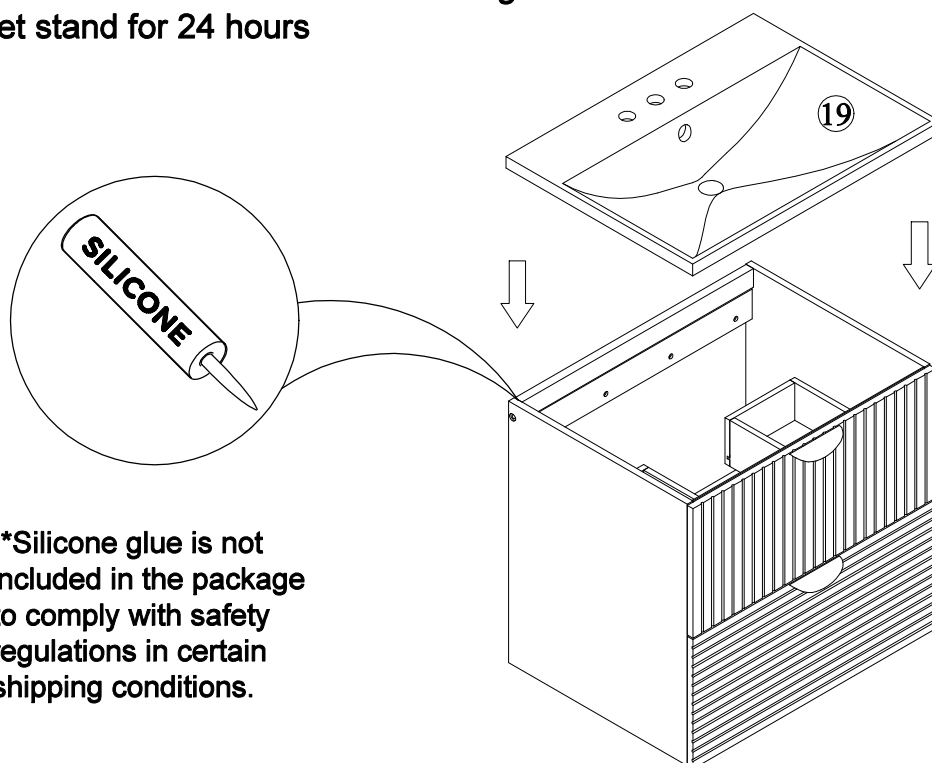

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 13

