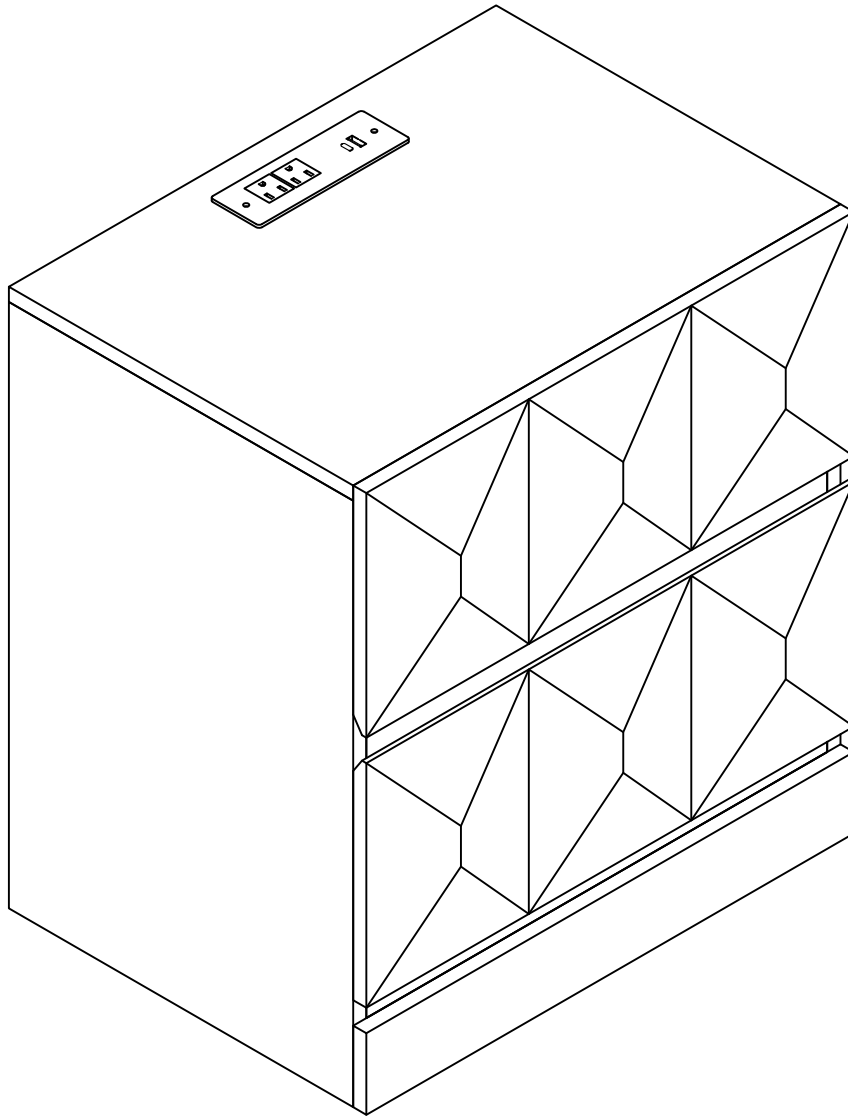


Instruction Manual



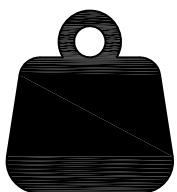
ITEM NO.HMGG0019

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

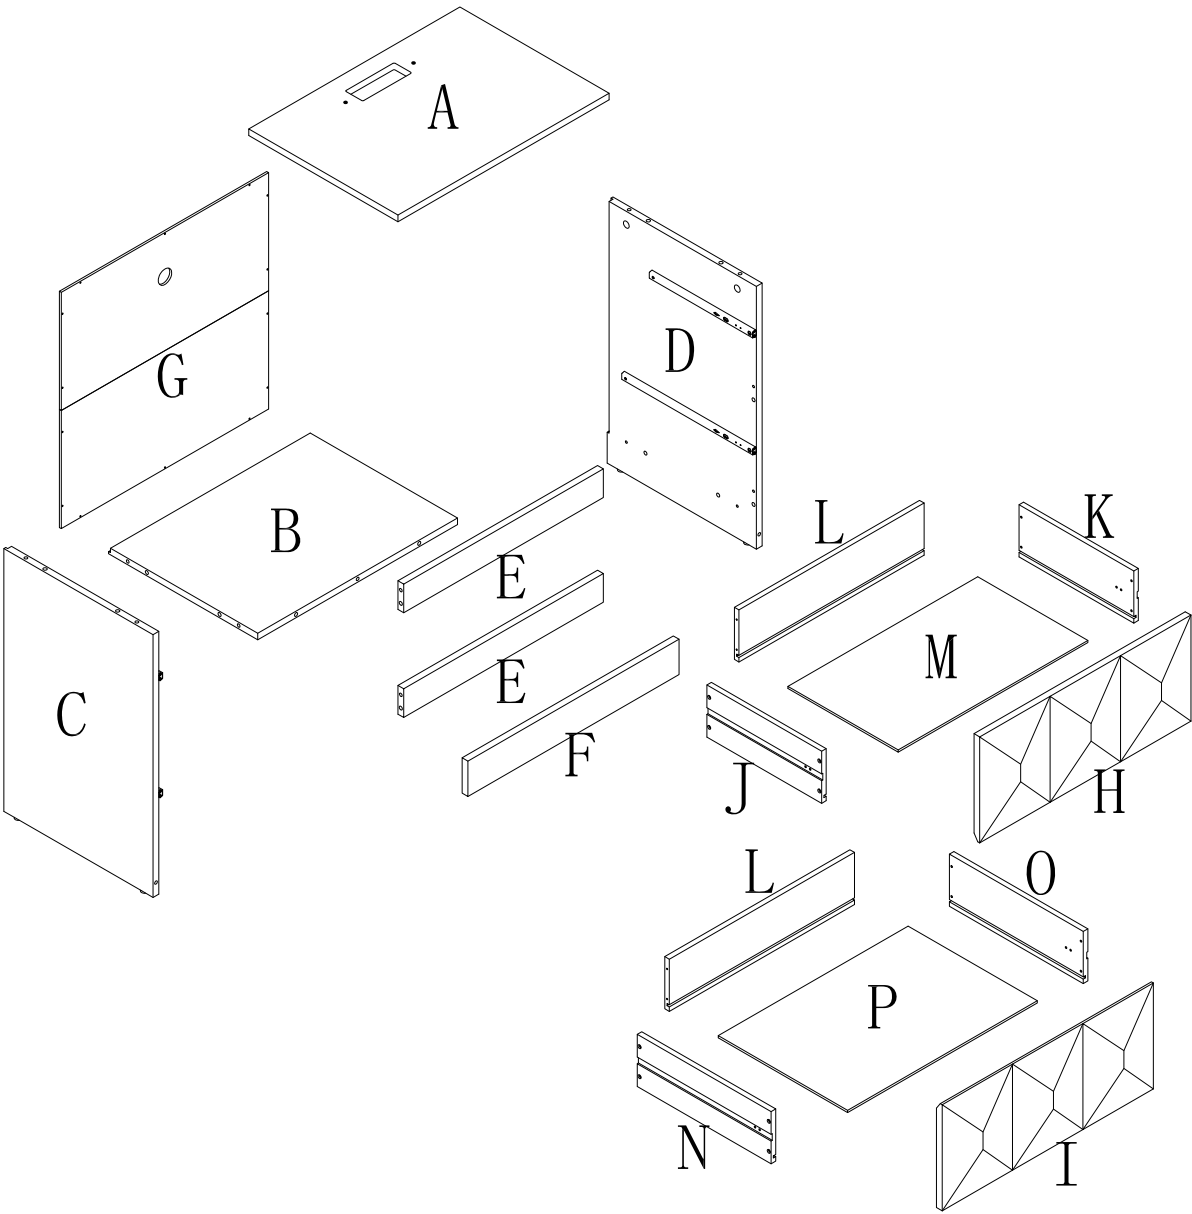
- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



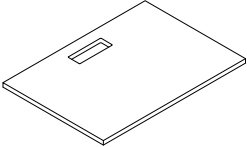
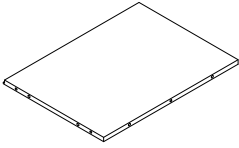




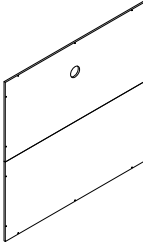
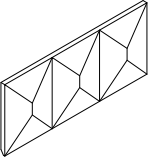
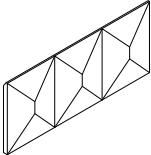

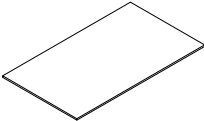


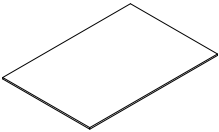
Weight Limitation

100 LBS

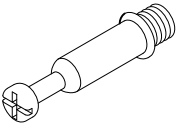



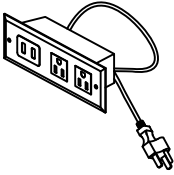


EXPLOSIVE VIEW



PARTS LIST

A x1 	B x1 	C x1 	D x1 
E x2 	F x1 	G x1 	H x1 
I x1 	J x1 	K x1 	L x2 
M x1 	N x1 	O x1 	P x1 

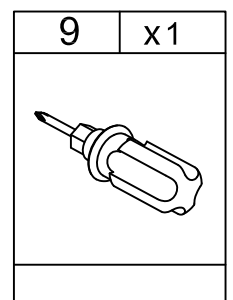
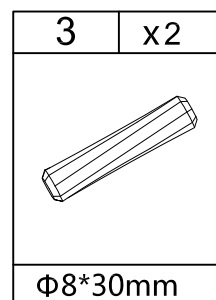
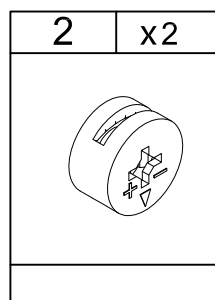
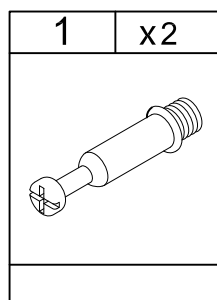
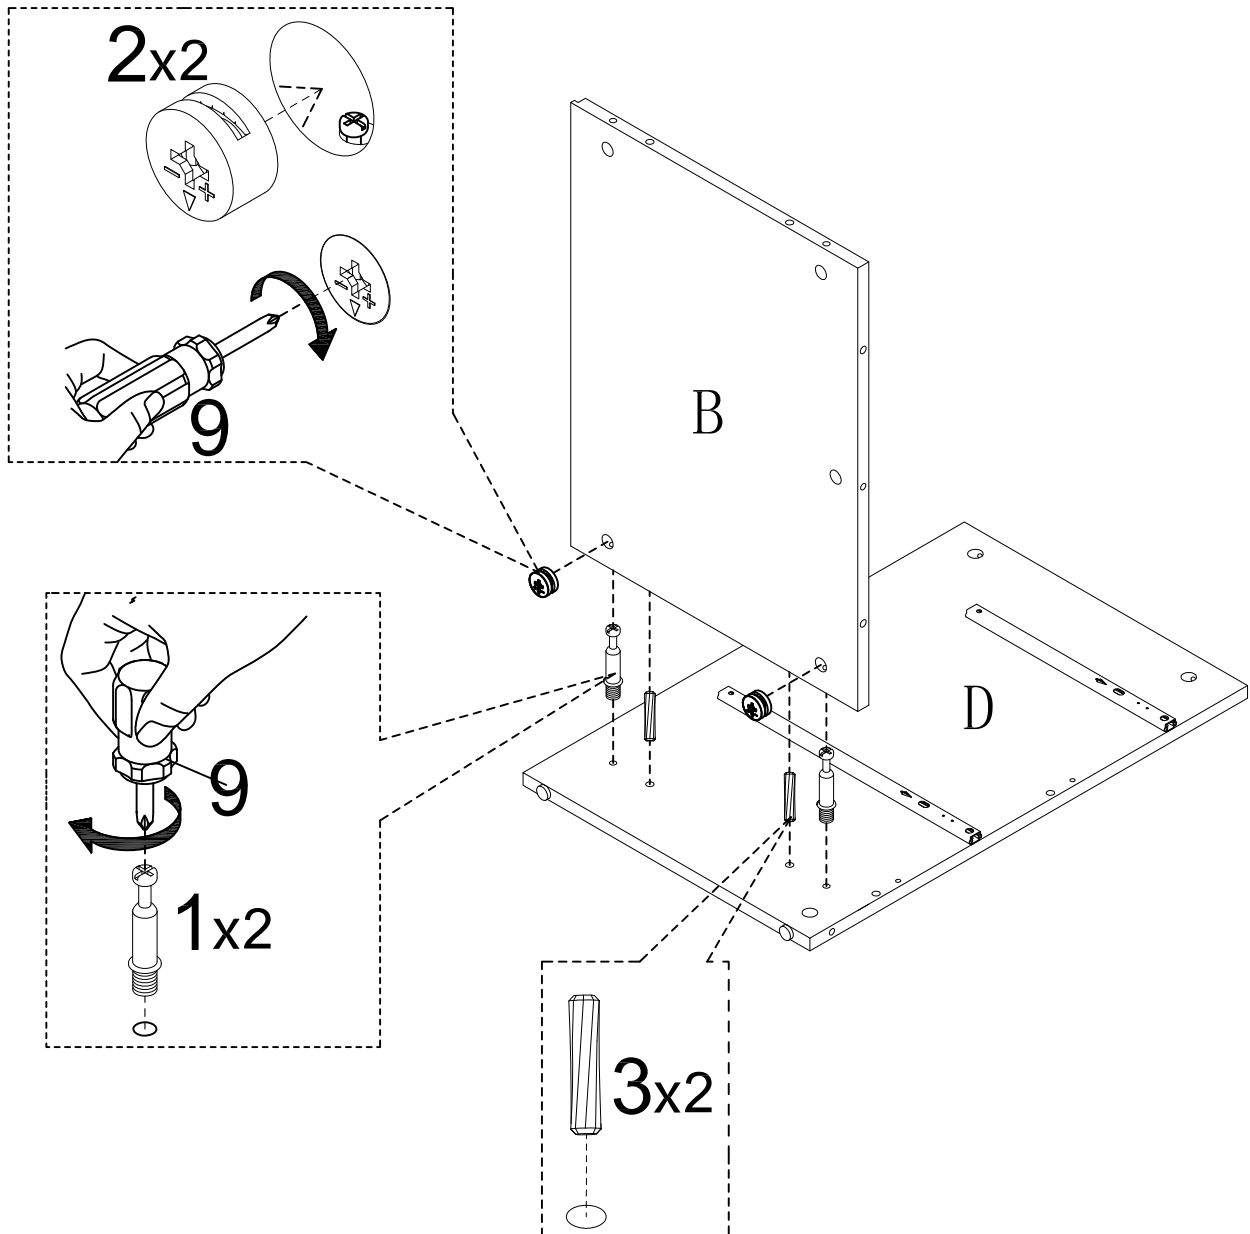
HARDWARE LIST

1	x15+1	2	x15+1	3	x14+1	4	x14+1	5	x2	6	x1
					$\Phi 8*30\text{mm}$		$\Phi 3*14\text{mm}$		$\Phi 3*15\text{mm}$		
7	x16+1	8	x8	9	x1						
	$\Phi 8\#1"$		$\Phi 4*13\text{mm}$								

ASSEMBLY INSTRUCTIONS

STEP-1

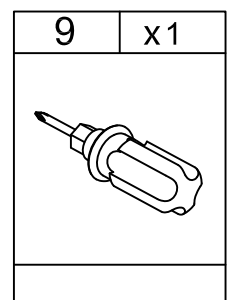
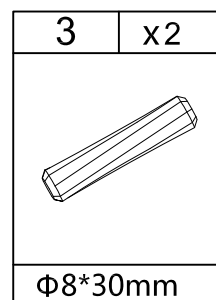
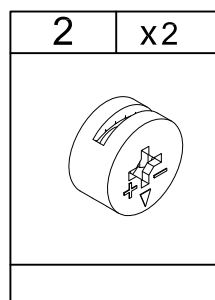
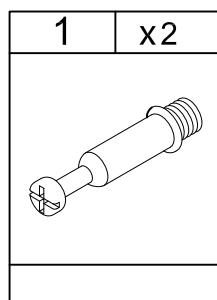
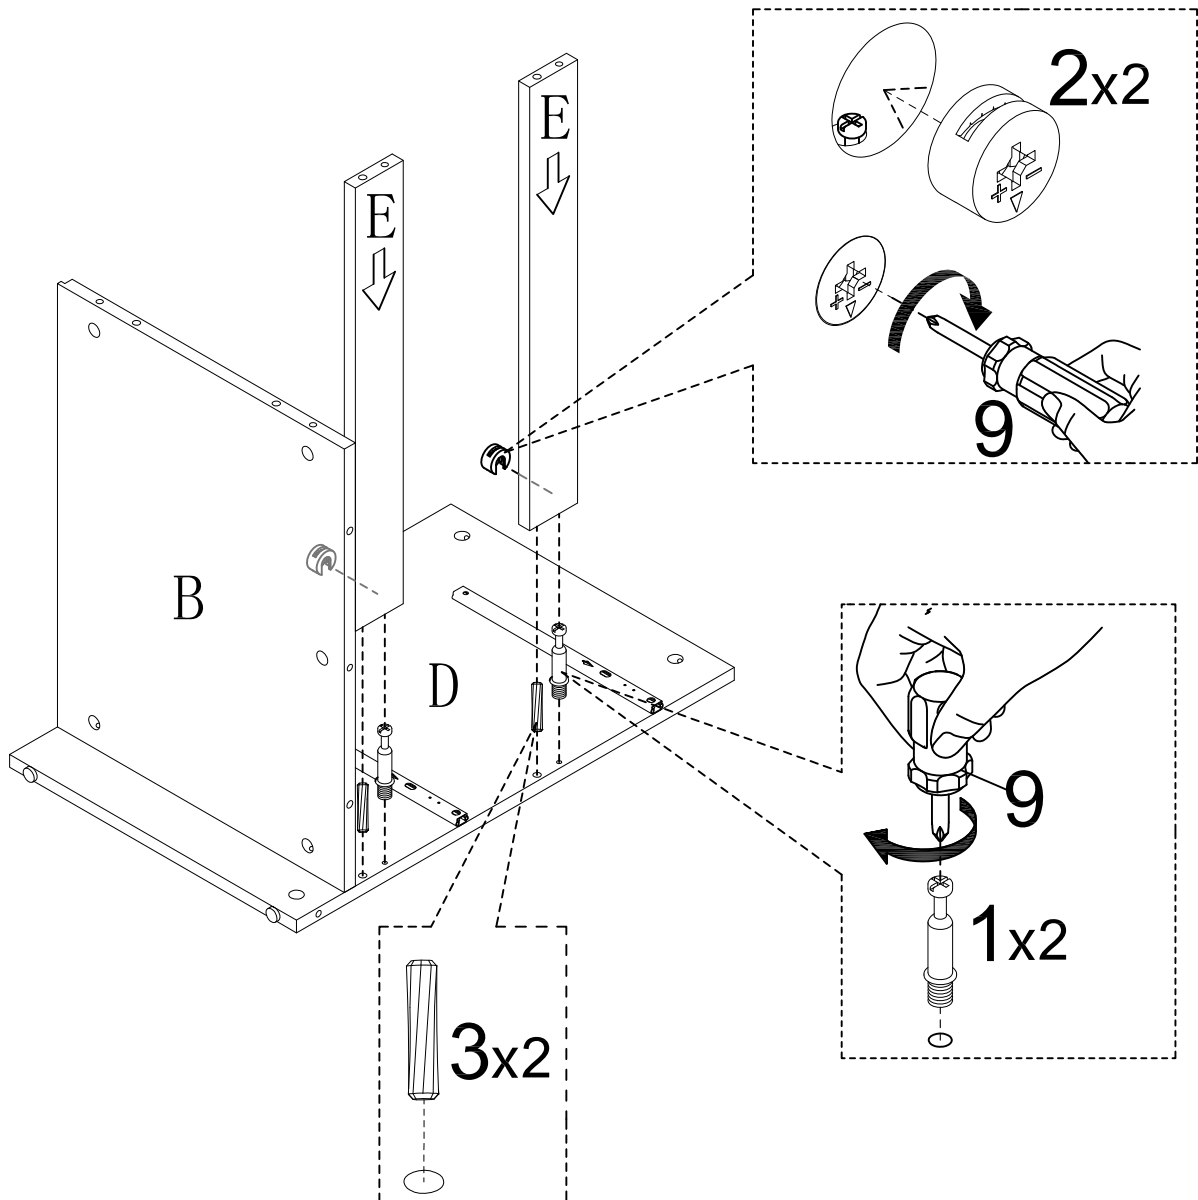
- 1.Put the bolts #1 and wood dowel #3 into the side panel D
- 2.Attached the bottom panel B to the side panel D and tighten the cam #2



ASSEMBLY INSTRUCTIONS

STEP-2

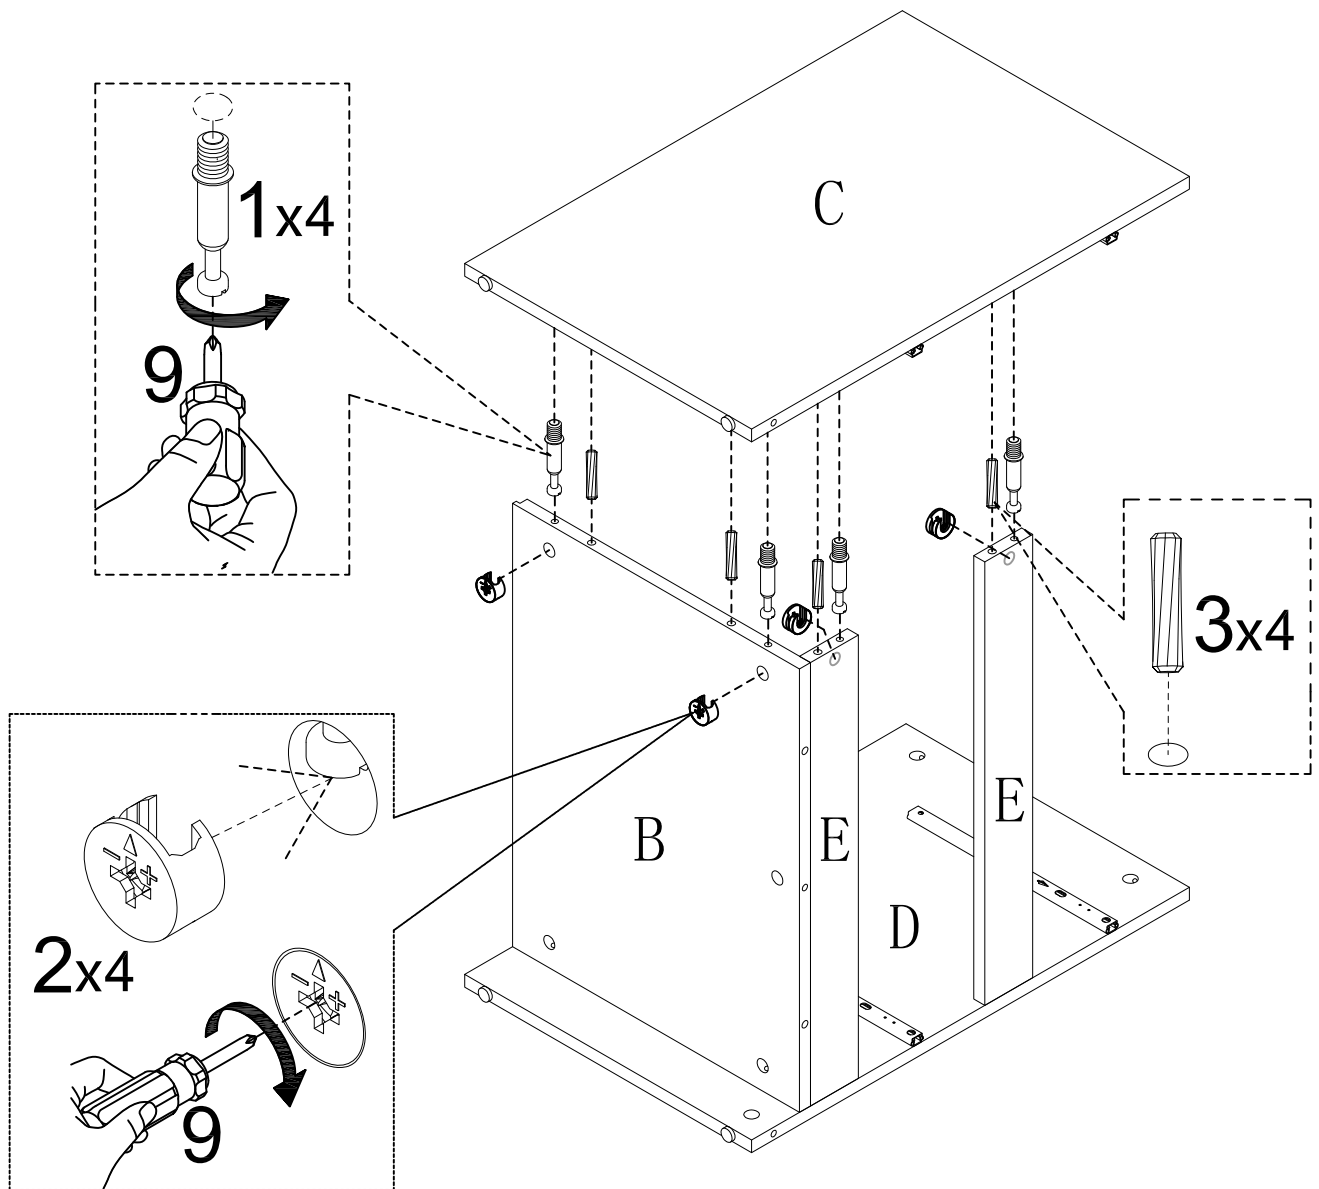
- 1.Put the bolts #1 and wood dowel #3 into the side panel D
- 2.Attached the front panels E to the side panel D and tighten the cam #2

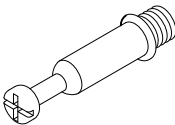



ASSEMBLY INSTRUCTIONS

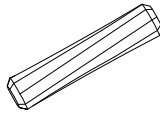
STEP-3

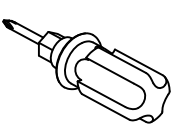
- 1.Put the bolts #1 and wood dowel #3 into the bottom panel B and front panels E
- 2.Attached the side panel C to the bottom panel B and front panels E, tighten the cam #2



1	x4
	

2	x4
	

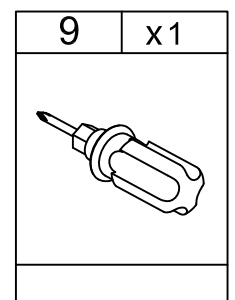
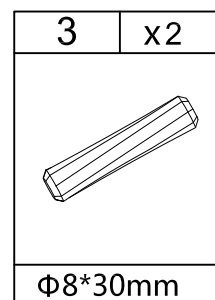
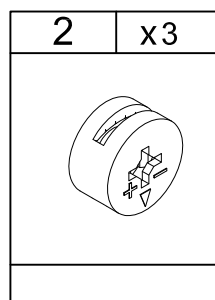
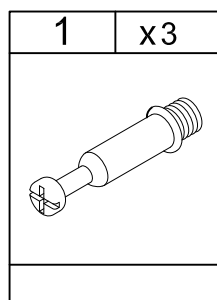
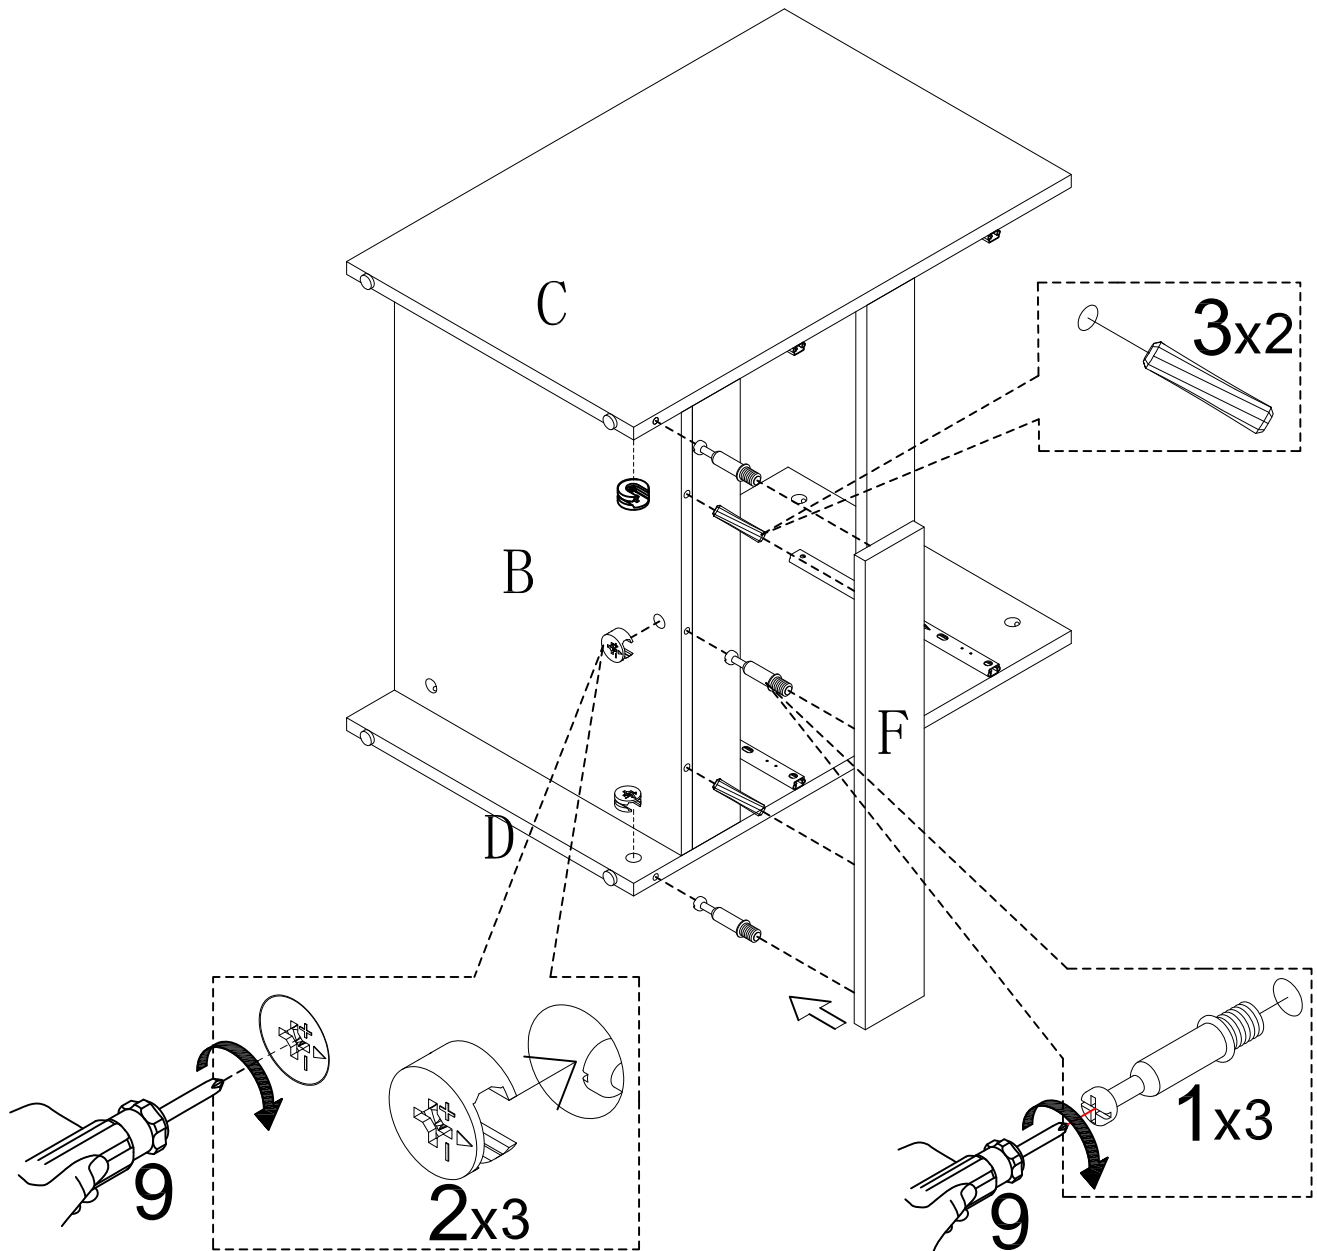
3	x4
	
Φ8*30mm	

9	x1
	

ASSEMBLY INSTRUCTIONS

STEP-4

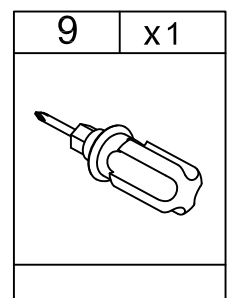
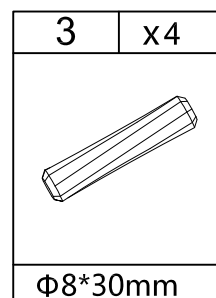
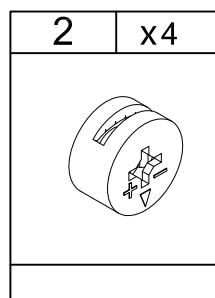
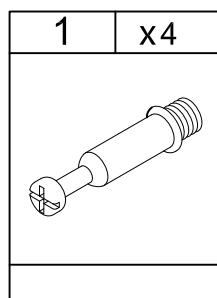
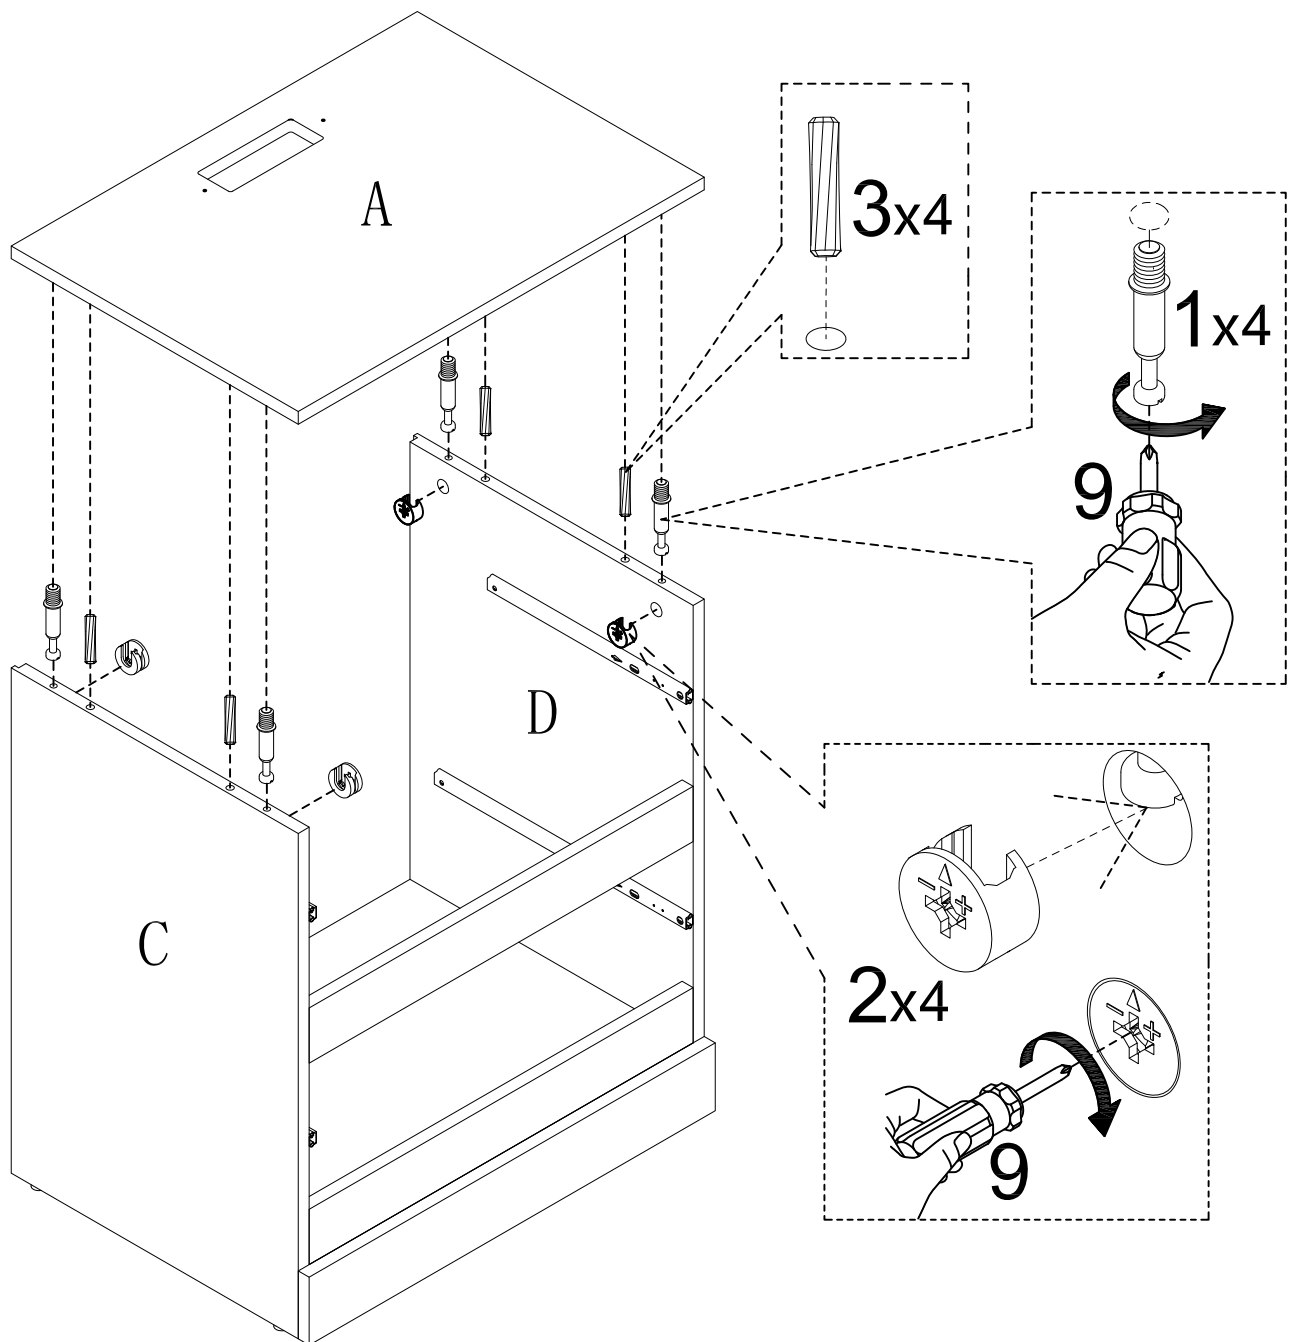
- 1.Put the bolts #1 and wood dowel #3 into the bottom panel B and side panels C&D
- 2.Attached the panel F to the bottom panel B and side panels C&D, tighten the cam #2



ASSEMBLY INSTRUCTIONS

STEP-5

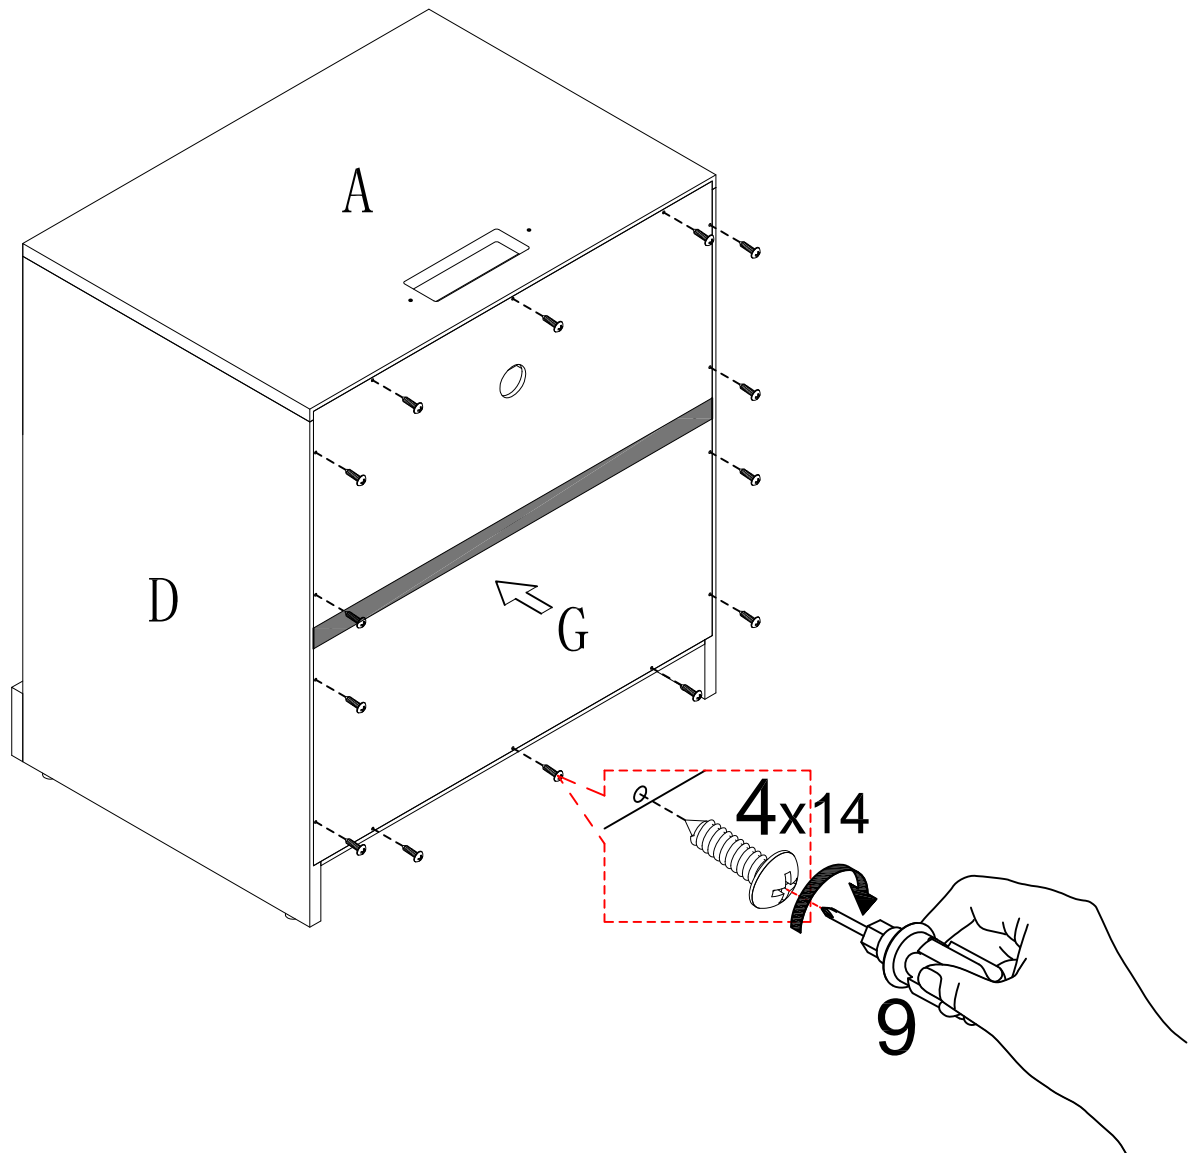
- 1.Put the bolts #1 and wood dowel #3 into the side panel C&D
- 2.Attached the top panel A to the side panel C&D and tighten the cam #2





ASSEMBLY INSTRUCTIONS

STEP-6

1.Attached the back panel G to the side panels C&D and tighten the screws #4

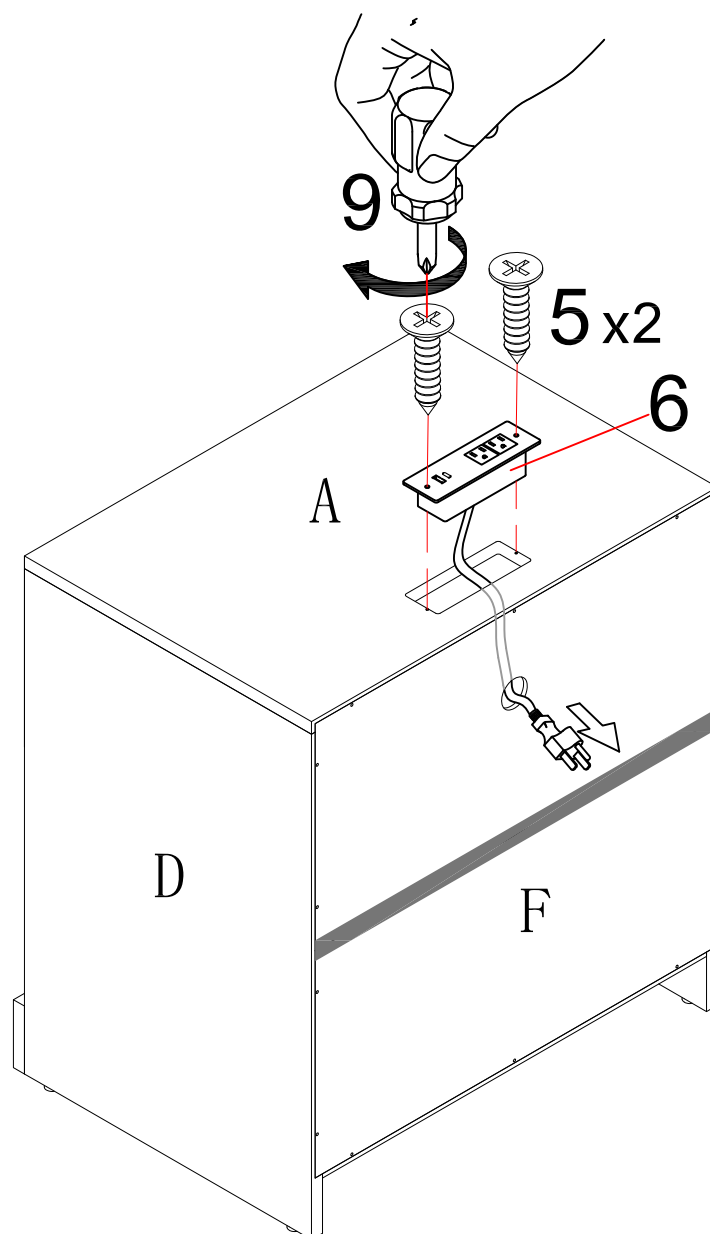


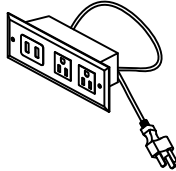

4	x14	9	x1
			

ASSEMBLY INSTRUCTIONS

STEP-7

1.Attached the electric board #6 to the top panel A and tighten the screws#5

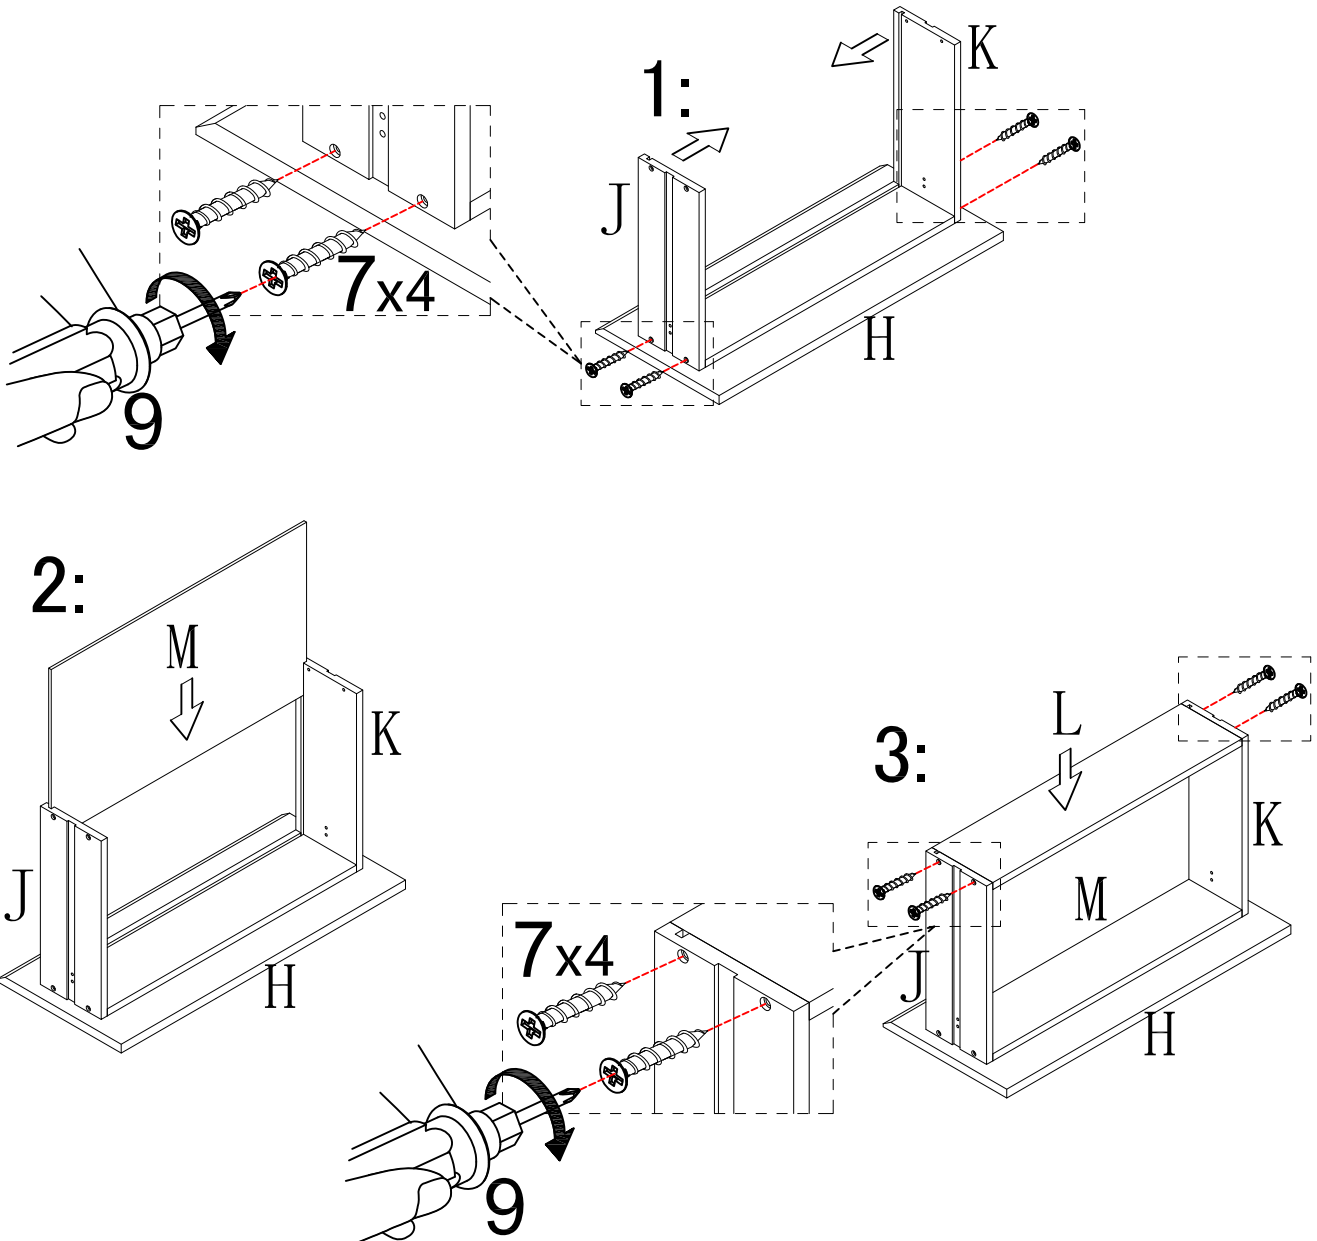




5	x2	6	x1	9	x1
					
Φ 3*15mm					

ASSEMBLY INSTRUCTIONS

STEP-8

1. Attached the drawer left J and right K panels to the drawer front panel H and tighten the screws #7
2. Put the drawer bottom panel M to the groove of the drawer Left J and right K panel
3. Attached the drawer back panel L to the drawer left J and right K panel , then tighten the screws #7

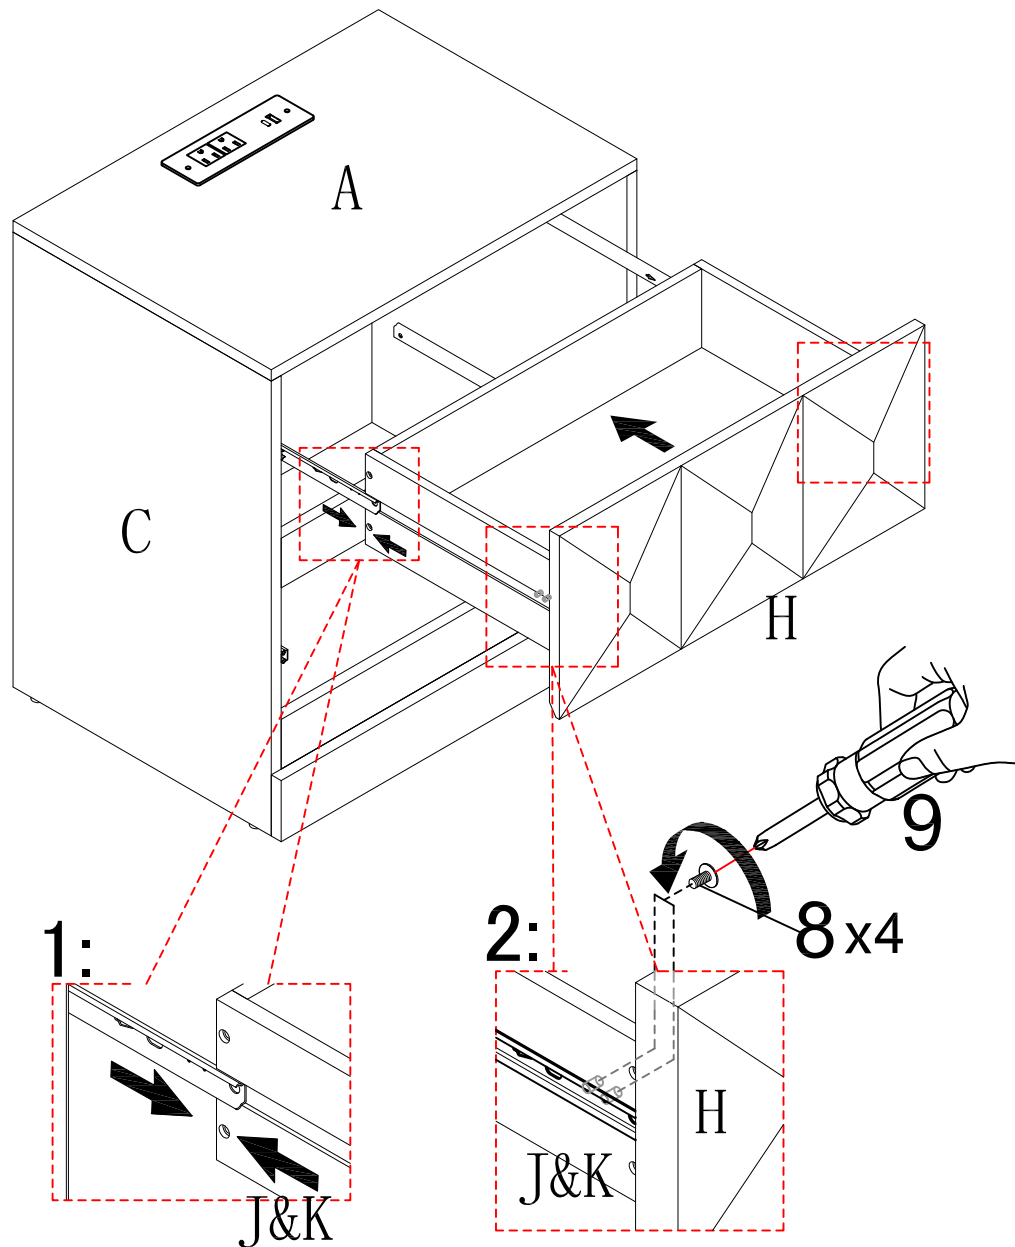



7	x8	9	x1
			
Φ 8#*1"			

ASSEMBLY INSTRUCTIONS

STEP-9

1.Attached the drawers , make sure the sliders are aligned and tighten the screws #8

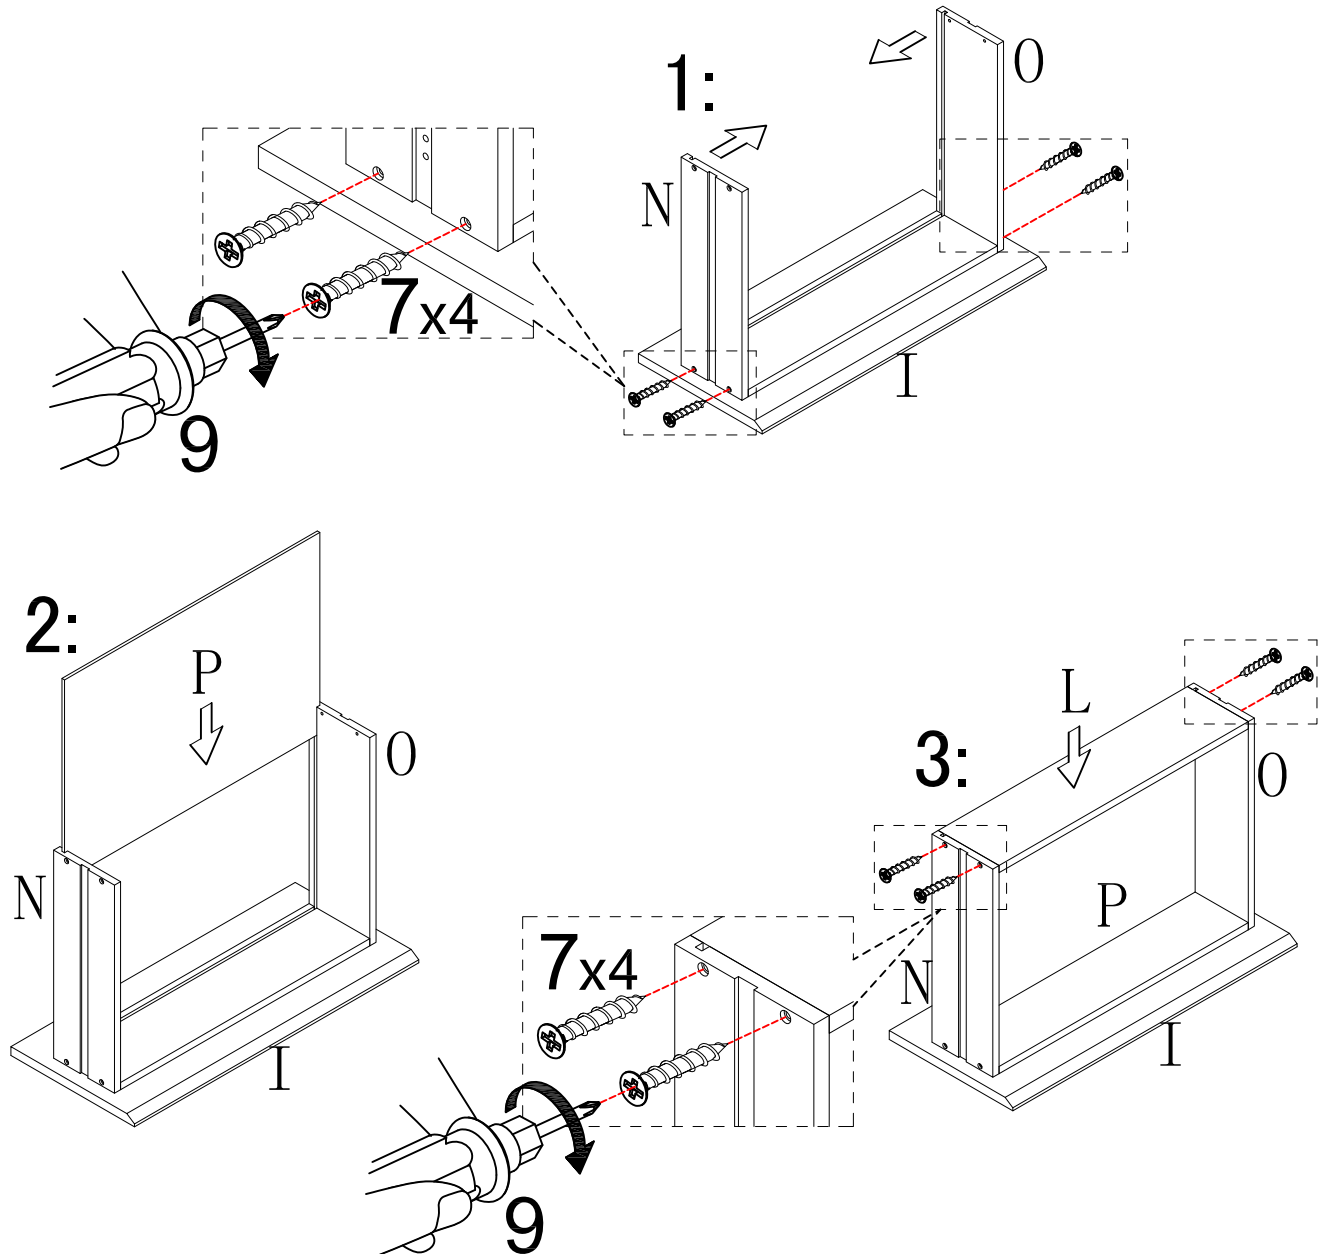




8	x4	9	x1
			

ASSEMBLY INSTRUCTIONS

STEP-10

1. Attached the drawer left N and right O panels to the drawer front panel I and tighten the screws #7
2. Put the drawer bottom panel P to the groove of the drawer Left N and right O panel
3. Attached the drawer back panel L to the drawer left N and right O panel , then tighten the screws #7



7	x8	9	x1
			
Φ 8#*1"			

ASSEMBLY INSTRUCTIONS

STEP-11

1.Attached the drawers , make sure the sliders are aligned and tighten the screws #8

