


84032 Product Installation Instructions

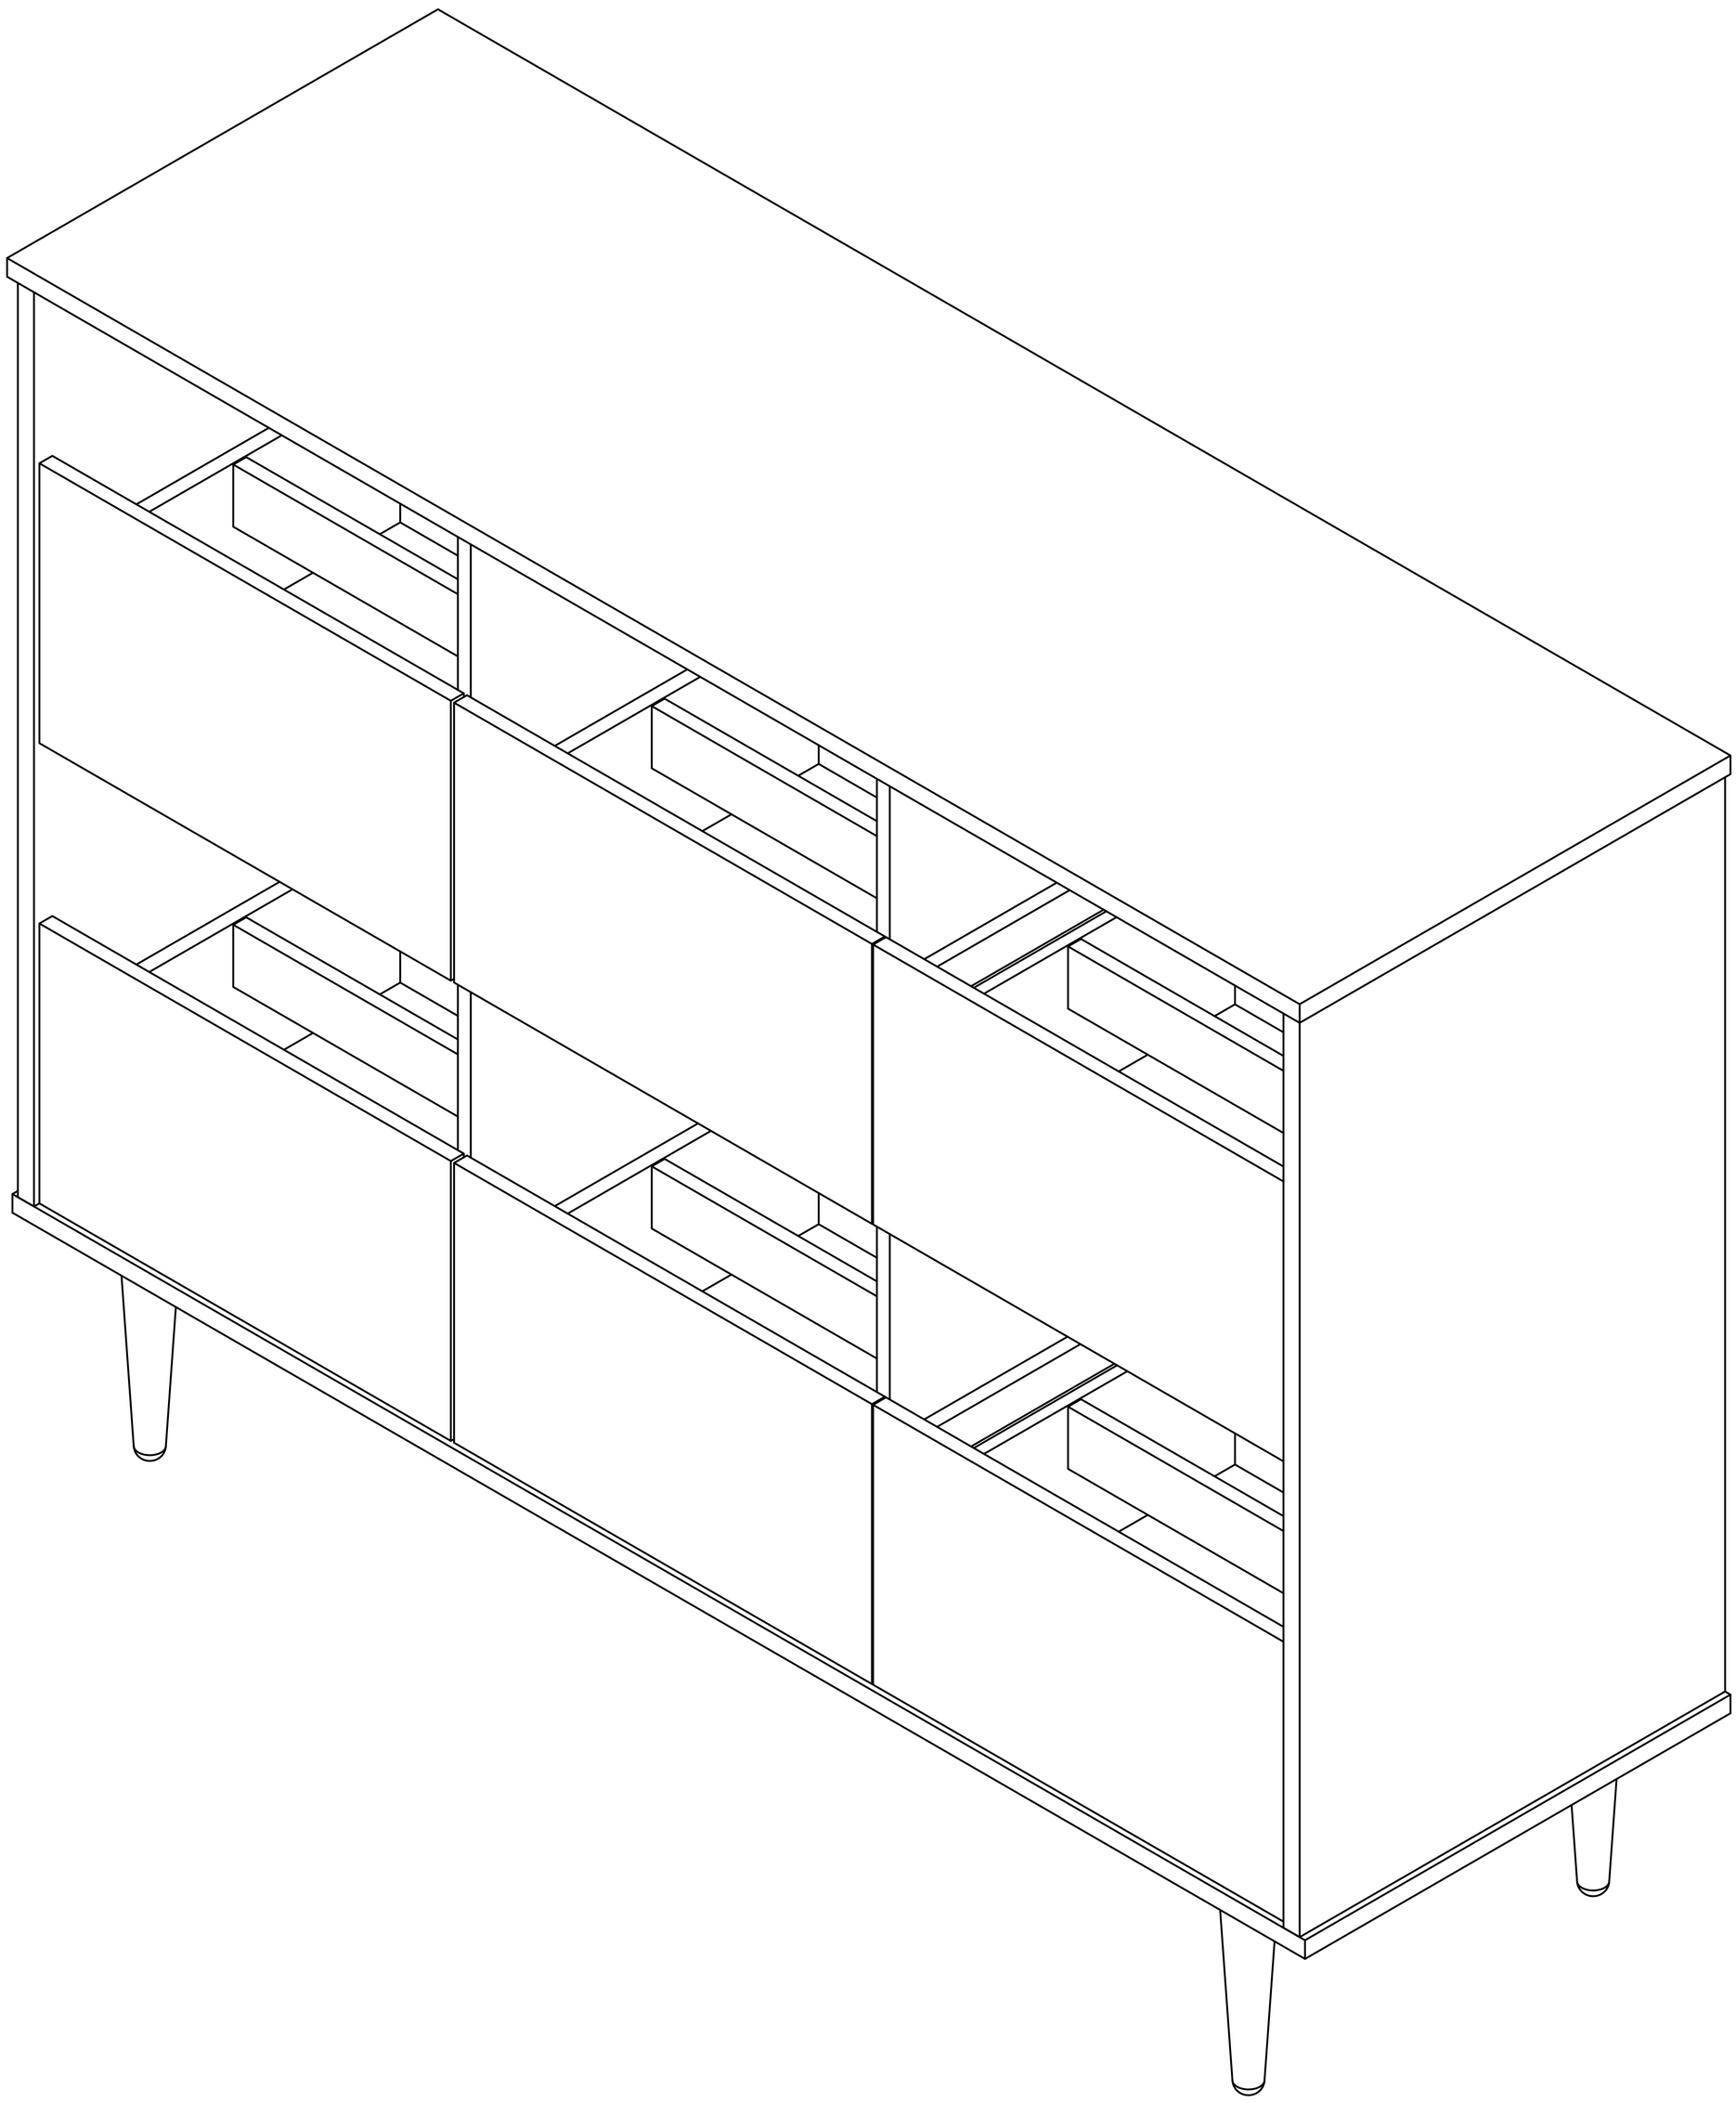


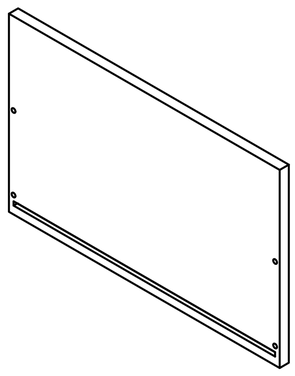


A x6

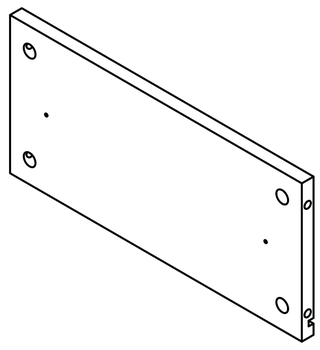


Bx12

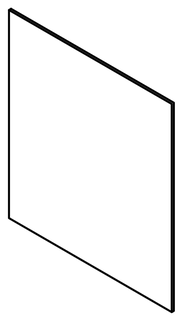


C x6

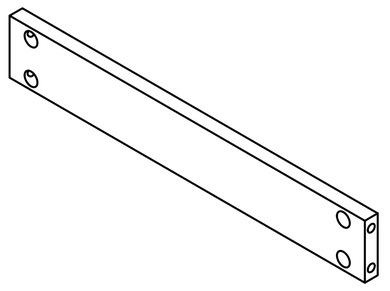


D x6

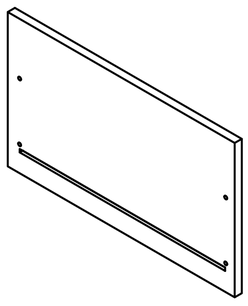


E x2

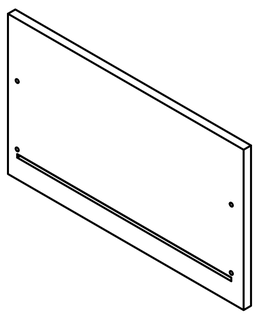


F x2

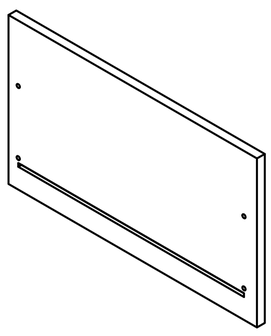


G x2

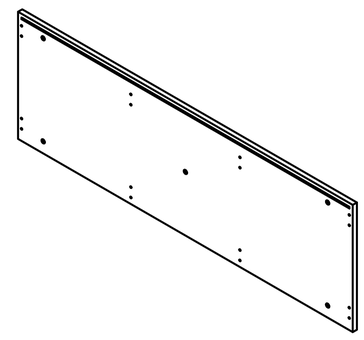


H x1

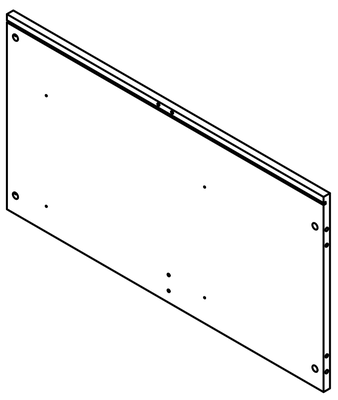


J x1

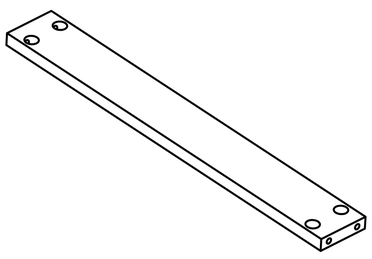


K x2

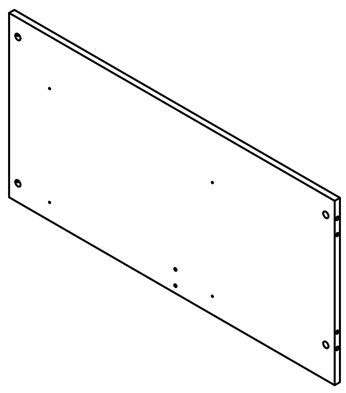


L x1

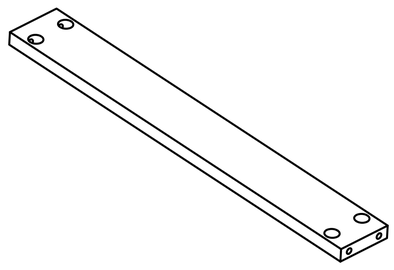


Mx1

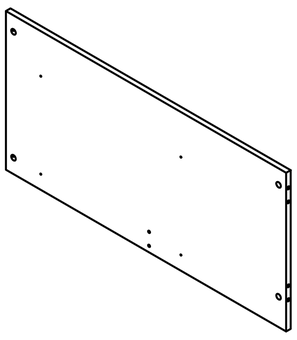


N x1

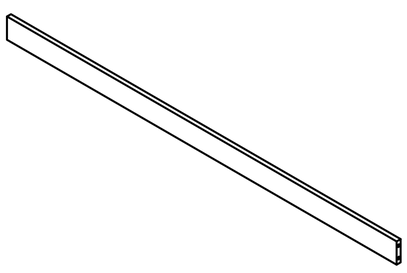


O x1

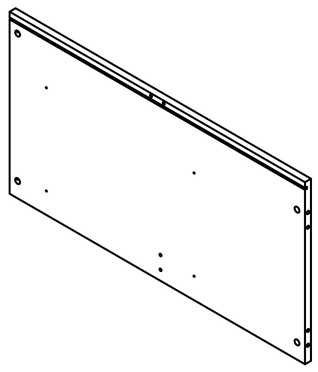

P x1

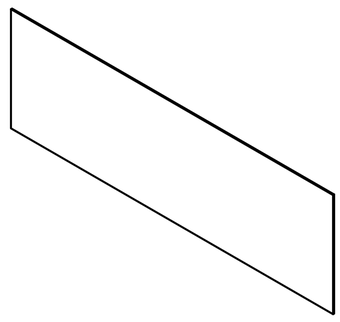










Q x2

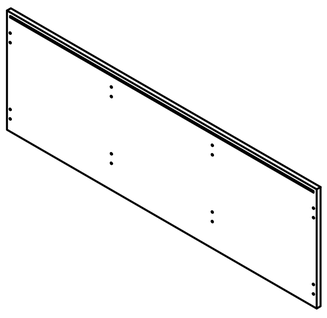


R x1


1

Accessories list

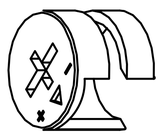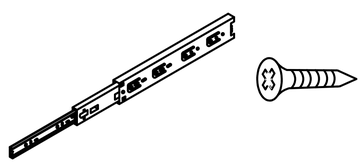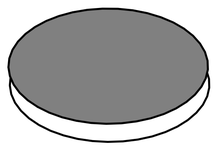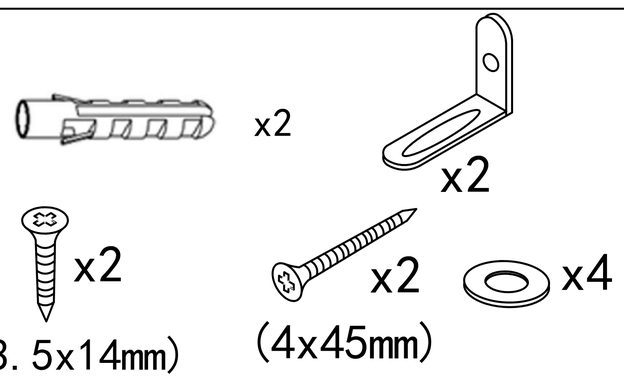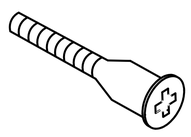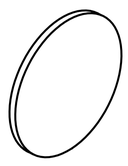1		Two In One Screw (6x28mm)	100pcs +10pcs
2		Two In One Nut (10x12mm)	100pcs +10pcs
3		Wood Chipping (6x30mm)	16pcs +3pcs
4		Guide rails & screws (3x12mm) 29cm	60pcs +12pcs 12pcs
5		Non-slip pads (φ12x2mm)	6pcs +1pcs
6		Fixing Clip & Screw (3x16mm)	12pcs +1pcs
7		Anti Fall Hardware	1pcs
8		Screw (5x40mm)	4pcs +1pcs
9		round decorative stickers	4pcs +2pcs
I		wooden foot	6pcs

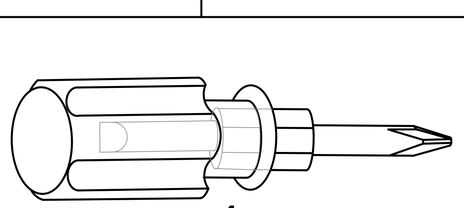


1pcs

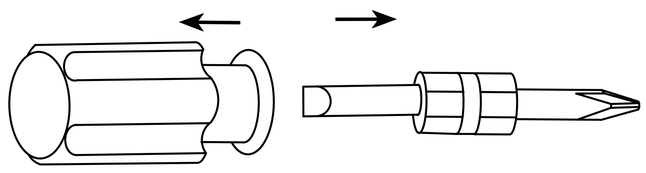

Double-head screwdriver, use as required


2

Product structure decomposition

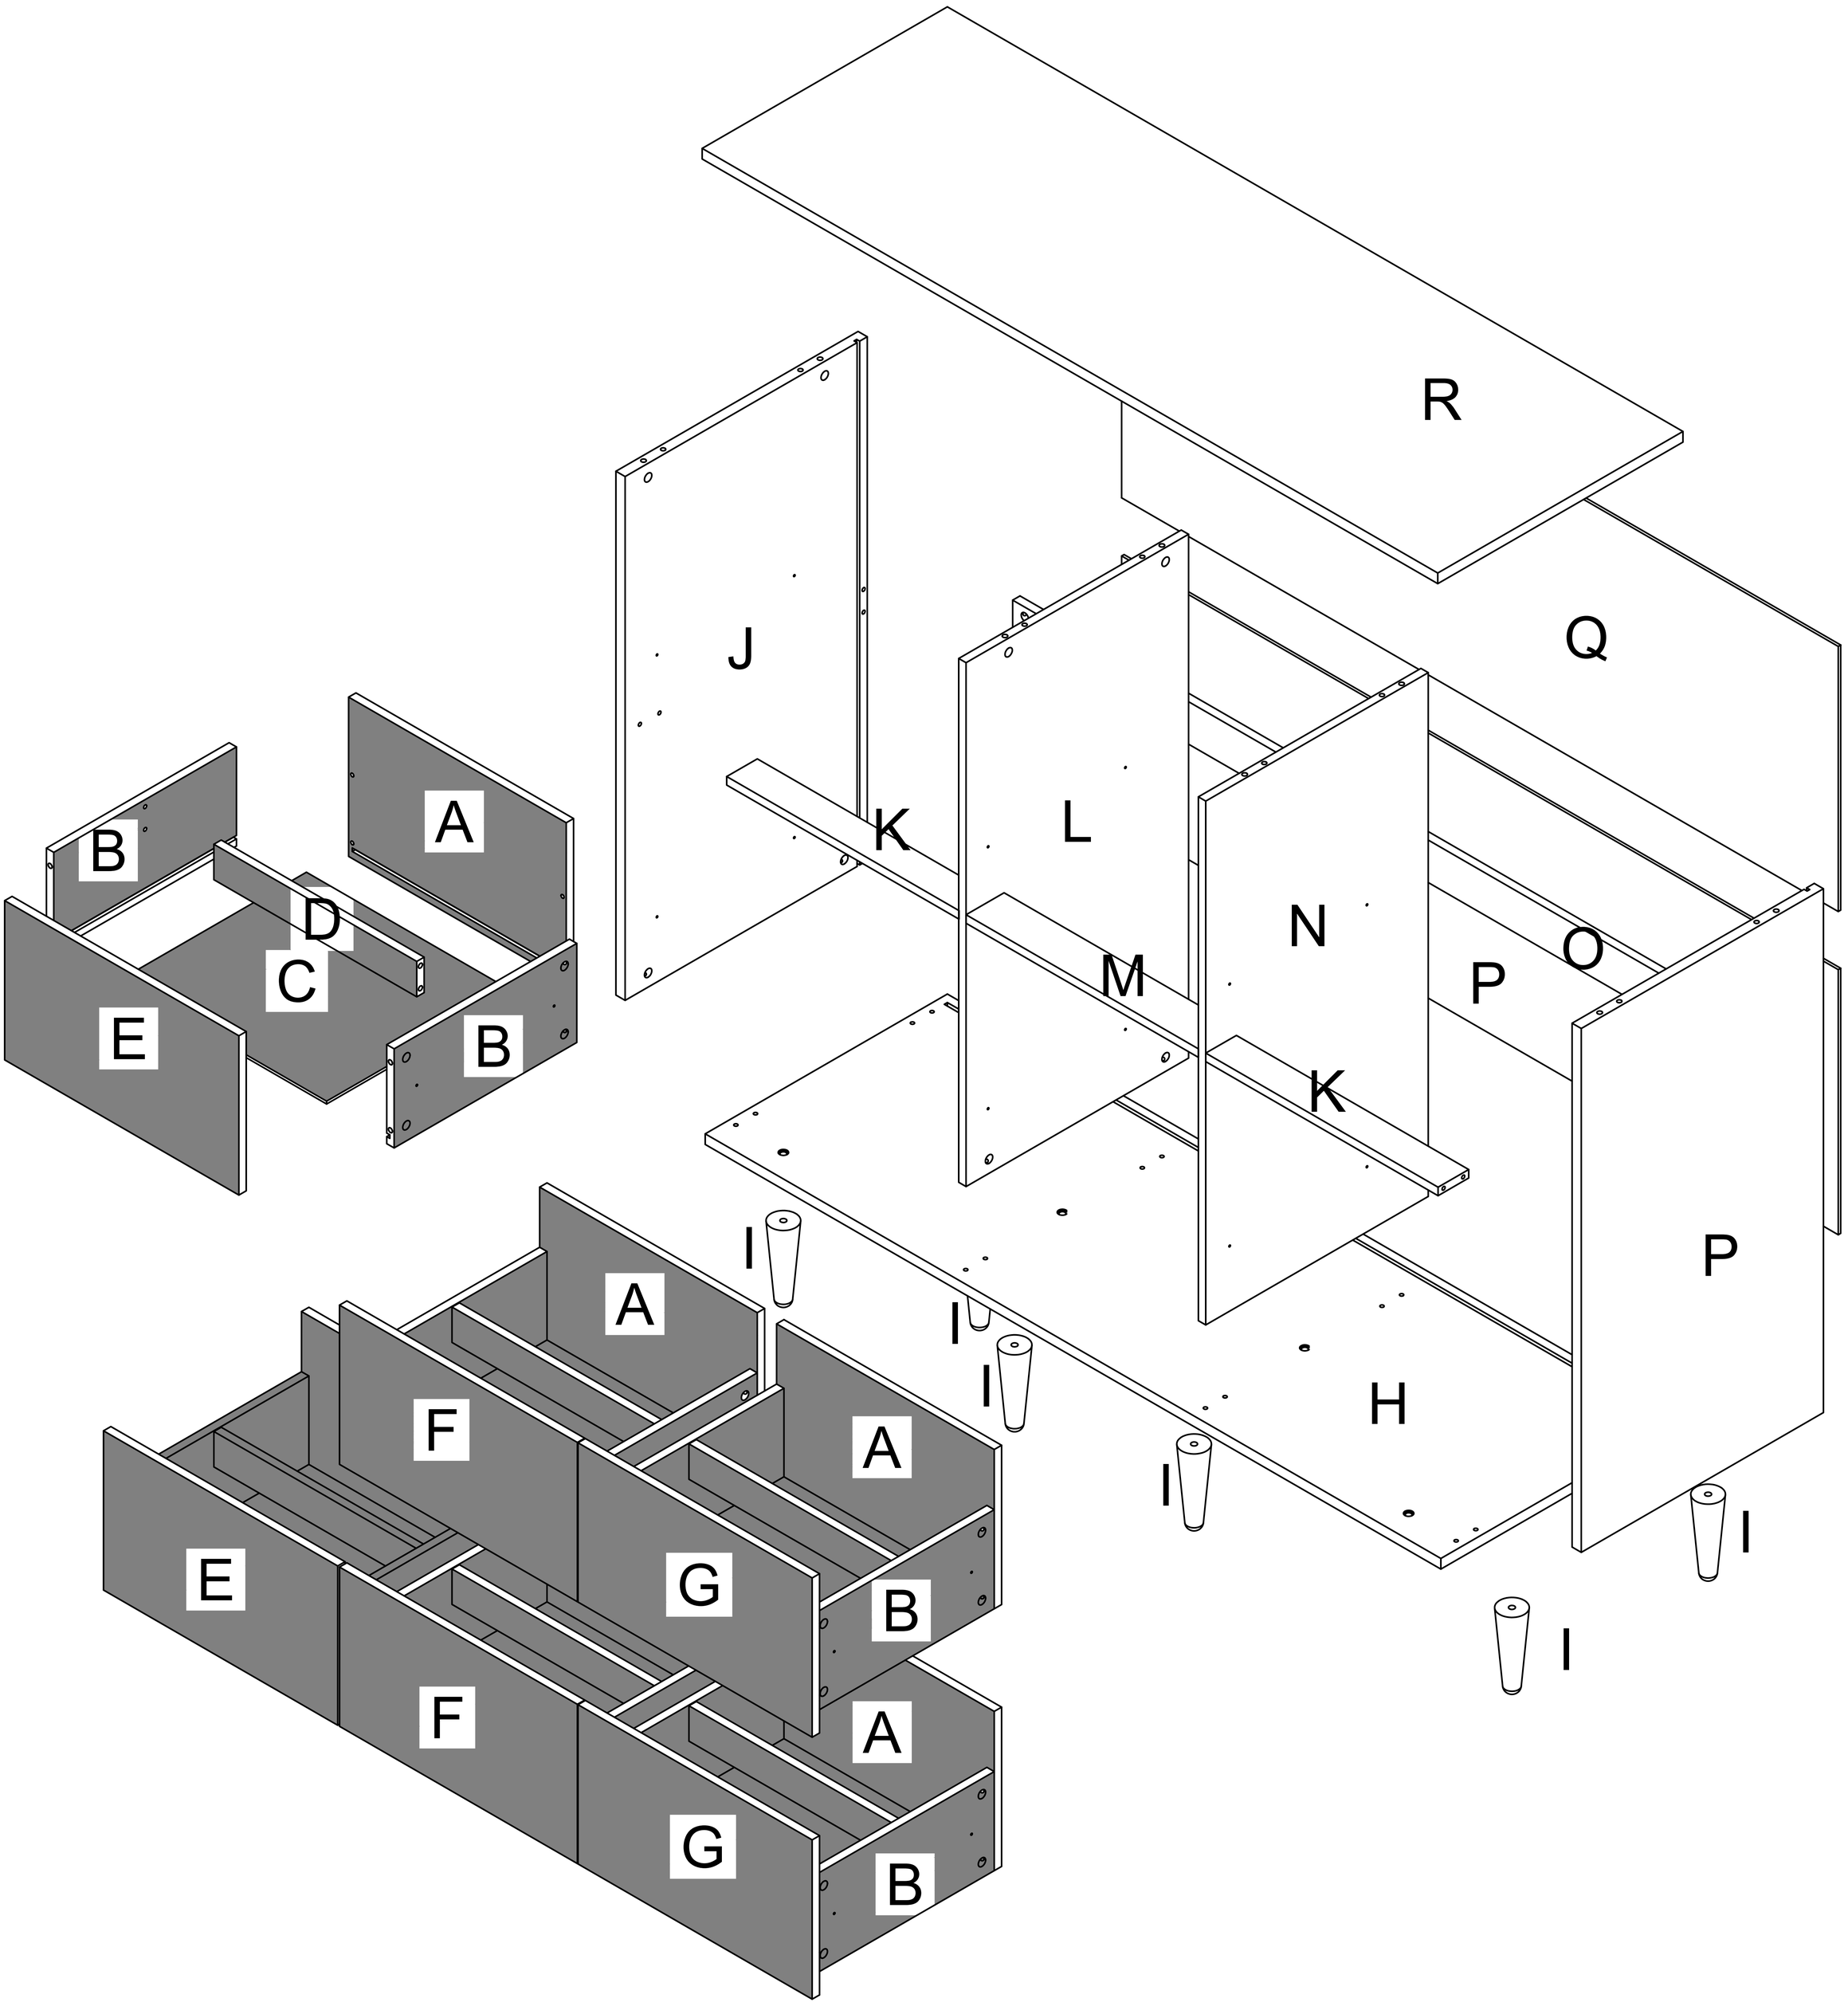


Use parts ① and ②


Step1

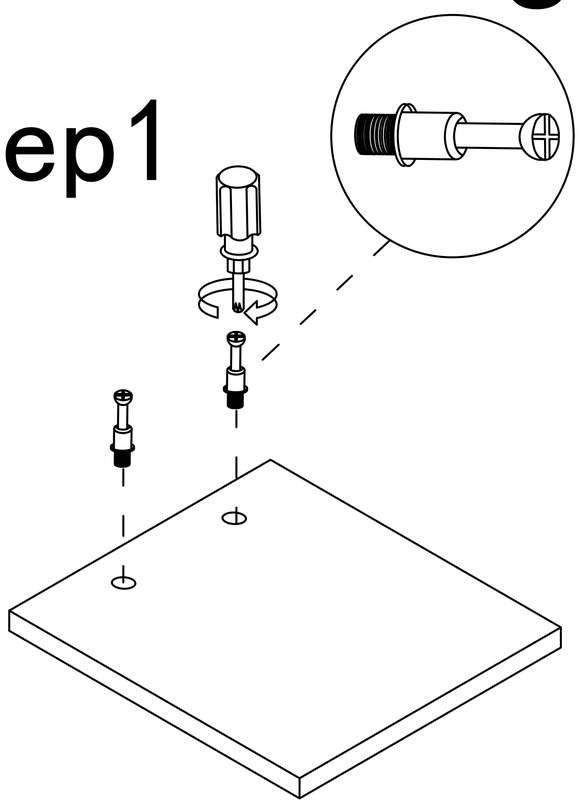


Step2

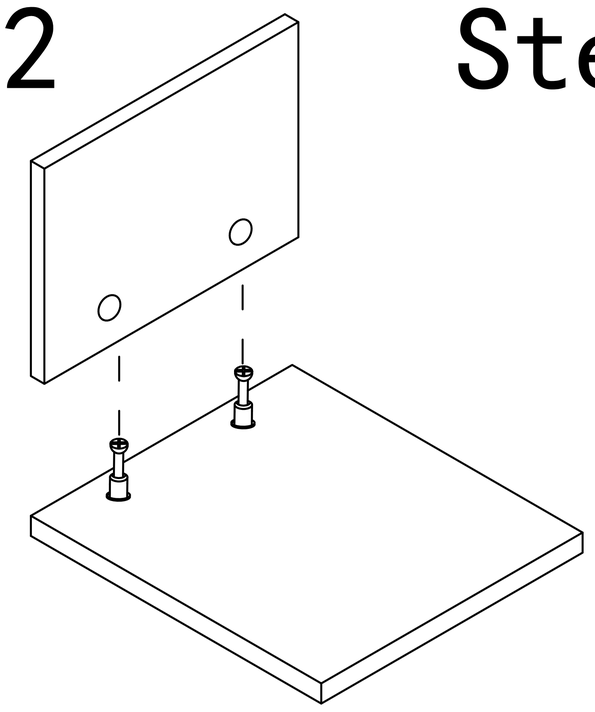


Step3

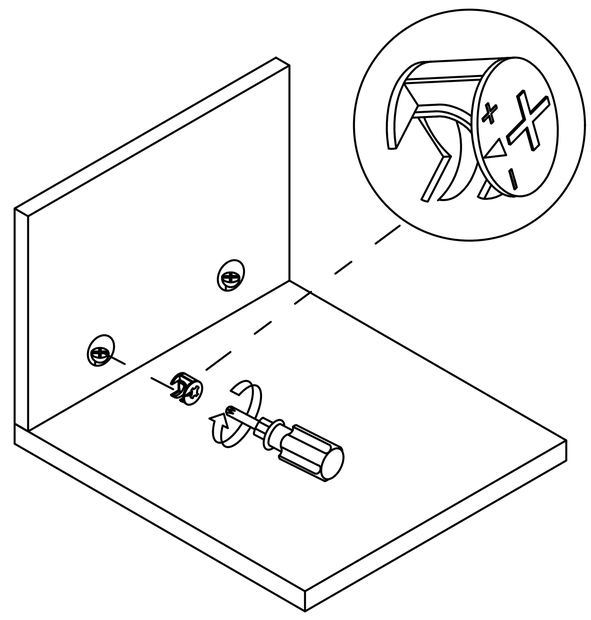

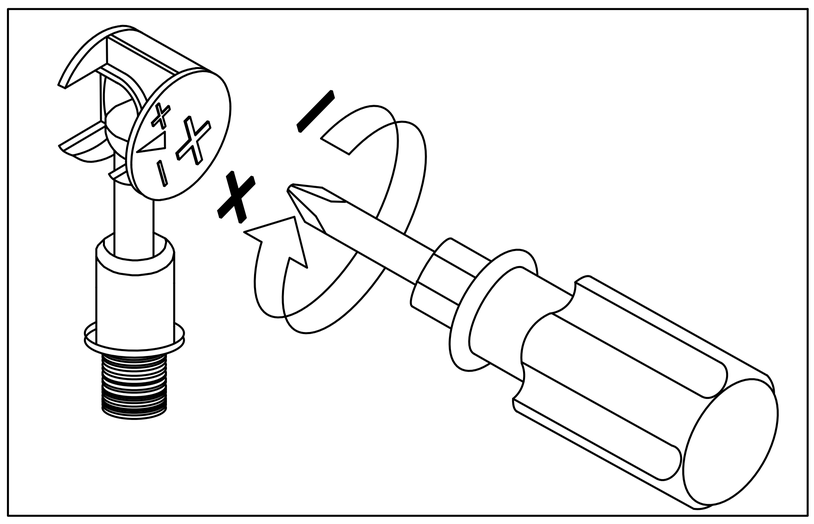



Use a screwdriver to lock in the direction of the "+" sign

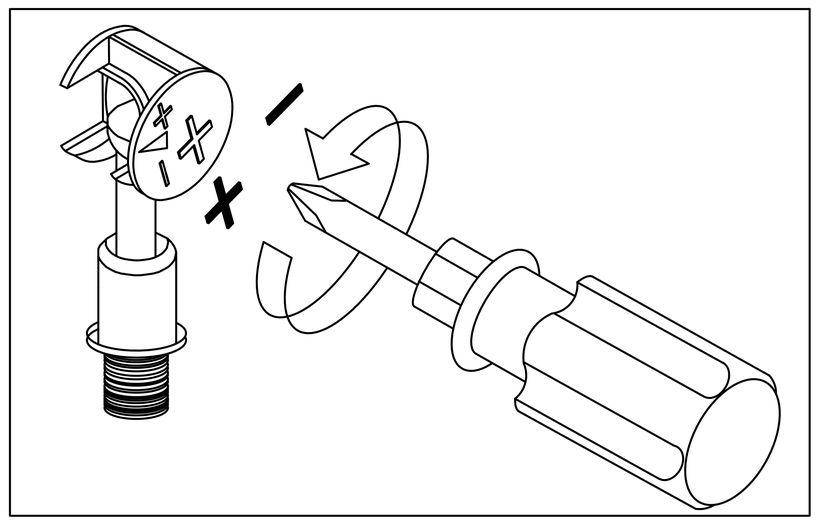


Disassemble along the direction of "-" sign


Step 1

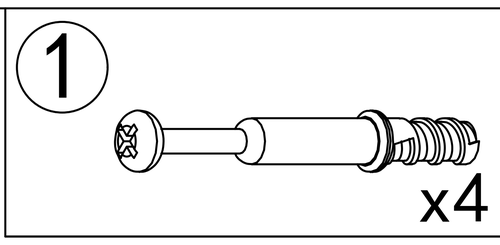

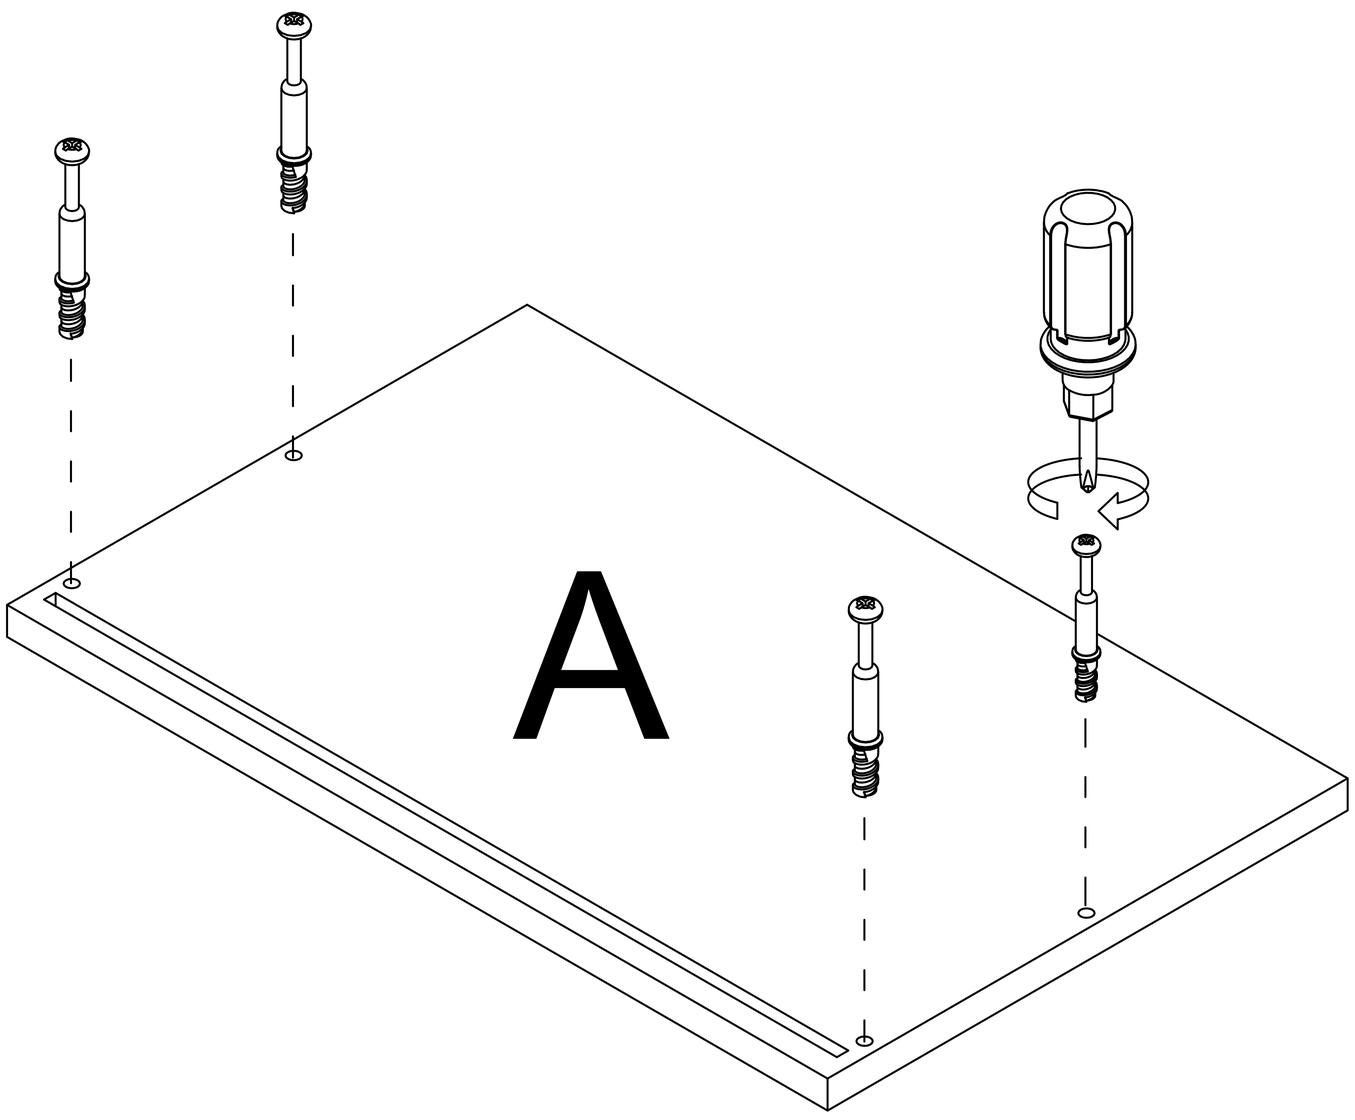


Step 2

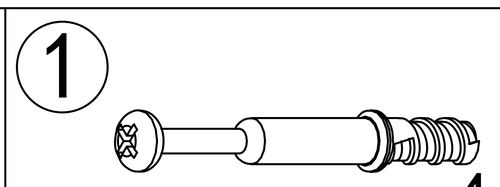

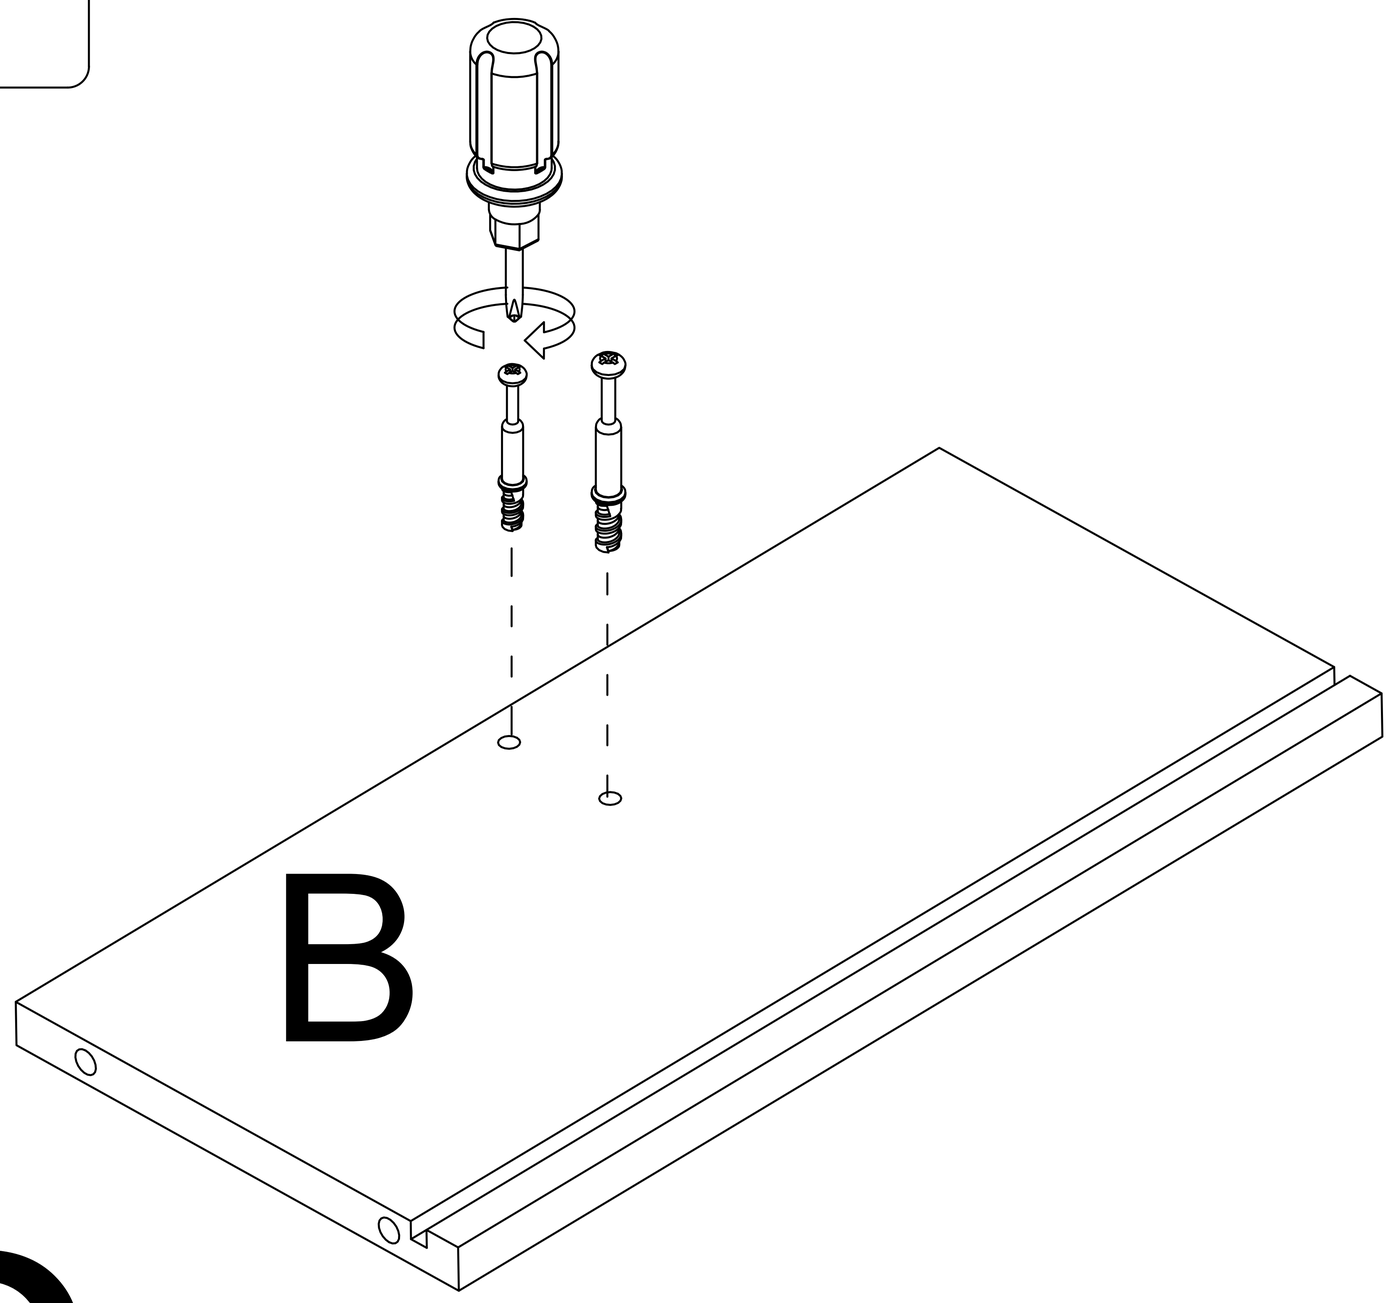



x 2

Step 3

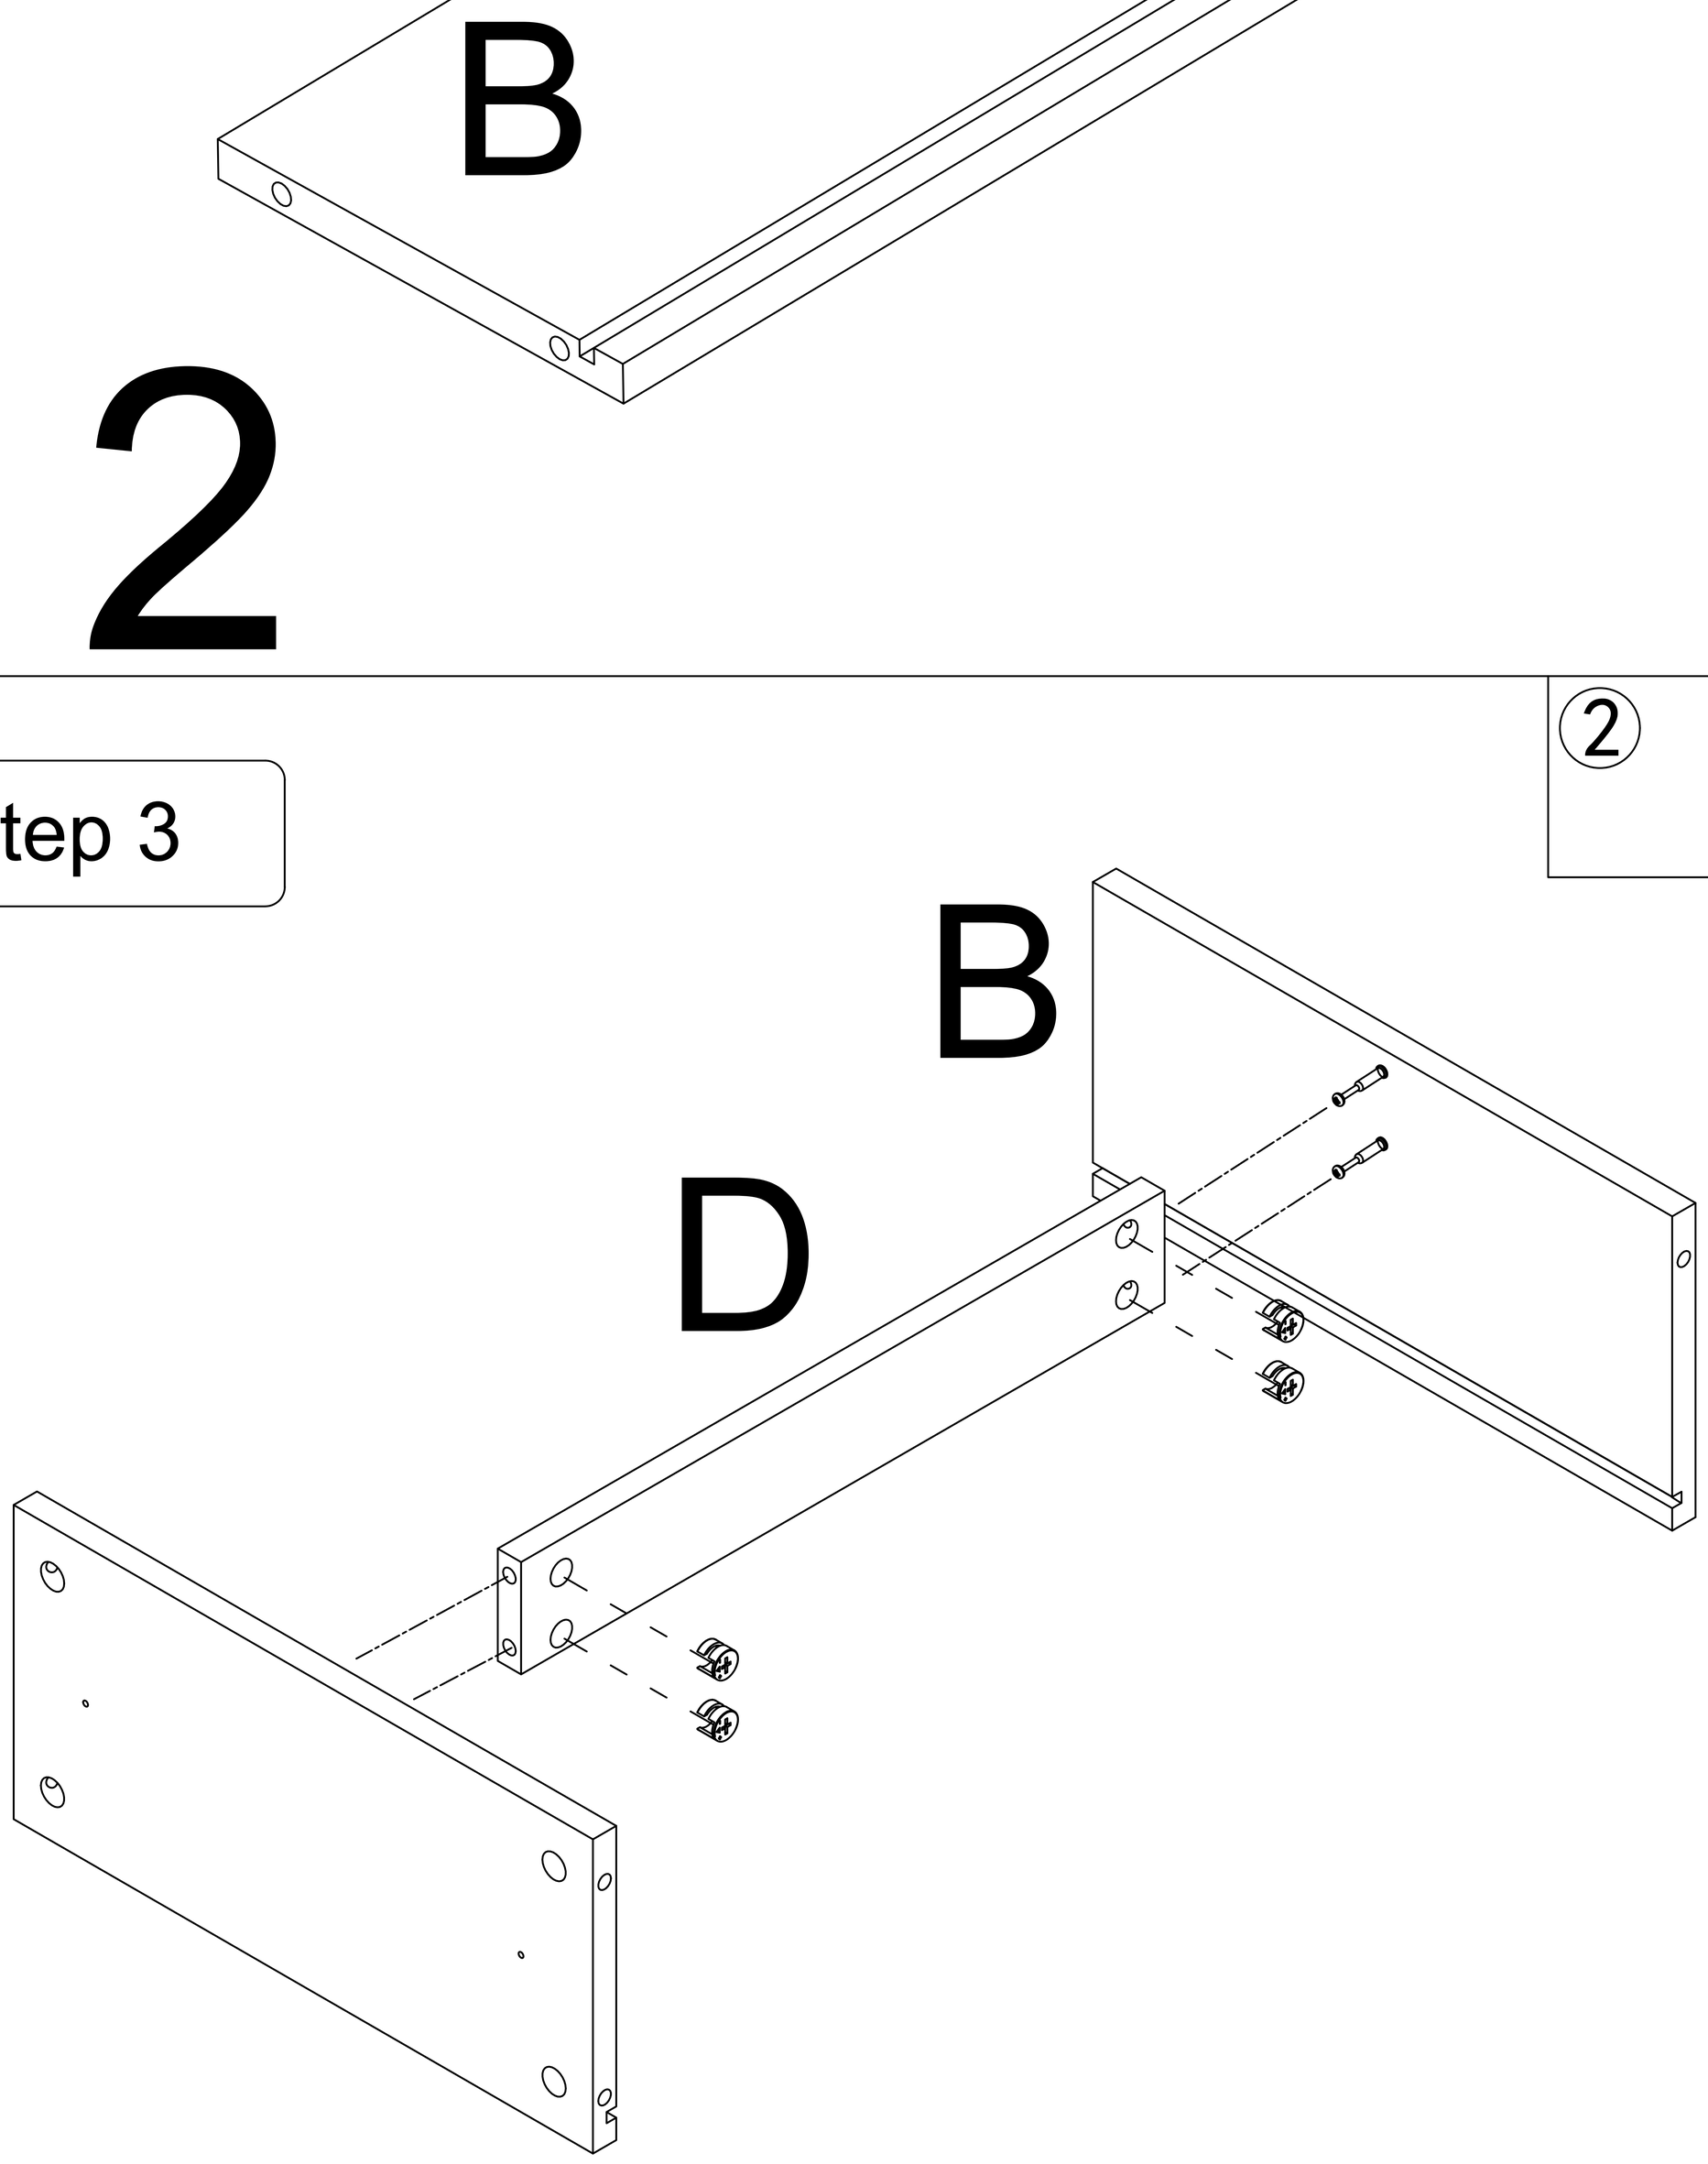


Step 4

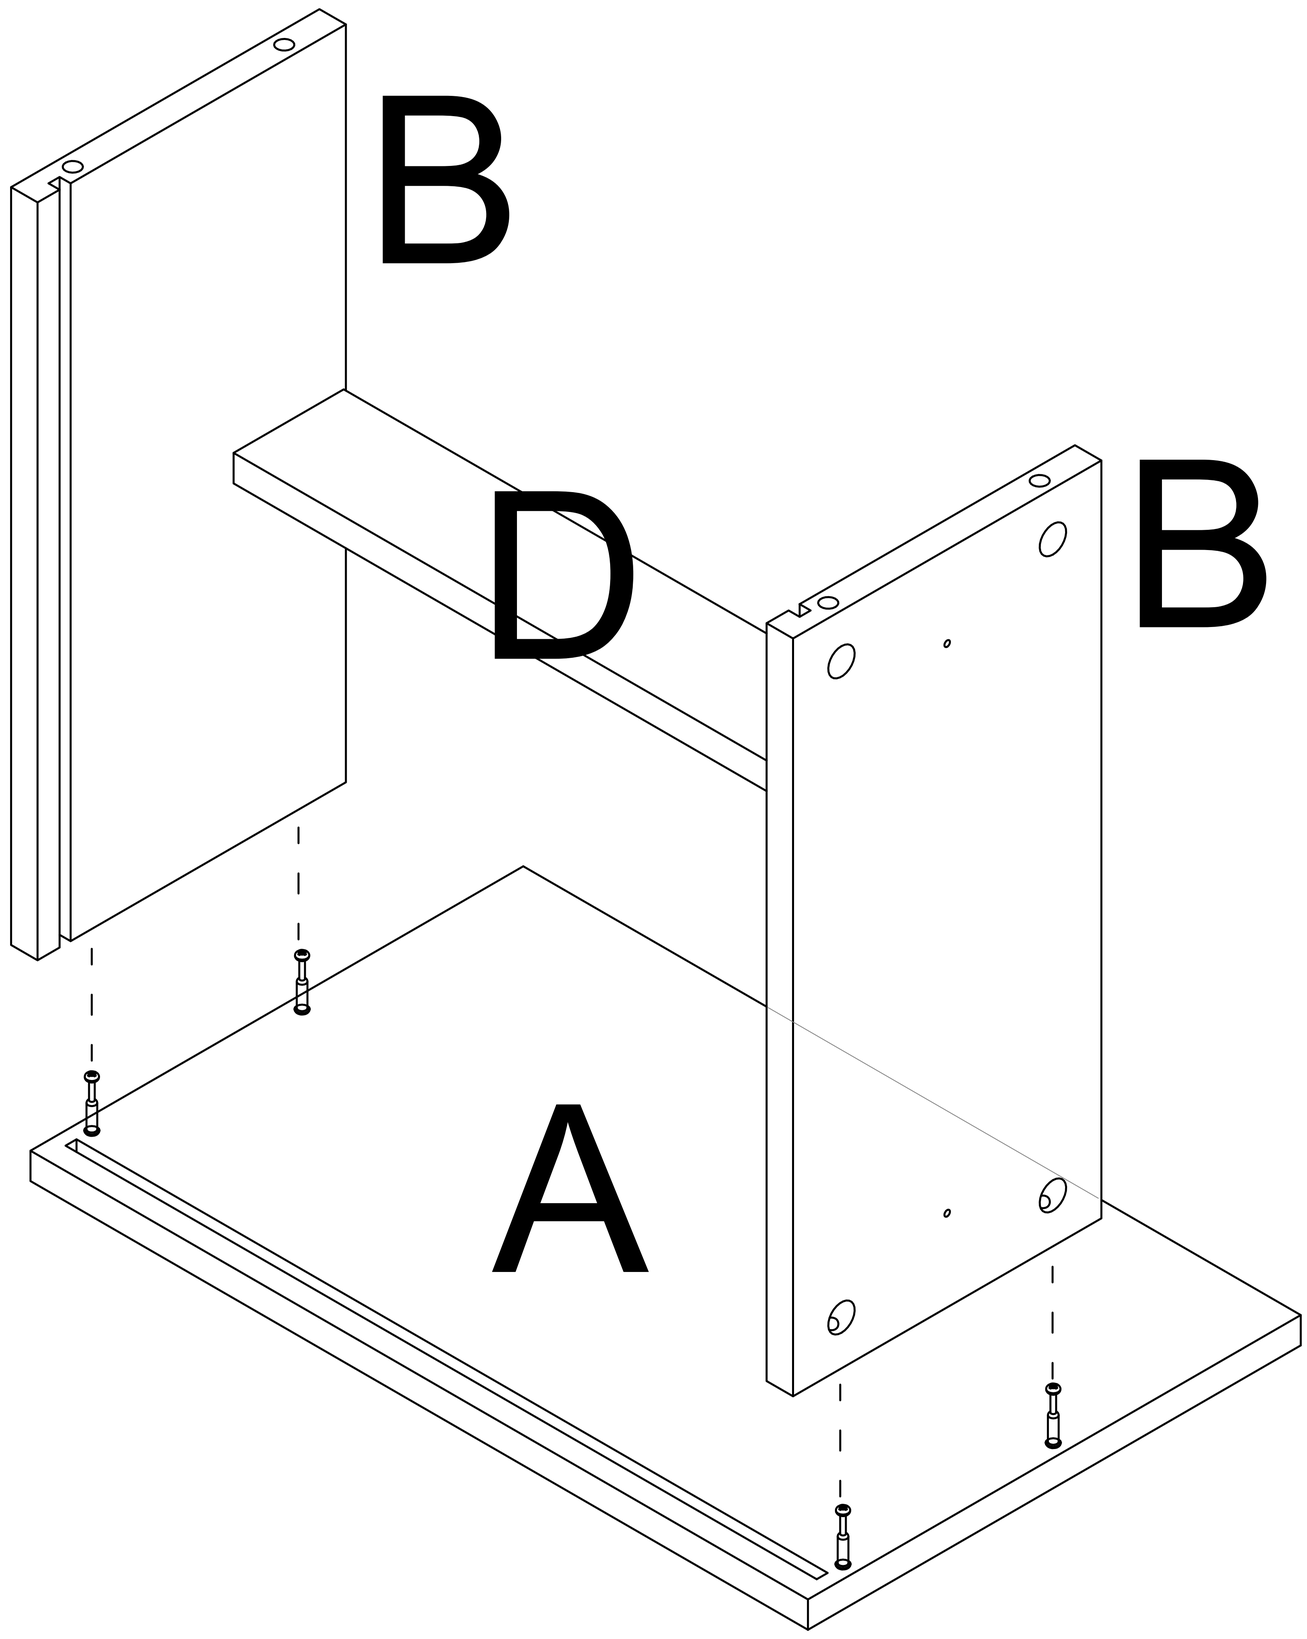


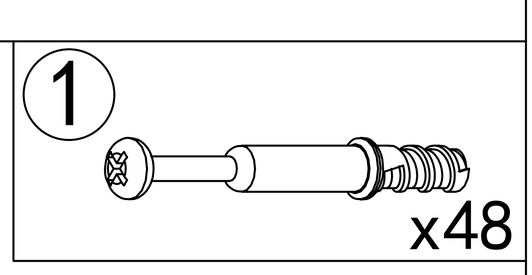

Step 5

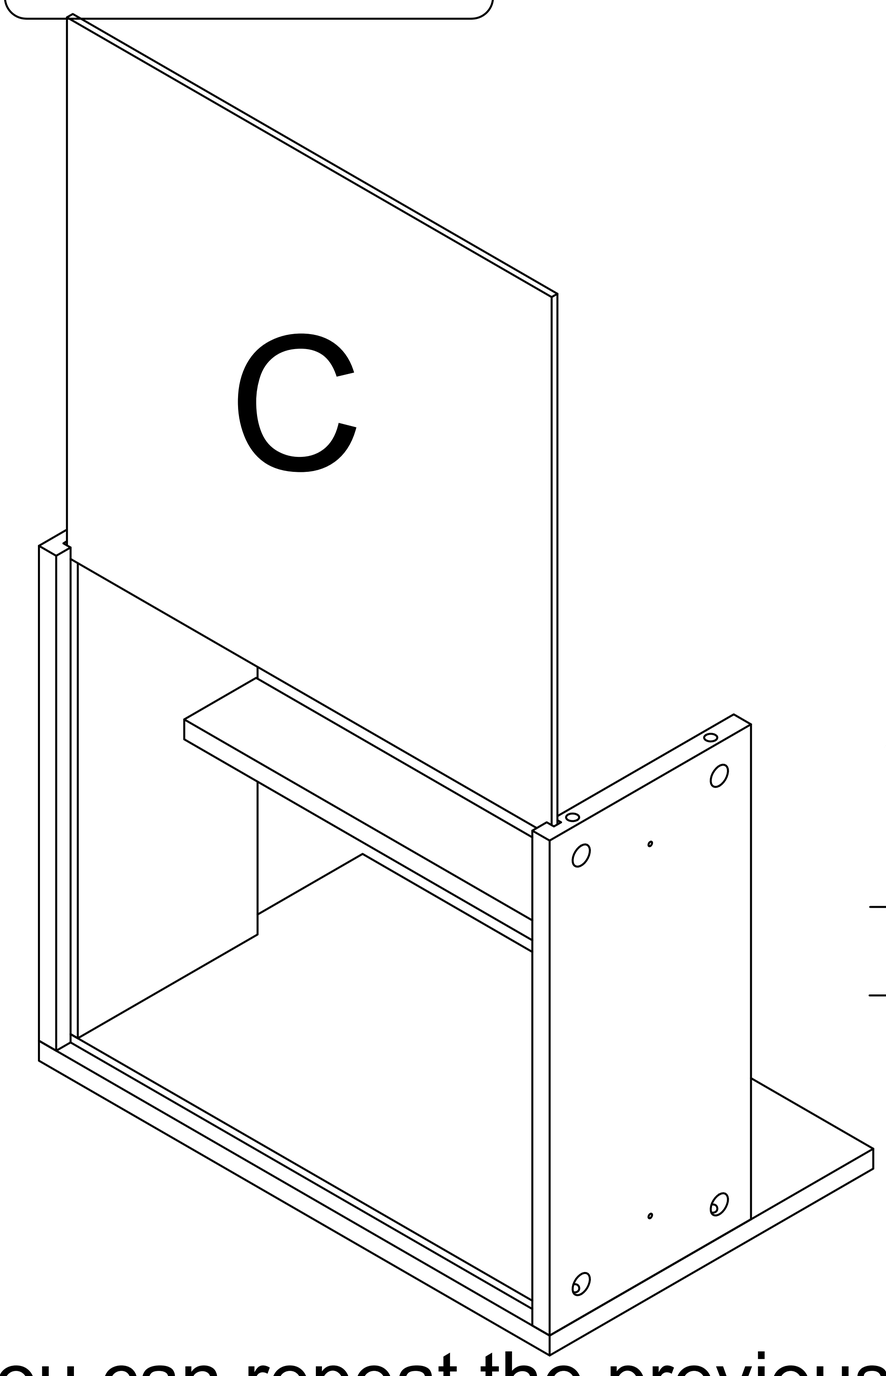


x6

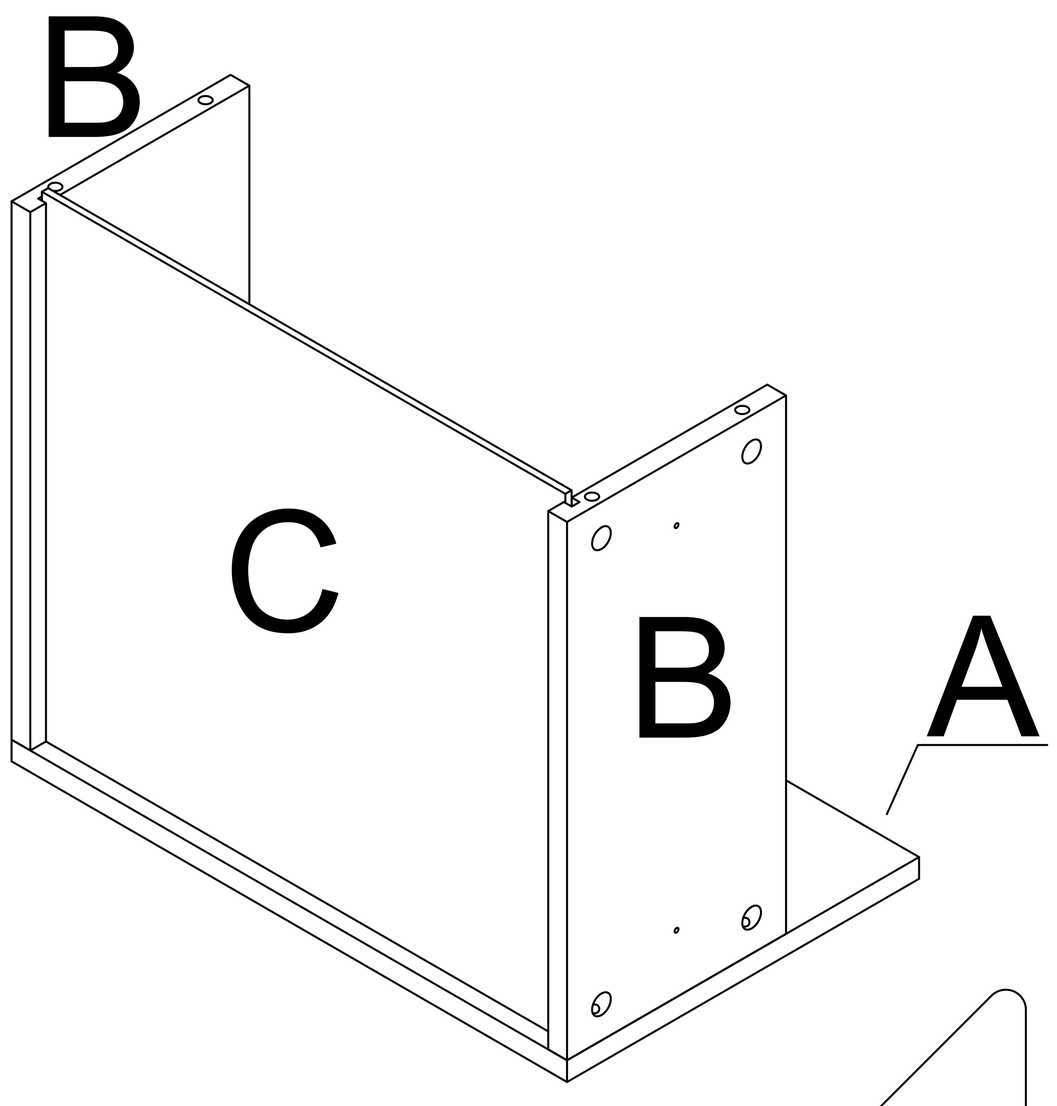


You can repeat the previous steps to obtain 6 identical drawers.

6


Step 6

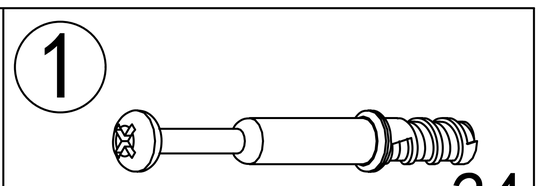

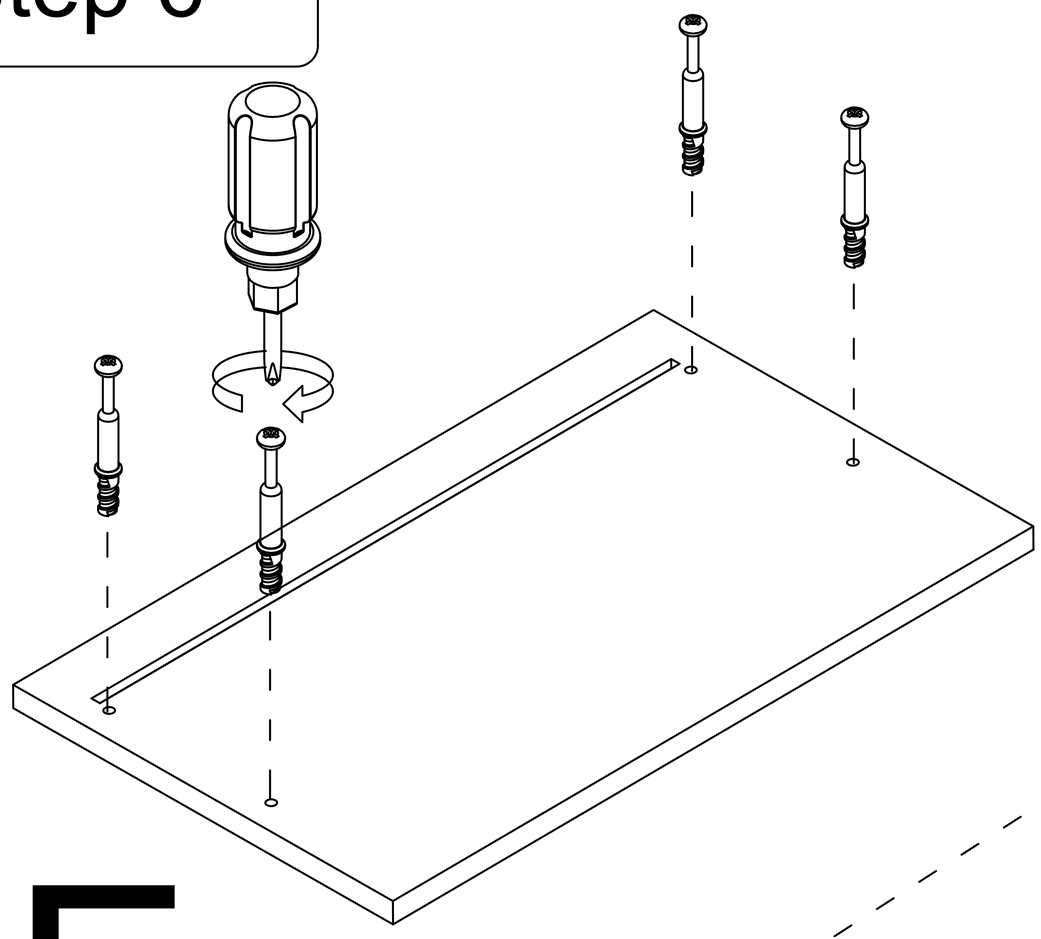


E

x 2

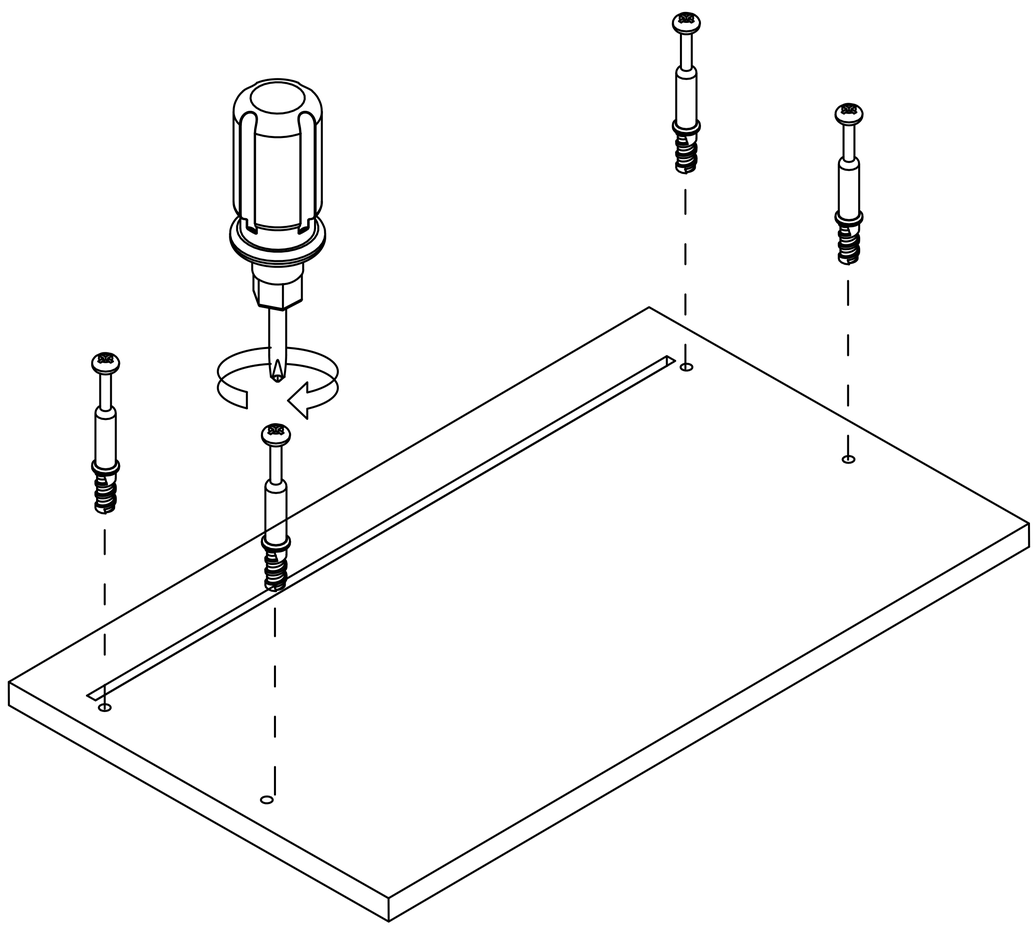



F


G

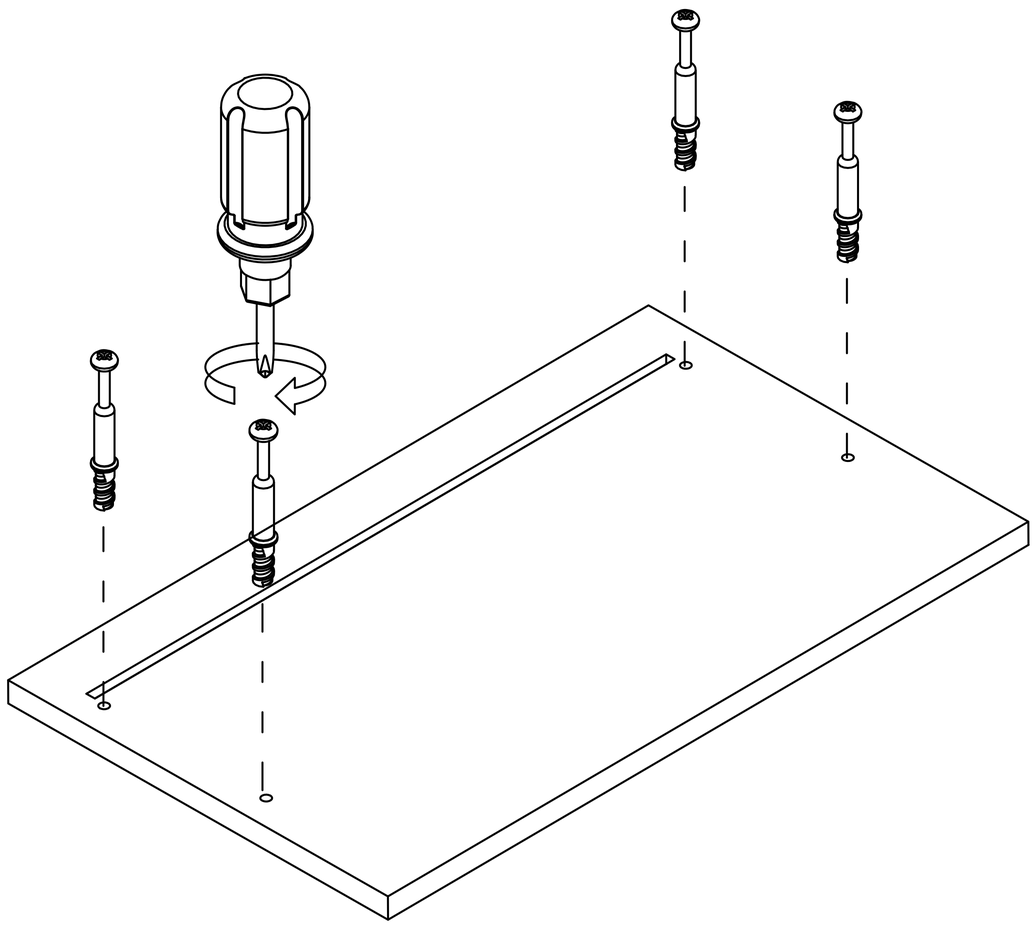


Step 7

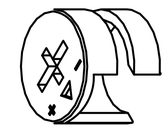2  x68

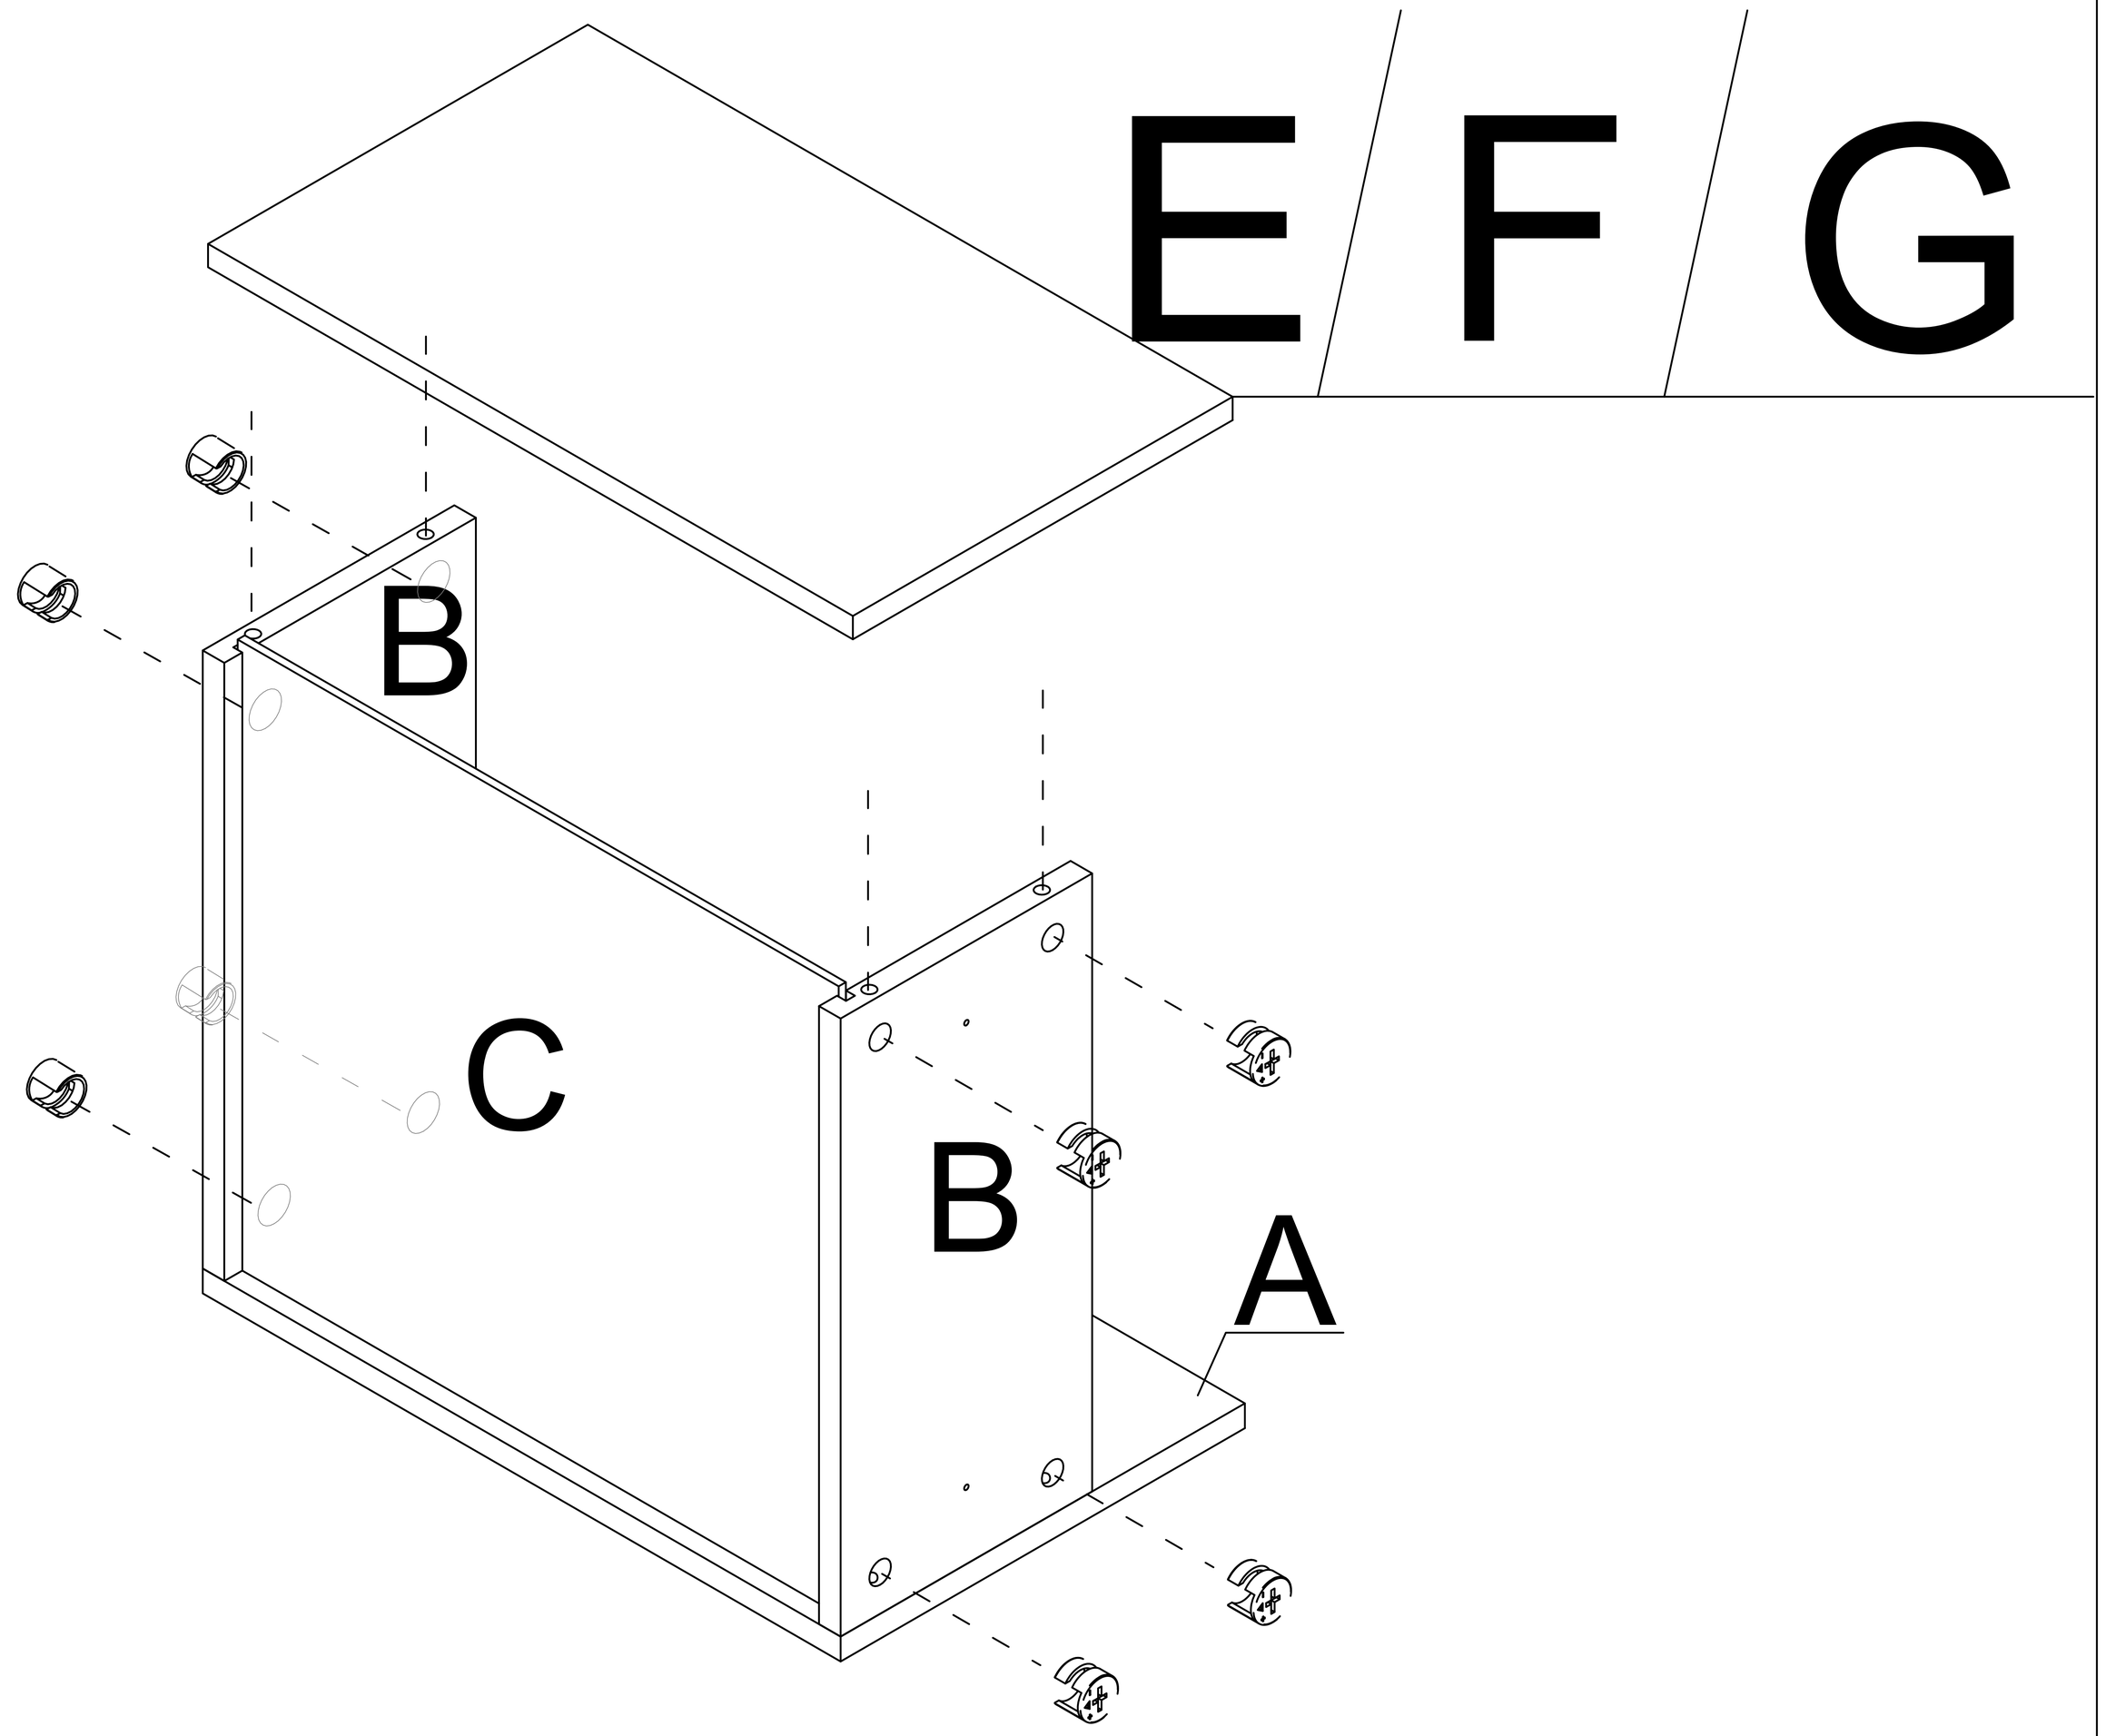


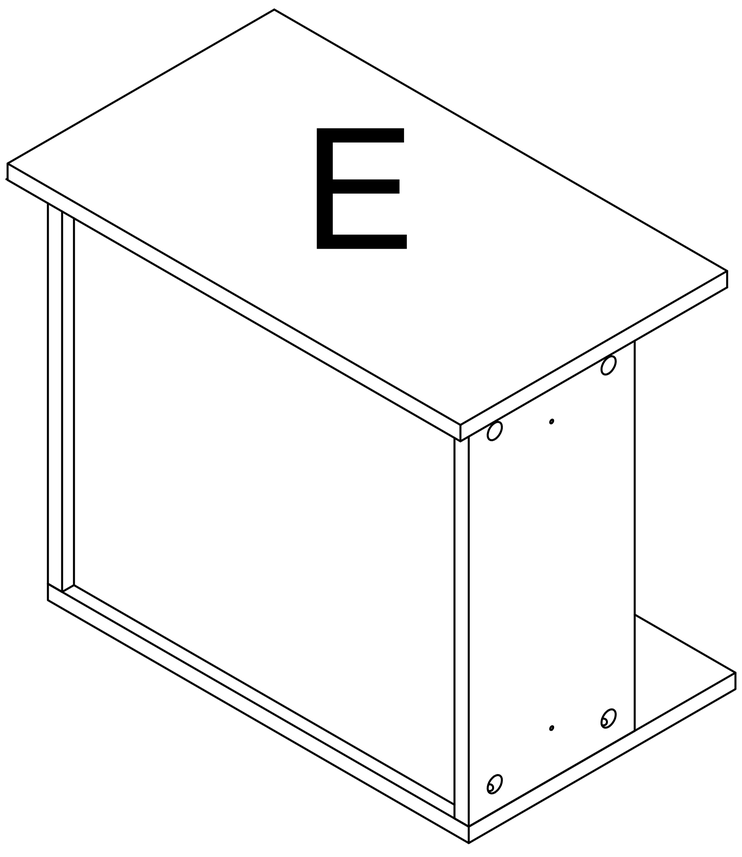

x 2

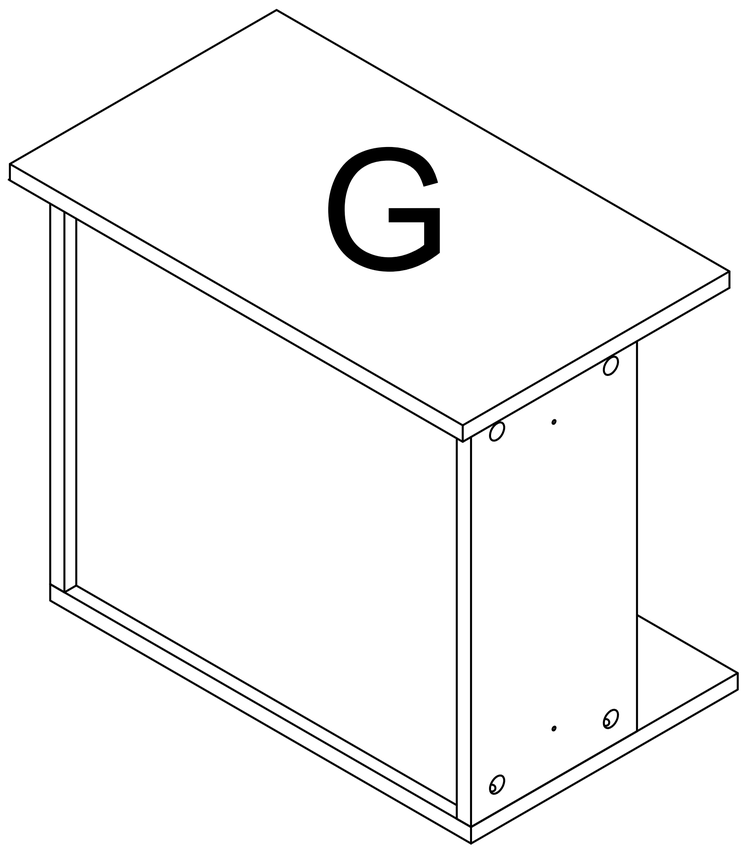

x 2

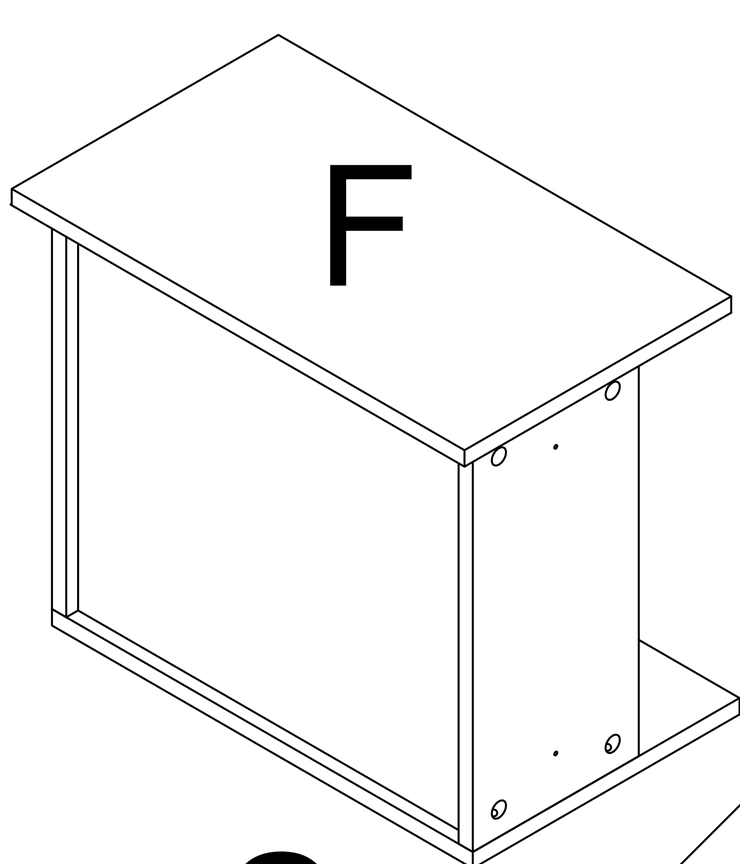


x 2

8


4

Drawer rail breakdown diagram

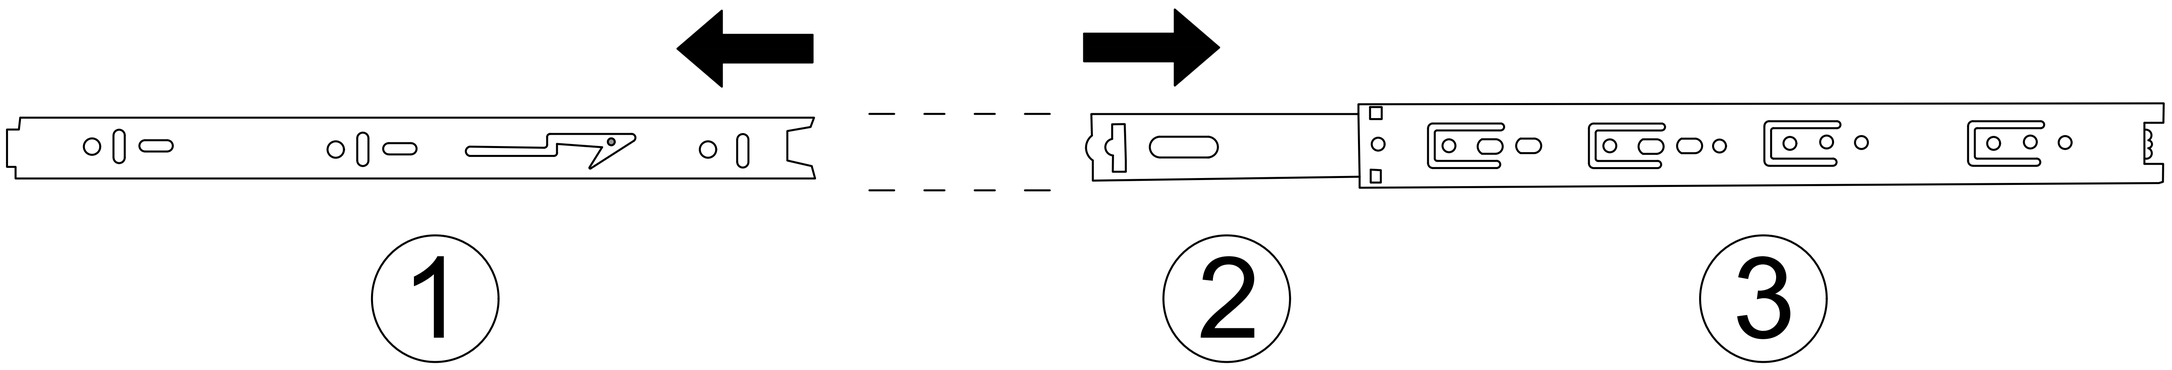


① Dismantle the schematic diagram


Step 1 : Pull the rails apart

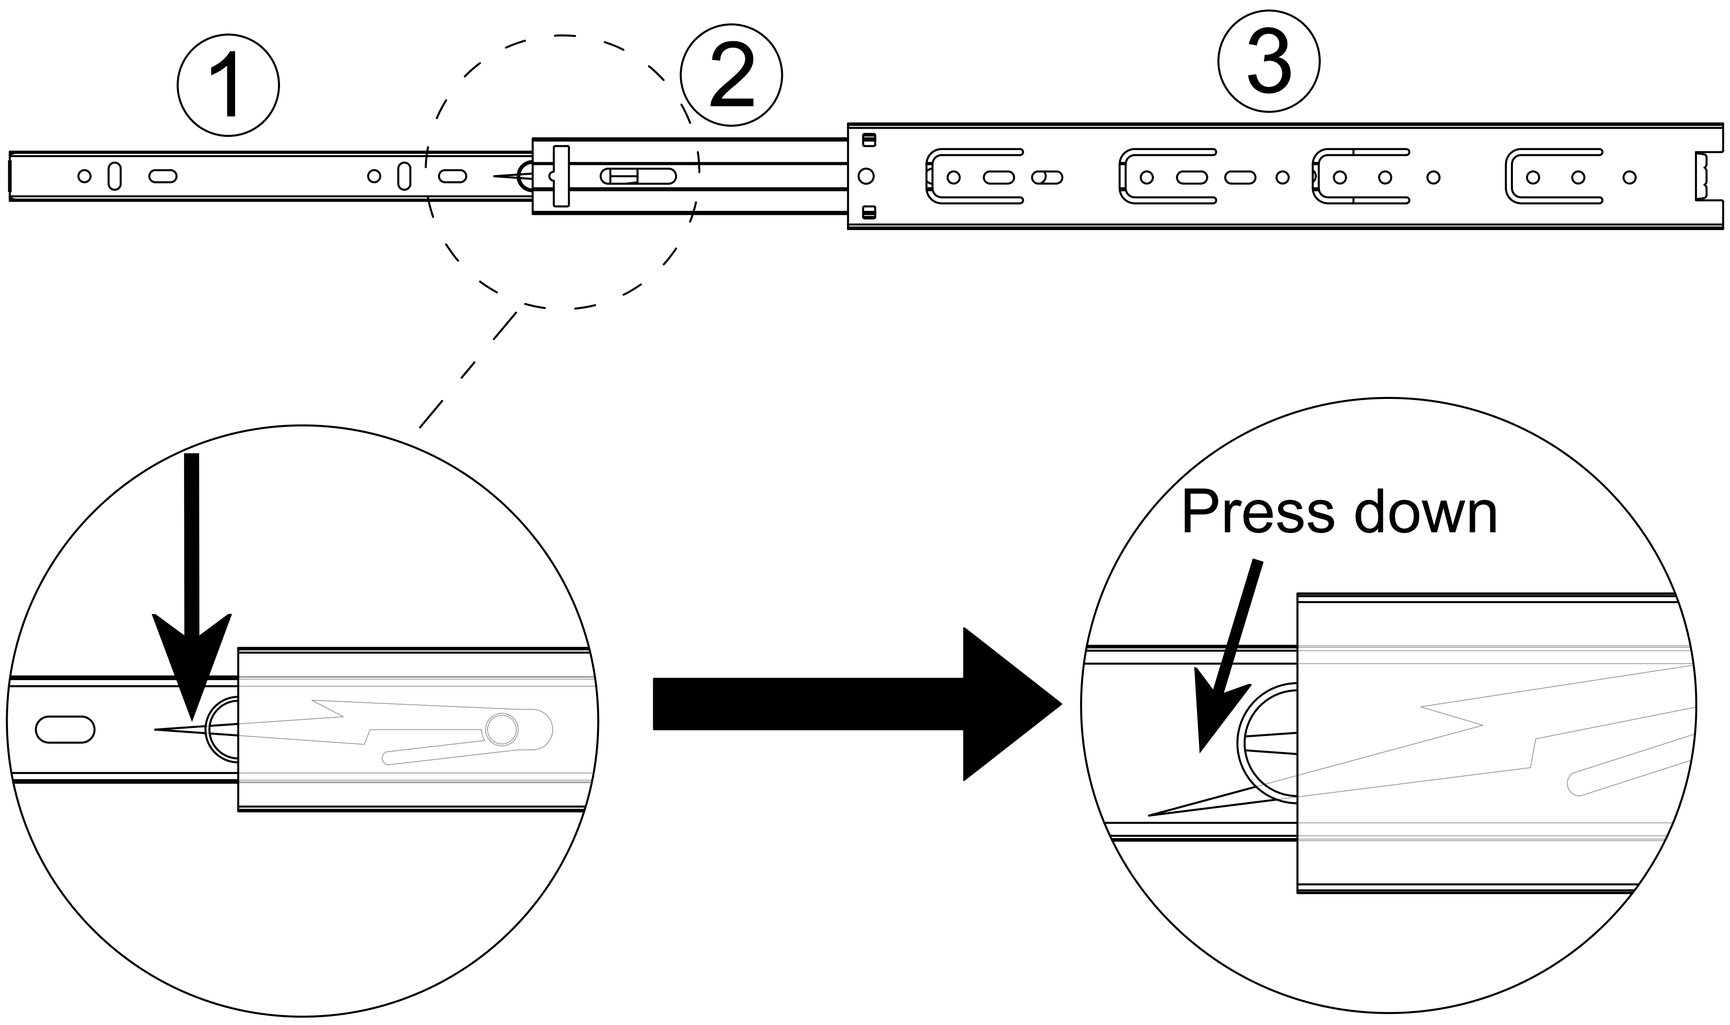

Step 2 : Press the nylon button and pull out ①.

Drawer rail decomposition completed schematic diagram

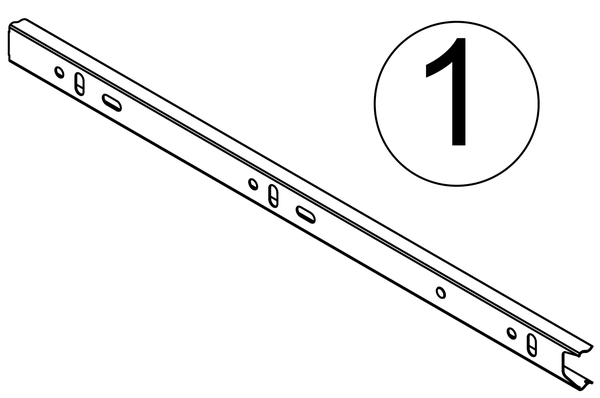

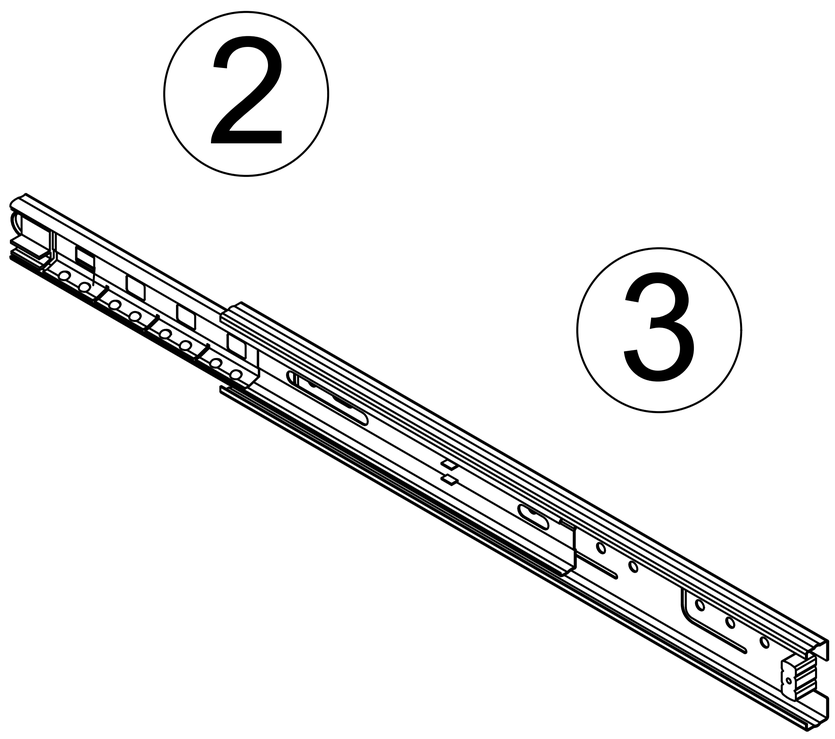



Step 8

4

x12


x24

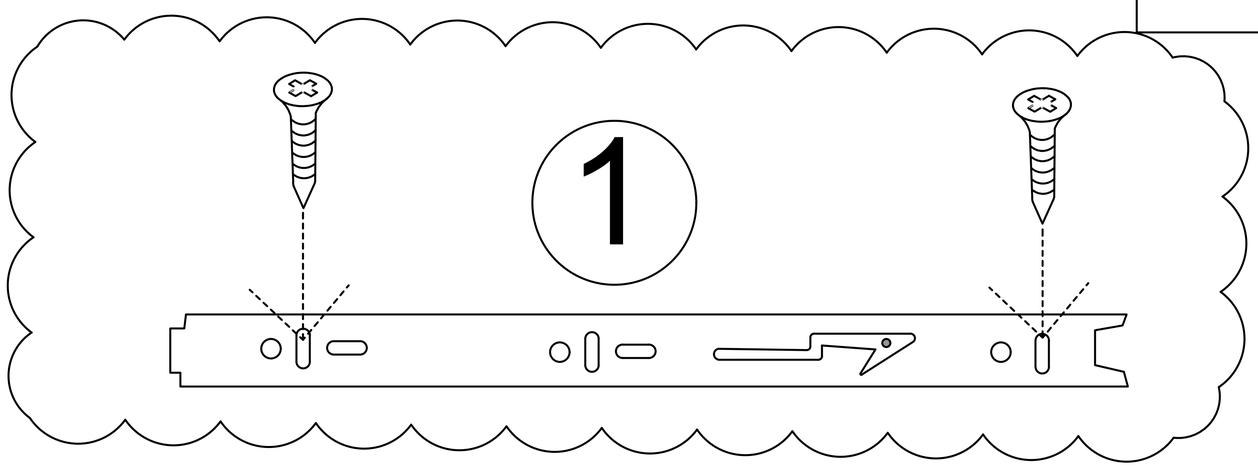

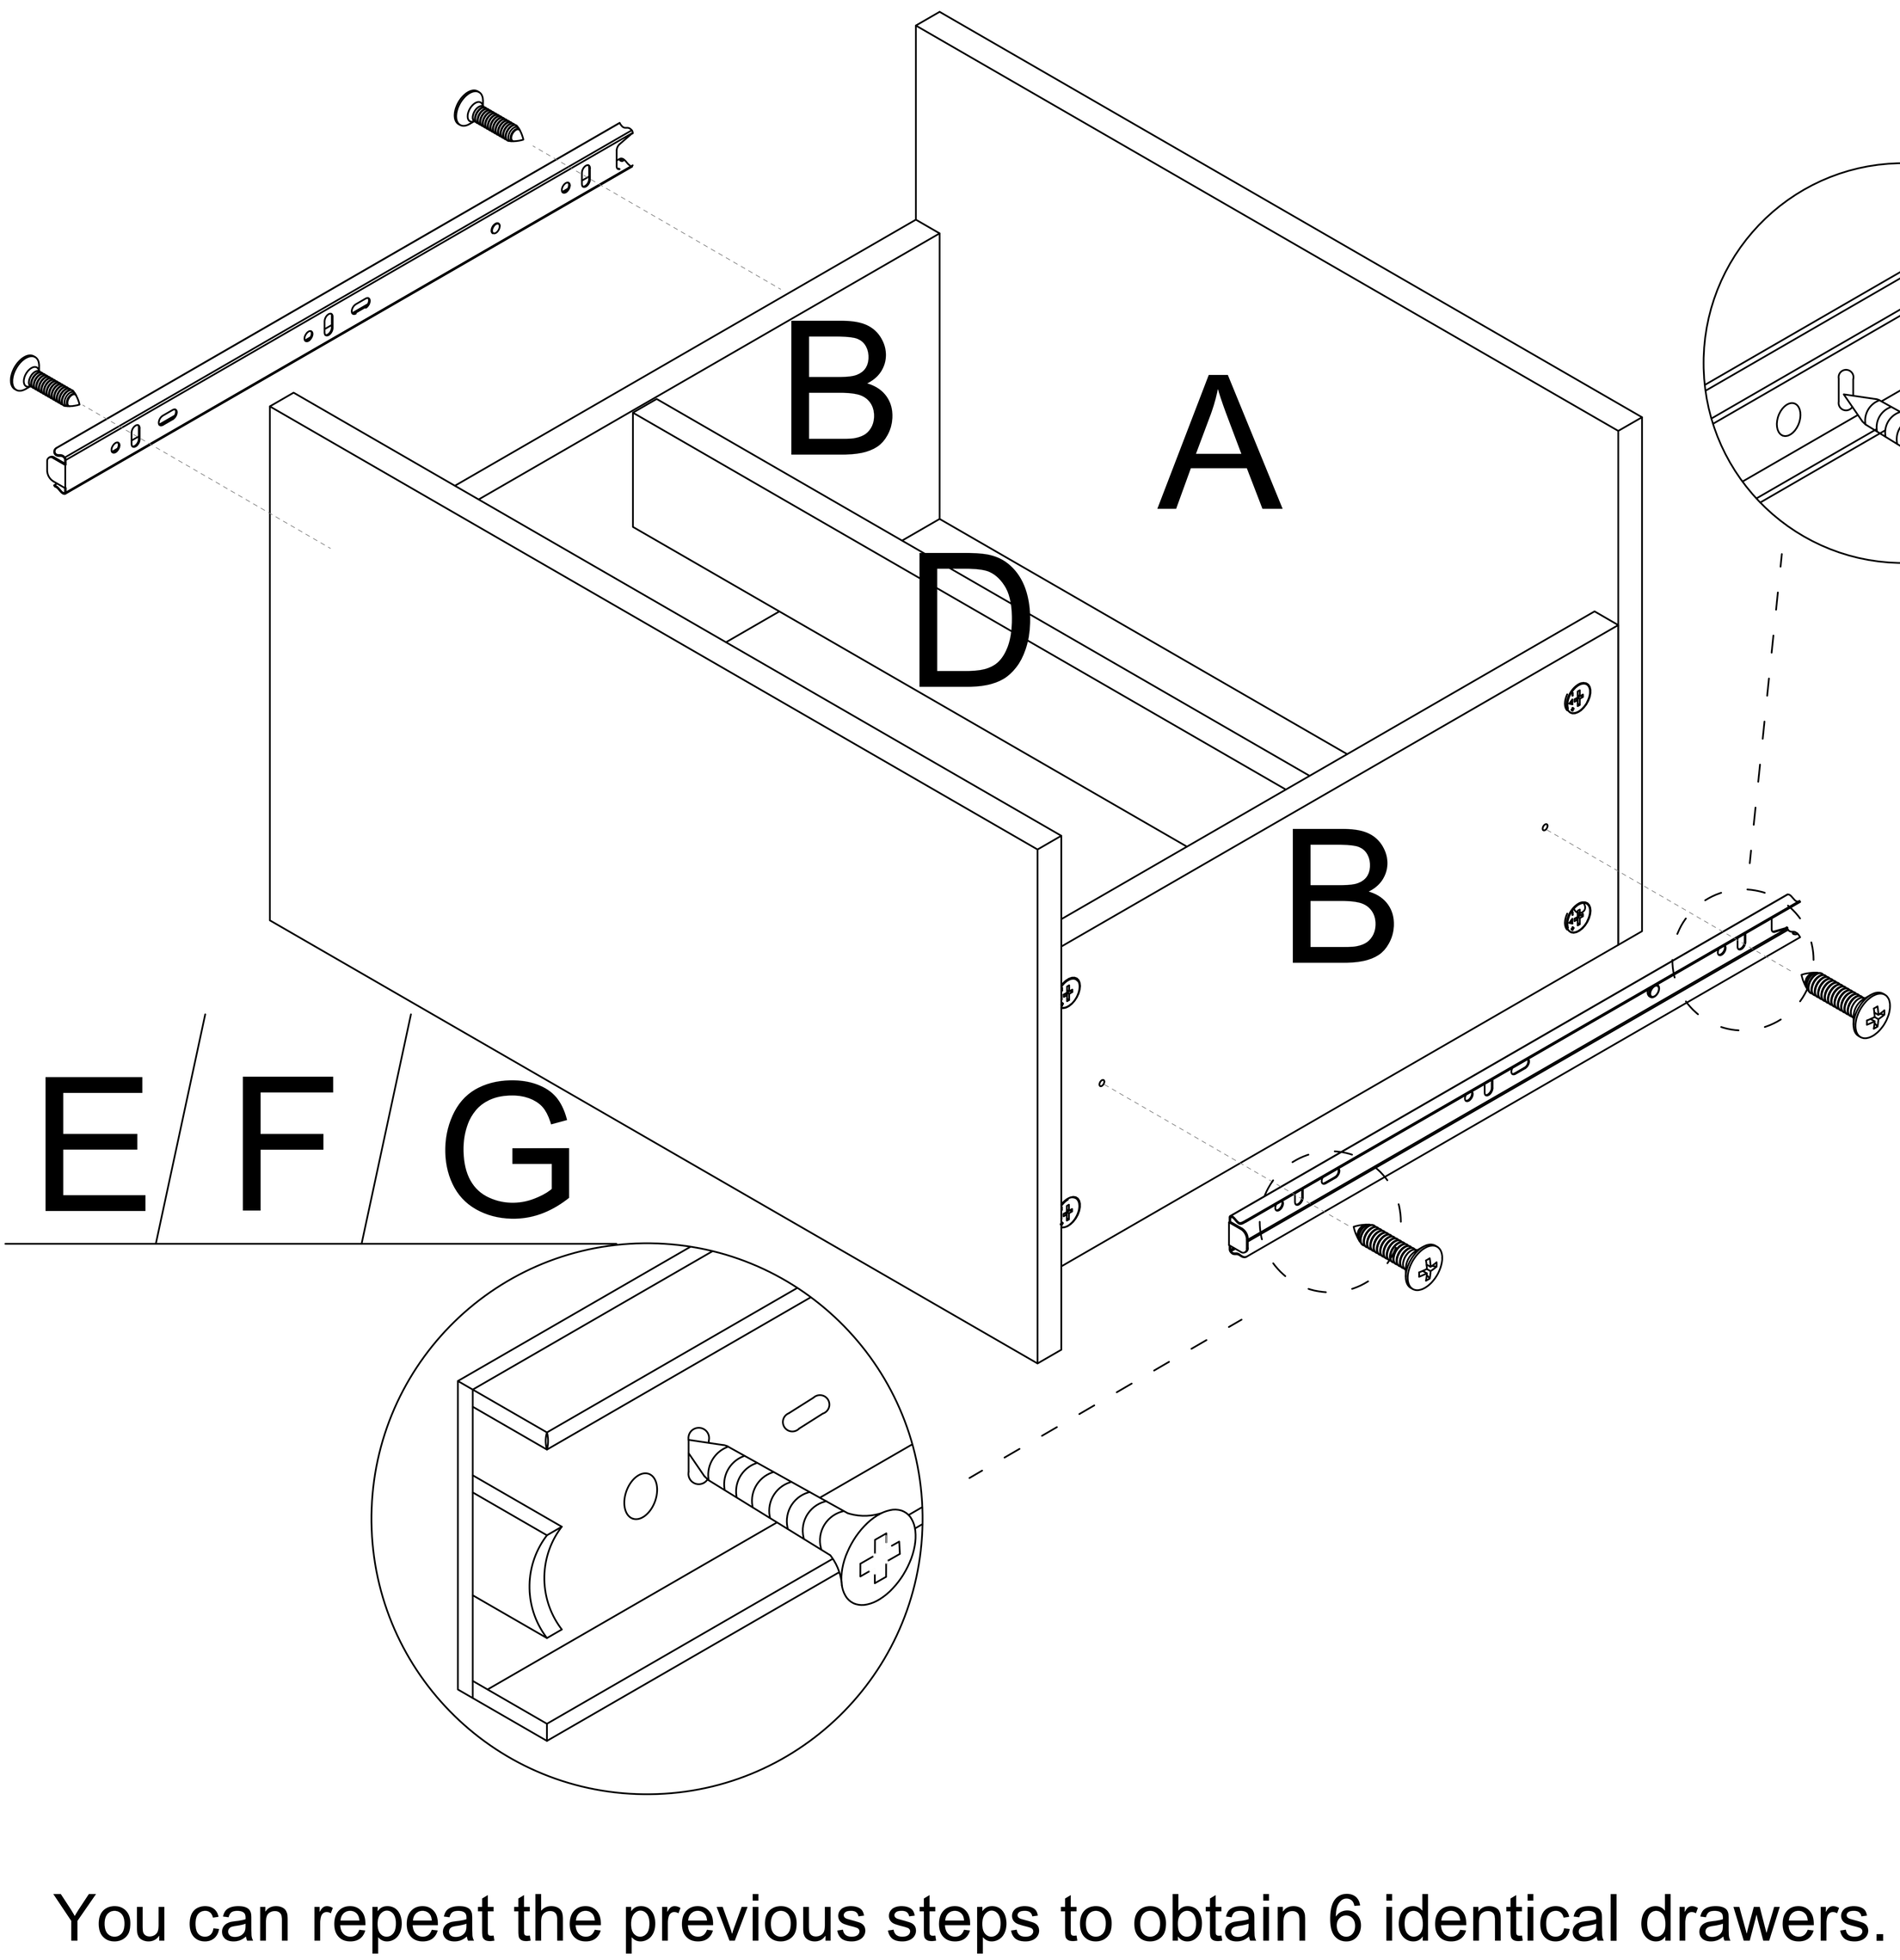


You can repeat the previous steps to obtain 6 identical drawers.


Product structure decomposition

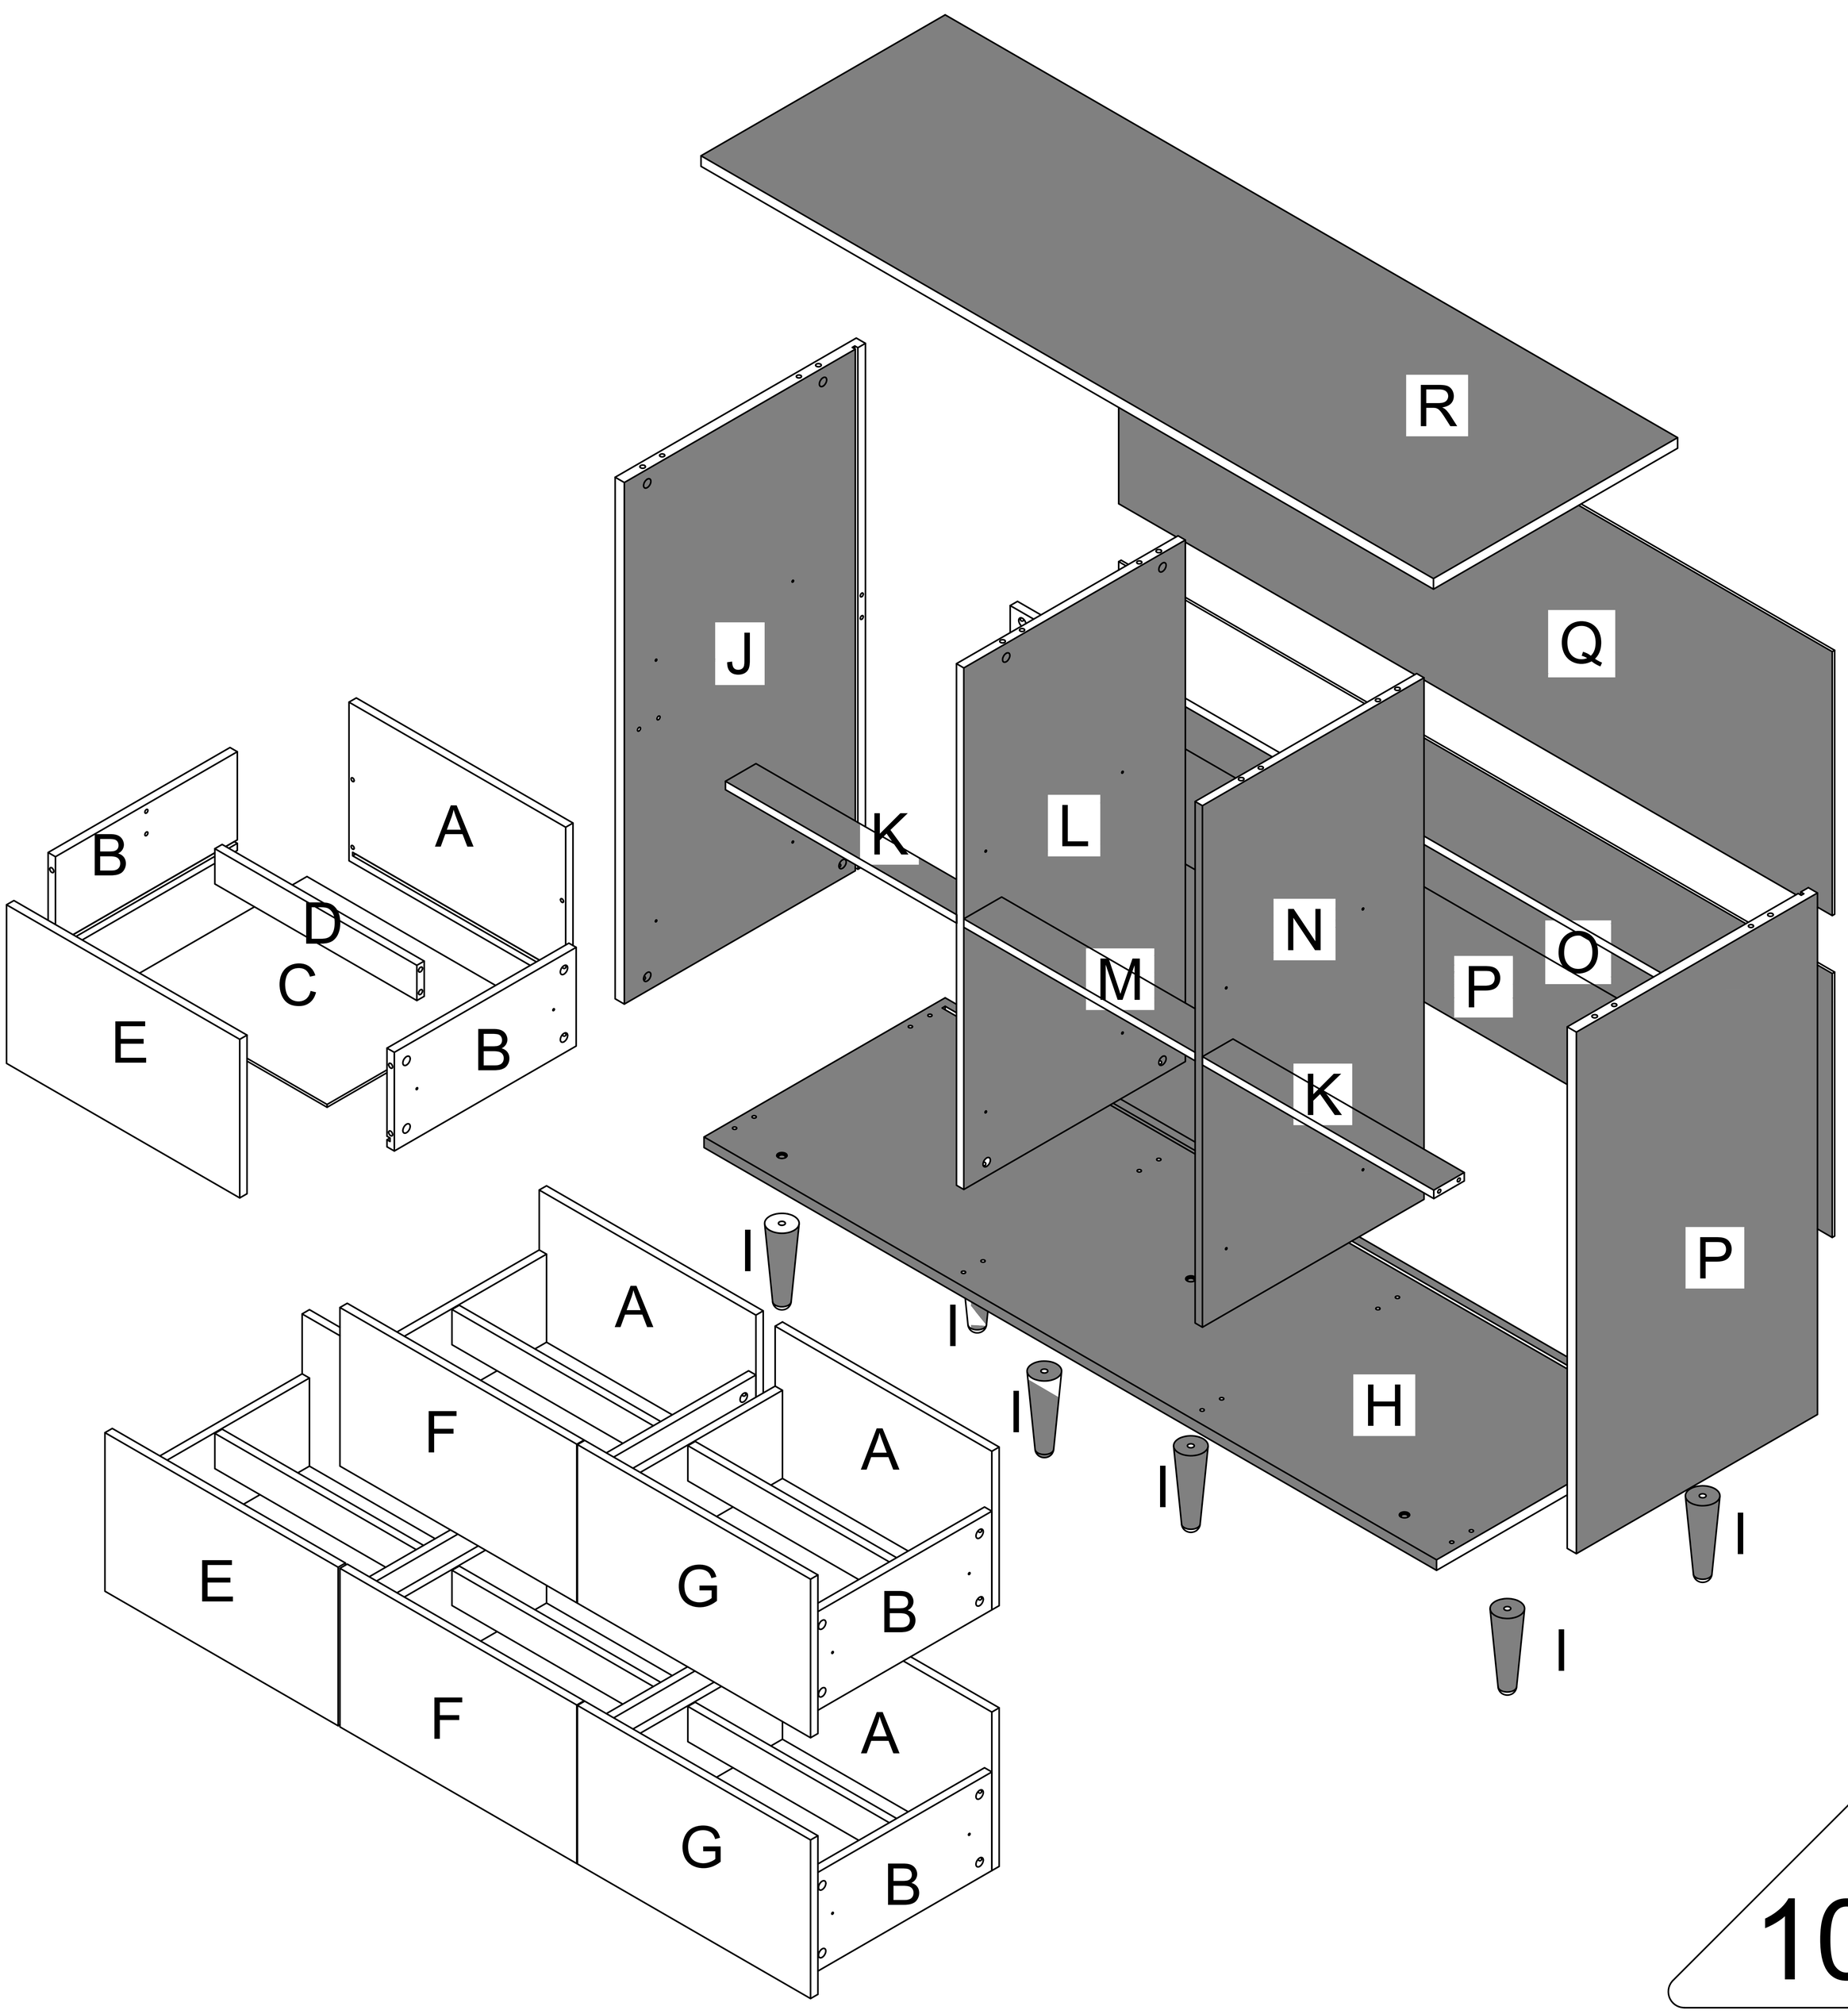

Step 9

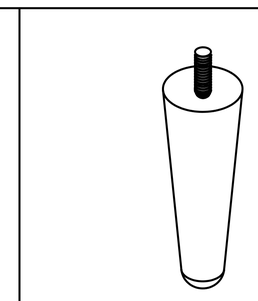


x6

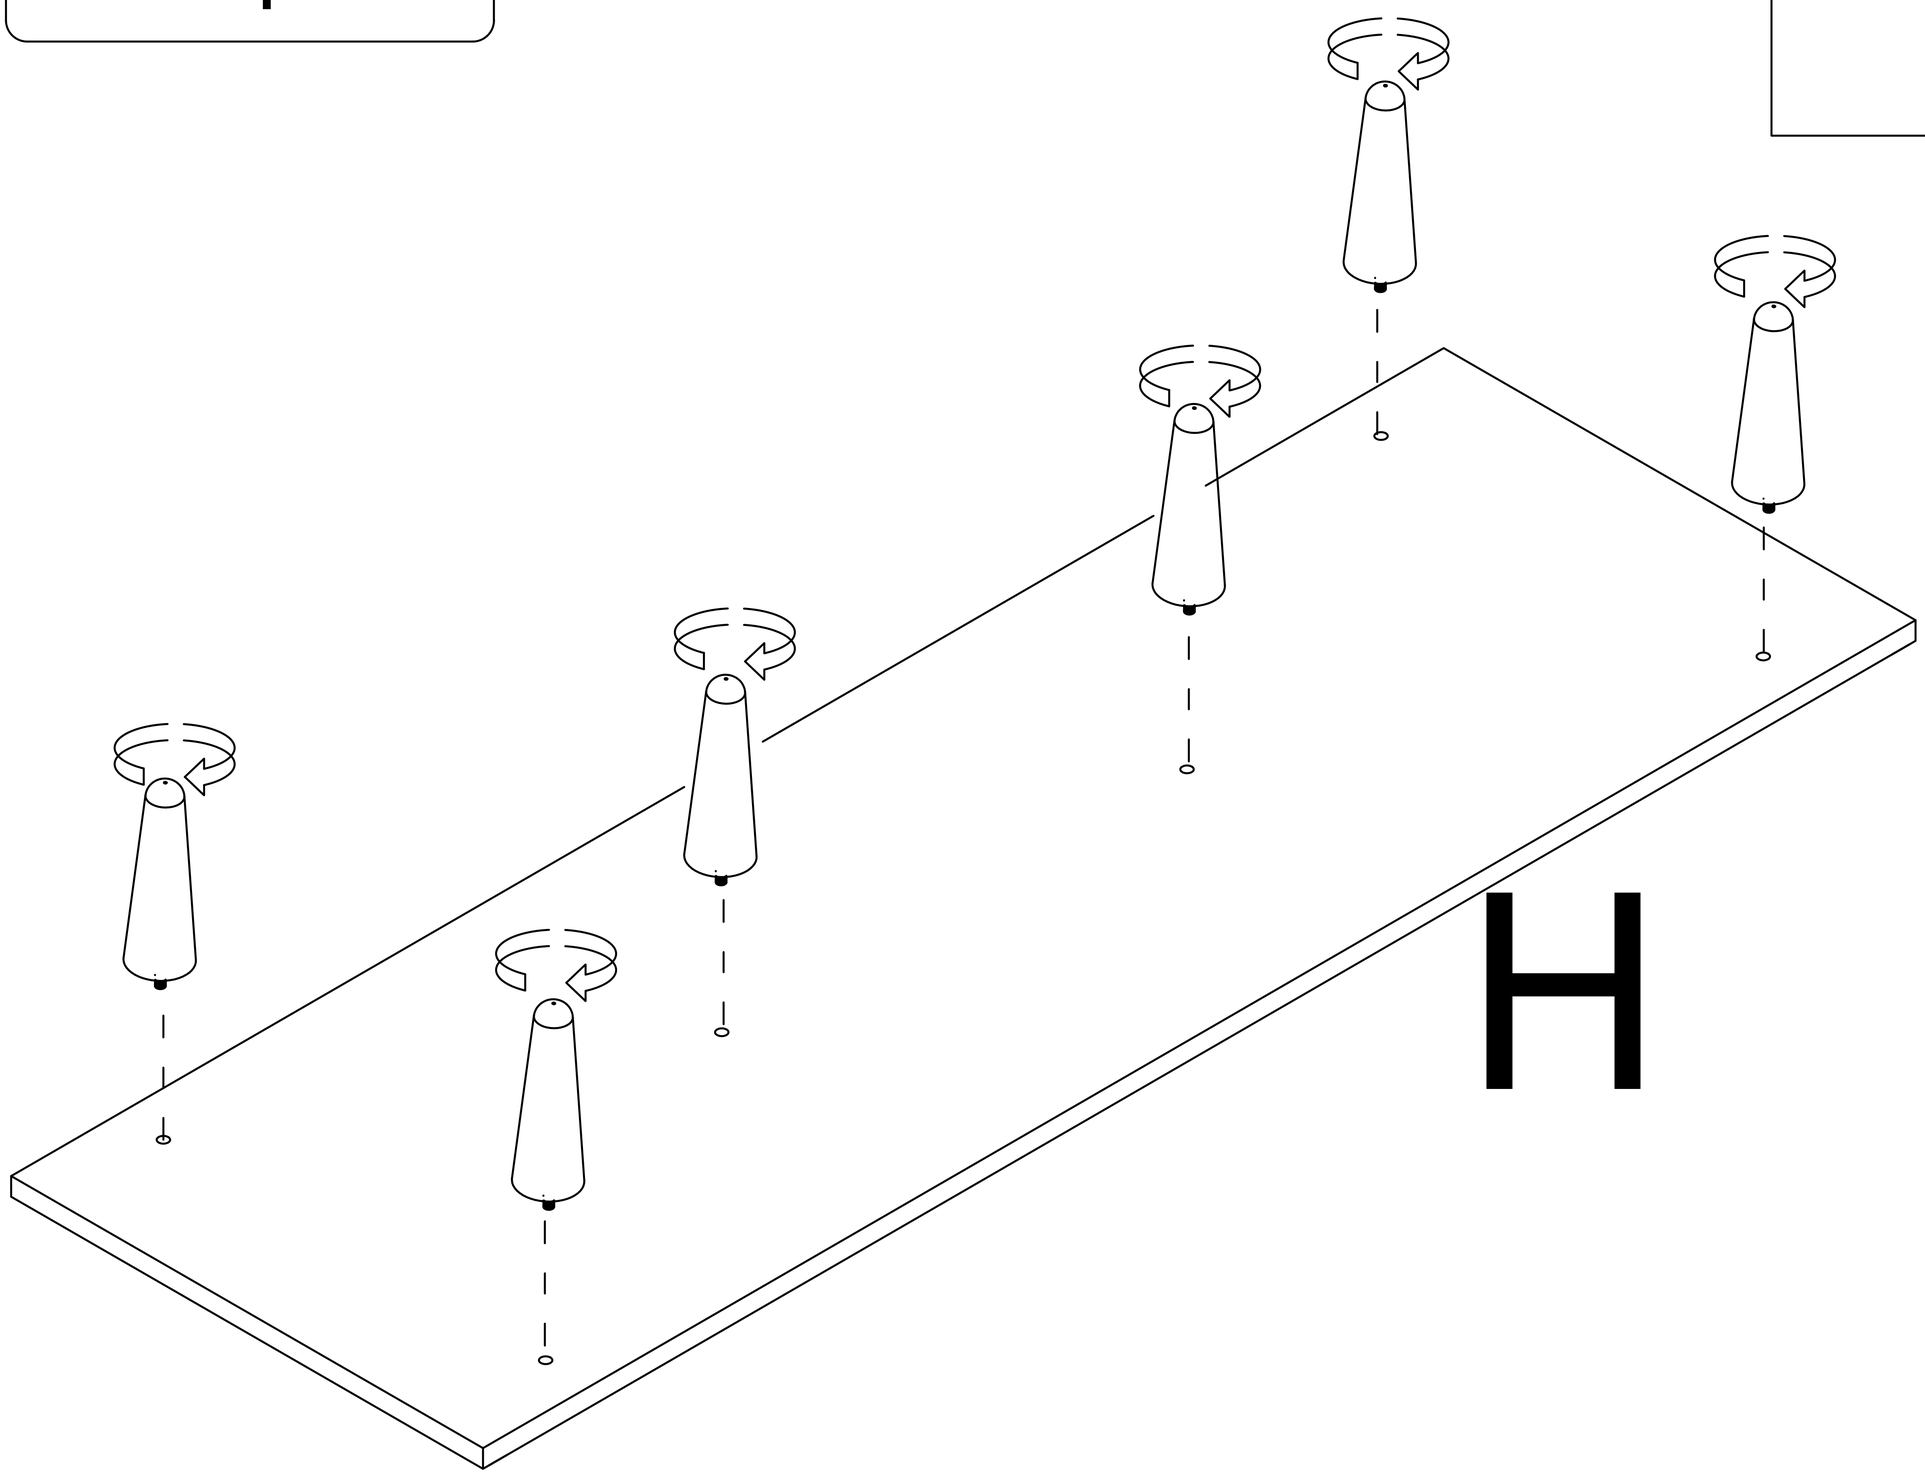


Step 10

Tear off release paper and stick the black foot pad on the board


5

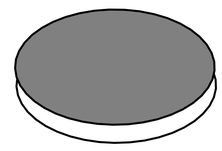

x6

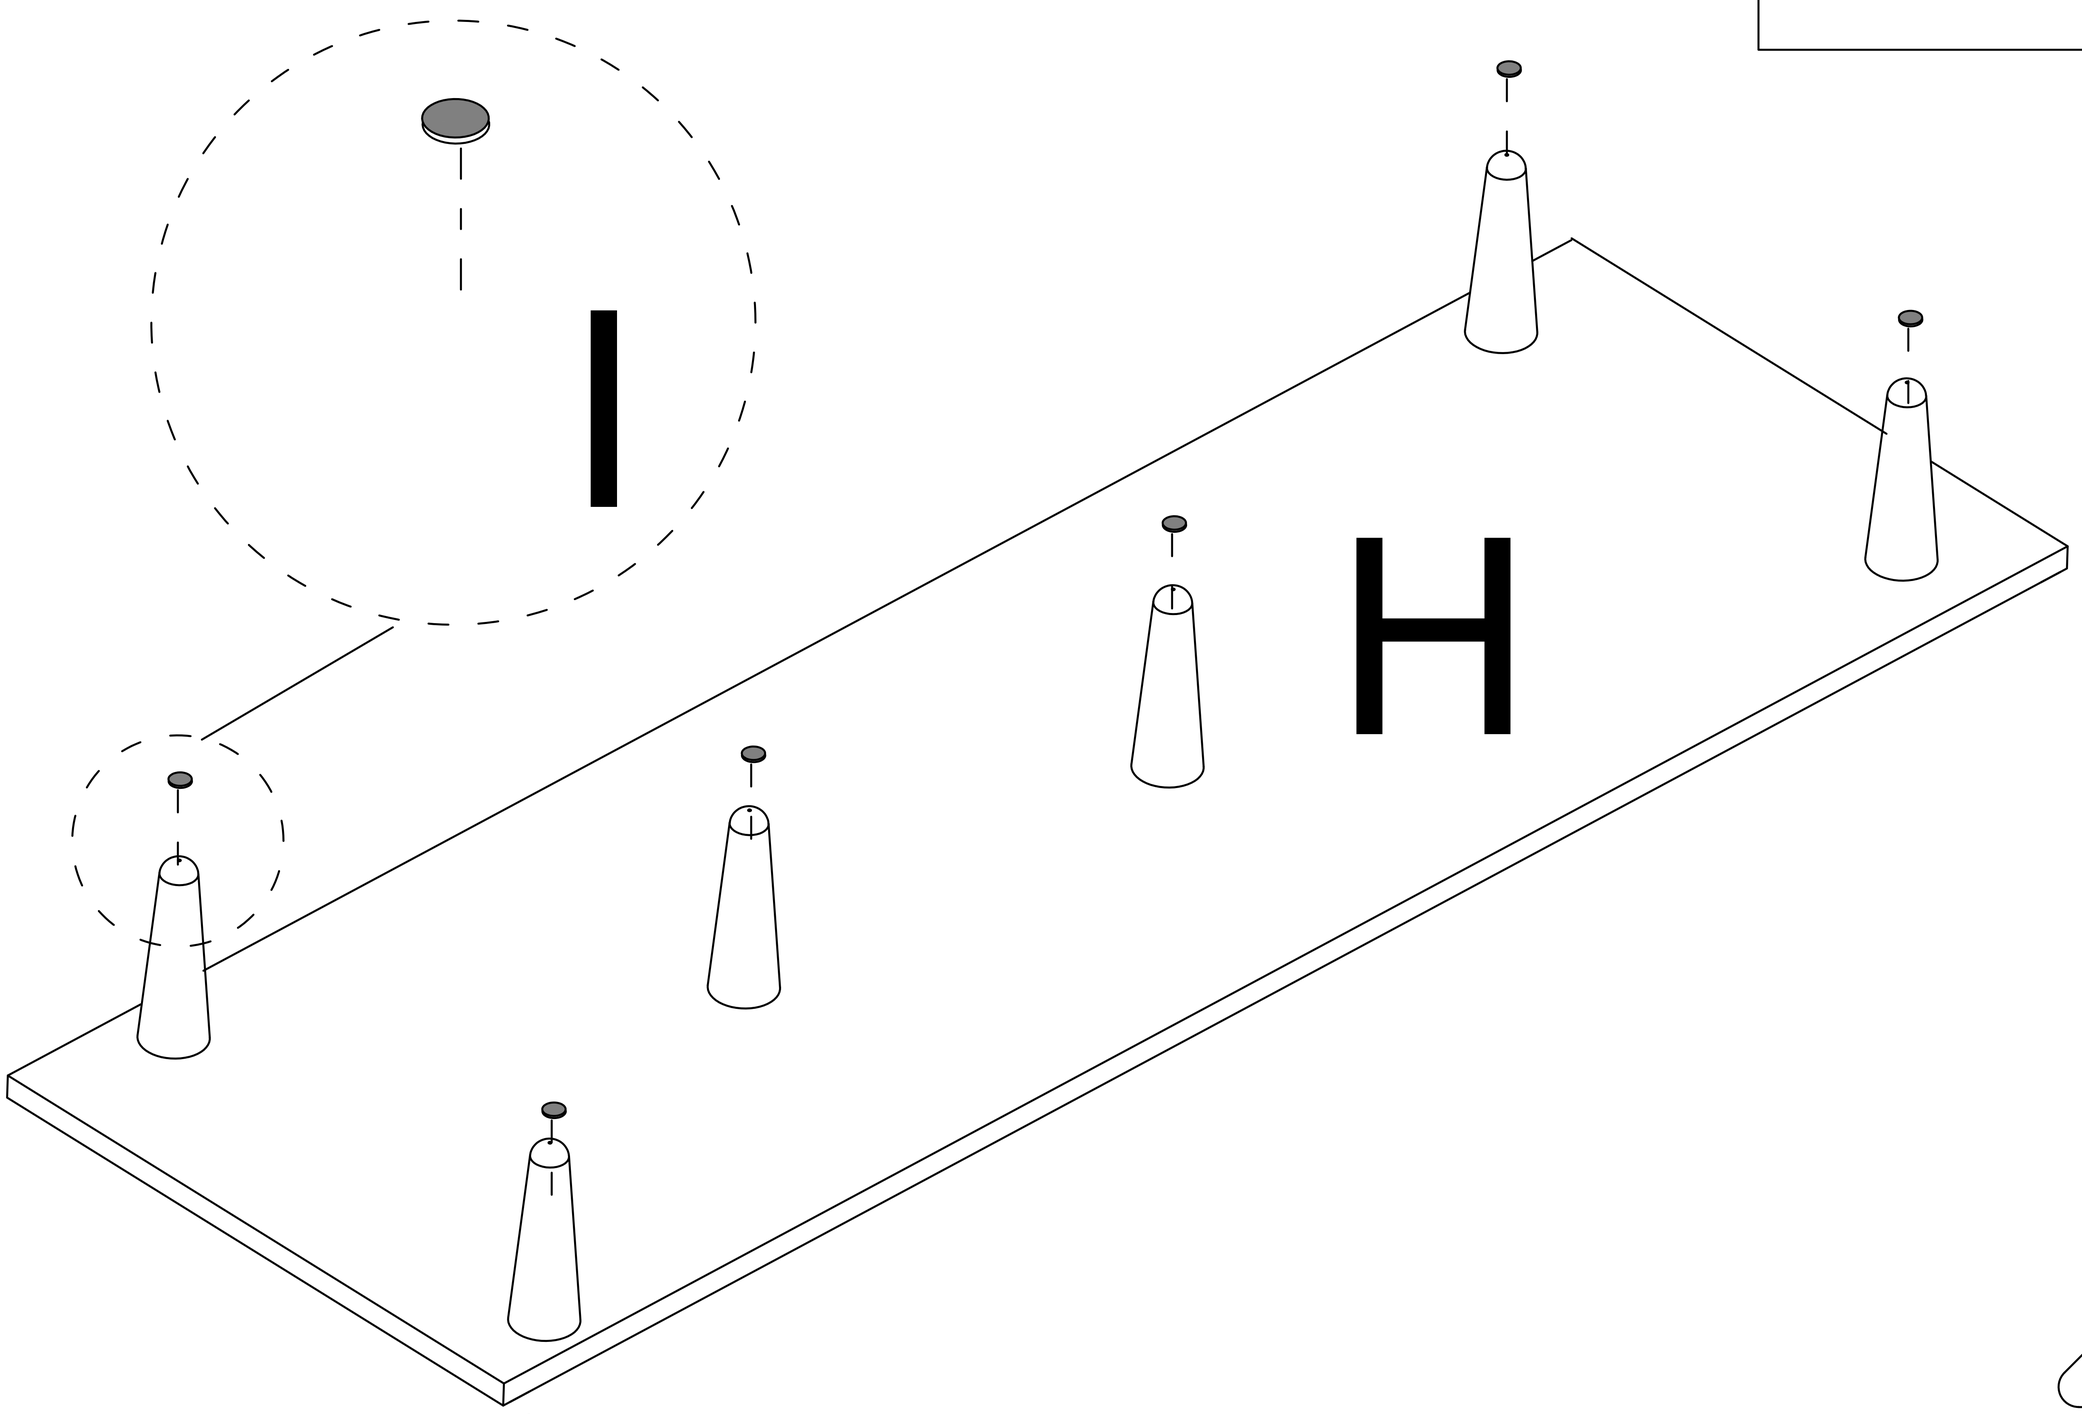


Step 11

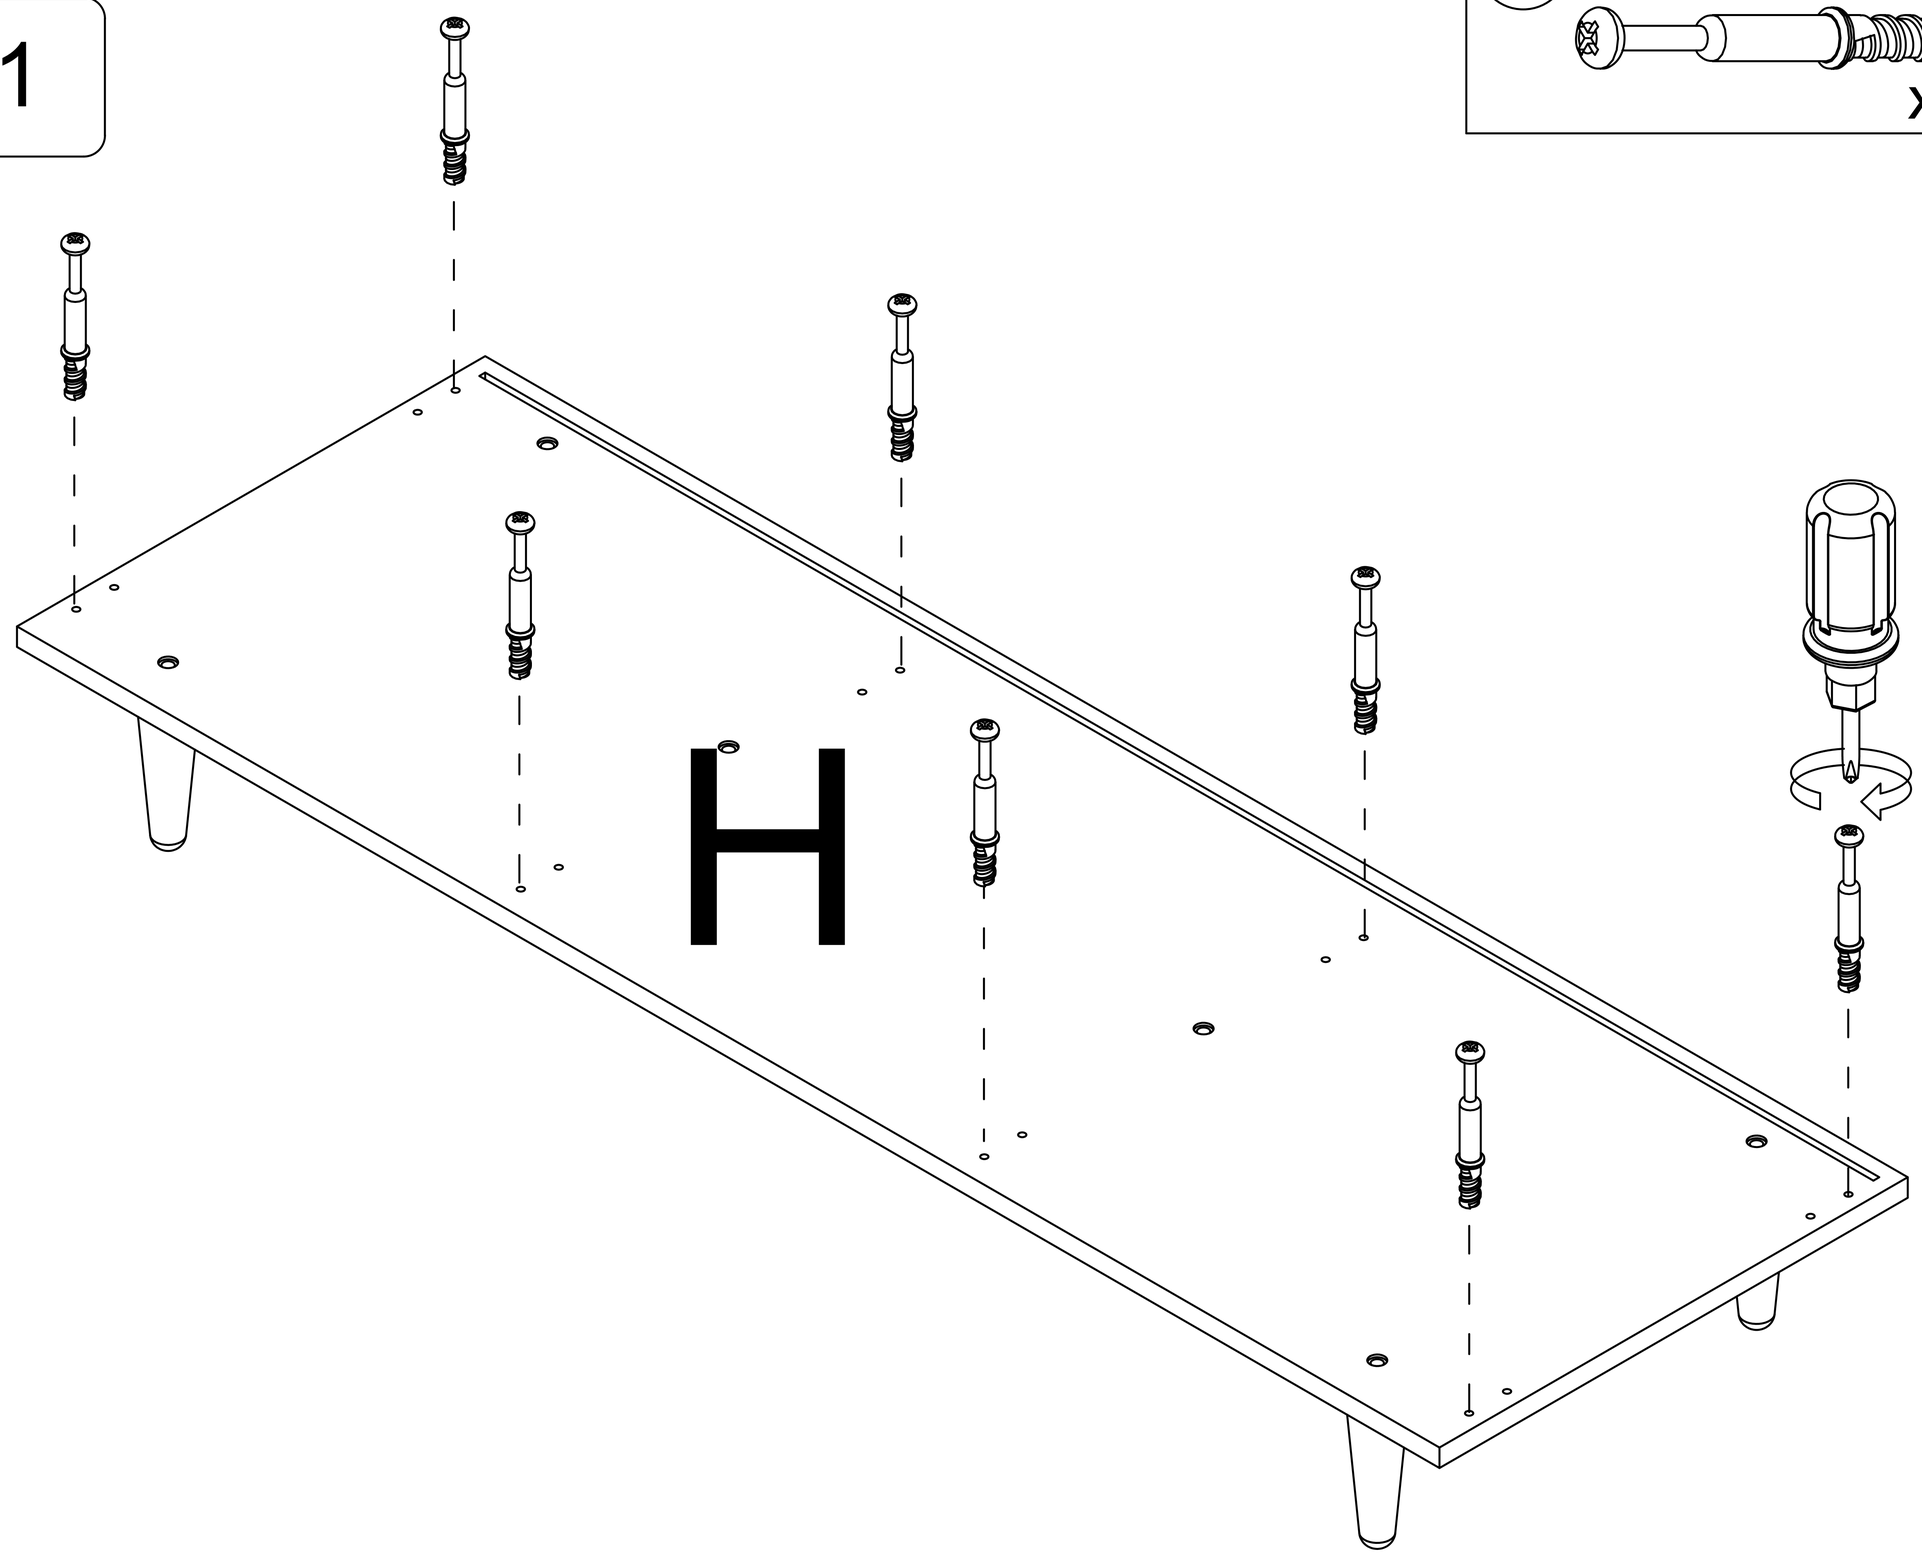

1

x8


Step 12

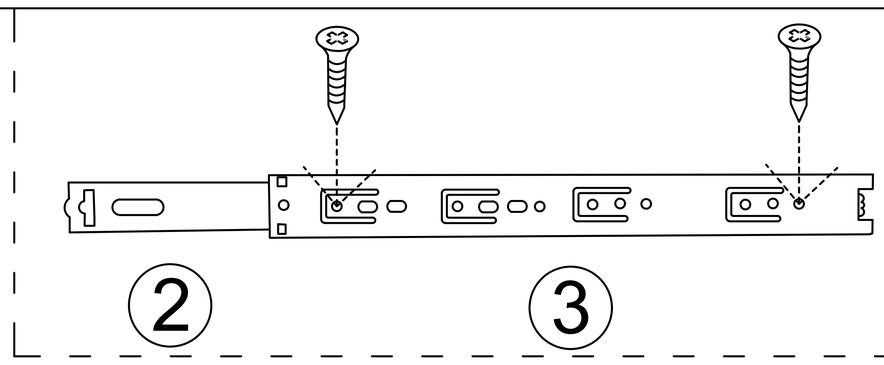


2

3


4

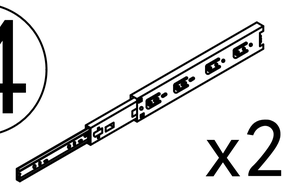


x2




x4

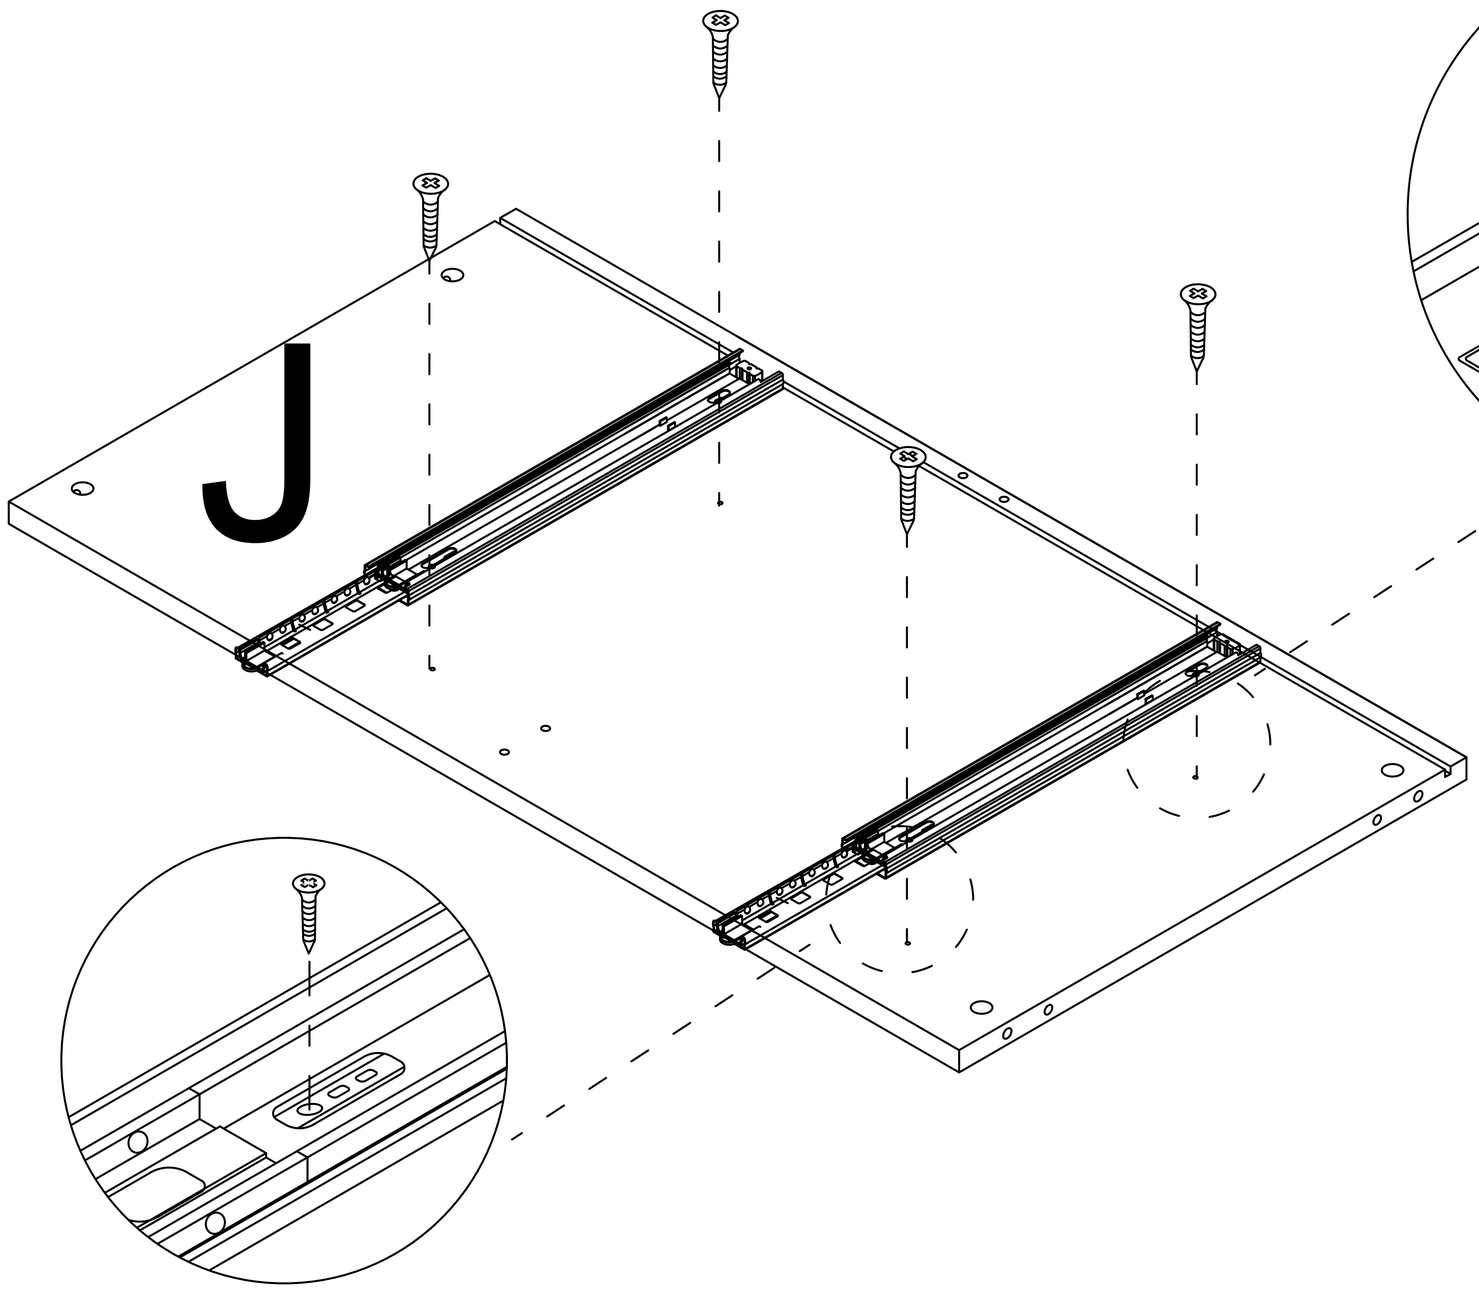


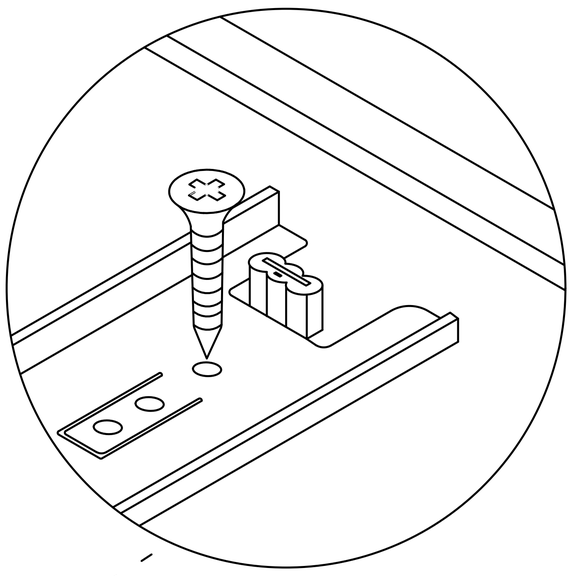

Step 13

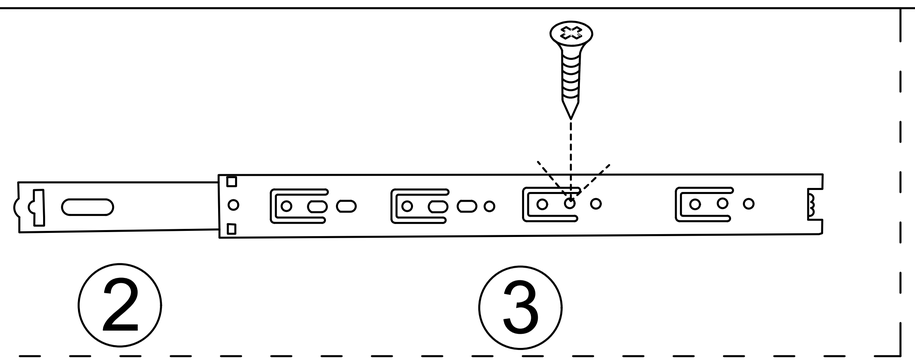


4 x2

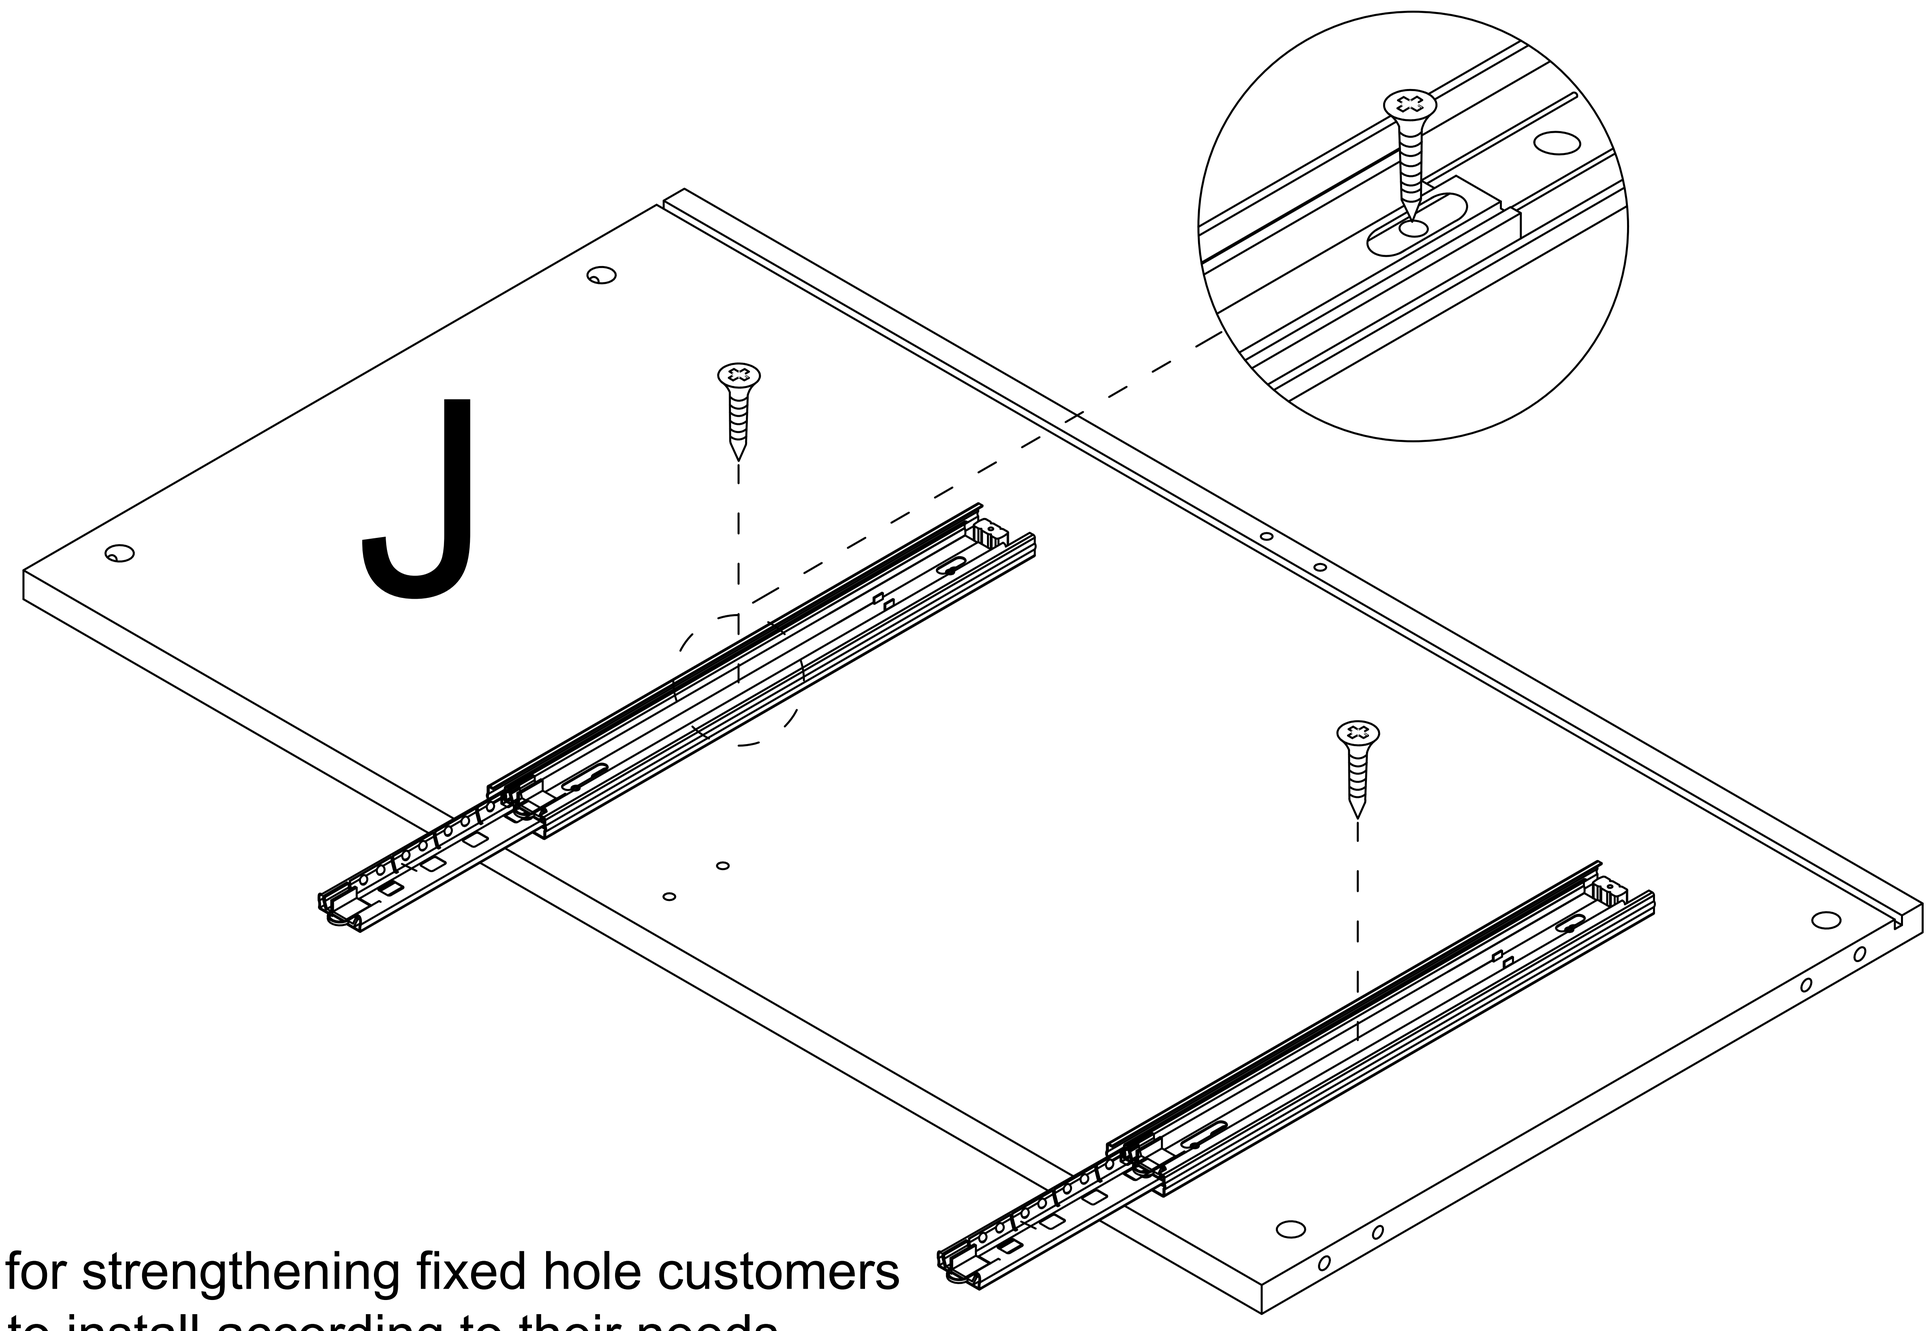

This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 14


1 x2

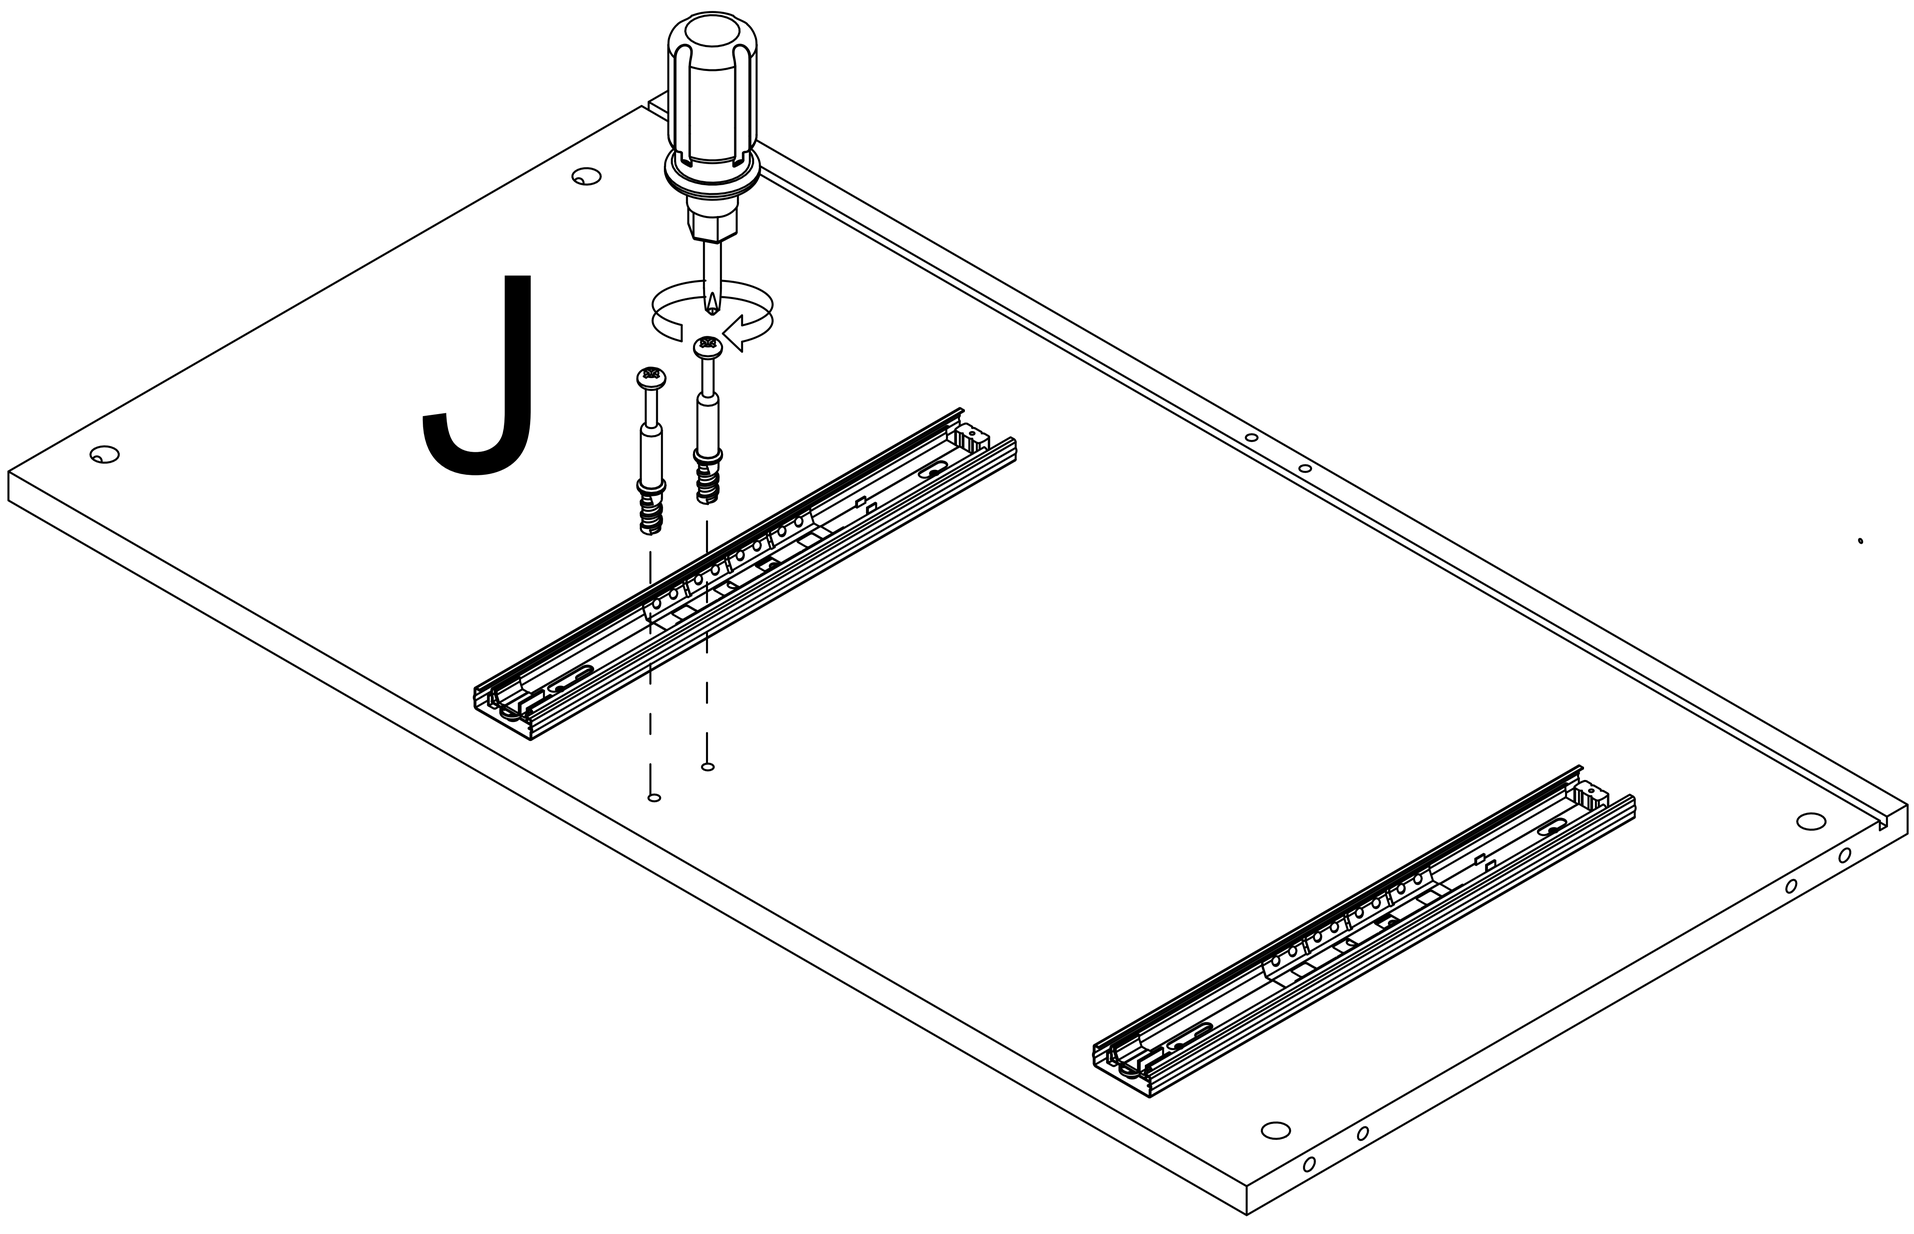

Step 15

8 x2

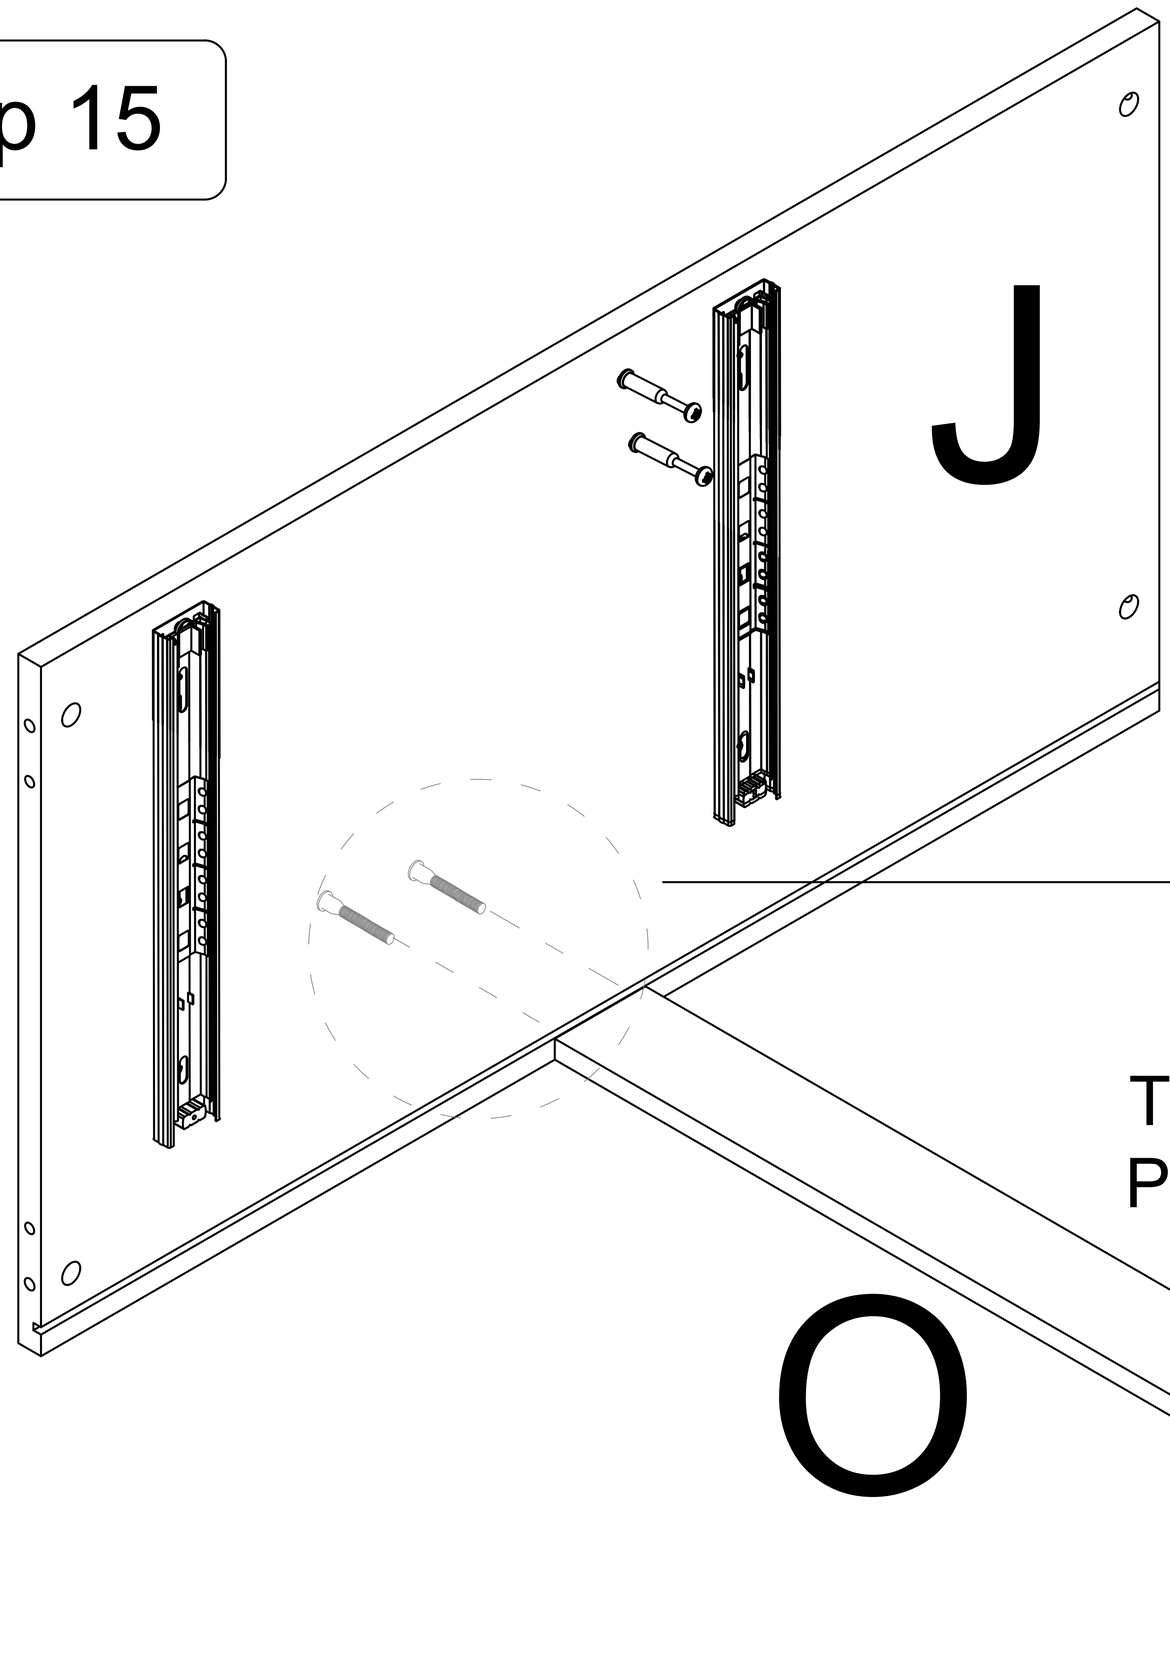


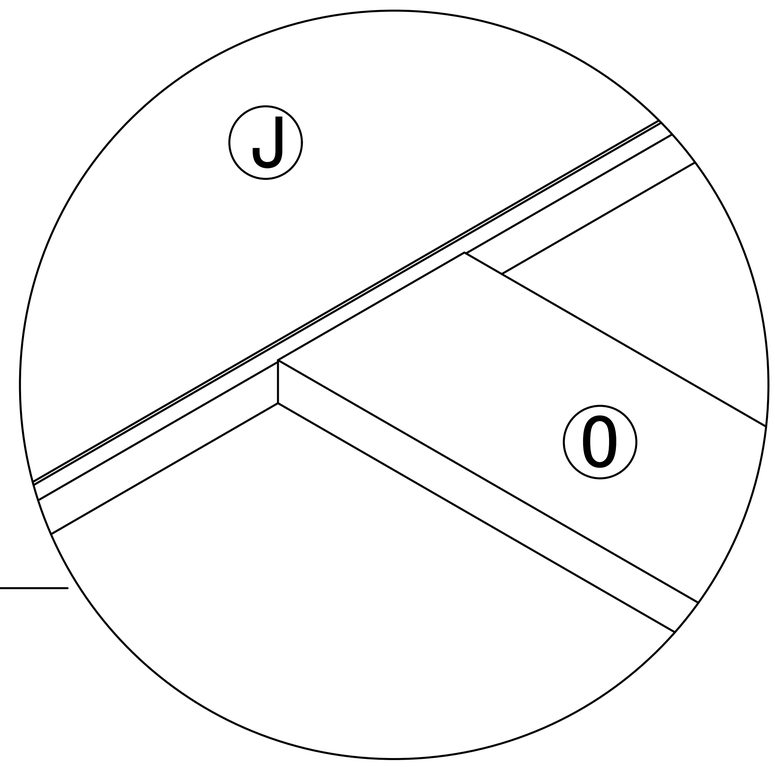


The structure is fragile.
Please install with extreme care.


Step 16


2 x2

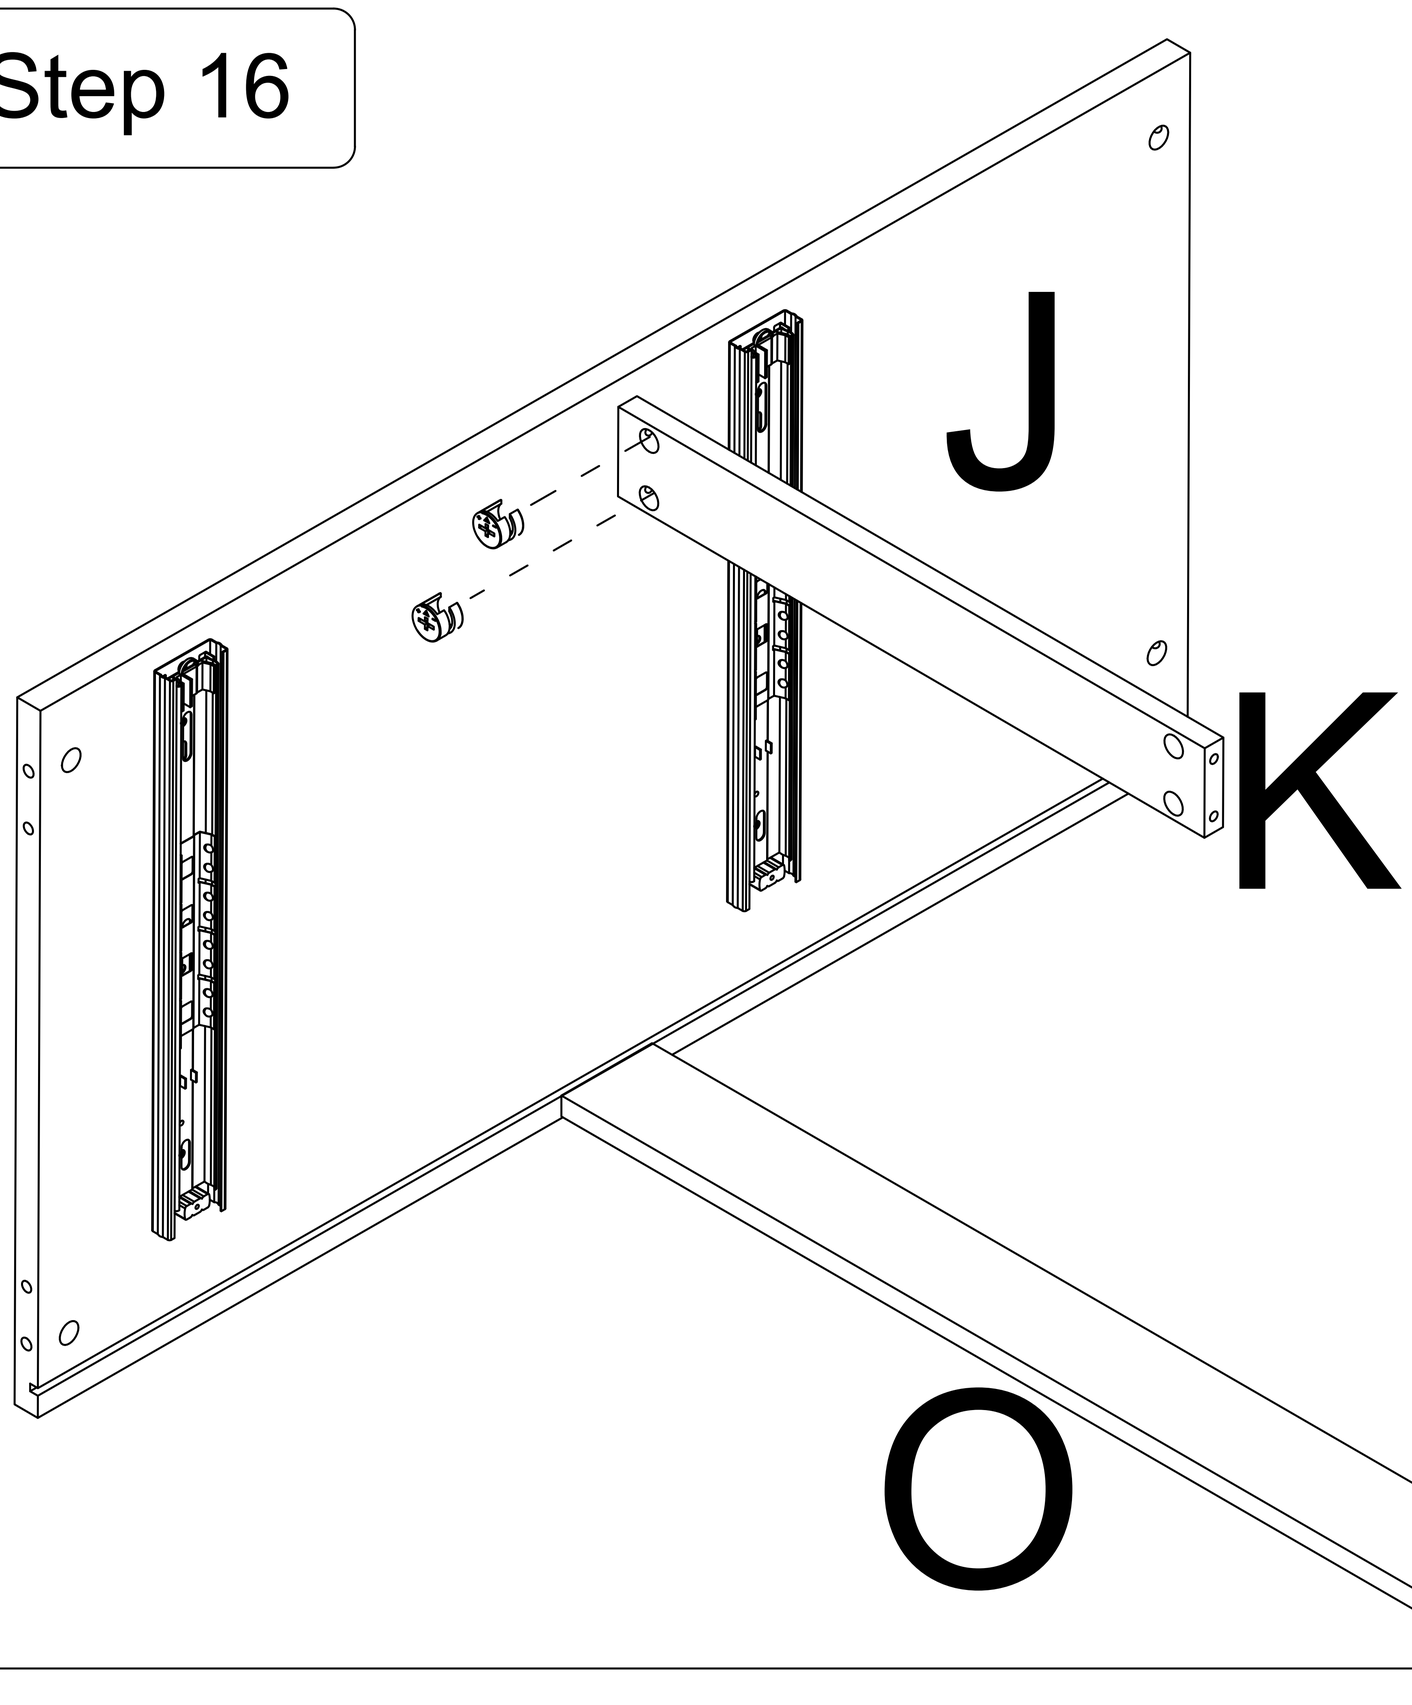


Step 17

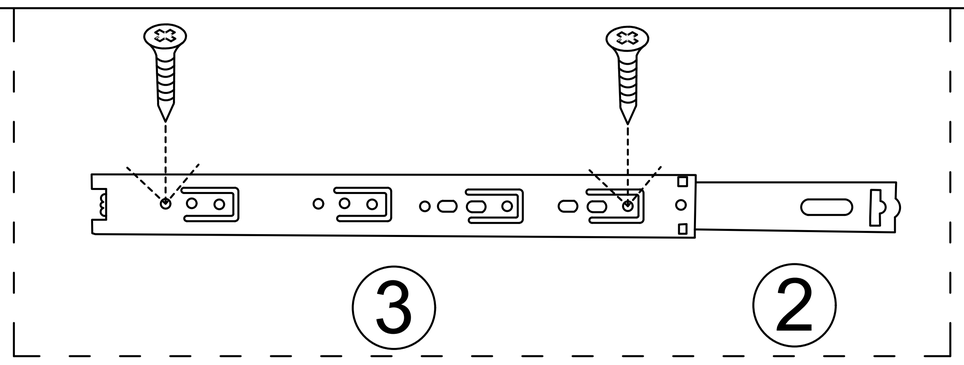


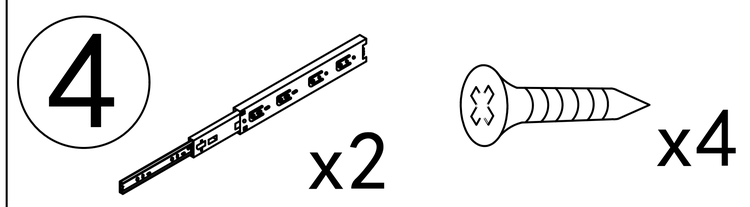


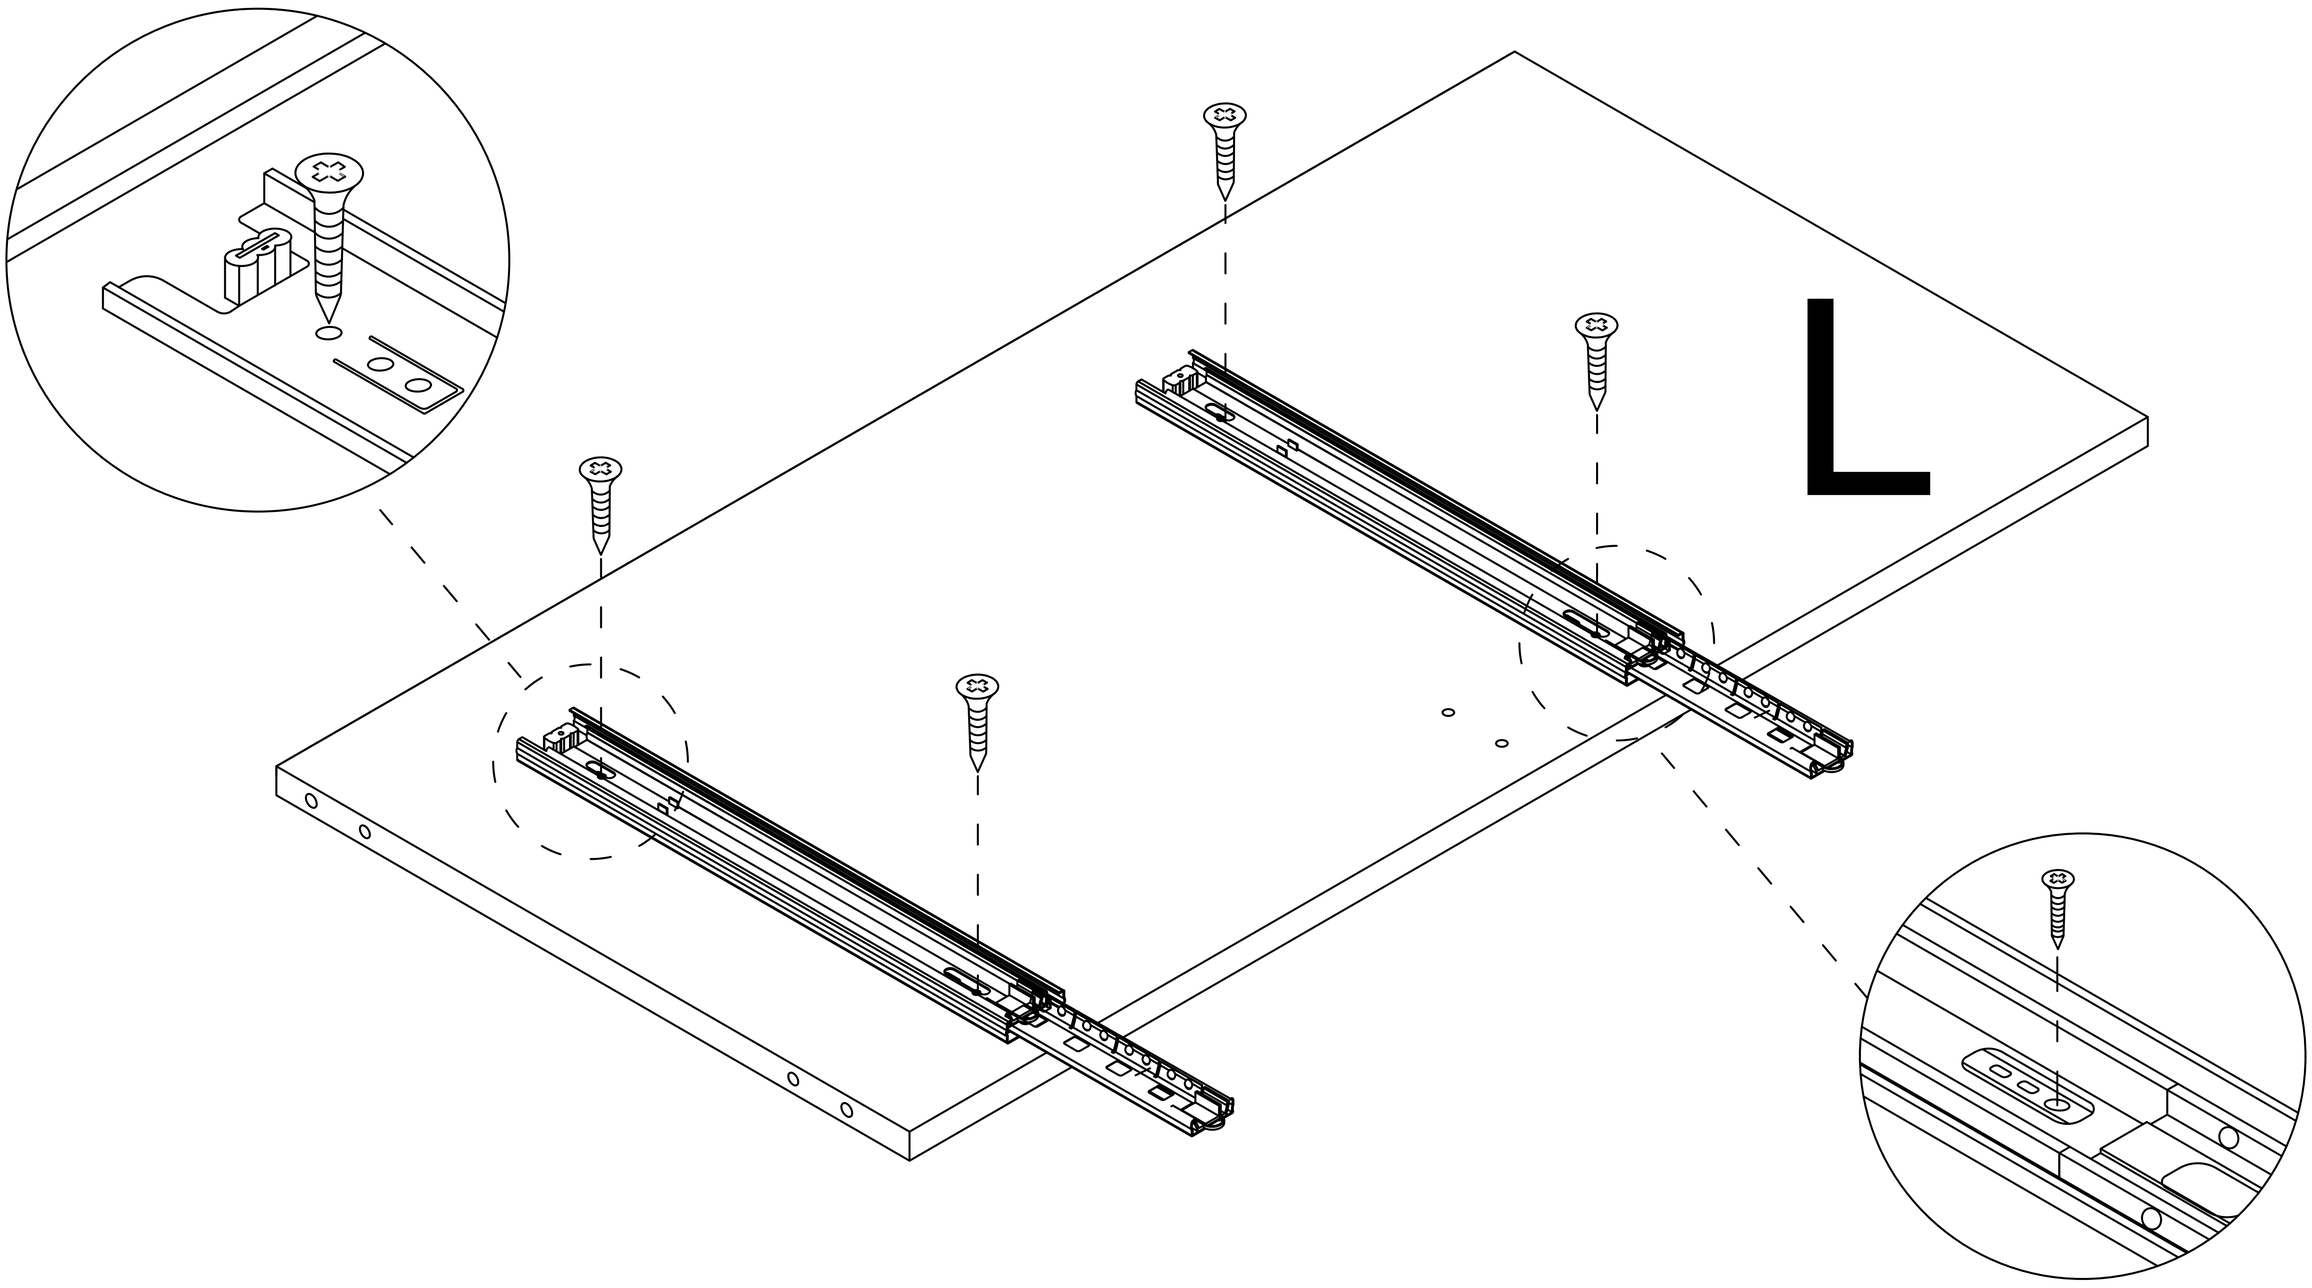

Step 18

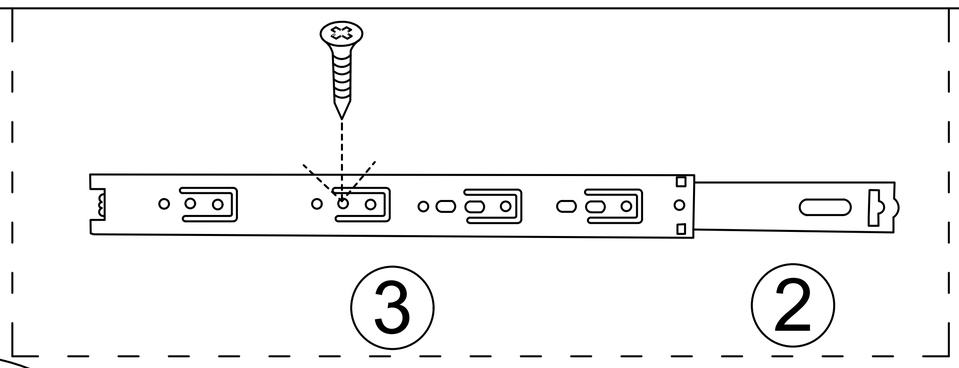


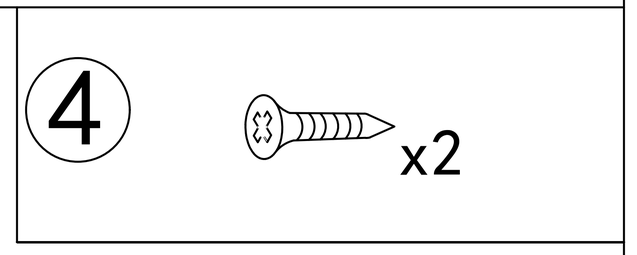

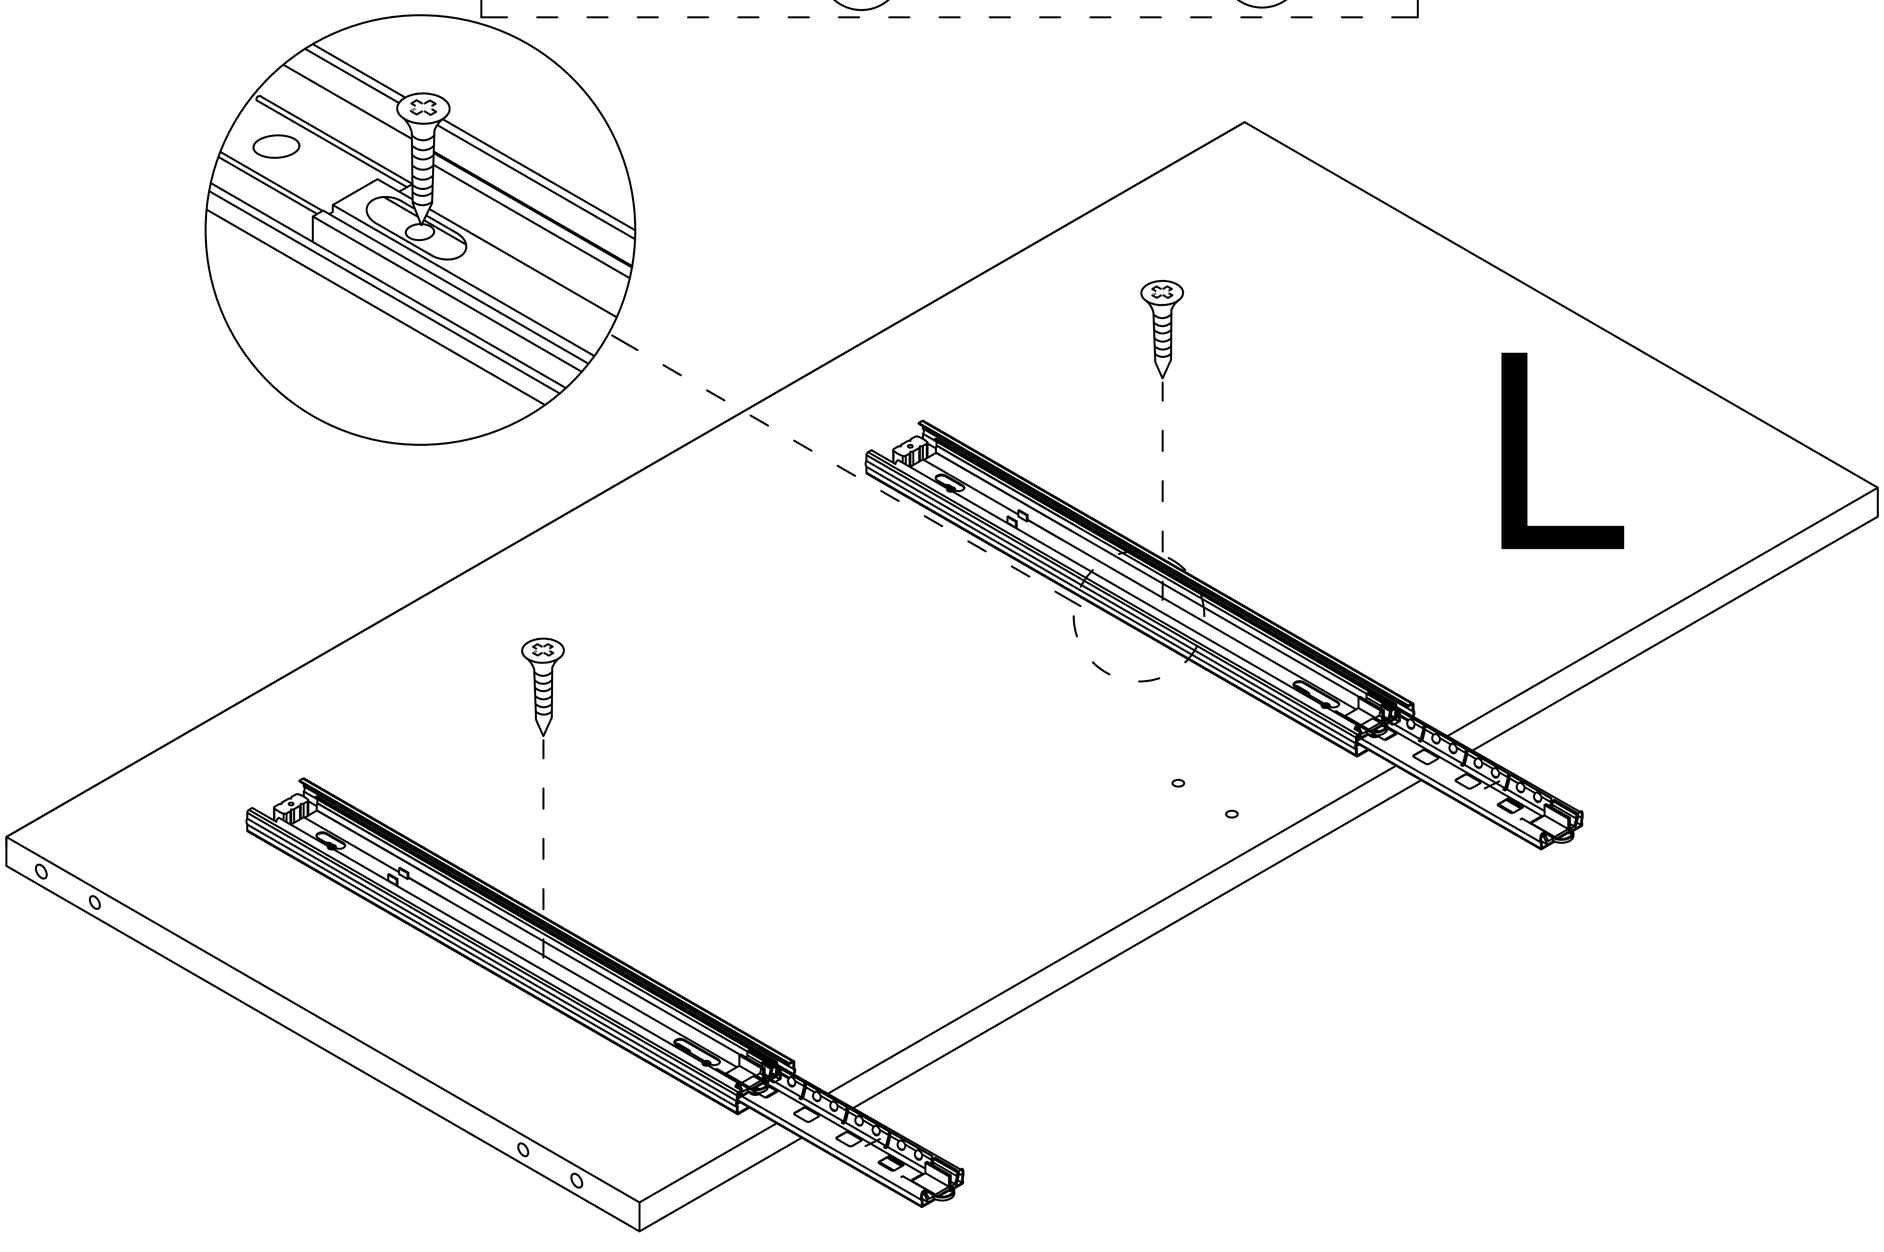


Step 19

1



x2

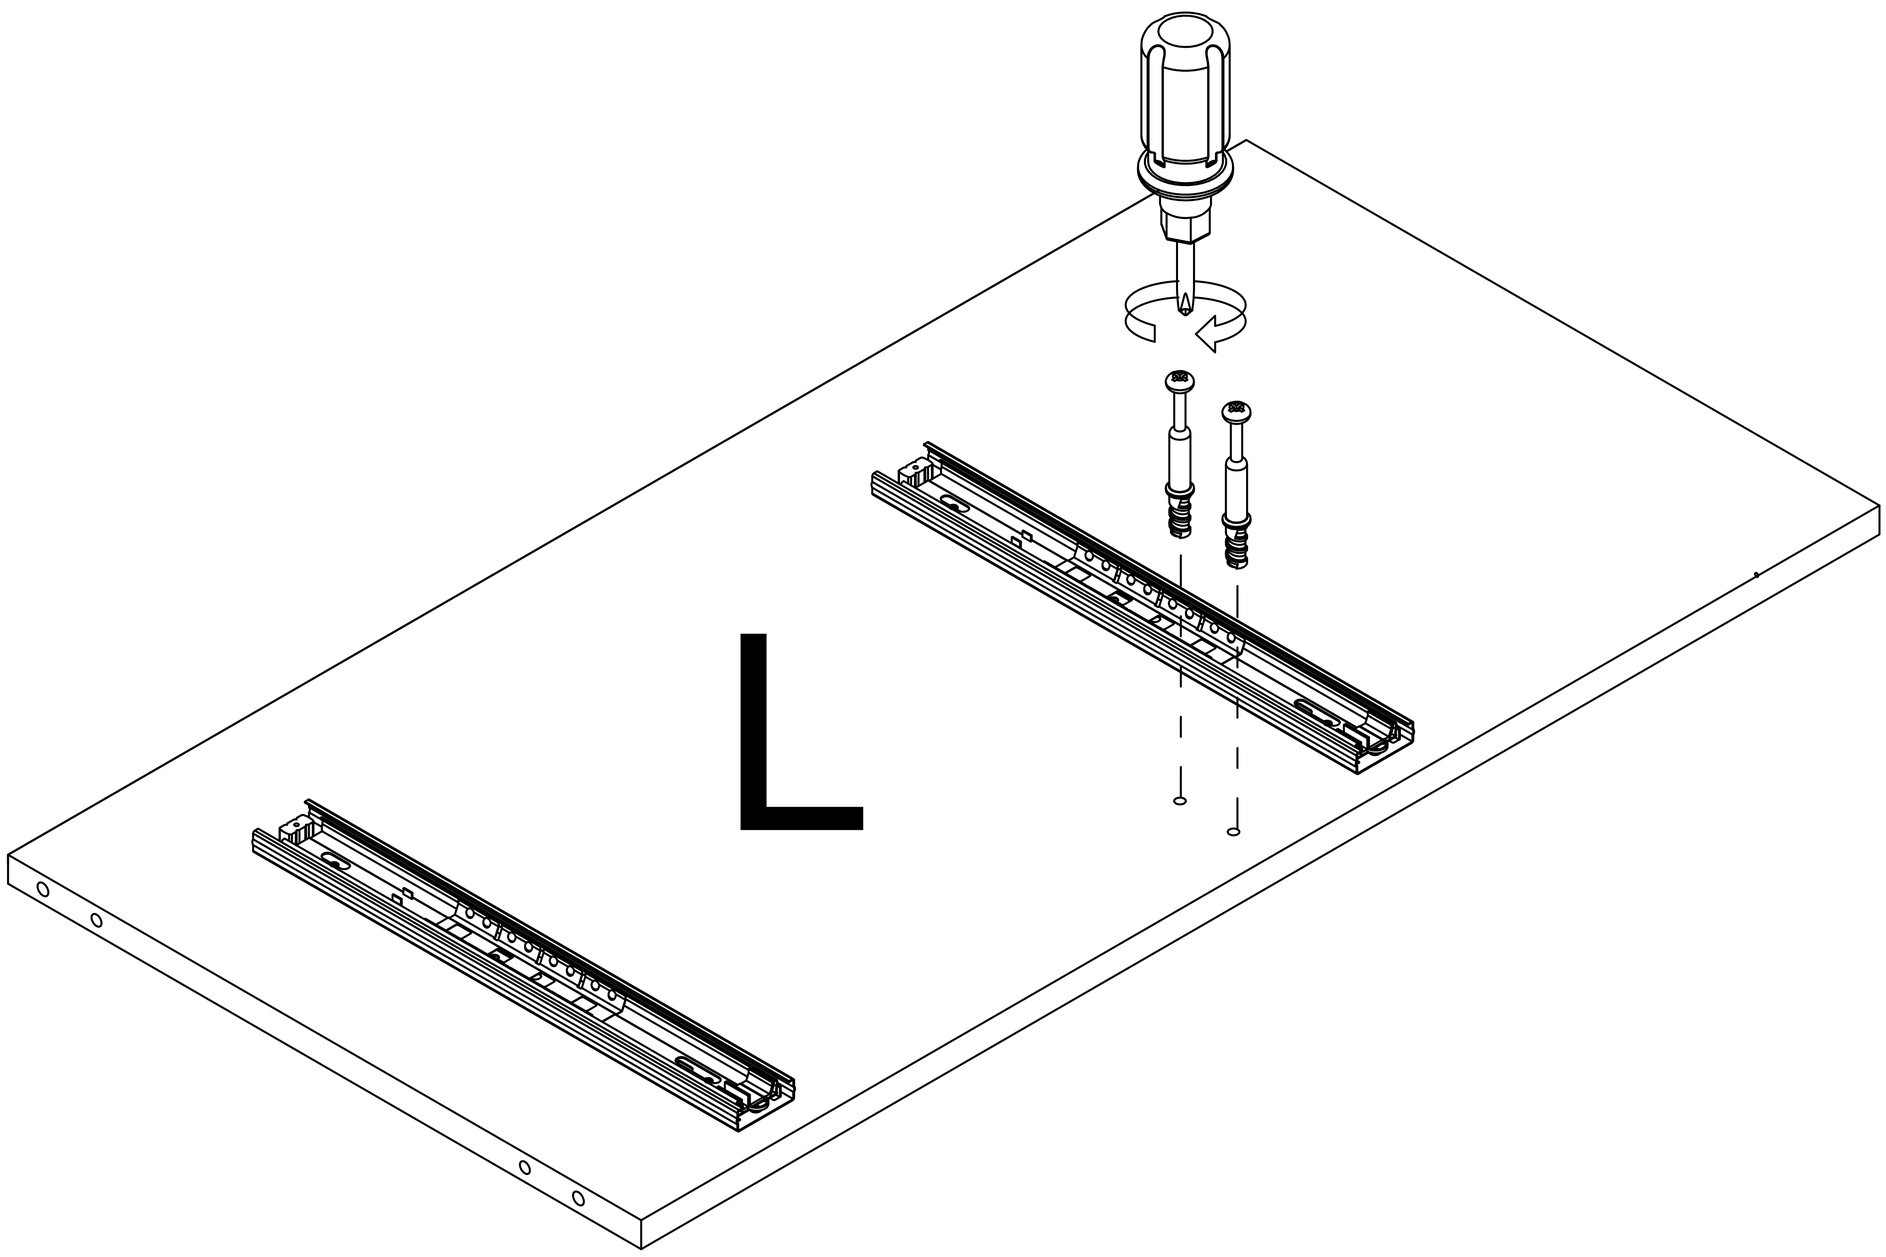


Step 20


2




x2

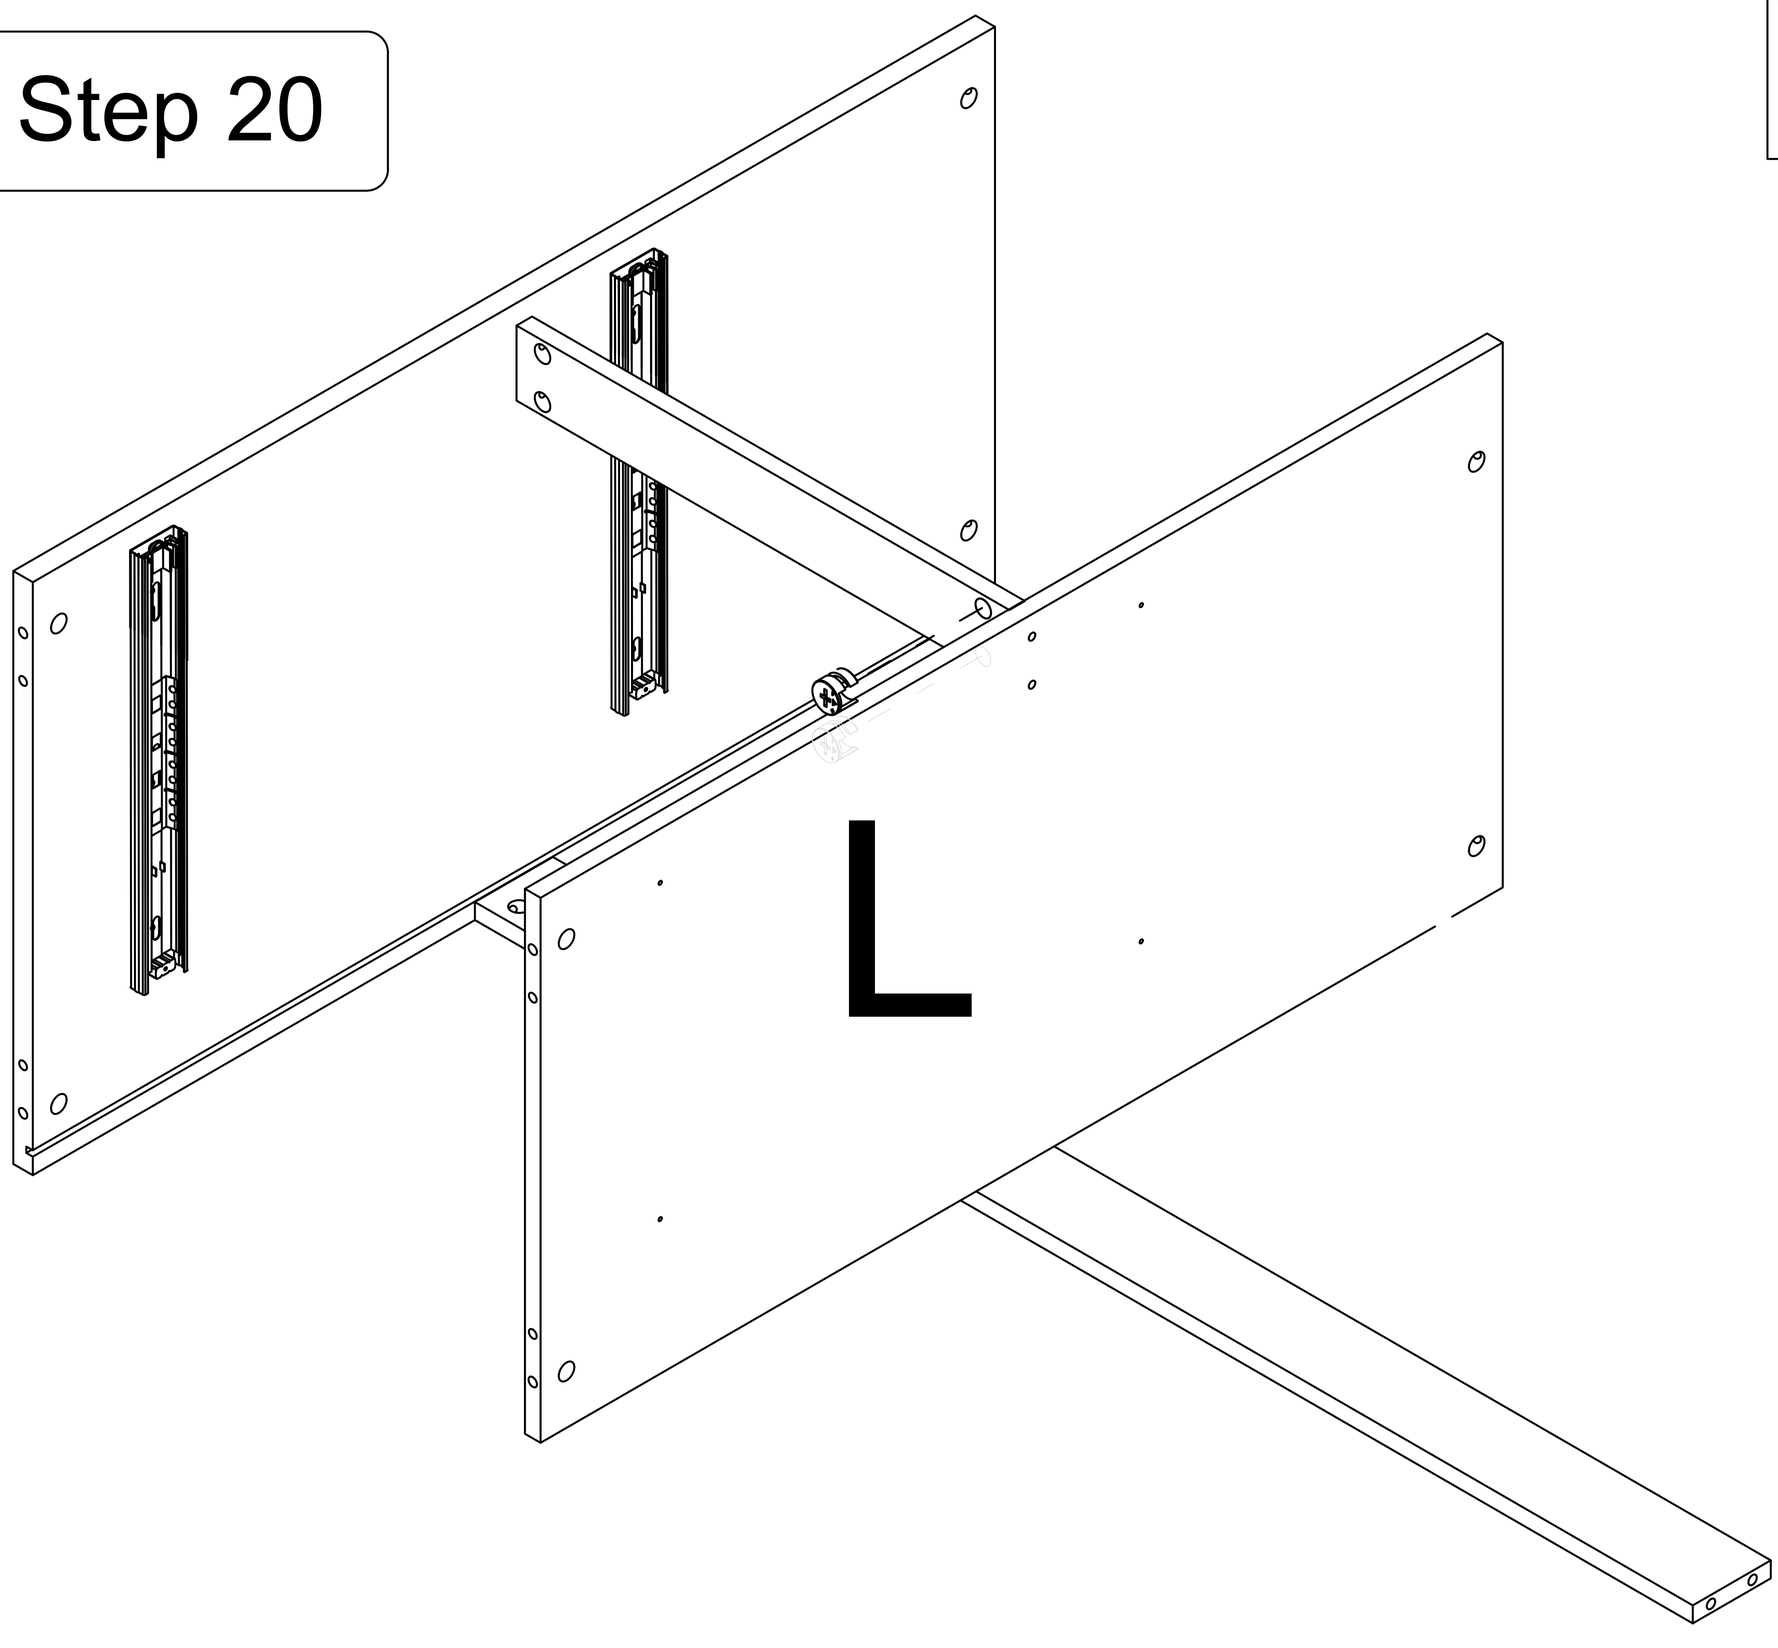



Step 21

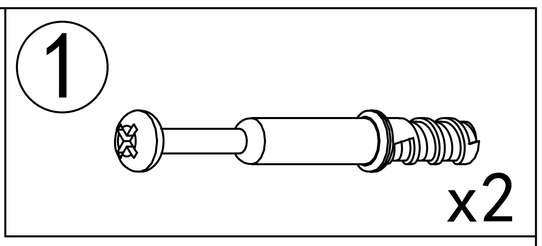

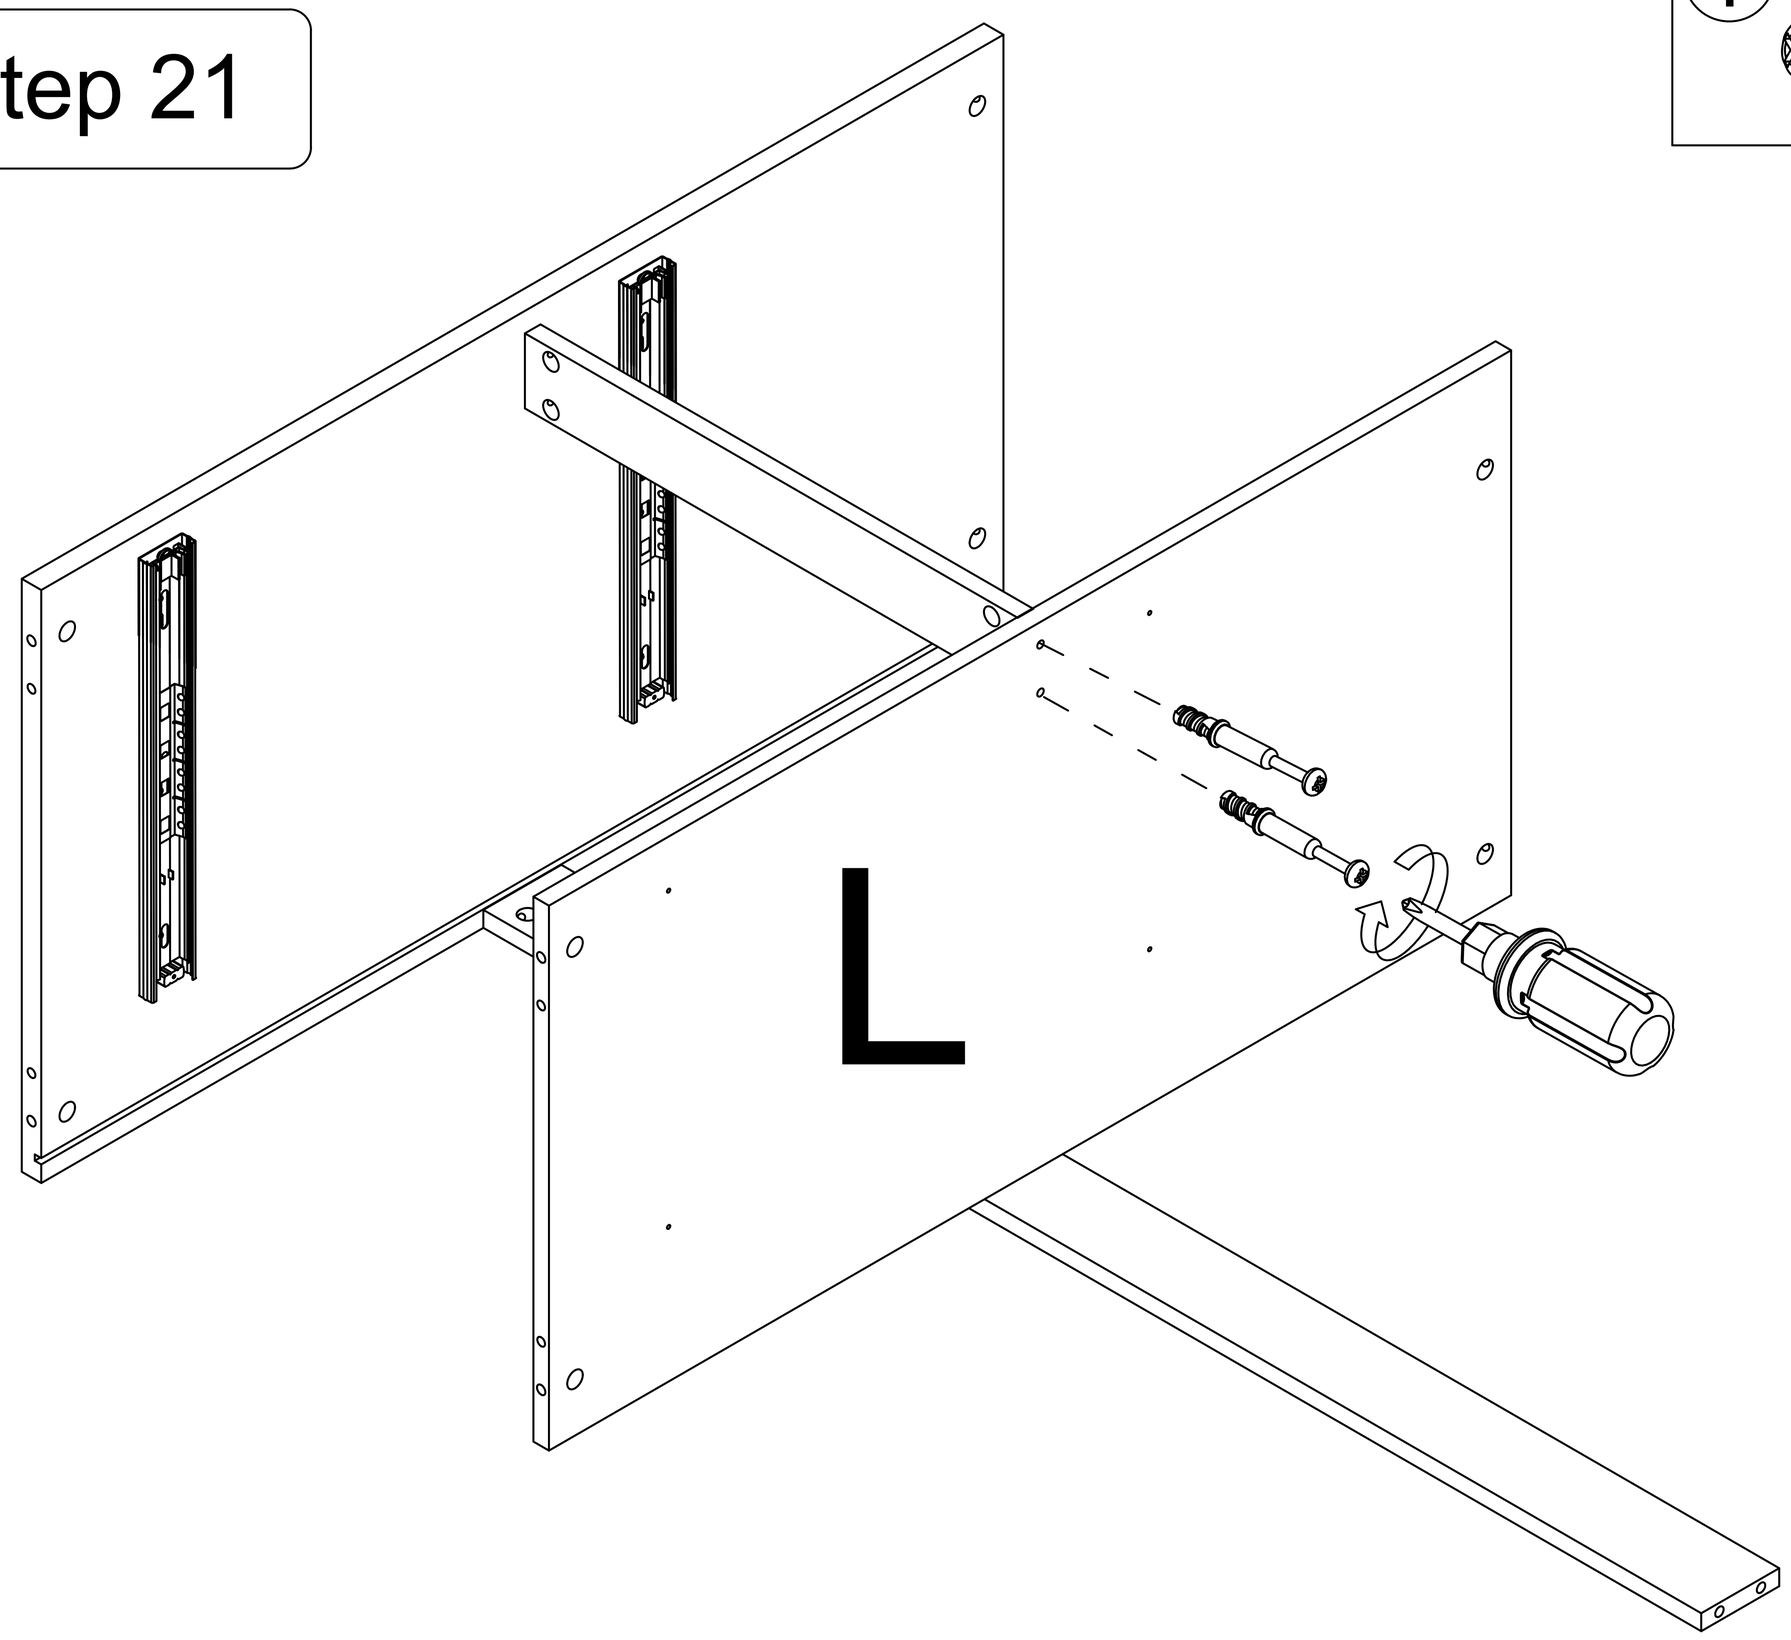



Step 22

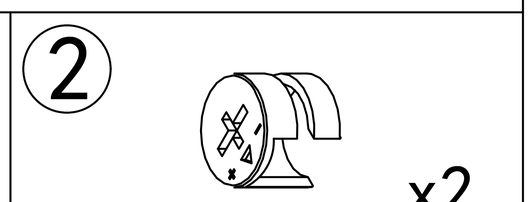


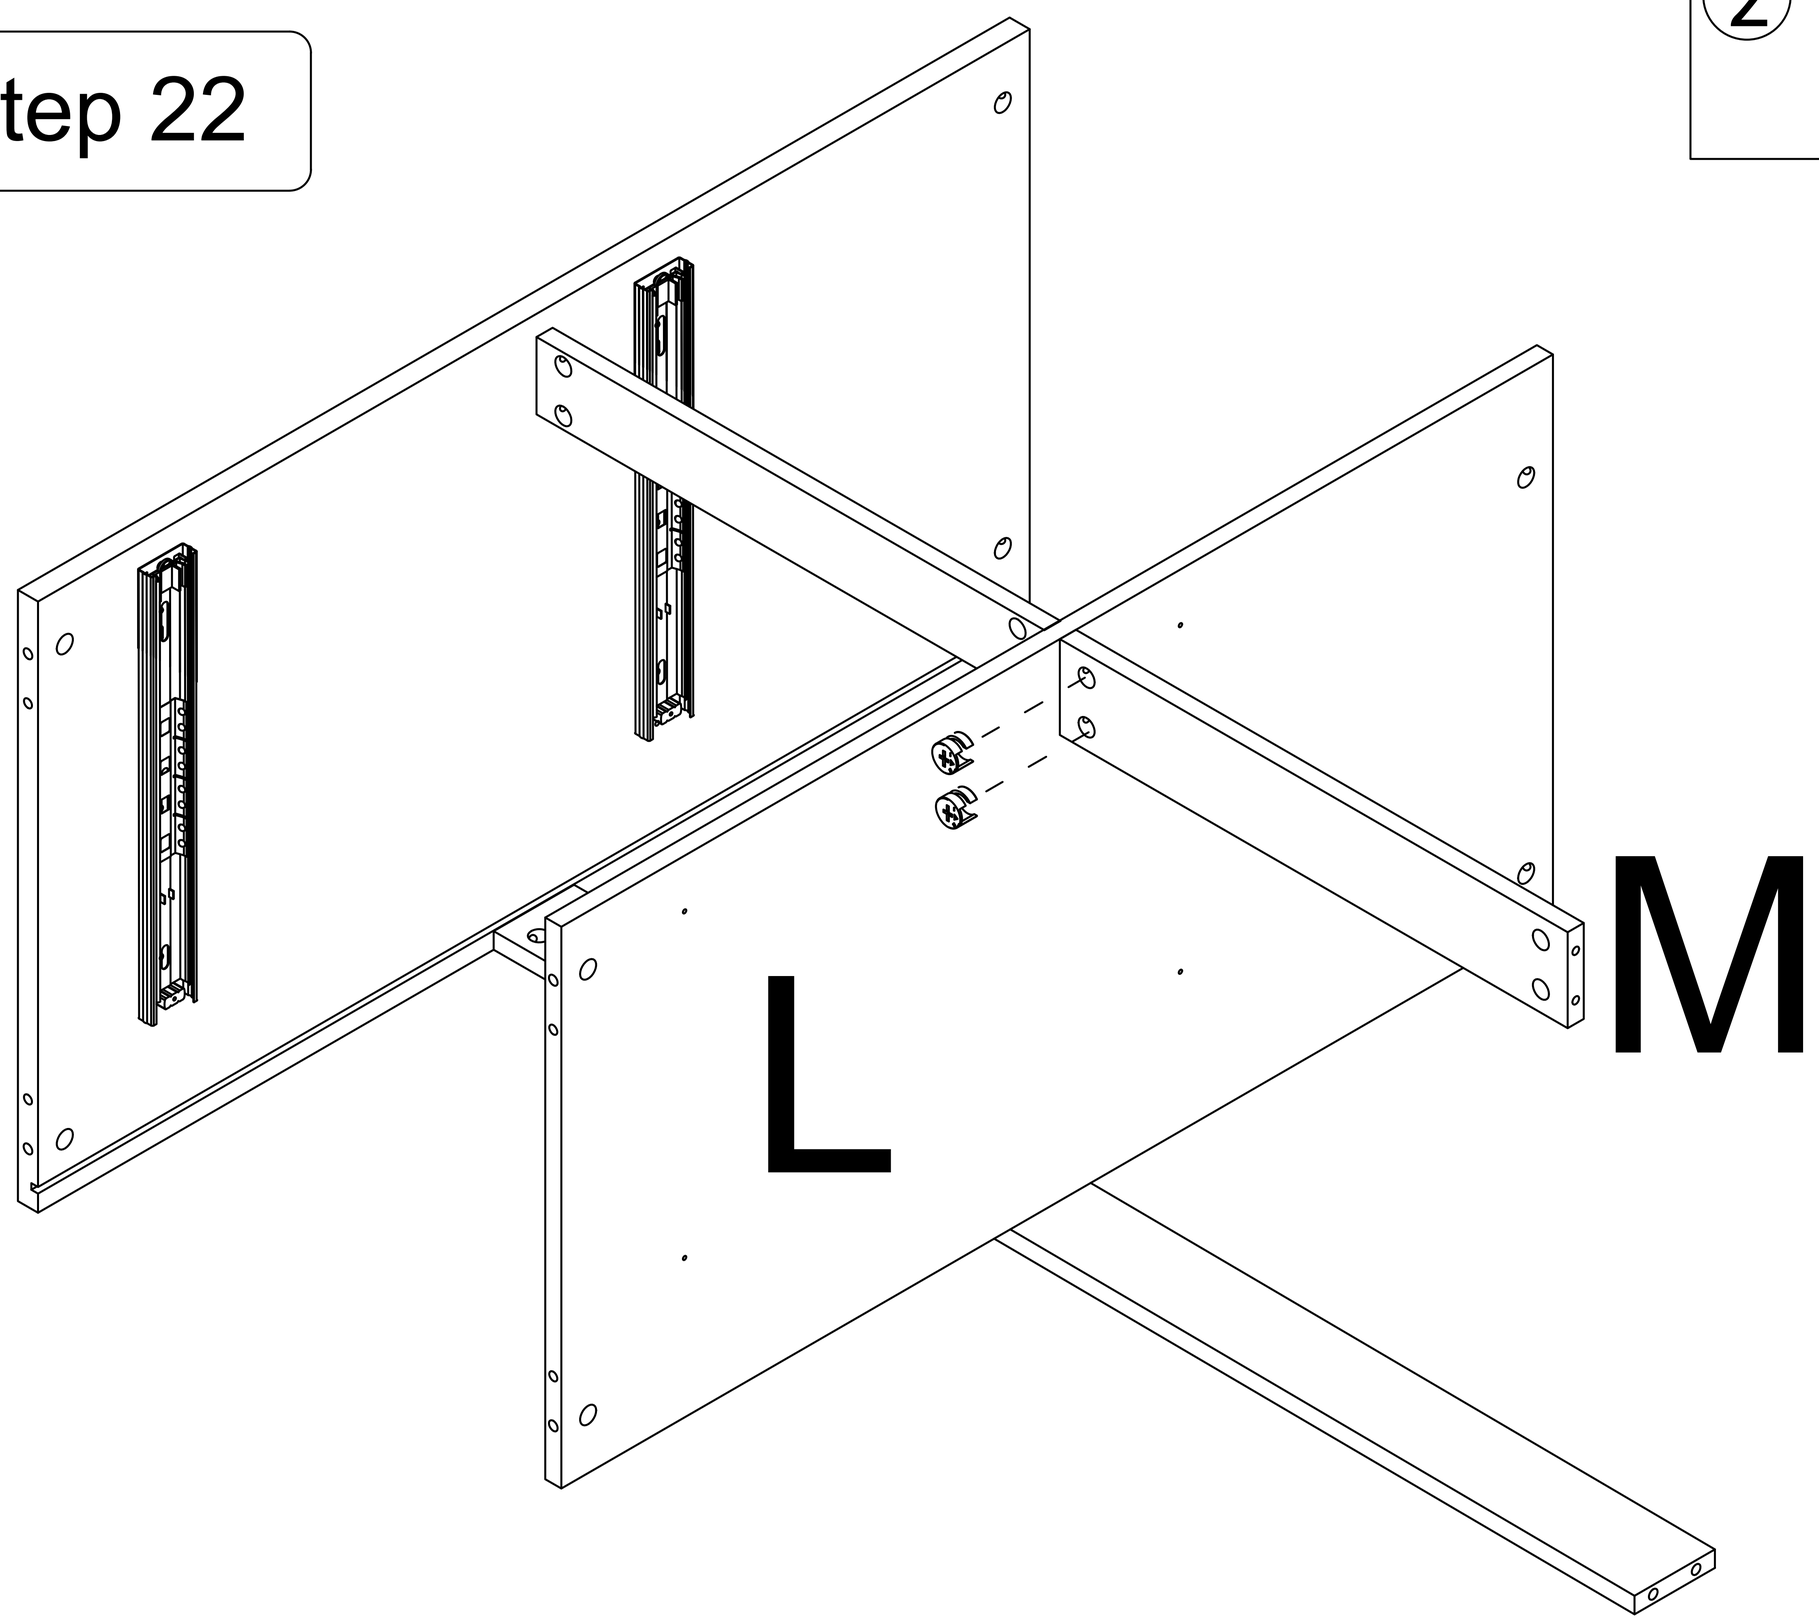


Step 23

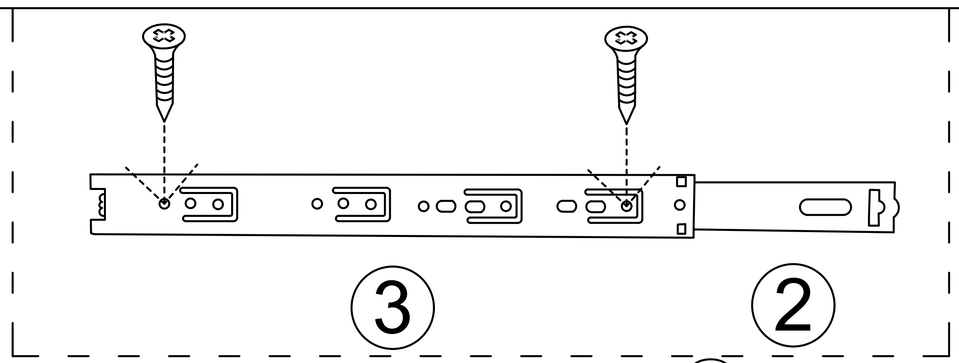


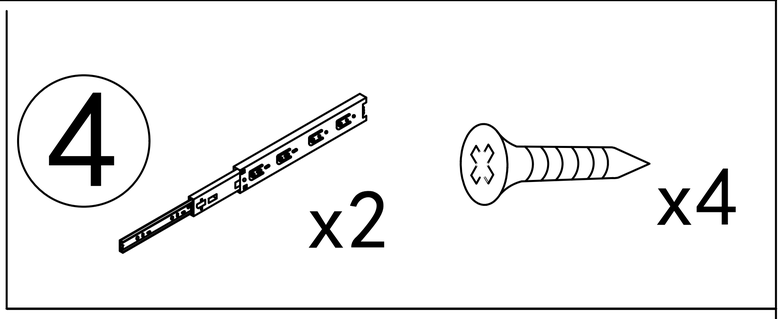


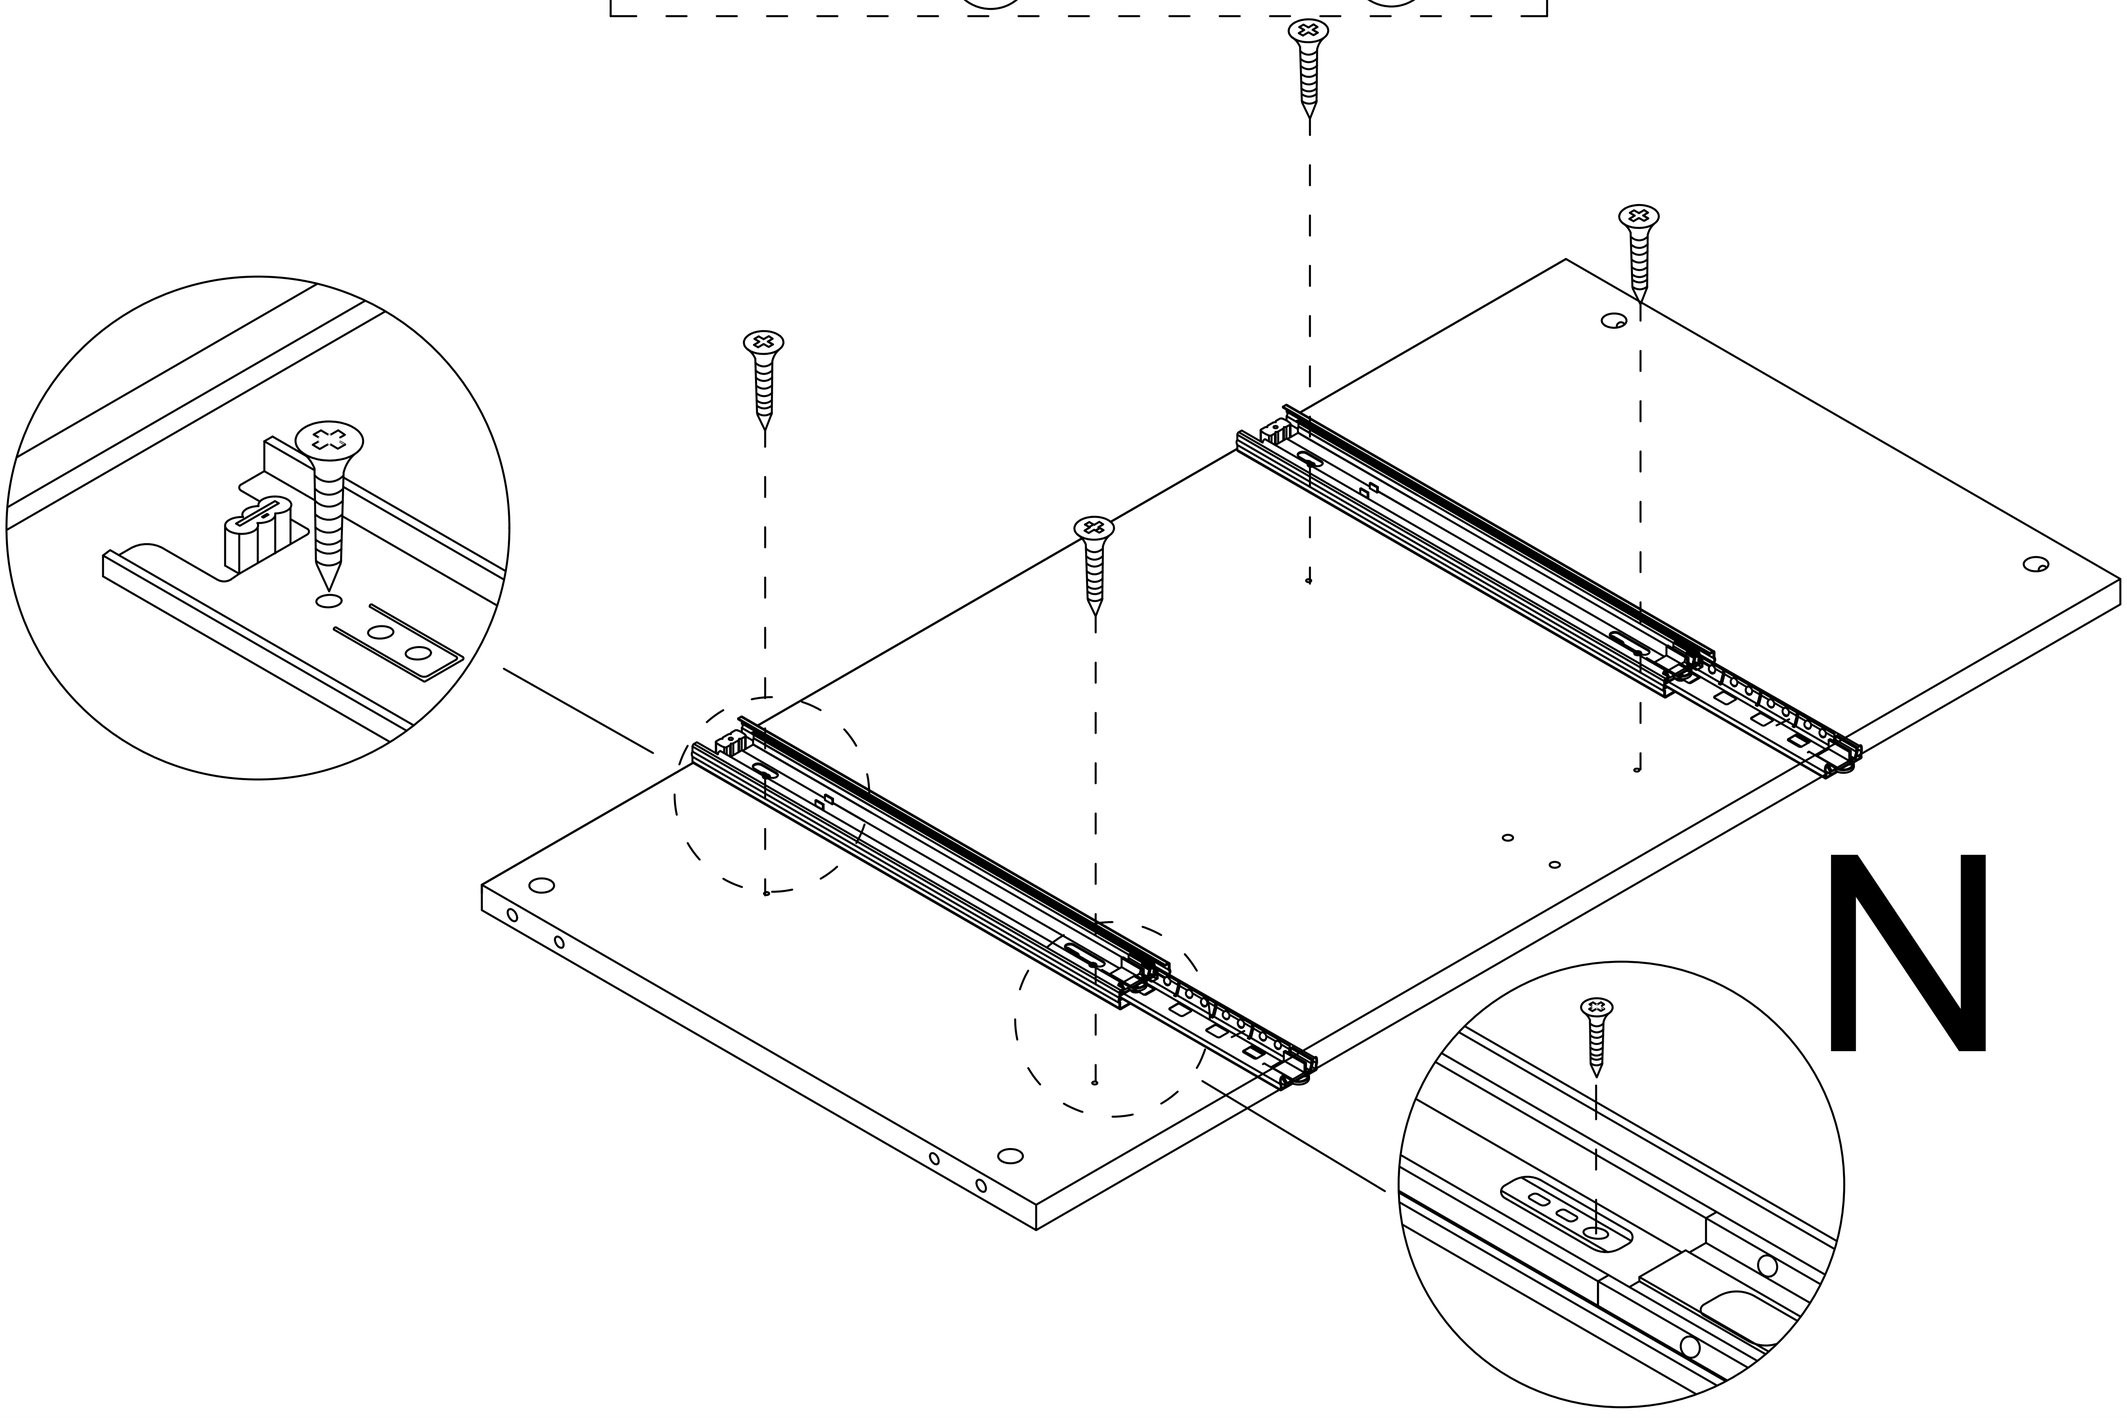

Step 24

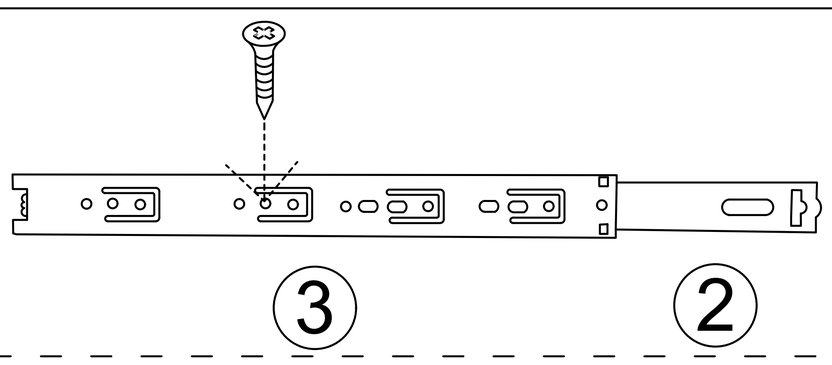


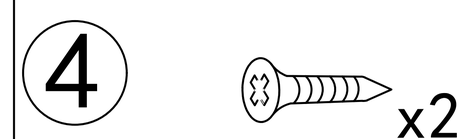

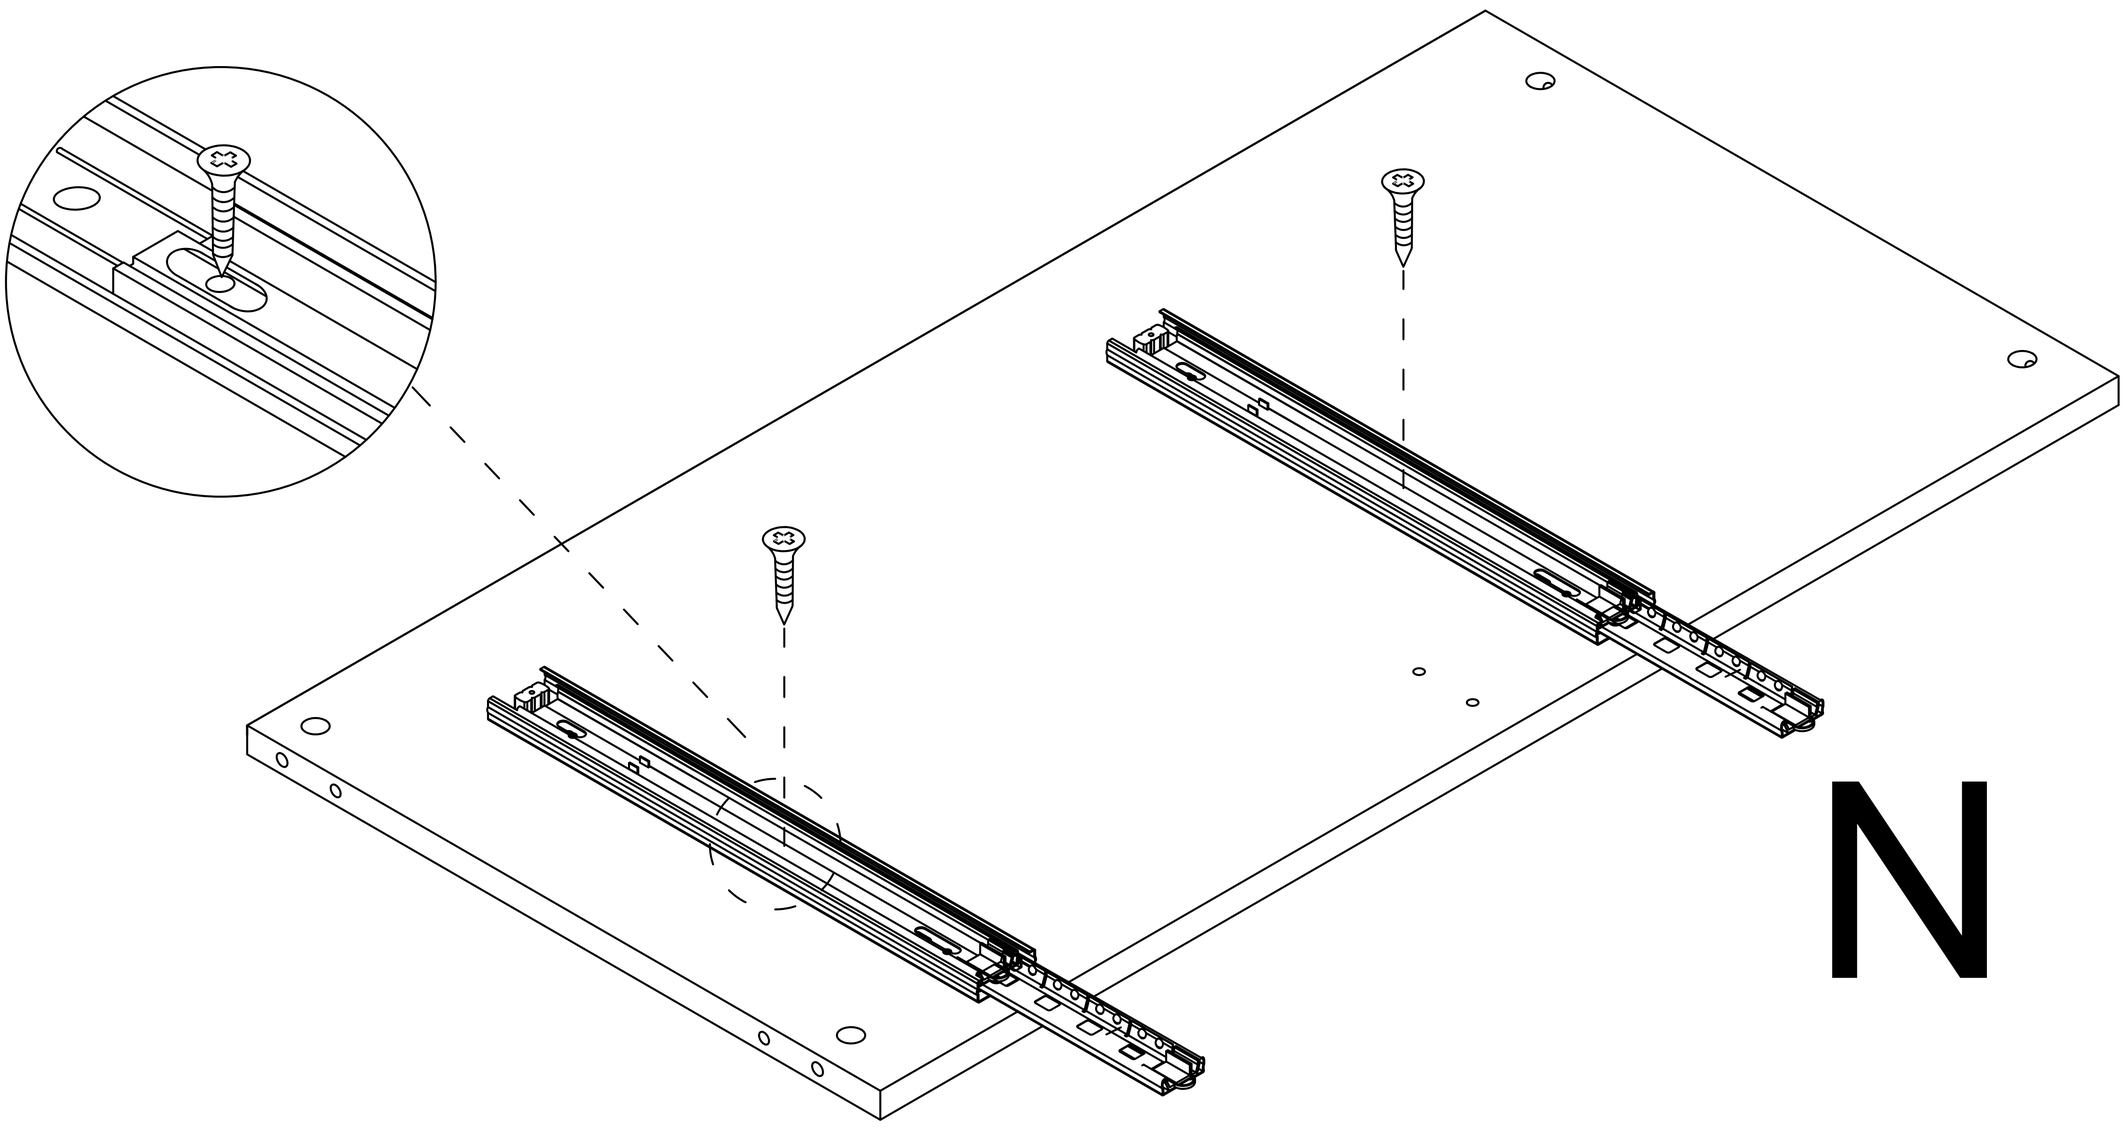


Step 25

1




x2

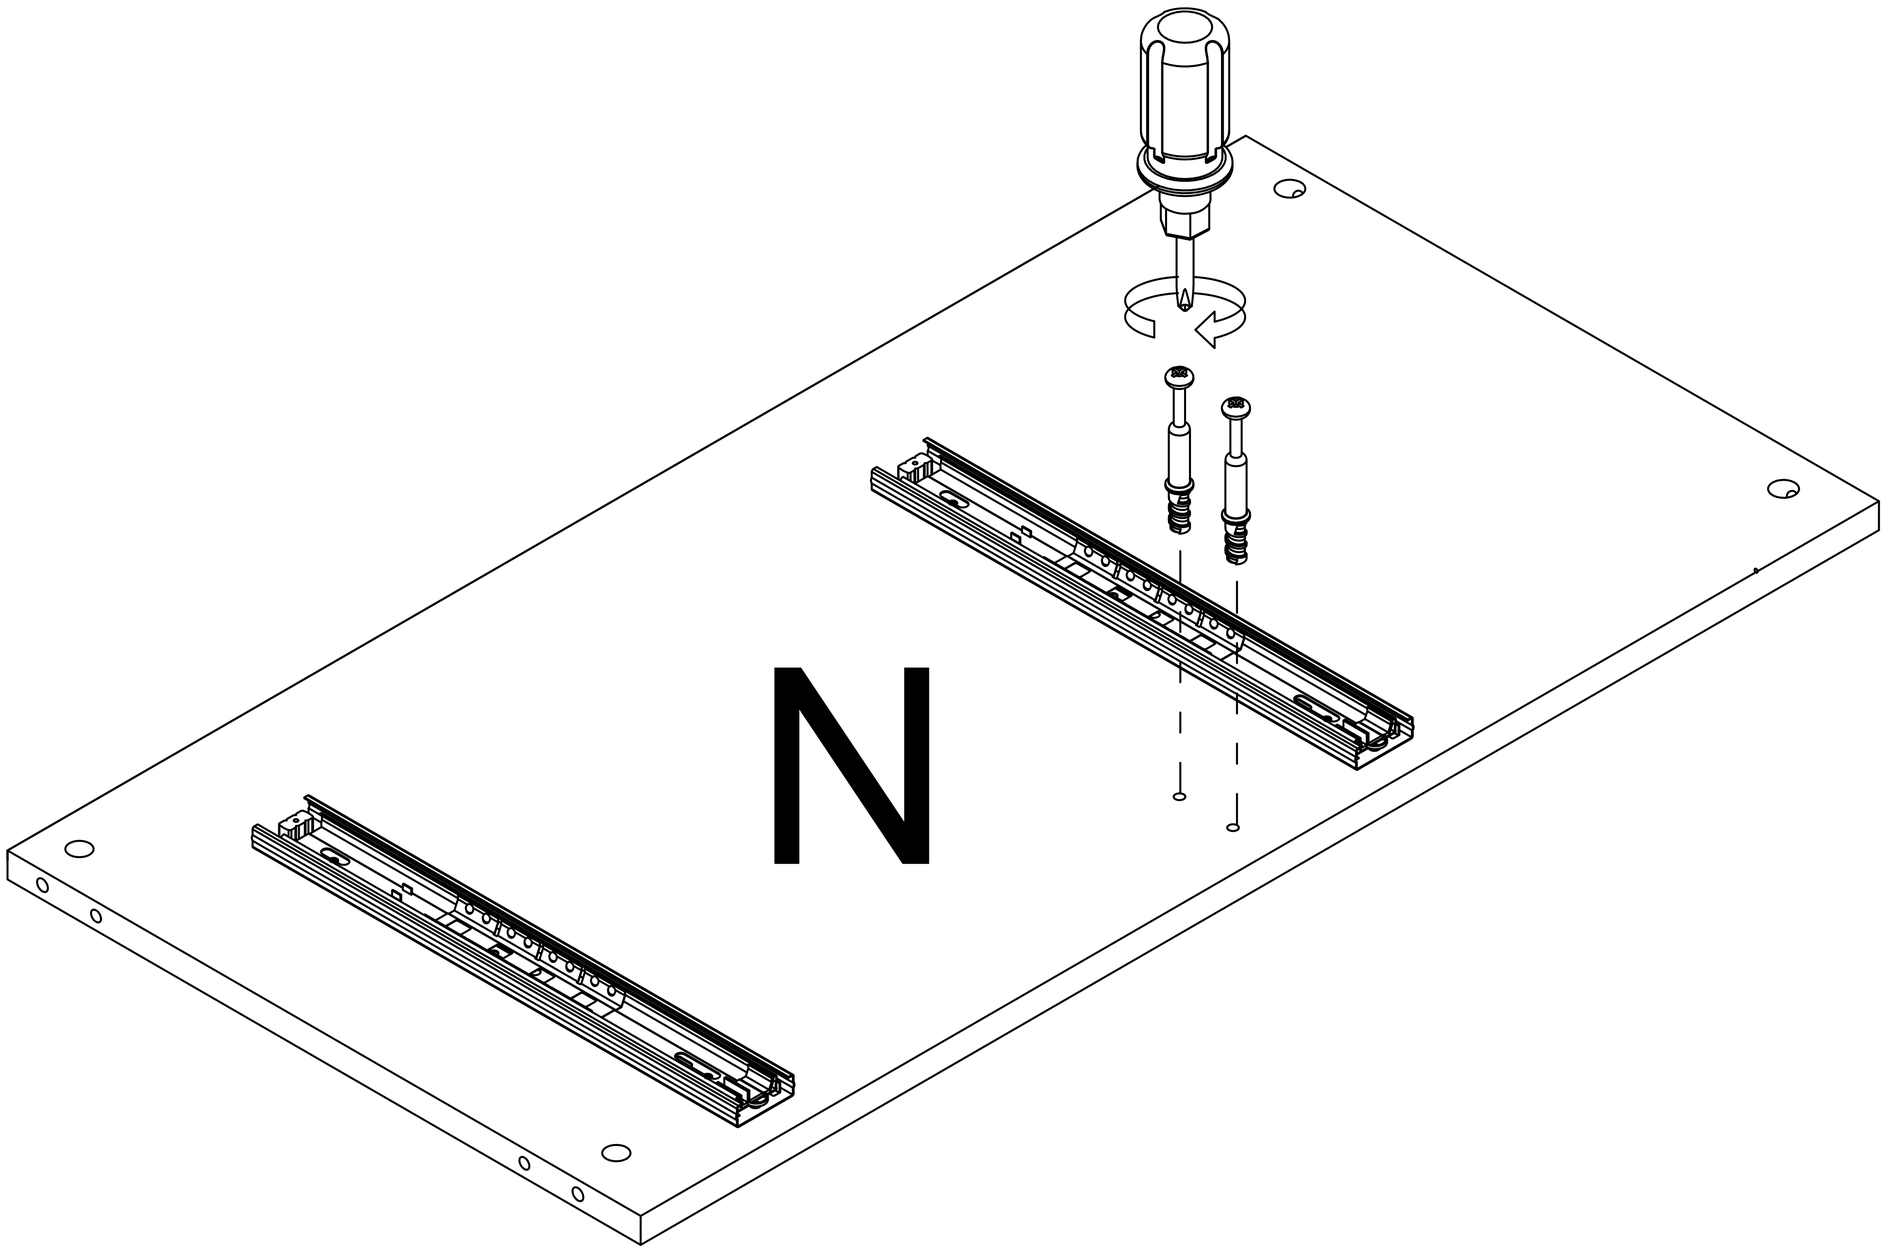


Step 26


2

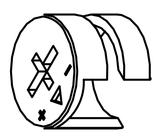

x2

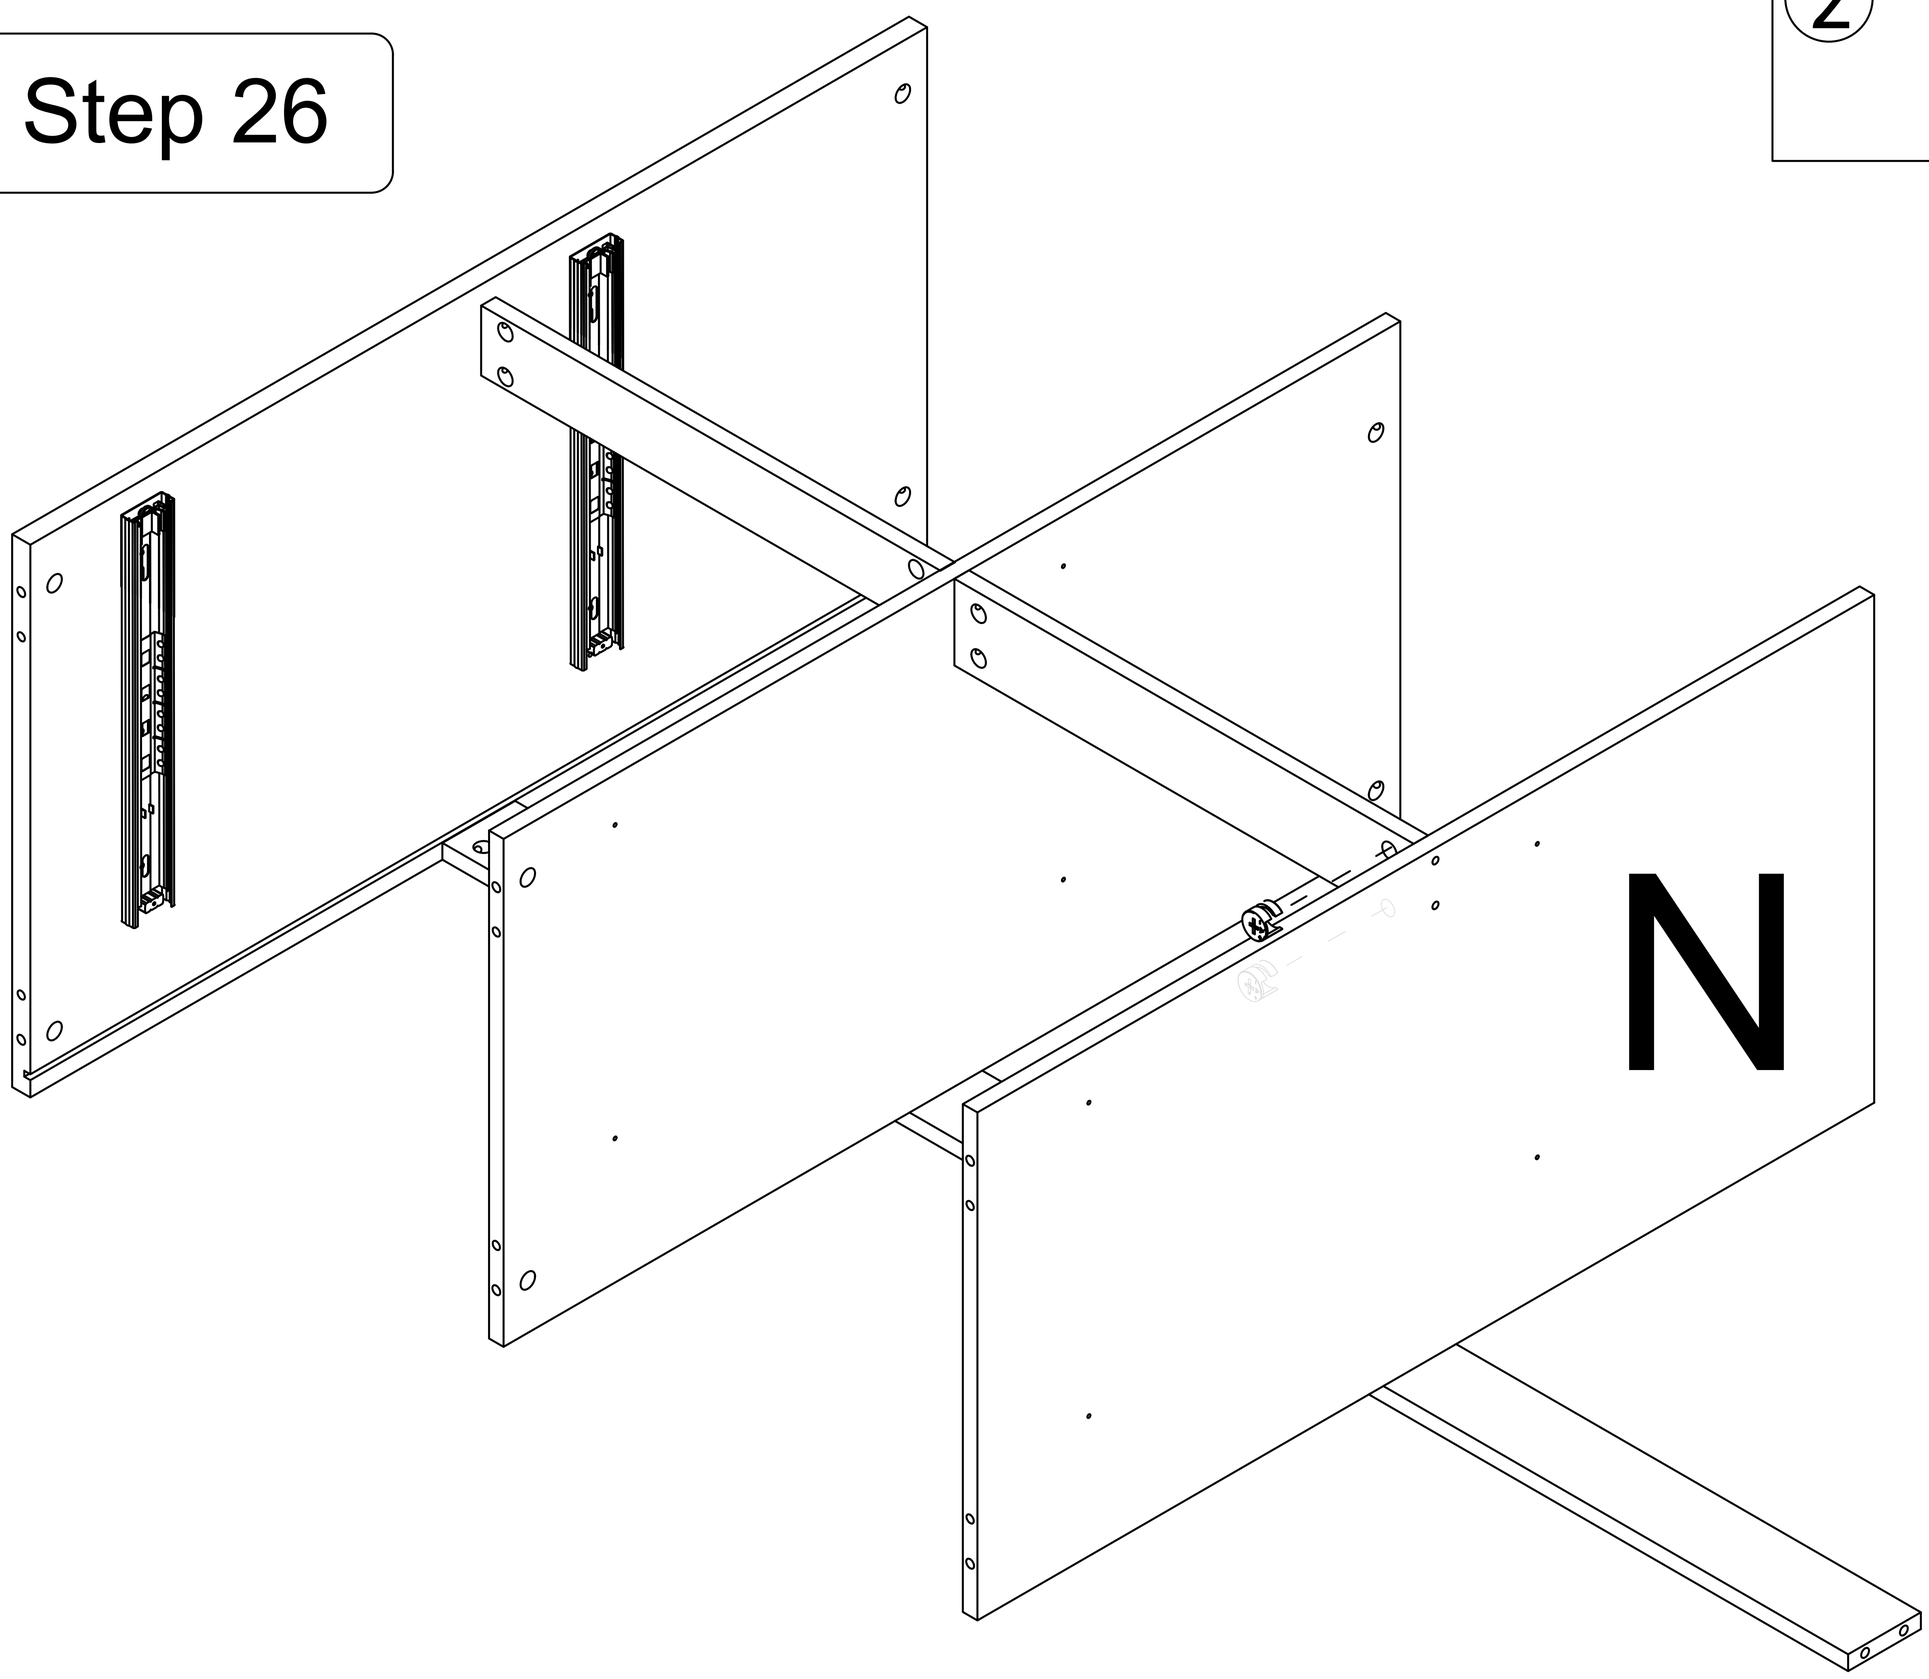


Step 27

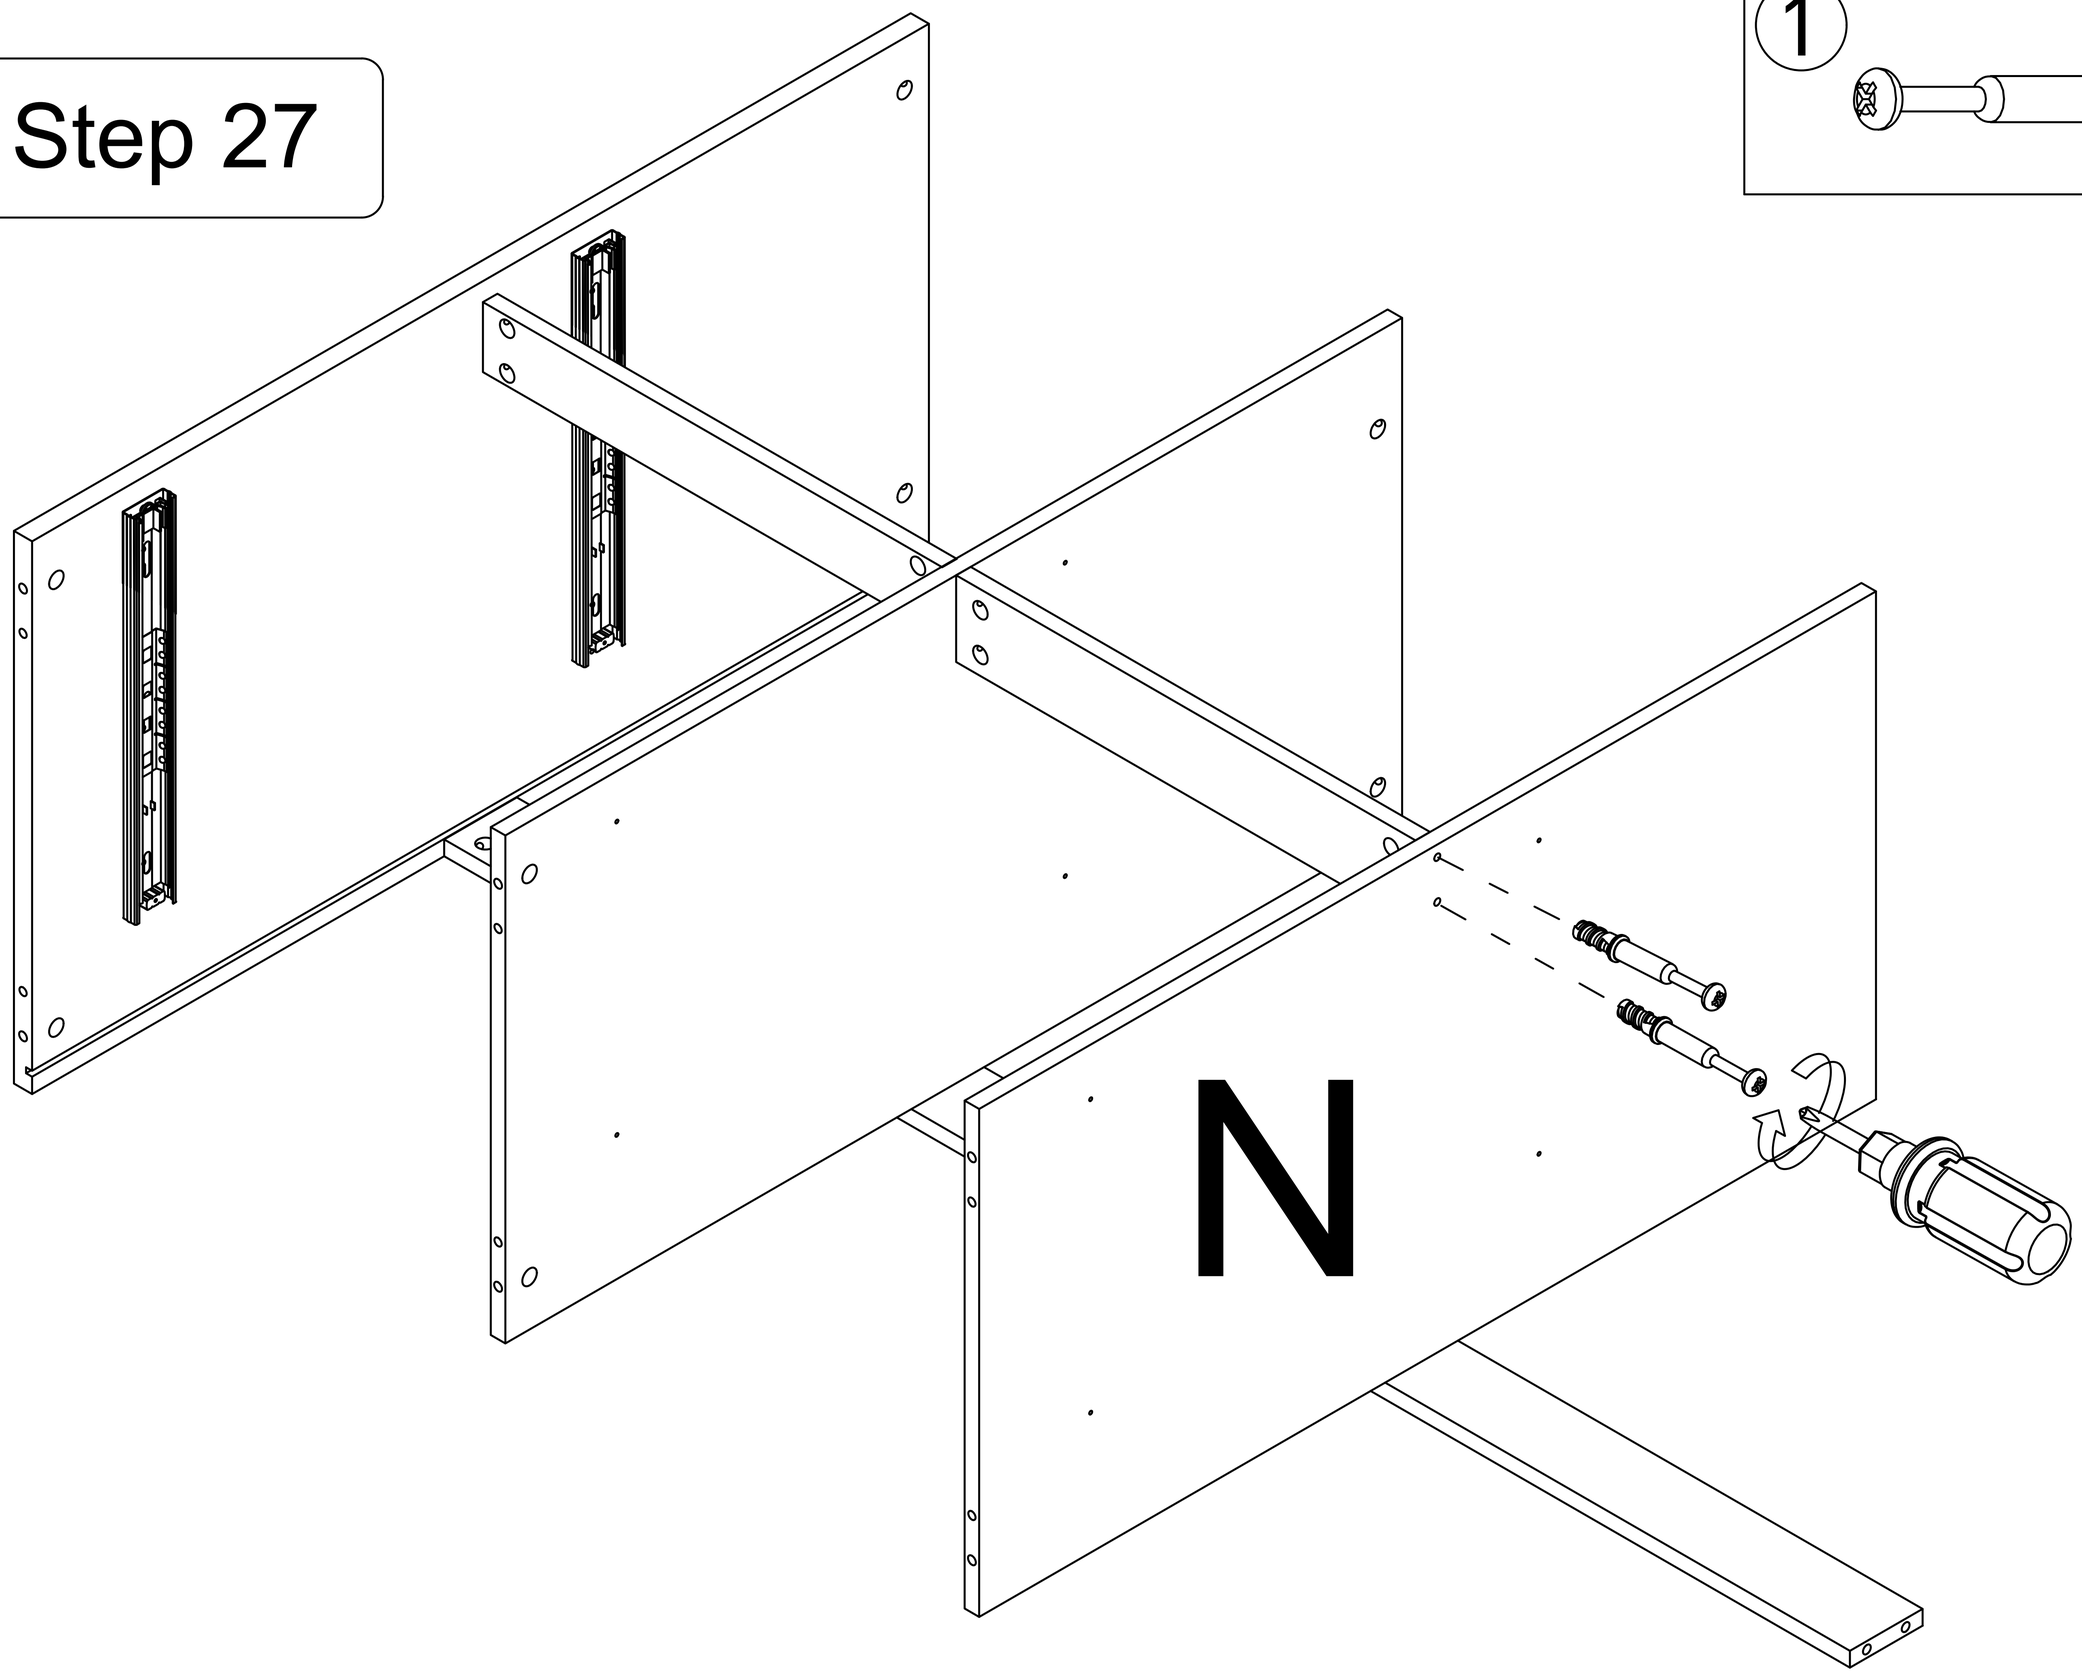

1

x2


Step 28

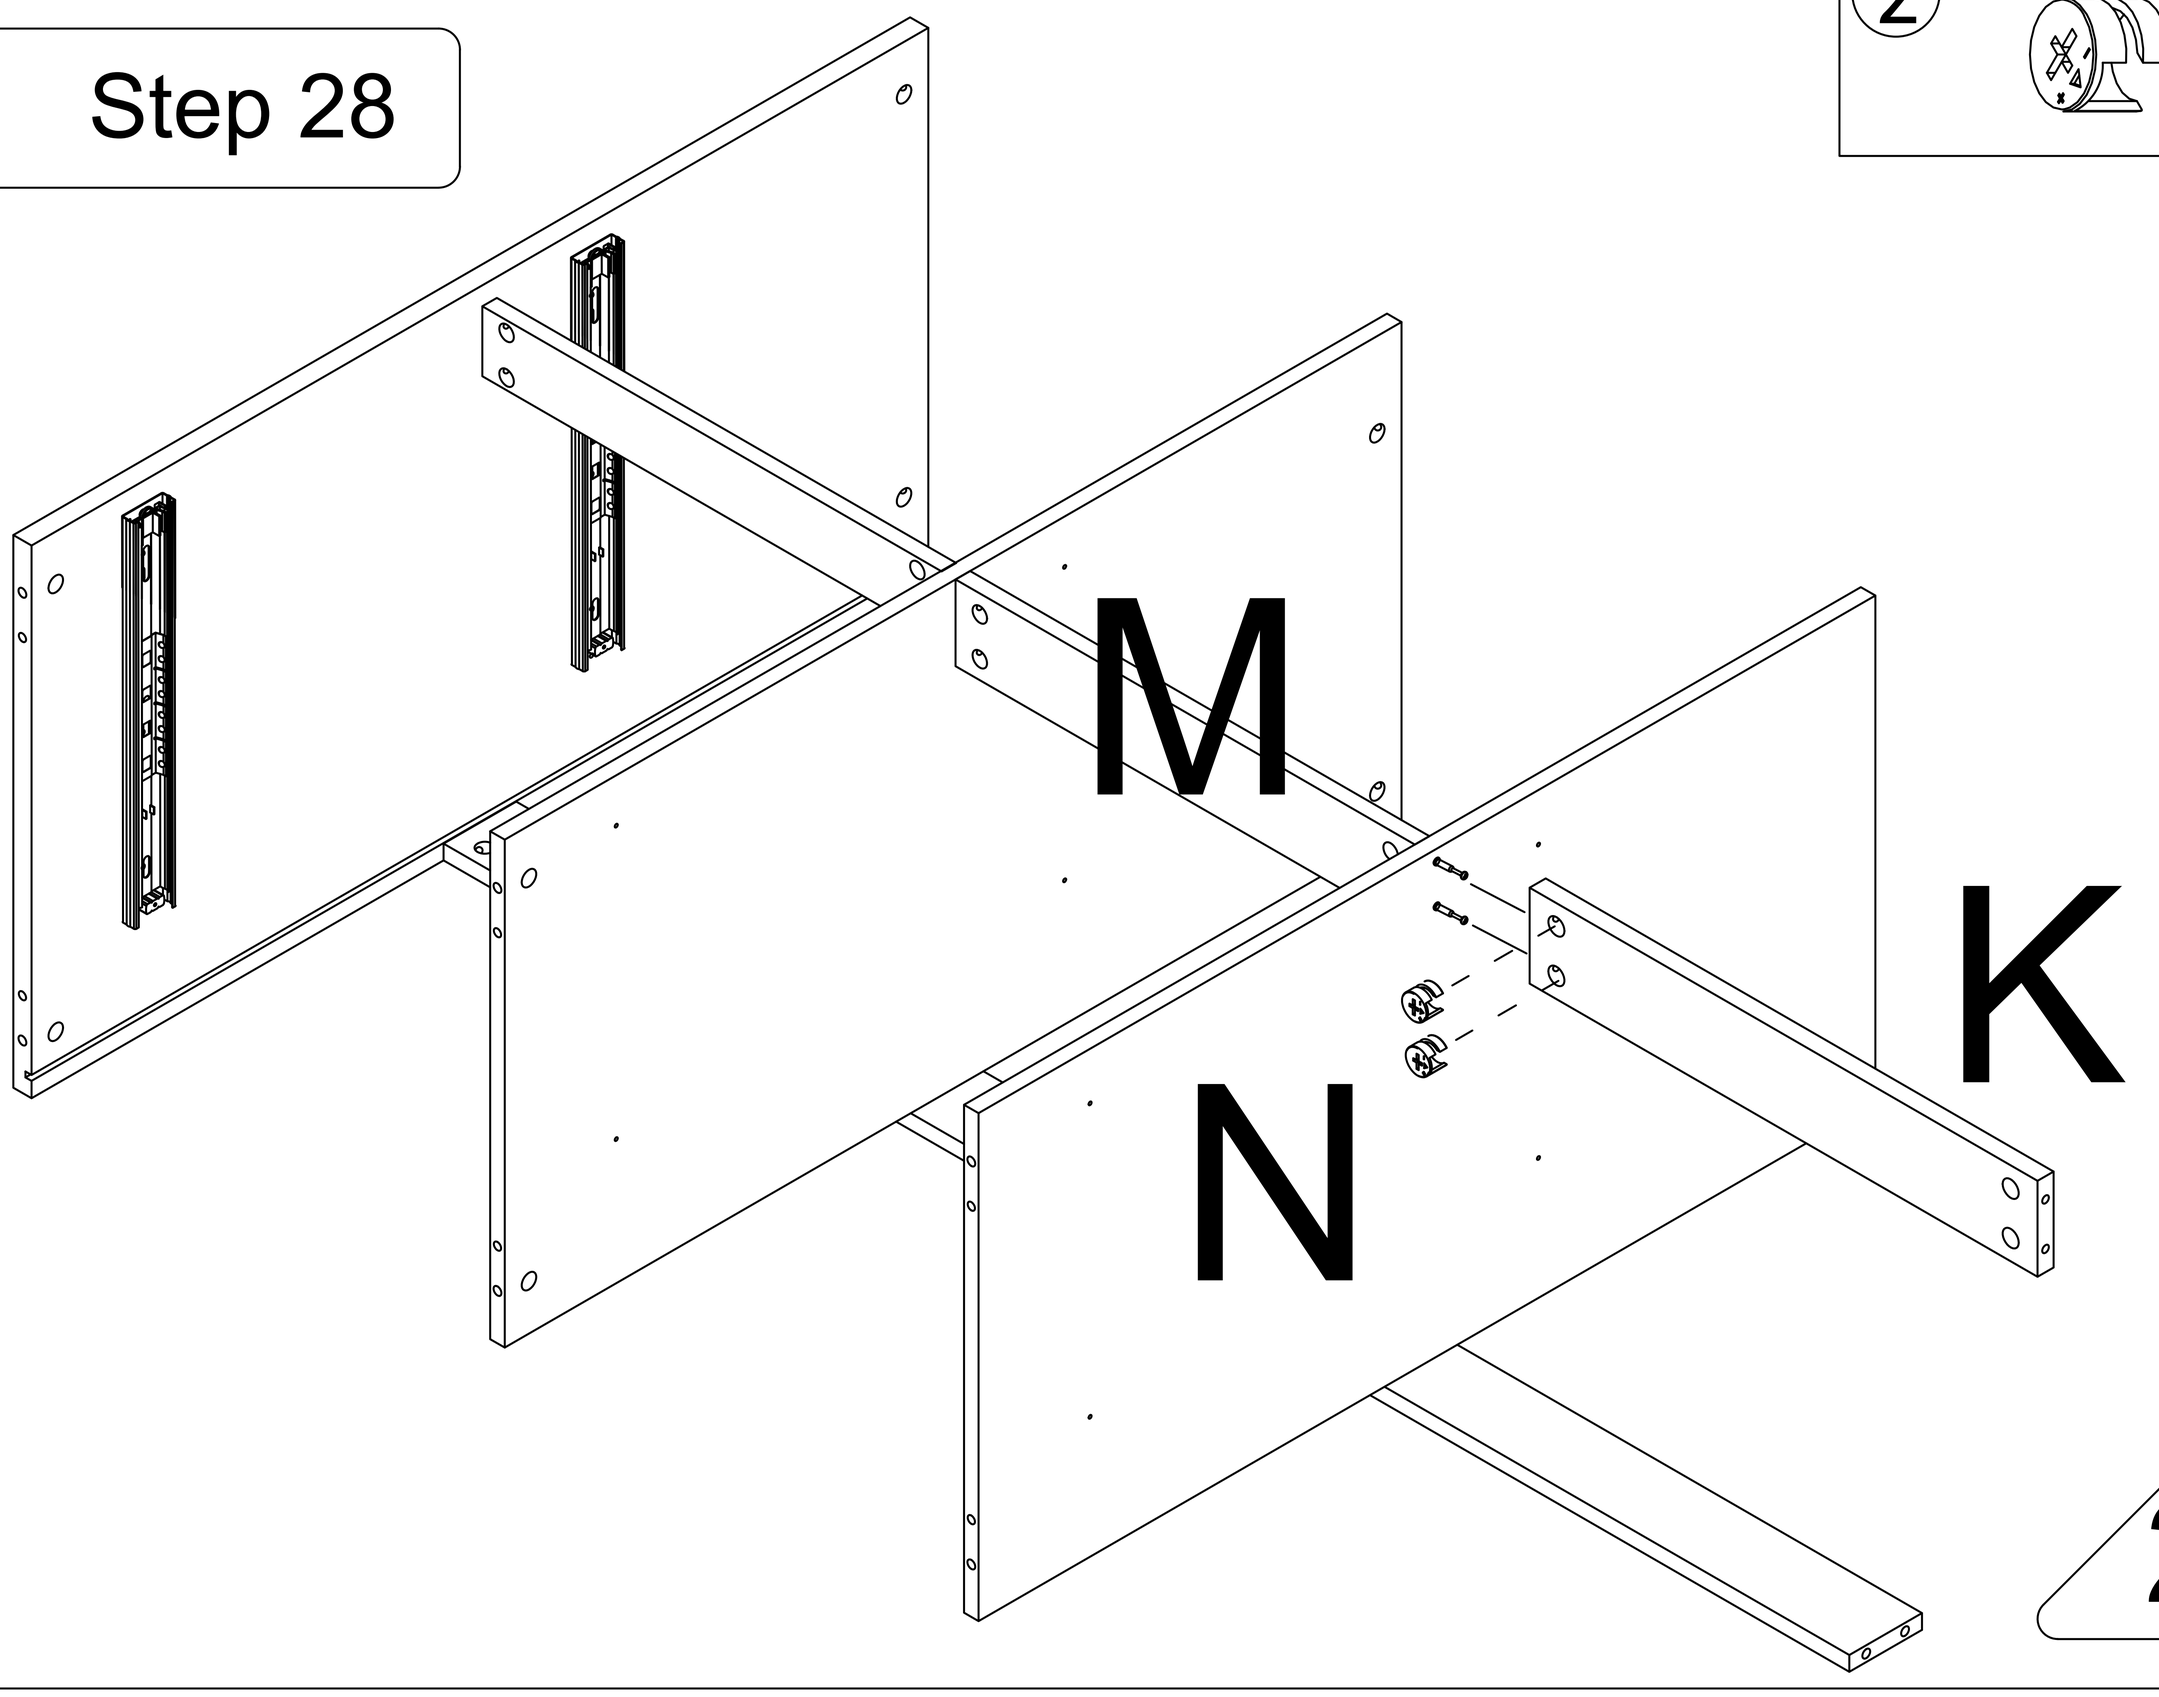



2

x2

Step 29

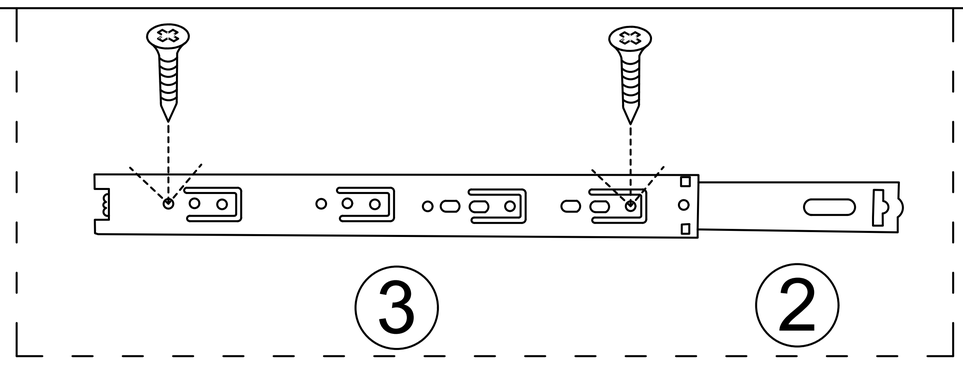


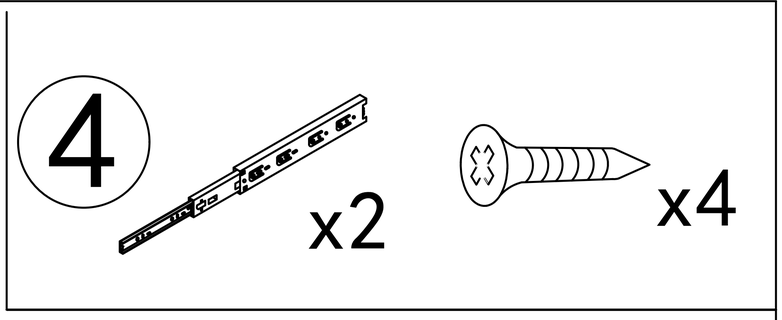


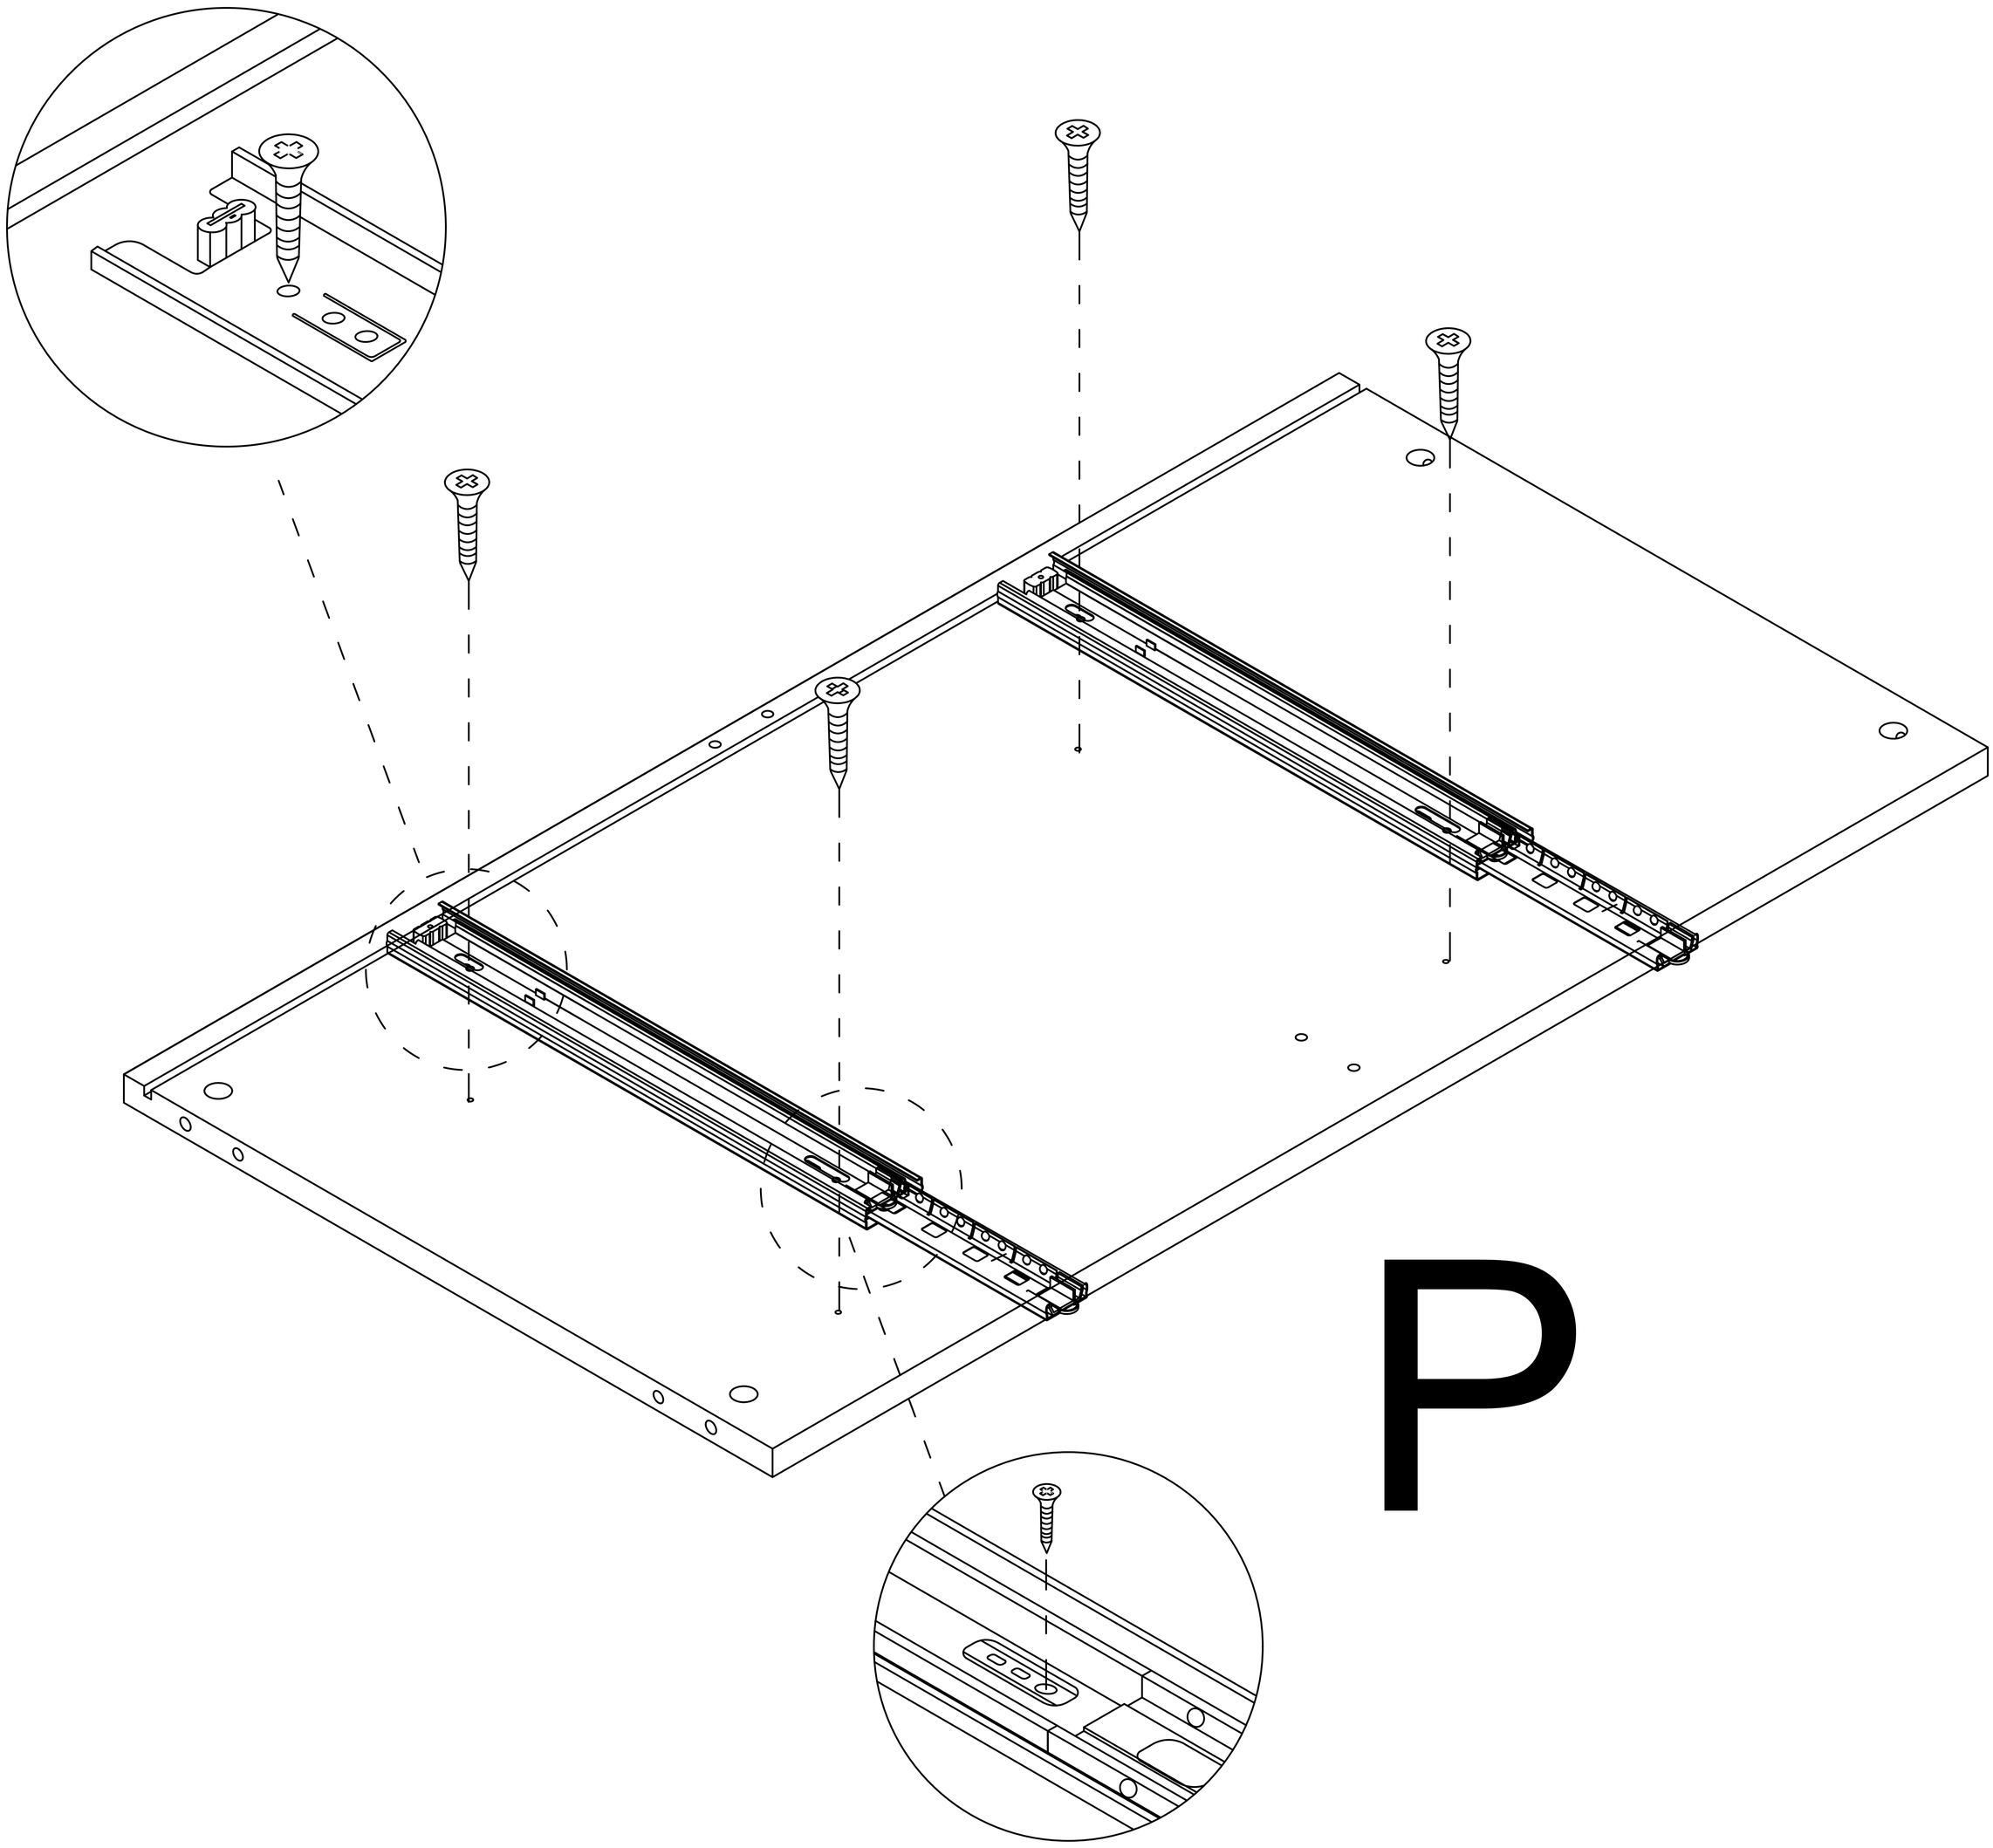


P


Step 30

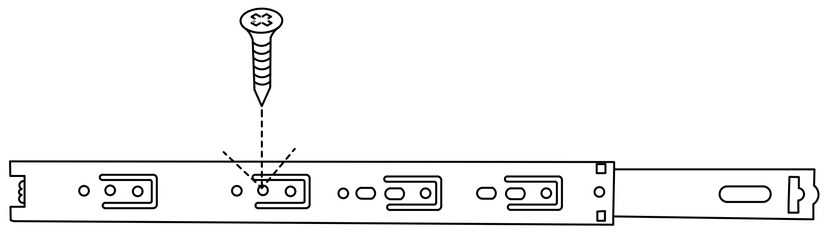


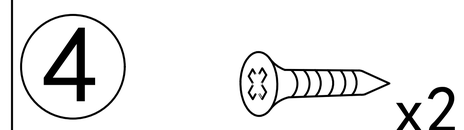

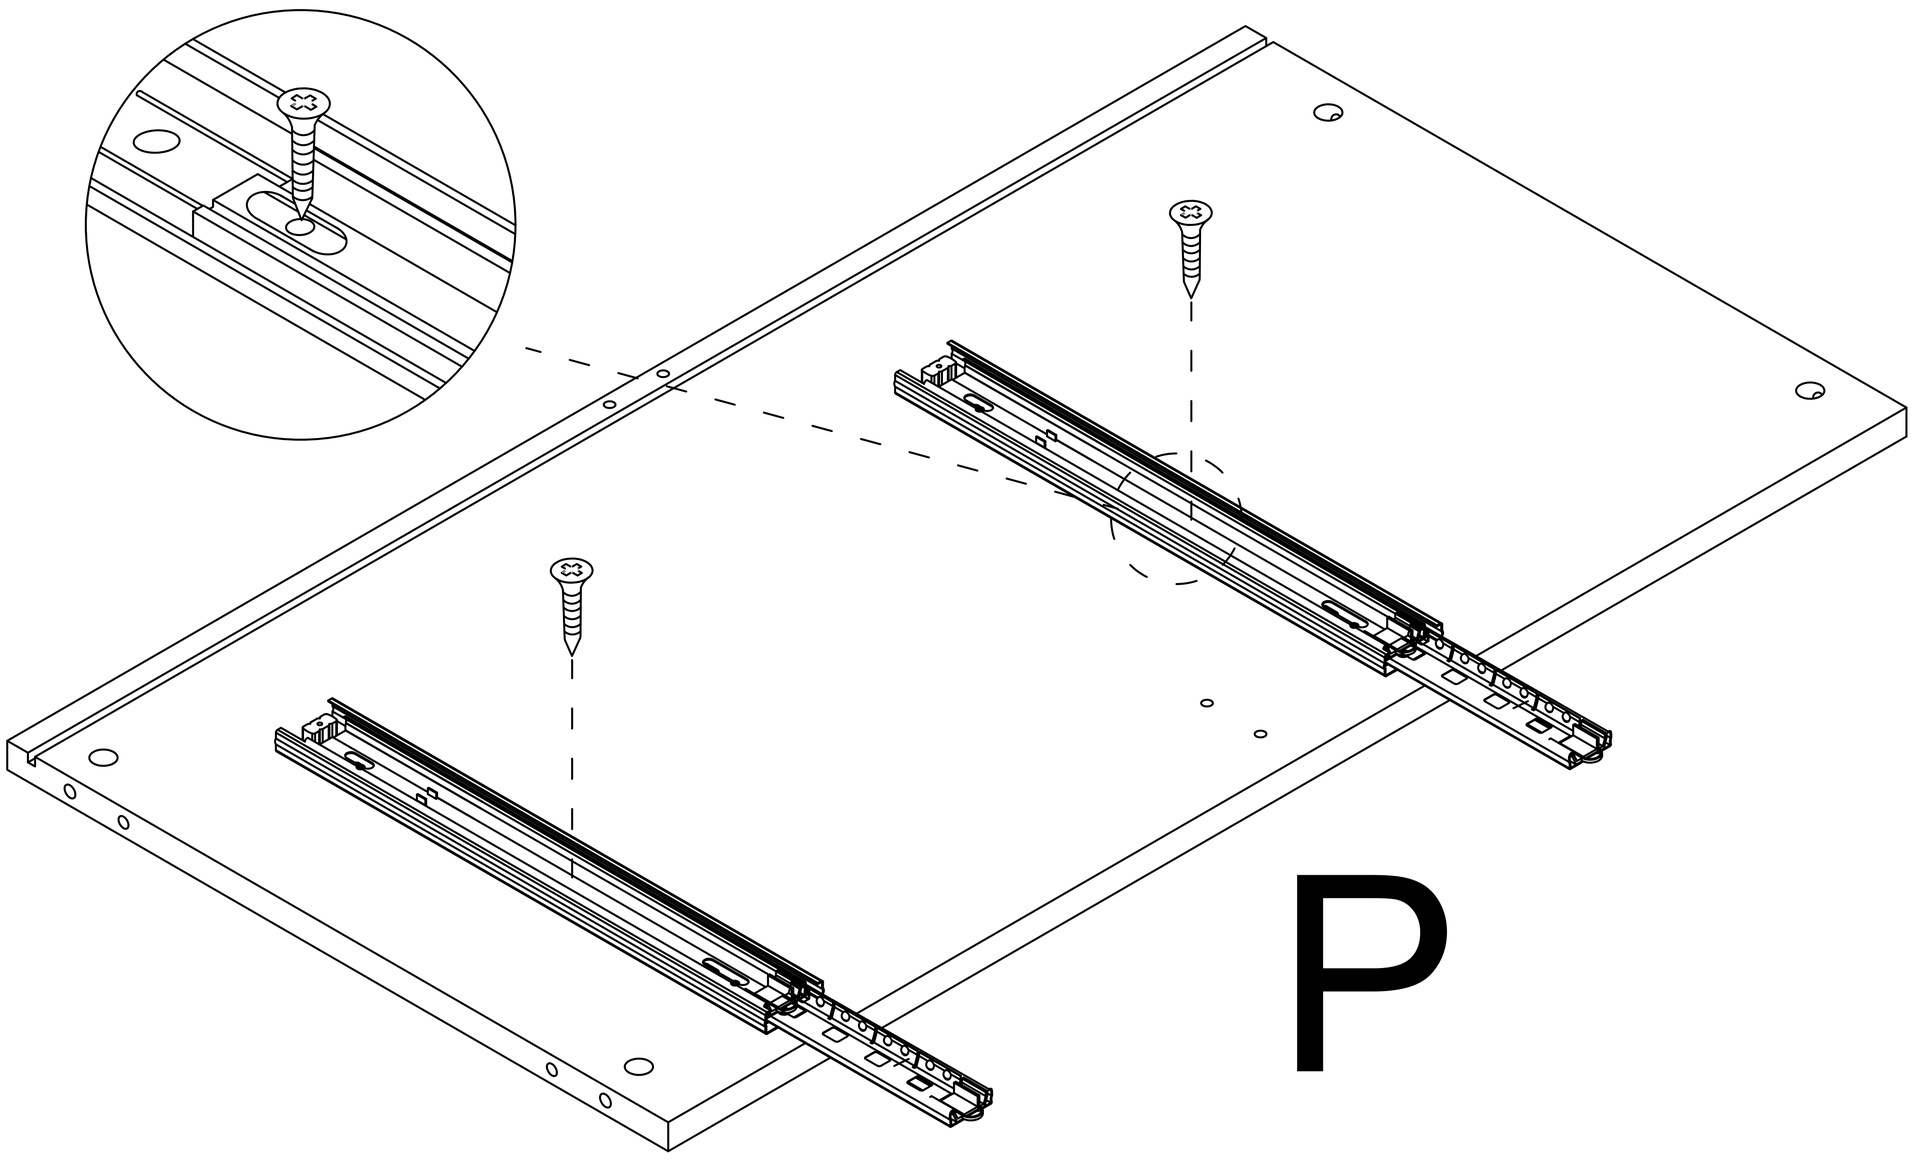

Step 31

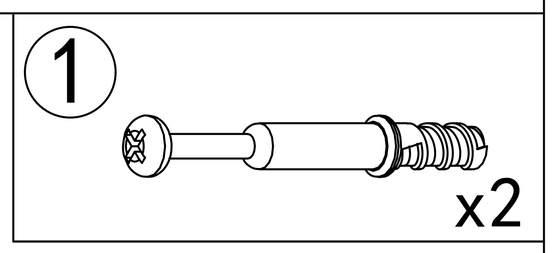


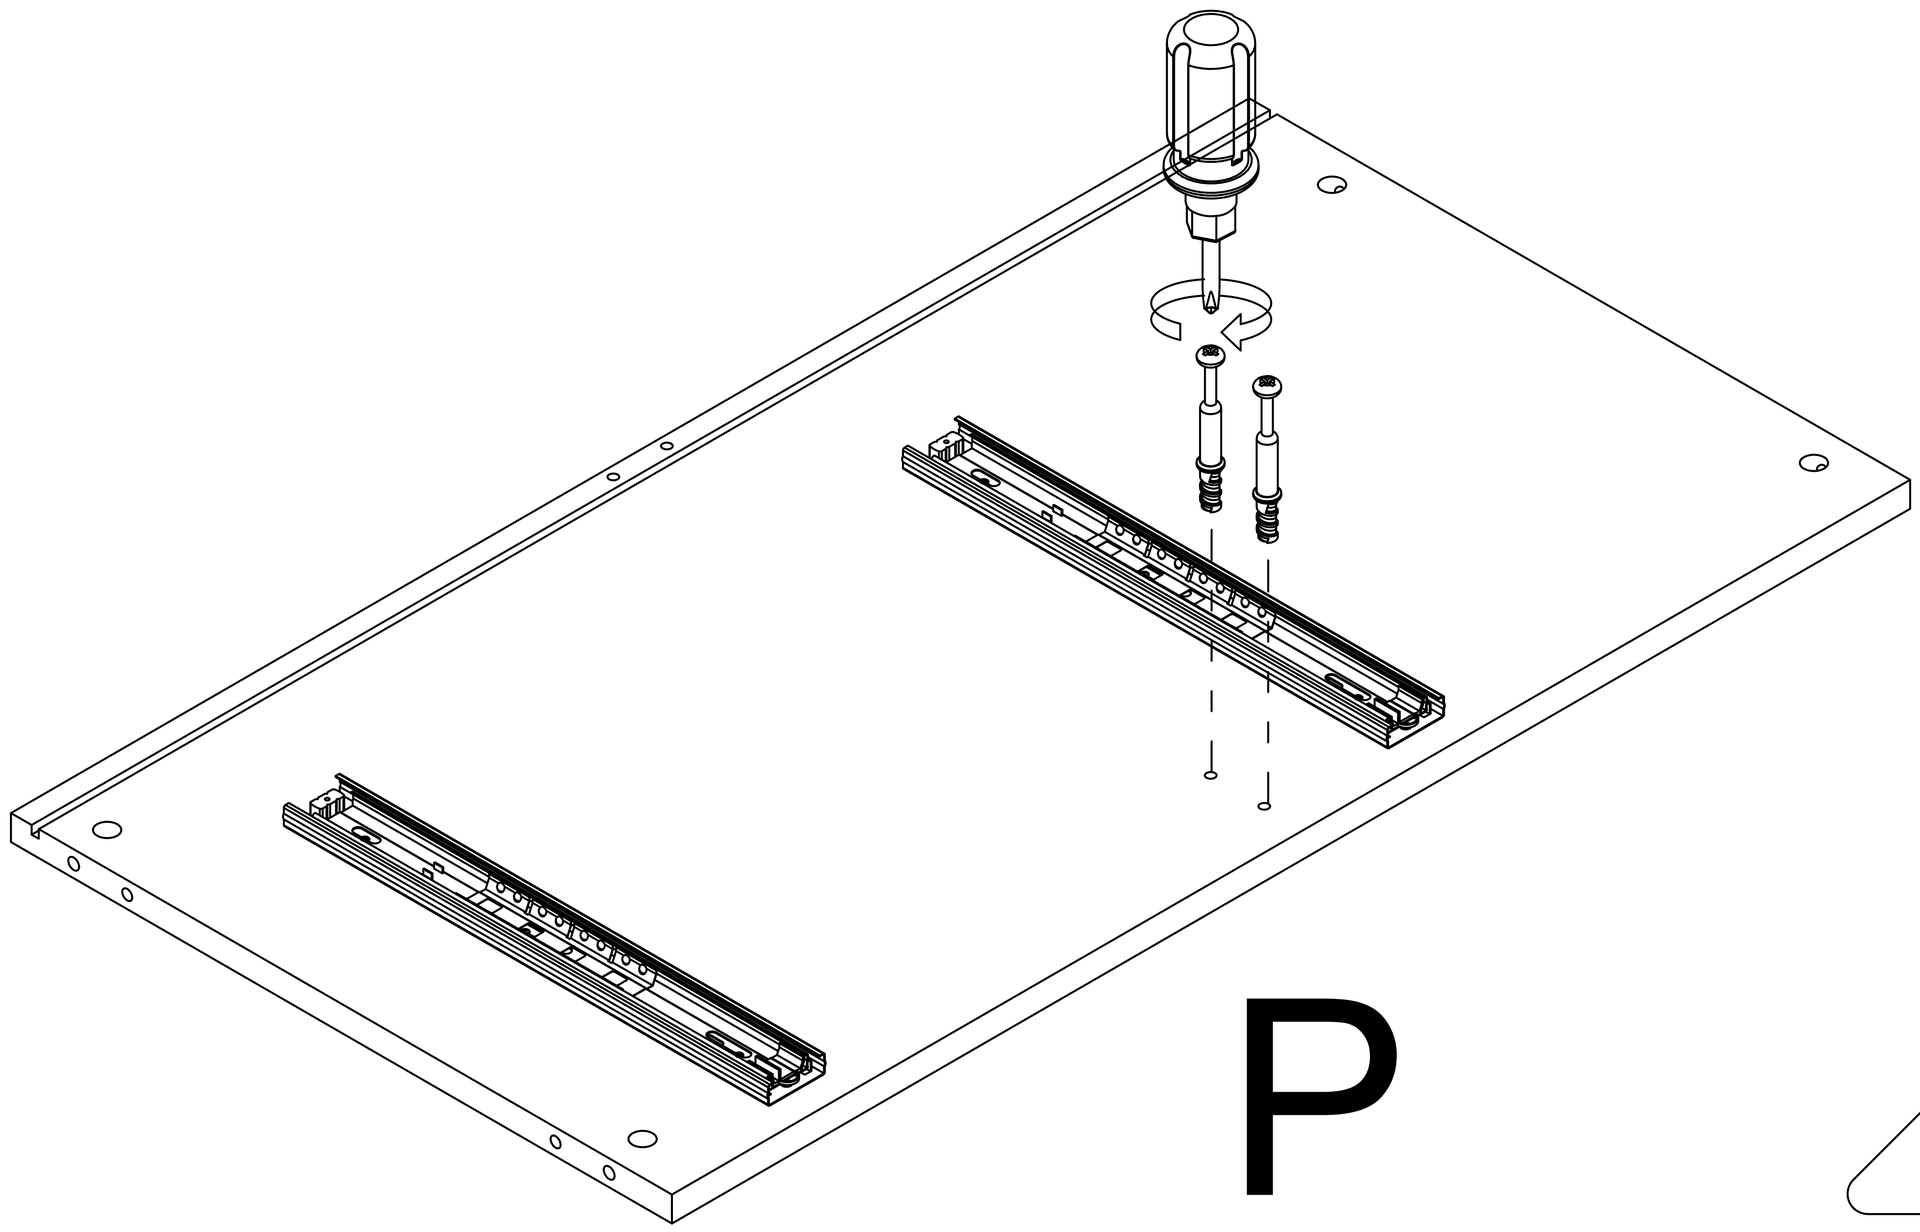

Step 32


2 x2

8 x2

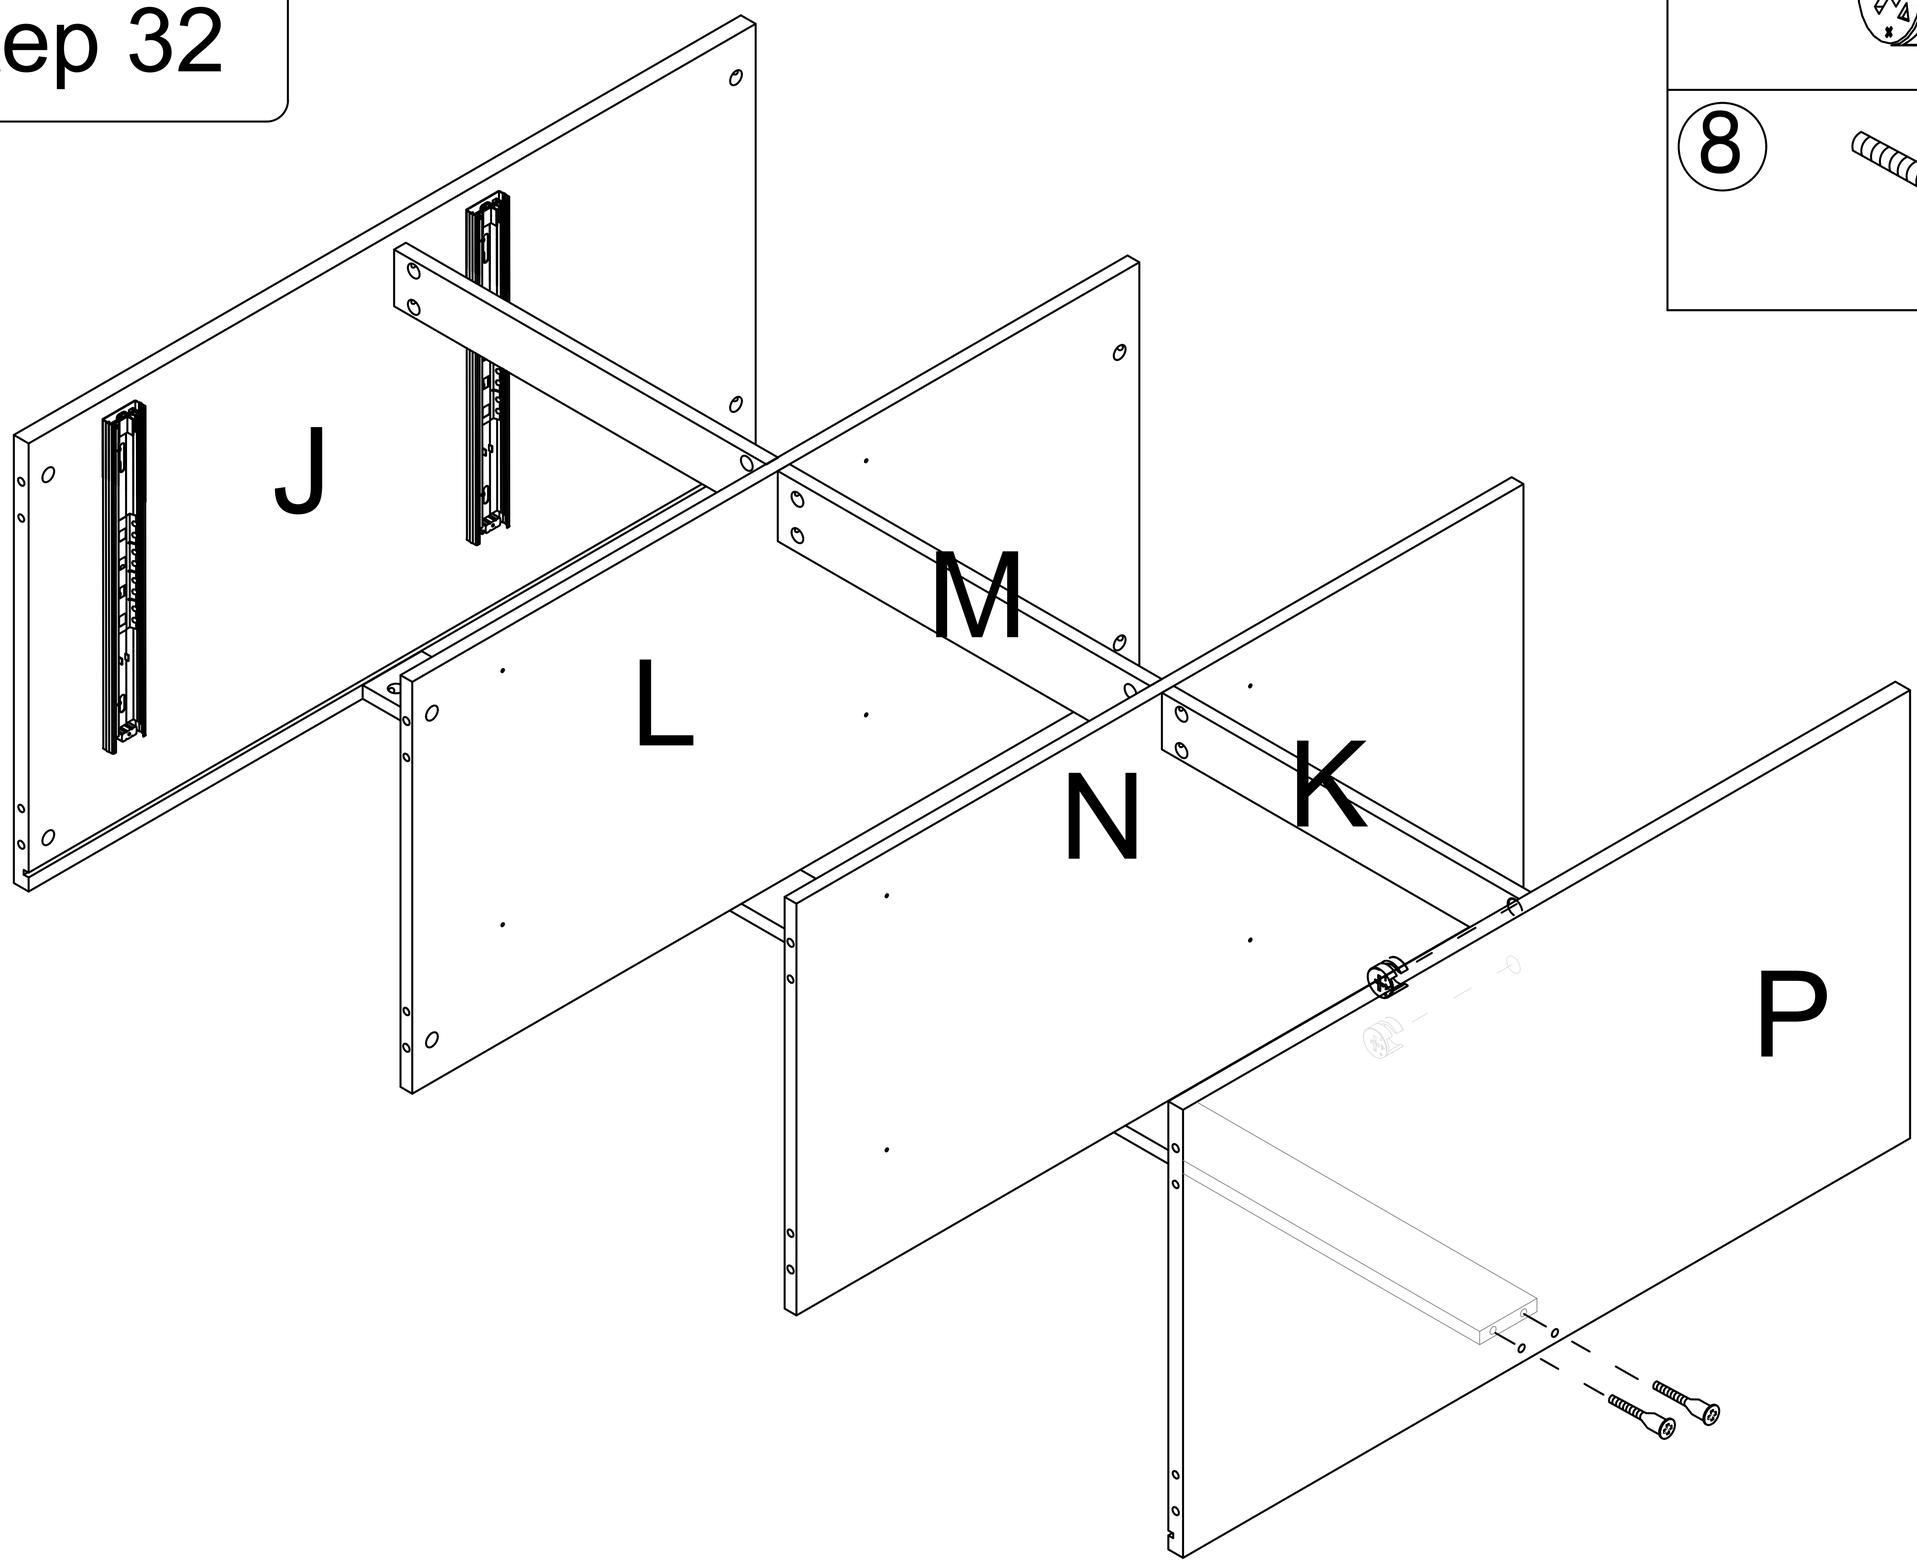


Step 33

3 x8

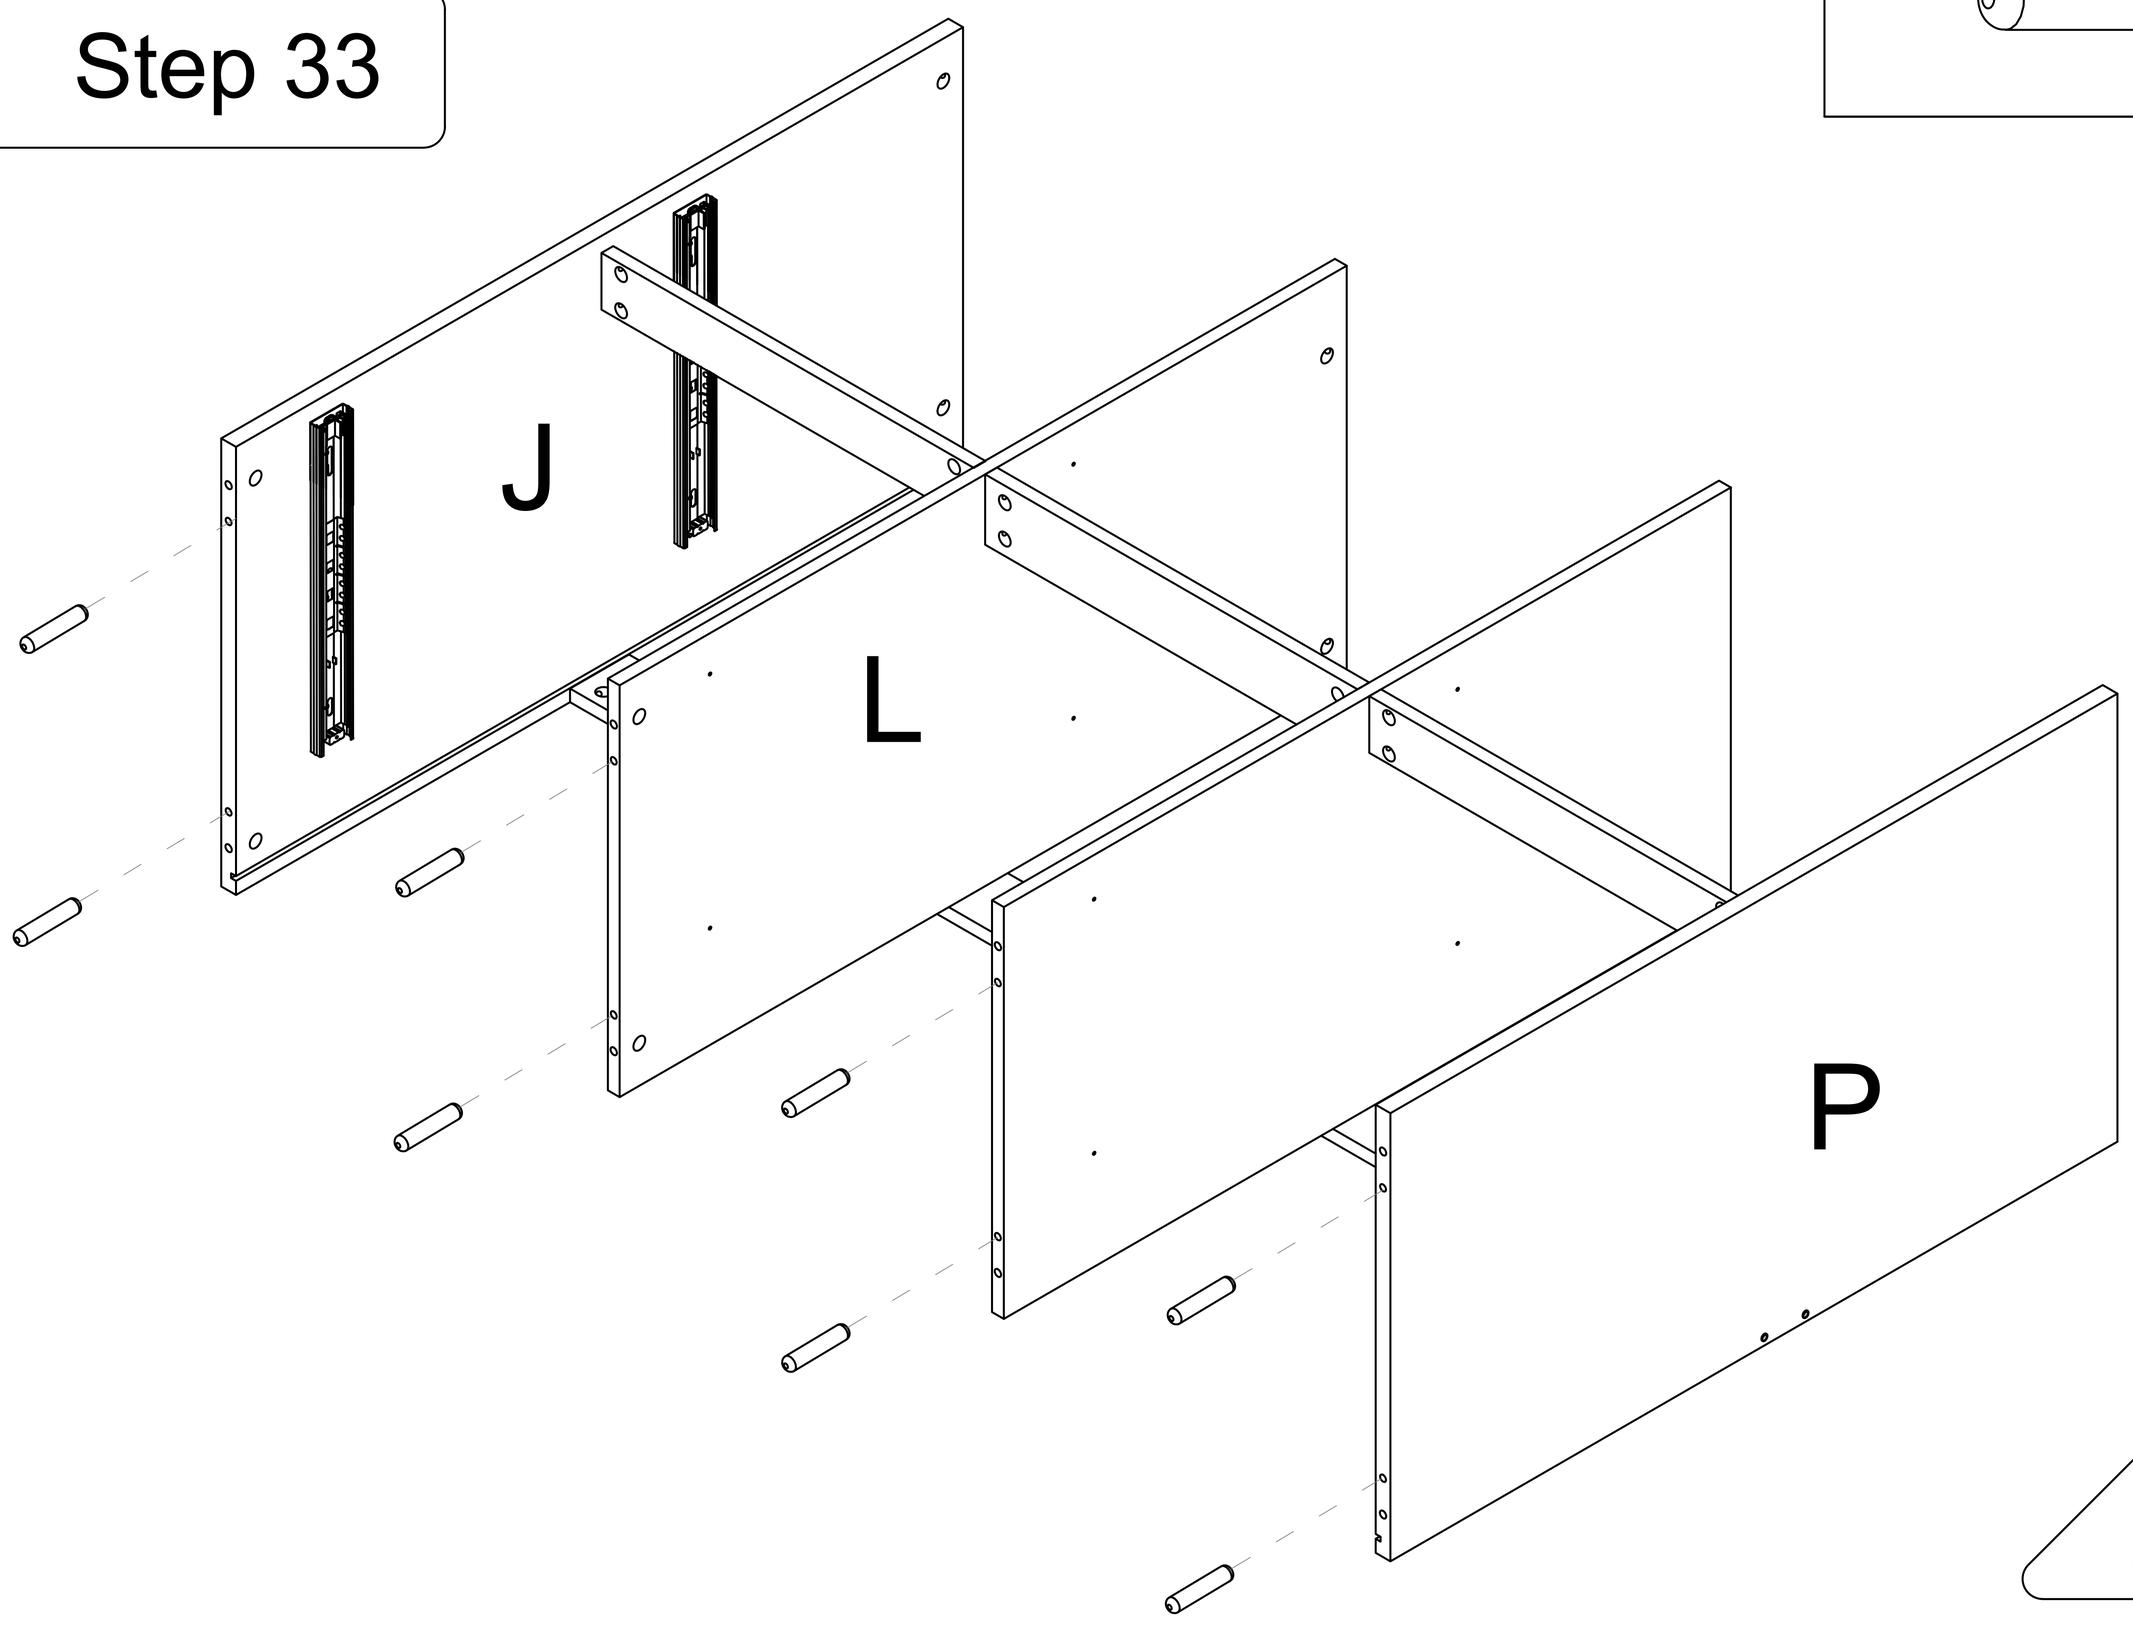


Step 34

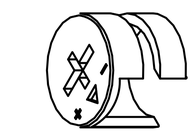


x8


Step 35

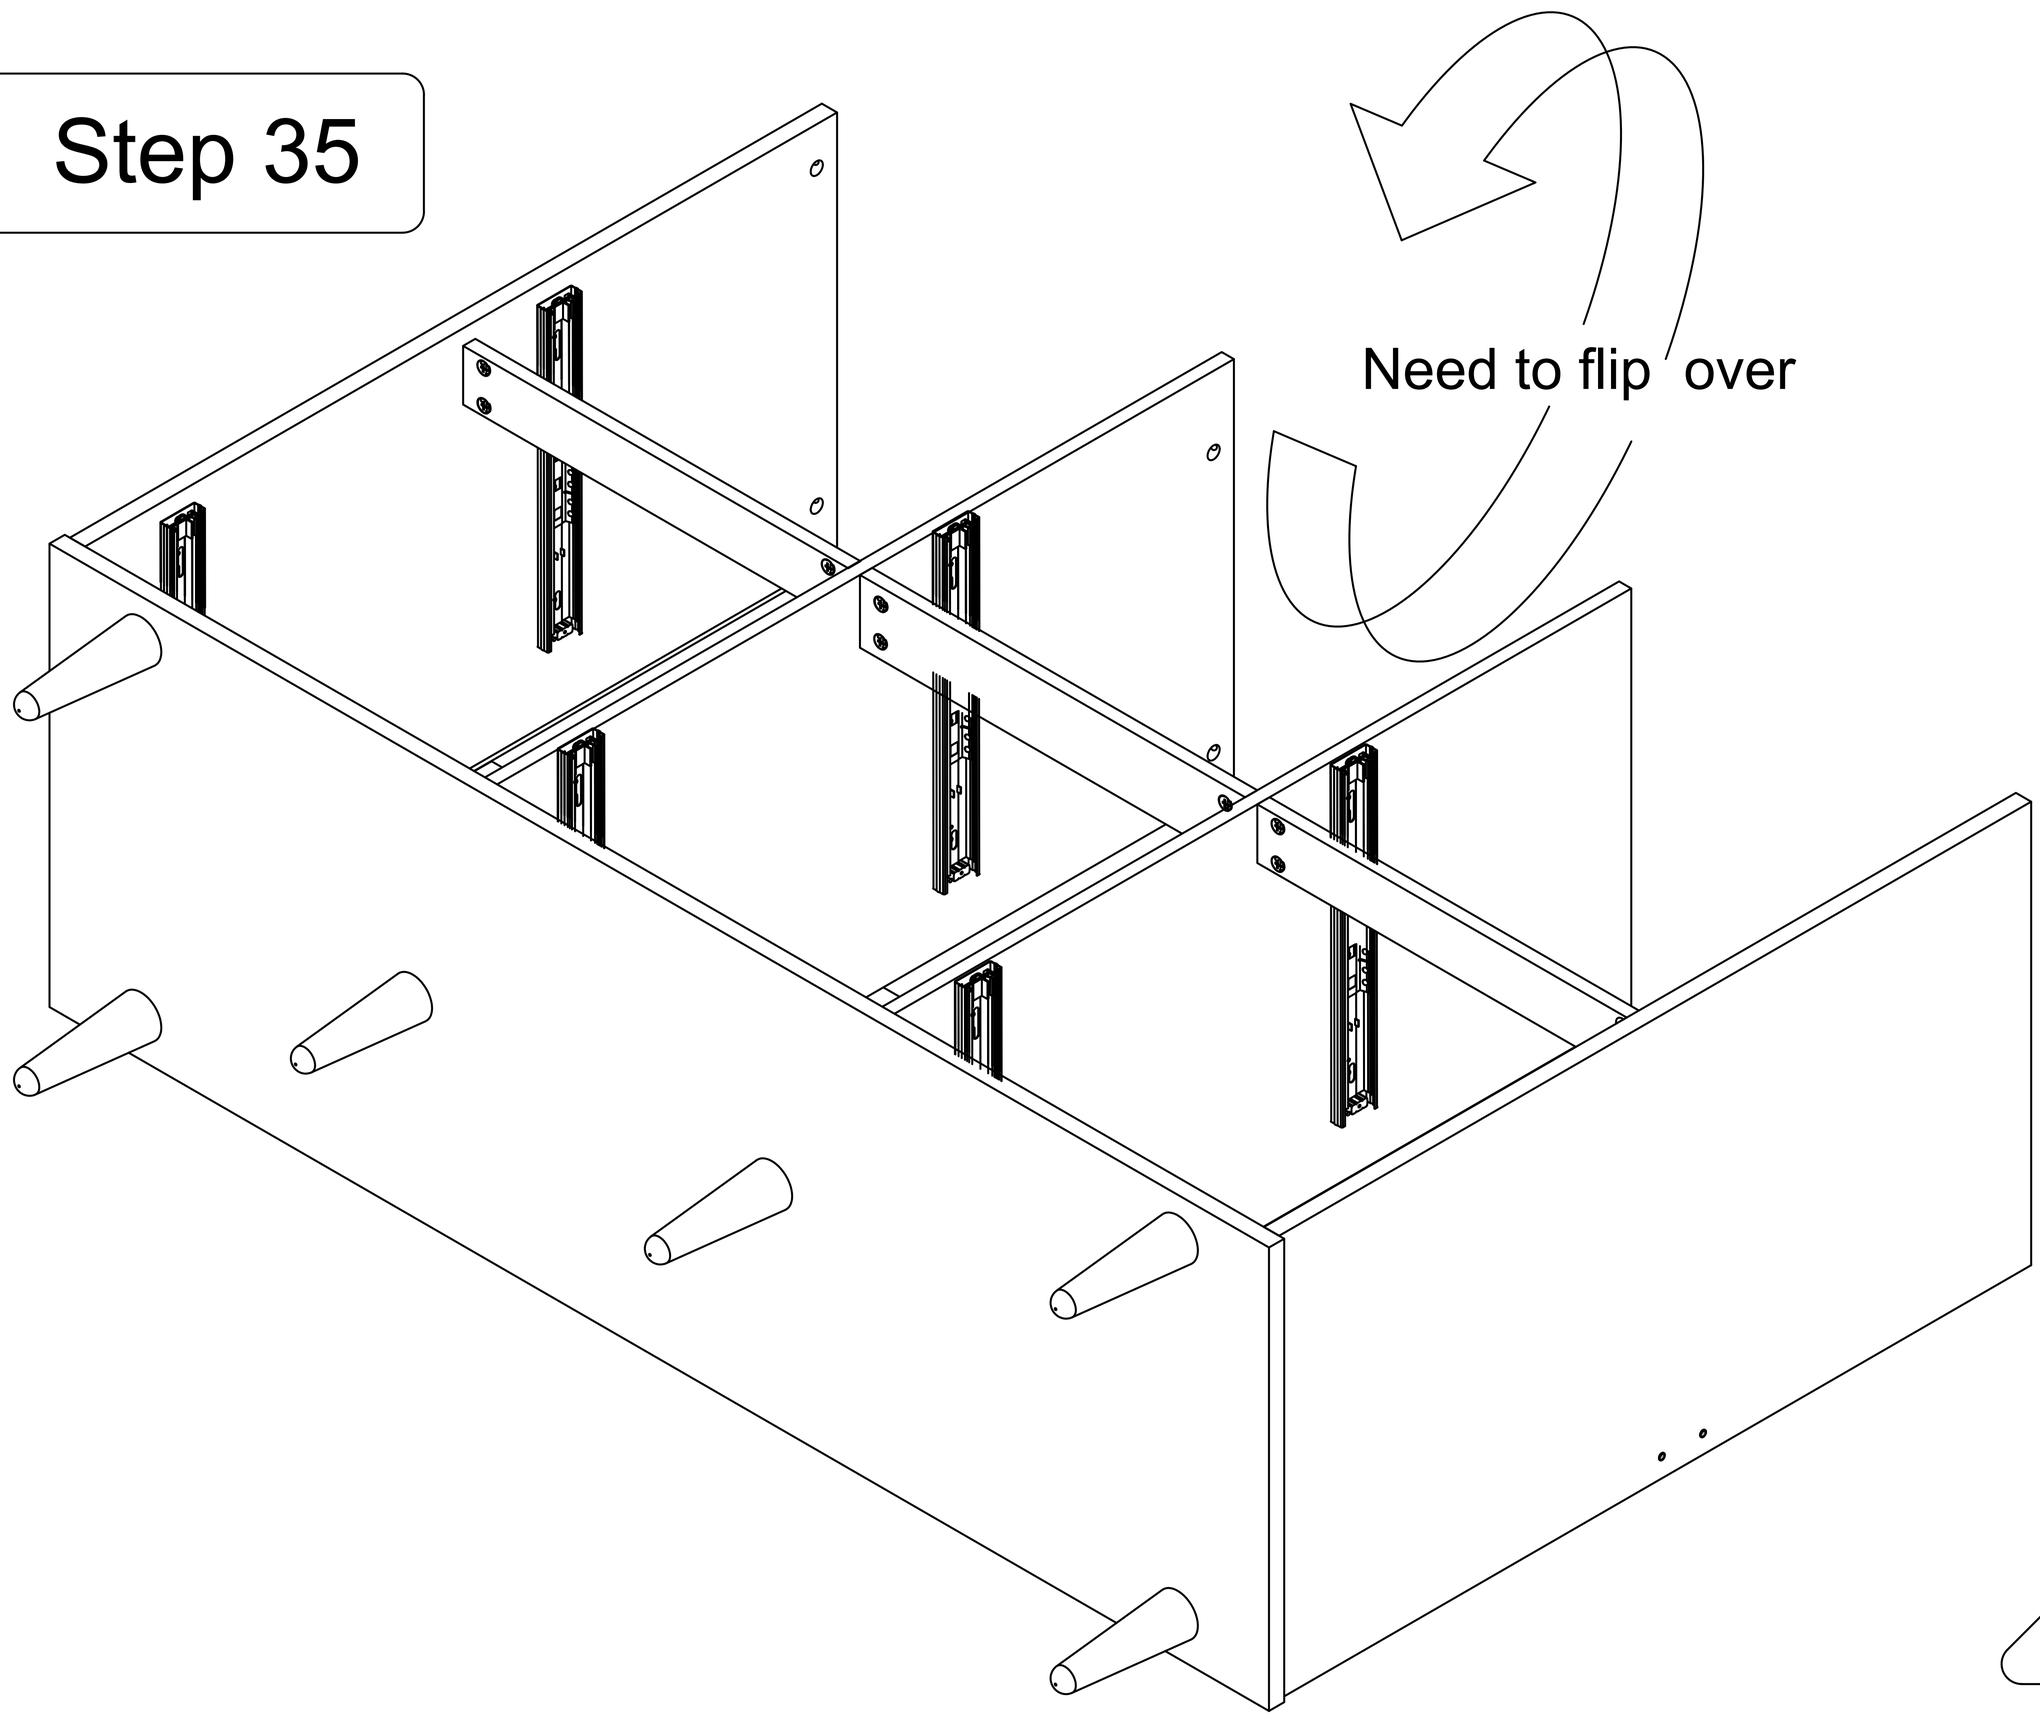

Step 36

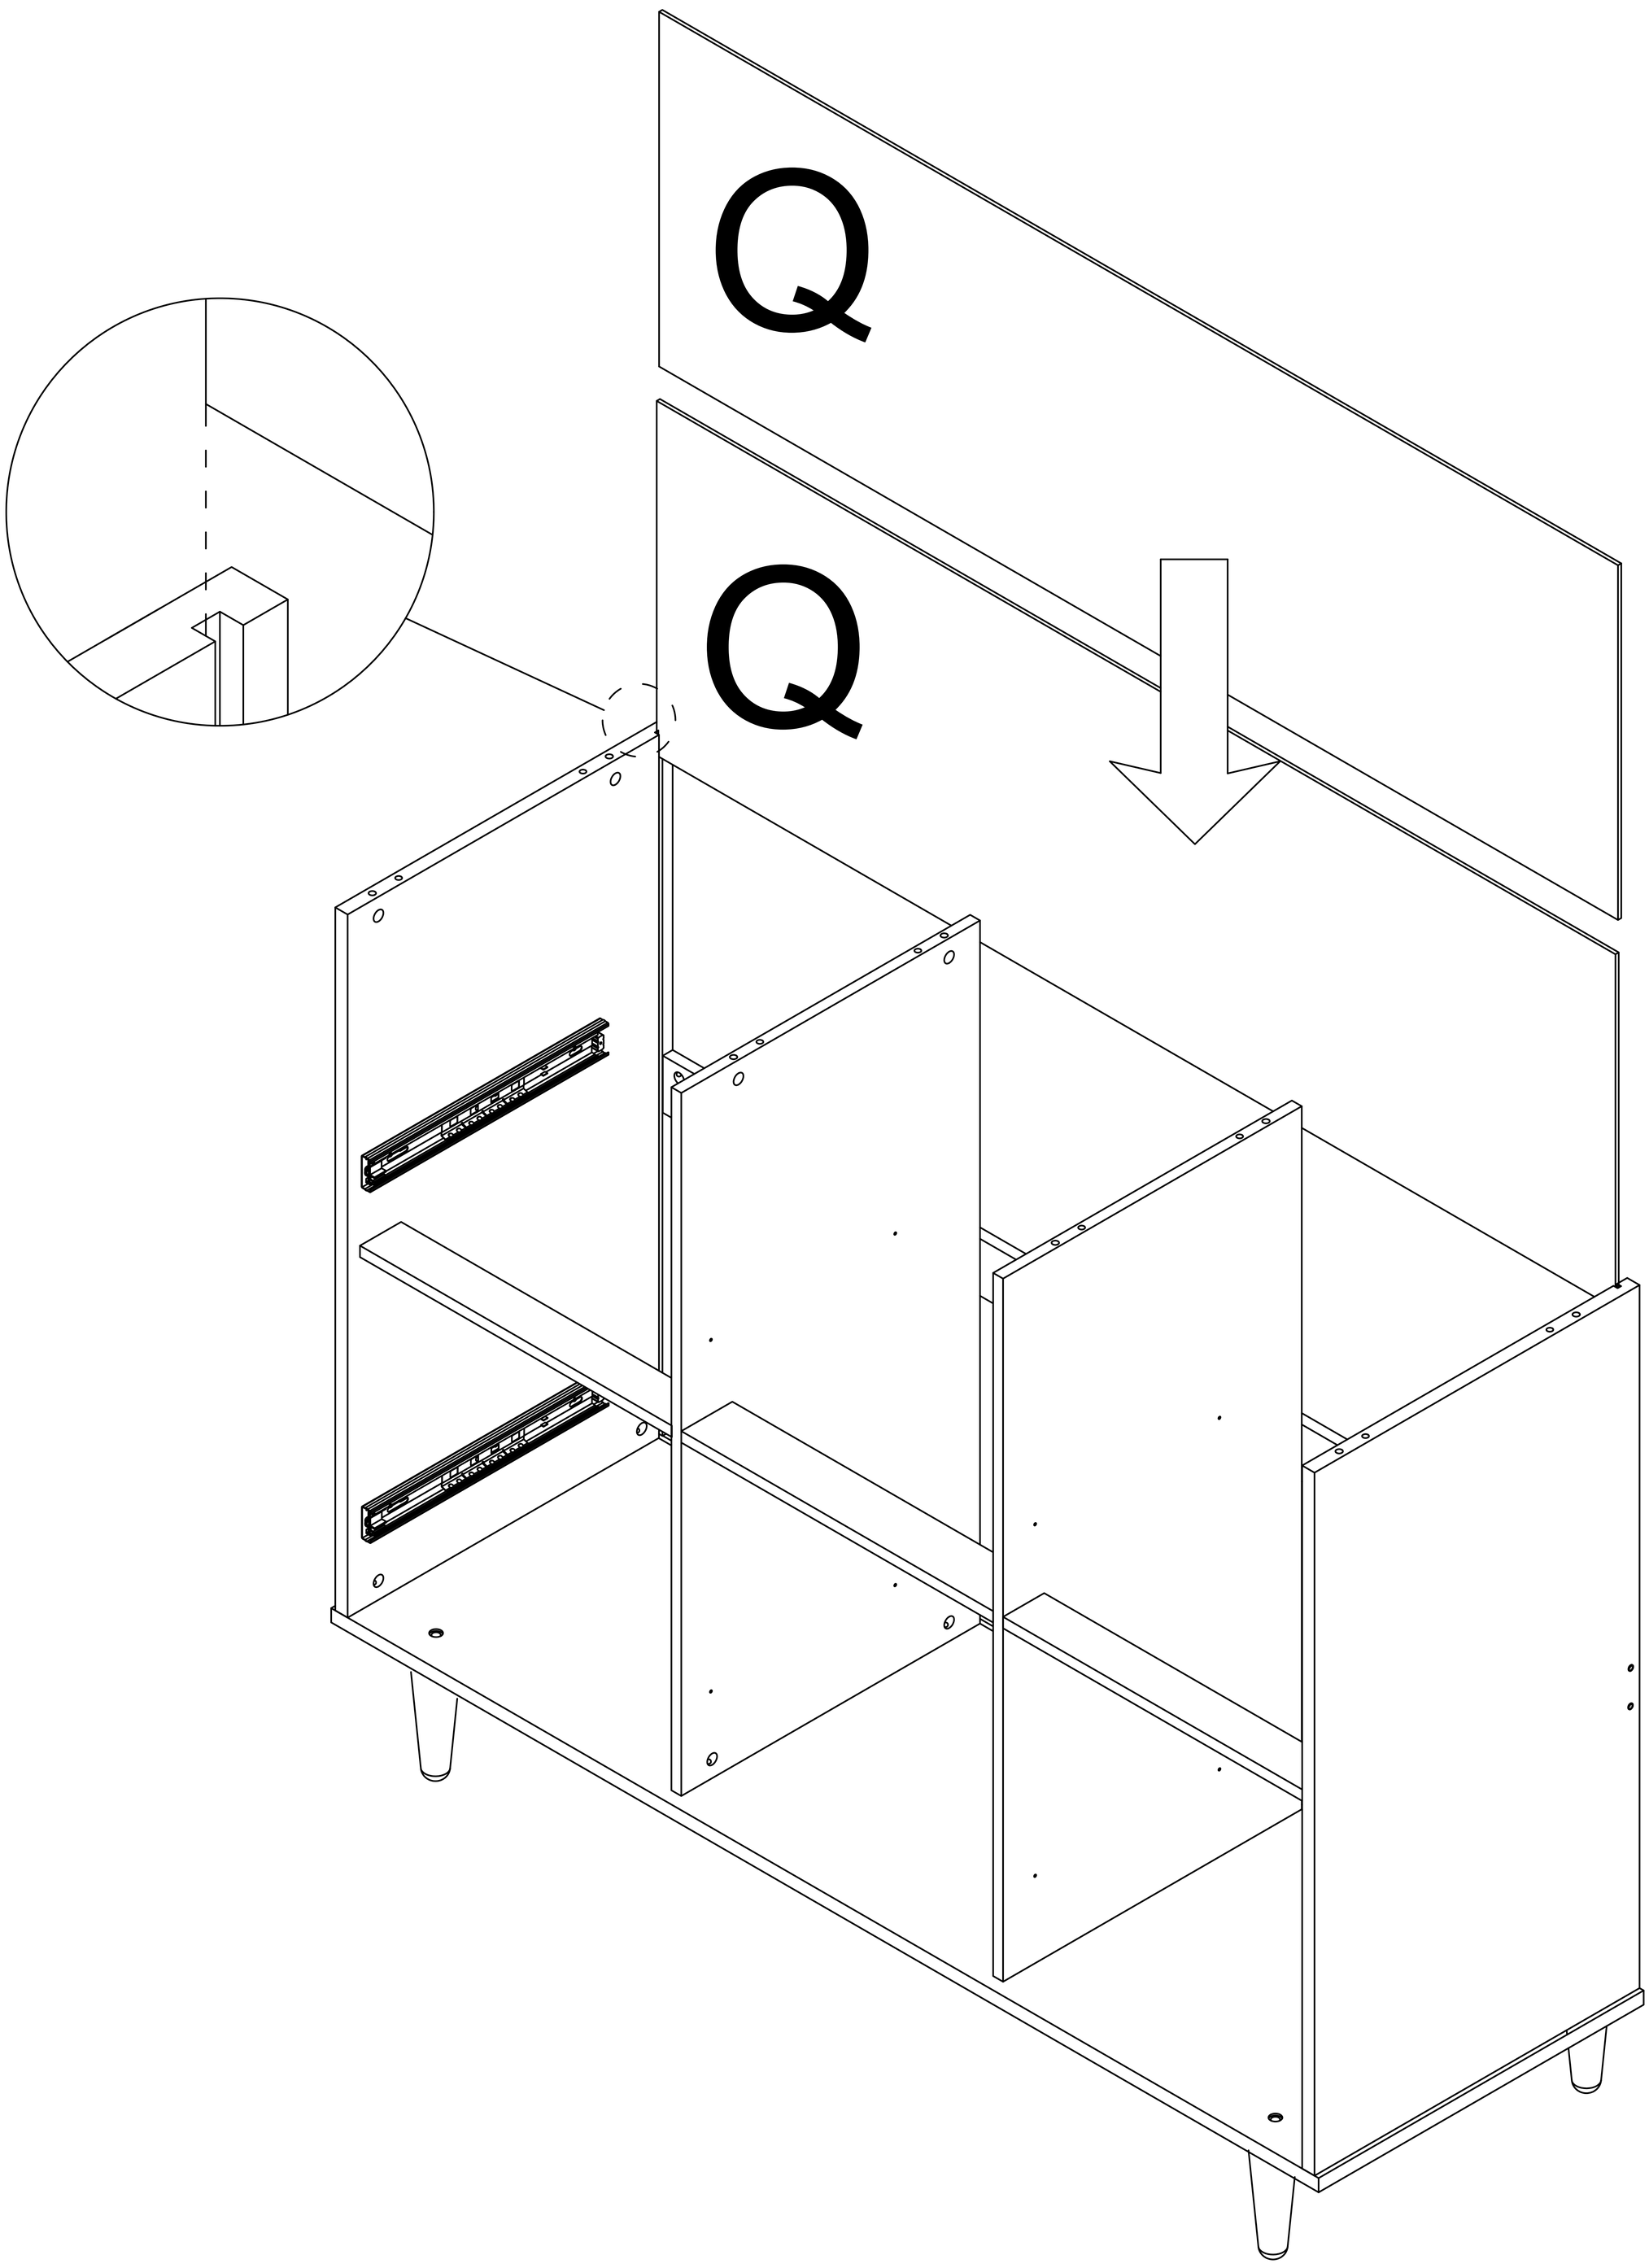


Step 37

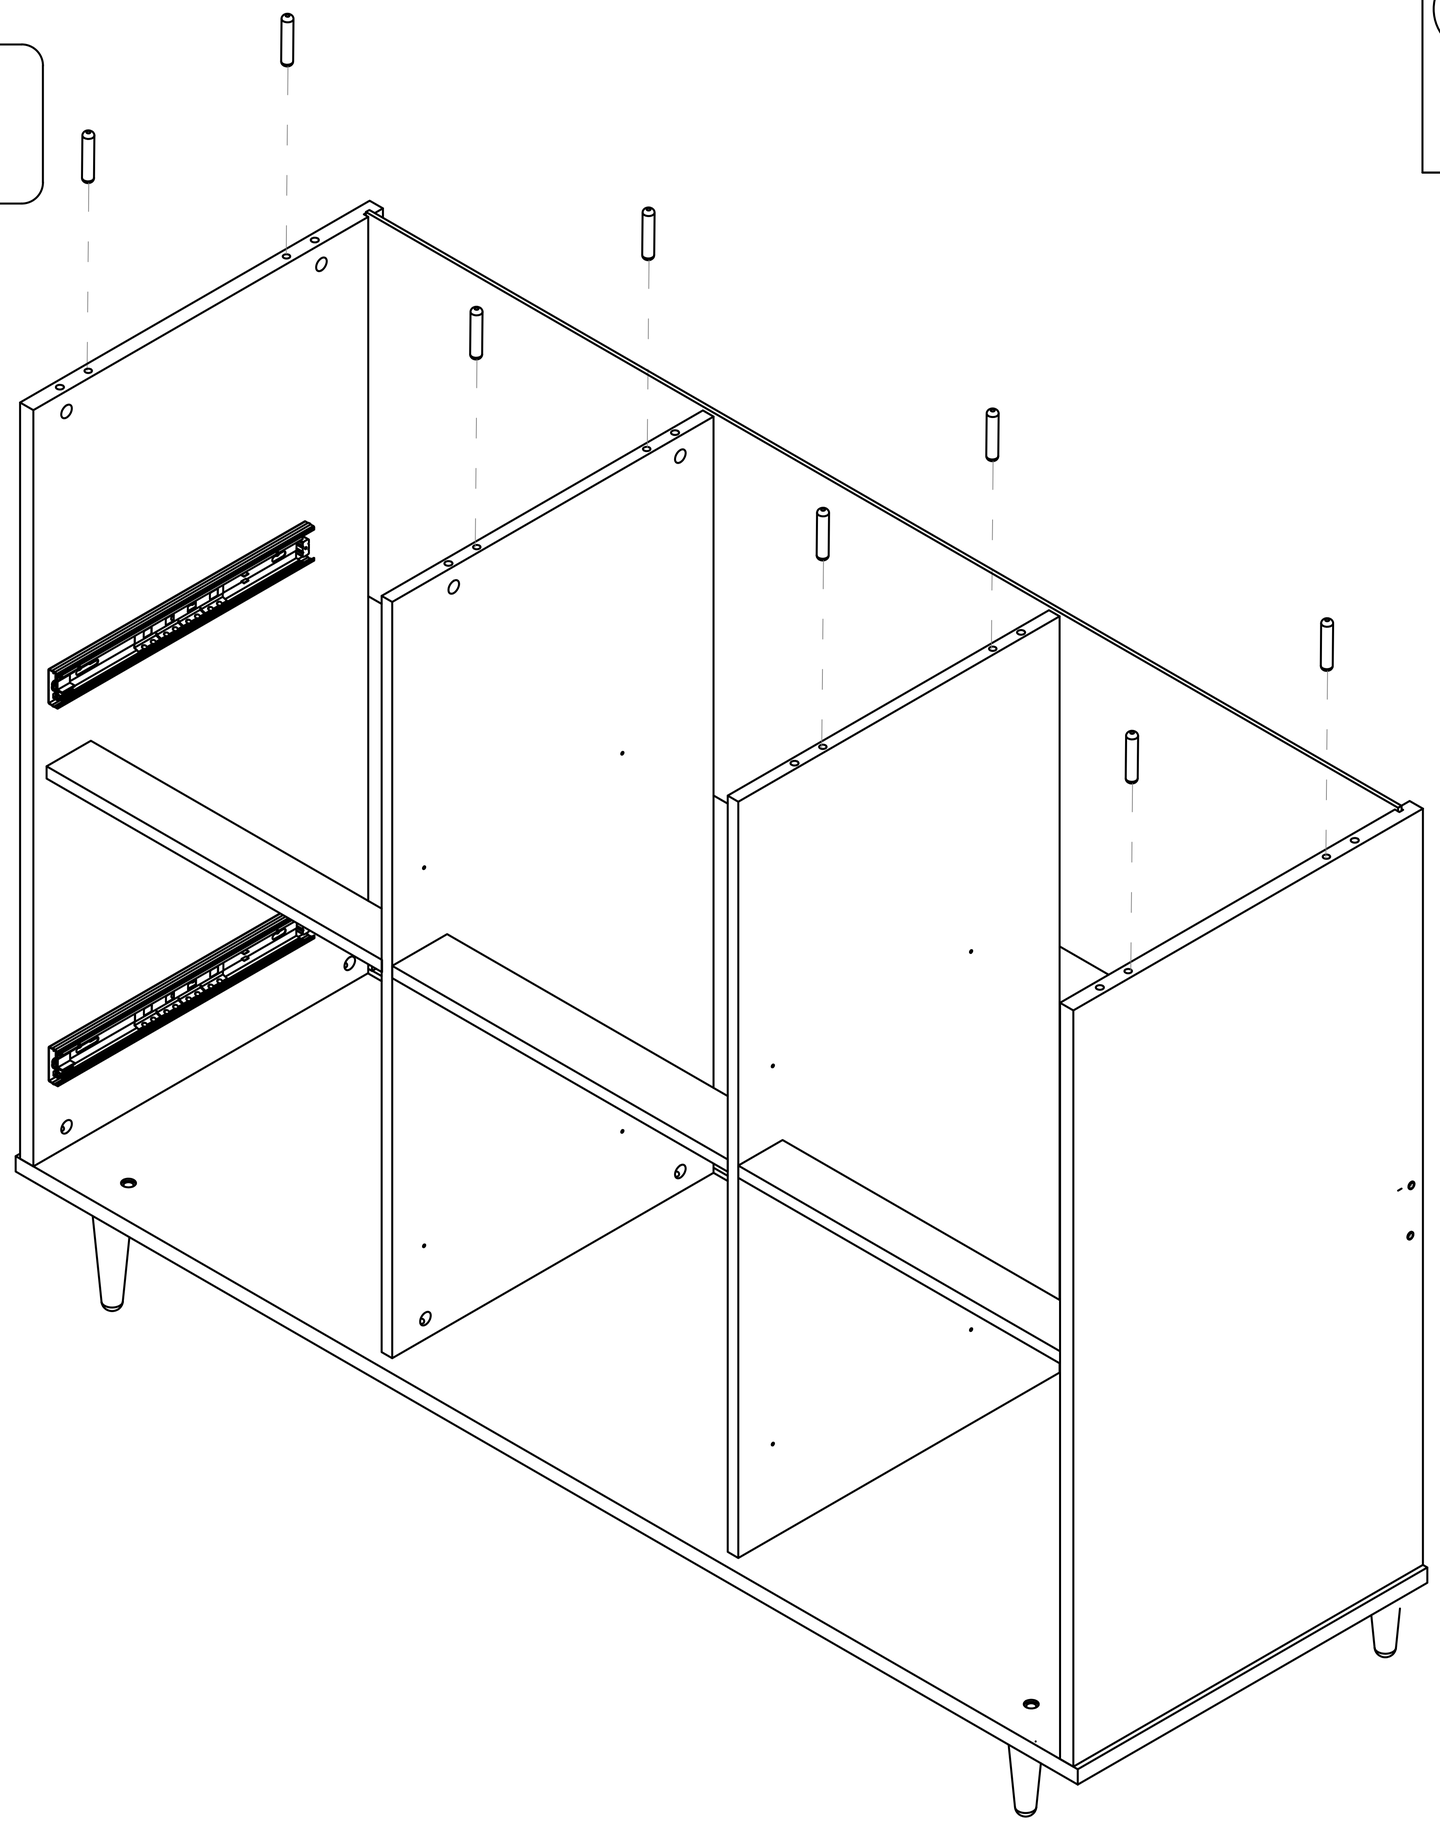

3

x8

Step 38

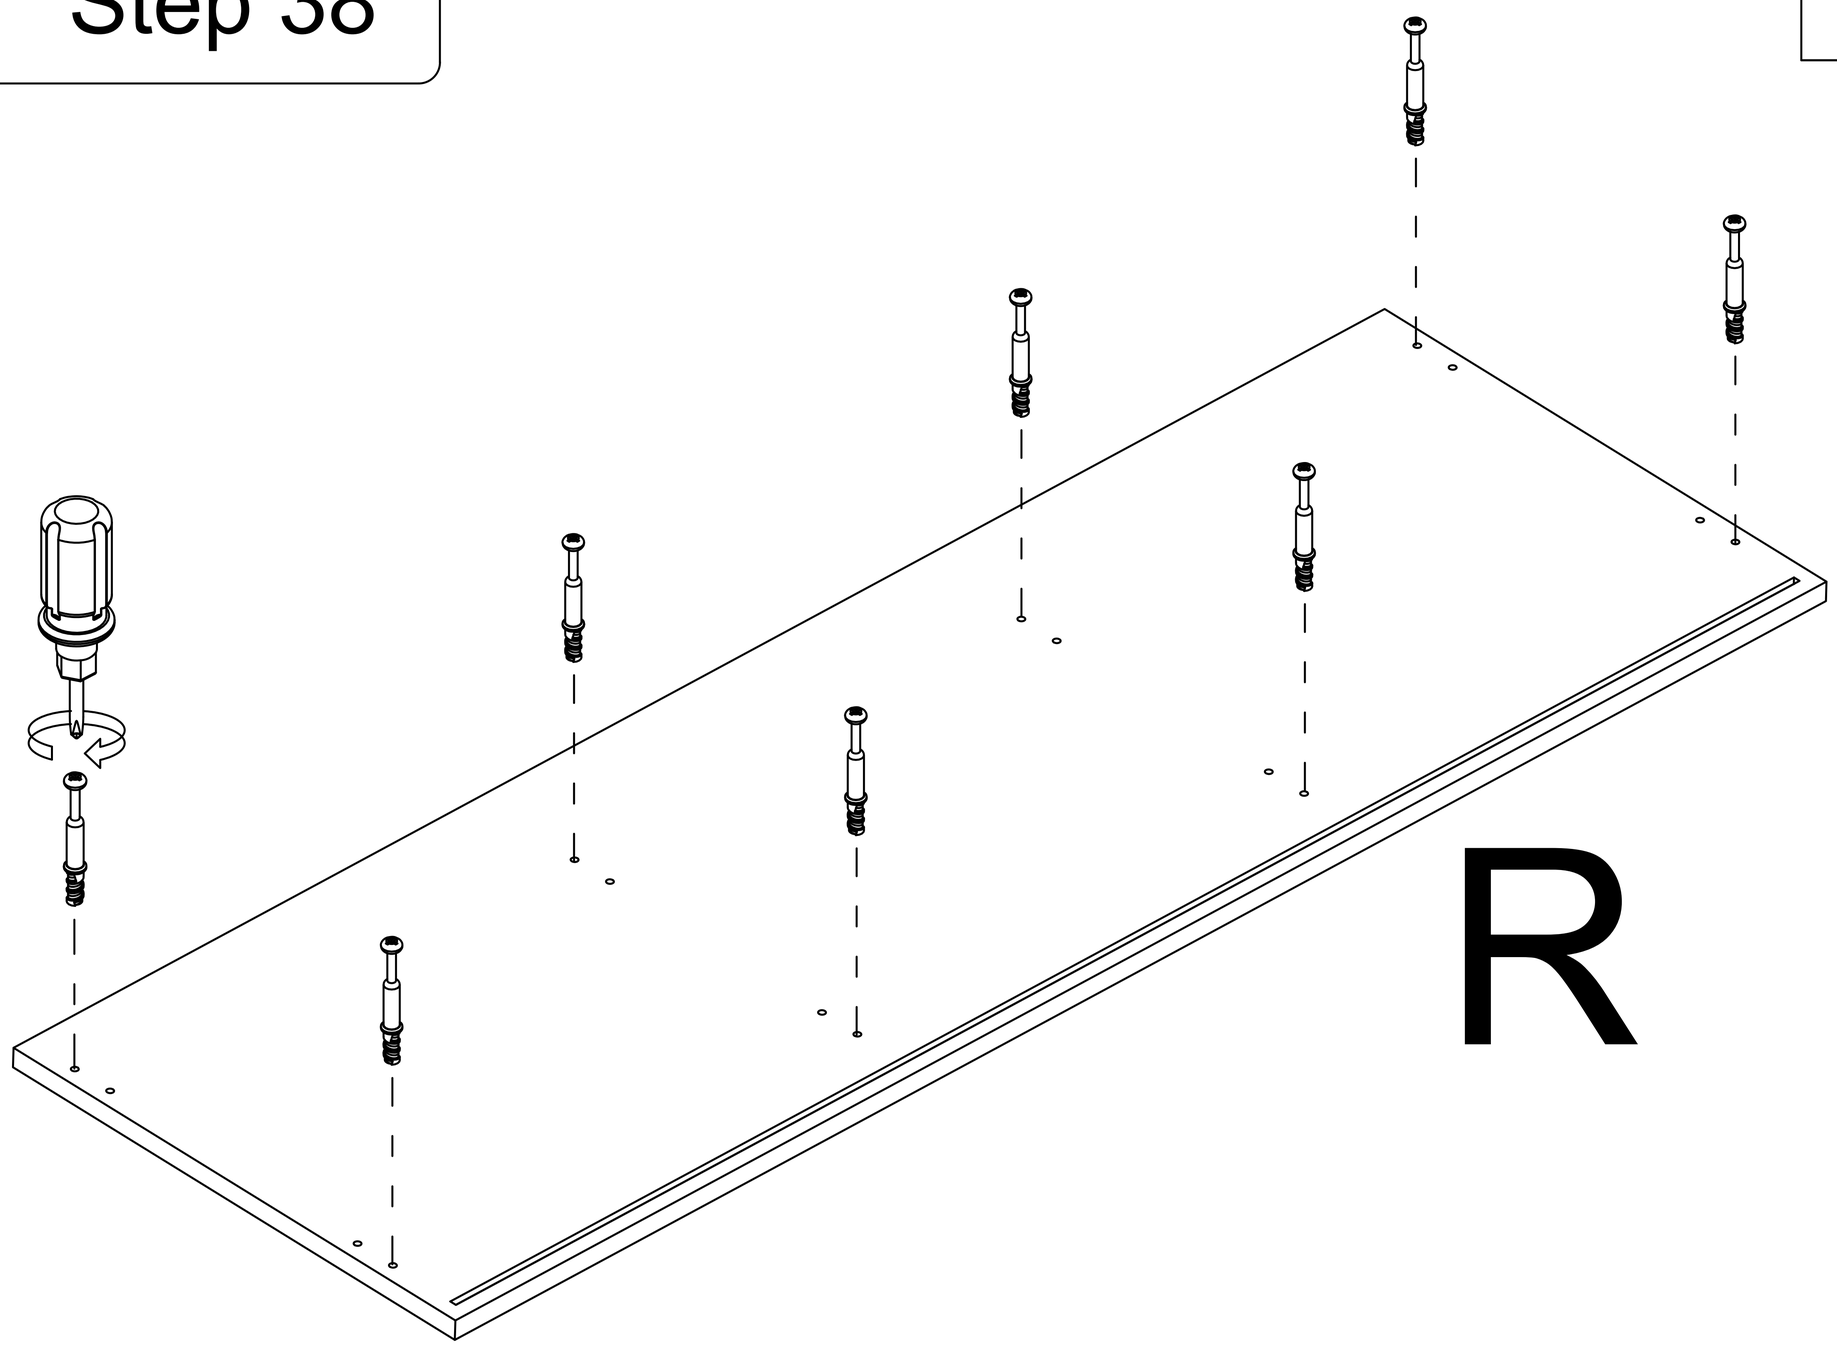


1

x8

R

Step 39


2

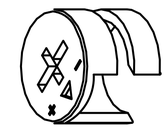



x8

R


Step 40

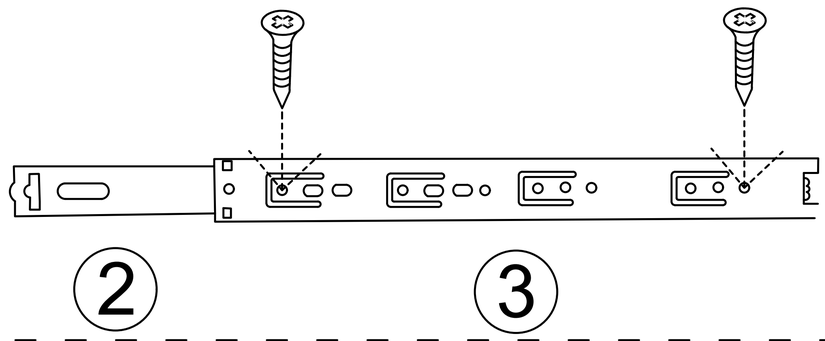

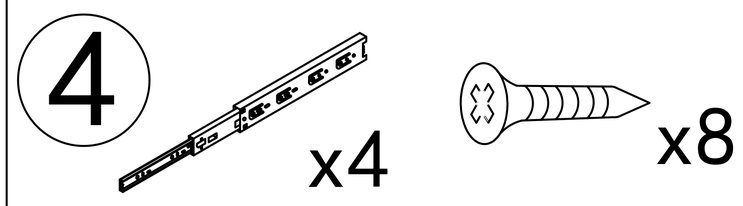

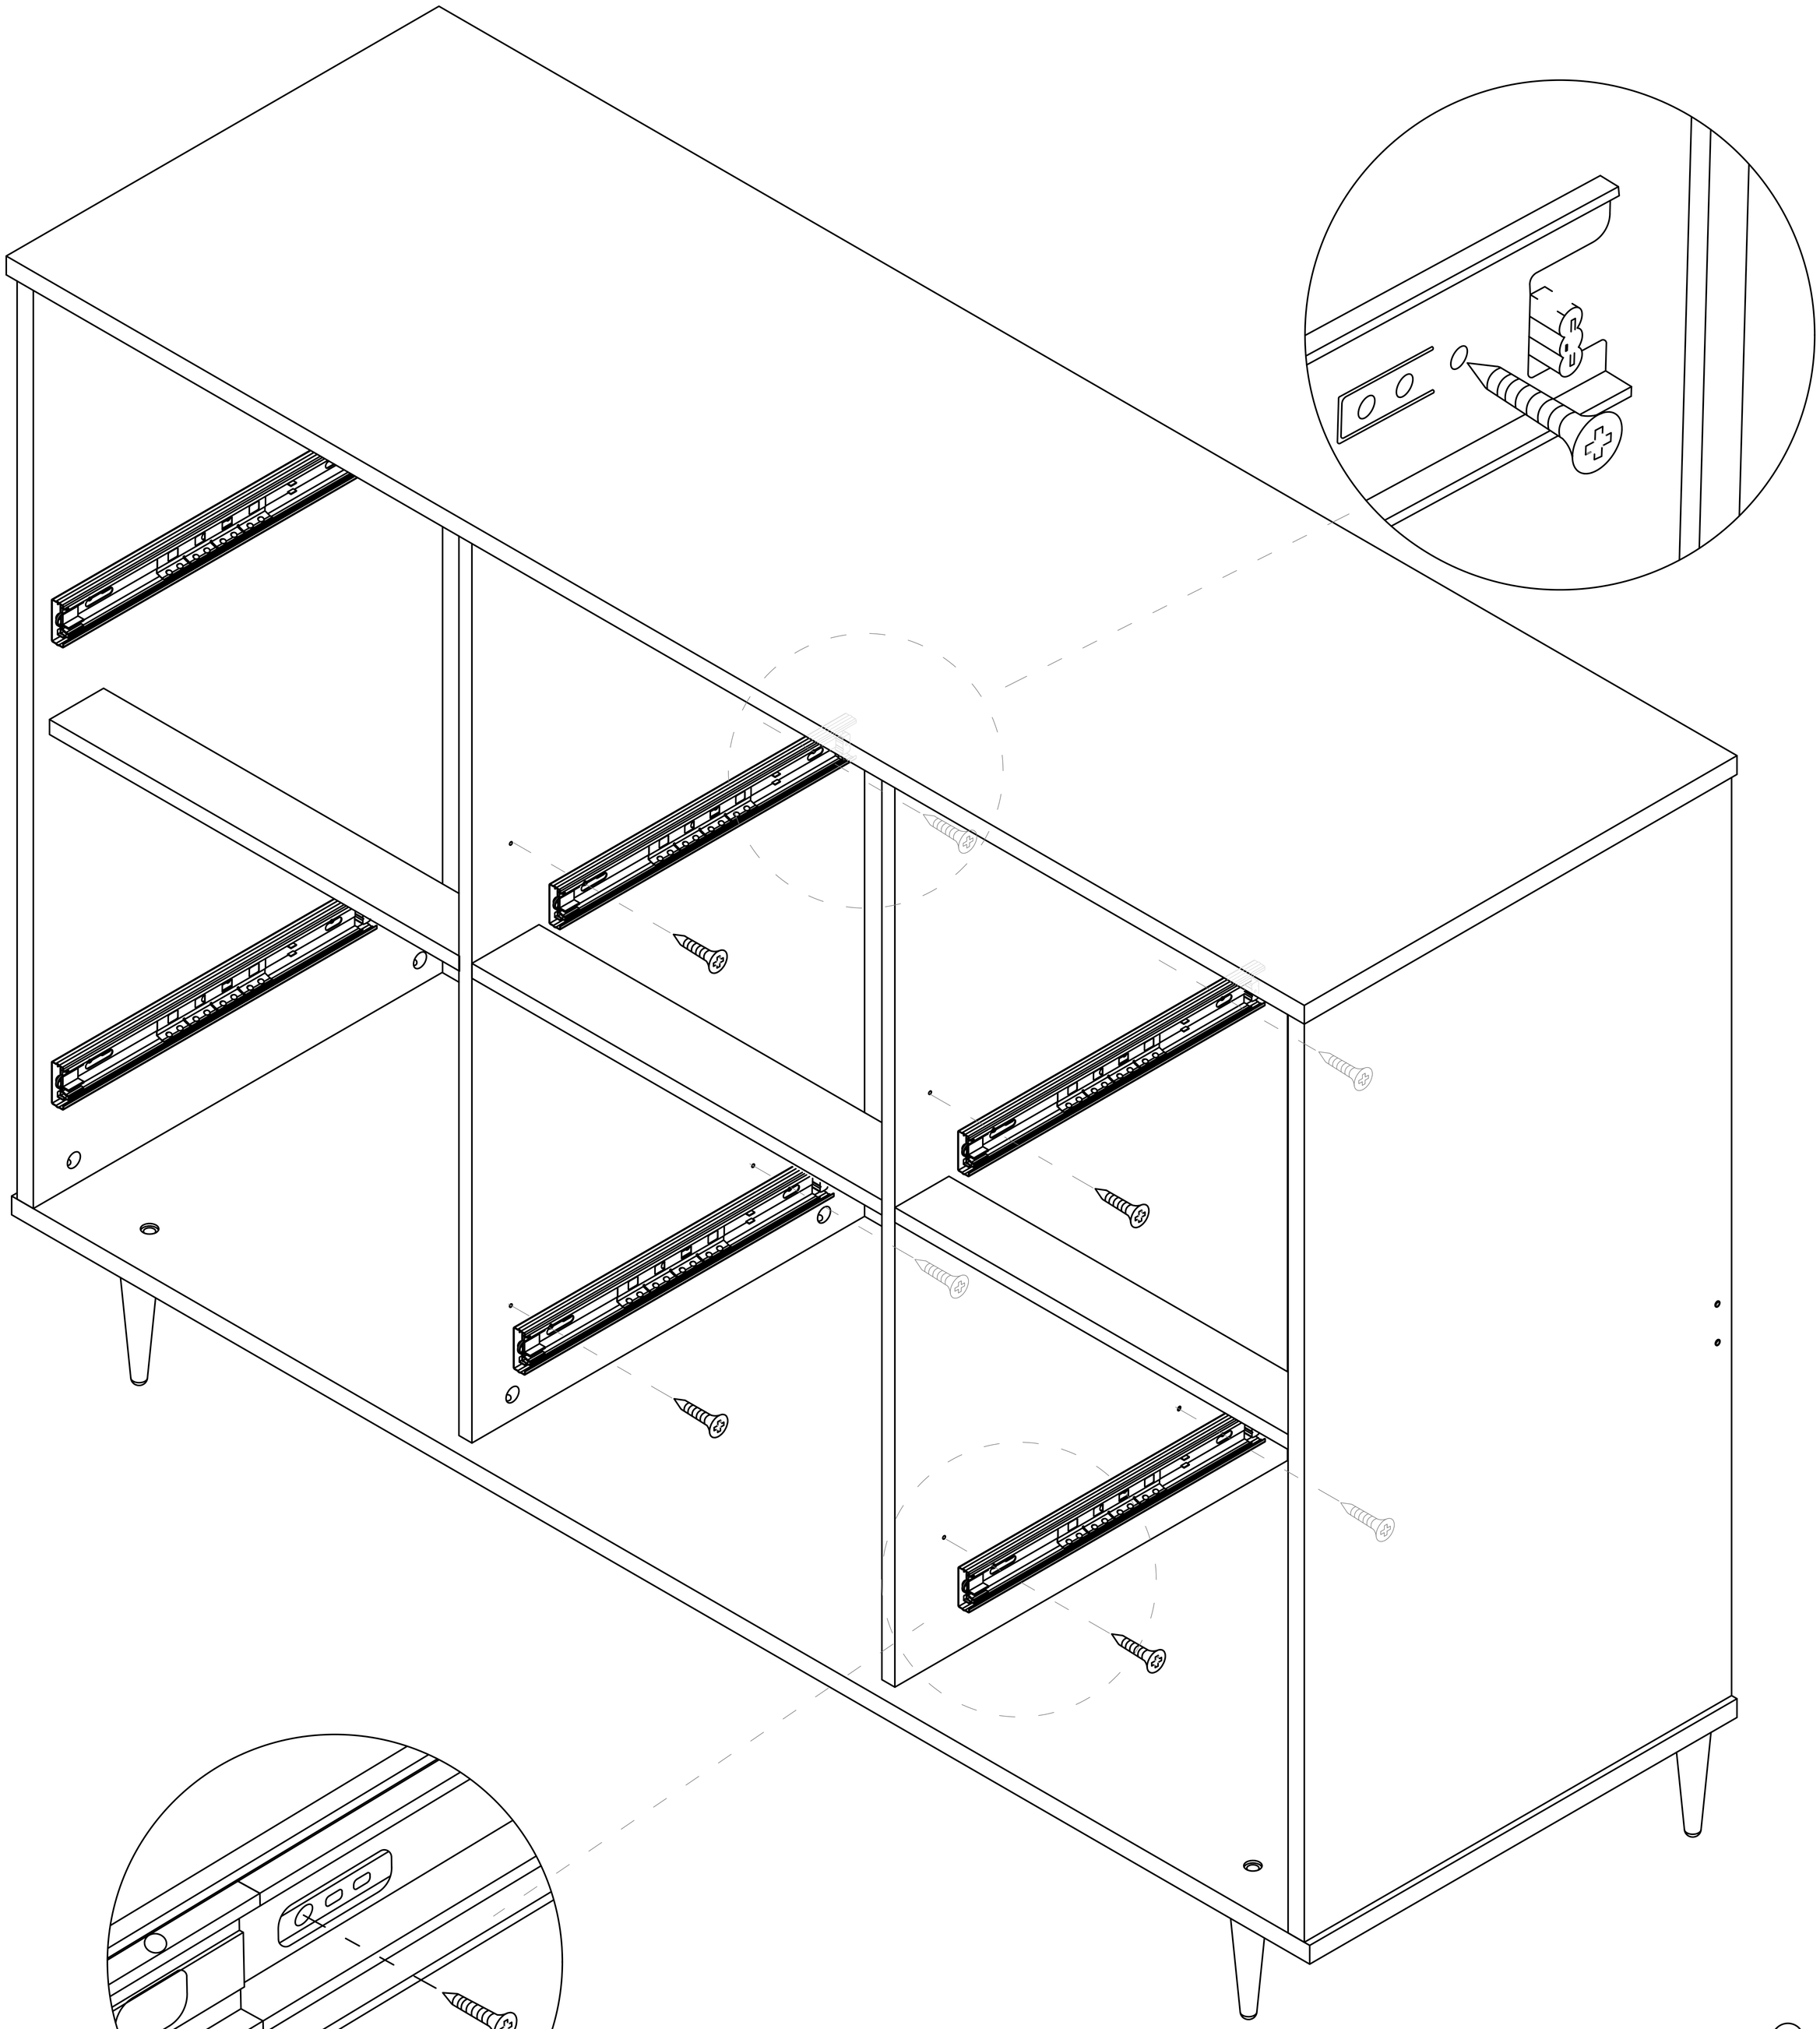


Step 41

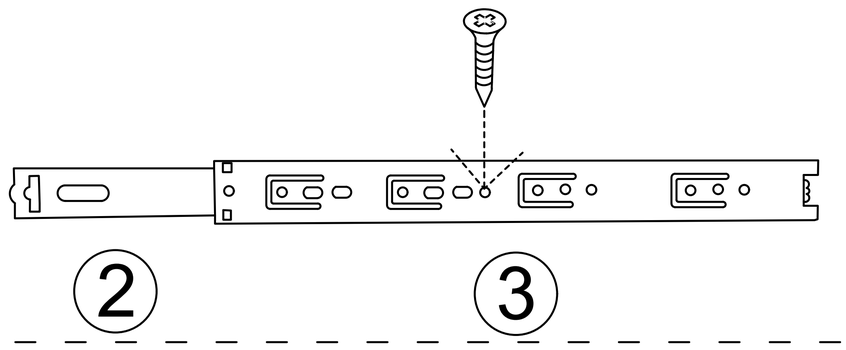


4 x4




Step 42

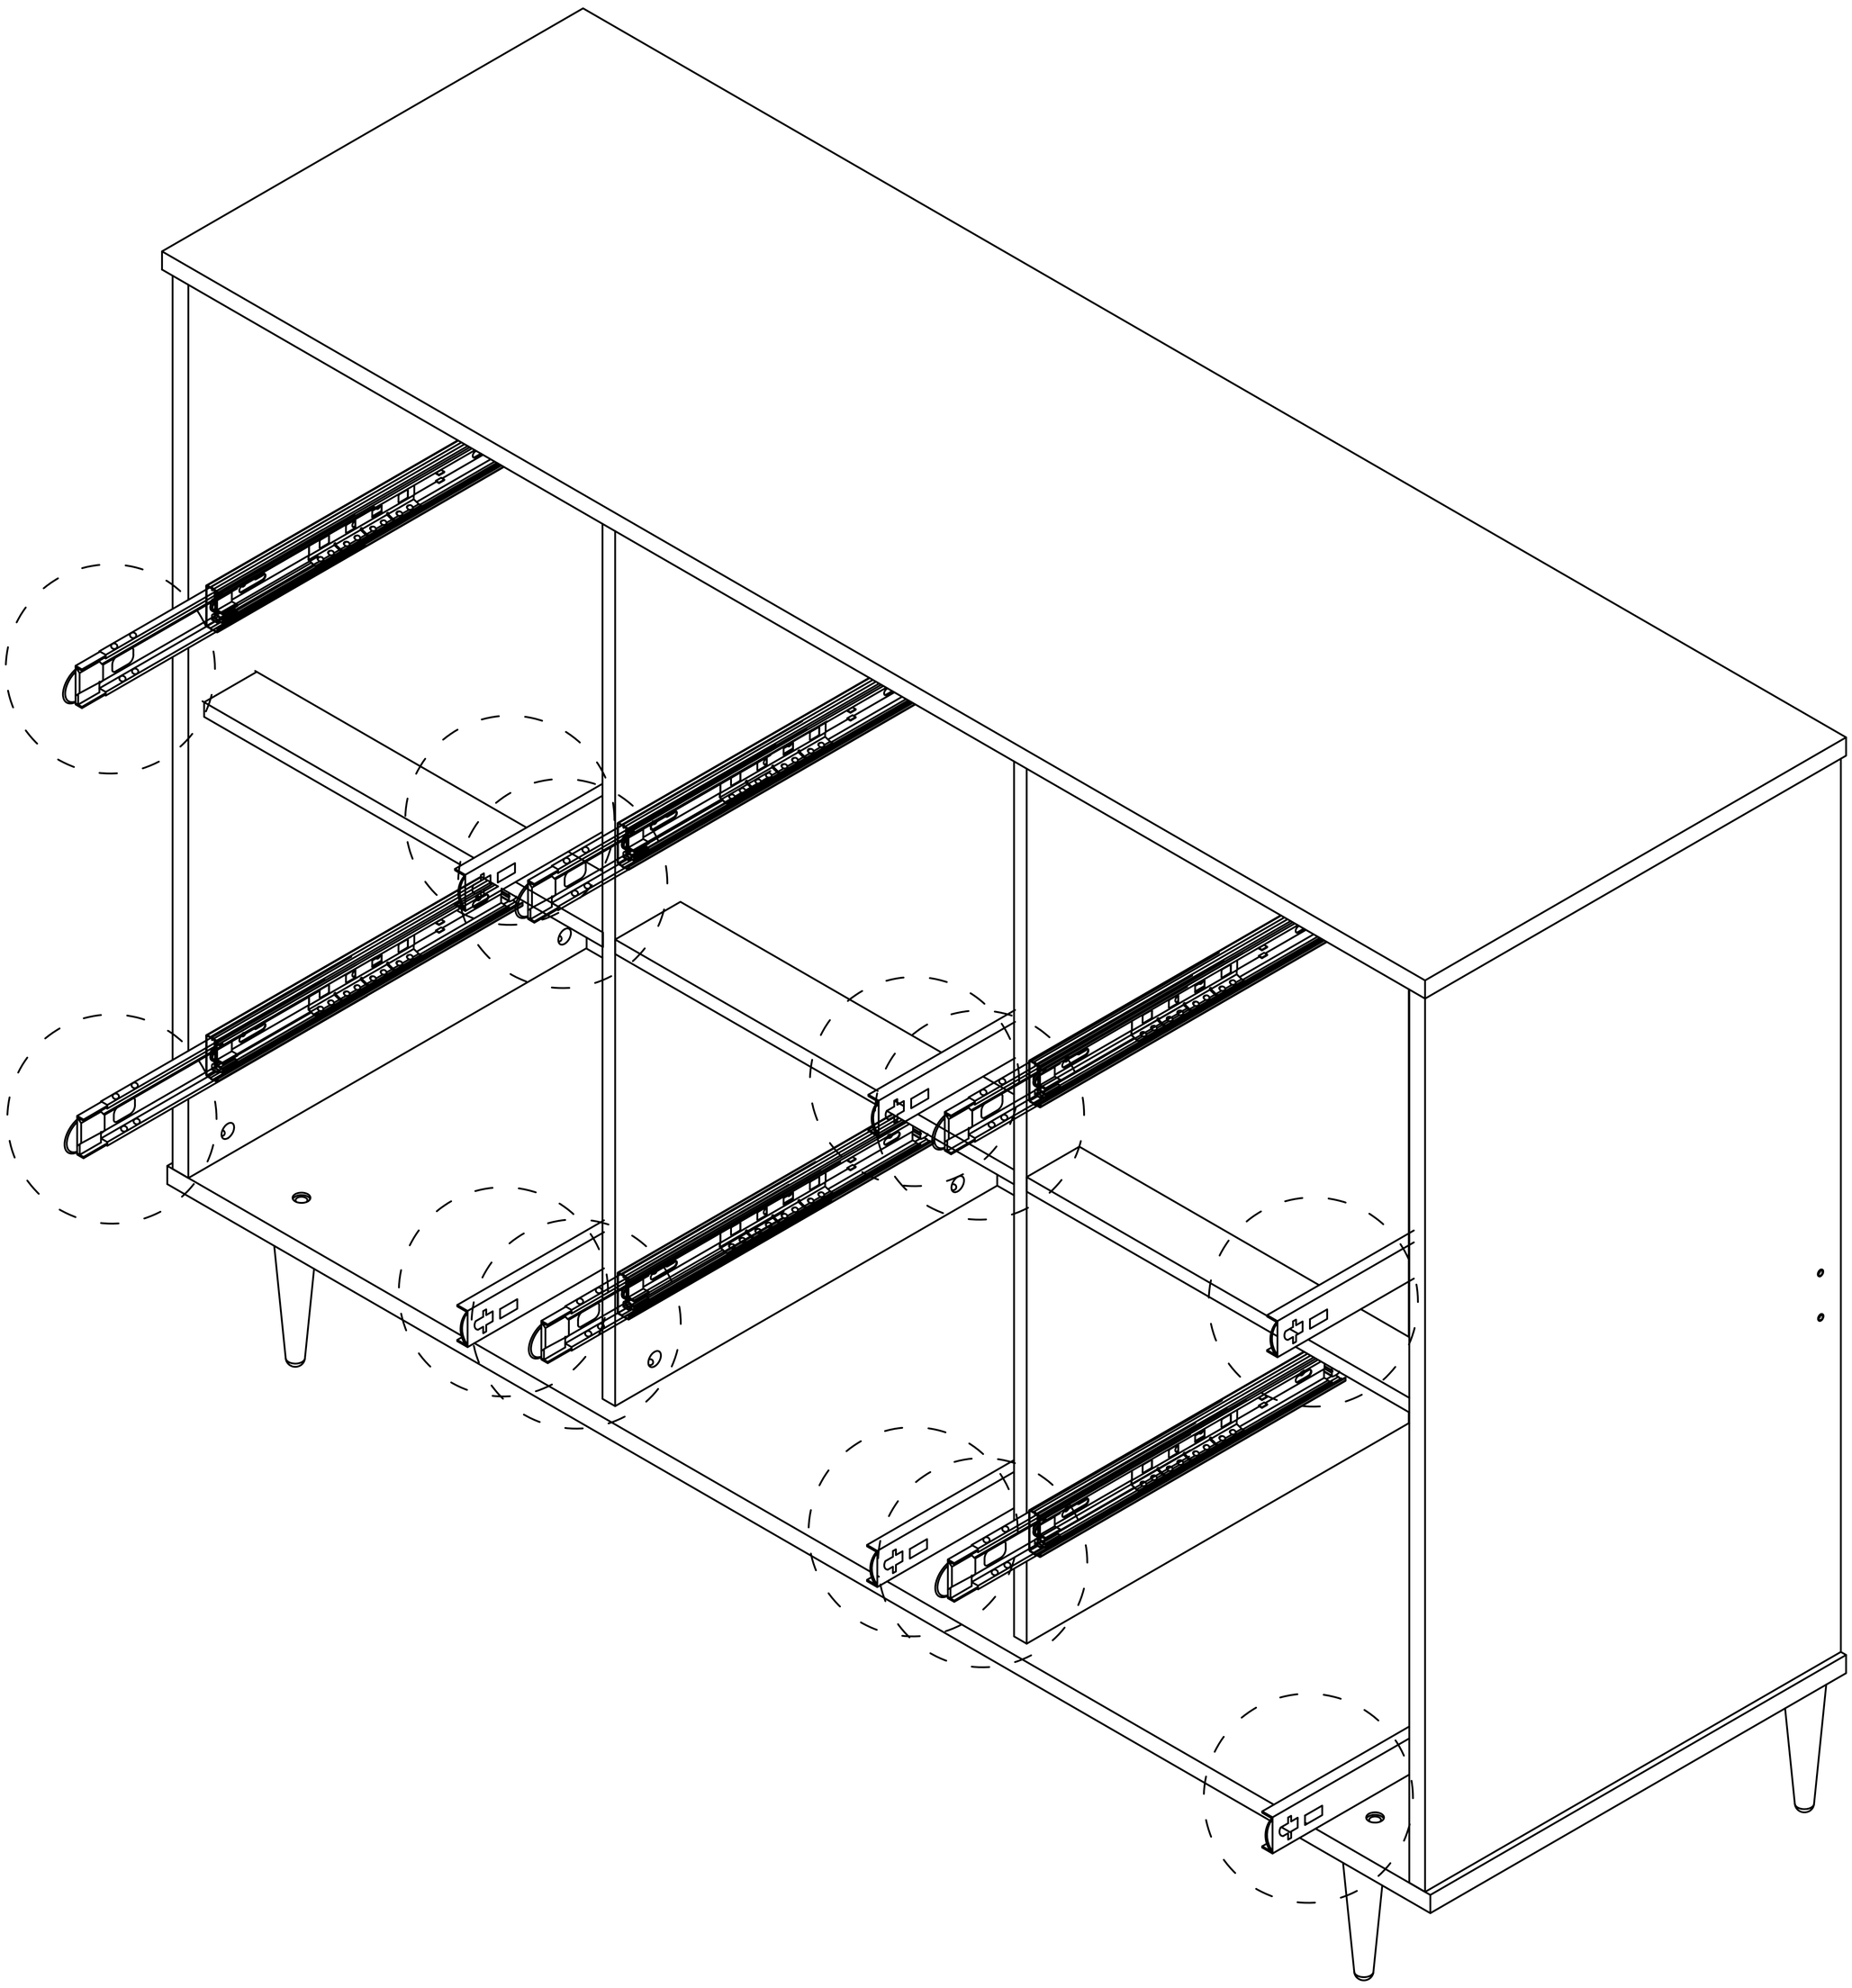


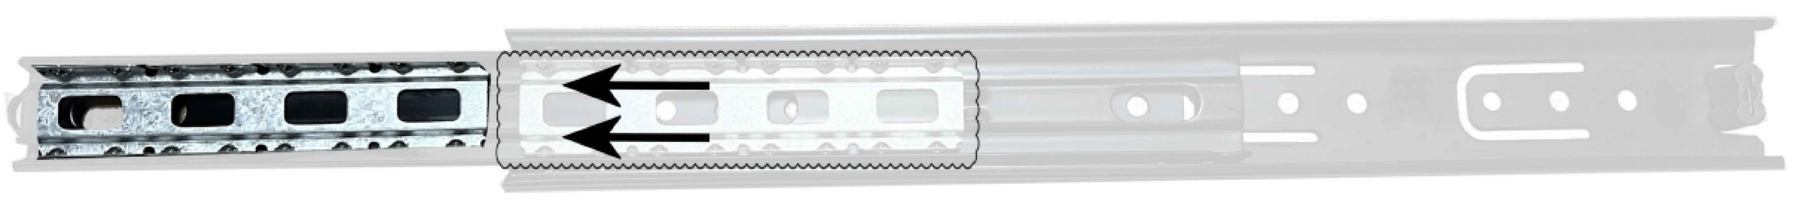

As shown，When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 43

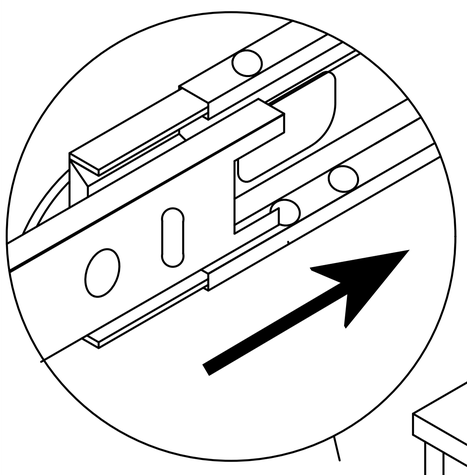


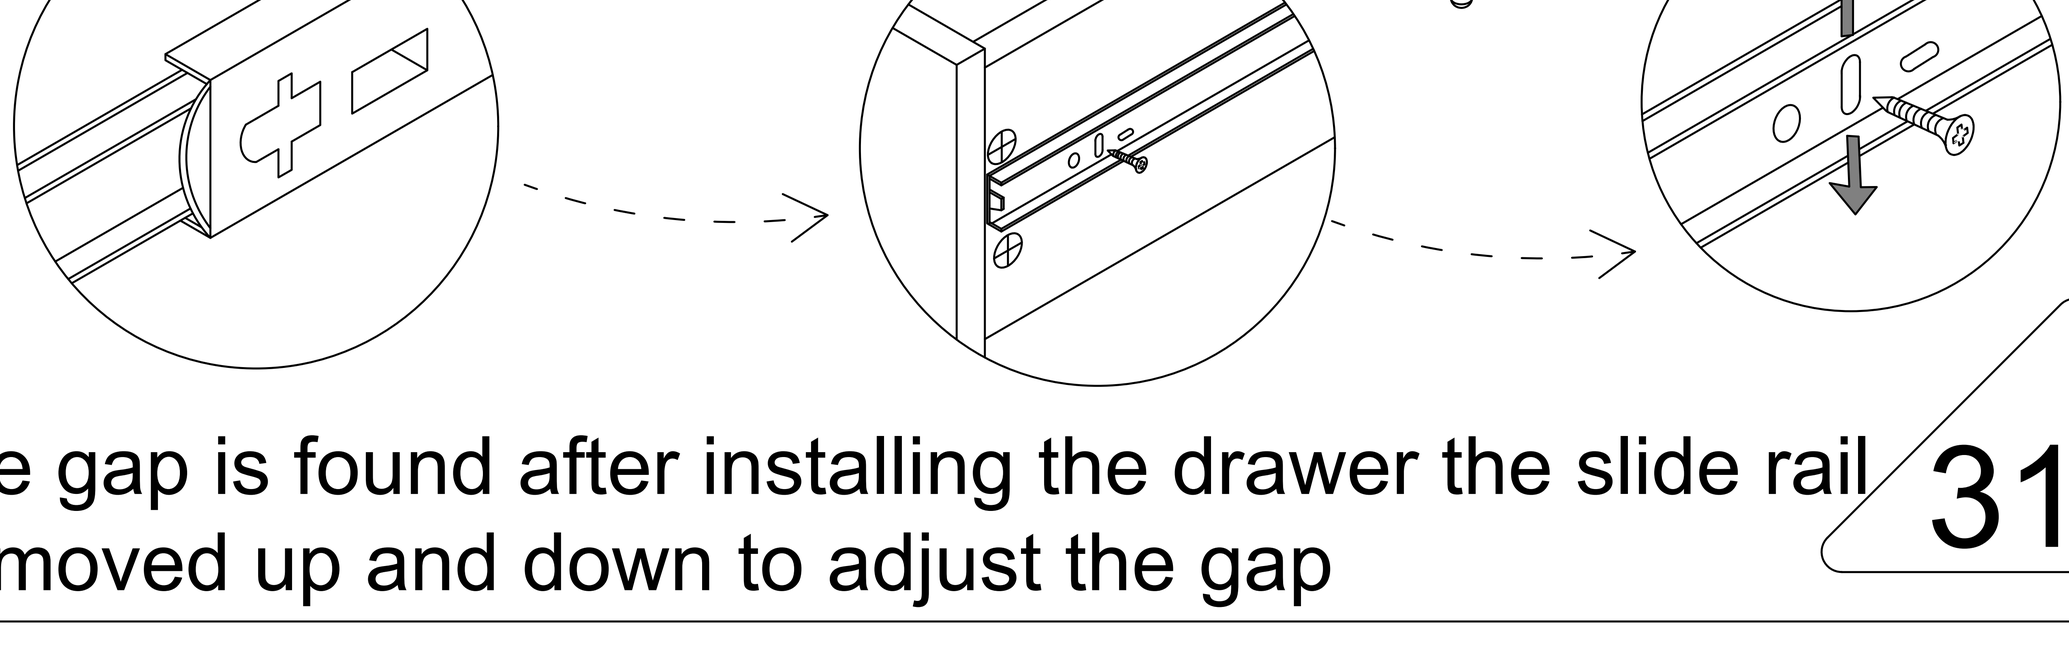

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 44


Install drawers according to matching numbers

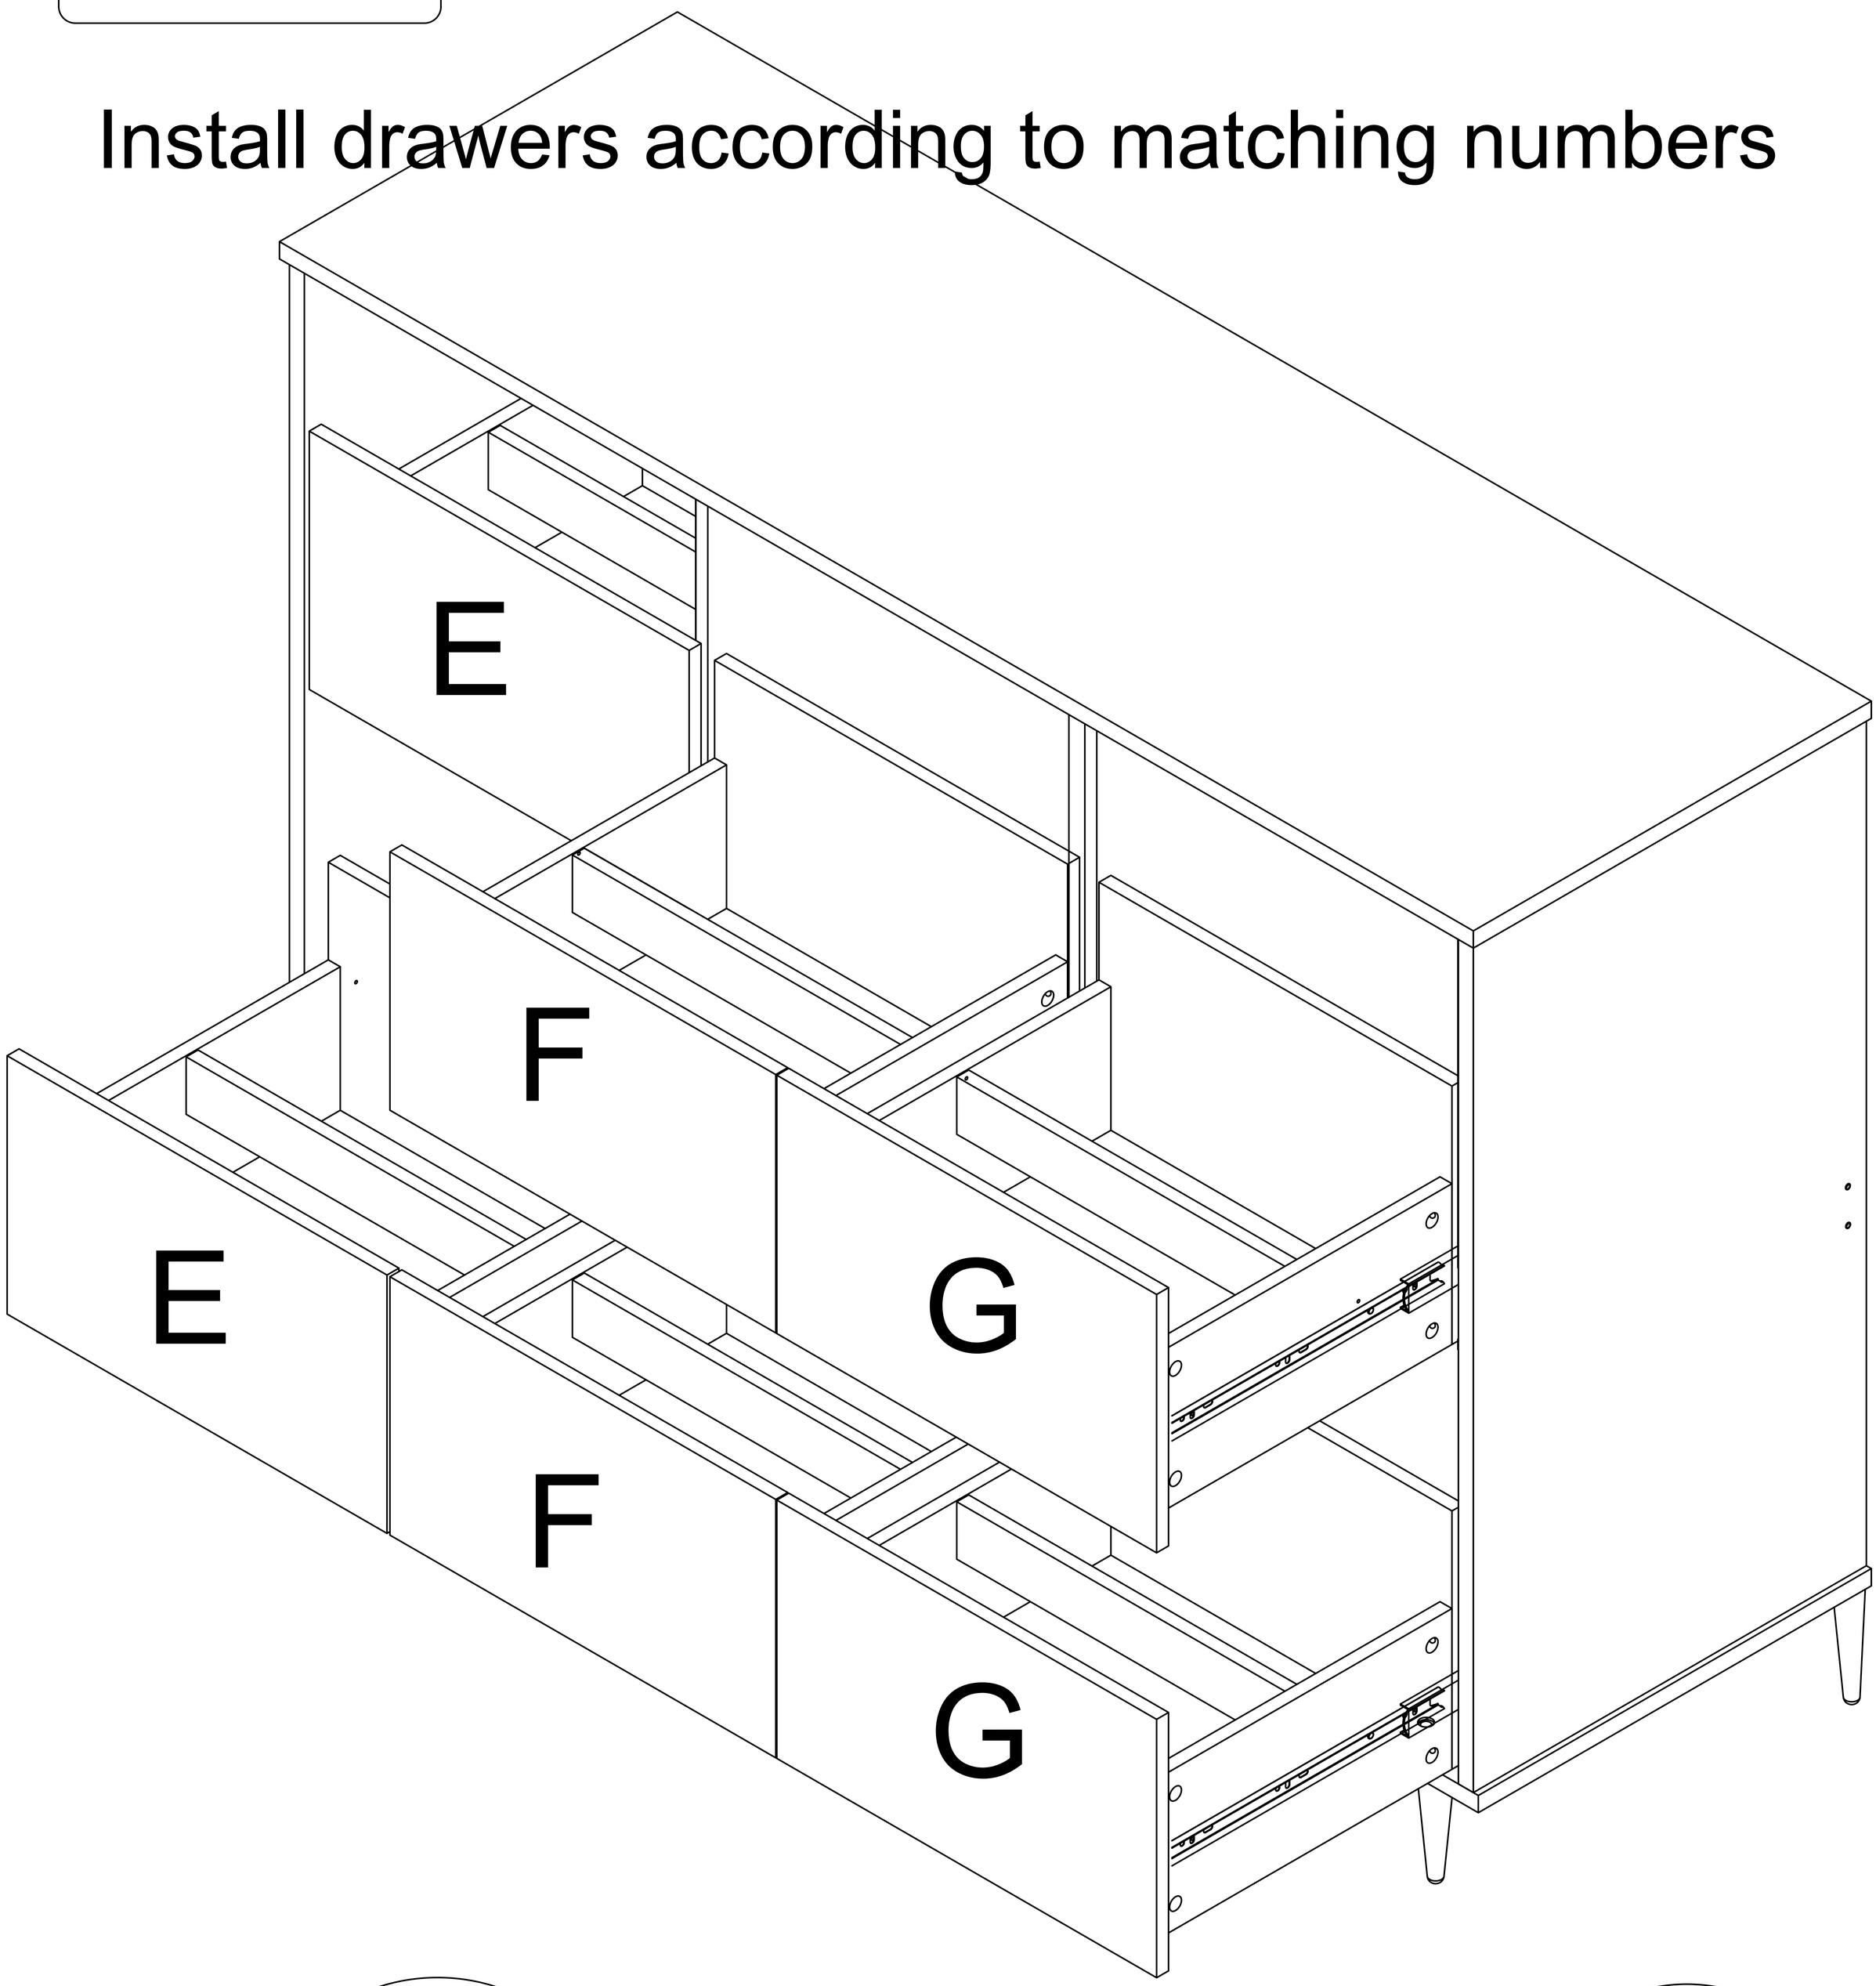


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 45

6

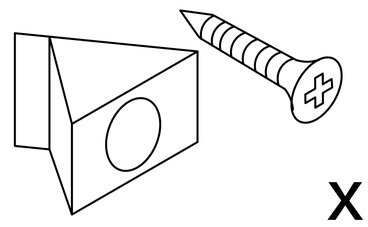


x12

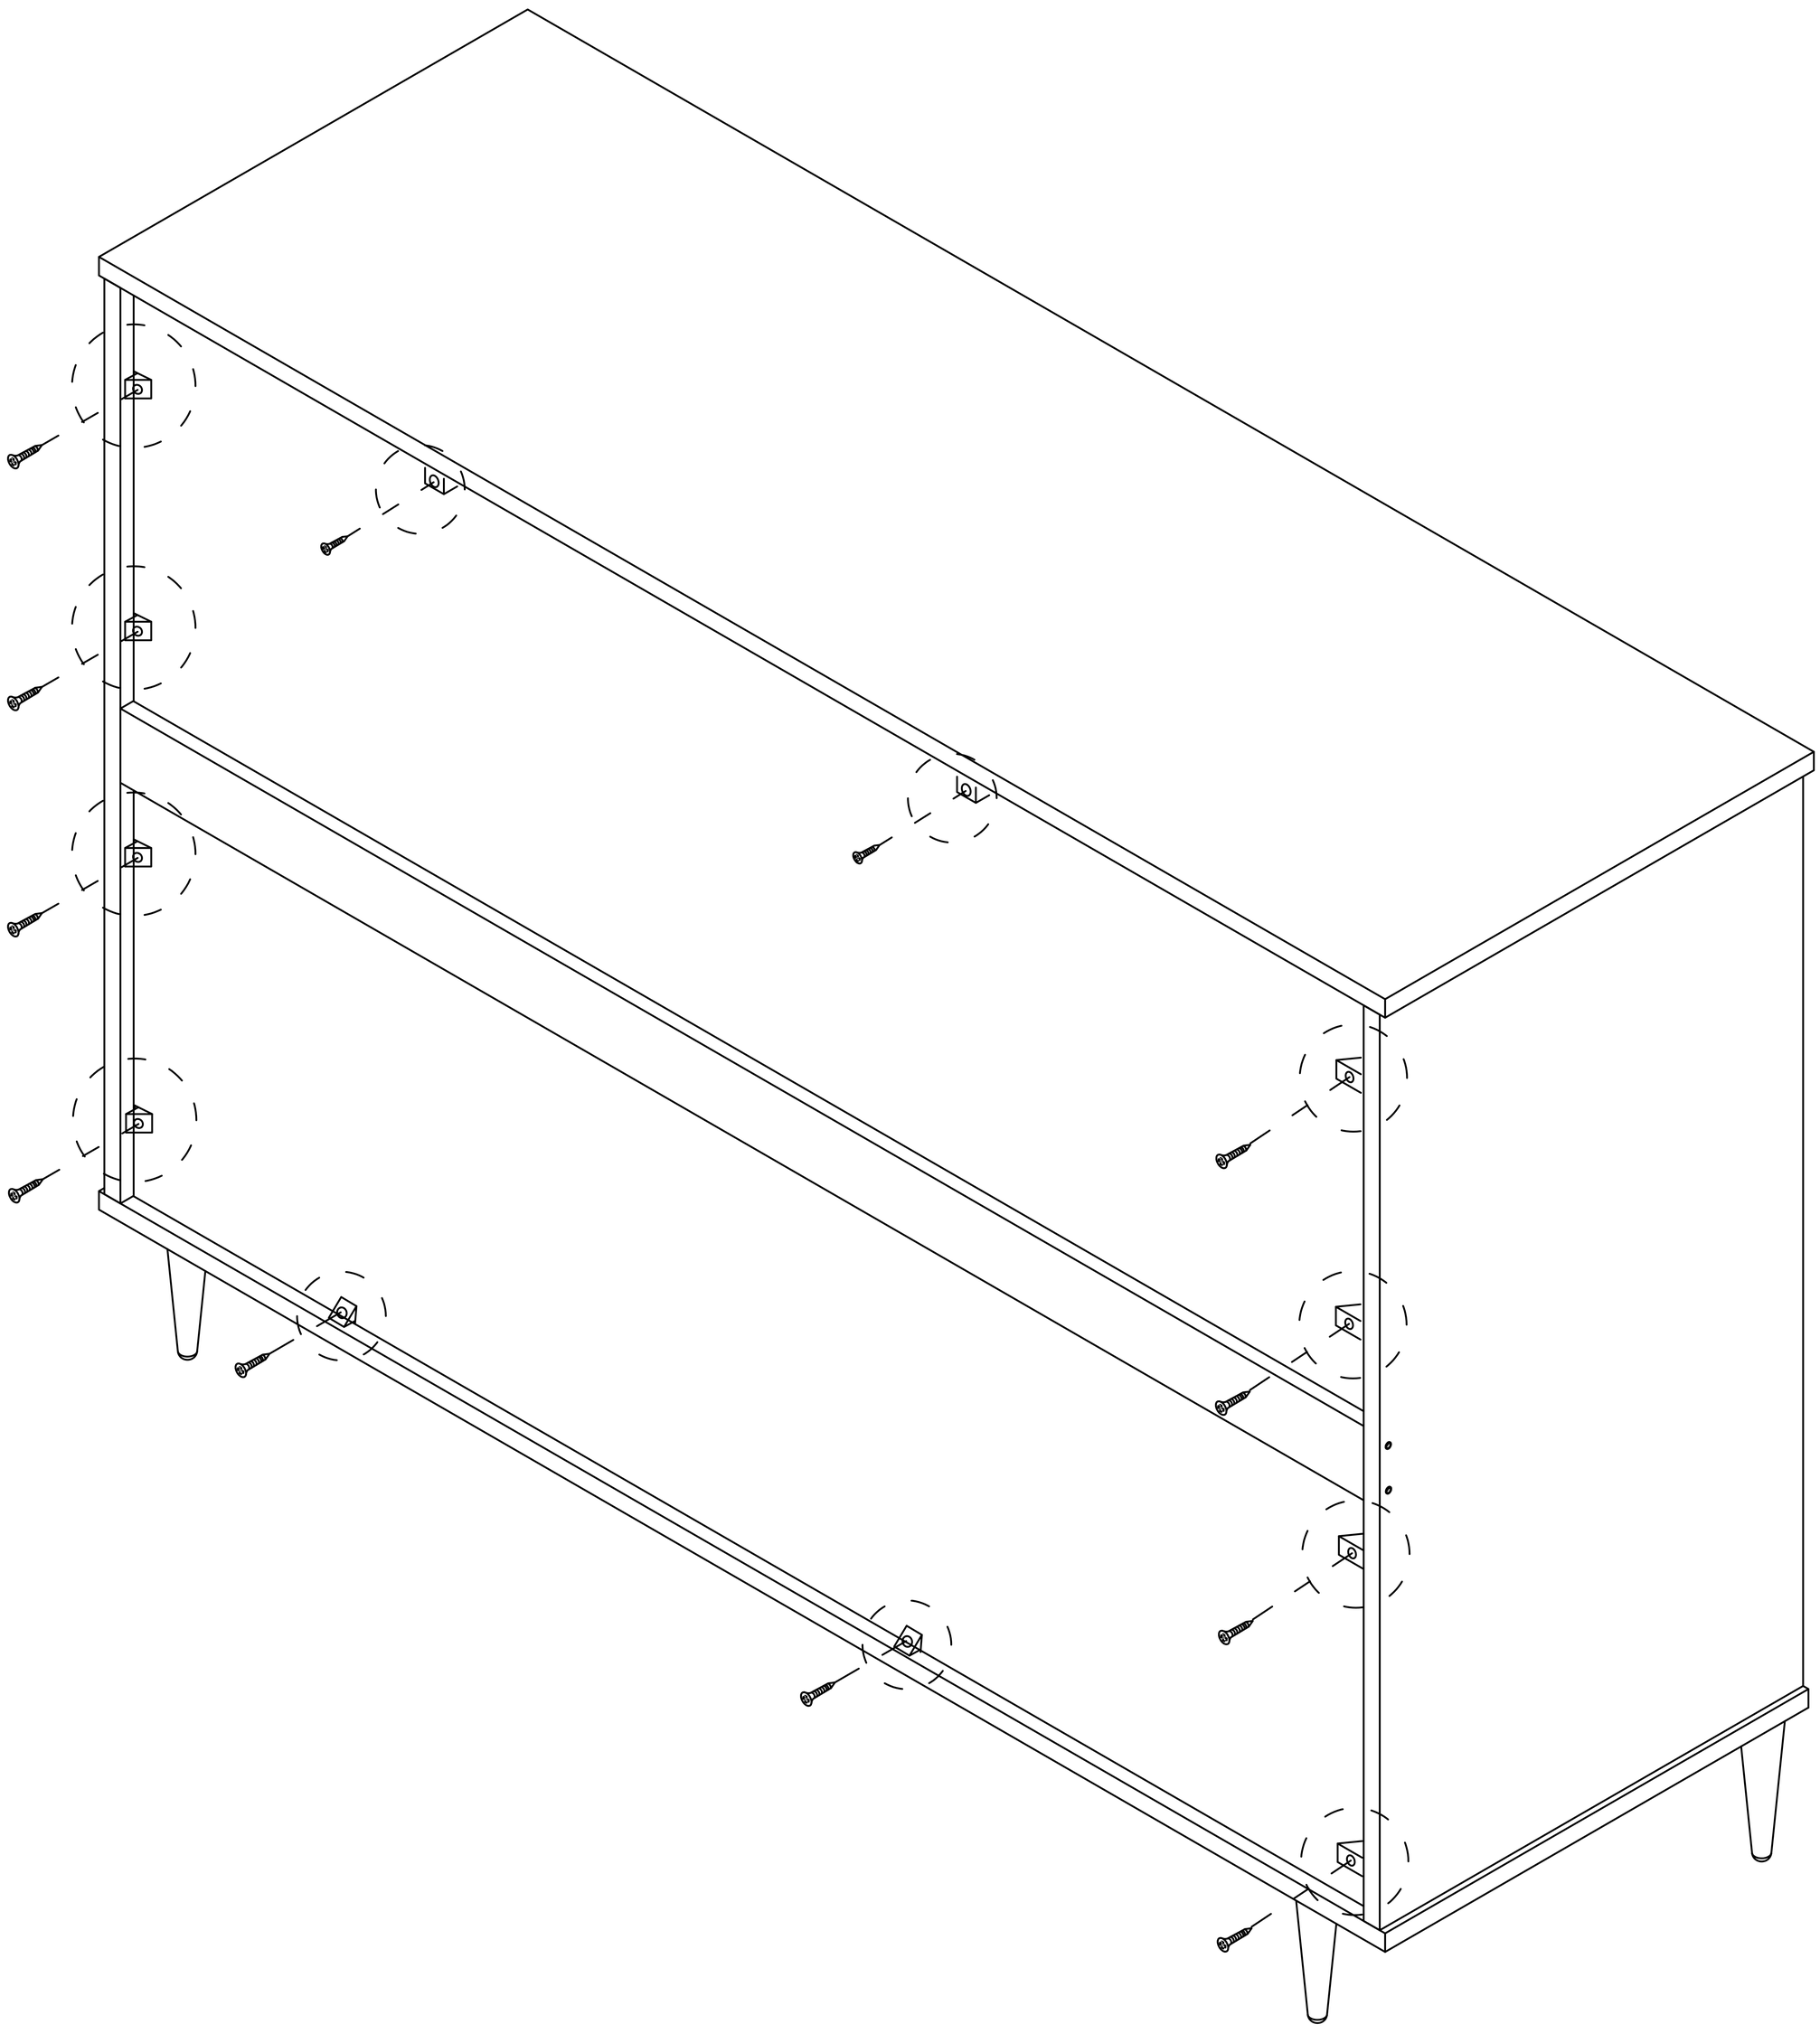


Step 46

Install as required

7

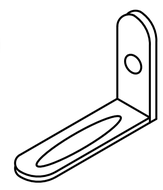

x2




x2





x2

3.5x14mm

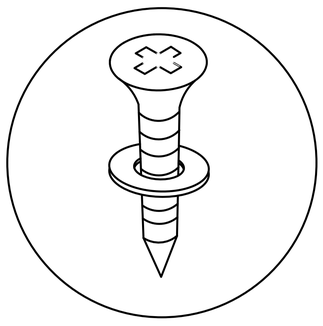


Install the anti fall hardware on the cabinet as shown in the picture first

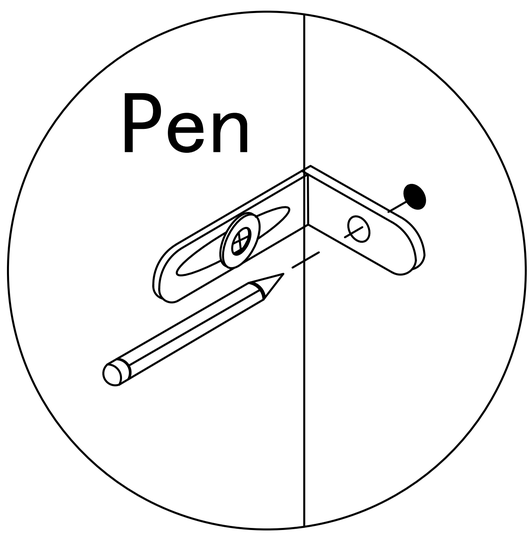

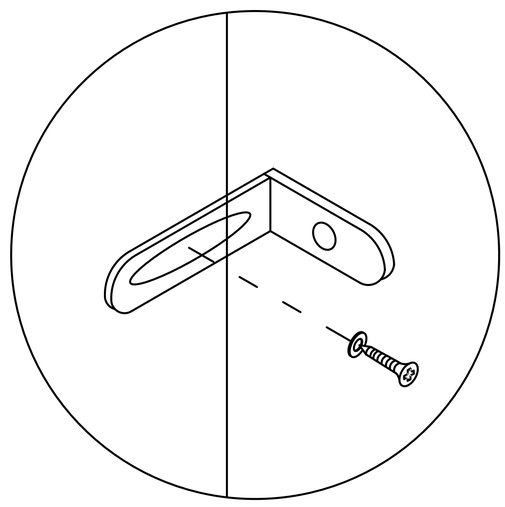


Then mark the wall with a pen through the holes in the anti-fall hardware

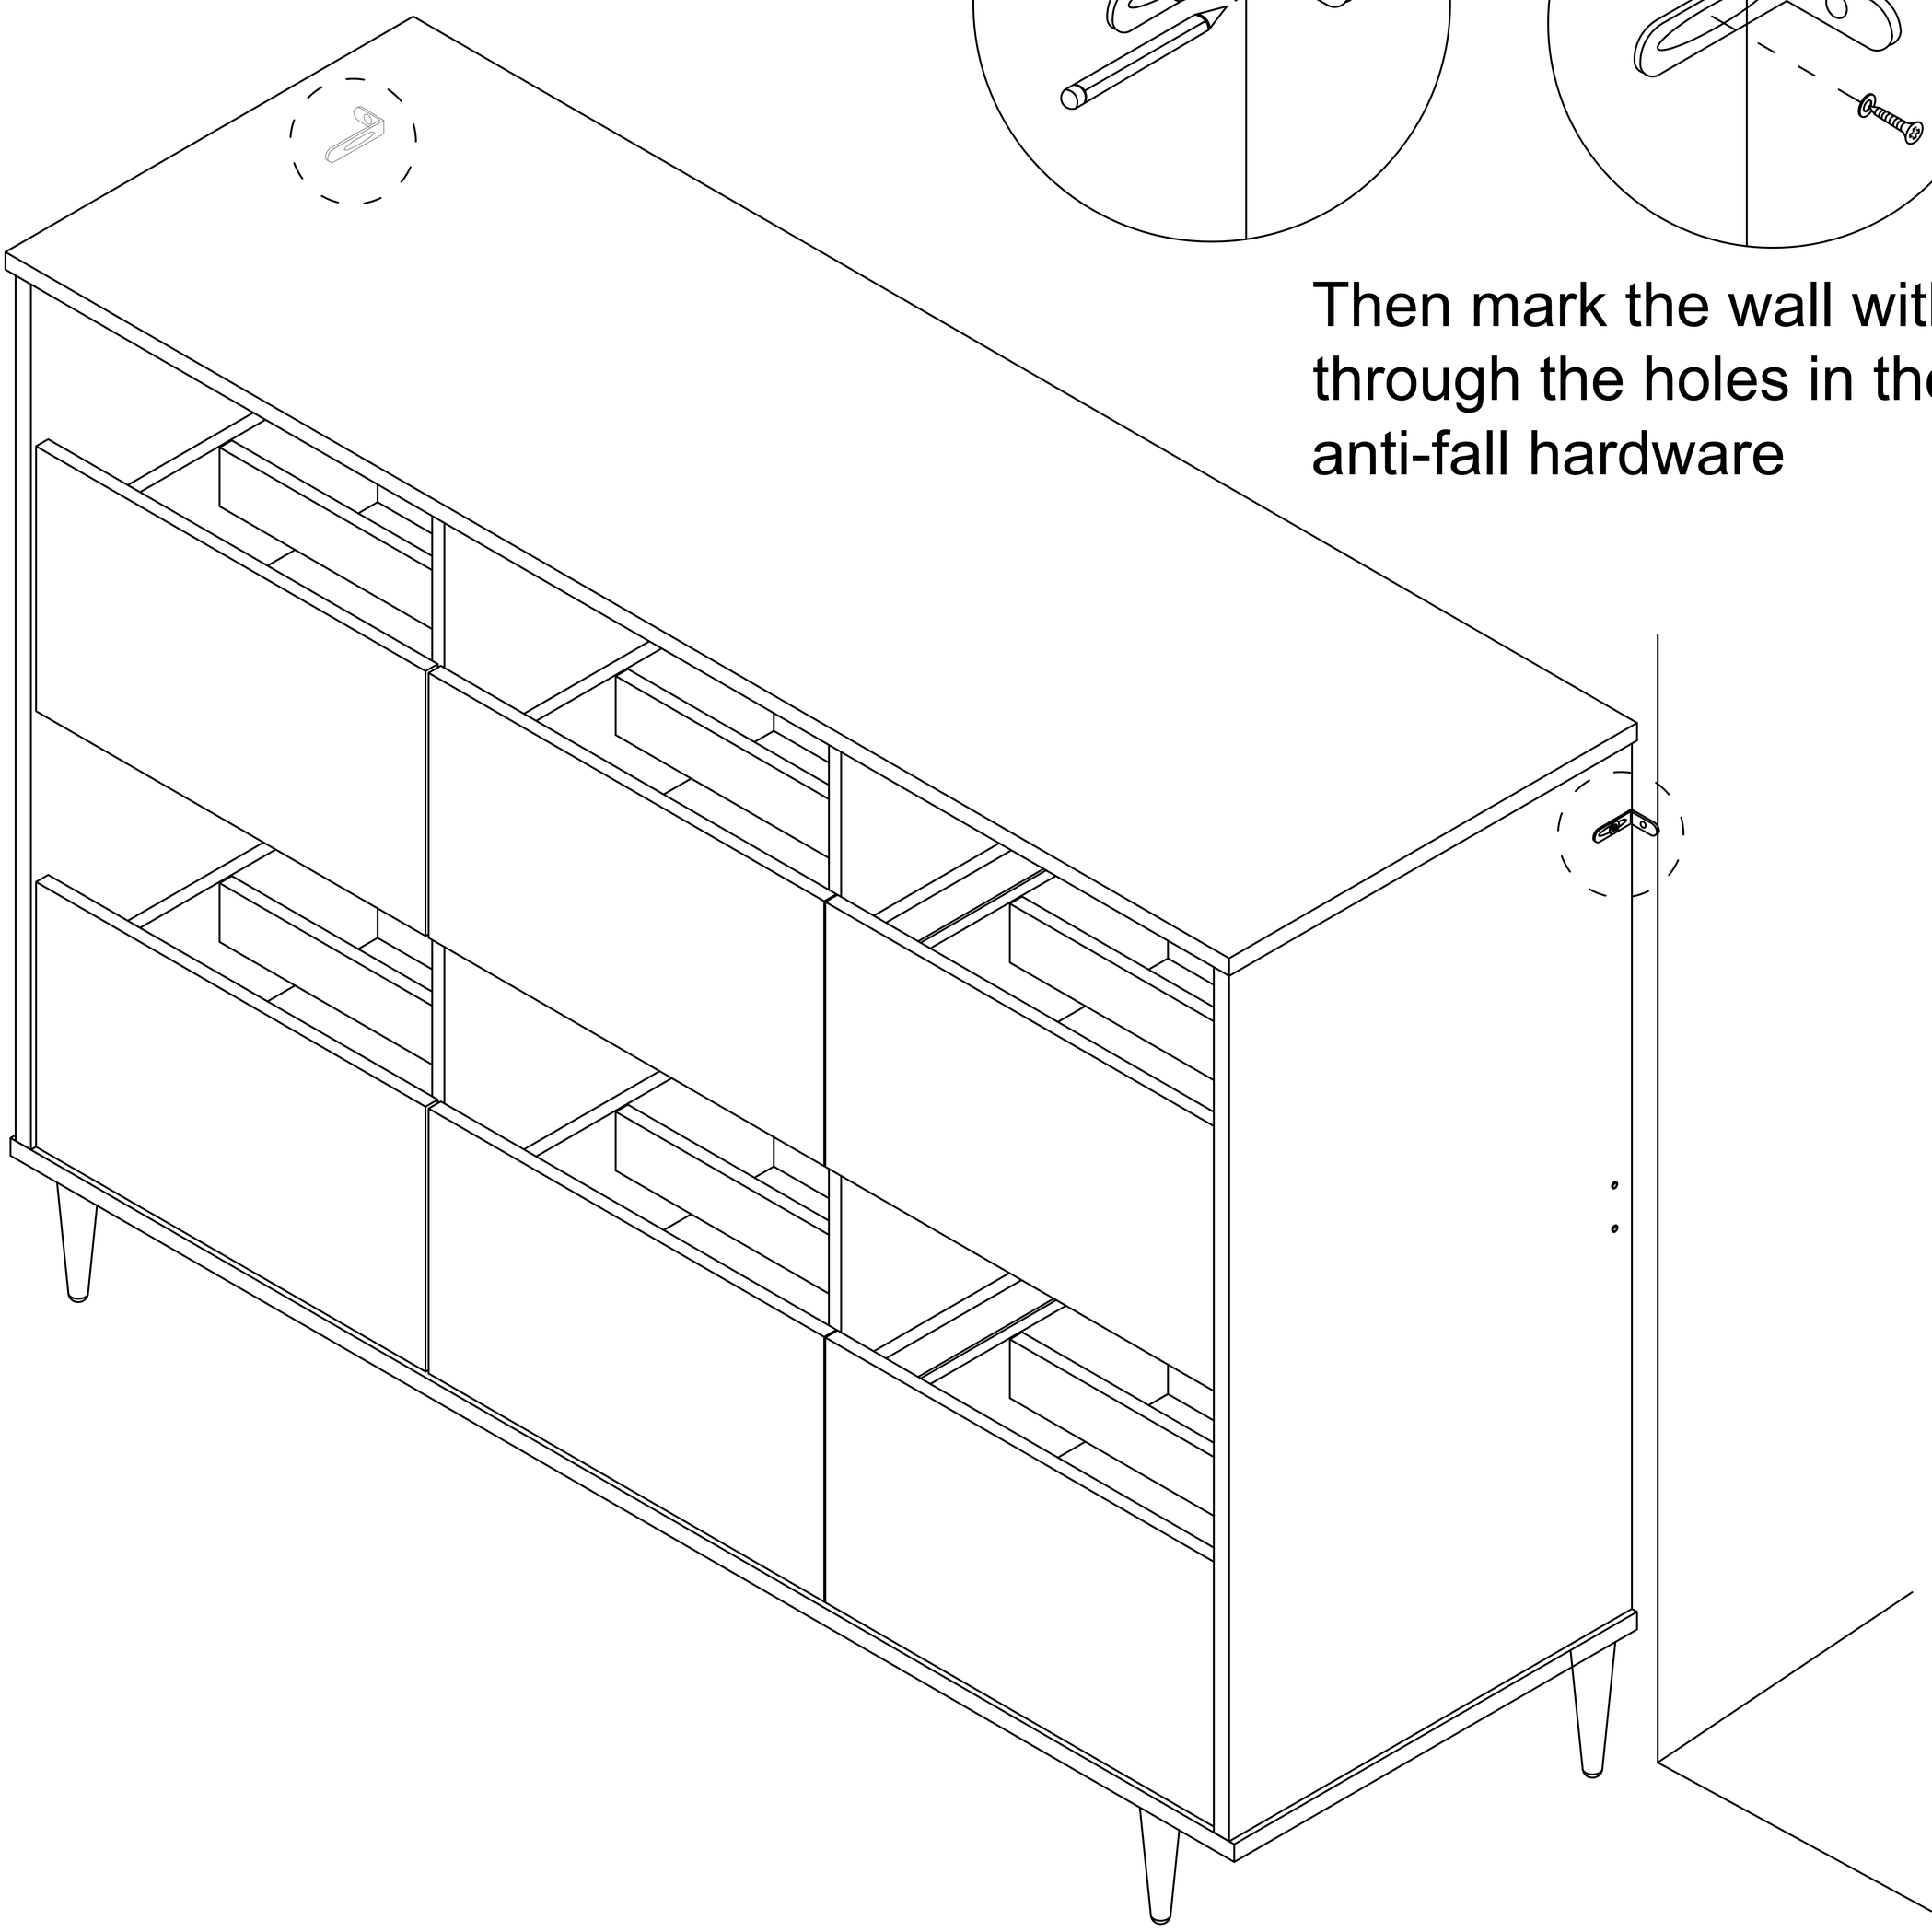


Step 47

use a ruler to measure theapproximate height of the producton the wall, and then mark it witha pencil.

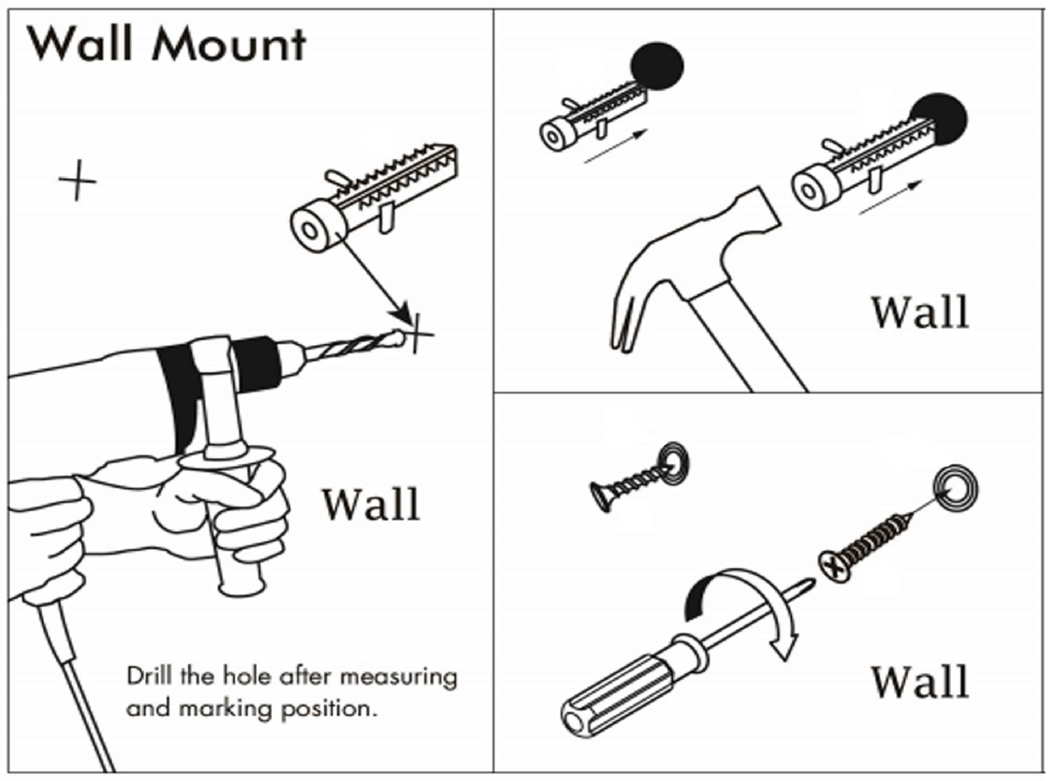



Use a tape drill to make holesin the wall that are suitable for theproduct screws.

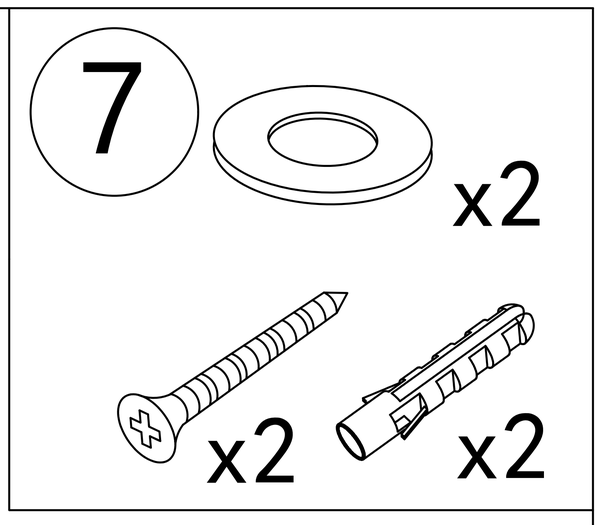

Put the expansion bolt into the hole.

Pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

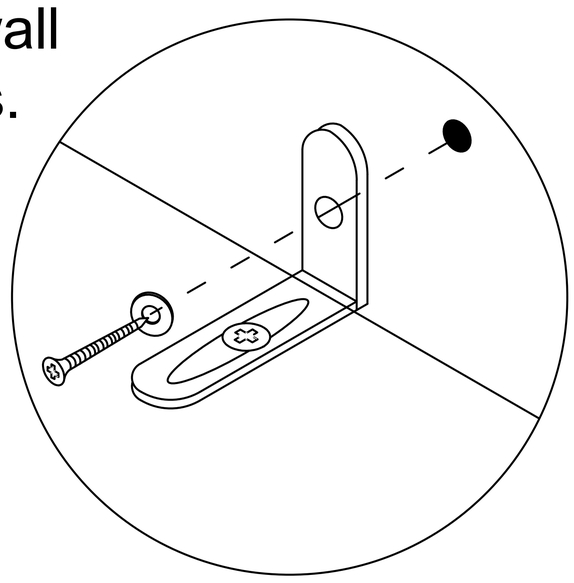

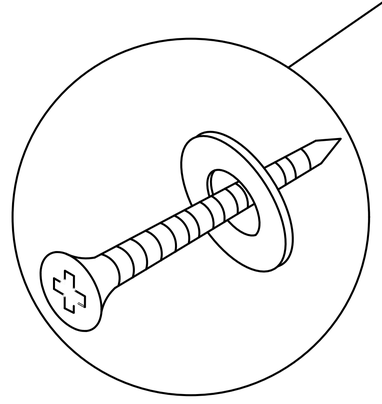

4x45mm

wall

Step 48

